

T2410, T2420 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	12
SECTION 21 - TRANSMISSION	13
SECTION 23 - FWD DRIVELINE	21
SECTION 25 - FWD FRONT AXLE	22
SECTION 27 - DIFFERENTIAL, REAR AXLE	23
SECTION 31 - POWER TAKE-OFF (PTO)	25
SECTION 33 - BRAKES	26
SECTION 35 - HYDRAULIC SYSTEM	27
SECTION 41 - STEERING	31
SECTION 44 - WHEELS AND TIRES	33
SECTION 50 - CLIMATE CONTROL	34
SECTION 55 - ELECTRICAL SYSTEM	38
SECTION 90 - PLATFORM	56

The following pages are the collation of the contents pages from each section and chapter of the T2410, T2420 Repair manual. Complete Repair part # 87725020.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T2410, T2420 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87693284

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety	3
	Information	3
	Safety	4
	Precautionary Statements	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving The Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Safety Decals	7
	Instruction Decals	10
	Decal Placement Guide	13
	Ecology and the Environment	15
	Helpful Hints	15
	Universal Symbols	16
	General Information	17
	Minimum Hardware Tightening Torques	18
	Lubrication	20
	General Information	20
	Grease Fittings	20
	Chains	20
	Lubrication and Maintenance Chart	
	New Holland T2410, T2420 — Front-wheel Drive	22
	Lubrication Fittings	23
	Diesel Fuel	23
	Fuel Usage Safety	23
	Specifications	24

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87693284

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	General Dimensions	33
	Wheel Tread Settings	36
	Front Axle (FWD) (Not Adjustable)	36
	Rear Axle (FWD)	36
	Liquid Ballast (Optional)	39
	Tire Pressure	39
	Rear Tire Liquid	39
	Ballast Weights (Per Tire)	39

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 1 - Engine Components

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	11
	Special Tools	11
	Compression Test and Tools	12
	Description of Operation - General Information	13
	Troubleshooting	14
	Cylinder Head and Valve Train Components	18
	Cylinder Block Assembly	18
	Engine	19
	Removal	19
	Installation	20
	Overhaul	21
	Engine	21
	Alternator	21
	Removal	21

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Cooling Fan and Pulley	21
	Removal	21
	Glow Plug and Connector	21
	Removal	21
	Nozzle/Holder	22
	Removal	22
	Fuel Injection Pipe	22
	Removal	22
	Injector	22
	Removal	22
	Water Pump	22
	Removal	22
	Cover/Intake Manifold/Exhaust Manifold	23
	Removal	23
	External Oil Pipe	23
	Removal	23
	Rocker Assembly	24
	Removal	24
	Cylinder Head	24
	Removal	24
	Tappets	24
	Removal	24
	Fuel Stop Solenoid	25
	Removal	25
	Timing Gear Cover	25
	Removal	25
	Timing Gears and Camshaft	27
	Removal	27
	Front End Plate	28
	Removal	28
	Oil Sump	28
	Removal	28
	Oil Suction Pipe and Strainer	29
	Removal	29

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Balancer Assembly	29
	Removal	29
	Connecting Rods, Bearings and Pistons, Rings	30
	Removal	30
	Flywheel	30
	Removal	30
	Backplate and Oil Seal	31
	Removal	31
	Crankshaft and Main Bearings	31
	Removal	31
	Rocker Arm Assembly	32
	Disassembly	32
	Inspection and Repair	32
	Timing Gear	33
	Inspection	33
	Camshaft	33
	Disassembly	33
	Inspection	33
	Oil Pump	34
	Disassembly	34
	Inspection	34
	Assembly	34
	Cylinder Head	35
	Disassembly	35
	Inspection and Repair	35
	Valves	36
	Valve Guides	36
	Valve Seat	37
	Valve Springs	38
	Rocker Arms	39
	Push Rods	40
	Rocker Arm Shaft	40
	Installation	40
	Cylinder Block	41
	Inspection and Repair	41

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Piston and Piston Rings	42
	Disassembly	42
	Inspection	42
	Connecting Rods	44
	Pistons, Rings and Connecting Rod	46
	Assembly	46
	Crankshaft Main Bearing and Thrust Washer	47
	Removal and Inspection	47
	Crankshaft Bearing (Bushing)	48
	Inspection	48
	Removal	49
	Replacement	49
	Crankshaft Main Bearing	50
	Installation	50
	Port Block	50
	Removal	50
	Installation	51
	Crankshaft and Bearing Holder	51
	Installation	51
	Relief Valve	52
	Installation	52
	Rear Oil Seal	52
	Installation	52
	Back Plate/Flywheel Housing	52
	Installation	52
	Flywheel	53
	Inspection and Repair	53
	Installation	53
	Pistons and Connecting Rods	53
	Installation	53
	Balancer Assembly	54
	Installation	54
	Balancer Shims	54

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Oil Suction Pipe and Suction Strainer	55
	Installation	55
	Oil Sump	55
	Installation	55
	Camshaft and Camshaft Gear	56
	Installation	56
	Idler Gear, Oil Pump and Injection Timing	56
	Installation	56
	Timing Gear Case	57
	Front Oil Seal and Steering Pump Seal	57
	Replacement	57
	Timing Gear Case	58
	Installation	58
	Crankshaft Pulley	59
	Installation	59
	Injection Pump	59
	Installation	59
	Head Gasket Selection	60
	Head Gasket Selection Chart	60
	Cylinder Head	60
	Assembly	60
	Valve Clearance Adjustment	61
	Head Cover	64
	Installation	64
	Intake/Exhaust Manifolds	64
	Installation	64
	External Oil Tube	65
	Installation	65
	Oil Pressure Switch	65
	Installation	65
	Alternator and Temperature Sender Switch	65
	Installation	65

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Glow Plug and Connector	65
	Installation	65
	Nozzle/Holder Assembly	66
	Installation	66
	Return Pipe and Injection Pipe	66
	Installation	66
	Hydraulic Oil Pump	66
	Installation	66
	Power Steering Pump	67
	Installation	67
	Turbo Charger	67
	Description of Operation - Engine Lubrication System	68
	Oil Filter	71
	Construction and Function	71
	Maintenance	71
	Oil Pump	71
	Removal	71
	Inspection	71
	Installation and Adjustment	72
	Engine Oil Pressure Check	73
	Oil Pressure Relief Valve	74
	Removal	74
	Installation	74
	Oil Consumption	74
	Description of Operation - Cooling System	75
	Maintenance	77
	Coolant	77
	Cooling System Capacity	77
	Radiator Cap	77
	Thermostat	78
	Water Pump	78
	Cooling Fan	78

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Radiator	79
	Removal	79
	Inspection	80
	Installation	81
	Water Pump	83
	Removal	83
	Inspection and Repair	84
	Installation	84
	Thermostat	85
	Removal	85
	Inspection and Repair	85
	Installation	86
	Oil Cooler	86
	Removal	86
	Installation	86

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 2 - Fuel Systems

CONTENTS

Section	Description	Page
	Specifications	2
	Standards for Adjusting the Injection Pump	2
	Special Tools	3
	Description of Operation	3
	Injection Pump	3
	Troubleshooting	5
	General	5
	Fuel Injectors	8
	Governor	9
	Engine Breather Valve	10
	Fuel Variation Mechanism	11
	Delivery Valve Assembly	12
	CTD (Compact Timing Device) Mechanism	12
	Pumping Elements	14
	Delivery Valves	16
	Injection Pump	17
	Removal	17
	Repair	19
	Installation	19
	Timing and Governor Adjustments	20
	Installation (New Pump or Drive Component)	20
	Spill-timing Procedure	21
	Bleeding the Fuel System	26
	Fuel Screw/High Idle Adjustment	26
	Governor	27
	Disassembly	29
	Assembly	30
	Adjustments	32
	Injectors	32
	Removal	33
	Disassembly	34
	Assembly/Adjustment	34

SECTION 10 - ENGINE

BOOK 1 - 87693284

Chapter 3 - Turbocharger

CONTENTS

Section	Description	Page
	Specifications	2
	Troubleshooting	2
	Lubrication	4
	Turbocharger	5
	Removal	5
	Inspection Before Disassembly	6
	Disassembly	6
	Inspection	9
	Turbine Shaft	10
	Bearings and Associated Parts	10
	Thrust Bearing	11
	Holes For Admitting Seal Ring	11
	Turbocharger Reassembly	11
	Installing the floating bearings	11
	Inserting the Shaft Into Bearing Casing	12
	Installing the Thrust Bearing	12
	Installing the Seal Plate	12
	Installing the Blower Wheel	13
	Installing the Turbine Casing	14
	Securing the Blower Casing to the Bearing Casing	14
	Installing the Waste Gate Controller Assembly	14
	Checking the Rotor for Movement	15
	Start-up Lubrication	15
	Intake Air System	15
	Exhaust System	16
	Initial Start of Turbocharger After Installation	16

SECTION 18 - CLUTCH

BOOK 1 - 87693284

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Metric Bolt Torque Specifications	3
	Bolt Torques	3
	Special Tools	3
	Description of Operation	4
	Troubleshooting	5
	Overhaul	6
	Separating the Tractor at Clutch Housing/Engine	6
	Clutch	16
	Removal	16
	Inspection	17
	Clutch Release Bearing	18
	Inspection	18
	Clutch	18
	Installation	18
	Attaching the Tractor at Clutch Housing/Engine	20
	Clutch Pedal Adjustment	29
	Clutch Pedal Maximum Travel Adjustment (SSS Transmission)	30

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 1 - EHSS Transmission

CONTENTS

Section	Description	Page
	Specifications	7
	Metric Bolt Torque Specifications	8
	Special Tools	9
	Description of Operation	11
	Powerflow (All Diagrams Shown With Forward Clutch Pack Engaged)	13
	Hydraulic Flow Diagrams	19
	Oil Pump For EHSS and PTO Clutch	19
	Neutral Position	20
	Forward Position	22
	Reverse Position	24
	Reverse Position - Inching Pedal Depressed	26
	Lube Cutoff Valve Operation	27
	Inching Pedal Depressed	27
	System Relief Valve Assembly	28
	System Relief Valve Assembly Operation	29
	EHSS Manifold Valve	29
	System Relief Valve	30
	Oil Cooler Relief Valve	30
	Oil Cooler Relief Valve Components	30
	Adjustment	31
	EHSS - System Relief Valve	31
	Oil Cooler and Lubrication Circuit Pressure Test	32
	EHSS Inching Pedal Potentiometer	33
	EHSS Control Valve Solenoid	35
	Solenoid Test	35
	Test Results	35
	Flow Test	35
	Neutral and Forward	35
	Reverse	36
	Troubleshooting	38
	Overhaul	40

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

Section	Description	Page
	EHSS Control Valve Solenoid	40
	Disassembly	40
	Inspection	40
	Assembly	40
	EHSS Transmission	41
	Removal - Separating the Tractor at Clutch Housing/Engine	41
	Installation - Attaching the Tractor at Clutch Housing/Engine	49
	Clutch Housing	58
	Disassembly	58
	Main Transmission	59
	Disassembly - Separating the Transmission/Differential	59
	Shuttle Clutch Adapter/Input Shaft Retainer	61
	Input Shaft	62
	Reverse Idler Shaft and Gear	63
	Shift Rails	64
	Shuttle Clutch and Shaft	66
	PTO Shaft	68
	Countershaft	68
	Main Shaft	71
	Inspection	74
	Assembly	75
	Shuttle Clutch	84
	Shift Rails	85
	Reverse Idler	89
	Input Shaft	89
	Shuttle Clutch Adapter/Input Shaft Retainer	91
	Attaching The Transmission/Differential	91
	Clutch Housing	93
	Shuttle Clutch	95
	Disassembly	95
	Inspection	101
	Assembly	102

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

Section	Description	Page
	Synchronizers	107
	Disassembly	108
	Inspection	114
	Synchronizers	115
	Assembly	116
	Complete EHSS Schematic	121
	1st or 2nd Gear, High and Forward Schematic	122
	1st or 2nd Gear Engaged High and Forward Engaged	123
	Current Flow	123
	Key Switch Placed in "RUN/ACC" Position	123
	Potentiometer	123
	With the Inching Pedal (not depressed)	123
	Controller Current Output	123
	Ground Sources	123
	1st or 2nd Gear, Low and Forward Schematic	124
	1st or 2nd Gear Engaged Low and Forward Engaged	125
	Current Flow	125
	Key Switch Placed in "RUN/ACC" Position	125
	Potentiometer	125
	With the Inching Pedal (not depressed)	125
	Controller Current Output	125
	Ground Sources	125
	1st or 2nd Gear, High and Reverse Schematic	126
	1st or 2nd Gear Engaged High and Reverse Engaged	127
	Current Flow	127
	Key Switch Placed in "RUN/ACC" Position	127
	Potentiometer	127
	With the Inching Pedal (not depressed)	127
	Controller Current Output	127
	Ground Sources	127
	1st or 2nd Gear, Low and Reverse Schematic	128
	1st or 2nd Gear Engaged Low and Reverse Engaged	129

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

Section	Description	Page
	Current Flow	129
	Key Switch Placed in "RUN/ACC" Position	129
	Potentiometer	129
	With the Inching Pedal (not depressed)	129
	Controller Current Output	129
	Ground Sources	129
	3rd or 4th Gear, High and Forward Schematic	130
	3rd or 4th Gear Engaged High and Forward Engaged	131
	Current Flow	131
	Key Switch Placed in "RUN/ACC" Position	131
	Potentiometer	131
	With the Inching Pedal (not depressed)	131
	Controller Current Output	131
	Ground Sources	131
	3rd or 4th Gear, Low and Forward Schematic	132
	3rd or 4th Gear Engaged Low and Forward Engaged	133
	Current Flow	133
	Key Switch Placed in "RUN/ACC" Position	133
	Potentiometer	133
	With the Inching Pedal (not depressed)	133
	Controller Current Output	133
	Ground Sources	133
	3rd or 4th Gear, High and Reverse Schematic	134
	3rd or 4th Gear Engaged High and Reverse Engaged	135
	Current Flow	135
	Key Switch Placed in "RUN/ACC" Position	135
	Potentiometer	135
	With the Inching Pedal (not depressed)	135
	Controller Current Output	135
	Ground Sources	135
	3rd or 4th Gear, Low and Reverse Schematic	136
	3rd or 4th Gear Engaged Low and Reverse Engaged	137

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

Section	Description	Page
	Current Flow	137
	Key Switch Placed in "RUN/ACC" Position	137
	Potentiometer	137
	With the Inching Pedal (not depressed)	137
	Controller Current Output	137
	Ground Sources	137
	EHSS Controller Activation	138
	Current Flow	138
	Key Switch Placed in "RUN/ACC" Position	138
	Controller Activation	138
	Potentiometer	138
	With the Inching Pedal (free position)	138
	Ground Sources	138
	Modulation Time Chart	140
	EHSS Controller	141
	Removal	141
	EHSS Controller Testing	142
	1st or 2nd Gear, High and Forward Circuit	142
	1st or 2nd Gear, Low and Forward Circuit	142
	1st or 2nd Gear, High and Reverse Circuit	142
	1st or 2nd Gear, Low and Reverse Circuit	143
	3rd or 4th Gear, High and Forward Circuit	143
	3rd or 4th Gear, Low and Forward Circuit	143
	3rd or 4th Gear, High and Reverse Circuit	144
	3rd or 4th Gear, Low and Reverse Circuit	144
	Activation Circuit	144
	Installation	145
	Shuttle Switch (Forward/Reverse)	145
	Removal	146
	Testing	147
	Installation	147

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

Section	Description	Page
	Transmission Modulation Switches	148
	Removal (ALL Switches)	148
	Main 1-2 Switch (ball located behind switch)	148
	Testing	148
	Main 1-2 Switch	149
	“HIGH” and “LOW” Range Switches	149
	Installation (ALL Switches)	149
	Troubleshooting Shiftability	150
	Description of Operation	150
	Breakout Box Connection to Tractor	151
	Test Procedures - Switches	152
	High Range Switch	153
	Low Range Switch	154
	Neutral, 1st and 2nd Gear Switch	155
	Shuttle Switch (F-N-R)	157
	Neutral Test	158
	Forward Test	159
	Reverse Test	159
	Solenoid Test-EHSS Control Valve	159
	Potentiometer Function	160
	Adjustment - EHSS Inching Pedal Linkage	160
	Adjustment - Potentiometer	162
	Modulation Explanation	162
	Modulation Time Chart	162
	Modulation Time-Test Procedure	163
	Wiring Diagram - EHSS Circuit	164
	General Overall Troubleshooting	165
	EHSS Electrical Troubleshooting (Range)	165
	EHSS Electrical Troubleshooting (Main Gear and Shuttle)	166
	EHSS Electrical Troubleshooting (Potentiometer)	167
	EHSS Concern Report	168

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 2 - SSS 12x12 Gear Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	5
	Powerflow	8
	Troubleshooting	12
	Overhaul	13
	Clutch Housing	13
	Disassembly	13
	Main Transmission Input Shaft Retainer	16
	Disassembly	16
	Shuttle Shaft Retainer	17
	Input Shaft	18
	Disassembly	18
	Reverse Idler Shaft and Gear	18
	Disassembly	18
	Shift Rails	19
	Disassembly	19
	Countershaft	21
	Disassembly	21
	Main Shaft	24
	Disassembly	24
	Shuttle Gears	27
	Disassembly	27
	Inspection	30
	Main Transmission Range Gear Shifter	31
	Assembly	31
	Main Shaft	34
	Assembly	34
	Range Gears	38
	Assembly	38

SECTION 21 - TRANSMISSION

BOOK 2 - 87693285

Chapter 2 - SSS 12x12 Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Range Gear Shift Fork	40
	Assembly	40
	Countershaft	41
	Assembly	41
	PTO Shaft	43
	Assembly	43
	Shift Rails	44
	Assembly	44
	Reverse Idler	48
	Assembly	48
	Input Shaft	49
	Assembly	49
	Input Shaft Retainer	50
	Assembly	50
	Attaching the Transmission / Differential	51
	Clutch Housing	54
	Assembly	54
	Synchronizers – Main Gears	56
	Main Transmission Gears/Synchronizer	57
	Disassembly	57
	Synchronizers	63
	Inspection	63
	Main Transmission Gears/Synchronizer	65
	Assembly	65
	Synchronizers – Shuttle Gears	70
	Transmission Shuttle Gears/Synchronizer	71
	Disassembly	71
	Synchronizers	75
	Inspection	75
	Main Transmission Gears/Synchronizer	77
	Assembly	77

SECTION 23 - FWD DRIVELINE

BOOK 3 - 87693286

Chapter 1 - FWD Driveline

CONTENTS

Section	Description	Page
	Description of Operation - Front Wheel Drive Gearbox	2
	Lubrication	3
	Troubleshooting	3
	Overhaul	4
	Front Wheel Gearbox	4
	Removal	4
	Front Wheel Gearbox	5
	Counter Gear Removal	5
	Disassembly	5
	Inspection	5
	Assembly	6
	Counter Gear	6
	Installation	6

SECTION 25 - FWD FRONT AXLE

BOOK 3 - 87693286

Chapter 1 - FWD Front Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Front to Rear Axle Ratio	2
	Metric Bolt Torque Specifications	5
	Special Tools	5
	Description of Operation - FWD Front Axle	6
	Troubleshooting	7
	Maintenance	9
	Lubricate Every 50 Hours – Standard FWD	9
	Overhaul	10
	FWD Axle	10
	Removal	10
	Installation	11
	Gear Reduction Drop Box	12
	Disassembly	12
	Front Axle and Differential	15
	Disassembly	15
	Drive Pinion	16
	Disassembly	16
	Differential	17
	Inspection	17
	Gear Reduction Drop Box	17
	Inspection	17
	Drive Pinion	18
	Assembly	18
	Differential Gear	18
	Assembly	18
	Ring Gear-To-Pinion Backlash Check and Adjustment	19
	Axle and Differential	21
	Assembly	21
	Gear Reduction Box	22
	Assembly	22
	Bevel Gear-To-Pinion Backlash Check	25

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 3 - 87693286

Chapter 1 - Differential

CONTENTS

Section	Description	Page
	Specifications	2
	Bolt Torque Specifications	3
	Metric Bolt Torque Specifications	3
	Special Tools	4
	Description of Operation - Differential and Rear Axle	5
	Differential	6
	Differential Lock	6
	Rear Axle	7
	Overhaul	8
	Differential	8
	Removal	8
	Disassembly	11
	Inspection	11
	Assembly	12
	Installation	13
	Drive Pinion	15
	Removal	15
	Disassembly	15
	Inspection	18
	Assembly	18

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 3 - 87693286

Chapter 2 - Rear Axle

CONTENTS

Section	Description	Page
	Overhaul	2
	Rear Axle	2
	Removal	2
	Disassembly	3
	Inspection	6
	Assembly	7
	Final Pinion	11
	Removal	11
	Disassembly	12
	Inspection	15
	Assembly	16
	Installation	19

SECTION 31 - POWER TAKE-OFF (PTO)

BOOK 3 - 87693286

Chapter 1 - Power Take-Off (PTO)

CONTENTS

Section	Description	Page
	Specifications	2
	Metric Bolt Torque Specifications	3
	Special Tools	4
	Description of Operation	5
	Rear PTO - Power Flow Diagram	6
	EHSS Transmission - Hydraulic Fluid Flow to the PTO Clutch Assembly	7
	SSS Transmission - Hydraulic Flow to the PTO Clutch Assembly	8
	PTO Clutch Engaged	9
	PTO Clutch Disengaged	10
	Troubleshooting	11
	Pressure Testing	12
	Test Procedure	12
	Adjustment	12
	PTO Clutch Control Valve	13
	Removal	13
	Disassembly	14
	Inspection	14
	Assembly	15
	Installation	16
	PTO Clutch	16
	Removal	16
	Disassembly	16
	Inspection	18
	Assembly	20
	PTO Systems	24
	Removal	24
	Inspection	30
	Installation	30

SECTION 33 - BRAKES

BOOK 3 - 87693286

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Brake Discs	2
	Stators	2
	Metric Bolt Torque Specifications	3
	Troubleshooting	4
	Description of Operation - Brakes	5
	Brake Operation	6
	Park Brake	7
	Removal	8
	Inspection	8
	Assembly and Adjustment	9
	Park Brake Return Spring	10
	Overhaul	11
	Brakes	11
	Removal and Disassembly	11
	Inspection	13
	Assembly and Installation	14
	Adjustment	16
	Brake Switches	17

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87693287

Chapter 1 - Hydraulic System

CONTENTS

Section	Description	Page
	Specifications	5
	Metric Bolt Torque Specifications	6
	Special Tools	7
	Description of Operation - Hydraulic Systems	8
	Flow Priority	9
	Hydraulic System	10
	Hydraulic Fluid Filter	11
	Combination System Relief - Diverter Valve Manifold Assembly (EHSS Model)	13
	Combination System Relief - Diverter Valve Manifold Assembly (SSS Models)	15
	Control Valve Assembly (HPL)	17
	Neutral Position - Fluid Flow	17
	Raising Position - Fluid Flow	18
	Lowering Position - Fluid Flow	19
	Bypass Spool - Fluid Flow	20
	Unload Valve	21
	Drop Rate Control Valve	21
	Linkage Operation - Position Control	22
	Position Control Operation - Neutral Position to Raise	23
	Position Control Operation - Raise Position to Neutral Position	23
	Position Control Operation - Neutral Position to Lowering Position	23
	Troubleshooting	24
	Pressure Testing	26
	Main System Relief Valve	26
	Inlet Restriction Test	28
	Pump Efficiency Test	29
	Overhaul - Lift Cylinder	31
	Lift Cylinder	31
	Removal	31
	Disassembly	34
	Inspection and Repair	35
	Assembly	36
	Installation	38

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87693287

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Drop Rate Control Valve	39
	Removal	39
	Disassembly	39
	Inspection	39
	Assembly	39
	Hydraulic Control Valve	40
	Removal	40
	Disassembly	40
	Inspection	41
	Assembly	42
	Installation	43
	Combination System Relief Valve and Diverter Valve Assemblies	44
	Removal	44
	Disassembly	45
	Inspection	45
	Assembly	46
	Installation	47
	Adjustments	48
	HPL Linkage	48
	Adjustment Procedure	48
	Control Lever	49
	Adjustment Procedure	49
	Control Lever Neutral	49
	Adjustment Procedure	49
	Description of Operation - Hydraulic Pump and Filter	50
	Hydraulic Pump	51
	Removal	51
	Disassembly	53
	Inspection and Repair	53
	Assembly	54
	Break-in Procedure	55
	Installation	56

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87693287

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Sump Tube and Strainer	57
	Removal	57
	Inspection	58
	Assembly	58
	Description of Operation - Remote Valves	59
	Switching Between Single and Double Acting Cylinders	60
	Rear Remote Fluid Flow Diagrams	60
	Four Position, Single Spool Rear Remote Valve with Detent Auto Kick-Out and Float ..	60
	Float	60
	Lift	61
	Lower	62
	Double-Acting, Three Position, Single Spool Rear Remote Valve (w/o Kick-Out or Float)	63
	Lift	63
	Lower	63
	Single-Acting, Three position, Single Spool Rear Remote Valve (w/o Kick-Out or Float)	64
	Lift	64
	Lower	64
	Front Remote (Two Spool) Loader Control Valve Fluid Flow Diagrams	65
	Bucket Control	65
	Neutral/Lift Control - Neutral	65
	Bucket Control - Dumping/Lift Control - Neutral	66
	Bucket Control - Dumping Regen/Lift Control - Neutral	67
	Bucket Control - Roll Back/Lift Control - Neutral	68
	Bucket Control - Neutral/Lift Control - Raising	69
	Bucket Control - Neutral/Lift Control - Lowering	70
	Bucket Control - Neutral/Lift Control - Float	71
	Two Spool Remote Valve	72
	Removal	72
	Disassembly	73
	Inspection	73

SECTION 35 - HYDRAULIC SYSTEM**BOOK 4 - 87693287****Chapter 1 - Hydraulic System (Continued)****CONTENTS**

Section	Description	Page
	Assembly	73
	Installation	77
Overhaul - Rear Remote Valve		78
	Rear Remote (Three Position, Single Spool) (Non-detent)	78
	(Valve Stack Position #1)	78
	Removal	78
	(Valve Stack Position #2)	79
	(Valve Stack Position #3)	81
	Disassembly (Non-detent Valve)	83
	Inspection	84
	Rear Remote (Three Position Valve) (Non-detent)	84
	Assembly	85
	Installation	86
	(Valve Stack Position #1)	86
	(Valve Stack Position #2)	88
	(Valve Stack Position #3)	90
	Rear Remote (Four Position, Single Spool with Detent Kick-Out and Float)	92
	(Valve Stack Position #1)	92
	Removal	92
	(Valve Stack Position #2)	93
	Disassembly (Four Position Valve w/Detent and Float)	96
	Inspection	101
	Assembly	102
	(Valve Stack Position #1)	108
	Installation	108
	(Valve Stack Position #2)	110
	Detent Kick-Out Adjustment	112