

T4020, T4030, T4040, T4050 STANDARD REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	6
SECTION 21 - TRANSMISSIONS	7
SECTION 23 - DRIVE LINES	9
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	10
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	11
SECTION 31 - MECHANICAL POWER TAKE-OFF	12
SECTION 33 - BRAKING SYSTEM	13
SECTION 35 - HYDRAULIC SYSTEMS	14
SECTION 41 - STEERING	18
SECTION 44 - AXLES AND WHEELS	19
SECTION 55 - ELECTRICAL SYSTEM	20
SECTION 90 - PLATFORM, CAB, BODYWORK	29

The following pages are the collation of the contents pages from each section and chapter of the T4020, T4030, T4040, T4050 Standard Repair manual. Complete Repair part # 87758551.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T4020, T4030, T4040, T4050 Standard Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87758552

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	4
	Torques	12
	Special Tools	14
	Sectional Views	15
	Exhaust Gas Recirculation System (EGR)	19
	Troubleshooting	20
10 001 10	Engine	24
	Removal	24
	Installation	31
10 001 54	Disassembly	33
	Removing the Crankshaft Front Seal	35
	Removing the Crankshaft Rear Seal	38

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Assembly on the Bench	44
	Fitting the Bushings	44
	Fitting the Tappets	45
	Fitting the Camshaft	45
	Fitting the Oil Nozzles	46
	Fitting the Crankshaft	46
	Fitting the Connecting Rod-piston Assembly	49
	Fitting the Piston Connecting Rod Assemblies In the Cylinder Liners	50
	Big End Cap Assembly	51
	Fitting the Thermostat Valve	52
	Fitting the Cylinder Head	52
	Fitting the Injectors	54
	Fitting the Rocker Arm Assembly	54
	Fitting the Timing Gear	55
	Fitting the Injection Pump	57
	Fitting the Additional Counterweights	57
	Fitting the Hydraulic Pump Drive Gear	58
	Fitting the Timing Gear Casing	59
	Fitting the Crankshaft Rear Seal	59
	Fitting the Flywheel	59
	Fitting the Oil Pump	60
	Fitting the Oil Sump	61
	Fitting the Crankshaft Front Seal	61
	Fitting the Crankshaft Front Pulley	61
	Fitting the Cooling System Union	61
	Fitting the Coolant Pump	62
	Fitting the Fan-Alternator Pulley	62
	Fitting the Auxiliary Member Drive Belt	64
	Fitting the Exhaust Manifold - Turbine	64
	Fitting the Injector Feed Pipes	64
	Fitting the Fuel Pump - Feed Pipes	65

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Fitting the Pipes Between the Fuel Supply and Injection Pumps, Pre-Heating System and Tappet Cover	65
	Fitting the Starter Motor	66
	Checks, Measurements and Repairs	67
	Crankcase, Cylinder Liners	67
	Crankshaft	70
	Connecting Rods	72
	Bushings	72
	Checking Connecting Rods	73
	Checking Twisting	73
	Checking Bending	73
	Pistons	74
	Measuring the Piston Diameter	75
	Piston Pins	75
	Conditions For Correct Pin-piston Coupling	76
	Piston Rings	76
	Measuring the Clearance X of the V-ring	77
	Valves and Camshaft	78
	Decarbonizing, Checking and Grinding Valves	78
	Valve Springs	80
	Tappets	80
	Camshaft	81
	Checking Cam Lift and Pin Alignment	81
	Cylinder Head	82
	Cylinder Head Thickness	82
	Cylinder Head Hydraulic Seal Check	82
	Low Oil Pressure Indicator	83
	Functional Checks	83
	Oil Filter Replacement	83
	Cooling System	84
	Radiator - Flushing and Checks	84
	Coolant Thermometer - Check	84

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Thermostat Valve - Replacement	84
10 102 70	Crankshaft Front Seal	85
	Replacement	85
10 102 74	Crankshaft Rear Seal	87
	Removal	87
	Installation	88
10 106 12	Adjusting Valve/Rocker Arm Clearance	90
	Adjustment	90
10 218 30	Injectors	93
	Removal	93
	Installation	95
10 246 14	Bosch Injection Pump	96
	Removal	96
	Installation	97
	Timing	99
	Fuel Circuit Air Bleeding	101
10 402 10	Coolant Pump	102
	Removal	102
	Installation	103
10 402 30	Thermostatic Valve	104
	Removal	104
	Installation	105
10 406 10	Radiator	106
	Removal	106
	Installation	109
10 414 10	4-Cylinder Coolant Pump and Generator Drive Belt	110
	Tension adjustment	110

SECTION 10 - ENGINE

BOOK 1 - 87758552

Chapter 2 - Engine (Models T4020 and T4030)

CONTENTS

Section	Description	Page
	Specifications	2
	Overhaul	3
10 001 10	Engine	3
	Removal	3
	Installation	12

SECTION 18 - CLUTCH

BOOK 1 - 87758552

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	3
	Sectional Views	4
	Troubleshooting	6
	Overhaul	7
18 110 10	Clutch	7
	Removal	7
	Installation	12
18 110 30	Dual Disk Clutch 11"/11" - Test Bench Overhaul	13
	Disassembly	13
	Assembly	17
18 110 30	Single Disk Clutch 11" (fitted with Power-Shuttle) - Test Bench Overhaul	18
	Disassembly	18
	Assembly	18
	Checks, Measurements and Repairs	19
	Dual Disk Clutch	19
	Coplanarity Adjustment of 11"/11" Dual Clutch Release	20

SECTION 18 - CLUTCH

BOOK 1 - 87758552

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
	Coplanarity of 11" Single Plate Clutch Release Levers	21
18 100 40	Clutch Adjustments	22
	PTO Clutch Control Adjustments	23

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758552

Chapter 1 - Mechanical Transmission (12 + 12) and (16 + 16)

CONTENTS

Section	Description	Page
	Specifications	2
	Reverser Data	2
	Creeper Unit Main Data (16 + 16 Version)	2
	Transmission and Range Gear Data	2
	Tightening Torques	3
	Special Tools	5
	Sectional Views	9
	Description and Operation	16
	Gearbox and Shuttle	16
	Creeper Unit (16 + 16 version)	16
	Troubleshooting	16
	Gearbox, Creeper Unit and Reverser	16
	Creeper Troubleshooting (16+16 version)	17
	Overhaul	18
21 118 10 -		
21 118 12	Rear Transmission-Gearbox Casing	18
	Removal	18
	Installation	23
21 118 85	Gearbox Transmission Casing	25
	Disassembly	25
	Assembly	31
	Adjustment	33

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758552

Chapter 2 - Power Shuttle Transmission (16 + 16)

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	4
	Special Tools	5
	Sectional Views	10
	Clutch Control Pressure Test	13
	Description and Operation	15
	Gearbox	15
	Power Shuttle Unit	15
	Troubleshooting	15
	Overhaul	16
21 118 85	Gearbox Transmission Casing	16
	Disassembly-Assembly	16
21 134 46	Power Shuttle Control Valve	18
	Disassembly	18
	Assembly	20
21 134 62	Accumulator	21
	Disassembly	21
	Assembly	21
21 134 70	Gearbox Control Valve Solenoid Valve – Removal and Installation from the Two Clutches	22
	Removal	22
	Installation	22
21 134 70	Gearbox Control Valve Solenoid Valve – Removal and Installation from the Gearbox	23
	Removal	23
	Installation	23
21 154 34 –		
21 154 60	Clutch Casing	24
	Disassembly	24
	Assembly	27

SECTION 23 - DRIVE LINES

BOOK 2 - 87758553

Chapter 1 - Drive Lines

CONTENTS

Section	Description	Page
	Specifications	2
	4WD Electrohydraulic Engagement	2
	Propeller Shaft Data	2
	Torques	3
	Special Tools	4
	Sectional Views	6
	Description and Operation	9
	4WD Drive Gear With Electrohydraulic Coupling	9
	Drive Gear/Housing	10
	Troubleshooting	10
	Overhaul	11
23 101 26	Propeller Shafts and Guard	11
	Disassembly	11
	Assembly	11
23 101 40 - 23 202 50	Drive Gear Housing Assembly	12
	Removal	12
	Installation	13
23 101 42	Drive Gear Housing Removed - Procedural Variant 1	14
	Disassembly	14
	Assembly	15
23 202 52	Drive Gear Housing Removed - Procedural Variant 2	16
	Disassembly	16
	Assembly	17

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758553

Chapter 1 - Front Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	4
	Special Tools	6
	Sectional Views	8
	Description and Operation	10
	Overhaul	11
25 100 30	Front Axle, Assembly	11
	Removal	11
	Installation	14
5 100 38	Front Axle	15
	Disassembly	15
	Assembly	21
	Stub Axle Adjustment	22
	Bevel Drive Adjustments	24
	Adjusting the Preloading on the Bevel Drive Shaft Bearings	24
	Determining the Thickness of the Bevel Pinion Position Adjustment Shim	25
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth.	28
25 102 24	Front Axle Differential	31
	Adjustment	31
25 108 30	Front Epicyclic Final Drive With Brake	32
	Disassembly	32
	Assembly	33
	Wheel Hub Seal Replacement	34
	Removal	34
	Installation	34
25 108 30	Front Epicyclic Final Drive	35
	Disassembly	35
	Assembly	36
25 108 46 or 25 108 47	Steering Knuckle Pins and Bearings	38
	Replacement	38
	LIM-Slip Self-locking Differential Lock	39
	Operation	39
25 102 27	Front Axle Differential With LIM-Slip Unit	39
	Overhaul	39
44 511 80	Leading Drive Wheels Toe-in Check	41

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758553

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	5
	Sectional Views	9
	Description and Operation	11
	Troubleshooting	11
	Overhaul	12
27 106 16	Rear Transmission Gearbox	12
	Disassembly	12
	Assembly	15
27 110 10	Adjusting the Position of Differential Lock Engagement Sleeve	18
	Adjusting the Bevel Drive	19
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth	19
	Adjustment of the Clearance Between the Sun and Planet Pinion Teeth	21
	Adjustment of the Differential Lock Control Pedal Stroke	23
27 120 10 -		
27 120 20	RH or LH Final Drive Casing Assembly	24
	Removal	24
	Installation	24
27 120 34	Drive Wheel Shaft	26
	Disassembly	26
	Assembly	27
27 120 32	Epicyclic Final Drive	28
	Disassembly-Assembly	28

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 2 - 87758553

Chapter 1 - Mechanical Power Take-off

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	5
	Special Tools	6
	Sectional Views	7
	Description and Operation	8
	Mechanical PTO	8
	PTO Controlled Directly from the Engine Clutch	8
	PTO Synchronized With Gearbox (Mechanically Controlled Models)	9
	PTO Synchronized With Gearbox (Power-Shuttle/Dual Command (2 Speed Power Shift) models)	9
	Power Take-off Speed Selection Lever	10
	Troubleshooting	10
	Overhaul	11
31 112 20	Mechanical PTO	11
	Removal	11
	Installation	13

SECTION 33 - BRAKING SYSTEM

BOOK 2 - 87758553

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	3
	Sectional Views	4
	Special Tools	7
	Description and Operation	8
	Service Brakes	8
	Parking Brake	8
	Brake Troubleshooting	9
33 202 60	Right or Left Hand Brake	11
	Removal	11
	Installation	11
33 202 4	Brake Hydraulic Pump	13
	Removal	13
	Installation	18
	Service Brakes Control Pedals	19
	Stroke Adjustment	19
33 202 04	Brake Hydraulic System	19
	Air Bleeding	19
33 110 40 -		
33 110 44	Parking Brake Disks	22
	Removal	22
	Installation	23
33 110 08	Handbrake Control	23
	Stroke Adjustment	23

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87758553

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENTS

Operation	Description	Page
	Specifications	2
	Rear Mechanical Hydraulic Lift Data	2
	Implement Hitching Device Data	3
	Torques	4
	Special Tools	6
	Sectional Views	8
	Description and Operation	13
	Troubleshooting	17
	Overhaul	19
35 110 40	Lift Internal Controls (With the Lift Removed)	19
	Disassembly	19
	Assembly	22
	Lift Adjustments	23
	Position Control	23
	Upper Stroke Limit	25
	Draft Control	27
35 110 08	Rod Mechanism Adjustments	31
	Position Control Rod	31
	Draft Control Rod	31
	Fast Raise/Lower Device Adjustments	32
	Lift Arm Descent Speed Adjustments	34
	Upper Stroke Limit Adjustment Check	34
	Upper Stroke Limit Adjustment of the Fast Raise/Lower Device	35
35 110 42	Arm Shaft And Lift Cylinder (With the Lift Removed)	36
	Disassembly	36
	Assembly	39
35 114 14	Lift Control Valve (With Control Valve Removed)	41
	Disassembly	41
	Assembly	44
35 114 30	Lift Pressure Relief Valve	45
	Removal-Installation	45
35 114 32	Calibration	45

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87758553

Chapter 2 - Open Center System Auxiliary Control Valves

CONTENTS

Operation	Description	Page
	Specifications	2
	Special Tools	2
	Torques	2
	Sectional Views	3
	Description and Operation	5
	Operating Stages of Auxiliary Control Valves	6
	Double Acting Cylinder	6
	Single Acting Cylinder	6
	Operating Stages of Auxiliary Control Valve for the Operation of a Single/ Double-acting Cylinder With Automatic Detent Release and Float Position	7
	Lifting	7
	Lowering	7
	Operating Stages of Auxiliary Control Valve for the Operation of a Single/ Double-acting Cylinder With Automatic Detent Release and Float Position	8
	Float Operation	8
	Overhaul	9
35 204 46	Auxiliary Control Valves	9
	Disassembly - Assembly (With The Unit Removed)	9
	Control Valve Spool Sticking Test	10
	Valve Leakage Test	11
	Adjustment of the Automatic Detent Release Pressure	11

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87758553

Chapter 3 - Trailer Brakes Auxiliary Control Valves

CONTENTS

Operation	Description	Page
	Description and Operation	2
	Trailer Brakes Off	3
	Start of Braking	3
	Braking	4
	Overhaul	5
33 220 40	Trailer Brake Valve	5
	Removal	5
	Installation	5

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87758553

Chapter 4 - Non-Stop Flow Gear Pump

CONTENTS

Operation	Description	Page
	Specifications	2
	Torque	3
	Description and Operation	3
	Sectional Views	4
	Overhaul	5
35 104 30	Lift Oil Pump (with pump removed)	5
	Disassembly	5
	Assembly	5

SECTION 41 - STEERING

BOOK 3 - 87758554

Chapter 1 - Steering

CONTENTS

Operation	Description	Page
	Specifications	2
	Torques	2
	Special Tools	3
	Description and Operation	4
	Operation	4
	Neutral Position	4
	Right-Hand Steering Control	4
	Left-Hand Steering Control	6
	Emergency Hydraulic Control	6
	Cylinder Safety Valve and Backflow Valve	6
	Troubleshooting	8
41 204 10	Hydrostatic Steering Wheel	10
	Replacement	10
41 204 30	Hydrostatic Steering Control Valve	11
	Removal	11
	Installation	14
41 204 34	Disassembly	16
	Assembly	22
41 204 38	Hydrostatic Steering Control Valve – Bench Testing	32
	Checking Rotating Valve Wear	32
	Checking Return to Neutral Position	33
	Seal Check	33
	Pressure Relief Valve Calibration	33
	Cylinder Safety Valve Calibration	33
	Checking The Hydrostatic Steering Pressure Relief Valve With Control Valve Installed on Tractor	34
41 216 10	Steering Control Cylinder	35
	Removal	35
	Installation	36
41 216 18	Disassembly	37
	Assembly	38

SECTION 41 - STEERING

BOOK 3 - 87758554

Chapter 2 - Non-Stop Flow Gear Pump

CONTENTS

Operation	Description	Page
	Specifications	2
	Torque	3
	Sectional Views	4
	Description and Operation	5
	Overhaul	6
41 206 20	Hydrostatic Steering Oil Pump (A 31 XRP 2 Pump Model)	6
	Disassembly	6
	Assembly	6

SECTION 44 - AXLES AND WHEELS

BOOK 3 - 87758554

Chapter 1 - Axles and Wheels

CONTENTS

Section	Description	Page
	Specifications	2
	Tire Data	3
	2WD Front Wheel Track Diagram	3
	Sectional Views	4
	Torque	5
	Special Tools	8
	Troubleshooting	9
	Overhaul	10
44 101 22	Front Axle Hub	10
	Disassembly	10
	Assembly	12
44 101 30	Front Axle	13
	Removal	13
	Installation	15
44 101 46	Stub Axle	16
	Removal	16
	Installation	18
44 511 80	Checking the Alignment of the Leading Wheels	20

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87758554

Chapter 1 - Instruments

CONTENTS

Section	Description	Page
	Instrument Cluster Description	2
	Analog Instruments	2
	Indicator and Warning Lights	3
	Speedometer/Tachometer	6
	Engine Coolant Temperature Gauge	6
	Fuel Gauge	6
	Digital Instrument Panel	7
	Indicator and Warning Lights	8
	Rev Counter/Hourmeter	11
	Left Digital Display	11
	Right Digital Display	11
	Engine Coolant Temperature Gauge	11
	Fuel Gauge	11
	Multifunction Display	12
	Applicable Transmitters, Sensors and Switches	13
	Description	13
	Transmitters, Sensors and Switches	14
	Maintenance	18
	Front Work Lights Lamp Bulb Replacement	18
	Changing Swivel Work Light Bulbs	18
	Front Sidelight and Direction Indicator Lamp Bulb Replacement	19
	Tail Light, Brake Light and Direction Indicator Lamp Bulb Replacement	19
	Number Plate Light Bulb Replacement	20
	Work Light Bulb Replacement	20

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87758554

Chapter 2 - Starting System

CONTENTS

Section	Description	Page
	Specifications	2
	Description and Operation	3
	Troubleshooting	4
	Overhaul	5
	System Testing	5
	Starting System Test on Tractor	5
	Current Absorbed on the Starter Motor Circuit	5
	Starting System Circuit Resistance (Voltage Drop)	6
	Positive Battery Cable	6
	Starter Motor Ground Connections	7
	Battery Ground Lead	7
55 201 50	Starter Motor	7
	Removal and Installation	7
55 201 54	Starter Motor Removed	9
	Disassembly	9
	Assembly	9
	Bench Tests	10
	Armature	10
	Field Coils	11
	Bearing Bushings	11
	Drive Pinion	11

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87758554

Chapter 3 - Charging System

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	2
	Description and Operation	2
	Alternator	2
	Description	2
	Operation	3
	Troubleshooting	4
	Precautions During the Operation	4
	Preliminary Checks	4
	Battery	4
	Driving Belt	4
	Warning Light	5
	Preliminary Tests	5
	System Testing	6
	Alternator Wire Connection Tests	6
	Charging Current and Regulated Voltage Tests	6
	Charging Circuit Voltage Drop Tests	7
	Insulated Side	7
	Ground Side	8
	Maximum Alternator Output Test	8
	Alternator Component Tests	9
	Overhaul	9
55 301 10	Alternator	9
	Removal - Installation	9
	Rotor and Regulator Field Circuit Test	11
	Checking the Continuity of Three Stator Windings	11
	Checking the Diodes	12
	Excitation Diodes Test	12
	Positive Power Diode Tests	13
	Negative Power Diode Tests	13

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87758554

Chapter 3 - Charging System (Continued)

CONTENTS

Section	Description	Page
	Rotor	13
	Check on Rotor Winding Resistance Measured Between Pins Connected to Brushes	13
55 301 12	Alternator, Removed	14
	Disassembly - Assembly	14
	Electronic Voltage Regulator	14
	Inductor Winding Insulation Test	15
	Check on Inductor (Rotor) Resistance on Slip Rings	16
	Repair	16
	Installation	16

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87758554

Chapter 4 - Battery

CONTENTS

Section	Description	Page
	Specifications	2
	Troubleshooting	2
	Description and Operation	3
	Overhaul	4
	Battery	4
	Removal	4
	Installation	4
	Battery Maintenance	5
	Relative Density	5
	Precautions	5
	Dry-Charged Batteries	6
	Charging the Battery	6
	Normal Charging (Top Up)	6
	Charging Very Flat Batteries	6
	Testing	7

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758555

Chapter 5 - Electrical Circuits

CONTENTS

Section	Description	Page
	Electrical Circuit Components – Numerical Order	3
	Version A (ISO–Power Shuttle Unit)	7
	Version B (ISO Standard)	9
	Version C (North America–Power Shuttle)	11
	Version D (North America Standard)	13
	Operator Safety Circuit	15
	Description	15
	Operation	15
	Electrical Circuits	16
	Wire Color Coding	16
	Wiring Diagrams and Connections Identification Code	16
	Symbols Used in Electrical Circuits	17
	Component List – Functional Order	19
	Standard Version (ISO – North America)	22
	Electrical Circuit Index	22
	Index to Wiring Harnesses	22
	Circuit Diagrams	23
	Front Part Circuit – Diagram A	24
	Power Sockets and Operator Safety Circuit (North America Version) – Diagram B . .	26
	Transmission Circuit (North America Version) – Diagram C	30
	Front Lights Circuit – Diagram D/1	34
	Front Lights Circuit – Diagram D/2	36
	Lights Circuit (ISO Version) – Diagram E	40
	Lights Circuit (North America Version) – Diagram F	44
	Trailer Brake (ISO Version) – Diagram G	48
	Mechanical and Electrohydraulic Four-Wheel Drive – Diagram H	50
	Transmission Circuit (ISO Version) – Diagram I	54
	Transmission Circuit (ISO Version) – Diagram L	56
	Transmission Circuit (North America Version) – Diagram M	60
	Sensors, Transmitters and Instrument Circuit – Diagram N	64

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758555

Chapter 5 - Electrical Circuits (Continued)

CONTENTS

Section	Description	Page
	Power Shuttle Version (ISO-North America)	67
	Index to Electrical Circuit	67
	Index to Wiring Harnesses	67
	Front Part Circuit - Diagram A	69
	Front Lights Circuit - Diagram B/1	74
	Front Lights Circuit - Diagram B/2	76
	Lights Circuit (ISO version) - Diagram C	80
	Lights Circuit (North America version) - Diagram D	84
	Trailer Brake (ISO version) - Diagram E	88
	Mechanical and Electrohydraulic Four-Wheel Drive - Diagram F	90
	Transmission Circuit (ISO version) - Diagram G	94
	Transmission Circuit (ISO version) - Diagram H	96
	Transmission Circuit (Power Shuttle Control Unit) - Diagram I	100
	Transmission Circuit (North America Version) - Diagram L	102
	Transmission Circuit (North America Version) - Diagram M	104
	Sensors, Transmitters and Instrument Circuit - Diagram N	108

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758555

Chapter 6 - Connectors

CONTENTS

Section	Description	Page
	Electrical Circuit Components	2
	List of Connectors	5

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758555

Chapter 7 - Fault Codes

CONTENTS

Section	Description	Page
	Transmission Fault Codes (SB)	2
	Electrical Fault Codes	37
	Control panel (ADIC) Fault Codes	42

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758555

Chapter 8 - HH Menu and Calibrations

CONTENTS

Section	Description	Page
	Menu Access	2
H1	Calibrations (SB)	5
	Calibration of the Clutches and Synchronizer	5
	Manual Calibration	6
	UXX Fault Codes	7
H2	View All Calibration Values (SB)	8
	Clutch Calibration Values (SB)	8
H3	Options (SB - ZA)	8
	Gearbox Options (SB)	8
	Options for Control Panel (ZA)	9
H4	Software Revision Levels	12
	Software Revision Level of the Control Panel (ZA)	12
	Software Revision Level of the Power Shuttle Control Unit (SB)	12
H5	Control Switch Diagnostics	12
	Control Switches Diagnostics of the Control Panel (ZA)	14
	Power Shuttle Switches Diagnostics (SB)	15
H7	Service Procedures (SB)	16
	Service Procedures for Transmission (SB)	16
H8	Deletion of Stored Data (ZA - SB)	17
	Deletion of Stored Data In the Control Panel (ZA)	17
	Deletion of Stored Data for Power Shuttle (SB)	18
H9	Voltmeter (ZA- SB)	18
	Control Panel Voltmeter (ZA)	18
	Power Shuttle Voltmeter (SB)	19
HB	Displays Stored Error Codes (ZA - SB)	20
	Displays the Error Codes Stored In the Control Panel (ZA)	20
	Displays the Error Codes Stored In the Power Shuttle Control Unit (SB)	20
HC	Deletes All the Stored Error Codes (ZA - SB)	21
	Deletes All the Stored Error Codes (ZA)	21
	Deletes All the Stored Error Codes (SB)	21
HE	Frequency (ZA)	22
	Frequency (ZA)	22
HF	Displays the Hardware Information (ZA - SB)	22
	Displays the Hardware Information (ZA)	22
	Displays the Hardware Information (SB)	22

SECTION 90 - PLATFORM, CAB, BODYWORK

BOOK 4 - 87758555

Chapter 1 - Bodywork

CONTENTS

Section	Description	Page
	Overhaul	2
90 100 22	Hood	2
	Removal	2
	Installation	2
90 100 80	Protective Grill	3
	Removal	3
	Installation	3
90 110 50	Dashboard	4
	Removal	4
	Installation	8
90 116 26	Rear Roll Bar	9
	Removal	9
	Installation	10
90 116 10	Right-Hand Mudguard	11
	Removal	11
	Installation	11
90 116 10	Left-Hand Mudguard	12
	Removal	12
	Installation	12
90 116 24	Rear Guard	13
	Removal	13
	Installation	15

Product: New Holland T4020/T4030/T4040/T4050 Standard Tractor Service Repair Manual

Full Download: [https://www.arepairmanual.com/downloads/new-holland-t4020-t4](https://www.arepairmanual.com/downloads/new-holland-t4020-t4030-t4040-t4050-standard-tractor-service-repair-manual/)

[030-t4040-t4050-standard-tractor-service-repair-manual/](https://www.arepairmanual.com/downloads/new-holland-t4020-t4030-t4040-t4050-standard-tractor-service-repair-manual/)

Sample of manual. Download All 846 pages at:

<https://www.arepairmanual.com/downloads/new-holland-t4020-t4030-t4040-t4050-standard-tractor-service-repair-manual/>