


SERVICE MANUAL



Color ink jet printer
Stylus COLOR 880

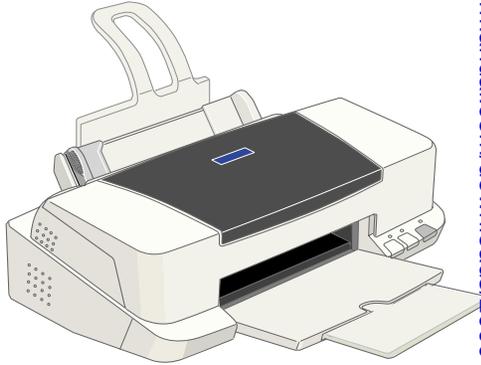

EPSON®

Sample of manual. Download All 179 pages at:
<https://www.arepairmanual.com/downloads/2000-epson-stylus-color-880-color-ink-jet-printer-service-repair-workshop-manual>

Product: 2000 EPSON Stylus Color 880 Color Ink Jet Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2000-epson-stylus-color-880-color-ink-jet-printer-service-repair-workshop-manual>

SEIJ00011

Notice:

- All rights reserved. No part of this manual may be reproduced, stored in a retrieval system, or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION.
- The contents of this manual are subject to change without notice.
- All effort have been made to ensure the accuracy of the contents of this manual. However, should any errors be detected, SEIKO EPSON would greatly appreciate being informed of them.
- The above notwithstanding SEIKO EPSON CORPORATION can assume no responsibility for any errors in this manual or the consequences thereof.

EPSON is a registered trademark of SEIKO EPSON CORPORATION.

General Notice: Other product names used herein are for identification purpose only and may be trademarks or registered trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

Copyright © 2000 SEIKO EPSON CORPORATION. Printed in Japan.

PRECAUTIONS

Precautionary notations throughout the text are categorized relative to 1) Personal injury and 2) damage to equipment.

DANGER Signals a precaution which, if ignored, could result in serious or fatal personal injury. Great caution should be exercised in performing procedures preceded by DANGER Headings.

WARNING Signals a precaution which, if ignored, could result in damage to equipment.

The precautionary measures itemized below should always be observed when performing repair/maintenance procedures.

DANGER

1. ALWAYS DISCONNECT THE PRODUCT FROM THE POWER SOURCE AND PERIPHERAL DEVICES PERFORMING ANY MAINTENANCE OR REPAIR PROCEDURES.
2. NOWORK SHOULD BE PERFORMED ON THE UNIT BY PERSONS UNFAMILIAR WITH BASIC SAFETY MEASURES AS DICTATED FOR ALL ELECTRONICS TECHNICIANS IN THEIR LINE OF WORK.
3. WHEN PERFORMING TESTING AS DICTATED WITHIN THIS MANUAL, DO NOT CONNECT THE UNIT TO A POWER SOURCE UNTIL INSTRUCTED TO DO SO. WHEN THE POWER SUPPLY CABLE MUST BE CONNECTED, USE EXTREME CAUTION IN WORKING ON POWER SUPPLY AND OTHER ELECTRONIC COMPONENTS.

WARNING

1. REPAIRS ON EPSON PRODUCT SHOULD BE PERFORMED ONLY BY AN EPSON CERTIFIED REPAIR TECHNICIAN.
2. MAKE CERTAIN THAT THE SOURCE VOLTAGES IS THE SAME AS THE RATED VOLTAGE, LISTED ON THE SERIAL NUMBER/RATING PLATE. IF THE EPSON PRODUCT HAS A PRIMARY AC RATING DIFFERENT FROM AVAILABLE POWER SOURCE, DO NOT CONNECT IT TO THE POWER SOURCE.
3. ALWAYS VERIFY THAT THE EPSON PRODUCT HAS BEEN DISCONNECTED FROM THE POWER SOURCE BEFORE REMOVING OR REPLACING PRINTED CIRCUIT BOARDS AND/OR INDIVIDUAL CHIPS.
4. IN ORDER TO PROTECT SENSITIVE MICROPROCESSORS AND CIRCUITRY, USE STATIC DISCHARGE EQUIPMENT, SUCH AS ANTI-STATIC WRIST STRAPS, WHEN ACCESSING INTERNAL COMPONENTS.
5. REPLACE MALFUNCTIONING COMPONENTS ONLY WITH THOSE COMPONENTS BY THE MANUFACTURE; INTRODUCTION OF SECOND-SOURCE ICs OR OTHER NONAPPROVED COMPONENTS MAY DAMAGE THE PRODUCT AND VOID ANY APPLICABLE EPSON WARRANTY.

PREFACE

This manual describes basic functions, theory of electrical and mechanical operations, maintenance and repair procedures of Stylus COLOR 880. The instructions and procedures included herein are intended for the experienced repair technicians, and attention should be given to the precautions on the preceding page. The chapters are organized as follows:

CHAPTER 1. PRODUCT DESCRIPTIONS

Provides a general overview and specifications of the product.

CHAPTER 2. OPERATING PRINCIPLES

Describes the theory of electrical and mechanical operations of the product.

CHAPTER 3. TROUBLESHOOTING

Provides the step-by-step procedures for troubleshooting.

CHAPTER 4. DISASSEMBLY AND ASSEMBLY

Describes the step-by-step procedures for disassembling and assembling the product.

CHAPTER 5. ADJUSTMENTS

Provides Epson-approved methods for adjustment.

CHAPTER 6. MAINTENANCE

Provides preventive maintenance procedures and the lists of Epson-approved lubricants and adhesives required for servicing the product.

APPENDIX

Provides the following additional information for reference:

- *EEPROM Address Map*
- *Connector Pin Assignments*
- *Component Layout*
- *Parts List and Exploded Diagrams*
- *C298MAIN Board Circuit Diagram*

Revision Status

Revision	Issued Date	Description
A	August 24, 2000	First Release

Contents

Chapter 1 PRODUCT DESCRIPTION

1.1 FEATURES	10
1.2 SPECIFICATIONS	11
1.2.1 Physical Specification	11
1.2.2 Printing Specification	11
1.2.3 Paper Feeding	13
1.2.4 Input Data Buffer	13
1.2.5 Electric Specification	13
1.2.6 Environmental Condition	14
1.2.7 Reliability	14
1.2.8 Safety Approvals	14
1.2.9 Acoustic Noise	14
1.2.10 CE Marking	14
1.3 INTERFACE	15
1.3.1 Parallel Interface (Forward Channel)	15
1.3.2 Parallel Interface (Reserve Channel)	18
1.3.3 USB Interface	19
1.3.4 Prevention of Data Transfer Time-out	20
1.3.5 Interface Selection	20
1.3.6 IEEE1284.4 Protocol	20
1.4 OPERATOR CONTROLS	21
1.4.1 Operating Switch	21
1.4.2 Control Panel	21
1.4.2.1 Switches	21
1.4.2.2 Indicators	21
1.4.3 Panel Functions	22
1.4.4 Printer Condition and Panel Status	23
1.4.5 Printer Initialization	23
1.4.6 Errors	24
1.5 PAPER	25
1.5.1 Paper Handling	25
1.5.2 Paper Specification	25
1.5.2.1 Cut Sheet	25

1.5.2.2 Transparency, Glossy Paper	25
1.5.2.3 Envelope	25
1.5.2.4 Index Card	26
1.5.3 Printing Area	27
1.5.3.1 Cut Sheet	27
1.5.3.2 Envelopes	28
1.6 INK CARTRIDGE	28
1.6.1 Black Ink Cartridge	28
1.6.2 Color Ink Cartridge	29

Chapter 2 Operating Principles

2.1 Overview	31
2.1.1 Printer Mechanism	31
2.1.1.1 Printing Mechanism	32
2.1.1.2 Printing Process	33
2.1.1.3 Carriage Mechanism	34
2.1.1.4 Platen Gap (PG) Adjust Mechanism	35
2.1.1.5 Paper Feeding Mechanism	35
2.1.1.6 CR Lock Mechanism	37
2.1.1.7 Paper Loading Mechanism	38
2.1.1.8 Pump Mechanism	40
2.1.1.9 Capping Mechanism	41
2.2 Electrical Circuit Operating Principles	42
2.2.1 C378PSB/PSE Board	43
2.2.2 C378MAIN Board	45
2.2.2.1 Printhead Driver Circuit	47
2.2.2.2 Reset Circuit	48
2.2.2.3 CR Motor Driver Circuit	49
2.2.2.4 PF Motor Driver Circuit	51
2.2.2.5 ASF/Pump Motor Driver Circuit	52
2.2.2.6 EEPROM Control Circuit	52
2.2.2.7 Sensor Circuit	53

Chapter 3 Troubleshooting

3.1 Overview	56
3.1.1 Troubleshooting with LED Error Indications	57
3.1.1.1 Remedies for Paper Out Error	59
3.1.1.2 Remedies for the Paper Jam Error	61
3.1.1.3 Remedies for No I/C and Ink Out Errors	62
3.1.1.4 Remedies for the Maintenance Error	64
3.1.1.5 Remedies for Fatal Error	65
3.1.2 Isolating the Faulty Part on the Power Supply Board	68
3.1.3 Isolating the Faulty Part according to the Phenomenon	70

Chapter 4 Disassembly and Assembly

4.1 Overview	77
4.1.1 Precautions for Disassembling the Printer	77
4.1.2 Tools	78
4.1.3 Specification for Screws	79
4.1.4 Service Checks After Repair	80
4.2 Disassembly Procedures	81
4.2.1 Removing the Upper Housing	82
4.2.2 Removing the Circuit Board Assembly	83
4.2.3 Removing the Operation Panel	85
4.2.4 Disassembling the Printer Mechanism	86
4.2.4.1 Removing the Printhead Unit	87
4.2.4.2 Removing the Waste Ink Absorber Tray Assembly	89
4.2.4.3 Removing the Ink System Assembly	91
4.2.4.4 Removing the CR Motor Assembly	94
4.2.4.5 Removing the DE Assembly (include the ASF/Pump motor)	95
4.2.4.6 Removing the ASF Assembly	99
4.2.4.7 Removing the CR Assembly	105
4.2.4.8 Removing the PF Roller Assembly and Paper Eject Roller Assembly	110
4.2.4.9 Remove the PF Motor Assembly	114
4.2.4.10 Removing the PE Detector Assembly	115

Chapter Adjustment

5.1 Overview	117
---------------------------	-----

5.1.1 Required Adjustments	117
5.1.2 Adjustment Tools Required	118
5.2 Adjustment	119
5.2.1 Parallelism Adjustment	119
5.2.2 Backlash value Adjustment for PF motor	122
5.2.3 Adjustment by Adjustment Program	125
5.2.4 Adjustment Program Installation Procedure	126
5.2.5 Adjustment Program Initial Setting menu	126
5.3 Sequential Repair Service Program feature	127
5.3.1 Feature	127
5.3.2 Printhead removal	128
5.3.3 Printhead replacement	130
5.3.4 Main board replacement	134
5.3.5 CR unit replacement or removal	135
5.3.6 CR motor replacement or removal	135
5.3.7 Printer mechanism replacement	136
5.3.8 Waste ink pad replacement	136
5.4 Individual service adjustment program feature	137
5.4.1 Head cleaning function	137
5.4.2 Initial ink charge function	137
5.4.3 Protection counter check/reset	138
5.4.4 EEPROM check function	138
5.4.5 Refurbishment for DOA	139
5.4.6 A4 Check pattern	140

Chapter 6 Maintenance

6.1 Overview	143
6.1.1 Cleaning	143
6.1.2 Service Maintenance	143
6.1.3 Lubrication	144

Chapter 7 Appendix

7.1 Connector Summary	153
7.1.1 Connector Pin Assignment	153
7.1.2 EEPROM ADDRESS MAP	156
7.2 Circuit Board Component Layout	162

7.3 Exploded Diagrams and Parts List for Stylus COLOR 880 165
7.4 Circuit Diagram 176

CHAPTER

1

PRODUCT DESCRIPTION

1.1 FEATURES

The major features of EPSON color inkjet printers EPSON Stylus COLOR 880 are:

- High Color Print Quality
 - 1440 (H) X 720 (V) dpi printing
 - Four Color Printing (YMCK)
 - Traditional and New Microweave
- Built-in Auto Sheet Feeder
 - Holds 100 cut-sheets (64g/m²)
 - Holds 10 envelopes
 - Holds 30 transparency films
- Two Built-in Interfaces
 - Bi-directional parallel I/F (IEEE-1284 level 1 device)
 - USB
- Windows/Macintosh exclusive

1.2 SPECIFICATIONS

This section covers specifications of the printers.

1.2.1 Physical Specification

- Weight: 6.0kg (without ink cartridges) for Stylus Color 880
- Dimension:
 - Printing: 450 mm (W) x 546 mm (D) x 269 mm (H)

1.2.2 Printing Specification

- Print Method
 - On demand ink jet
- Nozzle Configuration
 - Monochrome 144 nozzles (48 x 3 staggered)
 - Color 48 nozzles x 3 (Cyan, Magenta, Yellow)
- Print Direction
 - Bi-direction with logic seeking
- Print Speed & Printable Columns

Table 1-1. Character Mode

Model	Character Pitch	Printable Column	LQ Speed
Stylus Color 880	10 CPI (Pica)	80	238 CPS*

*This value is the speed of normal-dot printing.

Table 1-2. Raster Graphics Mode

Model	Horizontal Resolution	Printable Area	Available Dot	CR Speed
Stylus Color 880	180 dpi	8.26 inches	1488	23.8/19 IPS
	360 dpi	8.26 inches	2976	23.8/19 IPS
	720 dpi	8.26 inches	5952	19 IPS

- Control Code
 - ESC/P2 and expended raster graphics command
 - EPSON Remote command
- Character Tables
 - 38 character tables:

Italic table	PC 437	PC 437 Greek	Abicomp
PC 850	PC 852	PC 853	Roman 8
PC 855	PC 857	PC 860	ISO Latin 1
PC 861	PC 865	PC 866	PC 863
PC 869	MAZOWIA	Code MJK	PC 771*
ISO 8859-7	ISO Latin 1T	Bulgaria	
PC 774	Estonia	ISO 8859-2	
PC 866 LAT	PC 866 UKR	PC AR864	
PC APTEC	PC 708	PC 720	
Hebrew7*	Hebrew8*	PC 862*	
PC 858	ISO 8859-15	BRASCI	

* These character tables cannot select in the Default setting mode.

- Typeface
 - Bit map LQ font:
 - EPSON Roman 10 CPI, 12 CPI, 15CPI, Proportional
 - EPSON Courier 10 CPI, 12 CPI, 15CPI

■ Scalable font:

EPSON Roman 10.5pt, 8pt - 32pt (every 2pt)

□ Character Table and Typeface

Character table	Bitmap font	Scalable font
	EPSON Roman EPSON Courier	EPSON Roman
Italic table PC 437(US Standard Europe) PC 850(Multilingual) PC 860(Portuguese) PC 861(Icelandic) PC 865(Nordic) BRASCII Abicomp ISO Latin 1 PC 858 ISO 8859-15	Supported	Supported

PC 437 Greek PC 852(East Europe) PC 853(Turkish) PC 855(Cyrillic) PC 857(Turkish) PC 866(Russian) PC 869(Greek) MAZOWIA(Poland) Code MJK(CSFR) ISO 8859-7(Latin/Greek) ISO Latin 1T(Turkish) Bulgaria(Bulgaria) PC 774 Estonia ISO 8859-2(ISO Latin 2) PC 866 LAT PC 866 UKR	Supported	Supported
PC APTEC(Arabic) PC 708(Arabic) PC 720(Arabic) PC AR864(Arabic)	EPSON Roman	Not supported
Hebrew7* Hebrew8* PC 862(Hebrew)*		

* These character tables cannot select in the Default setting mode.

1.2.3 Paper Feeding

- Feed Method
 - Friction feed with ASF
- Paper Path
 - Cut-sheet ASF (Top entry, Front out)
- Feed Speed
 - 2.36 inch/sec (Normal, Continuous feed)
 - 4.5 inch/sec (Fast, Continues feed)

1.2.4 Input Data Buffer

- 256KB

1.2.5 Electric Specification

[120V Version]

Rated Voltage:	AC120V
Input Voltage Range:	AC99~132V
Rated Frequency Range:	50~ 60Hz
Input Frequency Range:	49.5~ 60.5Hz
Rated Current:	0.4A
Power Consumption:	Approx. 18W (ISO10561 Letter Pattern) Approx. 3.5W in standby mode Energy Star compliant
Insulation Resistance:	10M ohms min. (between AC line and chassis, DC 500V)
Dielectric Strength:	AC 1000V rms. 1 minutes or AC 1200V rms. 1 second (between AC line and chassis)

[220 ~ 240V Version]

Rated Voltage:	AC220V~240V
Input Voltage Range:	AC198~264V
Rated Frequency Range:	50~60Hz
Input Frequency Range:	49.5~60.5Hz
Rated Current:	0.2 A
Power Consumption:	Approx. 18W (ISO10561 Letter Pattern) Approx. 3.5W in standby mode Energy Star compliant
Insulation Resistance:	10M ohms min. (between AC line and chassis, DC 500V)
Dielectric Strength:	AC 1500V rms. 1 minute (between AC line and chassis)

1.2.6 Environmental Condition

- Temperature
 - Operating: 10 to 35°C (see the figure below for condition)
 - Non-operating: -20 to 40°C (with shipment container)
1 month at 40°C and 120 hours at 60°C
- Humidity
 - Operating: 20 to 80% RH
(without condensation / see the figure below for condition)
 - Non-operating: 5 to 85% RH
(without condensation / with shipment container)
- Resistance to Shock
 - Operating: 1G, within 1 ms
 - Non-operating: 2G, within 2 ms (with shipment container)
- Resistance to Vibration
 - Operating: 0.15G
 - Non-operating: 0.50G (with shipment container)

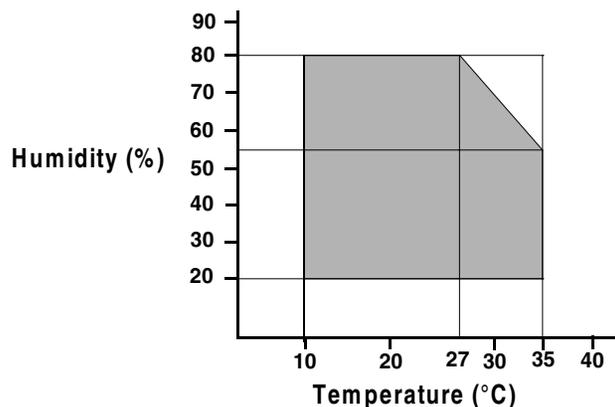


Figure 1-1. Temperature/Humidity Range

1.2.7 Reliability

Total Print Volume: 75,000 pages (A4, Letter)

Print Head Life: 3 billion dots/nozzle

1.2.8 Safety Approvals

[120V Version]

Safety Standards: UL1950
CSA22.2 No.950

EMI: FCC part 15 subpart B Class B
CSA C108.8 Class B

[220~240V Version]

Safety Standards: EN60950 (VDE)

EMI: EN55022 (CISPR Pub.22) Class B
AS/NZS 3548 Class B

1.2.9 Acoustic Noise

Level: Approx. 42dB(A) (According to ISO 7779)
-Used media : Plain Paper
- Print Quality: Fine

1.2.10 CE Marking

[220~240V Version]

Low Voltage Directive 73/23/EEC: EN60950
EMC Directive 89/336/EEC: EN55022 Class B
EN61000-3-2
EN61000-3-3
EN50082-1
IEC801-2
IEC801-3
IEC801-4

1.3 INTERFACE

The EPSON Stylus COLOR 880 provide USB and parallel interface as standard.

1.3.1 Parallel Interface (Forward Channel)

Transmission Mode: 8 bit parallel, IEEE-1284 compatibility mode
 Synchronization: By STROBE pulse
 Handshaking: BY BUSY and ACKNLG signal
 Signal Level: TTL compatible level
 Adaptable Connector: 57-30360 (amphenol) or equivalent

BUSY signal is set high before setting either -ERROR low or PE high, and held high until all these signals return to their inactive state.

BUSY signal is at high level in the following cases:

- During data entry (see data transmission timing).
- When input data buffer is full.
- During -INIT signal is at low level or during hardware initialization.
- During printer error (see -ERROR signal).
- When the parallel interface is not selected.

ERROR signal is at low level when the printer is in one of the following states:

- Printer hardware error (fatal error)
- Paper-out error
- Paper-jam error
- Ink-out error

PE signal is at high level during paper-out error.

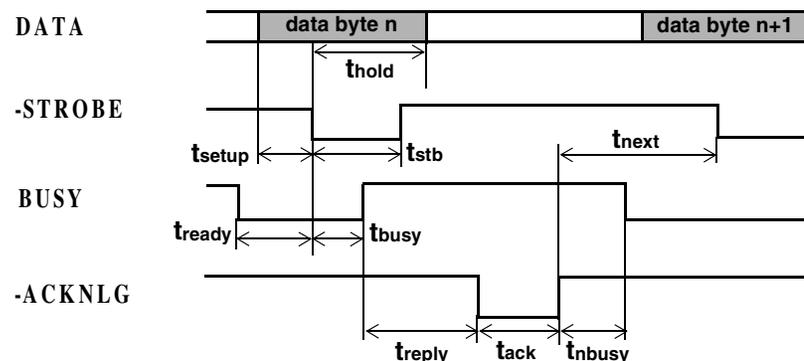


Figure 1-2. Data Transmission Timing

Table 1-3.

Parameter	Minimum	Maximum
tsetup	500ns	-
thold	500ns	-
tstb	500ns	-
tready	0	-
tbusy	-	500ns
tt-out*	-	120ns
tt-in**	-	200ns
treply	0	-
tack	500ns	10us
tnbusy	0	-
tnext	0	-

* Rise and fall time of every output signal.

** Rise and fall time of every input signal.

*** Typical timing for tack is shown on the following page.

Table 1-4. Typical Time of tack

Parallel I/F Mode	Typical Time of tack
High Speed	1us
Normal Speed	3us

Table 1-5. Signal Level: TTL Compatible (IEEE-1284 level 1 device)

Parameter	Minimum	Maximum	Condition
VOH*	-	5.5V	
VOL*	-0.5V	-	
IOH*	-	0.32mA	VOH = 2.4V
IOL*	-	12mA	VOL = 0.4V
CO	-	50pF	
VIH	-	2.0V	
VIL	0.8V	-	
IIH	-	0.32mA	VIH = 2.0V
IIL	-	12mA	VIL = 0.8V
CI	-	50pF	

* A low logic level on the Logic H signal is 2.0V or less when the printer is powered off, and this signal is equal to or exceeding 3.0V when the printer is powered on. The receiver shall provide an impedance equivalent to 7.5K ohm to ground.

Table 1-6. Connector Pin Assignment and Signals

Pin No.	Signal Name	Return GND Pin	In/Out	Functional Description
1	-STROBE	19	In	The strobe pulse. Read-in of data is performed at the falling edge of this pulse.
2	DATA0	20	In	The DATA0 through DATA7 signals represent data bits 0 to 7, respectively. Each signal is at high level when data is logical 1 and low level when data is logical 0.
3	DATA1	21	In	
4	DATA2	22	In	
5	DATA3	23	In	
6	DATA4	24	In	
7	DATA5	25	In	
8	DATA6	26	In	
9	DATA7	27	In	
10	-ACKNLG	28	Out	This signal is a negative pulse indicating that the printer can accept data again.
11	BUSY	29	Out	A high signal indicates that the printer cannot receive data.
12	PE	28	Out	A high signal indicates paper-out error.
13	SLCT	28	Out	Always at high level when the printer is powered on.
14	-AFXT	30	In	Not used.
31	-INIT	30	In	The falling edge of a negative pulse or a low signal on this line causes the printer to initialize. Minimum 50us pulse is necessary.
32	-ERROR	29	Out	A low signal indicates printer error condition.
36	-SLIN	30	In	Not used.

Table 1-6. Connector Pin Assignment and Signals (continued)

Pin No.	Signal Name	Return GND Pin	In/Out	Functional Description
18	Logic H	-	Out	Pulled up to +5V via 3.9 K ohm resistor.
35	+5V	-	Out	Pulled up to +5V via 3.3K ohm resistor.
17	Chassis GND	-	-	Chassis GND
16,33, 19-30	GND	-	-	Signal GND
15,34	NC	-	-	Not connected

NOTE: In/Out refers to the direction of signal flow seen from the printer side.

1.3.2 Parallel Interface (Reserve Channel)

Transmission Mode: IEEE-1284 nibble mode
 Adaptable Connector: See forward channel.
 Synchronization: Refer to the IEEE-1284 specification
 Handshaking: Refer to the IEEE-1284 specification
 Data Trans. Timing: Refer to the IEEE-1284 specification
 Signal Level: IEEE-1284 level 1 device
 See forward channel.

Table 1-7. Connector Pin Assignment and Signals

Pin No.	Signal Name	Return GND Pin	In/Out	Functional Description
1	HostClk	19	In	Host clock signal.
2	DATA0	20	In	The DATA0 through DATA7 signals represent data bits 0 to 7, respectively. Each signal is at high level when data is logical 1 and low level when data is logical 0. These signals are used to transfer the 1284 extensibility request values to the printer.
3	DATA1	21	In	
4	DATA2	22	In	
5	DATA3	23	In	
6	DATA4	24	In	
7	DATA5	25	In	
8	DATA6	26	In	
9	DATA7	27	In	
10	PtrClk	28	Out	Printer clock signal.
11	PtrBusy / DataBit-3,7	29	Out	Printer busy signal and reverse channel transfer data bit 3 or 7.
12	AckDataReq / DataBit-2,6	28	Out	Acknowledge data request signal and reverse channel transfer data bit 2 or 6.
13	Xflag / DataBit-1,5	28	Out	X-flag signal and reverse channel transfer data bit 1 or 5.
14	HostBusy	30	In	Host busy signal.
31	-INIT	30	In	Not used.

Table 1-7. Connector Pin Assignment and Signals (continued)

Pin No.	Signal Name	Return GND Pin	In/Out	Functional Description
32	-DataAvail / DataBit-0,4	29	Out	Data available signal and reverse channel transfer data bit 0 or 4.
36	1284-Active	30	In	1284 active signal.
18	Logic-H	-	Out	Pulled up to +5V via 3.9K ohm resistor.
35	+5V	-	Out	Pulled up to +5V via 3.3K ohm resistor.
17	Chassis GND	-	-	Chassis GND
16,33, 19-30	GND	-	-	Signal GND
15,34	NC	-	-	Not connected

Note) In/Out refers to the direction of signal flow from the printer's point of view.

Extensibility Request:

The printer responds affirmatively when the extensibility request values are 00H or 04H, which means,

- 00H: Request Nibble Mode Reverse Channel Transfer.
- 04H: Request Device ID;
Return Data Using Nibble Mode Rev Channel Transfer.

Device ID:

The printer sends the following device ID string when requested.

When IEEE1284.4 is enabled,
 [00H] [5AH]
 MFG: EPSON;
 CMD: ESCPL2, BDC, D4;
 MDL: Stylus[SP]COLOR[SP]880;
 CLS: PRINTER;
 DES: EPSON[SP]Stylus[SP]COLOR[SP]880;

When IEEE1284.4 is disabled,
 [00H] [57H]
 MFG: EPSON;
 CMD: ESCPL2, BDC;
 MDL: Stylus[SP]COLOR[SP]880;
 CLS: PRINTER;
 DES: EPSON[SP]Stylus[SP]COLOR[SP]880;

NOTE 1: [00H] denotes a hexadecimal value of zero.

NOTE 2: MDL value depends on the EEPROM setting.

NOTE 3: CMD value depends on the IEEE1284.4 setting.

1.3.3 USB Interface

Standard: Based on:
 "Universal Serial Bus Specifications Rev. 1.0"
 "Universal Serial Bus Device Class Definition for Printing Devices Version 1.0"
 Bit Rate: 12Mbps (Full Speed Device)
 Data Encoding: NRZI
 Adaptable Connector: USB Series B
 Recommended Cable Length: 2 meters

Table 1-8. Connector Pin Assignment and Signals

Pin No.	Signal Name	I/O	Function Description
1	VCC	-	Cable power. Max. power consumption is 2mA.
2	-Data	Bi-D	Data
3	+Data	Bi-D	Data, pull up to +3.3 V via 1.5K ohm resistor.
4	Ground	-	Cable ground

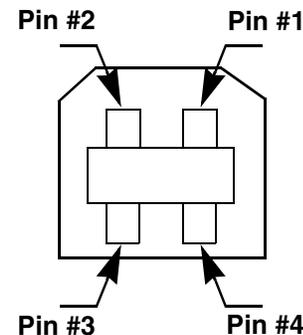


Figure 1-3. USB Pin Assignment

1.3.4 Prevention of Data Transfer Time-out

Generally, hosts abandon data transfer to peripherals when the peripheral is in the busy state for dozens of seconds continuously. To prevent this kind of time-out, the printer receives data very slowly, several bytes per minute, even if the printer is in the busy state. The slowdown starts when the remaining input buffer becomes several hundreds of bytes, and the printer finally gets into the busy state continuously when the input buffer is full.

USB and IEEE1284.4 on the parallel interface do not require such function.

1.3.5 Interface Selection

The printer has two built-in interfaces: the USB and parallel interface. These interfaces are selected automatically.

Automatic Selection

In this automatic interface selection mode, the printer is initialized to the idle state while scanning which interface receives data when it is powered on. Then the interface which received data first is selected. When the host stops data transfer and the printer is in the stand-by state for seconds, the printer is returned to the idle state. As long as the host sends data or the printer interface is in the busy state, the selected interface is let as it is.

Interface State and Interface Selection

When the parallel interface is not selected, the interface gets into the busy state. When the printer is initialized or returned to the idle state, the parallel interface gets into the ready state. Note that the interrupt signal such as the -INIT signal on the parallel interface is not effective while that interface is not selected.

1.3.6 IEEE1284.4 Protocol

The packet protocol described by IEEE1284.4 standard allows a device to carry on multiple exchanges or conversations which contain data and/or control information with another device at the same time across a single point-to-point link. The protocol is not, however, a device control language. It does provide basic transport-level flow control and multiplexing services. The multiplexed logical channels are independent of each other and blocking of one has no effect on the others. The protocol operates over IEEE1284.

Automatic Selection

An initial state is compatible interface and starts IEEE1284.4 communication when magic strings (1284.4 synchronous commands) are received.

On

An initial state is IEEE1284.4 communication and data that received it by the time it is able to take synchronization by magic string (1284.4 synchronous commands) is discarded.

Off

An initial state is compatible interface and never starts IEEE1284.4 communication even if magic strings (1284.4 synchronous commands) are received.

1.4 OPERATOR CONTROLS

1.4.1 Operating Switch

Operating switch is located on the control panel.

1.4.2 Control Panel

1.4.2.1 Switches

There are two non-lock type push switches, one lock-type push switch, and four LED lights.

1.4.2.2 Indicators

- (1) **Power**
Lights when the operating switch is “ON” and AC power is supplied.
- (2) **Paper Out**
Lights during the paper-out condition, and blinks during the paper-jam condition.
- (3) **Ink Out (Black)**
Lights during no black ink condition, and blinks during the black ink low condition.
- (4) **Ink Out (Color)**
Lights during no color ink condition, and blinks during the color ink low condition.

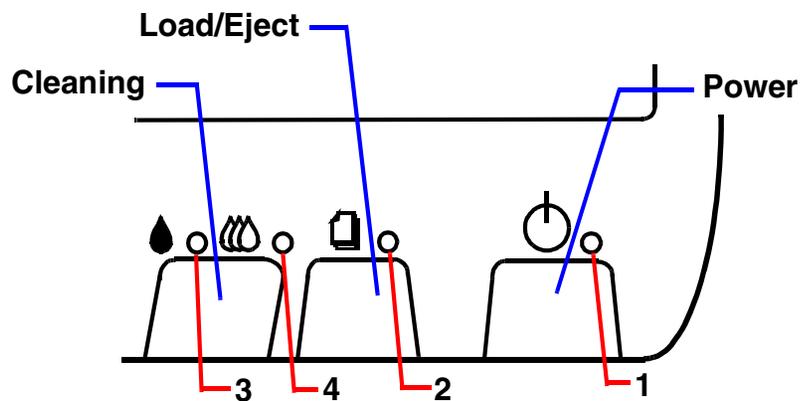


Figure 1-4. Control Panel

1.4.3 Panel Functions

Table 1-9. Panel Functions

Switch	Function
Load / Eject (Push for less than 2 sec.*)	<ul style="list-style-type: none"> Loads or ejects a paper. When the carriage is on the ink cartridge replacement position, return the carriage to the capping position.
Load / Eject (Push for 2 sec.*)	<ul style="list-style-type: none"> Starts the ink cartridge replacement sequence.** Moves the carriage to the cartridge replacement position.
Cleaning (Push for 2 sec.*)	<ul style="list-style-type: none"> Starts cleaning of the printhead. In the condition of "Ink Low", "Ink Out", or "No Ink Cartridge", starts the ink cartridge replacement sequence.**
Cleaning (Push for less than 2 sec.*)	<ul style="list-style-type: none"> When the carriage is on the ink cartridge replacement position, return the carriage to the capping position.

* It is described in the user's manual that three seconds are required.

**This function is not available in printing status.

Table 1-10. Panel Function with Power On

Switch	Pressing with Power On Function
Load / Eject	<ul style="list-style-type: none"> 1) Starts status printing. *1
Cleaning	<ul style="list-style-type: none"> Changes code pages / Select IEEE1284.4 mode for parallel I/F. *2
Load/Eject + Cleaning	<ul style="list-style-type: none"> Enters the special settings mode. (Factory use only). *3

*1: One of the following actions is carried out according to the content of 1BH of EEPROM.

Content of 1BH of EEPROM, [bit7] [bit6]	Action
00	Print firmware version, ink counter, selected code page and nozzle check pattern.
11	
01	Start hex-dump printing.
10	Start self test printing.

*2: Not described in the user's manual.

*3: See the table below.

Table 1-11. Special Setting Mode

Switch	Function
Load / Eject	<ul style="list-style-type: none"> Initialize EEPROM and reset timer IC.
Cleaning (Push for 10 seconds)	<ul style="list-style-type: none"> Reset the ink overflow counter in EEPROM.

1.4.4 Printer Condition and Panel Status

Table 1-12. Printer Condition and LED Status

Printer Status	Indicators				Priority
	Power	Ink Out (Black)	Ink Out (Color)	Paper Out	
Power On Condition	On	-	-	-	9
Ink Sequence	Blink	-	-	-	6
Ink Cartridge Replacement Mode	Blink	-	-	-	5
Data Processing	Blink	-	-	-	8
Paper Out	-	-	-	On	4
Paper Jam Condition	-	Off	Off	Blink	3
No Ink Cartridge / Ink End (Black)	-	On	-	-	7
Ink Level Low (Black)	-	Blink	-	-	7
No Ink Cartridge or Ink End (Color)	-	-	On	-	7
Ink Level Low (Color)	-	-	Blink	-	7
Enter EEPROM and Timer IC Reset	-	ON (for 1 second only)			-
Maintenance Request	Blink	Blink	Blink	Blink	2
Fatal Error	Blink	On	On	Blink	1

1.4.5 Printer Initialization

There are three kinds of initialization methods, and the following explains each initialization.

1. Power-on Initialization
This printer is initialized when turning the printer power on, or printer recognized the cold-reset command (remote RS command).

When printer is initialized, the following actions are performed:
(a) Initializes printer mechanism.
(b) Clears input data buffer.
(c) Clears print buffer.
(d) Sets default values.
2. Operator Initialization
This printer is initialized when turning the printer power on again within 10 seconds from last power off, or printer recognized the -INIT signal (negative pulse) of parallel interface.

When printer is initialized, the following actions are performed:

- (a) Cap the printer head.
 - (b) Eject a paper.
 - (c) Clears input data buffer.
 - (d) Clears print buffer.
 - (e) Sets default values.
3. Software Initialization
The ESC@ command also initialize the printer.

When printer is initialized, the following actions are performed:

- (a) Clears print buffer.
- (b) Sets default values.

1.4.6 Errors

Ink Out

When the printer runs out most of the ink of any color, it indicates ink-low and keeps printing. When the printer runs out the whole ink of any color, it stops printing and indicates ink-out error. User is then requested to install a new ink-cartridge in this state. An ink-cartridge that has been taken out once should never be used again. Re-installation of the cartridge not filled fully upsets the ink level detection and may eventually cause a serious problem in the print head.

Paper Out

When the printer fails to load a sheet, it goes into a paper out error.

Paper Jam

When the printer fails to eject a sheet, it goes into a paper jam error.

No Ink-Cartridge

When the printer detects that ink-cartridge comes off, it goes into this error mode.

Maintenance Request

When the total amount of ink wasted through cleanings and flushing reaches to the limit, printer indicates this error and stops. In such a case, the absorber in the printer enclosure needs to be replaced with new one by service personnel.

Fatal Errors

Carriage control error or CG access error.

1.5 PAPER

1.5.1 Paper Handling

Do not perform reverse feed more than 9.5mm (0.38").

1.5.2 Paper Specification

1.5.2.1 Cut Sheet

[Size]

A4:	Width 210mm (8.3") x Length 297mm (11.7")
Letter:	Width 216mm (8.5") x Length 279mm (11.0")
B5:	Width 182mm (7.2") x Length 257mm (10.1")
Legal:	Width 216mm (8.5") x Length 356mm (14.0")
Statement:	Width 139.7mm (5.5") x Length 215.9mm (8.5")
Executive:	Width 184.2mm (7.25") x Length 266.7mm (10.5")
Photo Paper:	Width 101.6mm (4") x Length 152.4mm (6")

[Thickness]

0.08mm (0.003") - 0.11mm (0.004")

[Weight]

64g/m² (17lb.) - 90g/m² (24lb.)

[Quality]

Exclusive paper, Bond paper, PPC

1.5.2.2 Transparency, Glossy Paper

[Size]

A4:	Width 210mm (8.3") x Length 297mm (11.7")
Letter:	Width 216mm (8.5") x Length 279mm (11.0")

[Thickness]

0.075mm (0.003") - 0.085mm (0.0033")

**Transparency printing is available only at normal temperature.*

1.5.2.3 Envelope

[Size]

No.10:	Width 241mm (9 1/2") x Length 104.8mm (4 1/8")
DL:	Width 220mm (8.7") x Length 110mm (4.3")
C6:	Width 162mm (6.4") x Length 114mm (4.5")

[Thickness]

0.16mm (0.006") - 0.52mm (0.02")

[Weight]

45g/m² (12lb.) - 75g/m² (20lb.)

[Quality]

Bond paper, Plain paper, Air mail

Note 1: Envelope printing is available only at normal temperature.

Note 2: Keep the longer side of the envelope horizontally at setting.

1.5.2.4 Index Card

[Size]

A6 Index Card:	Width 105mm (4.1") x Length 148mm (5.8")
A5 Index Card:	Width 148mm (5.8") x Length 210mm (8.3")
5 x 8" Index Card:	Width 127mm (5.0") x Length 203mm (8.0")
10 x 8" Index Card:	Width 127mm (5.0") x Length 203mm (8.0")

[Thickness]

Less than 0.23mm (0.0091")

1.5.3 Printing Area

1.5.3.1 Cut Sheet

See the figure below and tables on the right for printable areas for Raster Graphics mode and Character mode.

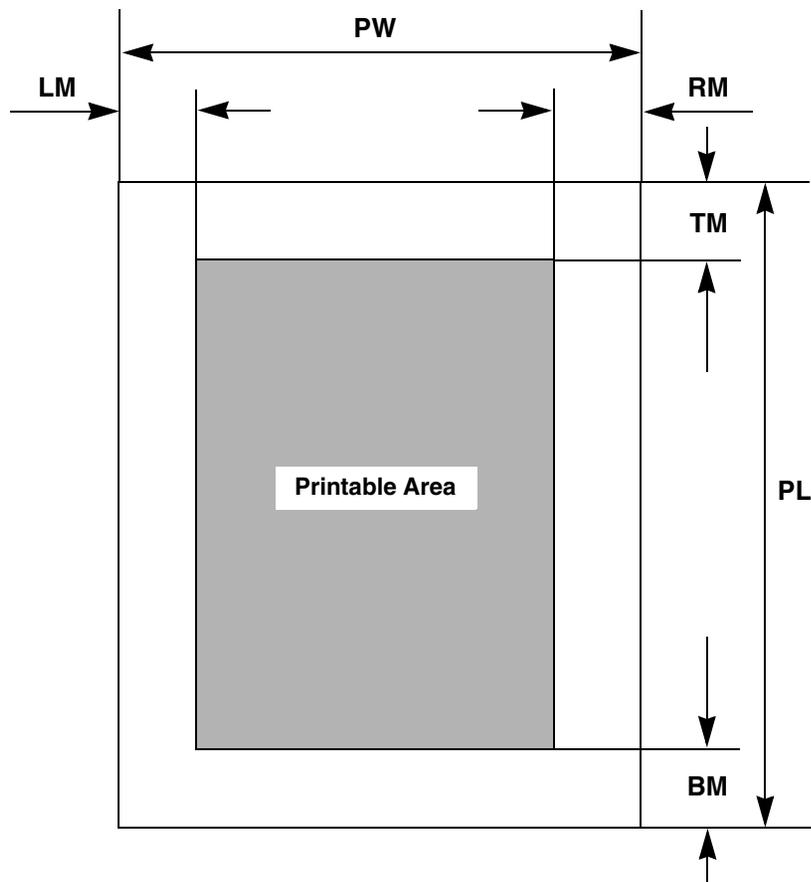


Figure 1-5. Printable Area for Cut Sheet

Table 1-13. Character Mode

Paper Size	Left Margin (min.)	Right Margin (min.)	Top Margin (min.)	Bottom Margin (min.)
A4	3mm (0.12")	3mm (0.12")	3mm (0.12")	14mm (0.54")
Letter	3mm (0.12")	9mm (0.35")	3mm (0.12")	14 mm (0.54")
B5	3mm (0.12")	3 m (0.12")	3mm (0.12")	14 mm (0.54")
Legal	3mm (0.12")	9mm (0.35")	3mm (0.12")	14 mm (0.54")
Statement	3mm (0.12")	3mm (0.12")	3mm (0.12")	14 mm (0.54")
Executive	3mm (0.12")	3mm (0.12")	3mm (0.12")	14 mm (0.54")

Table 1-14. Raster Graphics Mode

Paper Size	Left Margin (min.)	Right Margin (min.)	Top Margin (min.)	Bottom Margin (min.)
A4	3 mm (0.12")	3 mm (0.12")	3 mm (0.12")	14 mm (0.54") / 3mm (0.12") *
Letter	3 mm (0.12")	3 mm (0.12")	3 mm (0.12")	14 mm (0.54") / 3mm (0.12") *
B5	3 mm (0.12")	3 mm (0.12")	3 mm (0.12")	14 mm (0.54") / 3mm (0.12") *
Legal	3 mm (0.12")	3 mm (0.12")	3 mm (0.12")	14 mm (0.54") / 3mm (0.12") *
Statement	3 mm (0.12")	3 mm (0.12")	3 mm (0.12")	14 mm (0.54") / 3mm (0.12") *
Exclusive	3 mm (0.12")	3 mm (0.12")	3 mm (0.12")	14 mm (0.54") / 3mm (0.12") *

* Bottom margin can be reduced to 3mm when paper dimension is defined by using command, otherwise it is not reduced (14mm). As for an area between 3mm and 14mm margin, printing quality may decline.

** Refer to 1.5.2 Paper Specification for PW (paper width) and PL (paper length).

1.5.3.2 Envelopes

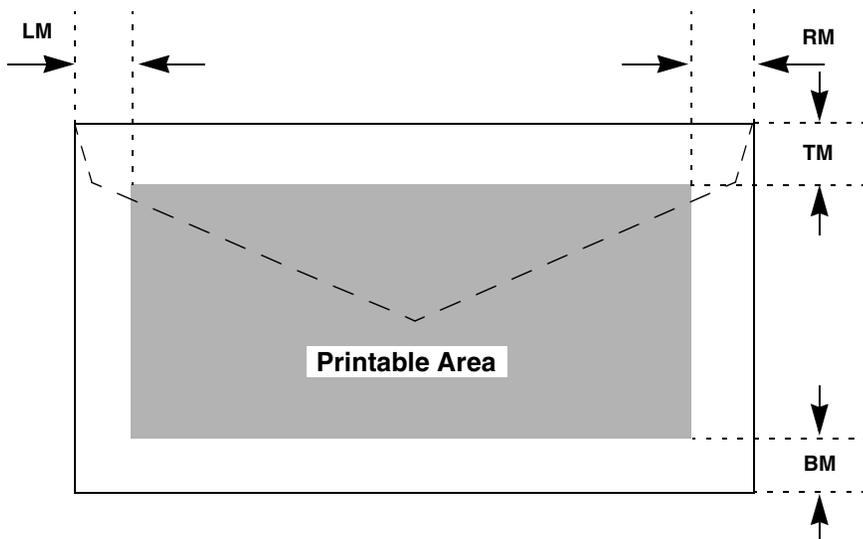


Figure 1-6. Printable Area for Envelopes

Table 1-15. Envelope Margin

Size	Left Margin (min.)	Right Margin (min.)	Top Margin (min.)	Bottom Margin (min.)
#10	3 mm (0.12")	28 mm (1.10")	3 mm (0.12")	14 mm (0.55")
DL	3 mm (0.12")	7 mm (0.28")	3 mm (0.12")	14 mm (0.55")
C6	3 mm (0.12")	3 mm (0.12")	3 mm (0.12")	14 mm (0.55")

1.6 INK CARTRIDGE

1.6.1 Black Ink Cartridge

Type: Exclusive Cartridge
 Color: Black
 Print Capacity: 900 pages/A4 (ISO/IEC 10561 Letter Pattern at 360 dpi)
 Ink Life: 2 years from date of production
 Storage Temperature:
 Storage: -20 °C to 40 °C (within a month at 40 °C)
 Packing: -30 °C to 40 °C (within a month at 40 °C)
 Transit: -30 °C to 60 °C (within 120 hours at 60 °C and within a month at 40 °C)
 Dimension: 27.8 mm (W) x 52.7 mm (D) x 38.5 mm (H)

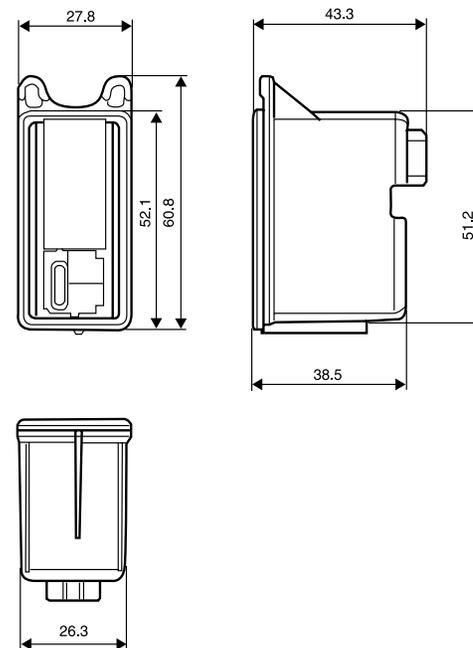


Figure 1-7. Black Ink Cartridge

1.6.2 Color Ink Cartridge

Type:	Exclusive Cartridge
Color:	Magenta, Cyan, Yellow
Print Capacity:	300 pages / A4 (360 dpi, 5% duty each color)
Ink Life:	2 years from date of production
Storage Temperature:	
Storage:	-20 °C to 40 °C (within a month at 40 °C)
Packing:	-30 °C to 40 °C (within a month at 40 °C)
Transit:	-30 °C to 60 °C (within 120 hours at 60 °C and within a month at 40 °C)
Dimension:	42.9 mm (W) x 52.7 mm (D) x 38.5 mm (H)

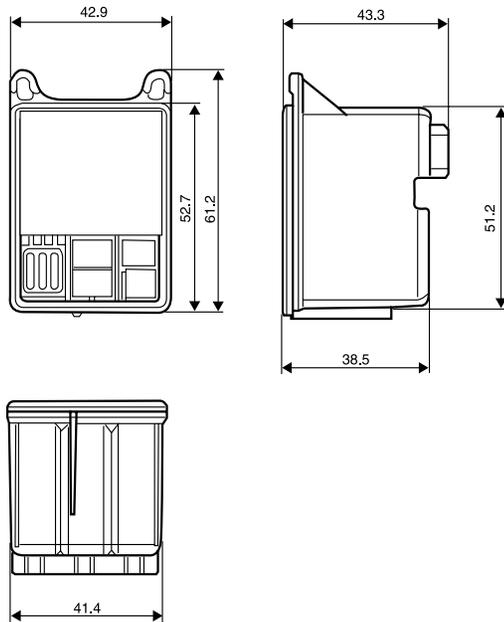


Figure 1-8. Color Ink Cartridge

Note 1: Ink cartridge can not be refilled. The ink cartridge is prepared only for article of consumption.

Note 2: Do not use the ink cartridge which contains life-expired ink.

Note 3: Ink will be frozen under -4 °C environment; however, it will be usable after being left at room temperature for more than three hours.

Product: 2000 EPSON Stylus Color 880 Color Ink Jet Printer Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2000-epson-stylus-color-880-color-ink-jet-printer-service-repair-workshop-manual>

lor-880-color-ink-jet-printer-service-repair-workshop-manual

CHAPTER 2

OPERATING PRINCIPLES

Sample of manual. Download All 179 pages at:

<https://www.arepairmanual.com/downloads/2000-epson-stylus-color-880-color-ink-jet-printer-service-repair-workshop-manual>