


Product: 2001 HP LaserJet 1200 Series Printer Service Repair Workshop Manual
Full Download: <https://www.arespairmanual.com/downloads/2001-hp-laserjet-1200-series-printer-service-repair-workshop-manual/>

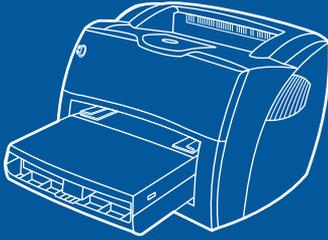

i n v e n t

hp LaserJet 1200 series

service



Sample of manual. Download All 208 pages at:
<https://www.arespairmanual.com/downloads/2001-hp-laserjet-1200-series-printer-service-repair>

Product: 2001 HP LaserJet 1200 Series Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2001-hp-laserjet-1200-series-printer-service-repair-workshop-manual/>

Sample of manual. Download All 208 pages at:
<https://www.arepairmanual.com/downloads/2001-hp-laserjet-1200-series-printer-service-repair-workshop-manual/>

HP LaserJet 1200 Series

Service

Copyright Information

© 2001 Hewlett-Packard Company

All Rights Reserved.
Reproduction, adaptations, or translation without prior written permission is prohibited except as allowed under copyright laws.

Part number C7044-90906
First edition, April 2001
Printed in USA

Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with respect to this information. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

NOTICE TO U.S. GOVERNMENT USERS: RESTRICTED RIGHTS COMMERCIAL COMPUTER SOFTWARE: "Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) (1)(ii) of the Rights in Technical Data Clause at DFARS 52.227-7013."

Trademark Credits

Microsoft, Windows, and MS-DOS are U.S. registered trademarks of Microsoft Corporation.

TrueType is a U.S. trademark of Apple Computer, Inc.

All other products mentioned herein may be trademarks of their respective companies.



Safety Information

WARNING!

Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

- 1 Read and understand all instructions in the user guide.
- 2 Observe all warnings and instructions marked on the product.
- 3 Use only a grounded electrical outlet when connecting the HP LaserJet 1200 printer to a power source. If you don't know whether the outlet is grounded, check with a qualified electrician.
- 4 Do not touch the contacts on the end of any of the sockets on the HP LaserJet 1200 printer. Replace damaged cords immediately.

- 5 Unplug this product from wall outlets before cleaning.
- 6 Do not install or use this product near water or when you are wet.
- 7 Install the product securely on a stable surface.
- 8 Install the product in a protected location where no one can step on or trip over the power cord and the power cord will not be damaged.
- 9 If the product does not operate normally, see the online user guide.
- 10 Refer all servicing questions to qualified personnel.

Information regarding FCC Class B, Parts 15 and 68 requirements can be found in the user guide.

Contents

1 Product information

Chapter contents	13
Introduction	14
Hardware description	14
Firmware description	15
Product specifications	16
Model and serial numbers	19
Overview of printer	20
Front and side view	20
Back and side view	21
Overview of optional copier/scanner	22
Top view	22
Warranty statement	23
Extended warranty	24
Toner cartridge information	25
Refilled toner cartridges	25
Recycling toner cartridges	25

2 Installation and operation

Chapter contents	27
Operating environment	28
Identifying printer components	29
Printer control panel	29
Control panel light patterns	30
Copier/scanner control panel	32
Selecting media	33
Selecting media to print	33
Selecting media to copy or scan	34
Loading media	35
Loading media to print	35
Loading media to copy or scan	36
Printer output paths	37

3 Maintenance

Chapter contents	39
Life expectancies of consumables	40
User-replaceable parts	40
Replacing the printer pickup roller	41
Replacing the printer separation pad	43
Replacing the copier/scanner separation pad	45
Cleaning the equipment	46
Cleaning the print path	47
Cleaning the toner cartridge area	48
Cleaning the printer pickup roller	49
Cleaning the printer separation pad	50
Cleaning and recalibrating the copier/scanner	51
Cleaning the scanner path	51

4 Operational overview

Chapter contents	53
Basic functions	54
Formatter system	55
Control panel	56
Draft mode	56
MEt	56
Enhanced I/O	56
PJL overview	57
Printer functions	58
Engine control unit/power system	59
Image formation system	64
Printer paper-feed system	67
Jam detection	69
Optional copier/scanner	71
Optical system	71
Document pickup and feed systems	71
Basic sequence of operation (formatter-to-printer)	73

5 Removal and replacement

Chapter contents	75
Removal and replacement strategy	77
Required tools	77
Before performing service	78
Toner cartridge	78
Parts removal order	79

Covers	80
Left side cover	80
Optional copier/scanner	81
Back cover	82
Right side cover	84
Top cover	87
Control panel assembly	88
Front cover assembly	89
Internal assemblies	96
Transfer roller	96
Formatter	97
Laser/scanner assembly	99
Fuser assembly	101
Output rollers	105
Motor	107
Solenoid	108
Fan assembly	110
Right plate assembly	112
Pickup assembly	114
Pickup roller shaft	117
Paper lift plate assembly	118
Left plate assembly	119
Bottom assemblies	120
ECU pan	120
Paper-feed assembly	124

6 Troubleshooting

Chapter contents	129
Basic troubleshooting	130
Errors	132
Control panel light messages	132
Fatal error secondary messages	135
Checking the toner cartridge	137
Solving image-quality problems	138
Solving paper-feed problems	146
Solving print paper-feed problems	146
Solving copying and scanning paper-feed problems	148
Functional checks	149
Engine test	149
Half self-test functional check	150
Drum rotation functional check	151
Heating element check	152
High-voltage power supply check	153
Paper path check	155

Service mode functions	156
NVRAM initialization/cold reset	156
PjL software commands	156
Troubleshooting tools	159
Internal reports	159
Repetitive image defect ruler	161
Main wiring	162
Locations of connectors	164
Locations of LEDs, jumpers, and switches	165

7 Parts and diagrams

Chapter contents	167
Ordering parts and supplies	168
Parts	168
Related documentation and software	168
Consumables	168
Accessories	169
How to use the parts lists and diagrams	171
Common hardware	171
Assembly locations	172
Printer trays & optional copier/scanner	172
Covers	174
Internal assemblies	176
Internal components (1 of 2)	176
Internal components (2 of 2)	178
Electrical components	180
Paper pickup assembly (1 of 2)	182
Paper pickup assembly (2 of 2)	184
Fuser assembly	186
Alphabetical parts list	188
Numerical parts list	191

Figures

Figure 1.	Model and serial number labels	19
Figure 2.	Front and side view	20
Figure 3.	Back and side view.	21
Figure 4.	Top view	22
Figure 5.	Dimensions of printer	28
Figure 6.	Dimensions of printer with optional copier/scanner	28
Figure 7.	Printer control panel	29
Figure 8.	Light status legend	30
Figure 9.	Copier/scanner control panel	32
Figure 10.	Scanning a business card	36
Figure 11.	Output bin	37
Figure 12.	Straight-through output door.	37
Figure 13.	Basic configuration	54
Figure 14.	Printer unit functional block diagram	58
Figure 15.	ECU loads	60
Figure 16.	Overview of laser/scanner operation	61
Figure 17.	High-voltage power supply circuit.	63
Figure 18.	Image formation block diagram	64
Figure 19.	Printer path	68
Figure 20.	Solenoid, photosensors, and switches	70
Figure 21.	Copier/scanner path	72
Figure 22.	General timing diagram	74
Figure 23.	Removing the toner cartridge	78
Figure 24.	Removing the left side cover	80
Figure 25.	Removing the optional copier/scanner	81
Figure 26.	Removing the back cover (1 of 2).	82
Figure 27.	Removing the back cover (2 of 2).	83
Figure 28.	Removing the right side cover (1 of 3)	84
Figure 29.	Removing the right side cover (2 of 3)	85
Figure 30.	Removing the right side cover (3 of 3)	86
Figure 31.	Removing the top cover	87
Figure 32.	Removing the control panel	88
Figure 33.	Removing the front cover (1 of 2).	89
Figure 34.	Removing the front cover (2 of 2).	90
Figure 35.	Removing the toner cartridge door (1 of 2).	91
Figure 36.	Removing the toner cartridge door (2 of 2).	92
Figure 37.	Removing the front guide assembly (1 of 3).	93
Figure 38.	Removing the front guide assembly (2 of 3).	94
Figure 39.	Removing the front guide assembly (3 of 3).	95
Figure 40.	Removing the transfer roller	96
Figure 41.	Removing the formatter (1 of 2)	97

Figure 42.	Removing the formatter (2 of 2)	98
Figure 43.	Removing the laser/scanner (1 of 2)	99
Figure 44.	Removing the laser/scanner (2 of 2)	100
Figure 45.	Removing the fuser assembly (1 of 4)	101
Figure 46.	Removing the fuser assembly (2 of 4)	102
Figure 47.	Removing the fuser assembly (3 of 4)	103
Figure 48.	Removing the fuser assembly (4 of 4)	104
Figure 49.	Removing the output rollers (1 of 2)	105
Figure 50.	Removing the output rollers (2 of 2)	106
Figure 51.	Removing the motor	107
Figure 52.	Removing the solenoid (1 of 2)	108
Figure 53.	Removing the solenoid (2 of 2)	109
Figure 54.	Removing the fan (1 of 2)	110
Figure 55.	Removing the fan (2 of 2)	111
Figure 56.	Removing the right plate assembly (1 of 2)	112
Figure 57.	Removing the right plate assembly (2 of 2)	113
Figure 58.	Removing the pickup assembly (1 of 3)	114
Figure 59.	Removing the pickup assembly (2 of 3)	115
Figure 60.	Removing the pickup assembly (3 of 3)	116
Figure 61.	Removing the pickup roller shaft	117
Figure 62.	Removing the paper lift plate assembly	118
Figure 63.	Removing the left plate assembly	119
Figure 64.	Removing the ECU pan (1 of 4)	120
Figure 65.	Removing the ECU pan (2 of 4)	121
Figure 66.	Removing the ECU pan (3 of 4)	122
Figure 67.	Removing the ECU pan (4 of 4)	123
Figure 68.	Removing the paper-feed assembly (1 of 4)	124
Figure 69.	Removing the paper-feed assembly (2 of 4)	125
Figure 70.	Removing the paper-feed mechanism (3 of 4)	126
Figure 71.	Removing the paper-feed mechanism (4 of 4)	127
Figure 72.	Control panel location	132
Figure 73.	Engine test switch	149
Figure 74.	Locating connectors for the heating element check	152
Figure 75.	Toner cartridge high-voltage connection points (right side)	153
Figure 76.	Toner cartridge high-voltage connection points (left side)	153
Figure 77.	High-voltage connector assembly (right side)	154
Figure 78.	High-voltage connector assembly (left side)	154
Figure 79.	Overriding SW301	155
Figure 80.	Self-test page	160
Figure 81.	Repetitive image defect ruler	161
Figure 82.	Main wiring (1 of 2)	162
Figure 83.	Main wiring (2 of 2)	163
Figure 84.	Locations of printer connectors	164
Figure 85.	Locations of copier/scanner connectors	164
Figure 86.	Locations of LEDs, jumpers, and switches	165
Figure 87.	Assembly locations	172
Figure 88.	Covers	174

Figure 89.	Internal components (1 of 2).	176
Figure 90.	Internal components (2 of 2).	178
Figure 91.	Electrical components	180
Figure 92.	Paper pickup assembly (1 of 2)	182
Figure 93.	Paper pickup assembly (2 of 2)	184
Figure 94.	Fuser assembly	186

Tables

Table 1.	Physical specifications	16
Table 2.	Environmental specifications	16
Table 3.	Power specifications	17
Table 4.	Performance of HP LaserJet 1200 printer	17
Table 5.	Performance of optional copier/scanner.	17
Table 6.	Print operating acoustical emissions specifications	18
Table 7.	Copy operating acoustical emissions specifications.	18
Table 8.	Skew specifications	18
Table 9.	Control panel light messages	30
Table 10.	Media types	33
Table 11.	Life expectancies of consumables	40
Table 12.	Basic sequence of operation	73
Table 13.	Basic troubleshooting	130
Table 14.	Control panel lights legend	132
Table 15.	Control panel light messages	133
Table 16.	Fatal error secondary messages	135
Table 17.	Solving print image-quality problems	138
Table 18.	Solving copying and scanning image-quality problems	143
Table 19.	Solving print paper-feed problems	146
Table 20.	Solving copying and scanning paper-feed problems	148
Table 21.	NVRAM PJI factory variables	157
Table 22.	Switch functions	165
Table 23.	Technical support websites	168
Table 24.	Accessories	169
Table 25.	Common fasteners	171
Table 26.	Printer trays and optional copier/scanner.	173
Table 27.	Covers	175
Table 28.	Internal components (1 of 2).	177
Table 29.	Internal components (2 of 2).	179
Table 30.	Electrical components	181
Table 31.	Paper pickup assembly (1 of 2)	183
Table 32.	Paper pickup assembly (2 of 2)	185
Table 33.	Fuser assembly	187
Table 34.	Alphabetical parts list	188
Table 35.	Numerical parts list.	191

1

Product information

Chapter contents

Introduction	14
Hardware description	14
Firmware description	15
Product specifications	16
Model and serial numbers	19
Overview of printer	20
Front and side view	20
Back and side view	21
Overview of optional copier/scanner	22
Top view	22
Warranty statement	23
Extended warranty	24
Toner cartridge information	25
Refilled toner cartridges	25
Recycling toner cartridges	25

Introduction

The HP LaserJet 1200 printer is designed to:

- **Print**—Print documents easily with the laser-quality you have come to expect from an HP LaserJet printer.

With the optional copier/scanner, you can:

- **Copy**—Make superior laser-quality copies. With the software, you can make up to 99 copies of a 30-page original. You can also enlarge, reduce, adjust contrast, and collate.
- **Scan**—Scan important documents to create electronic files.

Hardware description

The printer provides 1200 dot-per-inch (dpi) printing. The optional copier/scanner scans at 600 dpi/ 24-bits per pixel (bpp) and contains a document feeder that holds up to 30 pages.

The printer prints 15 pages per minute (ppm) on letter-size paper or 14 ppm on A4. With 1200 dpi printing resolution, the printer has exceptional text and graphics print quality. The simple control panel and improved paper handling make this product very easy to use.

The printer's main input tray has a 250-sheet capacity for continuous, multiple-page printing. Manual, single-sheet printing is possible through the priority input tray. Both trays are center-justified for all supported paper sizes. The printer output bin holds up to 125 sheets.

The printer has a very fast first-page-out, at less than 10 seconds. The formatter board contains 8 MB of ROM, 8 MB of RAM, and an embedded 32-bit Coldfire V3 processor. There is one DIMM slot available for DIMM expansion (supporting an 8 MB, 16 MB, 32 MB, or 64 MB DIMM).

The printer engine has a 1,000 average (10,000 peak) page-per-month duty cycle. For the printer, the standard toner life is 2,500 pages, and the high capacity toner life is 3,500 pages.

Firmware description

The firmware in the printer includes:

- Enhanced PCL 6 with status readback
- 80 TrueType™ fonts, plus Cyrillic, Greek, Hebrew, and Arabic
- Pixel placement, mosaic characters
- Memory Enhancement technology (MEt) with hardware compression and decompression

The printer firmware also has REt and EconoMode functionality. Scan capability includes 600 dpi and 24-bit color.

Product specifications

Table 1. Physical specifications

Category	Specification
Height	253 mm (10 inches) without optional copier/ scanner 416 mm (16.4 inches) with optional copier/ scanner
Depth	486 mm (19.1 inches)
Width	415 mm (16.3 inches)
Weight (cartridge installed)	7.3 kg (16.1 lb) without optional copier/scanner 8.7 kg (19.2 lb) with optional copier/scanner

Table 2. Environmental specifications

Category	Specification
Operating environment (printer plugged into an AC outlet)	<ul style="list-style-type: none">● Temperature: 15° to 32.5° C (59° to 90.5° F)● Humidity: 20% to 80% relative humidity (no condensation)
Storage environment (printer not plugged into an AC outlet)	<ul style="list-style-type: none">● Temperature: 0° to 40° C (32° to 104° F)● Humidity: 10% to 90% relative humidity (no condensation)

Table 3. Power specifications

Category	Specification
Power requirements	<ul style="list-style-type: none"> • 110 Vac ($\pm 12\%$), 60 (± 3) Hz; 127 Vac ($\pm 12\%$), 60 (± 3) Hz <p style="text-align: center;">-Or-</p> <ul style="list-style-type: none"> • 220 Vac ($\pm 12\%$), 50/60 (± 3) Hz • 240 Vac ($\pm 12\%$), 50 (± 3) Hz <hr style="width: 20%; margin-left: 0;"/> <p>Note Power sources are not interchangeable.</p>
Power consumption (in continuous copy mode)	285 W
Power consumption (idle)	7 W
Power consumption (off)	0 W
Minimum recommended circuit capacity	4.5 A at 115 V 2.3 A at 230 V

Table 4. Performance of HP LaserJet 1200 printer

Category	Specification
Print resolution	1200 dpi
Print speed	15 ppm (Letter) 14 ppm (A4)

Table 5. Performance of optional copier/scanner

Category	Specification
Scan resolution	600 dpi optical, with 256 levels of gray and 24-bit color
Copy speed	12 ppm

Table 6. Print operating acoustical emissions specifications

Category	Specification
Sound Power Level, L_{WA_d} (1 bel = 10 decibels)	6.1 B(A)
Sound Pressure Level, L_{pAm} (operator position)	56 dB(A)
Sound Pressure Level, L_{pAm} (bystander position)	48 dB(A)

Table 7. Copy operating acoustical emissions specifications

Category	Specification
Sound Power Level, L_{WA_d} (1 bel = 10 decibels)	6.4 B(A)
Sound Pressure Level, L_{pAm} (operator position)	60 dB(A)
Sound Pressure Level, L_{pAm} (bystander position)	50 dB(A)

Table 8. Skew specifications

Category	Specification
Print skew—left	0.8% (2 mm over 250 mm in length) for cut-sheet media)
	1.5% (3.3 mm over 220 mm in length) for cut-sheet media
	0.87 (1.65 mm over 190 mm in width) for cut-sheet media
Print skew—right	1.5% (3.3 mm over 220 mm in width) for envelopes, postcards, A5, and cut-sheet media
Cut-sheet leading edge skew	0.87% (1.6 mm over 190 mm in width)
Scan skew	1.2%

Model and serial numbers

The model number and serial number are listed on an identification label located on the inside of the toner cartridge door.

The serial number contains information about the country of origin, revision level, production code, and production number of the printer.

The label also contains power rating and regulatory information.



Figure 1. Model and serial number labels

Overview of printer

Front and side view

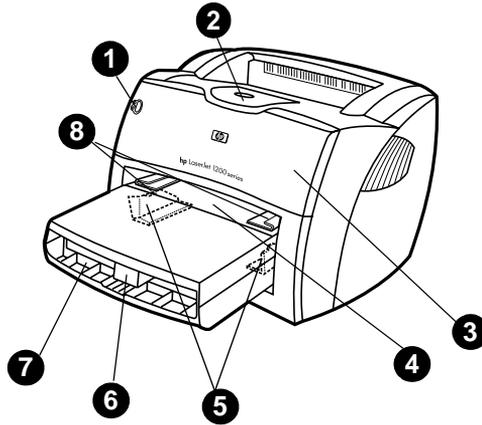


Figure 2.

Front and side view

- 1 Printer control panel
- 2 Long media extension (output bin)
- 3 Toner cartridge door
- 4 Priority input tray
- 5 Side media guides for the main input tray
- 6 Media support for the main input tray
- 7 Main input tray
- 8 Side media guides for the priority input tray

Back and side view

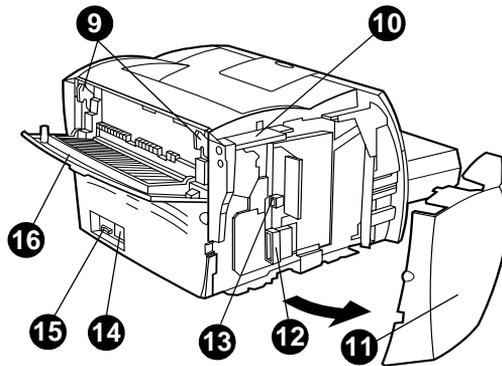


Figure 3. Back and side view

- 9 Fuser pressure release levers
- 10 Connection to optional copier/scanner
- 11 Left side cover
- 12 Parallel port
- 13 USB port
- 14 Power receptacle
- 15 Power switch (220-240 volt printers)
- 16 Straight-through output door

Overview of optional copier/scanner

Top view

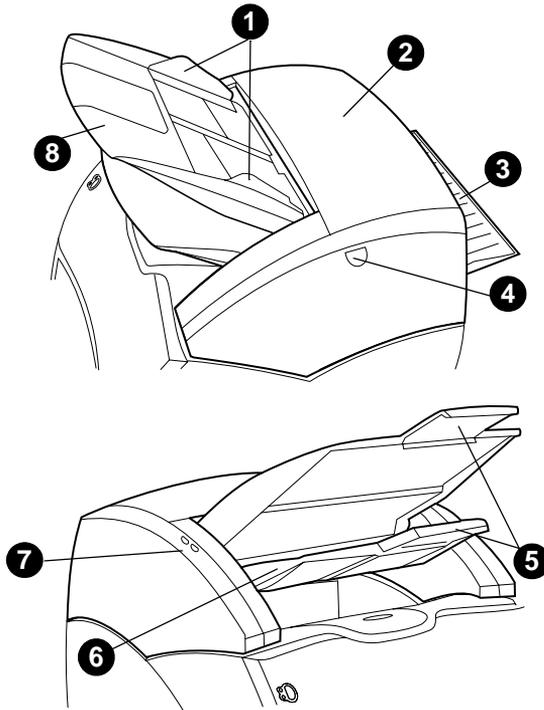


Figure 4.

Top view

- 1 Media input tray guides
- 2 Copier/scanner door
- 3 Straight-through output door
- 4 Copier/scanner door release button
- 5 Long media extensions
- 6 Media output bin
- 7 Copier/scanner control panel
- 8 Media input tray

Note

See “Optional copier/scanner” on page 81 for more information about removing the optional copier/scanner from the printer.

Warranty statement

DURATION OF WARRANTY: One year from date of purchase.

- 1 HP warrants to you, the end-user customer, that HP hardware, accessories, and supplies, will be free from defects in materials and workmanship after the date of purchase, for the period specified above. If HP receives notice of such defects during the warranty period, HP will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or like-new.
- 2 HP warrants to you that HP software will not fail to execute its programming instructions after the date of purchase, for the period specified above, due to defects in material and workmanship when properly installed and used. If HP receives notice of such defects during the warranty period, HP will replace software media which does not execute its programming instructions due to such defects.
- 3 HP does not warrant that the operation of HP products will be uninterrupted or error free. If HP is unable, within a reasonable time, to repair or replace any product to a condition as warranted, you will be entitled to a refund of the purchase price upon prompt return of the product.
- 4 HP products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.
- 5 Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts, or supplies not supplied by HP, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (d) improper site preparation or maintenance.
- 6 HP MAKES NO OTHER EXPRESS WARRANTY OR CONDITION WHETHER WRITTEN OR ORAL. TO THE EXTENT ALLOWED BY LOCAL LAW, ANY IMPLIED WARRANTY OR CONDITION OR MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY SET FORTH ABOVE. Some countries, states, or provinces do not allow limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This warranty gives you specific legal rights and you might also have other rights that vary from country to country, state to state, or province to province.

- 7 TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL HP OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

FOR CONSUMER TRANSACTIONS IN AUSTRALIA AND NEW ZEALAND, THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Extended warranty

HP SupportPack provides coverage for the HP hardware product and all HP-supplied internal components. The hardware maintenance warranty covers a three-year period from the date of the HP product purchase. The customer must purchase the HP SupportPack within 90 days of the HP product purchase. The document number is 9036. Customers can contact the nearest HP-authorized dealer about this service.

Toner cartridge information

The toner cartridge is designed to simplify replacement of the major consumable parts. The toner cartridge contains the printing mechanism and a supply of toner.

At five percent page coverage, a toner cartridge will print approximately 2,500 pages. However, a toner cartridge should print more pages if it regularly prints pages with less coverage, such as short memos. The cartridge might print fewer pages if heavy or bold print is used.

For best results, always use a toner cartridge before the expiration date stamped on the toner cartridge box.

Refilled toner cartridges

While Hewlett-Packard does not prohibit the use of refilled toner cartridges during the warranty period or while the printer is under a maintenance contract, it is not recommended for the following reasons:

- Repairs resulting from the use of refilled toner cartridges are not covered under Hewlett-Packard warranty or maintenance contracts.
- Hewlett-Packard has no control or process to ensure that a refilled toner cartridge functions at the high level of reliability of a new HP LaserJet toner cartridge. Hewlett-Packard also cannot predict the long term reliability effect on the printer from using different toner formulations found in refilled cartridges.
- The print quality of HP LaserJet toner cartridges influences the customer's perception of the printer. Hewlett-Packard has no control over the actual print quality of a refilled toner cartridge.

Recycling toner cartridges

In order to reduce waste, Hewlett-Packard offers a recycling program. Cartridge components that do not wear out are recycled. Plastics and other materials are recycled. Hewlett-Packard pays the shipping costs from the user to the recycling plant (within the United States). To join this recycling effort, follow the instructions inside the toner cartridge box.

2 Installation and operation

Chapter contents

Operating environment	28
Identifying printer components	29
Printer control panel	29
Control panel light patterns.	30
Copier/scanner control panel	32
Selecting media	33
Selecting media to print	33
Selecting media to copy or scan.	34
Loading media	35
Loading media to print	35
Loading media to copy or scan.	36
Printer output paths	37

Operating environment

Place the printer on a sturdy, level surface in a well-ventilated area that meets the following environmental requirements:

- temperature: 10° to 32.5° C (50° to 90.5° F)
- humidity: 20% to 80% relative humidity (no condensation)
- away from direct sunlight, open flames, and ammonia fumes
- sufficient space around the printer to allow for proper access and ventilation

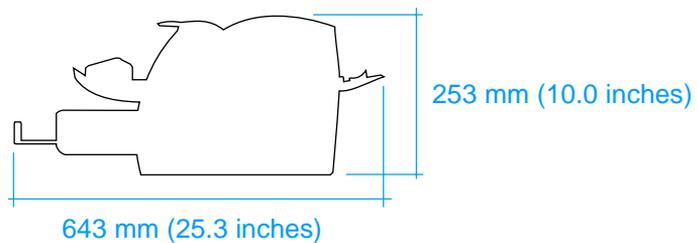


Figure 5. Dimensions of printer

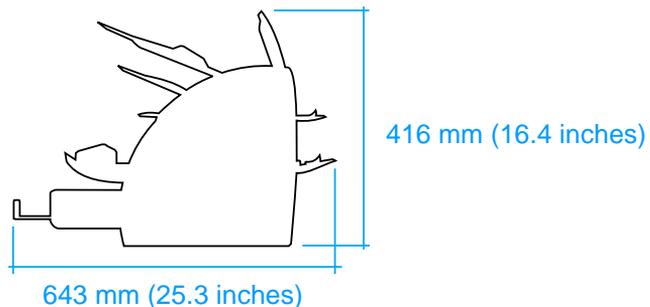


Figure 6. Dimensions of printer with optional copier/scanner

Sample of manual. Download All 208 pages at:

<https://www.arepairmanual.com/downloads/2001-hp-laserjet-1200-series-printer-service-repair-workshop-manual/>