


HP LaserJet M1522 MFP Series

Product: 2008 HP LaserJet M1522 MFP Series Printer Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2008-hp-laserjet-m1522-mfp-series-printer-service-repair-workshop-manual/>

22-mfp-series-printer-service-repair-workshop-manual/

Service Manual

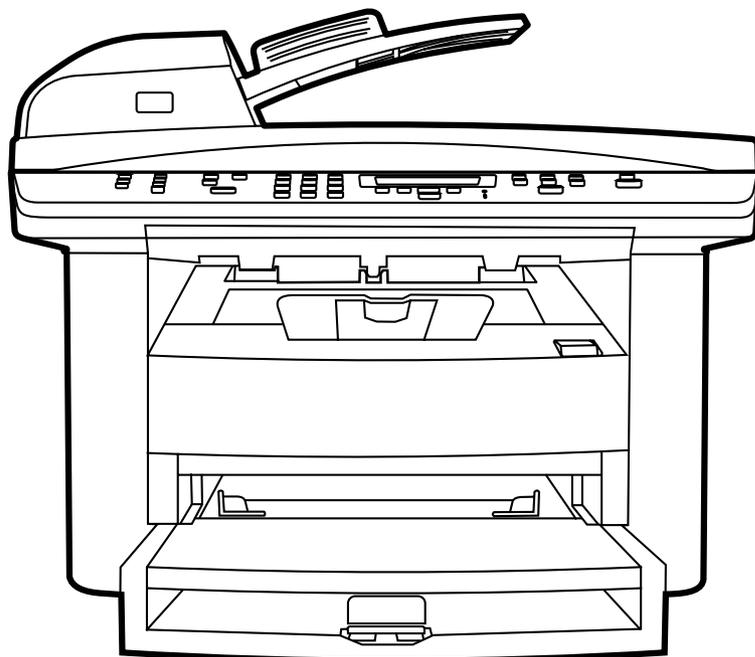

Sample of manual. Download All 290 pages at:

<https://www.arepairmanual.com/downloads/2008-hp-laserjet-m1522-mfp-series-printer-service-repair-workshop-manual/>

Product: 2008 HP LaserJet M1522 MFP Series Printer Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2008-hp-laserjet-m15>

[22-mfp-series-printer-service-repair-workshop-manual/](https://www.arepairmanual.com/downloads/2008-hp-laserjet-m1522-mfp-series-printer-service-repair-workshop-manual/)

Sample of manual. Download All 290 pages at:

<https://www.arepairmanual.com/downloads/2008-hp-laserjet-m1522-mfp-series-printer-service-repair-workshop-manual/>

HP LaserJet M1522 MFP Series Service Manual



Copyright and License

© 2008 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Edition 1, 1/2008

Part number: CB534-90945

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

Table of contents

1 Product information

Quick access to product information	2
Product comparison	3
Product features	4
Product walkaround	5
Front view	5
Back view	5
Interface ports	6
Control-panel	6
Serial number and model number location	7
Software description	8
Supported operating systems	8
Supported printer drivers	8
Software included with the product	8
Recommended installation for Windows	8
Express installation (USB or network)	9
Macintosh software	9
Software for Windows	9
HP ToolboxFX	9
Embedded Web server (EWS)	10
Software for Macintosh	10
HP Director	10
Macintosh Configure Device (Mac OS X v10.3, v10.4, and later)	10
PDEs (Mac OS X v10.3, v10.4, and later)	11
Uninstall software	11
Windows	11
Macintosh	11
Media specifications	12
Supported paper and print media sizes	12
Supported paper types and tray capacity	13

2 Installation

Site preparations	16
Operating environment	16
Minimum system requirements	17
What was in the box	18
Install input devices	19
ADF input tray	19
Priority input tray	20

Tray 1	21
Install supplies	22
Install the print cartridge	22

3 Maintenance

Manage supplies	26
Life expectancies of supplies	26
Check and order supplies	26
Store supplies	26
Replace supplies	27
Print cartridge	27
HP policy on non-HP supplies	28
HP fraud hotline	29
Clean the product	30
Clean the exterior	30
Clean the flatbed scanner glass	30
Clean the scanner-cover backing	31
Clean the ADF pickup-roller assembly	32
Clean the paper path	34
Clean the paper path from HP ToolboxFX	34
Clean the paper path from the product control panel	34
Calibrate the scanner	34
Calibrate the scanner from HP ToolboxFX	35
Calibrate the scanner from the product control panel	35
Management tools	36
Information pages	36
HP ToolboxFX	37
View HP ToolboxFX	37
Status	38
Event log	38
Alerts	38
Set up status alerts	38
Set up e-mail alerts	38
Fax	39
Fax tasks	39
Fax phone book	39
Fax send log	41
Fax receive log	41
Block Faxes	41
Help	41
System Settings	42
Device information	42
Paper handling	43
Print quality	43
Paper types	43
System setup	44
Service	44
Device polling	44
Print Settings	44
Printing	44

PCL 5e	45
PostScript	45
Network Settings	45
Embedded Web server	45
Features	45
Use HP Web Jetadmin software	46

4 Operational theory

Basic operation	48
Sequence of operation for the base unit	48
Scanner and ADF functions and operation	50
Scanner functions	50
Scanner operation	51
ADF operation	51
ADF paper path and ADF sensors	52
ADF jam detection	53
Internal components (base unit)	54
Engine control system	55
Laser/scanner system	57
Pickup/feed/delivery system	58
Image-formation system	59
Fax functions and operation (fax models only)	63
Computer and network security features	63
PSTN operation	63
Receive faxes when you hear fax tones	63
Distinctive ring function	64
Fax by using Voice over IP services	64
The fax subsystem	65
Fax card in the fax subsystem	65
Safety isolation	65
Safety-protection circuitry	65
Data path	66
Hook state	66
Downstream device detection	66
Hook switch control	66
Ring detect	67
Line current control	67
Billing- (metering-) tone filters	67
Fax page storage in flash memory	67
Stored fax pages	67
Advantages of flash memory storage	67

5 Removal and replacement

Removal and replacement strategy	70
Introduction	70
Removal and replacement warnings, cautions, notes and tips	70
Electrostatic discharge	71
Required tools	71
Before performing service	71
After performing service	72

Post-service tests	73
Test 1 (print-quality test)	73
Test 2 (copy-quality test)	73
Test 3 (fax-quality test)	73
Parts removal order	74
Scanner and ADF components	75
ADF input tray	75
Flatbed lid	76
Link assemblies and scanner support-frame springs	79
Control-panel bezel	81
Control-panel assembly	82
ADF separation pad	83
ADF input-tray flag	84
ADF pickup roller assembly	85
ADF scanner glass	88
Scanner assembly	90
Product base	95
Print cartridge	95
Separation pad (product base)	96
Pickup roller (product base)	97
Scanner cushions	100
Media input tray	101
Transfer roller	103
Side covers	104
Print-cartridge door	106
Rear cover and fuser cover	107
Front cover	109
Speaker assembly	111
Formatter and fax card	113
Power supply	114
Scanner support-frame	118
Laser/scanner assembly	121
Main motor	125
Fuser	128
Paper-pickup assembly	132
Drive-gear assembly and drive belt	135

6 Problem solve

Problem-solving checklist	138
Control-panel messages	140
Alert and warning messages	140
Alert and warning message tables	140
Critical error messages	147
Critical error message-tables	147
Clear jams	149
Causes of jams	149
Where to look for jams	150
Clear jams from the ADF	151
Clear jams from the input-tray areas	153
Clear jams from the output bin	155

Clear jams from the print-cartridge area	156
Print problems	157
Print-quality problems	157
Improve print quality	157
Print-quality settings	157
Identify and correct print defects	158
Print-quality checklist	158
General print-quality issues	158
Scan problems	163
Solve scanned-image problems	163
Scan-quality problems	165
Prevent problems	165
Solve scan-quality problems	165
Copy problems	166
Prevent problems	166
Image problems	166
Media-handling problems	167
Performance problems	169
Fax problems (fax models only)	170
General fax problem-solve	170
Problems receiving faxes	171
Problems sending faxes	174
Voice-call problems	175
Media-handling problems	176
Performance problems	177
Functional checks	178
Engine test page	178
Drum rotation test	178
Half self-test functional check	179
Perform a half self-test check	179
Perform other checks	179
Heating element check	180
High-voltage contacts check	180
Check the print-cartridge contacts	180
Check the high-voltage connector assembly	181
Service-mode functions	182
NVRAM initialization	182
Super NVRAM initialization	182
Secondary service menu	182
Problem-solve tools	184
Product information pages and reports	184
Configuration page	184
Supplies Status page	184
PCL, PCL 6, or PS font list	184
Demo page	185
Usage page	185
Menu map	185
Network report	185
Fax reports	186
Fax activity log	186

Fax confirmation report	186
Last call report	186
Phone book report	186
Billing-code report	188
HP ToolboxFX	188
View HP ToolboxFX	188
Troubleshooting tab	188
Service menu	189
Restore the factory-set defaults	189
Clean the paper path	190
T.30 protocol trace	191
Archive print	191
Problem-solve diagrams	192
Repetitive image defects	192
Interface ports	193
ECU connectors	194
Formatter PCA	195
Fax card	196
Solenoid and motor	197
Rollers	198
Sensors	199
Major components	200
PCAs (base unit)	201
Scanner and ADF	202
Circuit diagram	203
Firmware updates	204
Firmware update by using a flash executable file	204

7 Parts

Ordering information	206
Supplies and hinge tool	206
Cable and interface accessories	206
Whole unit replacement	207
Control-panel bezels	211
Supplementary documentation and support	214
Parts lists and diagrams	216
Types of screws	217
ADF and scanner assemblies	218
ADF internal components	220
Assemblies	222
External covers and panels	224
Internal components (1 of 3)	226
Internal components (2 of 3)	228
Internal components (3 of 3)	230
Alphabetical parts list	232
Numerical parts list	235

Appendix A Service and support

Hewlett-Packard limited warranty statement	239
Customer self repair warranty service	240

Print cartridge limited warranty statement	241
Customer support	242
HP maintenance agreements	242
Repacking the device	242
Extended warranty	242

Appendix B Specifications

Physical specifications	244
Electrical specifications	244
Power consumption	244
Environmental specifications	245
Acoustic emissions	245

Appendix C Regulatory information

FCC compliance	248
Environmental product stewardship program	249
Protecting the environment	249
Ozone production	249
Power consumption	249
Toner consumption	249
Paper use	249
Plastics	249
HP LaserJet print supplies	249
Return and recycling instructions	250
United States and Puerto Rico	250
Multiple returns (two to eight cartridges)	250
Single returns	250
Shipping	250
Non-US returns	250
Paper	250
Material restrictions	250
Disposal of waste equipment by users in private households in the European Union	251
Material Safety Data Sheet (MSDS)	251
For more information	252
Telephone Consumer Protection Act (United States)	253
IC CS-03 requirements	253
EU statement for telecom operation	254
New Zealand telecom statements	254
Declaration of conformity	255
Declaration of conformity	256
Safety statements	257
Laser safety	257
Canadian DOC regulations	257
EMI statement (Korea)	257
Laser statement for Finland	258
Substances table (China)	259

Index	261
--------------------	------------

List of tables

Table 1-1	Product guides	2
Table 1-2	Supported paper and print media sizes	12
Table 1-3	Supported envelopes and postcards	13
Table 4-1	Sequence of operation	48
Table 4-2	Power-on sequence	49
Table 6-1	Alert and warning messages	140
Table 6-2	Critical error messages	147
Table 6-3	Repetitive image defects	192
Table 6-4	ECU connectors	194
Table 6-5	Formatter connectors	195
Table 6-6	Fax card	196
Table 6-7	Solenoid and motor	197
Table 6-8	Rollers	198
Table 6-9	Sensors	199
Table 6-10	Major components	200
Table 6-11	PCAs (base unit)	201
Table 6-12	Scanner and ADF	202
Table 7-1	Whole unit replacement, product bundle CC372A	207
Table 7-2	Whole unit replacement, product bundle CB534A	209
Table 7-3	Control-panel bezels (HP LaserJet M1522n)	211
Table 7-4	Control-panel bezels (HP LaserJet M1522nf)	212
Table 7-5	Documentation	214
Table 7-6	Scanner and ADF assemblies	219
Table 7-7	ADF internal components	221
Table 7-8	Assemblies	223
Table 7-9	External covers and panels	225
Table 7-10	Internal components (1 of 3)	227
Table 7-11	Internal components (2 of 3)	229
Table 7-12	Internal components (3 of 3)	231
Table 7-13	Alphabetical parts list	232
Table 7-14	Numerical parts list	235
Table B-1	Physical specifications	244
Table B-2	Electrical specifications	244
Table B-3	Power consumption (average, in watts)	244
Table B-4	Environmental specifications	245
Table B-5	Acoustic emissions	245

List of figures

Figure 2-1	Operating environment	16
Figure 4-1	System block diagram	48
Figure 4-2	Optical system	50
Figure 4-3	ADF paper path	52
Figure 4-4	Cross-section of printer	54
Figure 4-5	Engine control system	55
Figure 4-6	Engine-control-system circuit diagram	56
Figure 4-7	Laser/scanner system	57
Figure 4-8	Pickup/feed/delivery system	58
Figure 4-9	Image-formation system	59
Figure 4-10	Primary charging	59
Figure 4-11	Developing	60
Figure 4-12	Transfer	61
Figure 4-13	Separation	61
Figure 4-14	Fusing	61
Figure 4-15	Drum cleaning	62
Figure 5-1	Phillips and pozidrive screwdriver comparison	71
Figure 5-2	Parts removal order for the scanner and ADF	74
Figure 5-3	Parts removal order for the product (product base)	74
Figure 5-4	Remove the ADF input tray	75
Figure 5-5	Remove the flatbed lid (1 of 5)	76
Figure 5-6	ADF cover correctly installed	76
Figure 5-7	Remove the flatbed lid (2 of 5)	77
Figure 5-8	Remove the flatbed lid (3 of 5)	77
Figure 5-9	Remove the flatbed lid (4 of 5)	78
Figure 5-10	Remove the flatbed lid (5 of 5)	78
Figure 5-11	Remove the link assemblies and scanner support-frame springs (1 of 4)	79
Figure 5-12	Remove the link assemblies and scanner support-frame springs (2 of 4)	79
Figure 5-13	Remove the link assemblies and scanner support-frame springs (3 of 4)	80
Figure 5-14	Remove the link assemblies and scanner support-frame springs (4 of 4)	80
Figure 5-15	Remove the control-panel bezel	81
Figure 5-16	Remove the control-panel assembly (1 of 2)	82
Figure 5-17	Remove the control-panel assembly (2 of 2)	82
Figure 5-18	Remove the ADF separation pad	83
Figure 5-19	Remove the ADF input-tray flag	84
Figure 5-20	Replacing the ADF pickup roller assembly (1 of 6)	85
Figure 5-21	Replacing the ADF pickup roller assembly (2 of 6)	85
Figure 5-22	Replacing the ADF pickup roller assembly (3 of 6)	86
Figure 5-23	Replacing the ADF pickup roller assembly (4 of 6)	86

Figure 5-24	Replacing the ADF pickup roller assembly (5 of 6)	87
Figure 5-25	Replacing the ADF pickup roller (6 of 6)	87
Figure 5-26	Remove the ADF scanner glass (1 of 3)	88
Figure 5-27	Remove the ADF scanner glass (2 of 3)	88
Figure 5-28	Remove the ADF scanner glass (3 of 3)	89
Figure 5-29	Remove the scanner assembly (1 of 10)	90
Figure 5-30	Remove the scanner assembly (2 of 10)	90
Figure 5-31	Remove the scanner assembly (3 of 10)	91
Figure 5-32	Remove the scanner assembly (4 of 10)	91
Figure 5-33	Remove the scanner assembly (5 of 10)	92
Figure 5-34	Remove the scanner assembly (6 of 10)	92
Figure 5-35	Remove the scanner assembly (7 of 10)	93
Figure 5-36	Remove the scanner assembly (8 of 10)	93
Figure 5-37	Remove the scanner assembly (9 of 10)	94
Figure 5-38	Remove the scanner assembly (10 of 10)	94
Figure 5-39	Remove the print cartridge (1 of 2)	95
Figure 5-40	Remove the print cartridge (2 of 2)	95
Figure 5-41	Remove the product separation pad (1 of 2)	96
Figure 5-42	Remove the product separation pad (2 of 2)	96
Figure 5-43	Remove the product pickup roller (1 of 5)	97
Figure 5-44	Remove the product pickup roller (2 of 5)	97
Figure 5-45	Remove the product pickup roller (3 of 5)	98
Figure 5-46	Remove the product pickup roller (4 of 5)	98
Figure 5-47	Remove the product pickup roller (5 of 5)	99
Figure 5-48	Installing the scanner cushions	100
Figure 5-49	Remove the media input tray (1 of 3)	101
Figure 5-50	Remove the media input tray (2 of 3)	101
Figure 5-51	Remove the media input tray (3 of 3)	102
Figure 5-52	Remove the transfer roller	103
Figure 5-53	Remove the side covers (1 of 4)	104
Figure 5-54	Remove the side covers (2 of 4)	104
Figure 5-55	Remove the side covers (3 of 4)	105
Figure 5-56	Remove the side covers (4 of 4)	105
Figure 5-57	Remove the print-cartridge door (1 of 2)	106
Figure 5-58	Remove the print-cartridge door (2 of 2)	106
Figure 5-59	Remove the rear cover and fuser cover (1 of 3)	107
Figure 5-60	Remove the rear cover and fuser cover (2 of 3)	107
Figure 5-61	Remove the rear cover and fuser cover (3 of 3)	108
Figure 5-62	Remove the front cover (1 of 4)	109
Figure 5-63	Remove the front cover (2 of 4)	109
Figure 5-64	Remove the front cover (3 of 4)	110
Figure 5-65	Remove the front cover (4 of 4)	110
Figure 5-66	Remove the speaker assembly (1 of 2)	111
Figure 5-67	Remove the speaker assembly (2 of 2)	111
Figure 5-68	Remove the formatter	113
Figure 5-69	Remove the power supply (1 of 7)	114
Figure 5-70	Remove the power supply (2 of 7)	115
Figure 5-71	Remove the power supply (3 of 7)	115
Figure 5-72	Remove the power supply (4 of 7)	116
Figure 5-73	Remove the power supply (5 of 7)	116

Figure 5-74	Remove the power supply (7 of 7)	117
Figure 5-75	Remove the power supply (7 of 7)	117
Figure 5-76	Remove the scanner support-frame (1 of 5)	118
Figure 5-77	Remove the scanner support-frame (2 of 5)	119
Figure 5-78	Remove the scanner support-frame (3 of 5)	119
Figure 5-79	Remove the scanner support-frame (4 of 5)	120
Figure 5-80	Remove the scanner support-frame (5 of 5)	120
Figure 5-81	Remove the laser/scanner (1 of 7)	121
Figure 5-82	Remove the laser/scanner (2 of 7)	122
Figure 5-83	Remove the laser/scanner (3 of 7)	122
Figure 5-84	Remove the laser/scanner (4 of 7)	123
Figure 5-85	Remove the laser/scanner assembly (5 of 7)	123
Figure 5-86	Remove the laser/scanner assembly (6 of 7)	124
Figure 5-87	Remove the laser/scanner assembly (7 of 7)Remove the laser/scanner assembly (7 of 7)	124
Figure 5-88	Remove the main motor (1 of 4)	125
Figure 5-89	Remove the main motor (2 of 4)	126
Figure 5-90	Remove the main motor (3 of 4)	126
Figure 5-91	Remove the main motor (4 of 4)	127
Figure 5-92	Remove the fuser (1 of 6)	128
Figure 5-93	Remove the fuser (2 of 6)	129
Figure 5-94	Remove the fuser (3 of 6)	129
Figure 5-95	Remove the fuser (4 of 6)	130
Figure 5-96	Remove the fuser assembly (5 of 6)	130
Figure 5-97	Remove the fuser assembly (6 of 6)	131
Figure 5-98	Remove the paper-pickup assembly (1 of 4)	132
Figure 5-99	Remove the paper-pickup assembly (2 of 4)	133
Figure 5-100	Remove the paper-pickup assembly (3 of 4)	133
Figure 5-101	Remove the paper-pickup assembly (4 of 4)	134
Figure 5-102	Remove the Drive-gear assembly and drive belt (1 of 4)	135
Figure 5-103	Remove the Drive-gear assembly and drive belt (2 of 4)	135
Figure 5-104	Remove the Drive-gear assembly and drive belt (3 of 4)	136
Figure 5-105	Remove the Drive-gear assembly and drive belt (4 of 4)	136
Figure 6-1	Print-cartridge high-voltage connection points (right side)	180
Figure 6-2	Print-cartridge high-voltage connection points (left side)	181
Figure 6-3	ECU connectors	194
Figure 6-4	Formatter connectors	195
Figure 6-5	Fax card connectors	196
Figure 6-6	Solenoid and motor	197
Figure 6-7	Rollers	198
Figure 6-8	Sensors	199
Figure 6-9	Major components	200
Figure 6-10	PCAs (base unit)	201
Figure 6-11	Scanner and ADF	202
Figure 6-12	Circuit diagram	203
Figure 7-1	Scanner and ADF assemblies	218
Figure 7-2	ADF internal components	220
Figure 7-3	Assemblies	222
Figure 7-4	External covers and panels	224
Figure 7-5	Internal components (1 of 3)	226
Figure 7-6	Internal components (2 of 3)	228

Figure 7-7 Internal components (3 of 3) 230

1 Product information

- [Quick access to product information](#)
- [Product comparison](#)
- [Product features](#)
- [Product walkaround](#)
- [Software description](#)
- [Software for Windows](#)
- [Software for Macintosh](#)
- [Uninstall software](#)
- [Media specifications](#)

Quick access to product information

Use the following Web site to find information about the product.


- www.hp.com/support/ljm1522

Table 1-1 Product guides

Guide	Description
HP LaserJet M1522 MFP Getting Started Guide	Provides step-by-step instructions for installing and setting up the product.
HP LaserJet M1522 MFP Series User Guide	Provides detailed information for using the product and problem-solving. Available on the product CD or in Program Group if the software is installed on a computer.
HP ToolboxFX	To check the product status and settings, and to view problem-solving information and online documentation, use the HP ToolboxFX. You must have performed a complete software installation in order to use the HP ToolboxFX. See the user guide for more information about software installation.
Online Help	Provides information about options that are available in the printer drivers. To view a Help file, open the online Help through the printer driver.


Product comparison

The product is available in the following configurations.

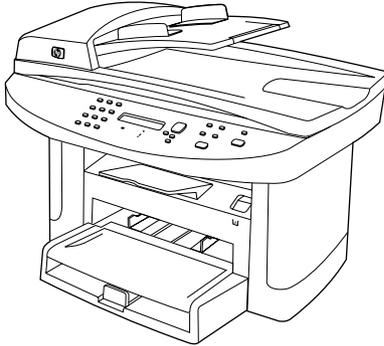

HP LaserJet M1522n MFP

- Prints letter-size pages at speeds up to 24 pages per minute (ppm) and A4-size pages at speeds up to 23 ppm.
- PCL 5 and PCL 6 printer drivers and HP postscript level 3 emulation.
- Priority input tray holds up to 10 sheets of print media.
- Tray 1 holds up to 250 sheets of print media or 10 envelopes.
- Hi-Speed USB 2.0 port and 10/100 Base-T network port.
- 64-MB random-access memory (RAM).
- Flatbed scanner and 50-page automatic document feeder (ADF).

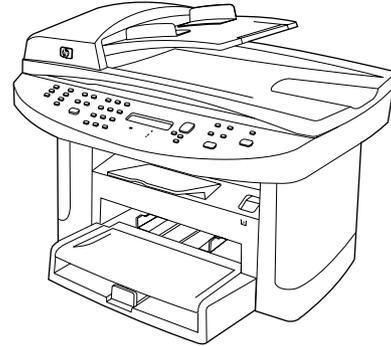

HP LaserJet M1522nf MFP

HP LaserJet M1522n MFP, plus:


- V.34 fax modem and 4-megabyte (MB) flash fax-storage memory.
 - Two RJ-11 fax phone line ports
-

Product features

Performance	<ul style="list-style-type: none">● Prints up to 24 ppm (letter) or 23 ppm (A4).
Print quality	<ul style="list-style-type: none">● 600 x 2 dots per inch (dpi) with Resolution Enhancement Technology (RET).● Adjustable settings to optimize print quality.● The HP UltraPrecise print cartridge has a finer toner formulation that provides sharper text and graphics.
Fax (fax models only)	<ul style="list-style-type: none">● Full-functionality fax capabilities with a V.34 fax; includes a phone book, fax/tel, and delayed-fax features.
Copy	<ul style="list-style-type: none">● Includes ADF that allows faster, more efficient copy jobs with multiple-page documents.
Scan	<ul style="list-style-type: none">● The product provides 1,200 pixels per inch (ppi), 24-bit full-color scanning from letter/A4-size scanner glass.● The product provides 300 ppi, 24-bit full-color scanning from the automatic document feeder (ADF).● Includes an ADF that allows faster, more efficient scan jobs with multiple-page documents.
Networking	<ul style="list-style-type: none">● TCP/IP<ul style="list-style-type: none">◦ IPv4◦ IPv6
Printer driver features	<ul style="list-style-type: none">● Fast printing performance, built-in Intellifont and TrueType scaling technologies, and advanced imaging capabilities are benefits of the PCL 6 printer language.
Interface connections	<ul style="list-style-type: none">● Hi-Speed USB 2.0 port.● 10/100 Base-T ethernet network port (RJ-45).● RJ-11 fax/phone cable ports (fax models only).
Economical printing	<ul style="list-style-type: none">● N-up printing (printing more than one page on a sheet).● EconoMode setting.
Supplies	<ul style="list-style-type: none">● A supplies status page that displays the amount of life remaining in the print cartridge.● The product ships with a 1,000-page (average yield) starter cartridge. The average yield for replacement cartridges is 2,000 pages.● Authentication for HP print cartridges.● Enabled supplies-ordering capability.
Accessibility	<ul style="list-style-type: none">● Online user guide that is compatible with text screen-readers.● Print cartridges can be installed and removed by using one hand.● All doors and covers can be opened by using one hand.


Product walkaround

Front view

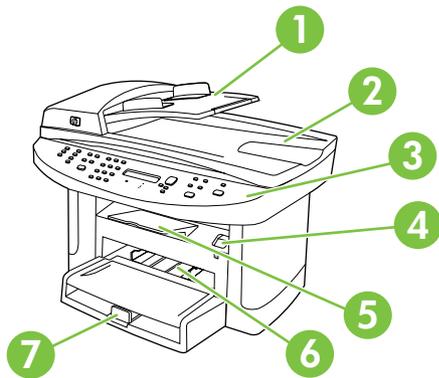

1	Automatic document feeder (ADF) input tray
2	Automatic document feeder (ADF) output bin
3	Control panel
4	Print-cartridge door latch
5	Output bin
6	Priority input tray
7	Tray 1


Back view

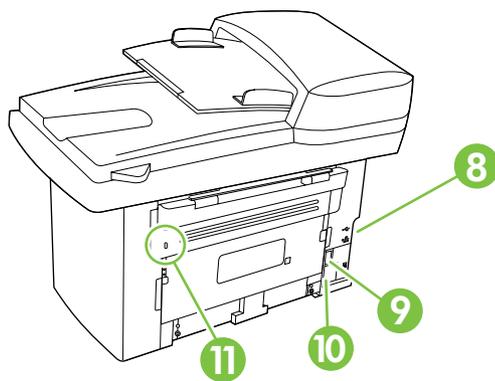

8	Interface ports
9	Power switch
10	Power connector
11	Kensington lock


Interface ports

All models have a 10/100 Base-T (RJ-45) network port and a Hi-Speed USB 2.0 port. Fax models have fax ports as well.

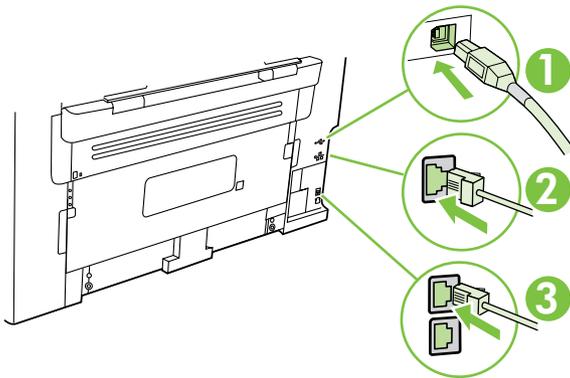

- | | |
|---|-----------------------------|
| 1 | Hi-Speed USB 2.0 port |
| 2 | Network port |
| 3 | Fax ports (fax models only) |

Control-panel

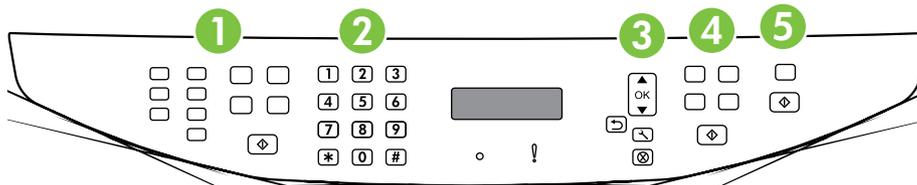

- | | |
|---|--|
| 1 | Fax controls (fax models only). Use the fax controls to change commonly used fax settings. |
| 2 | Alphanumeric buttons. Use the alphanumeric buttons to type data into the product control-panel display and dial telephone numbers for faxing. |
| 3 | Setup and cancel controls. Use these controls to select menu options, determine the product status, and cancel the current job. |
| 4 | Copy controls. Use these controls to change commonly used copy settings and to start copying. |
| 5 | Scan controls. Use these controls to scan to e-mail or to a folder. |

Software description

Supported operating systems

The product supports the following operating systems:

Full software installation

- Windows XP (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)
- Mac OS X v10.3, v10.4, and later

Print and scan driver

- Windows 2000
- Windows 2003 Server (32-bit)

Printer driver only

- Linux (Web only)
- UNIX model scripts (Web only)

 **NOTE:** For Mac OS X v10.4 and later, PPC and Intel Core Processor Macs are supported.

Supported printer drivers

Operating system	PCL 5	PCL 6	HP postscript level 3 emulation
Windows	✓ ¹	✓	✓ ¹
Mac OS X v10.3, v10.4, and later			✓
Linux ²			✓

¹ Driver can be installed by using the Microsoft Add Printer wizard, too.

² For Linux, download the HP postscript level 3 emulation driver from www.hp.com/go/linuxprinting.

The printer drivers include online Help that has instructions for common printing tasks and also describes the buttons, checkboxes, and drop-down lists that are in the printer driver.

Software included with the product

There are several options for completing a recommended install. Easy Install will complete the installation with default settings. Advanced Install allows you to select custom settings and choose the components that are installed.

Recommended installation for Windows

- HP drivers
 - PCL 6 printer driver
 - Scan driver
- HP MFP software
 - HP ToolboxFX
 - HP LaserJet Scan program
 - HP Send Fax program and driver

- HP Fax Setup Wizard
- Uninstall program
- HP Update program
- HP Customer Participation Program
- Shop for HP Supplies program
- Other programs
 - Readiris OCR (not installed with other software; separate installation is required)

Express installation (USB or network)

The following software is included with an Express installation:

- PCL 6 printer driver
- Scan driver

 **NOTE:** Express installation supports faxing by using the control panel.

NOTE: PCL 5 and HP postscript level 3 emulation drivers can be installed using the Microsoft Add Printer wizard.

Macintosh software

- HP Product Setup Assistant
- HP Device Configuration
- HP Uninstaller
- HP LaserJet software
 - HP Scan
 - HP Director
 - Fax program
 - Scan to e-mail program
 - HP Photosmart

Software for Windows

When you install the software for Windows, you can directly connect the product to a computer by using a USB cable, or you can connect the product to a network by using the internal print server. See the getting started guide for installation instructions, and see the Readme file for the latest software information.

HP ToolboxFX

Perform a typical installation in order to use HP ToolboxFX.

HP ToolboxFX provides links to product status information and help information, such as the user guide, and tools for product problem-solving.

Embedded Web server (EWS)

The EWS is a Web-based interface that provides simple access to product status and configurations, including network configurations and Smart Printing Supplies (SPS) functionality.

You can gain access to the EWS through the network connection to the product. Type the product IP address in a Web browser to open the product EWS home page in the browser. From the home page, you can use the tabs and left navigation menu to check the status of the product, configure the product, or check the status of the supplies.

The following are supported browsers:

- Internet Explorer 5.0 or later
- Netscape Navigator 4.75 or later
- Opera 6.05 or later
- Safari 1.2 or later

Software for Macintosh

For Mac OS X v10.3, v10.4, and later, use Print Center to print.

 **NOTE:** For Macintosh computers, HP ToolboxFX is *not* supported.

HP Director

HP Director is a software program for working with documents. When the document is loaded into the ADF and the computer is connected directly to the product, HP Director appears on the computer screen to initiate faxing, scanning, or changing settings on the product through Macintosh Configure Device.

Also included is the HP product Setup Assistant, which sets up the fax and print queues.

Macintosh Configure Device (Mac OS X v10.3, v10.4, and later)

Macintosh Configure Device is a Web-based program that provides access to information about the product (or example, information about supplies status and product settings). Use Macintosh Configure Device to monitor and manage the product from the computer.

 **NOTE:** You must perform a complete software installation to use Macintosh Configure Device.

- Check the product status and print information pages.
- Check and change product settings.
- Check default print settings.
- Check and change fax settings, including IP configuration, Advanced, mDNS, SNMP, network configuration, and fax reports.

You can view Macintosh Configure Device when the product is directly connected to a computer or when it is connected to the network.

 **NOTE:** You do not have to have Internet access to open and use Macintosh Configure Device.

View Macintosh Configure Device when the product is connected to the computer

1. Open HP Director by clicking the **HP Director** icon in the dock.
2. In HP Director, click **Settings**.
3. Select **Configure Device** to open the Macintosh Configure Device home page in a browser.

View Macintosh Configure Device when the product is connected to the network

1. Open one of the following browsers:
 - Internet Explorer 5.0 or later
 - Netscape Navigator 4.75 or later
 - Opera 6.05 or later
 - Safari 1.2 or later
2. Type the IP address of the product into the Web browser to open the Macintosh Configure Device home page.

PDEs (Mac OS X v10.3, v10.4, and later)

PDEs are code plug-ins that provide access to product features, such as information about the number of copies, two-sided printing, and quality settings. An installation program for the PDEs and other software is provided on the product CD for Macintosh.

Uninstall software

Windows

Use the **Add or Remove Programs** method in Windows to remove the product software. This method does *not* require you to have the software CD.

1. Click **Start**, point to **Settings**, and then click **Control Panel**.

 **NOTE:** In Windows XP, click **Start**, and then click **Control panel**.

2. Double-click **Add or Remove Programs**.
3. Scroll through the list of software programs and click **HP LaserJet M2727**.
4. Click **Remove**.

Macintosh

To remove the software, drag the PPD files to the trash can.

Media specifications

Supported paper and print media sizes

This product supports a number of paper sizes, and it adapts to various media.

 **NOTE:** To obtain best print results, select the appropriate paper size and type in the print driver before printing.

Table 1-2 Supported paper and print media sizes

Size	Dimensions	Priority input tray	Tray 1
Letter	216 x 279 mm (8.5 x 11 inches)	✓	✓
Legal	216 x 356 mm (8.5 x 14 inches)	✓	✓
A4	210 x 297 mm (8.27 x 11.69 inches)	✓	✓
Executive	184 x 267 mm (7.24 x 10.51 inches)	✓	✓
A3	297 x 420 mm (11.69 x 16.54 inches)		
A5	148 x 210 mm (5.83 x 8.27 inches)	✓	✓
A6 ¹	105 x 148 mm (4.13 x 5.83 inches)	✓	✓
11 x 17	279 x 432 mm (11 x 17 inches)		
B4 (JIS)	257 x 364 mm (10.12 x 14.33 inches)		
B5 (JIS)	182 x 257 mm (7.17 x 10.12 inches)	✓	✓
8k	270 x 390 mm (10.63 x 15.35 inches)		
16k	197 x 273 mm (7.75 x 10.75 inches)	✓	✓
16k	195 x 270 mm (7.7 x 10.6 inches)	✓	✓
16k	184 x 260 mm (7.25 x 10.25 inches)	✓	✓
8.5 x 13	216 x 330 mm (8.5 x 13 inches)	✓	✓
4 x 6 ¹	107 x 152 mm (4 x 6 inches)	✓	✓
5 x 8 ¹	127 x 203 mm (5 x 8 inches)	✓	✓
10 x 15 cm ¹	100 x 150 mm (3.9 x 5.9 inches)	✓	✓
Custom	Minimum—76 x 127 mm (3 x 5 inches); Maximum—216 x 356 mm (8.5 x 14 inches)	✓	✓

¹ These sizes are supported as custom sizes.