



COLOR LASERJET ENTERPRISE CP4020/CP4520 SERIES PRINTER

Service Manual



CP4025n
CP4025dn
CP4525n
CP4525dn
CP4525xh

Sample of manual. Download All 558 pages at:

<https://www.arepairmanual.com/downloads/2009-hp-color-laserjet-enterprise-cp4020cp4520-series-printers-service-repair-v>

Product: 2009 HP Color LaserJet Enterprise CP4020/CP4520 Series Printers Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2009-hp-color-laserjet-enterprise-cp4020cp4520-series-printers-service-repair-workshop-manual/>

Sample of manual. Download All 558 pages at:
<https://www.arepairmanual.com/downloads/2009-hp-color-laserjet-enterprise-cp4020cp4520-series-printers-service-repair-v>



HP Color LaserJet Enterprise CP4020- CP4520 Series Printers

Service Manual

Copyright and License

© 2009 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CC489-90936

Edition 1, 10/2009

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Intel® Core™ is a trademark of Intel Corporation in the U.S. and other countries.

Java™ is a US trademark of Sun Microsystems, Inc.

Microsoft®, Windows®, Windows® XP, and Windows Vista® are U.S. registered trademarks of Microsoft Corporation.

PANTONE® is Pantone, Inc's check-standard trademark for color.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Conventions used in this guide

 **TIP:** Tips provide helpful hints or shortcuts.

 **NOTE:** Notes provide important information to explain a concept or to complete a task.

 **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.

 **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Theory of operation

Basic operation	2
Sequence of operation	3
Engine-control system	4
DC controller	5
Solenoids	5
Clutches	6
Switches	6
Sensors	7
Motors	8
Fans	9
High-voltage power supply	10
Low-voltage power supply	12
Overcurrent/overvoltage protection	13
Safety	13
Voltage detection	13
Sleep (powersave) mode	13
Low-voltage power supply failure	13
Fuser control	14
Fuser temperature control	15
Fuser sleeve temperature protection	15
Failure detection	16
Fuser unit identification	17
Fuser unit life detection	17
Laser/scanner system	18
Laser/scanner failure	19
Protective-glass cleaners	19
Image-formation system	21
Image-formation process	22
Step 1: Pre-exposure	24
Step 2: Primary charging	24
Step 3: Laser-beam exposure	25
Step 4: Development	25
Step 5: Primary transfer	26

Step 6: Secondary transfer	26
Step 7: Separation	27
Step 8: Fusing	27
Step 9: ITB cleaning	28
Step 10: Drum cleaning	28
Print cartridge	28
Developing-roller engagement and disengagement	30
Intermediate transfer belt (ITB) unit	31
Primary-transfer-roller engagement and disengagement	32
ITB cleaning	34
Calibration	34
Color-misregistration control	35
Image-stabilization control	35
Pickup, feed, and delivery system	37
Pickup-and-feed unit	41
Cassette pickup	41
Cassette-presence detection	42
Cassette lift operation and cassette paper-presence detection	43
Cassette multiple-feed prevention	43
Multipurpose tray pickup	44
Paper feed	45
Skew-feed prevention	46
Paper detection	47
Feed speed control	48
Fusing and delivery unit	48
Loop control	49
Pressure-roller pressurization control	50
Duplexing unit (HP Color LaserJet CP4525dn, HP Color LaserJet CP4025dn, and HP Color LaserJet CP4525xh only)	52
Duplexing reverse and feed control	52
Duplex print operation	53
Jam detection	55
Optional paper feeder	57
Motor control	59
Paper-feeder pickup and feed operation	60
Paper-size detection and cassette-presence detection	62
Paper-feeder cassette lift operation	63
Paper feeder jam detection	64

2 Removal and replacement

Introduction	68
Removal and replacement strategy	68
Electrostatic discharge	69
Required tools	69

Before performing service	70
After performing service	70
Post-service test	71
Print-quality test	71
Parts removal order	72
Customer self repair (CSR) components	74
Print cartridges	74
Toner-collection unit	76
Formatter PCA	78
Hard drive	79
Remove the hard drive	79
Memory DIMM	81
Remove the memory DIMM	81
Enable memory	82
Tray	84
Fuser	85
Feed and separation rollers (Trays 2-5)	86
Pickup roller (Tray 1)	87
Secondary transfer roller	90
Reinstall the transfer roller	91
Intermediate transfer belt (ITB)	92
External panels, covers, and doors	95
Identification and location	95
Upper-left cover	96
Power-supply cover	98
Left cover	99
Remove the left cover	99
Front-top cover	100
Remove the front-top cover	100
Rear-top cover	102
Remove the rear-top cover	102
Right-front cover	103
Remove the right-front cover	103
Reinstall the power button	104
Control-panel assembly	105
Remove the control-panel assembly	105
Front-door assembly	107
Remove the front-door assembly	107
Right-rear cover	110
Remove the right-rear cover	110
Rear cover	112
Remove the rear cover	112
Right-door assembly	113
Internal assemblies	118

Cassette feed guide	118
Secondary transfer assembly	119
Reinstall the secondary transfer assembly	120
Separation pad (Tray 1)	121
Remove the separation pad (Tray 1)	121
Registration density (RD) sensor assembly	124
Remove the RD sensor assembly	124
Registration assembly	128
Remove the registration assembly	129
Residual-toner-feed motor	133
Remove the residual-toner-feed motor	133
Residual-toner duct and feed assembly	134
Remove the residual-toner duct and feed assembly	134
Cartridge fan and environmental sensor	137
Remove the cartridge fan and environmental sensor	137
Toner-collection sensor and scanner-thermistor assembly	141
Remove the toner-collection sensor and scanner-thermistor assembly	141
Delivery fan	143
Remove the delivery fan	143
Delivery assembly	145
Remove the delivery assembly	145
Reinstall the delivery assembly	149
Duplex-drive assembly	151
Remove the duplex-drive assembly	151
Power-supply fan	152
Remove the power-supply fan	152
Interconnect board (ICB)	153
Remove the ICB	153
DC controller PCA only	155
Remove the DC controller PCA only	155
Low-voltage power supply (LVPS)	157
Remove the low-voltage power supply	157
DC controller PCA and tray	161
Remove the DC controller PCA and tray	161
High-voltage power supply lower (HVPS-D)	163
Remove the high-voltage power supply lower	163
Reinstall the high-voltage power supply lower	167
Developing-disengagement motor	168
Remove the developing-disengagement motor	168
Exhaust fan and fan duct	169
Remove the exhaust fan and fan duct	169
Reinstall the exhaust fan and fan duct	171
Pickup motor	172
Remove the pickup motor	172

Lifter-drive assembly	173
Remove the lifter-drive assembly	173
Lifter base assembly	175
Remove the lifter base assembly	175
Reinstall the lifter base assembly	176
Tray-pickup drive assembly	178
Remove the tray-pickup drive assembly	178
Tray-pickup assembly	180
Remove the tray-pickup assembly	180
Laser/scanner assembly (Y/M)	186
Remove the laser/scanner assembly (Y/M)	187
Laser/scanner assembly (C/Bk)	190
Remove the laser/scanner assembly (C/Bk)	191
Reinstall the protective glass cleaner (PGC) actuators	193
High-voltage power supply upper (HVPS-T)	196
Remove the high-voltage power supply upper	196
Reinstall the high-voltage power supply upper	198
Yellow, magenta, cyan, and black drum motors	199
Remove the yellow, magenta, cyan, and black drum motors	199
Fuser motor	200
Remove the fuser motor	201
ITB motor	202
Remove the ITB motor	202
Main-drive assembly	203
Remove the main-drive assembly	204
Reinstall the main-drive assembly	207
Fuser-drive assembly	211
Remove the fuser-drive assembly	212
Reinstall the fuser-drive assembly	215
Optional paper feeder assemblies (1 x 500-sheet and 3 x 500-sheet)	216
Front door (optional paper feeder)	216
Rear cover (optional paper feeder)	218
Right-front cover (optional paper feeder)	219
Right door (optional paper feeder)	220
Left cover (optional paper feeder)	222
Remove the left cover (optional paper feeder)	222
Right cover (optional paper feeder)	224
Remove the right cover (optional paper feeder)	224
Rear-right cover (optional paper feeder)	225
Remove the rear-right cover (optional paper feeder)	225
Pickup assembly (optional paper feeder)	226
Remove the pickup assembly (optional paper feeder)	226
Lifter assembly (optional paper feeder)	229
Remove the lifter assembly (optional paper feeder)	229

Lifter-drive assembly (optional paper feeder)	230
Remove the lifter-drive assembly (optional paper feeder)	230
Pickup motor assembly (optional paper feeder)	231
Remove the pickup motor (optional paper feeder) assembly	231
Controller PCA (optional paper feeder)	232
Remove the controller PCA (optional paper feeder)	232

3 Solve problems

Solve problems checklist	234
Menu map	236
Troubleshooting process	237
Determine the problem source	237
Pre-troubleshooting checklist	237
Troubleshooting flowchart	239
Power subsystem	240
Power-on checks	240
Power-on troubleshooting overview	240
Tools for troubleshooting	242
Individual component diagnostics	242
LED diagnostics	242
Understand lights on the formatter	242
Engine diagnostics	243
Defeating interlocks	243
Disable cartridge check	244
Engine-test button	244
Paper-path test	245
Manual sensor test (special-mode test)	246
A TOP (top of page) sensor	247
B and C loop sensors	248
D fuser delivery sensor	249
E duplex re-pickup sensor	250
F output bin full sensor	251
I developer alienation	252
J fuser pressure-release sensor	253
K primary transfer-roller-disengagement sensor	254
L media sensor	256
M front-door switch	257
N right-door switch	258
Manual sensor test 2 (special-mode test)	259
O Tray 1 paper present sensor	261
P Tray 2 paper present sensor	262
Q Tray 2 paper surface 1 and 2 sensors	263
R Tray 2 paper size switches	264

S Tray 3 paper present sensor	265
T Tray 3 feed sensor	265
U Tray 3 paper surface 1 and 2 sensors	265
V Tray 3 paper size switches	265
W Tray 4 paper present sensor	265
X Tray 4 feed sensor	265
Y Tray 4 paper surface 1 and 2 sensors	265
Z Tray 4 paper size switches	266
a Tray 5 paper present sensor	266
b Tray 5 feed sensor	266
c Tray 5 paper surface 1 and 2 sensors	266
d Tray 5 paper size switches	266
5V laser and 24V interlock and logic switches (and power switch)	267
New ITB sensor	271
Tray 3, 4, and 5 right door switch	272
Paper-path sensors test	273
Print/stop test	273
Component tests	274
Component test (special-mode test)	274
Diagrams	277
Block diagrams	277
Plug/jack locations	280
Location of connectors	281
DC controller connector locations	281
Controller PCA (1 x 500-sheet and 3 x 500-sheet optional paper feeders)	283
Locations of major components	284
General timing chart	294
Circuit diagrams	294
HP Easy Printer Care	298
Open the HP Easy Printer Care software	299
HP Easy Printer Care software sections	299
Internal print-quality test pages	302
Print-quality-troubleshooting pages	302
Diagnostics page	305
Cleaning page	306
Configuration page	307
Configuration page	307
HP embedded Jetdirect page	309
Embedded protocol page	310
Finding important information on the configuration pages	311
Color-band test	311
Print-quality troubleshooting tools	312

Repetitive defects ruler	312
Calibrate the product	313
Control panel menus	314
Control panel menus	314
Show Me How menu	314
Retrieve job menu	314
Information menu	317
Paper handling menu	317
Manage supplies menu	318
Configure device menu	321
Diagnostics menu	342
Service menu	344
Interpret control-panel messages	345
Control-panel message types	345
Control-panel messages	345
Event log messages	376
Print an event log	376
Show an event log	376
Sample event log	377
Clear the event log	377
Event log message table	378
Clear paper jams	383
Common causes of jams	383
Jam locations	386
Clear jams in the right door	387
Clear jams in the output bin area	390
Clear jams in Tray 1	390
Clear jams in Tray 2 or optional Trays 3, 4, or 5	392
Clear jams in the lower right door (Tray 3, 4, or 5)	393
Jam causes and solutions	394
Jams in the output bin	394
Jams in the fuser and transfer area	394
Jams in the duplex area (HP Color LaserJet CP4525dn, HP Color LaserJet CP4025dn, and HP Color LaserJet CP4525xh only)	397
Jams in Tray 1, Tray 2 and internal paper path	399
Jams in Tray 3, 4, and 5	400
Change jam recovery	402
Solve paper-handling problems	403
Product feeds multiple sheets	403
Product feeds incorrect page size	403
Product pulls from incorrect tray	403
Paper does not feed automatically	404
Paper does not feed from Tray 2, 3, 4, or 5	404
Transparencies or glossy paper will not feed	405

Envelopes jam or will not feed in the product	405
Output is curled or wrinkled	406
Product will not duplex or duplexes incorrectly	406
Use manual print modes	408
Solve image-quality problems	410
Image defects table	410
Clean the product	416
Clean the paper path	416
Solve performance problems	417
Solve connectivity problems	418
Solve direct-connect problems	418
Solve network problems	418
Service mode functions	420
Service menu	420
Product resets	423
Restore factory-set defaults	423
Hard disk initialization (optional)	423
NVRAM initialization	423
Product cold reset	424
Product updates	424

4 Parts and diagrams

Order parts, accessories, and supplies	426
Part numbers	427
Accessories	427
Print cartridges and toner collection unit	427
Memory	427
Cables and interfaces	427
Customer self repair (CSR) parts	428
Service maintenance kits	428
Unique components	429
Screws	430
How to use the parts lists and diagrams	431
External covers, panels, and doors	432
Right door assembly	434
Front door assembly	436
Internal components	438
Internal components (1 of 7)	438
Internal components (2 of 7)	440
Internal components (3 of 7)	442
Internal components (4 of 7)	444
Internal components (5 of 7)	446
Internal components (6 of 7)	448

Internal components (7 of 7)	450
Cassettes 2-5	452
Paper pickup assembly	454
Tray 1 paper pickup assembly	456
Registration assembly	458
Secondary transfer assembly	460
Delivery assembly	462
Fuser assembly	464
PCAs	466
Assessorries	468
Paper feeders	468
Paper feeder external covers, panels, and doors	470
1 X 500 paper feeder main body	472
3 X 500 paper feeder main body	474
Alphabetical parts list	476
Numerical parts list	484

Appendix A Service and support

Hewlett-Packard limited warranty statement	494
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	495
HP Color LaserJet Fuser Kit Limited Warranty Statement	496
End User License Agreement	497
Customer self-repair warranty service	499
Customer support	500

Appendix B Product specifications

Physical specifications	502
Performance specifications	502
Electrical specifications	502
Acoustic specifications	503
Environmental specifications	503
Skew specifications	504

Appendix C Regulatory information

FCC regulations	506
Environmental product stewardship program	507
Protecting the environment	507
Ozone production	507
Power consumption	507
Toner consumption	507
Paper use	507
Plastics	507
HP LaserJet print supplies	507

Return and recycling instructions	508
United States and Puerto Rico	508
Multiple returns (more than one cartridge)	508
Single returns	508
Shipping	508
Non-U.S. returns	508
Paper	508
Material restrictions	509
Disposal of waste equipment by users in private households in the European Union	509
Chemical substances	509
Material Safety Data Sheet (MSDS)	510
For more information	510
Declaration of Conformity	511
Safety statements	512
Laser safety	512
Canadian DOC regulations	512
VCCI statement (Japan)	512
Power cord instructions	512
Power cord statement (Japan)	512
EMC statement (China)	513
EMC statement (Korea)	513
EMI statement (Taiwan)	513
Laser statement for Finland	513
GS statement (Germany)	514
Substances Table (China)	514
Restriction on Hazardous Substances statement (Turkey)	514
Index	515

List of tables

Table 1-1	Sequence of operation	3
Table 1-2	Solenoids	5
Table 1-3	Switches	6
Table 1-4	Sensors	7
Table 1-5	Motors	8
Table 1-6	Fans	9
Table 1-7	High-voltage power supply circuits	10
Table 1-8	Converted DC voltages	12
Table 1-9	Fuser components	14
Table 1-10	Primary-transfer-roller engagement states	32
Table 1-11	Image-stabilization controls	36
Table 1-12	Switches and sensors for the pickup, feed, and delivery system	38
Table 1-13	Motors and solenoids for the pickup, feed, and delivery system	39
Table 1-14	Print mode and feed speed	48
Table 1-15	Paper sizes	53
Table 1-16	Jams that the product detects	56
Table 1-17	Electrical components for the paper feeder	59
Table 1-18	Pickup feed components (1 x 500-sheet paper feeder)	60
Table 3-1	Pre-troubleshooting checklist	237
Table 3-2	Troubleshooting flowchart	239
Table 3-3	Manual sensor diagnostic tests	246
Table 3-4	Default state of bits	246
Table 3-5	Manual sensor test 2 diagnostic tests	259
Table 3-6	Default state of bits	260
Table 3-7	Paper-path sensors diagnostic tests	273
Table 3-8	Component test details	274
Table 3-9	Formatter PCA	280
Table 3-10	DC controller connectors	281
Table 3-11	Controller PCA connectors	283
Table 3-12	Important information on the configuration pages	311
Table 3-13	Embedded Jetdirect menu	334
Table 3-14	Control-panel messages	345
Table 3-15	Common causes of jams (by area)	385
Table 3-16	Causes and solutions for delivery delay jam	394

Table 3-17	Causes and solutions for fuser delivery delay jams	394
Table 3-18	Causes and solutions for wrapping jams	394
Table 3-19	Causes and solutions for fuser delivery stationary jams	395
Table 3-20	Causes and solutions for residual media jams	396
Table 3-21	Causes and solutions for pickup delay jams 2	396
Table 3-22	Causes and solutions for pickup stationary jams	397
Table 3-23	Causes and solutions for duplexing reverse jams	397
Table 3-24	Causes and solutions for duplex repick jams	397
Table 3-25	Causes and solutions for residual media jams	398
Table 3-26	Causes and solutions for pickup delay jam 1: tray pickup	399
Table 3-27	Causes and solutions for pickup stationary jams	400
Table 3-28	Causes and solutions for pickup delay and pickup stationary jams	400
Table 3-29	Causes and solutions for residual media jams	401
Table 3-30	MP modes under the ADJUST PAPER TYPES sub menu	408
Table 3-31	MP modes under the OPTIMIZE submenu	409
Table 4-1	Maintenance kits	428
Table 4-2	110V and 220V unique components	429
Table 4-3	Simplex and duplex unique components	429
Table 4-4	Common fasteners	430
Table 4-5	External covers, panels, and doors;	433
Table 4-6	Right door assembly	435
Table 4-7	Front door assembly	437
Table 4-8	Internal components (1 of 7)	439
Table 4-9	Internal components (2 of 7)	441
Table 4-10	Internal components (3 of 7)	443
Table 4-11	Internal components (4 of 7)	445
Table 4-12	Internal components (5 of 7)	447
Table 4-13	Internal components 6 of 7	449
Table 4-14	Internal components 7 of 7	451
Table 4-15	Cassette	453
Table 4-16	Paper pickup assembly	455
Table 4-17	Tray 1 paper pickup assembly	457
Table 4-18	Registration assembly	459
Table 4-19	Secondary Transfer assembly	461
Table 4-20	Delivery assembly	463
Table 4-21	Fuser assembly	465
Table 4-22	PCAs	467
Table 4-23	Paper feeders	469
Table 4-24	Paper feeder external covers, panels, and doors	471
Table 4-25	1 X 500 paper feeder main body	473
Table 4-26	3 X 500 paper feeder main body	475
Table 4-27	Alphabetical parts list	476
Table 4-28	Numerical parts list	484
Table B-1	Product dimensions	502

Table B-2	Product dimensions, with all doors and trays fully opened	502
Table B-3	Power requirements	503
Table B-4	Power consumption (average, in watts) ¹²⁴⁶	503
Table B-5	HP Color LaserJet Enterprise CP4020-CP4520 Series ¹³	503
Table B-6	Media registration and image placement accuracy	504

List of figures

Figure 1-1	Relationship between the main product systems	2
Figure 1-2	Engine-control system	4
Figure 1-3	DC controller block diagram	5
Figure 1-4	High-voltage power supply circuits	10
Figure 1-5	Low-voltage power-supply circuit	12
Figure 1-6	Fuser components	14
Figure 1-7	Fuser temperature-control circuit	15
Figure 1-8	Laser/scanner system	18
Figure 1-9	Protective-glass cleaners (PGCs)	20
Figure 1-10	Image-formation system	21
Figure 1-11	Image-formation drive system	22
Figure 1-12	Image-formation process	23
Figure 1-13	Pre-exposure	24
Figure 1-14	Primary charging	24
Figure 1-15	Laser-beam exposure	25
Figure 1-16	Development	25
Figure 1-17	Primary transfer	26
Figure 1-18	Secondary transfer	26
Figure 1-19	Separation	27
Figure 1-20	Fusing	27
Figure 1-21	ITB cleaning	28
Figure 1-22	Drum cleaning	28
Figure 1-23	Print-cartridge system	29
Figure 1-24	Developing-roller engagement and disengagement control	30
Figure 1-25	ITB unit	31
Figure 1-26	Three states of primary-transfer-roller engagement and disengagement	33
Figure 1-27	ITB cleaning process	34
Figure 1-28	Toner patterns for calibration	35
Figure 1-29	Paper path	37
Figure 1-30	Switches and sensors for the pickup, feed, and delivery system	38
Figure 1-31	Motors and solenoids for the pickup, feed, and delivery system	39
Figure 1-32	Three main units of the pickup, feed, and delivery system	40
Figure 1-33	Pickup-and-feed unit	41
Figure 1-34	Cassette-pickup mechanism	42

Figure 1-35	Cassette lift mechanism	43
Figure 1-36	Multiple-feed prevention	44
Figure 1-37	Multipurpose tray pickup mechanism	45
Figure 1-38	Paper-feed mechanism	46
Figure 1-39	Skew-feed prevention	47
Figure 1-40	Fuser and delivery unit	49
Figure 1-41	Loop-control mechanism	50
Figure 1-42	Pressure-roller pressurization control	51
Figure 1-43	Duplexing unit	52
Figure 1-44	Duplex reverse and feed control	53
Figure 1-45	Jam detection sensors	55
Figure 1-46	1 x 500 optional paper feeder	57
Figure 1-47	3 x 500-sheet optional paper feeder	58
Figure 1-48	Signals for the paper feeder	58
Figure 1-49	Paper-feeder pickup and feed operation	60
Figure 1-50	Paper-feeder cassette lift	63
Figure 1-51	Jam detection (1 x 500-sheet paper feeder)	64
Figure 1-52	Jam detection (3 x 500-sheet paper feeder)	65
Figure 2-1	Phillips and pozidrive screwdriver comparison	69
Figure 2-2	Parts removal order (1 of 2)	72
Figure 2-3	Parts removal order (2 of 2)	73
Figure 2-4	Remove the print cartridge (1 of 2)	74
Figure 2-5	Remove the print cartridge (2 of 2)	75
Figure 2-6	Remove the toner-collection unit (1 of 4)	76
Figure 2-7	Remove the toner-collection unit (2 of 4)	76
Figure 2-8	Remove the toner-collection unit (3 of 4)	77
Figure 2-9	Remove the toner-collection unit (4 of 4)	77
Figure 2-10	Remove the formatter	78
Figure 2-11	Remove the hard drive (1 of 3)	79
Figure 2-12	Remove the hard drive (2 of 3)	79
Figure 2-13	Remove the hard drive (3 of 3)	80
Figure 2-14	Remove the memory DIMM (1 of 2)	81
Figure 2-15	Remove the memory DIMM (2 of 2)	82
Figure 2-16	Remove the tray (1 of 2)	84
Figure 2-17	Remove the tray (2 of 2)	84
Figure 2-18	Remove the fuser (1 of 2)	85
Figure 2-19	Remove the fuser (2 of 2)	85
Figure 2-20	Remove the Pickup and feed rollers (Trays 2-5)	86
Figure 2-21	Remove the pickup roller (Tray 1) (1 of 5)	87
Figure 2-22	Remove the pickup roller (Tray 1) (2 of 5)	87
Figure 2-23	Remove the pickup roller (Tray 1) (3 of 5)	88
Figure 2-24	Remove the pickup roller (Tray 1) (4 of 5)	88
Figure 2-25	Remove the pickup roller (Tray 1) (5 of 5)	89
Figure 2-26	Remove the transfer roller (1 of 3)	90

Figure 2-27	Remove the transfer roller (2 of 3)	90
Figure 2-28	Remove the transfer roller (3 of 3)	91
Figure 2-29	Reinstall the transfer roller	91
Figure 2-30	Remove the intermediate transfer belt (1 of 4)	92
Figure 2-31	Remove the intermediate transfer belt (2 of 4)	92
Figure 2-32	Remove the intermediate transfer belt (3 of 4)	93
Figure 2-33	Remove the intermediate transfer belt (4 of 4)	94
Figure 2-34	External panels, covers, and doors; identification and location	95
Figure 2-35	Remove the upper-left cover (1 of 3)	96
Figure 2-36	Remove the upper-left cover (2 of 3)	96
Figure 2-37	Remove the upper-left cover (3 of 3)	97
Figure 2-38	Remove the power-supply cover	98
Figure 2-39	Remove the left cover (1 of 2)	99
Figure 2-40	Remove the left cover (2 of 2)	99
Figure 2-41	Remove the front-top cover (1 of 3)	100
Figure 2-42	Remove the front-top cover (2 of 3)	100
Figure 2-43	Remove the front-top cover (3 of 3)	101
Figure 2-44	Remove the rear-top cover (1 of 2)	102
Figure 2-45	Remove the rear-top cover (2 of 2)	102
Figure 2-46	Remove the right-front cover (1 of 3)	103
Figure 2-47	Remove the right-front cover (2 of 3)	103
Figure 2-48	Remove the right-front cover (3 of 3)	104
Figure 2-49	Reinstall the power button	104
Figure 2-50	Remove the control-panel assembly (1 of 2)	105
Figure 2-51	Remove the control-panel assembly (2 of 2)	106
Figure 2-52	Remove the front-door assembly (1 of 5)	107
Figure 2-53	Remove the front-door assembly (2 of 5)	108
Figure 2-54	Remove the front-door assembly (3 of 5)	108
Figure 2-55	Remove the front-door assembly (4 of 5)	109
Figure 2-56	Remove the front-door assembly (5 of 5)	109
Figure 2-57	Remove the right-rear cover (1 of 2)	110
Figure 2-58	Remove the right-rear cover (2 of 2)	111
Figure 2-59	Remove the rear cover	112
Figure 2-60	Remove the right-door assembly (1 of 9)	113
Figure 2-61	Remove the right-door assembly (2 of 9)	113
Figure 2-62	Remove the right-door assembly (3 of 9)	114
Figure 2-63	Remove the right-door assembly (4 of 9)	114
Figure 2-64	Remove the right-door assembly (5 of 9)	115
Figure 2-65	Remove the right-door assembly (6 of 9)	115
Figure 2-66	Remove the right-door assembly (7 of 9)	116
Figure 2-67	Remove the right-door assembly (8 of 9)	116
Figure 2-68	Remove the right-door assembly (9 of 9)	117
Figure 2-69	Remove the cassette feed guide (1 of 2)	118
Figure 2-70	Remove the cassette feed (2 of 2)	118

Figure 2-71	Remove the secondary transfer assembly (1 of 3)	119
Figure 2-72	Remove the secondary transfer assembly (2 of 3)	119
Figure 2-73	Remove the secondary transfer assembly (3 of 3)	120
Figure 2-74	Reinstall the secondary transfer assembly	120
Figure 2-75	Remove the separation pad (1 of 6)	121
Figure 2-76	Remove the separation pad (2 of 6)	121
Figure 2-77	Remove the separation pad (3 of 6)	122
Figure 2-78	Remove the separation pad (4 of 6)	122
Figure 2-79	Remove the separation pad (5 of 6)	123
Figure 2-80	Remove the separation pad (6 of 6)	123
Figure 2-81	Remove the RD sensor assembly (1 of 7)	124
Figure 2-82	Remove the RD sensor assembly (2 of 7)	124
Figure 2-83	Remove the RD sensor assembly (3 of 7)	125
Figure 2-84	Remove the RD sensor assembly (4 of 7)	125
Figure 2-85	Remove the RD sensor assembly (5 of 7)	126
Figure 2-86	Remove the RD sensor assembly (6 of 7)	126
Figure 2-87	Remove the RD sensor assembly (7 of 7)	127
Figure 2-88	Remove the registration assembly (1 of 8)	129
Figure 2-89	Remove the registration assembly (2 of 8)	129
Figure 2-90	Remove the registration assembly (3 of 8)	130
Figure 2-91	Remove the registration assembly (4 of 8)	130
Figure 2-92	Remove the registration assembly (5 of 8)	131
Figure 2-93	Remove the registration assembly (6 of 8)	131
Figure 2-94	Remove the registration assembly (7 of 8)	132
Figure 2-95	Remove the registration assembly (8 of 8)	132
Figure 2-96	Remove the residual-toner-feed motor	133
Figure 2-97	Remove the residual-toner duct and feed assembly (1 of 4)	134
Figure 2-98	Remove the residual-toner duct and feed assembly (2 of 4)	135
Figure 2-99	Remove the residual-toner duct and feed assembly (3 of 4)	135
Figure 2-100	Remove residual-toner duct and feed assembly (4 of 4)	136
Figure 2-101	Remove the cartridge fan and environmental sensor (1 of 7)	137
Figure 2-102	Remove the cartridge fan and environmental sensor (2 of 7)	138
Figure 2-103	Remove the cartridge fan and environmental sensor (3 of 7)	138
Figure 2-104	Remove the cartridge fan and environmental sensor (4 of 7)	139
Figure 2-105	Remove the cartridge fan and environmental sensor (5 of 7)	139
Figure 2-106	Remove the cartridge fan and environmental sensor (6 of 7)	140
Figure 2-107	Remove the cartridge fan and environmental sensor (7 of 7)	140
Figure 2-108	Remove the toner-collection sensor and scanner-thermistor assembly (1 of 3)	141
Figure 2-109	Remove the toner-collection sensor and scanner-thermistor assembly (2 of 3)	142
Figure 2-110	Remove the toner-collection sensor and scanner-thermistor assembly (3 of 3)	142
Figure 2-111	Remove the delivery fan (1 of 2)	143
Figure 2-112	Remove the delivery fan (2 of 2)	144
Figure 2-113	Remove the delivery assembly (1 of 7)	145
Figure 2-114	Remove the delivery assembly (2 of 7)	146

Figure 2-115	Remove the delivery assembly (3 of 7)	146
Figure 2-116	Remove the delivery assembly (4 of 7)	147
Figure 2-117	Remove the delivery assembly (5 of 7)	147
Figure 2-118	Remove the delivery assembly (6 of 7)	148
Figure 2-119	Remove the delivery assembly (7 of 7)	148
Figure 2-120	Reinstall the delivery assembly (1 of 4)	149
Figure 2-121	Reinstall the delivery assembly (2 of 4)	149
Figure 2-122	Reinstall the delivery assembly (3 of 4)	150
Figure 2-123	Reinstall the delivery assembly (4 of 4)	150
Figure 2-124	Remove the duplex-drive assembly	151
Figure 2-125	Remove the power-supply fan	152
Figure 2-126	Remove the ICB (1 of 2)	153
Figure 2-127	Remove the ICB (2 of 2)	154
Figure 2-128	Remove the DC controller PCA only (1 of 2)	155
Figure 2-129	Remove the DC controller PCA only (2 of 2)	156
Figure 2-130	Remove the low-voltage power supply (1 of 6)	157
Figure 2-131	Remove the low-voltage power supply (1 of 6)	158
Figure 2-132	Remove the low-voltage power supply (2 of 6)	158
Figure 2-133	Remove the low-voltage power supply (3 of 6)	159
Figure 2-134	Remove the low-voltage power supply (4 of 6)	159
Figure 2-135	Remove the low-voltage power supply (5 of 6)	160
Figure 2-136	Remove the low-voltage power supply (6 of 6)	160
Figure 2-137	Remove the DC controller PCA and tray (1 of 3)	161
Figure 2-138	Remove the DC controller PCA and tray (2 of 3)	162
Figure 2-139	Remove the DC controller PCA and tray (3 of 3)	162
Figure 2-140	Remove the high-voltage power supply lower (1 of 7)	163
Figure 2-141	Remove the high-voltage power supply lower (2 of 7)	164
Figure 2-142	Remove the high-voltage power supply lower (3 of 7)	165
Figure 2-143	Remove the high-voltage power supply lower (4 of 7)	165
Figure 2-144	Remove the high-voltage power supply lower (5 of 7)	166
Figure 2-145	Remove the high-voltage power supply lower (6 of 7)	166
Figure 2-146	Remove the high-voltage power supply lower (7 of 7)	167
Figure 2-147	Reinstall the high-voltage power supply lower	167
Figure 2-148	Remove the developing-disengagement motor	168
Figure 2-149	Remove the exhaust fan and fan duct (1 of 3)	169
Figure 2-150	Remove the exhaust fan and fan duct (2 of 3)	170
Figure 2-151	Remove the exhaust fan and fan duct (3 of 3)	170
Figure 2-152	Reinstall the exhaust fan and fan duct	171
Figure 2-153	Remove the pickup motor	172
Figure 2-154	Remove the lifter-drive assembly (1 of 2)	173
Figure 2-155	Remove the lifter-drive assembly (2 of 3)	174
Figure 2-156	Remove the lifter-drive assembly (3 of 3)	174
Figure 2-157	Remove the lifter base assembly (1 of 2)	175
Figure 2-158	Remove the lifter base assembly (2 of 2)	176

Figure 2-159	Reinstall the lifter base assembly (1 of 2)	176
Figure 2-160	Reinstall the lifter base assembly (2 of 2)	177
Figure 2-161	Remove the tray-pickup drive assembly (1 of 3)	178
Figure 2-162	Remove the tray-pickup drive assembly (2 of 3)	179
Figure 2-163	Remove the tray-pickup drive assembly (3 of 3)	179
Figure 2-164	Remove the tray-pickup assembly (1 of 11)	180
Figure 2-165	Remove the tray-pickup assembly (2 of 11)	181
Figure 2-166	Remove the tray-pickup assembly (3 of 11)	181
Figure 2-167	Remove the tray-pickup assembly (4 of 11)	182
Figure 2-168	Remove the tray-pickup assembly (5 of 11)	182
Figure 2-169	Remove the tray-pickup assembly (6 of 11)	183
Figure 2-170	Remove the tray-pickup assembly (7 of 11)	183
Figure 2-171	Remove the tray-pickup assembly (8 of 11)	184
Figure 2-172	Remove the tray-pickup assembly (9 of 11)	184
Figure 2-173	Remove the tray-pickup assembly (10 of 11)	185
Figure 2-174	Remove the tray-pickup assembly (11 of 11)	185
Figure 2-175	Remove the laser/scanner assembly (Y/M) (1 of 5)	187
Figure 2-176	Remove the laser/scanner assembly (Y/M) (2 of 5)	187
Figure 2-177	Remove the laser/scanner assembly (Y/M) (3 of 5)	188
Figure 2-178	Remove the laser/scanner assembly (Y/M) (4 of 5)	189
Figure 2-179	Remove the laser/scanner assembly (Y/M) (5 of 5)	189
Figure 2-180	Remove the laser/scanner assembly (C/Bk) (1 of 5)	191
Figure 2-181	Remove the laser/scanner assembly (C/Bk) (2 of 5)	191
Figure 2-182	Remove the laser/scanner assembly (C/Bk) (3 of 5)	192
Figure 2-183	Remove the laser/scanner assembly (C/Bk) (4 of 5)	192
Figure 2-184	Remove the laser/scanner assembly (C/Bk) (5 of 5)	193
Figure 2-185	Reinstall the PGC actuators (1 of 5)	193
Figure 2-186	Reinstall the PGC actuators (2 of 5)	194
Figure 2-187	Reinstall the PGC actuators (3 of 5)	194
Figure 2-188	Reinstall the PGC actuators (4 of 5)	195
Figure 2-189	Reinstall the PGC actuators (5 of 5)	195
Figure 2-190	Remove the high-voltage power supply upper (1 of 2)	196
Figure 2-191	Remove the high-voltage power supply upper (2 of 2)	197
Figure 2-192	Reinstall the high-voltage power supply upper	198
Figure 2-193	Remove the yellow, magenta, cyan, and black drum motors	199
Figure 2-194	Remove the fuser motor	201
Figure 2-195	Remove the ITB motor (1 of 2)	202
Figure 2-196	Remove the main-drive assembly (1 of 6)	204
Figure 2-197	Remove the main-drive assembly (2 of 6)	204
Figure 2-198	Remove the main-drive assembly (3 of 6)	205
Figure 2-199	Remove the main-drive assembly (4 of 6)	205
Figure 2-200	Remove the main-drive assembly (5 of 6)	206
Figure 2-201	Remove the main-drive assembly (6 of 6)	206
Figure 2-202	Reinstall the main-drive assembly (1 of 7)	207

Figure 2-203	Reinstall the main-drive assembly (2 of 7)	207
Figure 2-204	Reinstall the main-drive assembly (3 of 7)	208
Figure 2-205	Reinstall the main-drive assembly (4 of 7)	209
Figure 2-206	Reinstall the main-drive assembly (5 of 7)	209
Figure 2-207	Reinstall the main-drive assembly (6 of 7)	210
Figure 2-208	Reinstall the main-drive assembly (7 of 7)	210
Figure 2-209	Remove the fuser-drive assembly (1 of 7)	212
Figure 2-210	Remove the fuser-drive assembly (2 of 7)	212
Figure 2-211	Remove the fuser-drive assembly (3 of 7)	213
Figure 2-212	Remove the fuser-drive assembly (4 of 7)	213
Figure 2-213	Remove the fuser-drive assembly (5 of 7)	214
Figure 2-214	Remove the fuser-drive assembly (6 of 7)	214
Figure 2-215	Remove the fuser-drive assembly (7 of 7)	215
Figure 2-216	Reinstall the fuser-drive assembly	215
Figure 2-217	Remove the front door (optional paper feeder) (1 of 2)	216
Figure 2-218	Remove the front door (optional paper feeder) (2 of 2)	217
Figure 2-219	Remove the rear cover (optional paper feeder)	218
Figure 2-220	Remove the right-front cover (optional paper feeder)	219
Figure 2-221	Remove the right door (optional paper feeder) (1 of 3)	220
Figure 2-222	Remove the right door (optional paper feeder) (2 of 3)	220
Figure 2-223	Remove the right door (optional paper feeder) (3 of 3)	221
Figure 2-224	Remove the left cover (optional paper feeder) (1 of 3)	222
Figure 2-225	Remove the left cover (optional paper feeder) (2 of 3)	223
Figure 2-226	Remove the left cover (optional paper feeder) (3 of 3)	223
Figure 2-227	Remove the right cover (optional paper feeder)	224
Figure 2-228	Remove the rear-right cover (optional paper feeder)	225
Figure 2-229	Remove the pickup assembly (optional paper feeder) (1 of 5)	226
Figure 2-230	Remove the pickup assembly (optional paper feeder) (2 of 5)	227
Figure 2-231	Remove the pickup assembly (optional paper feeder) (3 of 5)	227
Figure 2-232	Remove the pickup assembly (optional paper feeder) (4 of 5)	228
Figure 2-233	Remove the pickup assembly (optional paper feeder) (5 of 5)	228
Figure 2-234	Remove the lifter assembly (optional paper feeder) (1 of 2)	229
Figure 2-235	Remove the lifter assembly (optional paper feeder) (2 of 2)	229
Figure 2-236	Remove the lifter-drive assembly (optional paper feeder) (1 of 2)	230
Figure 2-237	Remove the lifter-drive assembly (optional paper feeder) (2 of 2)	230
Figure 2-238	Remove the pickup motor assembly (optional paper feeder) (1 of 2)	231
Figure 2-239	Remove the pickup motor assembly (optional paper feeder) (2 of 2)	231
Figure 2-240	Remove the controller PCA (optional paper feeder) (1 of 2)	232
Figure 2-241	Remove the controller PCA (optional paper feeder) (2 of 2)	232
Figure 3-1	Diagnostic test (1 of 2)	243
Figure 3-2	Diagnostic test (2 of 2)	244
Figure 3-3	Engine-test button	245
Figure 3-4	Test the TOP sensor (1 of 2)	247
Figure 3-5	Test the TOP sensor (2 of 2)	247

Figure 3-6 Test the loop sensors	248
Figure 3-7 Test the fuser delivery sensor (1 of 2)	249
Figure 3-8 Test the fuser delivery sensor (2 of 2)	249
Figure 3-9 Test the duplex re-pickup sensor	250
Figure 3-10 Test the output-bin-full sensor	251
Figure 3-11 Test the fuser pressure-release sensor	253
Figure 3-12 Test the primary transfer-roller-disengagement sensor (1 of 4)	254
Figure 3-13 Test the primary transfer-roller-disengagement sensor (2 of 4)	254
Figure 3-14 Test the primary transfer-roller-disengagement sensor (3 of 4)	255
Figure 3-15 Test the primary transfer-roller-disengagement sensor (4 of 4)	255
Figure 3-16 Media sensor	256
Figure 3-17 Test the front-door switch	257
Figure 3-18 Test the right door switch	258
Figure 3-19 Test the Tray 1 media-present sensor	261
Figure 3-20 Test the tray 2 paper-present sensor	262
Figure 3-21 Tray 2 paper surface 1 and 2	263
Figure 3-22 Test the Tray 2 paper size switches	264
Figure 3-23 Test the Tray 3 feed sensor	265
Figure 3-24 Test the new ITB sensor	271
Figure 3-25 Test the new ITB sensor	271
Figure 3-26 Test the right door switch	272
Figure 3-27 Product cross section	277
Figure 3-28 Optional paper feeder (1 x 500-sheet)	278
Figure 3-29 Optional paper feeder (3 x 500-sheet)	279
Figure 3-30 Formatter PCA	280
Figure 3-31 DC controller connector locations	281
Figure 3-32 Controller PCA connectors	283
Figure 3-33 External component locations	284
Figure 3-34 Major component locations (1 of 3)	285
Figure 3-35 Major component locations (2 of 3)	286
Figure 3-36 Major component locations (3 of 3)	287
Figure 3-37 Motors, fans, and rollers component locations	288
Figure 3-38 PCA component locations	289
Figure 3-39 Optional paper feeder (1 x 500-sheet) component locations (1 of 2)	290
Figure 3-40 Optional paper feeder (1 x 500-sheet) component locations (2 of 2)	291
Figure 3-41 Optional paper feeder (3 x 500-sheet) component locations (1 of 2)	292
Figure 3-42 Optional paper feeder (3 x 500-sheet) component locations (2 of 2)	293
Figure 3-43 General timing chart	294
Figure 3-44 General circuit diagram (1 of 2)	295
Figure 3-45 General circuit diagram (1 of 2)	295
Figure 3-46 Paper feeder circuit diagram (1 X 500-sheet)	296
Figure 3-47 Paper feeder circuit diagram (3 X 500-sheet)	297
Figure 3-48 Print-quality troubleshooting procedure	302
Figure 3-49 Yellow print-quality troubleshooting page	303

Sample of manual. Download All 558 pages at:

<https://www.arepairmanual.com/downloads/2009-hp-color-laserjet-enterprise-cp4020cp4520-series-printers-service-repair-v>