

Product: 2010 HP LaserJet Professional P1560 and P1600 Series Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2010-hp-laserjet-professional-p1560-and-p1600-series-printer-service-repair-workshop-manual/>



LASERJET PROFESSIONAL P1560 and P1600 SERIES PRINTER

Service Manual



www.hp.com/support/ljp1560series
www.hp.com/support/ljp1600series

Sample of manual. Download All 226 pages at:

<https://www.arepairmanual.com/downloads/2010-hp-laserjet-professional-p1560-and-p1600-series-printer-service-repair-workshop-manual/>

Product: 2010 HP LaserJet Professional P1560 and P1600 Series Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2010-hp-laserjet-professional-p1560-and-p1600-series-printer-service-repair-workshop-manual/>

Sample of manual. Download All 226 pages at:
<https://www.arepairmanual.com/downloads/2010-hp-laserjet-professional-p1560-and-p1600-series-printer-service-repair-workshop-manual/>



HP LaserJet Professional P1560 and P1600 Series Printer

Service Manual

Copyright and License

© 2010 Copyright Hewlett-Packard
Development Company, L.P.

Reproduction, adaptation, or translation
without prior written permission is prohibited,
except as allowed under the copyright laws.

The information contained herein is subject
to change without notice.

The only warranties for HP products and
services are set forth in the express warranty
statements accompanying such products
and services. Nothing herein should be
construed as constituting an additional
warranty. HP shall not be liable for technical
or editorial errors or omissions contained
herein.

Part number: CE663-90939

Edition 1, 4/2010

Trademark Credits

Microsoft®, Windows®, Windows® XP, and
Windows Vista® are U.S. registered
trademarks of Microsoft Corporation.

Conventions used in this guide

 **TIP:** Tips provide helpful hints or shortcuts.

 **NOTE:** Notes provide important information to explain a concept or to complete a task.

 **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.

 **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Theory of operation	1
Basic operation	2
Major product systems	2
Product block diagram	2
Sequence of operation	3
Normal sequence of operation	3
Formatter-control system	4
Sleep mode	4
Input/output	4
CPU	4
Memory	4
Firmware	5
Memory use	5
PJM overview	5
LEDM overview	5
ACL overview	5
Control panel	6
Engine-control system	7
Motors, fans, clutches, solenoids, switches, and sensors	8
DC controller operations	13
Fuser-control circuit	15
Fuser failure detection	16
Fuser temperature control	17
Fuser protective function	18
Pressure roller cleaning	18
Low-voltage power supply	19
Overcurrent/overvoltage protection	20
High-voltage power supply	21
Laser/scanner system	22
Laser failure detection	23
Image-formation system	24
Electrophotographic process	24
Image formation process	26
Latent-image formation stage	27

Primary charging	27
Laser beam exposure	27
Developing stage	28
Print cartridge	28
Transfer stage	29
Fusing stage	29
Cleaning stage	30
Pickup, feed, and delivery system	31
Photo sensors and switches	32
Main-input tray or priority input slot	34
Jam detection	34

2 Removal and replacement 35

Introduction	36
Removal and replacement strategy	36
Electrostatic discharge	37
Required tools	37
Before performing service	37
After performing service	38
Post-service test	38
Print-quality test	38
Parts removal order	39
Pickup roller	40
Separation pad	41
Transfer roller	42
Covers	43
Main-input tray	43
Output bin tray extension	44
Left cover, simplex product	45
Remove the left cover, simplex product	45
Left cover, duplex product	47
Remove the left cover, duplex product	47
Right cover, simplex product	50
Remove the right cover, simplex product	50
Right cover, duplex product	52
Remove the right cover, duplex product	52
Duplex door, duplex product	55
Duplex frame, duplex product	56
Remove the duplex frame	56
Cartridge door	57
Control panel	59
Front cover	61
Remove the front cover	61

Rear cover, simplex product	63
Remove the rear cover, simplex product	63
Face-down cover	65
Remove the face-down cover	65
Main assemblies	67
Formatter PCA	67
Laser/scanner assembly	68
Remove the laser/scanner assembly	68
Reinstall the laser/scanner assembly	71
Pickup assembly	72
Remove the pickup assembly	72
Reinstall the pickup assembly	78
Fuser	80
Remove the fuser	80
Reinstall the fuser	86
Main motor	87
Remove the main motor	87
Reinstall the main-motor drive belt	92
Pickup solenoid	93
Remove the pickup solenoid	93
Engine controller PCA	97
Remove the engine controller PCA	97
Reinstall the engine controller PCA	102
Duplex-reverse solenoid, duplex product	104
Remove the duplex-reverse solenoid	104
Main fan, duplex product	107
Remove the main fan	107
Reinstall the main fan	109
Duplex-connector PCA, duplex product	110
Remove the duplex-connector PCA	110
3 Solve problems	113
Solve problems checklist	114
Troubleshooting process	116
Determine the problem source	116
Power subsystem	117
Power-on checks	117
Tools for troubleshooting	118
Individual component diagnostics	118
Engine diagnostics	118
Engine-test button	118
Components tests	119
Drum rotation functional check	119

Clean the exterior	154
Solve performance problems	155
Solve connectivity problems	156
Solve direct-connect problems	156
Solve network problems	156
Service mode functions	158
Product resets	158
Product updates	158
Firmware updates	158
4 Parts and diagrams	159
Order parts by authorized service providers	160
Order replacement parts	160
Related documentation and software	160
Supplies part numbers	160
Customer self repair parts	161
Service parts	161
Whole-unit replacement part numbers	161
How to use the parts lists and diagrams	162
Assembly locations	163
Base product (no optional trays or accessories)	163
Covers	164
Simplex model	164
Duplex model	166
Internal assemblies	168
Internal assemblies (1 of 3)	168
Internal assemblies (2 of 3)	170
Internal assemblies (3 of 3)	172
PCAs	174
Alphabetical parts list	176
Numerical parts list	179
Appendix A Service and support	183
Hewlett-Packard limited warranty statement	184
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	185
End User License Agreement	186
Customer self-repair warranty service	188
Customer support	188
Repack the product	189
Service information form	190
Appendix B Specifications	191
Physical specifications	192

Power consumption	192
Acoustic specifications	192
Environmental specifications	193
Appendix C Regulatory information	195
FCC regulations	196
Declaration of conformity	197
Certificate of Volatility	198
Safety statements	200
Laser safety	200
Canadian DOC regulations	200
VCCI statement (Japan)	200
Power cord instructions	200
Power cord statement (Japan)	200
EMC statement (Korea)	200
Laser statement for Finland	201
GS statement (Germany)	201
Substances Table (China)	202
Restriction on Hazardous Substances statement (Turkey)	202
Index	203

List of tables

Table 1-1	Sequence of operation	3
Table 1-2	Motors	8
Table 1-3	Fans	9
Table 1-4	Solenoids and clutches	10
Table 1-5	Switches	11
Table 1-6	Sensors	11
Table 1-7	DC controller controlled components	13
Table 1-8	Photo sensors, motor, and solenoid	32
Table 3-1	Basic problem solving	114
Table 3-2	Status-light legend	128
Table 3-3	Control-panel lights	129
Table 4-1	Order parts, accessories, and supplies	160
Table 4-2	Related documentation and software	160
Table 4-3	Supplies part numbers	160
Table 4-4	Customer replaceable units (CRU) kit part numbers	161
Table 4-5	Whole-unit replacement part numbers	161
Table 4-6	Base product	163
Table 4-7	Simplex model	165
Table 4-8	Duplex model	167
Table 4-9	Internal assemblies (1 of 3)	169
Table 4-10	Internal assemblies (2 of 3)	171
Table 4-11	Internal assemblies (3 of 3)	173
Table 4-12	PCAs	175
Table 4-13	Alphabetical parts list	176
Table 4-14	Numerical parts list	179
Table B-1	Physical specifications ¹	192
Table B-2	HP LaserJet Professional P1560 and P1600 Printer series (average in watts) ¹²³	192
Table B-3	HP LaserJet Professional P1560 and P1600 Printer series ¹²	192
Table B-4	Environmental specifications	193

List of figures

Figure 1-1	Product block diagram	2
Figure 1-2	Engine-control system	7
Figure 1-3	Motors	8
Figure 1-4	Fans	9
Figure 1-5	Solenoids and clutches	10
Figure 1-6	Switches	11
Figure 1-7	Sensors	11
Figure 1-8	DC controller block diagram	13
Figure 1-9	Fuser control circuit	15
Figure 1-10	Fuser-heater control circuit	17
Figure 1-11	Low-voltage power supply (LVPS)	19
Figure 1-12	High-voltage power supply	21
Figure 1-13	Laser/scanner system	22
Figure 1-14	Electrophotographic process block diagram (1 of 2)	24
Figure 1-15	Electrophotographic process block diagram (2 of 2)	25
Figure 1-16	Image formation process	26
Figure 1-17	Primary charging	27
Figure 1-18	Laser beam exposure	27
Figure 1-19	Print cartridge	28
Figure 1-20	Transfer	29
Figure 1-21	Separation	29
Figure 1-22	Fusing	30
Figure 1-23	Drum cleaning	30
Figure 1-24	Pickup, feed, and delivery system block diagram	31
Figure 1-25	Photo sensors, motor, and solenoid	32
Figure 2-1	Phillips and pozidrive screwdriver comparison	37
Figure 2-2	Parts removal order	39
Figure 2-3	Remove the pickup roller (1 of 2)	40
Figure 2-4	Remove the pickup roller (2 of 2)	40
Figure 2-5	Remove the separation pad assembly	41
Figure 2-6	Remove the transfer roller	42
Figure 2-7	Remove the tray	43
Figure 2-8	Remove the output bin tray extension	44
Figure 2-9	Remove the left cover, simplex product (1 of 4)	45

Figure 2-10	Remove the left cover, simplex product (2 of 4)	45
Figure 2-11	Remove the left cover, simplex product (3 of 4)	46
Figure 2-12	Remove the left cover, simplex product (4 of 4)	46
Figure 2-13	Remove the left cover, duplex product (1 of 5)	47
Figure 2-14	Remove the left cover, duplex product (2 of 5)	47
Figure 2-15	Remove the left cover, duplex product (3 of 5)	48
Figure 2-16	Remove the left cover, duplex product (4 of 5)	48
Figure 2-17	Remove the left cover, duplex product (5 of 5)	49
Figure 2-18	Remove the right cover, simplex product (1 of 4)	50
Figure 2-19	Remove the right cover, simplex product (2 of 4)	50
Figure 2-20	Remove the right cover, simplex product (4 of 4)	51
Figure 2-21	Remove the right cover, duplex product (1 of 5)	52
Figure 2-22	Remove the right cover, duplex product (2 of 5)	52
Figure 2-23	Remove the right cover, duplex product (3 of 5)	53
Figure 2-24	Remove the right cover, duplex product (4 of 5)	53
Figure 2-25	Remove the right cover, duplex product (5 of 5)	54
Figure 2-26	Remove the duplex door, duplex product	55
Figure 2-27	Remove the duplex frame (1 of 2)	56
Figure 2-28	Remove the duplex frame (2 of 2)	56
Figure 2-29	Remove the cartridge door (1 of 3)	57
Figure 2-30	Remove the cartridge door (2 of 3)	57
Figure 2-31	Remove the cartridge door (3 of 3)	58
Figure 2-32	Remove the control panel (1 of 3)	59
Figure 2-33	Remove the control panel (2 of 3)	59
Figure 2-34	Remove the control panel (3 of 3)	60
Figure 2-35	Remove the front cover (1 of 3)	61
Figure 2-36	Remove the front cover (2 of 3)	62
Figure 2-37	Remove the front cover (3 of 3)	62
Figure 2-38	Remove the rear cover, simplex product (1 of 3)	63
Figure 2-39	Remove the rear cover, simplex product (2 of 3)	64
Figure 2-40	Remove the rear cover, simplex product (2 of 3)	64
Figure 2-41	Remove the face-down cover (1 of 2)	65
Figure 2-42	Remove the face-down cover (2 of 2)	66
Figure 2-43	Remove the formatter PCA (1 of 2)	67
Figure 2-44	Remove the formatter PCA (2 of 2)	67
Figure 2-45	Remove the laser/scanner assembly (1 of 5)	68
Figure 2-46	Remove the laser/scanner assembly (2 of 5)	69
Figure 2-47	Remove the laser/scanner assembly (3 of 5)	69
Figure 2-48	Remove the laser/scanner assembly (4 of 5)	70
Figure 2-49	Remove the laser/scanner assembly (5 of 5)	70
Figure 2-50	Reinstall the laser/scanner assembly	71
Figure 2-51	Remove the pickup assembly (1 of 10)	72
Figure 2-52	Remove the pickup assembly (2 of 10)	73
Figure 2-53	Remove the pickup assembly (3 of 10)	73

Figure 2-54	Remove the pickup assembly (4 of 10)	74
Figure 2-55	Remove the pickup assembly (5 of 10)	74
Figure 2-56	Remove the pickup assembly (6 of 10)	75
Figure 2-57	Remove the pickup assembly (7 of 10)	75
Figure 2-58	Remove the pickup assembly (8 of 10)	76
Figure 2-59	Remove the pickup assembly (9 of 10)	76
Figure 2-60	Remove the pickup assembly (10 of 10)	77
Figure 2-61	Reinstall the pickup assembly (1 of 4; correct ground spring position)	78
Figure 2-62	Reinstall the pickup assembly (2 of 4; incorrect ground spring position)	78
Figure 2-63	Reinstall the pickup assembly (3 of 4; lift plate in raised position)	79
Figure 2-64	Reinstall the pickup assembly (4 of 4; lift plate in lowered position)	79
Figure 2-65	Remove the fuser (1 of 10)	80
Figure 2-66	Remove the fuser (2 of 10)	81
Figure 2-67	Remove the fuser (3 of 10)	81
Figure 2-68	Remove the fuser (4 of 10)	82
Figure 2-69	Remove the fuser (5 of 10)	82
Figure 2-70	Remove the fuser (6 of 10)	83
Figure 2-71	Remove the fuser (7 of 10)	83
Figure 2-72	Remove the fuser (8 of 10)	84
Figure 2-73	Remove the fuser (9 of 10)	84
Figure 2-74	Remove the fuser (10 of 10)	85
Figure 2-75	Reinstall the fuser; correct wire harness installation	86
Figure 2-76	Reinstall the fuser; incorrect wire harness installation	86
Figure 2-77	Remove the main motor (1 of 9)	87
Figure 2-78	Remove the main motor (2 of 9)	88
Figure 2-79	Remove the main motor (3 of 9)	88
Figure 2-80	Remove the main motor (4 of 9)	89
Figure 2-81	Remove the main motor (5 of 9)	89
Figure 2-82	Remove the main motor (6 of 9)	90
Figure 2-83	Remove the main motor (7 of 9)	90
Figure 2-84	Remove the main motor (8 of 9)	91
Figure 2-85	Remove the main motor (9 of 9)	91
Figure 2-86	Main-motor drive belt: correctly installed	92
Figure 2-87	Main-motor drive belt: incorrectly installed	92
Figure 2-88	Remove the pickup solenoid (1 of 7)	93
Figure 2-89	Remove the pickup solenoid (2 of 7)	94
Figure 2-90	Remove the pickup solenoid (3 of 7)	94
Figure 2-91	Remove the pickup solenoid (4 of 7)	95
Figure 2-92	Remove the solenoid (5 of 7)	95
Figure 2-93	Remove the pickup solenoid (6 of 7)	96
Figure 2-94	Remove the pickup solenoid (7 of 7)	96
Figure 2-95	Remove the engine controller PCA (1 of 9)	97
Figure 2-96	Remove the engine controller PCA (2 of 9)	98
Figure 2-97	Remove the engine controller PCA (3 of 9)	98

Figure 2-98	Remove the engine controller PCA (4 of 9)	99
Figure 2-99	Remove the engine controller PCA (5 of 9)	99
Figure 2-100	Remove the engine controller PCA (6 of 9)	100
Figure 2-101	Remove the engine controller PCA (7 of 9)	100
Figure 2-102	Remove the engine controller PCA (8 of 9)	101
Figure 2-103	Remove the engine controller PCA (10 of 9)	101
Figure 2-104	Reinstall the engine controller PCA (1 of 4)	102
Figure 2-105	Reinstall the engine controller PCA (2 of 4)	102
Figure 2-106	Reinstall the engine controller PCA (3 of 4)	103
Figure 2-107	Reinstall the engine controller PCA (4 of 4)	103
Figure 2-108	Remove the duplex-reverse solenoid (1 of 5)	104
Figure 2-109	Remove the duplex-reverse solenoid (2 of 5)	105
Figure 2-110	Remove the duplex-reverse solenoid (3 of 5)	105
Figure 2-111	Remove the duplex-reverse solenoid (4 of 5)	106
Figure 2-112	Remove the duplex-reverse solenoid (5 of 5)	106
Figure 2-113	Remove the main fan (1 of 4)	107
Figure 2-114	Remove the main fan (2 of 4)	108
Figure 2-115	Remove the main fan (3 of 4)	108
Figure 2-116	Remove the main fan (4 of 4)	109
Figure 2-117	Reinstall the main fan	109
Figure 2-118	Remove the duplex-connector PCA (1 of 5)	110
Figure 2-119	Remove the duplex-connector PCA (2 of 5)	111
Figure 2-120	Remove the duplex-connector PCA (3 of 5)	111
Figure 2-121	Remove the duplex-connector PCA (4 of 5)	112
Figure 2-122	Remove the duplex-connector PCA (5 of 5)	112
Figure 3-1	Sample engine test page	118
Figure 3-2	Plug/jack locations	120
Figure 3-3	Engine controller PCA connectors	121
Figure 3-4	External view	122
Figure 3-5	Cross section view	123
Figure 3-6	General timing diagram	125
Figure 3-7	Circuit diagram	126
Figure 4-1	Base product (no optional trays or accessories)	163
Figure 4-2	Simplex model	164
Figure 4-3	Duplex model	166
Figure 4-4	Internal assemblies (1 of 3)	168
Figure 4-5	Internal assemblies (2 of 3)	170
Figure 4-6	Internal assemblies (3 of 3)	172
Figure 4-7	PCAs	174

1 Theory of operation

- [Basic operation](#)
- [Formatter-control system](#)
- [Engine-control system](#)
- [Image-formation system](#)
- [Pickup, feed, and delivery system](#)
- [Main-input tray or priority input slot](#)

Basic operation


Major product systems

The product contains the following major systems:

- Engine-control system
- Laser/scanner system
- Image-formation system
- Pickup-and-feed system

Product block diagram

Figure 1-1 Product block diagram

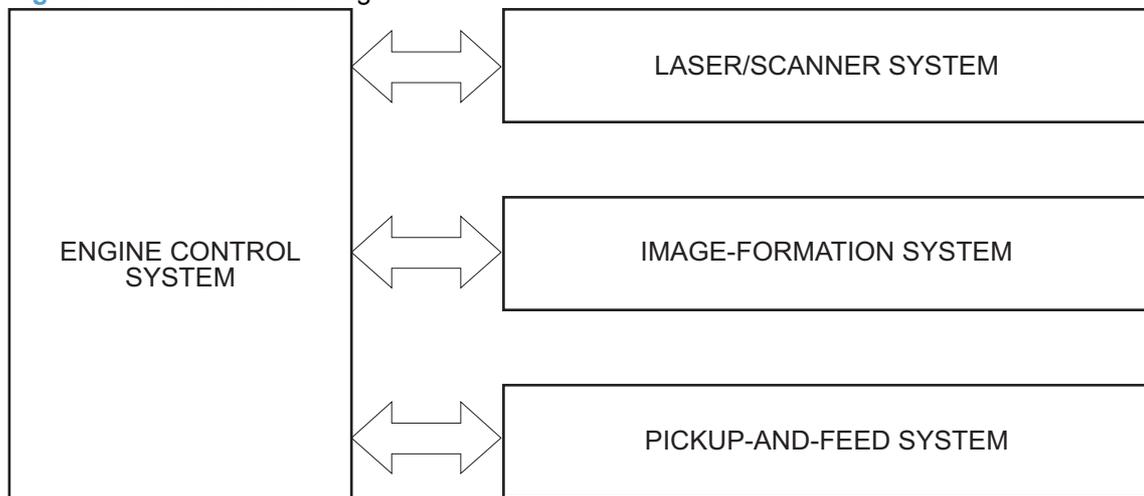

Sequence of operation

The DC controller in the engine-control system controls the operational sequences of the product. The table below describes durations and operations for each period of a print operation from when the product is turned on until the motor stops rotating.

Normal sequence of operation

Table 1-1 Sequence of operation

Name	Timing	Purpose
WAIT	From the time the power switch is turned on, the door is closed or the product exits Sleep mode until the product gets ready for a print operation.	Brings the product to ready state. The product performs the following during the operations: <ul style="list-style-type: none">• Detects the print cartridge• Heats the fuser film in the fuser• Rotates, and the stops, the main motor
STBY (standby)	From the end of the WAIT or LSTR period until either a print command is sent or the power switch is turned off.	Maintains the product in printable condition. The product performs the following during the operation: <ul style="list-style-type: none">• Enters Auto-Off mode if Auto-Off command is received
INTR (initial rotation)	From the time a print command is received until the paper is picked up.	The product performs the following during the operations: <ul style="list-style-type: none">• Drives the main motor• Activates the high-voltage power supply• Activates the laser/scanner• Warms the fuser heater
PRINT	From the end of the INTR period until the last sheet completes the fuser operation.	Forms the image on the photosensitive drum based on the VIDEO signals from the formatter. Transfers and fuses the toner image to the paper.
LSTR (last rotation)	From the end of the PRINT period until the main motor stops rotating.	Moves the last printed sheet out of the product. The product performs the following during the operations: <ul style="list-style-type: none">• Stops the main motor• Deactivates the high-voltage power supply• Deactivates the laser/scanner• Deactivates the fuser heater <p>The product enters the INTR period as the LSTR period is completed, if the formatter sends another print command.</p>

Formatter-control system

The formatter is responsible for the following procedures:

- Controlling sleep mode
- Receiving and processing print data from the various product interfaces
- Monitoring control-panel functions and relaying product-status information (through the control panel and the network or bidirectional interface)
- Developing and coordinating data placement and timing with the DC controller PCA
- Storing font information
- Communicating with the host computer through the network or the bidirectional interface

The formatter receives a print job from the network or bidirectional interface and separates it into image information and instructions that control the printing process. The DC controller PCA synchronizes the image-formation system with the paper-input and -output systems, and then signals the formatter to send the print-image data.

Sleep mode

 **NOTE:** This product uses an Auto-Off feature for sleep mode.

After a user-specified time, the Auto-Off feature automatically conserves electricity by substantially reducing power consumption when the product is not printing. After a user-specified time, the product automatically reduces its power consumption (Auto-Off). The product returns to the ready state when a button is pressed, a print job is received, or a door is opened. When the product is in Auto-Off mode, all of the control-panel LEDs and the power button backlight LED are off.

 **NOTE:** Although the product lights are off in Auto-Off mode, the product functions normally when it receives a print job.

Input/output

The product receives print data primarily from the following:

- Hi-Speed USB 2.0 port
- 802.11b/g wireless networking (wireless models only)

CPU

The formatter incorporates a 400 MHz Helium processor.

Memory

The random access memory (RAM) on the formatter PCA contains the page, I/O buffers, and the font storage area. RAM stores printing and font information received from the host system, and can also serve to temporarily store a full page of print-image data before the data is sent to the print engine.

Firmware

- HP LaserJet Professional P1560 Printer series
 - The product has 8 MB of Synchronous DRAM, which is used for run-time firmware imaging and specific print job information for the print job.
- HP LaserJet Professional P1600 Printer series
 - The product has 32 MB of Synchronous DRAM, which is used for run-time firmware imaging and specific print job information for the print job.

Memory use

- HP LaserJet Professional P1560 Printer series
 - The product has a 2 KB EEPROM and 64 MB of NAND Flash Memory, which is used for product configuration information and printer driver firmware.
- HP LaserJet Professional P1600 Printer series
 - The product has a 8 KB EEPROM and 64 MB of NAND Flash Memory, which is used for product configuration information and printer driver firmware.

PJL overview

The printer job language (PJL) is an integral part of configuration, in addition to the standard printer command language (PCL). With standard cabling, the product can use PJL to perform a variety of functions such as these:

- Two-way communication with the host computer through a network connection or a USB connection. The product can inform the host about such things as the control-panel settings, and the control-panel settings can be changed from the host.
- Dynamic I/O switching. The product uses this switching to be configured with a host on each I/O. The product can receive data from more than one I/O simultaneously, until the I/O buffer is full. This can occur even when the product is offline.
- Context-sensitive switching. The product can automatically recognize the personality (PS or PCL) of each job and configure itself to serve that personality.
- Isolation of print environment settings from one print job to the next. For example, if a print job is sent to the product in landscape mode, the subsequent print jobs print in landscape mode only if they are formatted for landscape printing.

LEDM overview

 **NOTE:** HP LaserJet Professional P1600 Printer series

The low-end data model (LEDM) provides one consistent data representation method and defines the dynamic and capabilities tickets shared between clients and devices, as well as the access protocol, event, security, and discovery methods.

ACL overview

The advanced control language (ACL) is a language that supports product control and firmware downloads in printers that support both PJL/PCL and host-based printing. Each sequence of ACL

commands must be preceded by a unified exit command (UEL) and an @PJL ENTER LANGUAGE=ACL command. The ACL sequence is always followed by a UEL. Any number of commands can be placed between the UELs. The only exception to these rules is the download command. If a firmware download is done, the download command must be the last command in the sequence. It will not be followed by a UEL.

The firmware searches for the UEL sequence when parsing commands. However, while downloading binary data such as host-based code or NVRAM data the firmware suspends UEL parsing. To handle hosts that “disappear” during binary sequences, the firmware times out all ACL command sessions. If a timeout occurs during a non-download command sequence, it is treated as the receipt of a UEL. If a timeout occurs during firmware download the product resets.

Control panel

The formatter sends and receives product status and command data to and from the control-panel PCA.


Engine-control system

The engine-control system coordinates all product functions, according to commands that the formatter sends. The engine-control system drives the laser/scanner system, the image-formation system, and the pickup/feed/delivery system.

The engine control system contains the following major components:

- Engine-control unit (ECU)
 - DC controller
 - Low-voltage power supply
- High-voltage power supply
- Fuser control

Figure 1-2 Engine-control system

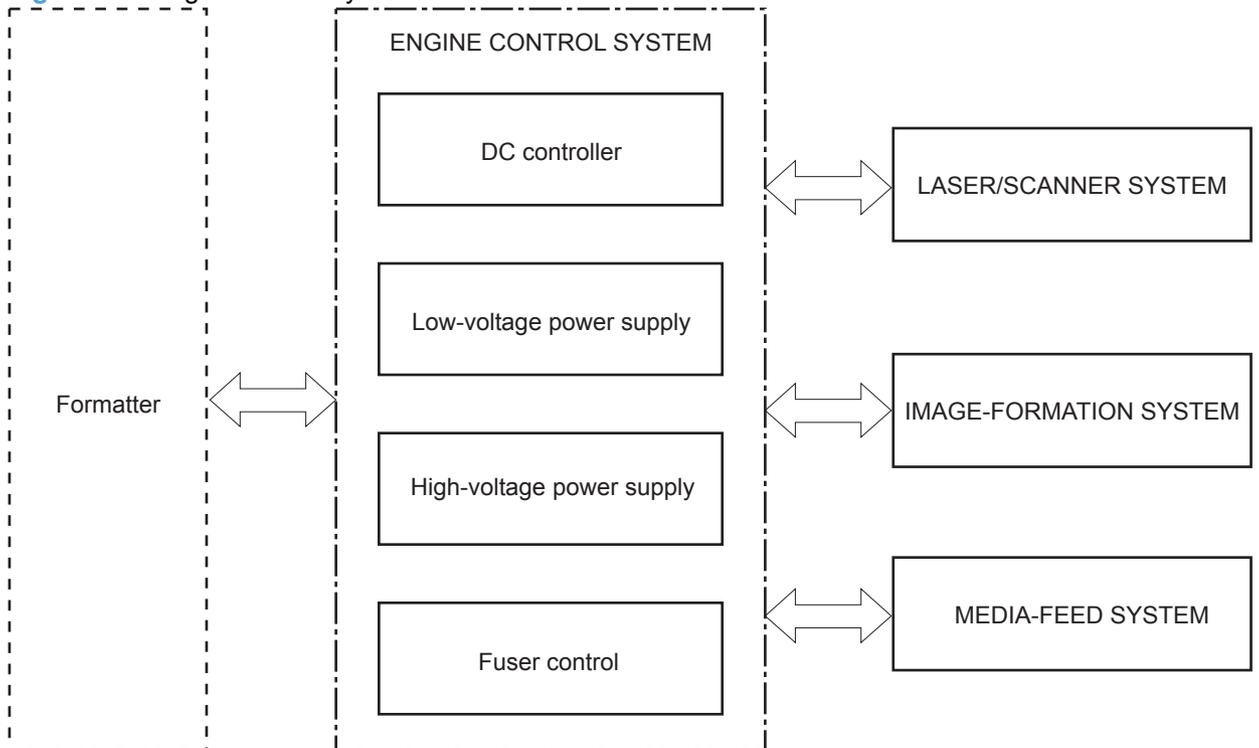

Motors, fans, clutches, solenoids, switches, and sensors

Figure 1-3 Motors

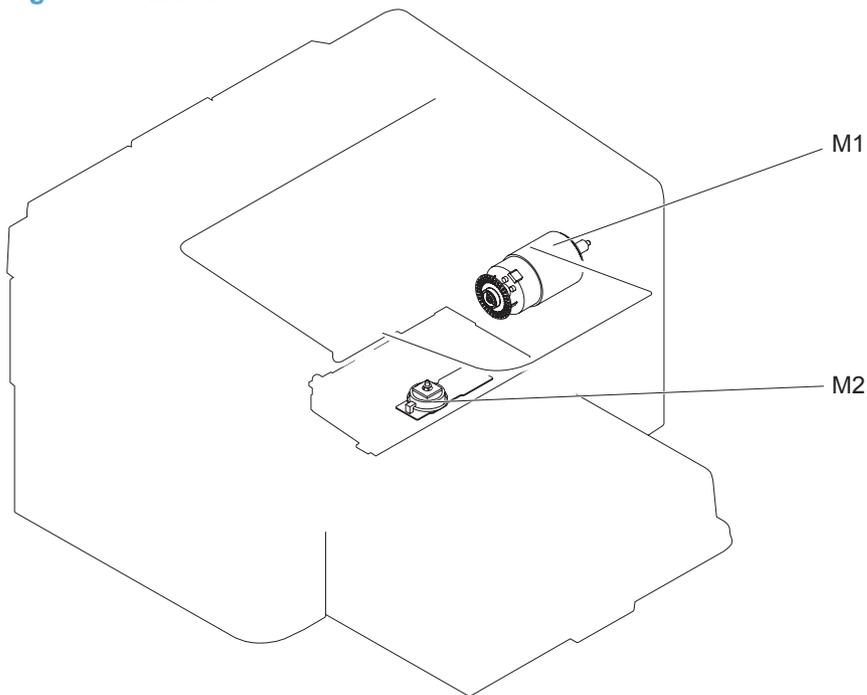


Table 1-2 Motors

Item	Description	Components driven
M1	Main motor	<ul style="list-style-type: none">• Pickup roller• Feed roller• Photosensitive drum• Developing roller• Pressure roller• Delivery roller• Duplex feed roller
M2	Scanner motor	<ul style="list-style-type: none">• Scanner mirror

Figure 1-4 Fans

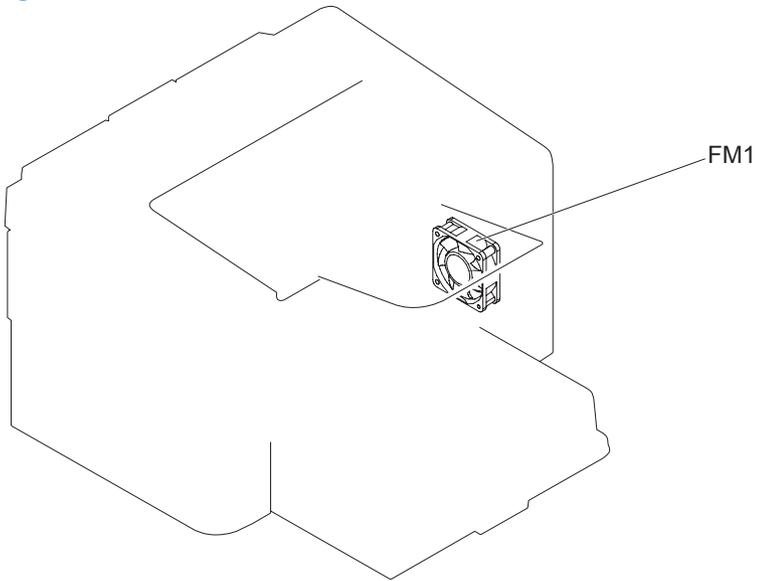


Table 1-3 Fans

Item	Description
FM1	Main fan

Figure 1-5 Solenoids and clutches

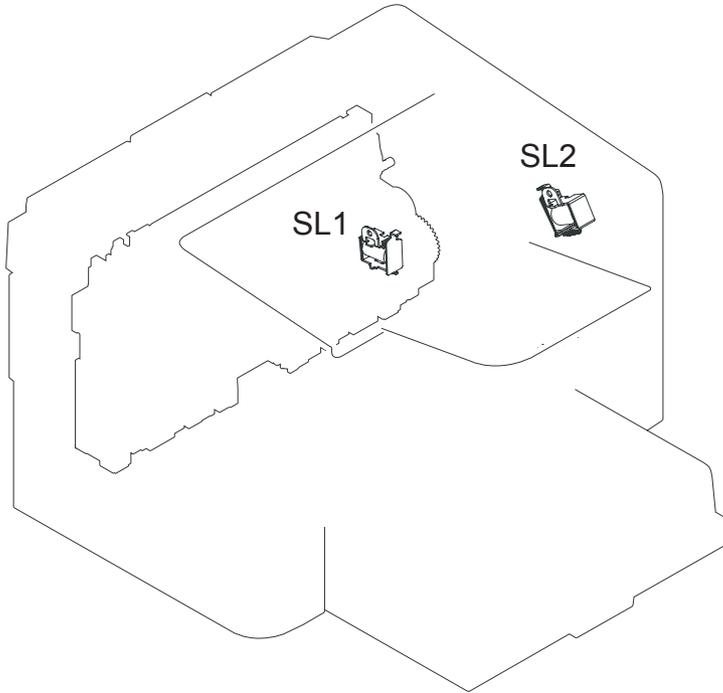


Table 1-4 Solenoids and clutches

Item	Description
SL1	Pickup solenoid
SL2	Duplex reverse solenoid NOTE: Duplex models only.

Figure 1-6 Switches

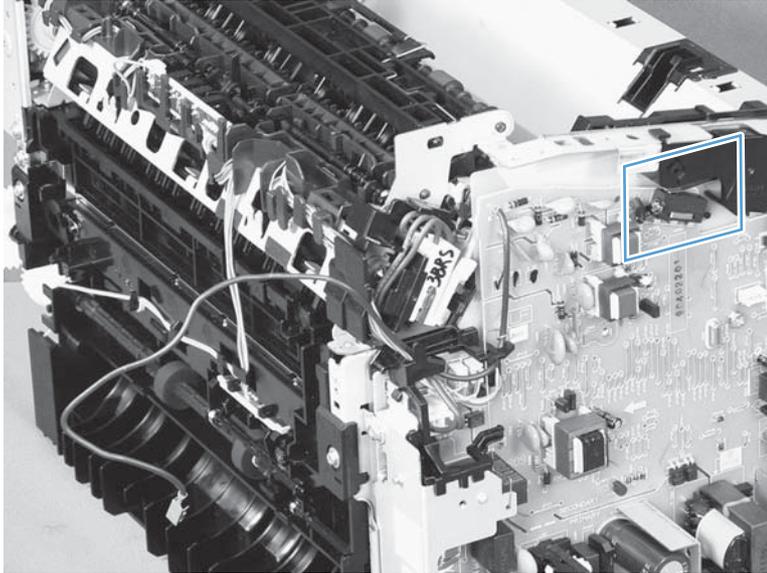


Table 1-5 Switches

Item	Description
SW501	Cartridge-door switch
SW502	Power switch; not shown

Figure 1-7 Sensors

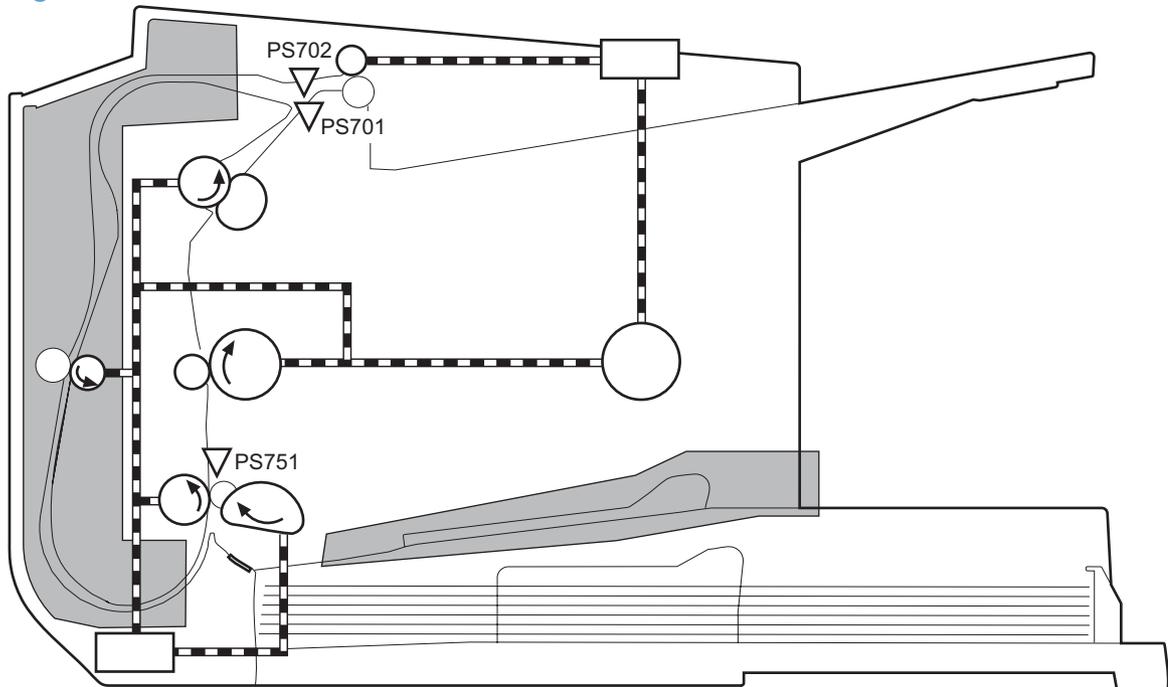


Table 1-6 Sensors

Item	Description
PS701	Fuser delivery sensor

Table 1-3 Sensors (continued)

Item	Description
PS702	Media-width sensor
PS751	Top-of-Page (TOP) sensor
PS901	Main-motor rotation-number sensor; not shown