

Konica

SERVICE MANUAL FIELD SERVICE

7115/7118

Product: Konica 7115/7118 Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/konica-7115-7118-printer-service-repair-workshop-manual/>

Sample of manual. Download All 188 pages at:
<https://www.arepairmanual.com/downloads/konica-7115-7118-printer-service-repair-workshop-manual/>

CONTENTS

DIS/REASSEMBLY, ADJUSTMENT

1. SAFETY INFORMATION	D-1
1-1. LASER SAFETY	D-1
1-2. INTERNAL LASER RADIATION	D-1
1-3. LASER SAFETY LABEL	D-4
1-4. LASER CAUTION LABEL	D-4
1-5. PRECAUTIONS FOR HANDLING THE LASER EQUIPMENT	D-4
2. SERVICE INSTRUCTIONS	D-5
2-1. IDENTIFICATION OF FUSES AND CIRCUIT BREAKERS	D-5
2-2. PARTS WHICH MUST NOT BE TOUCHED	D-6
(1) Red Painted Screws	D-6
(2) Variable Resistors on Board	D-6
3. DISASSEMBLY/REASSEMBLY	D-7
3-1. DOORS, COVERS, AND EXTERIOR PARTS: IDENTIFICATION AND REMOVAL PROCEDURES	D-7
3-2. REMOVAL OF CIRCUIT BOARDS AND OTHER ELECTRICAL COMPONENTS	D-9
(1) Removal of the Master Board	D-10
(2) Removal of the Control Board	D-11
(3) Removal of the High Voltage Unit	D-11
(4) Removal of the DC Power Supply	D-13
3-3. MAINTENANCE SCHEDULE	D-16
3-4. PAPER TAKE-UP/TRANSPORT SECTION	D-18
(1) Removal of the Paper Separator Roll Assy and Paper Take-Up Roll	D-18
(2) Cleaning of the Paper Separator Roll	D-18
(3) Cleaning of the Paper Take-Up Roll	D-18
(4) Cleaning of the Right and Left Synchronizing Rollers	D-19
(5) Removal of the Cleaning Pad	D-19
(6) Cleaning of the Cleaning Pad	D-20
(7) Cleaning of the Bypass Transport Roller	D-20
3-5. OPTICAL SECTION	D-21
(1) Cleaning of the Original Glass and ADF Glass	D-21
(2) Cleaning of Mirrors	D-21
(3) Cleaning of the Lens	D-21
(4) Cleaning of the CCD Sensor	D-22
(5) Cleaning of the Scanner Rails/Bushings	D-22
(6) Removal of the CCD Unit	D-23
(7) Removal of the Scanner, Exposure Lamp, and Inverter Board	D-23
(8) Removal of the Scanner Drive Cables	D-25
(9) Winding of the Scanner Drive Cables	D-27
3-6. PH	D-29
(1) Removal of the PH Unit	D-29
(2) Cleaning of the PH Window	D-29

3-7. Imaging Unit (IU)	D-30
(1) Removal of the IU	D-30
(2) Disassembly of the IU	D-30
(3) Application of Toner	D-34
(4) Replacement of the ATDC Sensor	D-35
3-8. IMAGE TRANSFER SECTION	D-36
(1) Removal of the Image Transfer Roller Assy	D-36
(2) Cleaning of the Pre-Image Transfer Lower Guide Plate	D-36
(3) Cleaning of the Charge Neutralizing Plate	D-36
3-9. FUSING SECTION	D-37
(1) Removal of the Fusing Unit	D-37
(2) Disassembly of the Fusing Unit	D-37
3-10. MULTIPLE BYPASS (MT-102): OPTION	D-42
(1) Removal of the Separator Roll Assy	D-42
(2) Removal of the Paper Take-Up Roll	D-42
(3) Cleaning of the Separator Roll/Paper Take-Up Roll	D-45
(4) Cleaning of the Paper Take-Up Roll	D-45
3-11. JOB TRAY (IT-102): OPTION	D-46
(1) Removal of the Main Board	D-46
(2) Paper Detecting Board	D-48
3-12. SHIFTING UNIT (IS-101): OPTION	D-49
(1) Removal of the Main Board	D-49
4. ADJUSTMENT	D-51
4-1. ADJUSTMENT JIGS AND TOOLS USED	D-51
4-2. TIMING BELT TENSION ADJUSTMENT	D-51
4-3. ACCESSING THE FUNCTION, TECH. REP. CHOICE, AND ADJUST MODE	D-52
(1) Function Mode	D-52
(2) Tech. Rep. Choice Mode	D-52
(3) Adjust Mode	D-52
4-4. ELECTRICAL/IMAGE ADJUSTMENT	D-53
(1) Edge Erase Adjustment (Leading, Trailing, and Top/Bottom Edges)	D-53
(2) Loop Length Adjustment (1st and 2nd Trays, Bypass Tray)	D-54
(3) Printer CD Registration Adjustment	D-55
(4) Printer FD Registration Adjustment	D-56
(5) Scanner CD Registration Adjustment	D-57
(6) Scanner FD Registration Adjustment	D-58
(7) Scanner CD Zoom Adjustment	D-59
(8) Scanner FD Zoom Adjustment	D-60
(9) ATDC Sensor Automatic Adjustment (F8)	D-61
(10) 2nd Mirrors Carriage Distortion Adjustment	D-61
(11) Manual Bypass Registration Adjustment	D-62
(12) Multiple Bypass Registration Adjustment (MT-102): Option	D-63
4-5. OTHER ADJUSTMENTS	D-64
(1) Adjustment of the Position of the Scanner and 2nd/3rd Mirrors Carriage	D-64

(2) CCD Unit Position Adjustment	D-65
(3) Adjustment of the Gap between the Doctor Blade and Sleeve Roller (Db Adjustment)	D-66
4-6. MISCELLANEOUS	D-68
(1) Remounting the EEPROM (U29)	D-68
(2) Installation of the Plug-In Counter Socket (Option)	D-69
(3) Installation of the Total Counter (Option)	D-70

SWITCHES ON PWBS, TECH. REP. SETTINGS

1. CONTROL PANEL KEYS AND TOUCH PANEL	S-1
1-1. Control Panel Keys	S-1
2. UTILITY MODE	S-4
2-1. Settings in the Utility Mode	S-4
2-2. Utility Mode Setting Procedure	S-4
(1) User's Choice Mode (Display: U-1)	S-4
(2) Drum Dehumidify Mode (Display: U-2)	S-9
(3) Toner Replenisher Mode (Display: U-3)	S-9
(4) Custom Size Input Mode (Display: U-4)	S-9
(5) Administrator Mode (Display: U-5)	S-10
3. TECH.REP.MODE	S-13
3-1. Tech.Rep.Mode Menu Function Tree	S-13
3-2. Tech.Rep.Mode Function Setting Procedure	S-14
3-3. Setting in the Tech.Rep.Mode	S-15
(1) Control Panel LED Check (Display: - - 0)	S-15
(2) Function (Display: - - 1)	S-15
(3) Tech.Rep.Choice (Display: - - 2)	S-16
(4) Counter Mode (Display: - - 3)	S-18
(5) ATDC Sensor Output (Display: - - 4)	S-21
(6) Level History (Display: - - 5)	S-21
(7) ROM Version (Display: - - 6)	S-21
(8) Administrator No. Input (Display: - - 7)	S-22
(9) Change Fixed Zoom (Display: - - 8)	S-22
(10) Marketing Area Setting (Display: - - 9)	S-22
(11) Memory Clear (Display: - 10)	S-23
(12) Total Clear (Display: - 11)	S-23
(13) ADF Document Passage Test (Display: - 12)	S-23
(14) ADF Original Glass Check (Display: - 13)	S-24
(15) Scanner Move Check (Display: - 14)	S-24
(16) Serial No. Display (Display: - 20)	S-24
4. SECURITY MODE	S-25
4-1. Settings in the Security Mode	S-25
4-2. Security Mode Setting Procedure	S-25
4-3. Setting in the Security Mode	S-26
5. ADJUST MODE	S-27
5-1. Settings in the Adjust Mode	S-27
5-2. Adjust Mode Setting Procedure	S-27
5-3. Setting in the Adjust Mode	S-28

TROUBLESHOOTING

1. INTRODUCTION	T-1
1-1. Reading the Text	T-1
2. PAPER TRANSPORT FAILURE	T-2
2-1. Paper Misfeed Detection	T-2
(1) Outline	T-2
2-2. Paper Misfeed	T-2
2-3. Misfeed Detection Sensor Layout	T-4
2-4. Types of Misfeed Detection and Detection Timings	T-6
3. MISFEED TROUBLESHOOTING PROCEDURES	T-7
3-1. Misfeed at Copier Paper Take-Up J01 and Misfeed at Bypass Tray J06	T-7
3-2. Misfeed at Paper Feed Cabinet Paper Take-Up and Transport Section J02, J03, J04, J05, J1 (PF-121)	T-11
3-3. Misfeed at PC Drum J2	T-13
3-4. Misfeed at Fusing Unit J3	T-16
4. MALFUNCTION	T-18
4-1. Detection Timing by Malfunction Code	T-18
4-2. Resetting Procedure by Malfunction Code	T-22
4-3. Troubleshooting Procedures by Malfunction Code	T-23
(1) C0000: Main Motor malfunction	T-23
(2) C0045: Fusing Cooling Fan Motor malfunction	T-24
(3) C004E: Power Supply Cooling Fan Motor malfunction	T-25
(4) C0070: Toner Replenishing Motor malfunction	T-26
(5) C0210: Abnormal image transfer voltage	T-27
(6) C0500: Warm-up failure C0510: Abnormally low fusing temperature C0520: Abnormally high fusing temperature	T-28
(7) C0650: Faulty Scanner Home Position Sensor	T-30
(8) C0B60: Bin Switching Motor malfunction	T-31
(9) C0B80 Shift Motor malfunction	T-33
(10) C0F32: Faulty ATDC Sensor C0F33: Improperly adjusted ATDC Sensor	T-34
(11) C1038: Engine connection failure	T-35
(12) C1200: Faulty ASIC/memory	T-35
(13) C1300: Polygon Motor malfunction (startup failure, Lock signal failure, faulty Lock signal) C13F0: Faulty HSYNC	T-36
(14) C1468: Faulty EEPROM	T-37
(15) C14A3: IR fluorescent lamp fault	T-38
(16) The copier does not turn ON.	T-40
5. IMAGE FAILURE	T-42
5-1. Image Failure Troubleshooting	T-42
5-2. Initial Checks	T-42
5-3. Image Failure Samples	T-44
5-4. Troubleshooting Procedures by Image Failure	T-45
(1) Blank copy	T-45

(2) Black copy	T-46
(3) Low image density	T-47
(4) Foggy background or rough image	T-49
(5) Black streaks or bands	T-51
(6) Black spots	T-52
(7) Blank streaks or bands	T-53
(8) Void areas	T-54
(9) Smear on back	T-55
(10) Uneven image density	T-56
(11) Gradation reproduction failure	T-58
(12) Periodically uneven image	T-59
6. OTHER ERROR CODES	T-60

WIRING/CIRCUIT DIAGRAMS

SERVICE/ADJUSTMENT ITEM LIST

ELECTRICAL PARTS LAYOUT

CONNECTOR LAYOUT

WIRING DIAGRAMS (1-2)

CIRCUIT DIAGRAM (1-2)

CIRCUIT DIAGRAM PWB-A (1-3)

DF-217 WIRING DIAGRAM

DF-217 CIRCUIT DAIGRAM PWB

PF-121 WIRING DIAGRAM

PF-121 CIRCUIT DIAGRAM PWB

SAFETY PRECAUTIONS

Installation Environment

Safety considerations usually are directed toward machine design and the possibility of human error. In addition, the environment in which a machine is operated must not be overlooked as a potential safety hazard.

Most electrical equipment is safe when installed in a normal environment. However, if the environment is different from what most people consider to be normal, it is conceivable that the combination of the machine and the room air could present a hazardous combination. This is because heat (such as from fusing units) and electrical arcs (which can occur inside switches) have the ability to ignite flammable substances, including air.

When installing a machine, check to see if there is anything nearby which suggests that a potential hazard might exist. For example, a laboratory might use organic compounds which, when they evaporate, make the room air volatile. Potentially dangerous conditions might be seen or smelled. *The presence of substances such as cleaners, paint thinners, gasoline, alcohol, solvents, explosives, or similar items should be cause for concern.*

If conditions such as these exist, take appropriate action, such as one of the following suggestions.

- Determine that the environment is controlled (such as through the use of an exhaust hood) so that an offending substance or its fumes cannot reach the machine.
- Remove the offending substance.
- Install the machine in a different location.

The specific remedy will vary from site to site, but the principles remain the same. To avoid the risk of injury or damage, be alert for changes in the environment when performing subsequent service on any machine, and take appropriate action.

Unauthorized Modifications

Konica equipment has gained a reputation for being reliable products. This has been attained by a combination of outstanding design and a knowledgeable service force.

The design of the equipment is extremely important. It is the design process that determines tolerances and *safety margins* for mechanical, electrical, and electronic aspects. It is not reasonable to expect individuals not involved in product engineering to

know what effect may be caused by altering any aspect of the machine's design. Such changes have the potential of degrading product performance and reducing safety margins.

For these reasons, *installation of any modification not specifically authorized by Konica Business Machines U.S.A., Inc., is strictly prohibited.*

The following list of prohibited actions is not all-inclusive, but demonstrates the intent of this policy.

- Using an extension cord or any unauthorized power cord adapter.
- Installing any fuse whose rating and physical size differs from that originally installed.
- Using wire, paper clips, solder, etc., to replace or eliminate any fuse (including temperature fuses).
- Removing (except for replacement) any air filter.
- Defeating the operation of relays by any means (such as wedging paper between contacts).
- Causing the machine to operate in a fashion other than as it was designed.
- Making any change which might have a chance of defeating built-in safety features.
- Using any unspecified replacement parts.

General Safety Guidelines

This equipment has been examined in accordance with the laws pertaining to various product safety regulations prior to leaving the manufacturing facility to protect the operators and service personnel from injury. However, as with any operating device, components will break down through the wear-and-tear of everyday use, as will additional safety discrepancies be discovered. For this reason, it is important that the technician periodically performs safety checks on the equipment to maintain optimum reliability and safety.

The following checks, not all-inclusive, should be made during each service call:

CAUTION: Avoid injury. Ensure that the equipment is disconnected from its power source before continuing.

- Look for sharp edges, burrs, and damage on all external covers and copier frame.
- Inspect all cover hinges for wear (loose or broken).
- Inspect cables for wear, frays, or pinched areas.

- Ensure that the power cord insulation is not damaged (no exposed electrical conductors).
- Ensure that the power cord is properly mounted to the frame by cord clamps.
- Check the continuity from the round lug (GND) of the power cord to the frame of the copier – ensure continuity. An improperly grounded machine can cause an electrically-charged machine frame.

Safeguards During Service Calls

Confirm that all screws, parts, and wiring which are removed during maintenance are installed in their original positions.

- When disconnecting connectors, do not pull the wiring, particularly on AC line wiring and high voltage parts.
- Do not route the power cord where it is likely to be stepped on or crushed.
- Carefully remove all toner and dirt adhering to any electrical units or electrodes.
- After part replacement or repair work, route the wiring in such a way that it does not contact any burrs or sharp edges.
- Do not make any adjustments outside of the specified range.

Applying Isopropyl Alcohol

Care should be exercised when using isopropyl alcohol, due to its flammability. When using alcohol to clean parts, observe the following precautions:

- Remove power from the equipment.
- Use alcohol in small quantities to avoid spillage or puddling. Any spillage should be cleaned up with rags and disposed of properly.
- Be sure that there is adequate ventilation.
- Allow a surface which has been in contact with alcohol to dry for a few minutes to ensure that the alcohol has evaporated completely before applying power or installing covers.

Summary

It is the responsibility of every technician to use professional skills when servicing Konica products. There are no short cuts to high-quality service. Each piece of equipment must be thoroughly inspected with respect to safety considerations as part of every routine service call. The operability of the copier, and more importantly, the safety of those who operate or service the equipment, are directly dependent upon the conscientious effort of each and every technician.

Remember...when performing service calls, use good judgment (have a watchful eye) to identify safety hazards or potential safety hazards that may be present, and correct these problem areas as they are identified – the safety of those who operate the equipment as well as those who service the copier depend on it!

1. SAFETY PRECAUTIONS FOR INSPECTION AND SERVICE

- When performing inspection and service procedures, observe the following precautions to prevent accidents and ensure utmost safety.

* Depending on the model, some of the precautions given in the following do not apply.

- Different markings are used to denote specific meanings as detailed below.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

- The following graphic symbols are used to give instructions that need to be observed.



Used to call the service technician's attention to what is graphically represented inside the marking (including a warning).



Used to prohibit the service technician's from doing what is graphically represented inside the marking.



Used to instruct the service technician's to do what is graphically represented inside the marking.

1-1. Warning



WARNING

1. Always observe precautions.



- Parts requiring special attention in this product will include a label containing the mark shown on the left plus precautionary notes. Be sure to observe the precautions.
- Be sure to observe the "Safety Information" given in the Operator's Manual.

2. Before starting the procedures, be sure to unplug the power cord.



- This product contains a high-voltage unit and a circuit with a large current capacity that may cause an electric shock or burn.
- The product also contains parts that can jerk suddenly and cause injury.
- If this product uses a laser, laser beam leakage may cause eye damage or blindness.

3. Do not throw toner or the toner bottle into a fire.



- Do not throw toner or the toner bottle (Imaging Cartridge) into a fire. Toner expelled from the fire may cause burns.

4. Use the specified parts.



- For replacement parts, always use the genuine parts specified in the manufacturer's parts manual. Installing a wrong or unauthorized part could cause dielectric breakdown, overload, or undermine safety devices resulting in possible electric shock or fire.
- Replace a blown electrical fuse or thermal fuse with its corresponding genuine part specified in the manufacturer's parts manual. Installing a fuse of a different make or rating could lead to a possible fire. If a thermal fuse blows frequently, the temperature control system may have a problem and action must be taken to eliminate the cause of the problem.

5. Handle the power cord with care and never use a multiple outlet.



- Do not break, crush or otherwise damage the power cord. Placing a heavy object on the power cord, or pulling or bending it may damage it, resulting in a possible fire or electric shock.
- Do not use a multiple outlet to which any other appliance or machine is connected.
- Be sure the power outlet meets or exceeds the specified capacity.

6. Be careful with the high-voltage parts.



- A part marked with the symbol shown on the left carries a high voltage. Touching it could result in an electric shock or burn. Be sure to unplug the power cord before servicing this part or the parts near it.

7. Do not work with wet hands.



- Do not unplug or plug in the power cord, or perform any kind of service or inspection with wet hands. Doing so could result in an electric shock.

8. Do not touch a high-temperature part.



- A part marked with the symbol shown on the left and other parts such as the exposure lamp and fusing roller can be very hot while the machine is energized. Touching them may result in a burn.
- Wait until these parts have cooled down before replacing them or any surrounding parts.

9. Maintain a grounded connection at all times. (This item may not apply in the USA.)



- Be sure to connect the ground wire to the ground terminal even when performing an inspection or repair. Without proper grounding, electrical leakage could result in an electric shock or fire.
- Never connect the ground wire to a gas pipe, water pipe, telephone ground wire, or a lightning conductor.

10. Do not remodel the product.



- Modifying this product in a manner not authorized by the manufacturer may result in a fire or electric shock. If this product uses a laser, laser beam leakage may cause eye damage or blindness.

11. Restore all parts and harnesses to their original positions.



- To promote safety and prevent product damage, make sure the harnesses are returned to their original positions and properly secured in their clamps and saddles in order to avoid hot parts, high-voltage parts, sharp edges, or being crushed.
- To promote safety, make sure that all tubing and other insulating materials are returned to their original positions. Make sure that floating components mounted on the circuit boards are at their correct distance and position off the boards.

1-2. Caution



CAUTION

1. Precautions for Service Jobs.



- A toothed washer and spring washer, if used originally, must be reinstalled. Omitting them may result in contact failure which could cause an electric shock or fire.
- When reassembling parts, make sure that the correct screws (size, type) are used in the correct places. Using the wrong screw could lead to stripped threads, poorly secured parts, poor insulating or grounding, and result in a malfunction, electric shock or injury.



- Take great care to avoid personal injury from possible burrs and sharp edges on the parts, frames and chassis of the product.
- When moving the product or removing an option, use care not to injure your back or allow your hands to be caught in mechanisms.

2. Precautions for Servicing with Covers and Parts Removed.



- Wherever feasible, keep all parts and covers mounted when energizing the product.
- If energizing the product with a cover removed is absolutely unavoidable, do not touch any exposed live parts and use care not to allow your clothing to be caught in the moving parts. Never leave a product in this condition unattended.
- Never place disassembled parts or a container of liquid on the product. Parts falling into, or the liquid spilling inside, the mechanism could result in an electric shock or fire.



- Never use a flammable spray near the product. This could result in a fire.
- Make sure the power cord is unplugged before removing or installing circuit boards or plugging in or unplugging connectors.
- Always use the interlock switch actuating jig to actuate an interlock switch when a cover is opened or removed. The use of folded paper or some other object may damage the interlock switch mechanism, possibly resulting in an electric shock, injury or blindness.

3. Precautions for the Working Environment.



- The product must be placed on a flat, level surface that is stable and secure.
- Never place this product or its parts on an unsteady or tilting workbench when servicing.
- Provide good ventilation at regular intervals if a service job must be done in a confined space for a long period of time.
- Avoid dusty locations and places exposed to oil or steam.
- Avoid working positions that may block the ventilation ports of the product.

4. Precautions for Handling Batteries. (Lithium, Nickel-Cadmium, etc.)



- Replace a rundown battery with the same type as specified in the manufacturer's parts manual.
- Before installing a new battery, make sure of the correct polarity of the installation or the battery could burst.
- Dispose of used batteries according to the local regulations. Never dispose of them at the user's premises or attempt to try to discharge one.

5. Precautions for the Laser Beam. (Only for Products Employing a Laser)



- Removing the cover marked with the caution label could lead to possible exposure to the laser beam, resulting in eye damage or blindness. Be sure to unplug the power cord before removing this cover.
- If removing this cover while the power is ON is unavoidable, be sure to wear protective laser goggles that meet specifications.
- Make sure that no one enters the room when the machine is in this condition.
- When handling the laser unit, observe the "Precautions for Handling Laser Equipment."

6. Precautions for storage the toner or imaging cartridge.



- Be sure to keep the toner or imaging cartridge out of the reach of children. Licking the imaging cartridge or ingesting its contents is harmful to your health.

1-3. Other Precautions

- When handling circuit boards, observe the "HANDLING of PWBs".
- The PC Drum is a very delicate component. Observe the precautions given in "HANDLING OF THE PC DRUM" because mishandling may result in serious image problems.
- Note that replacement of a circuit board may call for readjustments or resetting of particular items, or software installation.

1-4. Used Batteries Precautions

ALL Areas

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type recommended by the manufacturer.
Dispose of used batteries according to the manufacturer's instructions.

Germany

VORSICHT!

Explosionsgefahr bei unsachgemäßem Austausch der Batterie.
Ersatz nur durch denselben oder einen vom Hersteller empfohlenen gleichwertigen Typ.
Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

France

ATTENTION

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.
Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.
Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Denmark

ADVARSEL!

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandøren.

Finland, Sweden

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.
Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

VARNING

Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens instruktion.

Norway

ADVARSEL

Eksplosjonsfare ved feilaktig skifte av batteri.
Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten.
Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

1-5. Precautions for Service

- When performing inspection and service procedures, observe the following precautions to prevent mishandling of the machine and its parts.

* Depending on the model, some of the precautions given in the following do not apply.

1. Precautions Before Service

- When the user is using a word processor or personal computer from a wall outlet of the same line, take necessary steps to prevent the circuit breaker from opening due to overloads.
- Never disturb the LAN by breaking or making a network connection, altering termination, installing or removing networking hardware or software, or shutting down networked devices without the knowledge and express permission of the network administrator or the shop supervisor.

2. How to Use this Book

< DIS/REASSEMBLY, ADJUSTMENT >

- To reassemble the product, reverse the order of disassembly unless otherwise specified.

< TROUBLESHOOTING >

- If a component on a PWB or any other functional unit including a motor is defective, the text only instructs you to replace the whole PWB or functional unit and does not give troubleshooting procedures applicable within the defective unit.
- All troubleshooting procedures contained herein assume that there are no breaks in the harnesses and cords and all connectors are plugged into the right positions.
- The procedures preclude possible malfunctions due to noise and other external causes.

3. Precautions for Service

- Check the area surrounding the service site for any signs of damage, wear or need of repair.
- Keep all disassembled parts in good order and keep tools under control so that none will be lost or damaged.
- After completing a service job, perform a safety check. Make sure that all parts, wiring and screws are returned to their original positions.
- Do not pull out the toner hopper while the toner bottle is turning. This could result in a damaged motor or locking mechanism.
- If the product is to be run with the front door open, make sure that the toner hopper is in the locked position.
- Do not use an air gun or vacuum cleaner for cleaning the ATDC Sensor and other sensors, as they can cause electrostatic destruction. Use a blower brush and cloth. If a unit containing these sensors is to be cleaned, first remove the sensors from the unit.

4. Precautions for Dis/Reassembly

- Be sure to unplug the copier from the outlet before attempting to service the copier.
- The basic rule is not to operate the copier anytime during disassembly. If it is absolutely necessary to run the copier with its covers removed, use care not to allow your clothing to be caught in revolving parts such as the timing belt and gears.
- Before attempting to replace parts and unplug connectors, make sure that the power cord of the copier has been unplugged from the wall outlet.
- Be sure to use the Interlock Switch Actuating Jig whenever it is necessary to actuate the Interlock Switch with the covers left open or removed.
- While the product is energized, do not unplug or plug connectors into the circuit boards or harnesses.
- Never use flammable sprays near the copier.
- A used battery should be disposed of according to the local regulations and never be discarded casually or left unattended at the user's premises.
- When reassembling parts, make sure that the correct screws (size, type) and toothed washer are used in the correct places.

5. Precautions for Circuit Inspection

- Never create a closed circuit across connector pins except those specified in the text and on the printed circuit.
- When creating a closed circuit and measuring a voltage across connector pins specified in the text, be sure to use the GND wire.

6. Handling of PWBs

< During Transportation/Storage >

- During transportation or when in storage, new P.W. Boards must not be indiscriminately removed from their protective conductive bags.
- Do not store or place P.W. Boards in a location exposed to direct sunlight and high temperature.
- When it becomes absolutely necessary to remove a Board from its conductive bag or case, always place it on its conductive mat in an area as free as possible from static electricity.
- Do not touch the pins of the ICs with your bare hands.
- Protect the PWBs from any external force so that they are not bent or damaged.

< During Inspection/Replacement >

- Avoid checking the IC directly with a multimeter; use connectors on the Board.
- Never create a closed circuit across IC pins with a metal tool.
- Before unplugging connectors from the P.W. Boards, make sure that the power cord has been unplugged from the outlet.
- When removing a Board from its conductive bag or conductive case, do not touch the pins of the ICs or the printed pattern. Place it in position by holding only the edges of the Board.
- When touching the PWB, wear a wrist strap and connect its cord to a securely grounded place whenever possible. If you cannot wear a wrist strap, touch a metal part to discharge static electricity before touching the PWB.
- Note that replacement of a PWB may call for readjustments or resetting of particular items.

7. Handling of Other Parts

- The magnet roller generates a strong magnetic field. Do not bring it near a watch, floppy disk, magnetic card, or CRT tube.

8. Handling of the PC Drum

* Only for Products Not Employing an Imaging Cartridge.


< During Transportation/Storage >

- Use the specified carton whenever moving or storing the PC Drum.
- The storage temperature is in the range between -20°C and $+40^{\circ}\text{C}$.
- In summer, avoid leaving the PC Drum in a car for a long time.


< Handling >

- Ensure that the correct PC Drum is used.
- Whenever the PC Drum has been removed from the copier, store it in its carton or protect it with a Drum Cloth.
- The PC Drum exhibits greatest light fatigue after being exposed to strong light over an extended period of time. Never, therefore, expose it to direct sunlight.
- Use care not to contaminate the surface of the PC Drum with oil-base solvent, fingerprints, and other foreign matter.
- Do not scratch the surface of the PC Drum.
- Do not apply chemicals to the surface of the PC Drum.
- Do not attempt to wipe clean the surface of the PC Drum.

If, however, the surface is contaminated with fingerprints, clean it using the following procedure.

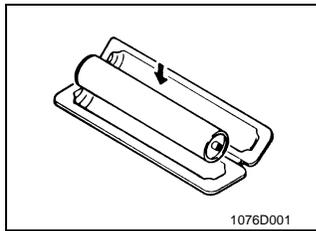

A. Place the PC Drum into one half of its carton.

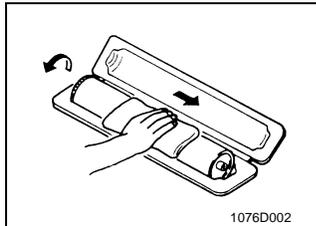


B. Gently wipe the residual toner off the surface of the PC Drum with a dry, Dust-Free Cotton Pad.


- Turn the PC Drum so that the area of its surface on which the line of toner left by the Cleaning Blade is present is facing straight up. Wipe the surface in one continuous movement from the rear edge of the PC Drum to the front edge and off the surface of the PC Drum.

- Turn the PC Drum slightly and wipe the newly exposed surface area with a CLEAN face of the Dust-Free Cotton Pad. Repeat this procedure until the entire surface of the PC Drum has been thoroughly cleaned.

* At this time, always use a CLEAN face of the dry Dust-Free Cotton Pad until no toner is evident on the face of the Pad after wiping.

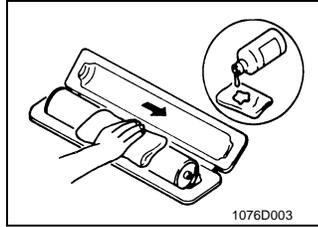

- C. Soak a small amount of either ethyl alcohol or isopropyl alcohol into a clean, unused Dust-Free Cotton Pad which has been folded over into quarters. Now, wipe the surface of the PC Drum in one continuous movement from its rear edge to its front edge and off its surface one to two times.
- * Never move the Pad back and forth.

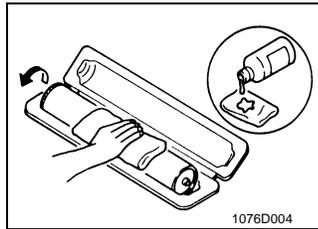

- D. Using the SAME face of the Pad, repeat the procedure explained in the latter half of step 3 until the entire surface of the PC Drum has been wiped. Always OVERLAP the areas when wiping. Two complete turns of the PC Drum would be appropriate for cleaning.

NOTES

- Even when the PC Drum is only locally dirtied, wipe the entire surface.
 - Do not expose the PC Drum to direct sunlight. Clean it as quickly as possible even under interior illumination.
 - If dirt remains after cleaning, repeat the entire procedure from the beginning one more time.
-

9. Handling of the Imaging Cartridge

- * Only for Products Employing an Imaging Cartridge.

< During Transportation/Storage >

- The storage temperature is in the range between -20°C and $+40^{\circ}\text{C}$.
- In summer, avoid leaving the Imaging Cartridge in a car for a long time.

< Handling >

- Store the Imaging Cartridge in a place that is not exposed to direct sunlight.

< Precautionary Information on the PC Drum Inside the Imaging Cartridge >

- Use care not to contaminate the surface of the PC Drum with oil-base solvent, fingerprints, and other foreign matter.
- Do not scratch the surface of the PC Drum.
- Do not attempt to wipe clean the surface of the PC Drum.

DIS/REASSEMBLY, ADJUSTMENT

1. SAFETY INFORMATION

1-1. LASER SAFETY

- This is a digital machine certified as a class 1 laser product. There is no possibility of danger from a laser, provided the machine is serviced according to the instruction in this manual.

1-2. INTERNAL LASER RADIATION

Semiconductor laser	
Maximum average radiation power(*)	26.4 μ W
Wavelength	770-795 nm

*:Laser Aperture of the Print Head Unit

- This product employs a Class 3b laser diode that emits an invisible laser beam. The laser diode and the scanning polygon mirror are incorporated in the print head unit.
- The print head unit is NOT A FIELD SERVICE ITEM. Therefore, the print head unit should not be opened under any circumstances.



Laser Aperture of the Print Head Unit

This figure Shows the view inside the Right Door with the Imaging Unit removed.

**the U.S.A., Canada
(CDRH Regulation)**

- This machine is certified as a Class I Laser product under Radiation Performance Standard according to the Food, Drug and Cosmetic Act of 1990. Compliance is mandatory for Laser products marketed in the United States and is reported to the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration of the U.S. Department of Health and Human Services (DHHS). This means that the device does not produce hazardous laser radiation.
- The label shown to page D-4 indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

CAUTION

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

Semiconductor laser	
Maximum power of the laser diode	5 mW
Wavelength	770-795 nm

All Areas

CAUTION

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

Semiconductor laser	
Maximum power of the laser diode	5 mW
Wavelength	770-795 nm

Denmark

ADVARSEL

Usynlig Laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. Klasse 1 laser produkt der opfylder IEC60825 sikkerheds kravene.

Halvlederlaser	
Laserdiodens højeste styrke	5 mW
Bølgelængden	770-795 nm

Finland, Sweden

VARO!

Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

LOUKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

VAROITUS!

Laitteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Puolijohdelaser	
Laserdiodin suurin teho	5 mW
Aallonpituus	770-795 nm

VARNING!

Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

Halvledarlaser	
Den maximala effekten för laserdioden	5 mW
Våglängden	770-795 nm

VARNING!

Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

Norway


ADVERSEL

Dersom apparatet brukes på annen måte enn spesifisert i denne bruksanvisning, kan brukeren utsettes for usynlig laserstråling som overskrider grensen for laser klass 1.

Halvleder laser	
Maksimal effekt till laserdiode	5 mW
Bølgelengde	770-795 nm


1-3. LASER SAFETY LABEL

- A laser safety labels is attached to the outside of the machine as shown below.

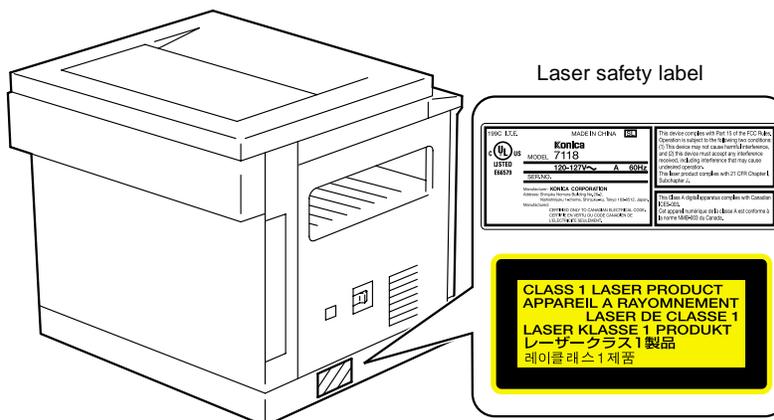

1-4. LASER CAUTION LABEL

- A laser caution label is attached to the inside of the machine as shown below.

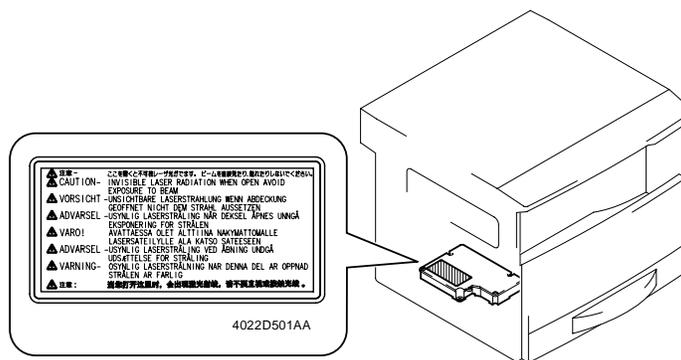


1-5. PRECAUTIONS FOR HANDLING THE LASER EQUIPMENT

- When laser protective goggles are to be used, select ones with a lens conforming to the above specifications.
- When a disassembly job needs to be performed in the laser beam path, such as when working around the printerhead and PC Drum, be sure first to turn the copier OFF.
- If the job requires that the copier be left ON, take off your watch and ring and wear laser protective goggles.
- A highly reflective tool can be dangerous if it is brought into the laser beam path. Use utmost care when handling tools on the user's premises.

2. SERVICE INSTRUCTIONS

2-1. IDENTIFICATION OF FUSES AND CIRCUIT BREAKERS

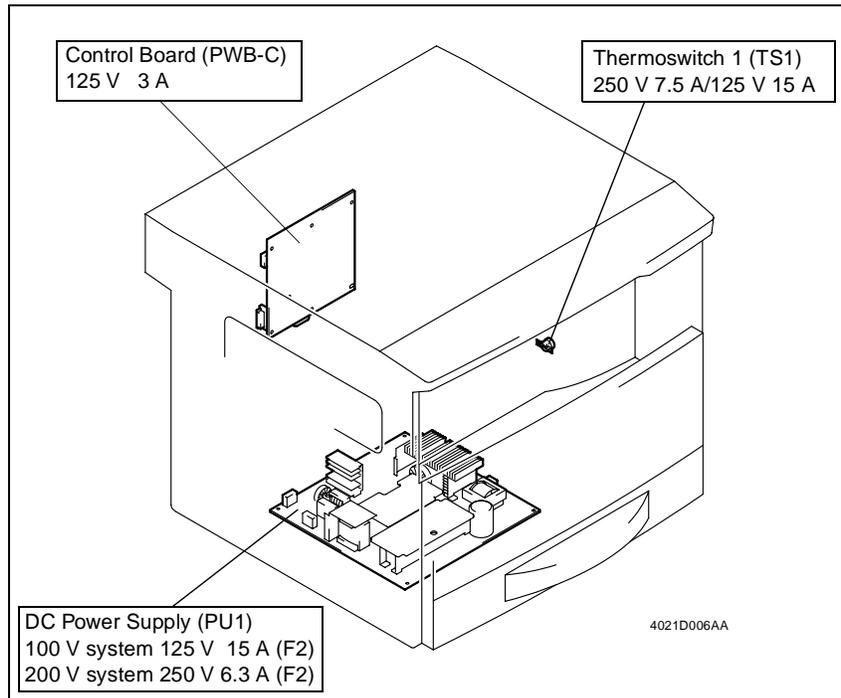

2-2. PARTS WHICH MUST NOT BE TOUCHED

(1) Red Painted Screws

Purpose of Application of Red Paint

Red painted screws show that the assembly or unit secured can only be adjusted or set at the factory and shall not be readjusted, set, or removed in the field.

If it becomes unavoidably necessary to disassemble any of these assemblies and units, disassembly may be done provided that the conditions permitting reassembly are met.


Note also that when two or more screws are used on the part in question, only one representative screw may be marked with red paint.

(2) Variable Resistors on Board


Do not turn the variable resistors on boards for which no adjusting instructions are given in "ADJUSTMENT."

Other Screws not Marked with Red Paint

<PH Unit>

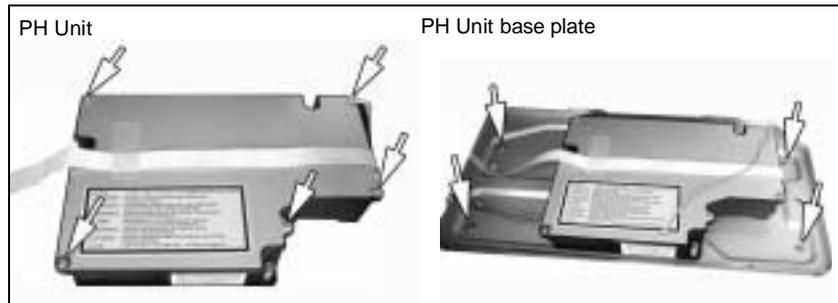


<IR Unit>

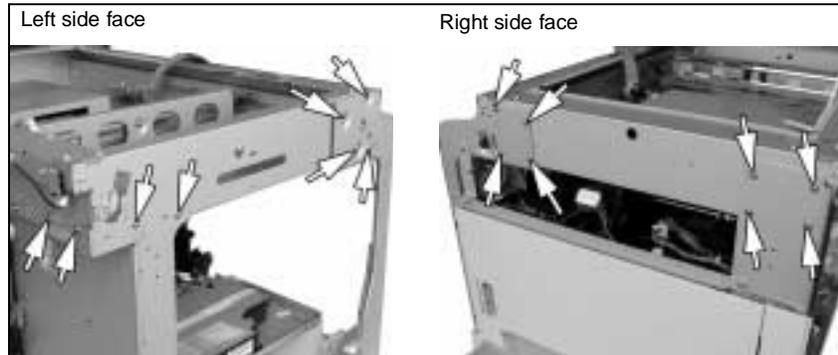

3. DISASSEMBLY/REASSEMBLY

3-1. DOORS, COVERS, AND EXTERIOR PARTS: IDENTIFICATION AND REMOVAL PROCEDURES

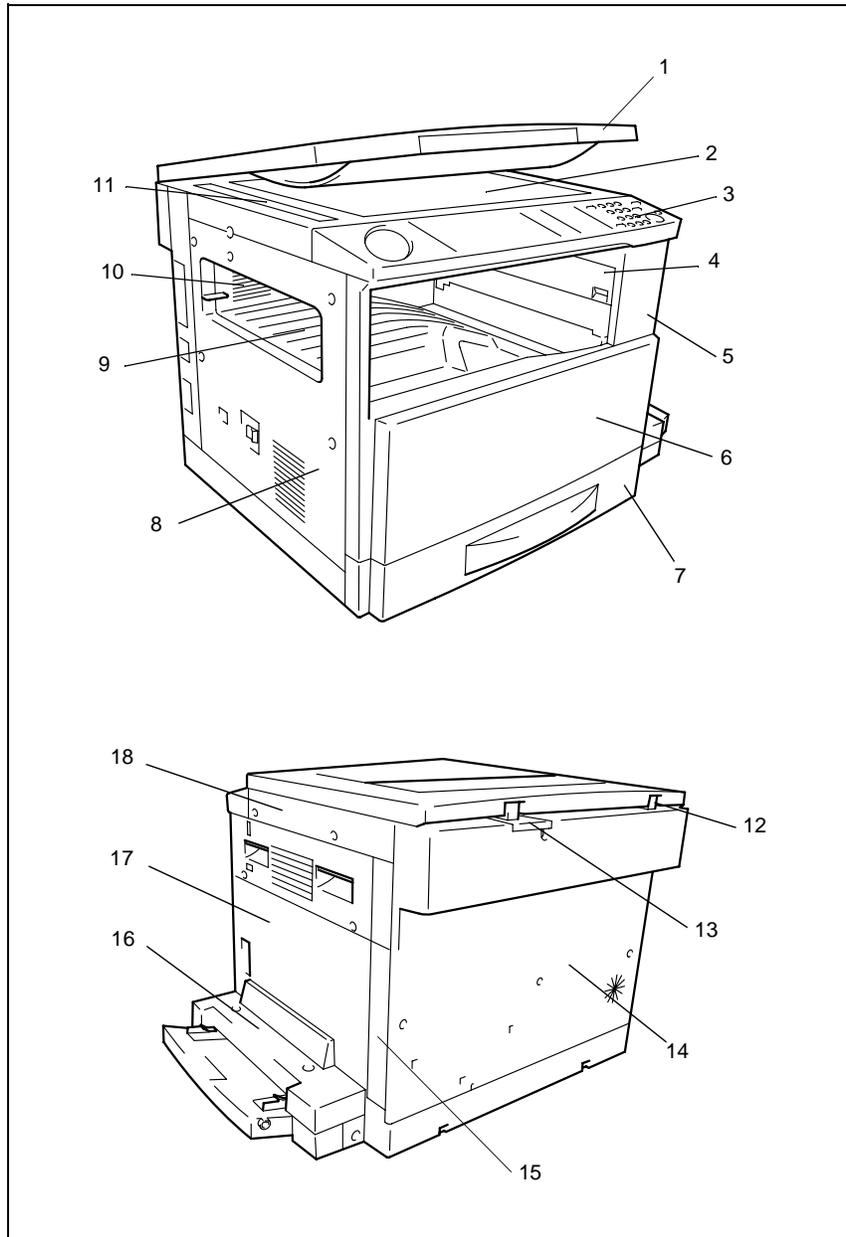

No.	Part Name	Removal Procedure
1	Original Cover	Pull the Original Cover straight up.
2	Original Glass	Remove no. 18. → Remove two holding brackets or no. 11 and the Original Glass.
3	Control Panel	Remove two control panel mounting screws. → Remove two ground wire mounting screws. → Remove one flat cable and unplug one connector.
4	Right Inside Cover	Remove no. 5. → Remove one Right Inside Cover mounting screw.
5	Front Cover	Remove no. 3. → Open the Front Door and remove six Front Cover mounting screws.
6	Front Door	Open the Front Door and remove one band mounting screw. → Snap off one C-clip.
7	1st Tray	Slide out the 1st Tray. → Remove the fixing brackets on the right and left.
8	Left Cover	Remove no. 3. → Remove no. 5. → Remove no. 14. → Remove five Left Cover mounting screws.
9	Upper Cover	Remove no. 3. → Remove no. 5. → Remove no. 14. → Remove no. 8. → Remove two screws and two Upper Cover mounting screws.
10	Rear Inside Cover	Remove no. 3. → Remove no. 5. → Remove no. 14. → Remove no. 8. → Remove no. 9. → Remove no. 4. → Remove two Rear Inside Cover mounting screws.
11	ADF Glass	Remove two ADF Glass mounting screws.
12	Left Hinge	Remove no. 14. → Remove three Left Hinge mounting screws.
13	Right Hinge	Remove no. 14. → Remove three Right Hinge mounting screws.
14	Rear Cover	Remove six Rear Cover mounting screws.
15	Rear Right Cover	Remove no. 14. → Remove one Rear Right Cover mounting screw.
16	Multiple Bypass Cover (when the option is mounted)	Remove two Multiple Bypass Cover mounting screws.
17	Right Door	Remove no. 14. → Remove no. 15. → Remove three Right Door mounting screws.
18	Right Cover	Remove no. 3. → Remove no. 5. → Remove no. 14. → Remove four Right Cover mounting screws.