

Product: 1998-2001 Terex 33100B Mining Truck Workshop Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/1998-2001-terex-33100b-mining-truck-workshop-parts-manual/>

[CLICK HERE FOR
STANDARD
TABLE OF CONTENTS](#)


[CLICK HERE FOR
OPTIONAL
TABLE OF CONTENTS](#)

TEREX 

Parts Book

[CLICK HERE TO RETURN TO
MAIN LIBRARY INDEX](#)

**Part Number
15272396**

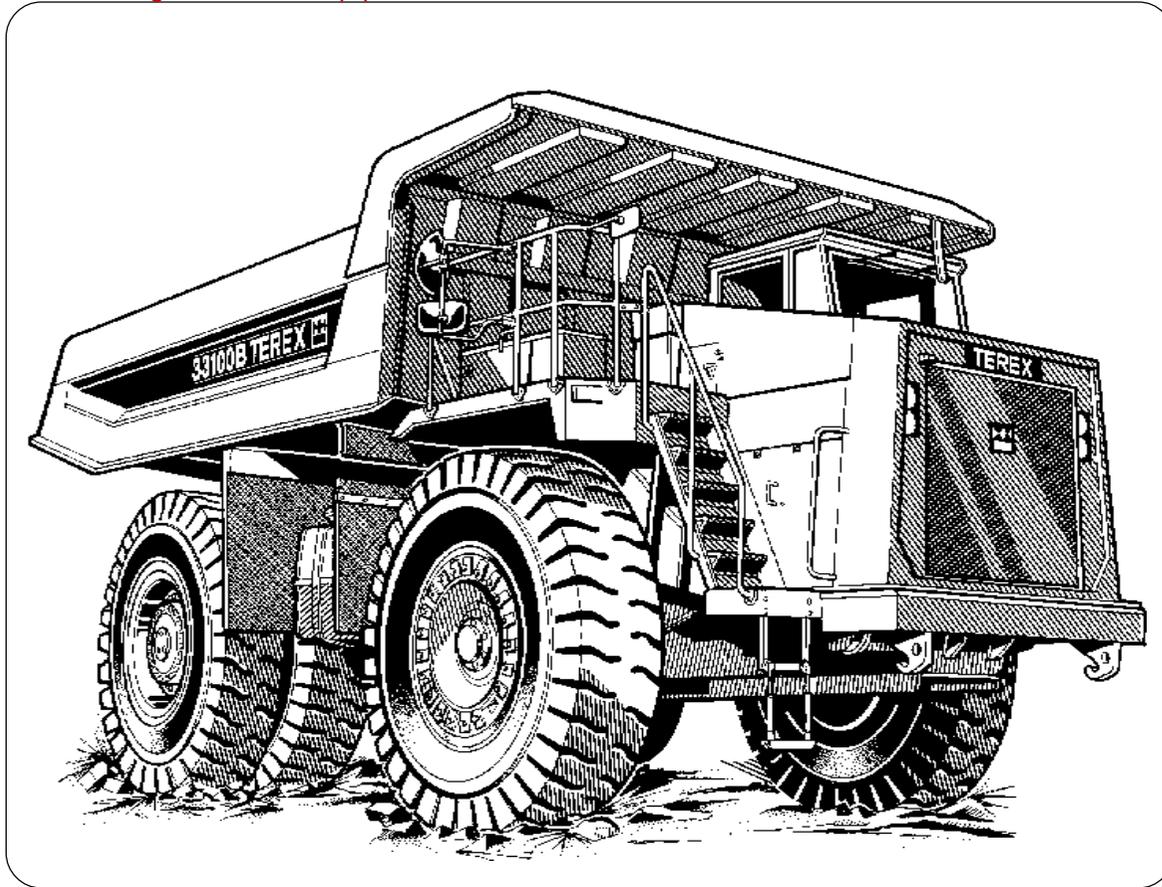

33100B Mining Truck

(Cummins KTA-38C Powered)

From Serial No. T7551001

Sample of manual. Download All 320 pages at:

<https://www.arepairmanual.com/downloads/1998-2001-terex-33100b-mining-truck-workshop-parts-manual/>

10 Aug 98
Revised Feb 01

PUBLISHED BY:
TECHNICAL PUBLICATIONS DEPARTMENT

TEREX EQUIPMENT LIMITED
MOTHERWELL, SCOTLAND

Product: 1998-2001 Terex 33100B Mining Truck Workshop Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/1998-2001-terex-33100b-mining-truck-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 320 pages at:
<https://www.arepairmanual.com/downloads/1998-2001-terex-33100b-mining-truck-workshop-parts-manual/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months after sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
 2 9058512 . Shaft
 3 9024169 . Ring
 4 9058132 . Control Assy.
 5 9058135 . . Spring
 6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

Amps	Amperes	Hsg	Housing	N.I	Not Illustrated
As R	As Required	I.D	Inside Diameter	N.L.A	No Longer Available
Assy	Assembly	L.H	Left Hand	N.S.S	Not Sold Separately
Brkt	Bracket	L.W	Lockwasher	O.D	Outside Diameter
Cad-Pltd	Cadium Plated	Lg	Long	Pr	Pair
Comm	Commencement of production	Lkg	Linkage	P.T.O	Power-Take-Off
E.S.N.....	Elastic Stop Nut	Mtg.....	Mounting	R.H.....	Right Hand
Ftgs	Fittings	N.C.....	Note Code	Std.....	Standard



Mining Truck



STANDARD SECTIONS

	CHASSIS	100		FUEL SYSTEM	200
	ENGINE	110		COOLING SYSTEM	210
	TRANSMISSION	120		STEERING SYSTEM	220
	DRIVELINE	130		BODY HOIST SYSTEM	230
	FRONT AXLE	140		BRAKING SYSTEM	250
	REAR AXLE	160		CAB	260
	BRAKE PARTS	165		BODY	270
	SUSPENSION SYSTEM	180		DECALS	290
	ELECTRICAL SYSTEM	190		MISCELLANEOUS	300

TABLE OF CONTENTS FOR MODEL

33100B

FROM SERIAL NO T7551001

19/02/01

SECT - PAGE - PLI DESCRIPTION

SECTION 100 CHASSIS

100-0010-7551 CHASSIS
 100-0040-7551 HOOD AND MOUNTING
 100-0070-7551 FENDERS AND MOUNTING R1 11-98
 100-0090-7551 LADDERS AND HANDRAILS R1 11-98
 100-0100-7551 RADIATOR GUARD AND MOUNTING
 100-0140-7551 MUDGUARDS

SECTION 110 ENGINE

110-0030-7551 ENGINE AND MOUNTING
 110-0050-7551 AIR CLEANER
 110-0060-7551 AIR CLEANER PIPES AND HOSES R1 11-98
 110-0070-7551 EXHAUST AND MOUNTING FROM S/NO. T7551001
 110-0130-7551 POWER TAKEOFF - ENG R1 02/00

SECTION 120 TRANSMISSION

120-0010-7551 TRANSMISSION MOUNTING
 120-0020-7551 TRANSMISSION BREAKDOWN R1 11-98
 120-0050-7551 CONTROL VALVE
 120-0070-7551 SHIFT CONTROL
 120-0090-7551 POWER TAKEOFF - TRANS
 120-0100-7551 FILTER
 120-0110-7551 OIL LINES-TRANSMISSION
 120-0190-7551 RETARDER CONTROL LINES - HYD
 120-0200-7551 FRONT COVER & CONVERTER GROUP
 120-0210-7551 CONVERTER HOUSING GROUP
 120-0220-7551 OIL PUMP
 120-0230-7551 FILTER ADAPT/REGULATOR VALVES
 120-0240-7551 LOCKUP VALVE
 120-0250-7551 ATEC LOCKUP DROP OUT
 120-0260-7551 RETARDER GROUP
 120-0270-7551 RETARDER CONTROL VALVE
 120-0280-7551 SPLITTER GEARING AND CLUTCHES
 120-0290-7551 MAIN HOUSING GROUP
 120-0300-7551 HIGH RANGE GEARING & CLUTCHES
 120-0310-7551 INTER RANGE GEARING & CLUTCHES
 120-0320-7551 LOW RANGE GEARING & CLUTCHES
 120-0330-7551 REV RANGE GEARING & CLUTCHES
 120-0340-7551 REAR COVER GROUP
 120-0360-7551 THROTTLE SENSOR AND MOUNTING R1 11-98

SECT - PAGE - PLI DESCRIPTION

SECTION 130 DRIVELINE

130-0010-7551 FRONT DRIVELINE R1 02/01
 130-0020-7551 REAR DRIVELINE

SECTION 140 FRONT AXLE

140-0040-7551 WHEEL, RIM AND TYRE-FRONT R1 03/00

SECTION 160 REAR AXLE

160-0020-7551 DIFFERENTIAL-REAR
 160-0030-7551 AXLE GROUP-REAR
 160-0040-7551 PLANETARY GEARING-REAR
 160-0050-7551 WHEEL, RIM AND TYRE-REAR R1 11-98

SECTION 165 BRAKE PARTS

165-0020-7551 BRAKE PARTS-FRONT WHEEL-RIGIDS
 165-0030-7551 BRAKE PARTS-REAR WHEEL-RIGIDS R1 11-98
 165-0030-7551 BRAKE PARTS-REAR WHEEL-RIGIDS (FROM T7551017)

SECTION 180 SUSPENSION SYSTEM

180-0030-7551 FRONT RIDE CYLINDER
 180-0050-7551 REAR RIDE CYLINDER

SECTION 190 ELECTRICAL SYSTEM

190-0010-7551 TERMINALS
 190-0011-7551 CONNECTORS
 190-0030-7551 CABLES/HARNESSES-CAB R1 11-98
 190-0040-7551 CABLES/HARNESSES-CHASS/ENG R1 11-98
 190-0040-7551 CABLES/HARNESSES-CHASS/ENG (FROM T7551025)
 190-0070-7551 BATTERY AND CABLES
 190-0080-7551 BATTERY MOUNTING
 190-0100-7551 ELECTRICAL LIGHTING SYSTEM
 190-0110-7551 ALTERNATOR AND MOUNTING
 190-0210-7551 REVERSE ALARM
 190-0270-7551 SWITCHES AND SENSORS R2 02/00
 190-0310-7551 ELECTRICAL HORN R1 11-98
 190-0310-7551 ELECTRICAL HORN (FROM T7551025)

TABLE OF CONTENTS FOR MODEL

33100B

FROM SERIAL NO T7551001

19/02/01

SECT - PAGE - PLI DESCRIPTION

SECTION 200 FUEL SYSTEM

200-0010-7551 FUEL TANK AND MOUNTING
 200-0040-7551 FUEL LINES
 200-0050-7551 ACCELERATOR LINKAGE
 200-0080-7551 COLD START KIT

SECTION 210 COOLING SYSTEM

210-0010-7551 RADIATOR ASSEMBLY
 210-0020-7551 RADIATOR MOUNTING
 210-0030-7551 RADIATOR PIPING
 210-0040-7551 RADIATOR HEADER TANK AND HOSES
 210-0050-7551 OIL COOLER-DISC BRAKES
 210-0051-7551 OIL COOLER PIPING-DISC BRAKES
 210-0060-7551 OIL COOLER AND PIPING-TRANS

SECTION 220 STEERING SYSTEM

220-0010-7551 STEERING LINES
 220-0040-7551 TANK AND MOUNTING-STEERING
 220-0050-7551 PUMP-STEERING R1 11-98
 220-0060-7551 PUMP AND ACCUMULATOR MOUNTING
 220-0080-7551 ACCUMULATOR-STEERING
 220-0090-7551 STEERING VALVE
 220-0120-7551 STEERING CYLINDER
 220-0130-7551 RELIEF VALVE-STEERING
 220-0150-7551 FILTER-STEERING
 220-0190-7551 STEERING LINKAGE
 220-0230-7551 STEERING COLUMN MOUNTING

SECTION 230 BODY HOIST SYSTEM

230-0020-7551 LINES AND FITTINGS-BODY HOIST R1 11-98
 230-0021-7551 SERVO CONTROL LINES-BODY
 230-0040-7551 TANK AND MOUNTING-BODY HOIST
 230-0041-7551 BREATHER LINE-HYDRAULIC TANKS
 230-0050-7551 PUMP-BODY HOIST
 230-0060-7551 CONTROL VALVE-BODY HOIST
 230-0070-7551 CONTROL VALVE MOUNTING
 230-0081-7551 JOYSTICK-BODY CONTROL
 230-0110-7551 MANIFOLD RELIEF VALVE
 230-0120-7551 RELIEF VALVE
 230-0130-7551 HOIST CYLINDERS

SECT - PAGE - PLI DESCRIPTION

SECTION 250 BRAKING SYSTEM

250-0020-7551 BRAKE LINES-HYDRAULIC
 250-0050-7551 BRAKE MANIFOLD/PAS VALVE
 250-0055-7551 PUMP-TANDEM
 250-0060-7551 BRAKE ACCUMULATOR
 250-0070-7551 TREADLE VALVE
 250-0090-7551 DIRECTIONAL CONTROL VALVE
 250-0100-7551 MONOBLOCK BRAKE VALVE
 250-0110-7551 PRESSURE REDUCING VALVE
 250-0130-7551 RETARDER CONTROL VALVE-BRAKES R1 11-98
 250-0151-7551 PARKING BRAKE VALVE
 250-0152-7551 BRAKE DUMP VALVE
 250-0240-7551 FILTER ASSEMBLY-DISC BRAKE

SECTION 260 CAB

260-0010-7551 CAB ASSEMBLY
 260-0015-7551 CAB MOUNTING R1 11-98
 260-0030-7551 CAB DOOR-LEFT HAND R1 11-98
 260-0040-7551 CAB DOOR-RIGHT HAND
 260-0080-7551 SWITCHES AND INSTRUMENTS R2 03/00
 260-0090-7551 SEAT-DRIVER
 260-0110-7551 SEAT-PASSENGER R1 11-98
 260-0120-7551 HEATER
 260-0140-7551 HEATER LINES AND WIRING
 260-0190-7551 WINDSCREEN WASHER

SECTION 270 BODY

270-0010-7551 BODY ASSEMBLY R1 11-98
 270-0080-7551 ROCK EJECTORS

SECTION 290 DECALS

290-0010-7551 DECALS-ENGLISH

SECTION 300 MISCELLANEOUS

300-0040-7551 MULTI-TUBE CLAMPS AND HARDWARE


THIS PAGE IS INTENTIONALLY LEFT BLANK

THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0010-7551 CHASSIS
FROM SERIAL NO. T7551001

DRAWING NO. P8589

P8589

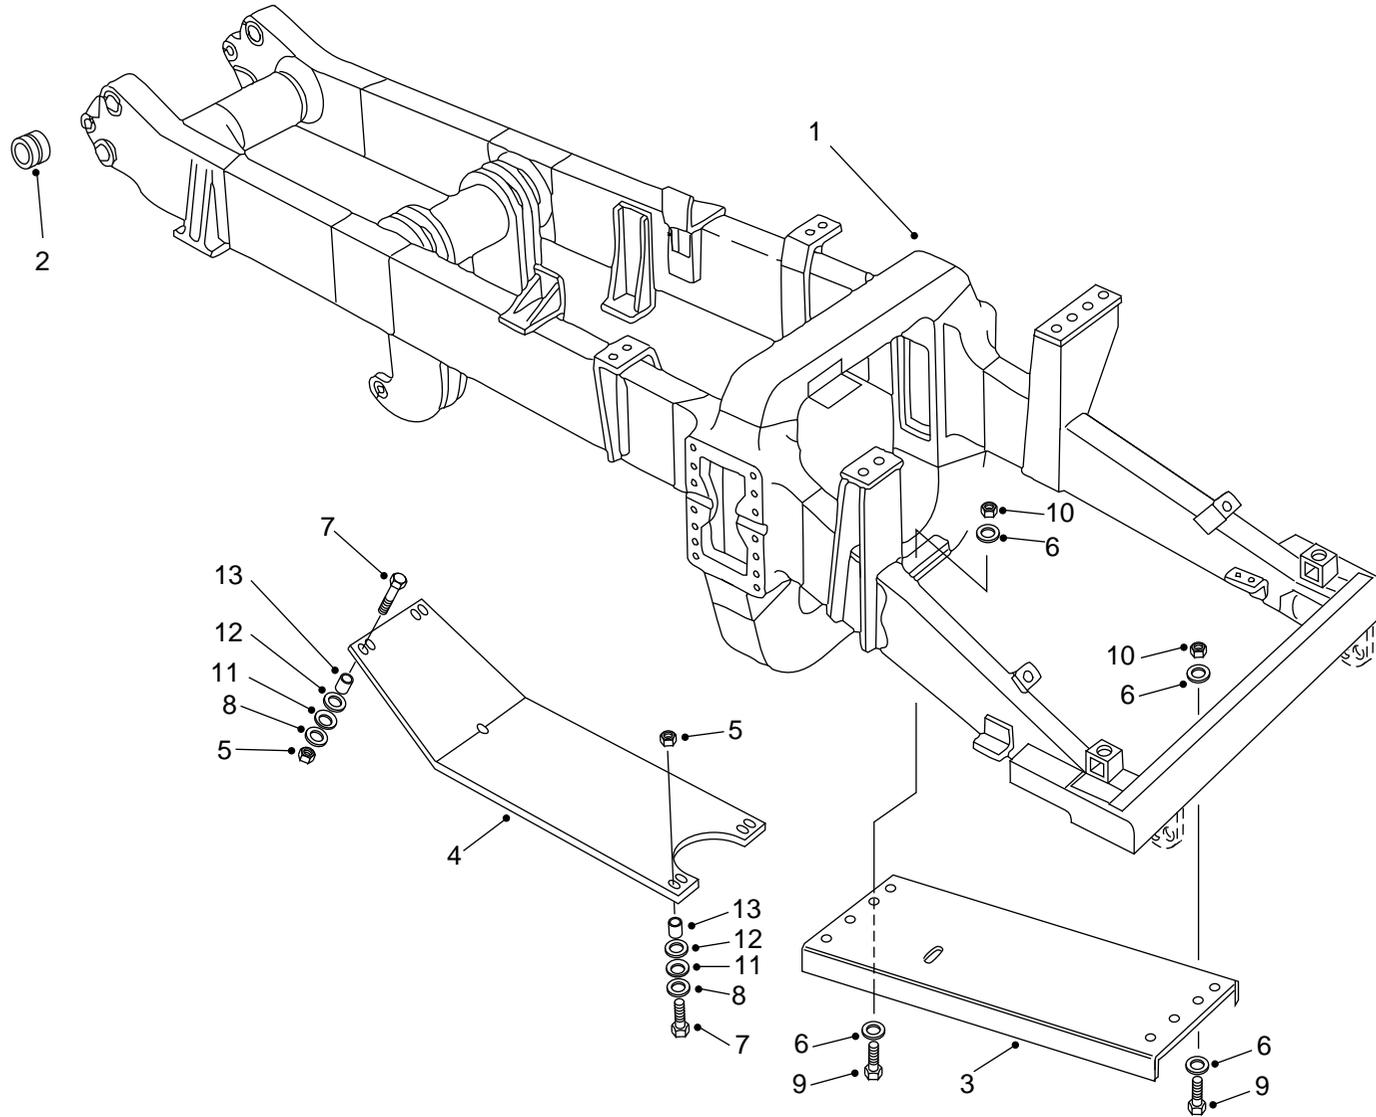


100-0010-7551 CHASSIS
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15254656	FRAME ASSEMBLY COMPL		
002	002		09011828	.BUSHING		
003	001		15247058	GUARD-ENGINE		
004	001		15252399	GUARD-TRANS		
005	008		09355771	NUT		
006	016		09176228	WASHER-HARDENED		
007	008		00271621	BOLT		
008	008		15250976	WASHER-HARDENED		
009	008		00223453	BOLT		
010	008		00274141	NUT		
011	008		15250985	SPRING-DISC		
012	008		15250984	WASHER-HARDENED		
013	008		15250945	SPACER-HARDENED		

100-0040-7551 HOOD AND MOUNTING
FROM SERIAL NO. T7551001

DRAWING NO. P9733

P9733

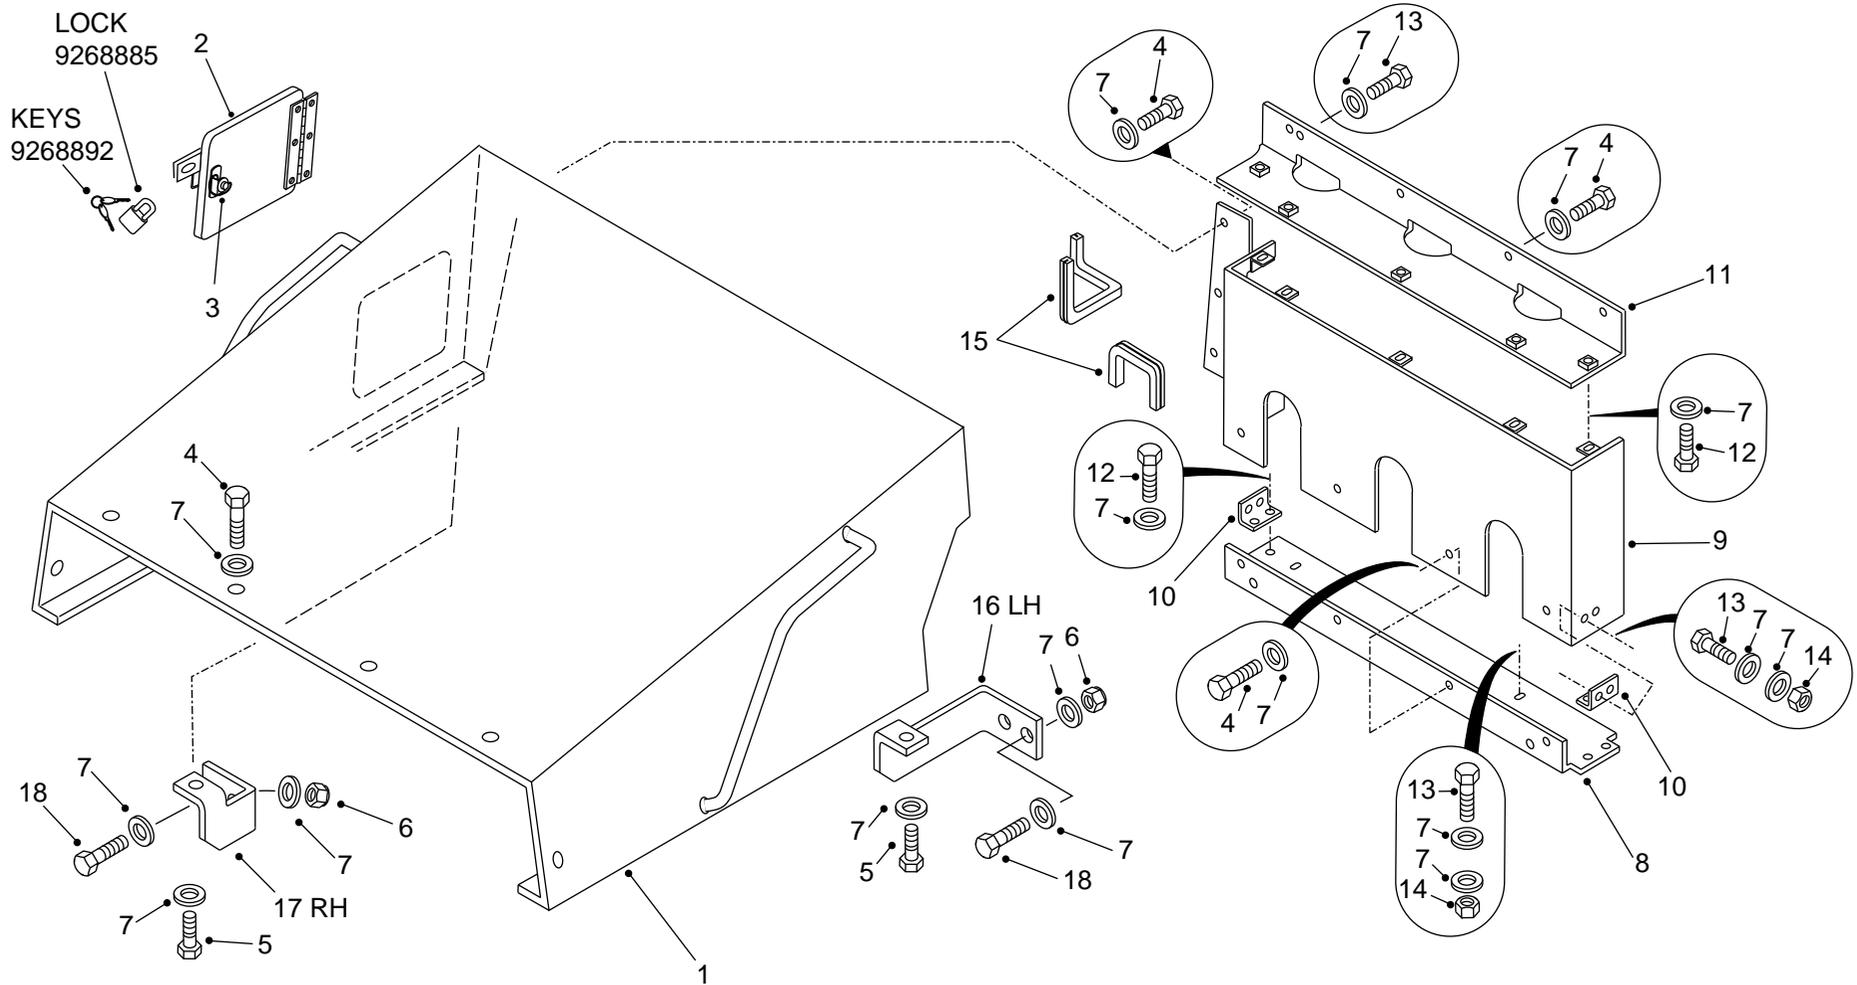


100-0040-7551 HOOD AND MOUNTING
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15301618	HOOD ASSEMBLY		
002	001		15256858	.DOOR ASSY		
003	001		15006324	..LATCH SPRING		
004	022		00179881	BOLT		
005	002		00179887	BOLT		
006	004		00274209	LOCKNUT		
007	059		09267949	WASHER-HARDENED		
008	001		15255682	BASE PLATE ASSEMBLY		
009	001		15255686	BAFFLE ASSEMBLY		
010	002		15255707	BRACKET		
011	001		15255714	PLATE ASSY-TOP		
012	013		00179883	BOLT		
013	006		00179885	BOLT		
014	004		00120378	NUT		
015	ASR		09368561	BEADING		
016	001		15254585	BRACKET-HOOD LH		
017	001		15254586	BRACKET-HOOD RH		
018	004		00179889	BOLT		

100-0070-7551 FENDERS AND MOUNTING
FROM SERIAL NO. T7551001

DRAWING NO. P9732

P9732

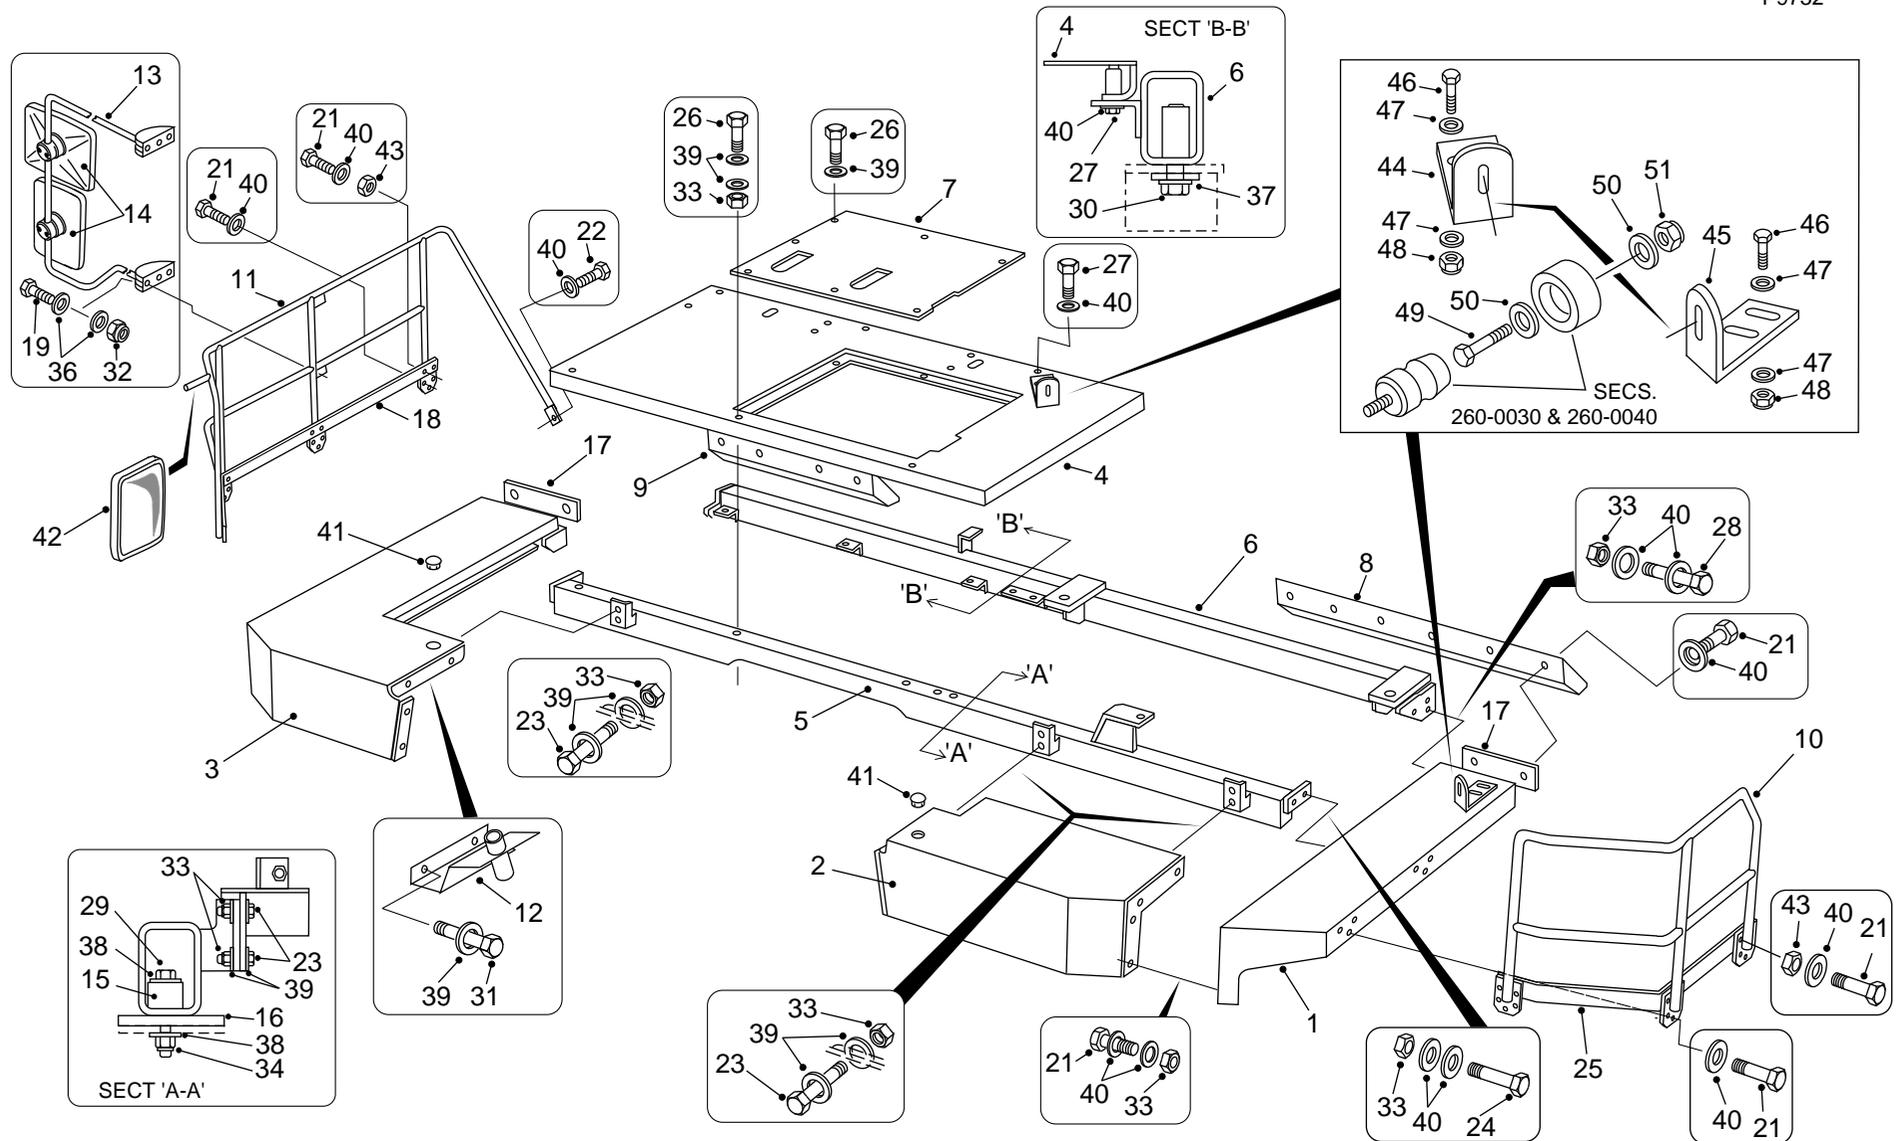

100-0070-7551 FENDERS AND MOUNTING
FROM SERIAL NO. T7551001


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15250243	EXTENSION-FENDER		
002	001		15301646	LHS FENDER ASSEMBLY		
003	001		15301614	RHS FENDER ASSEMBLY		
004	001		15301612	RHS PLATFORM ASSEMBLY		
005	001		15301686	FRONT CROSSMEMBER ASSE		
006	001		15301665	REAR CROSSMEMBER ASSEM		
007	001		15254751	COVER PLATE ASSY		
008	001		15250258	MUDGUARD		
009	001		15248436	MUDGUARD		
010	001		15302636	HANDRAIL ASSEMBLY (LH)		
011	001		15302451	HANDRAIL ASSEMBLY (RH)		
012	001		15249606	PLATE ASSY		
013	001		15233755	ARM		
014	002		09077400	MIRROR		
015	002		15005357	BLOCK		
016	002		09384350	SPACER		
017	001		15244346	SPACER (0.125 IN)		
018	001		15302440	KICK STRIP (RHS)		
019	004		00179799	BOLT		
020	006		00179883	BOLT		
021	046		00179885	BOLT		
022	001		00179887	BOLT		
023	006		00179889	BOLT		
024	004		00179892	BOLT		
025	001		15302635	KICK STRIP (LHS)		
026	004		00179896	BOLT		
027	004		00186656	BOLT		
028	008		00186689	BOLT		
029	004		00271623	BOLT		
030	004		00271710	BOLT		
031	002		00179881	BOLT		
032	004		00109084	NUT		
033	026		00274209	LOCKNUT		
034	004		09355771	NUT		
035	004		00274209	LOCKNUT		
036	004		00103339	WASHER		
037	004		09019631	WASHER-HARDENED		
038	008		09176228	WASHER-HARDENED		
039	038		09267949	WASHER-HARDENED		
040	081		09270000	WASHER-HARDENED		

100-0070-7551 FENDERS AND MOUNTING
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	010		09373547	PLUG		
042	001		15246087	MIRROR-WIDE ANGLE		
043	009		00120378	NUT		
044	001		15302694	PLATE RH		
045	001		15302618	PLATE LH		
046	004		00179885	BOLT		
047	008		09270000	WASHER		
048	004		00274209	NUT		
049	002		06350625	BOLT		
050	004		07150620	WASHER		
051	002		06470601	NUT		

100-0090-7551 LADDERS AND HANDRAILS
FROM SERIAL NO. T7551001

DRAWING NO. P8631

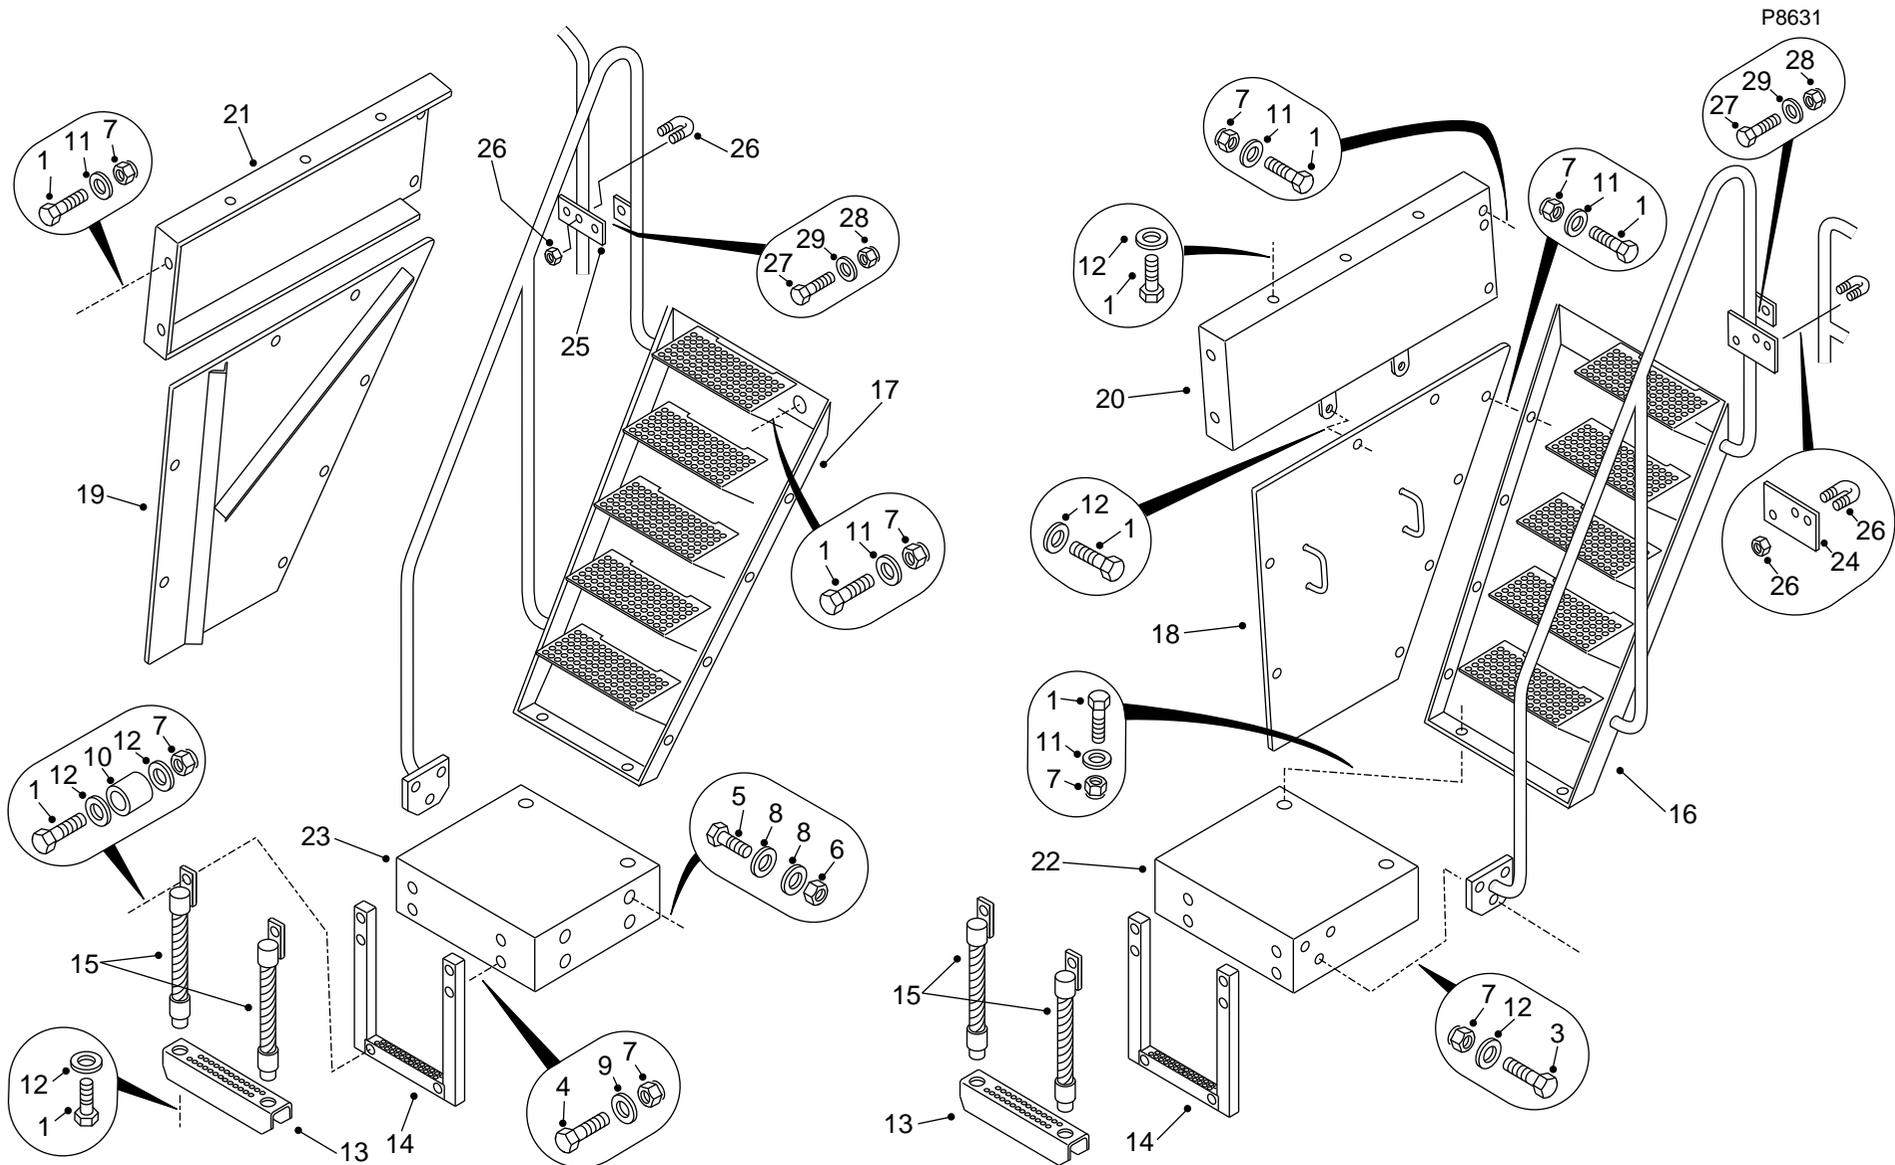


100-0090-7551 LADDERS AND HANDRAILS
 FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	036		00179885	BOLT		
002	008		00179887	BOLT		
003	006		00179889	BOLT		
004	008		00179891	BOLT		
005	008		00223451	BOLT		
006	008		00274141	NUT		
007	044		00274209	LOCKNUT		
008	016		09176228	WASHER-HARDENED		
009	016		09256624	WASHER		
010	004		09264783	SPACER		
011	036		09267949	WASHER-HARDENED		
012	042		09270000	WASHER-HARDENED		
013	002		09273175	RUNG		
014	002		15250427	STEP ASSY		
015	004		15254738	CABLE ASSY		
016	001		15254615	STEP ASSY-LH		
017	001		15254626	STEP ASSY-RH		
018	001		15254673	HOODSIDE-LH		
019	001		15254689	HOODSIDE-RH		
020	001		15254709	PANEL ASSY-LH		
021	001		15254710	PANEL ASSY-RH		
022	001		15254725	BUMPER EXTENSION-LH		
023	001		15254726	BUMPER EXTENSION-RH		
024	003		15303031	PLATE		
025	001		15303030	PLATE		
026	002		15302982	U-BOLT		
027	002		00179839	BOLT		
028	002		09417713	NUT		
029	002		09060202	WASHER-HARDENED		

100-0100-7551 RADIATOR GUARD AND MOUNTING
FROM SERIAL NO. T7551001

DRAWING NO. P8632

P8632

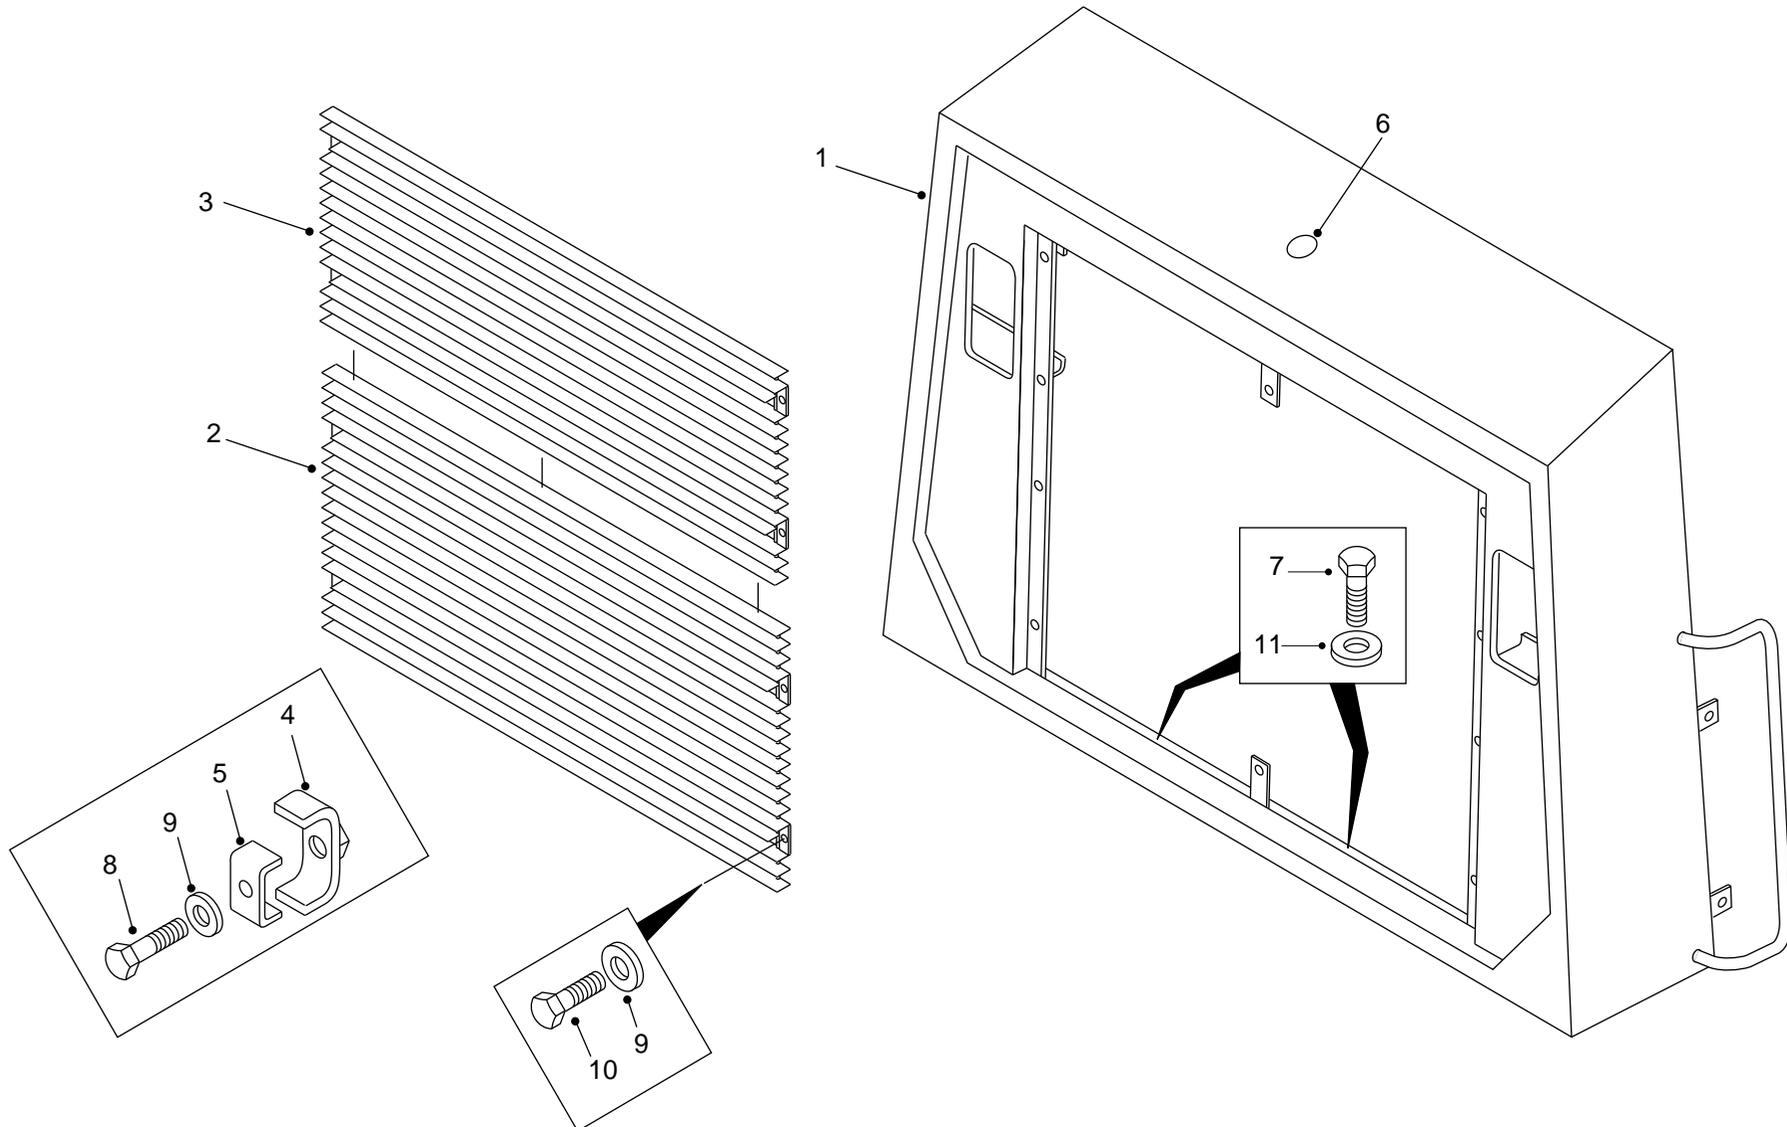









100-0100-7551 RADIATOR GUARD AND MOUNTING
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15254494	GUARD-RADIATOR		
002	001		15254571	GRILLE-BOTTOM		
003	001		15254572	GRILLE-TOP		
004	003		09068478	CLAMP		
005	005		15230817	CLIP-GRILLE		
006	001		09373559	PLUG-BUTTON		
007	006		00271605	BOLT		
008	005		00179889	BOLT		
009	013		09270000	WASHER-HARDENED		
010	008		00179883	BOLT		
011	006		09176228	WASHER-HARDENED		

100-0140-7551 MUDGUARDS
 FROM SERIAL NO. T7551001

DRAWING NO. P8723

P8723

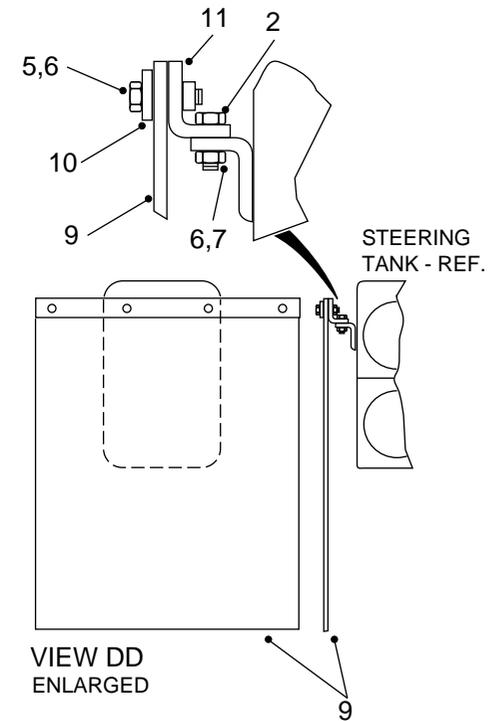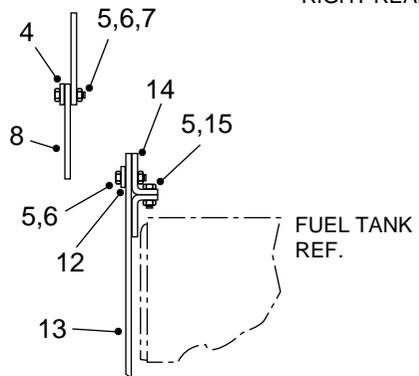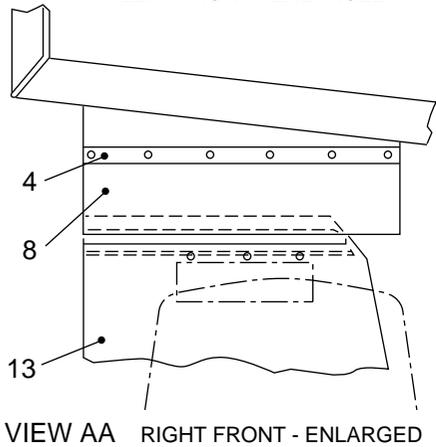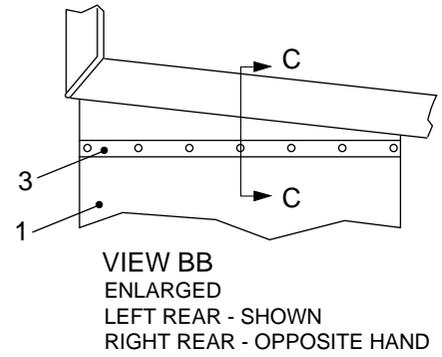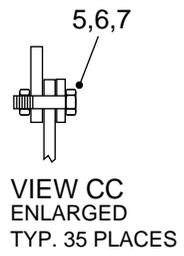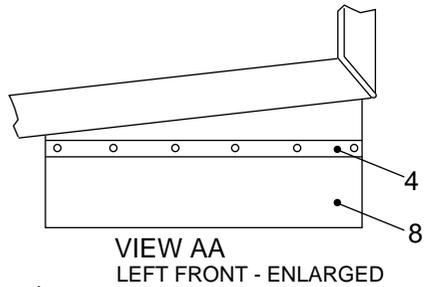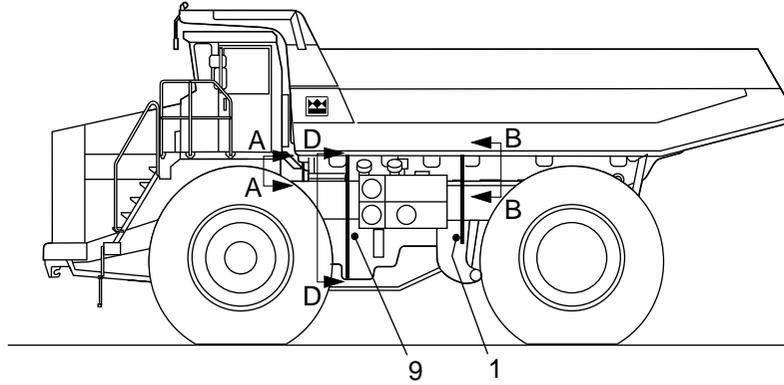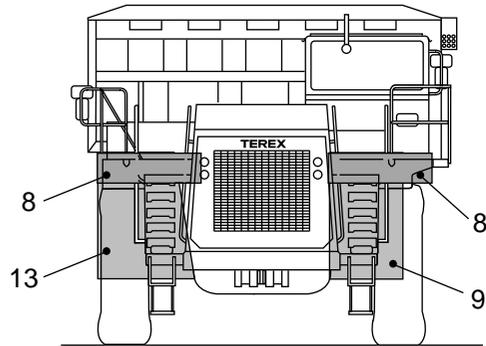


100-0140-7551 MUDGUARDS
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	002		15228028	MUDGUARD		
002	002		00179883	BOLT		
003	002		15228029	BAR		
004	002		15228035	BAR		
005	038		00179885	BOLT		
006	037		00103329	LOCKWASHER		
007	028		00102637	NUT		
008	002		15228030	FLAP		
009	001		15246422	MUDFLAP-LH		
010	001		15246531	BAR-SUPPORT		
011	001		15246528	ANGLE-SUPPORT ASSY		
012	001		15237369	BAR		
013	001		15228034	MUDGUARD		
014	001		15228032	BRACKET		
015	003		09267949	WASHER-HARDENED		

110-0030-7551 ENGINE AND MOUNTING
FROM SERIAL NO. T7551001

DRAWING NO. P9755

P9755

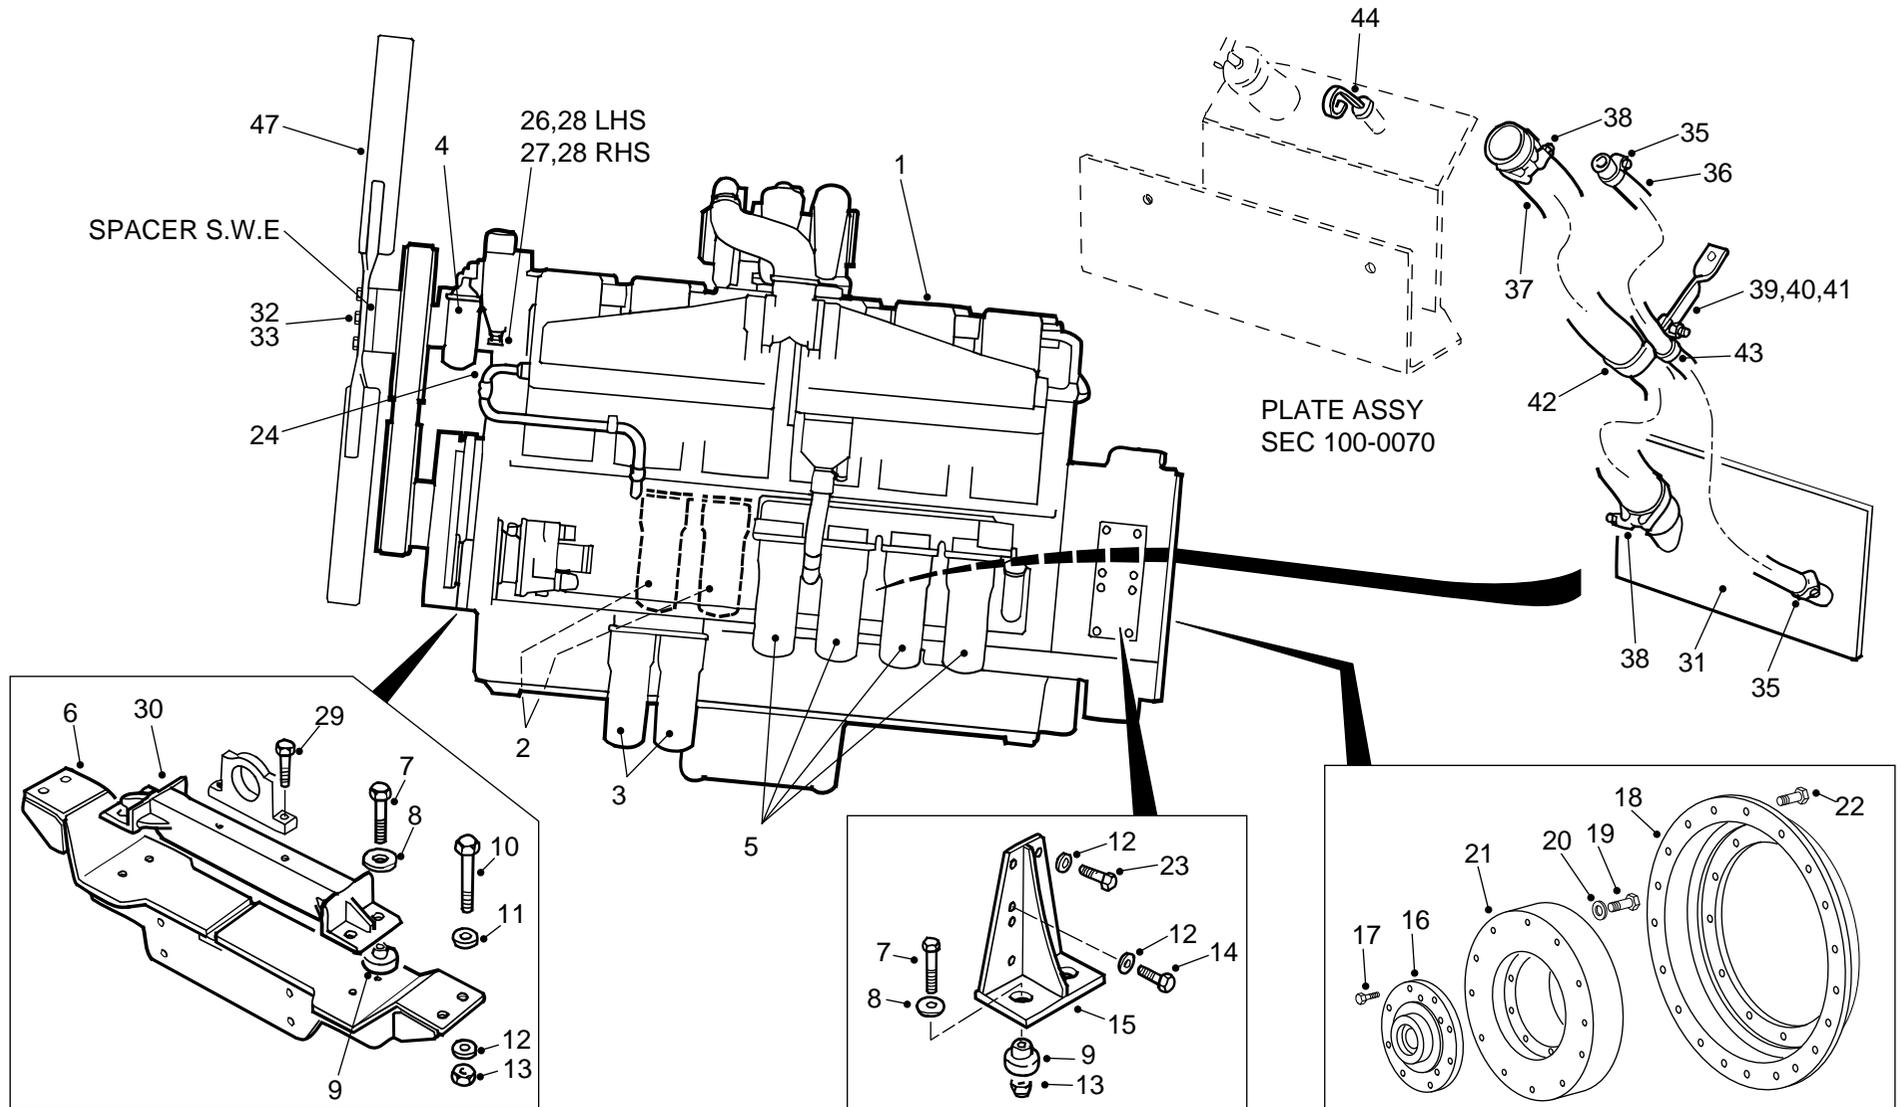

110-0030-7551 ENGINE AND MOUNTING
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15256104	ENGINE KTA38-C1050		
002	002		15267514	.FILTER-LUBE BYPASS		
003	002		15267633	.FILTER-FUEL		
004	004		15266845	.FILTER WF-15DCA4		
005	004		15267513	.FILTER-LUBE OIL		
006	001		15230673	CROSSMEMBER ASSEMBLY		
007	008		00223464	BOLT		
008	008		15020053	WASHER		
009	004		09269110	MOUNTING-SHOCK		
010	004		00223458	BOLT		
011	004		09176228	WASHER-HARDENED		
012	020		09250715	WASHER-HARDENED		
013	008		09419493	LOCKNUT		
014	013		00223452	BOLT		
015	002		09068286	BRACKET-ENG MTG REAR		
016	001		15246912	FLANGE-COUPLING		
017	008		09409907	BOLT		
018	001		15258807	ADAPTOR MACHINED		
019	012		09423067	BOLT		
020	012		09060202	WASHER-HARDENED		
021	001		15228210	COUPLING-DRIVE		
022	016		00179885	BOLT		
023	003		00186729	BOLT		
024	001		15245965	TUBE ASSY		
025	001		15245968	TUBE ASSY		
026	001		00142269	BUSHING-REDUCER		
027	001		00144218	BUSHING		
028	002		00447181	COCK-DRAIN		
029	002		00271619	BOLT		
030	001		15019632	SUPPORT		
031	001		15249669	COVER-ENG DIP & FILL		
032	006		00454993	BOLT		
033	006		00103329	LOCKWASHER		
034	001		15231571	FAN BLADE		
035	002		09139801	CLAMP		
036	001		15249612	HOSE-DIPSTICK		
037	ASR		09266565	HOSE		
038	002		09223730	CLAMP		
039	001		15024066	BRACKET		
040	001		00181370	BOLT		


110-0030-7551 ENGINE AND MOUNTING
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	001		00103026	NUT		
043	001		09131861	CLIP		
044	001		15249624	DIPSTICK		

110-0050-7551 AIR CLEANER
FROM SERIAL NO. T7551001

DRAWING NO. P8510

P8510

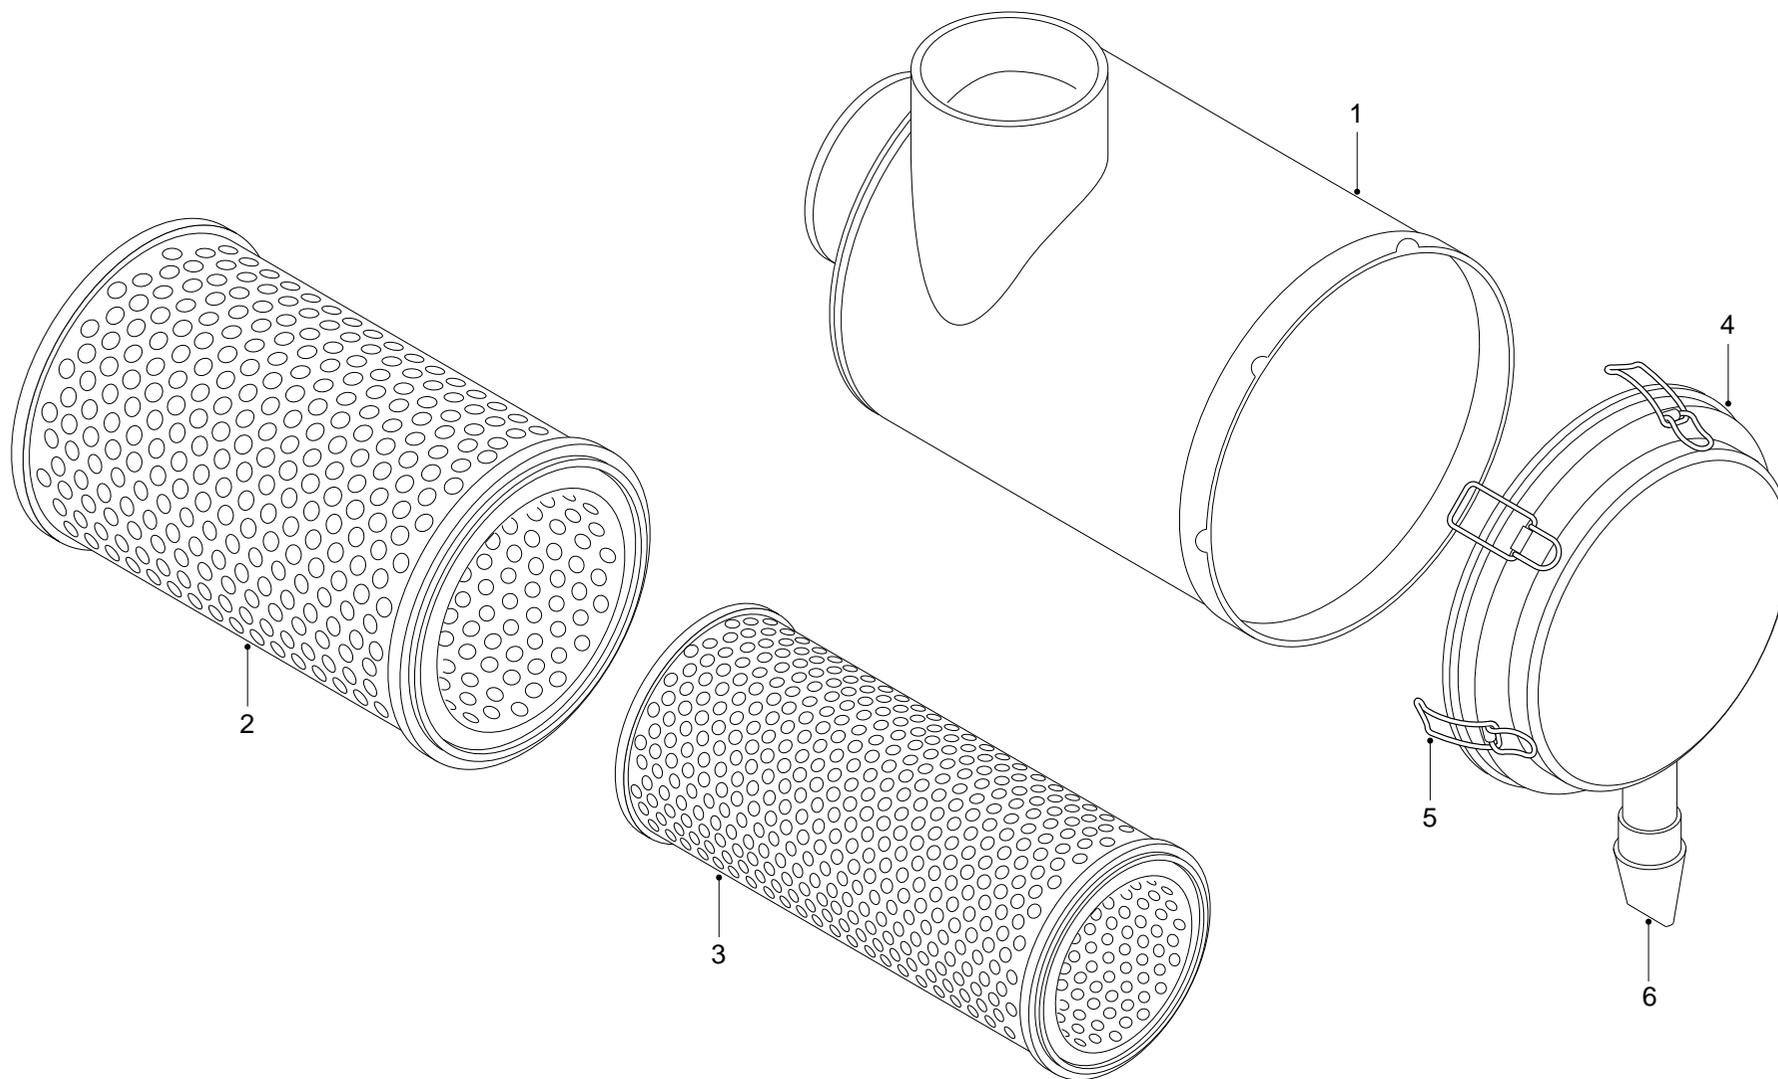


110-0050-7551 AIR CLEANER
FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	003		15254860	AIR CLEANER		
002	003		15270188	.ELEMENT-MAIN		
003	003		15270189	.ELEMENT-SAFETY		
004	003		15270190	.COVER ASSY		
005	018		15270191	..LATCH		
006	003		15270192	.VALVE-VACUATOR		

110-0060-7551 AIR CLEANER PIPES AND HOSES
FROM SERIAL NO. T7551001

DRAWING NO. P8633

P8633

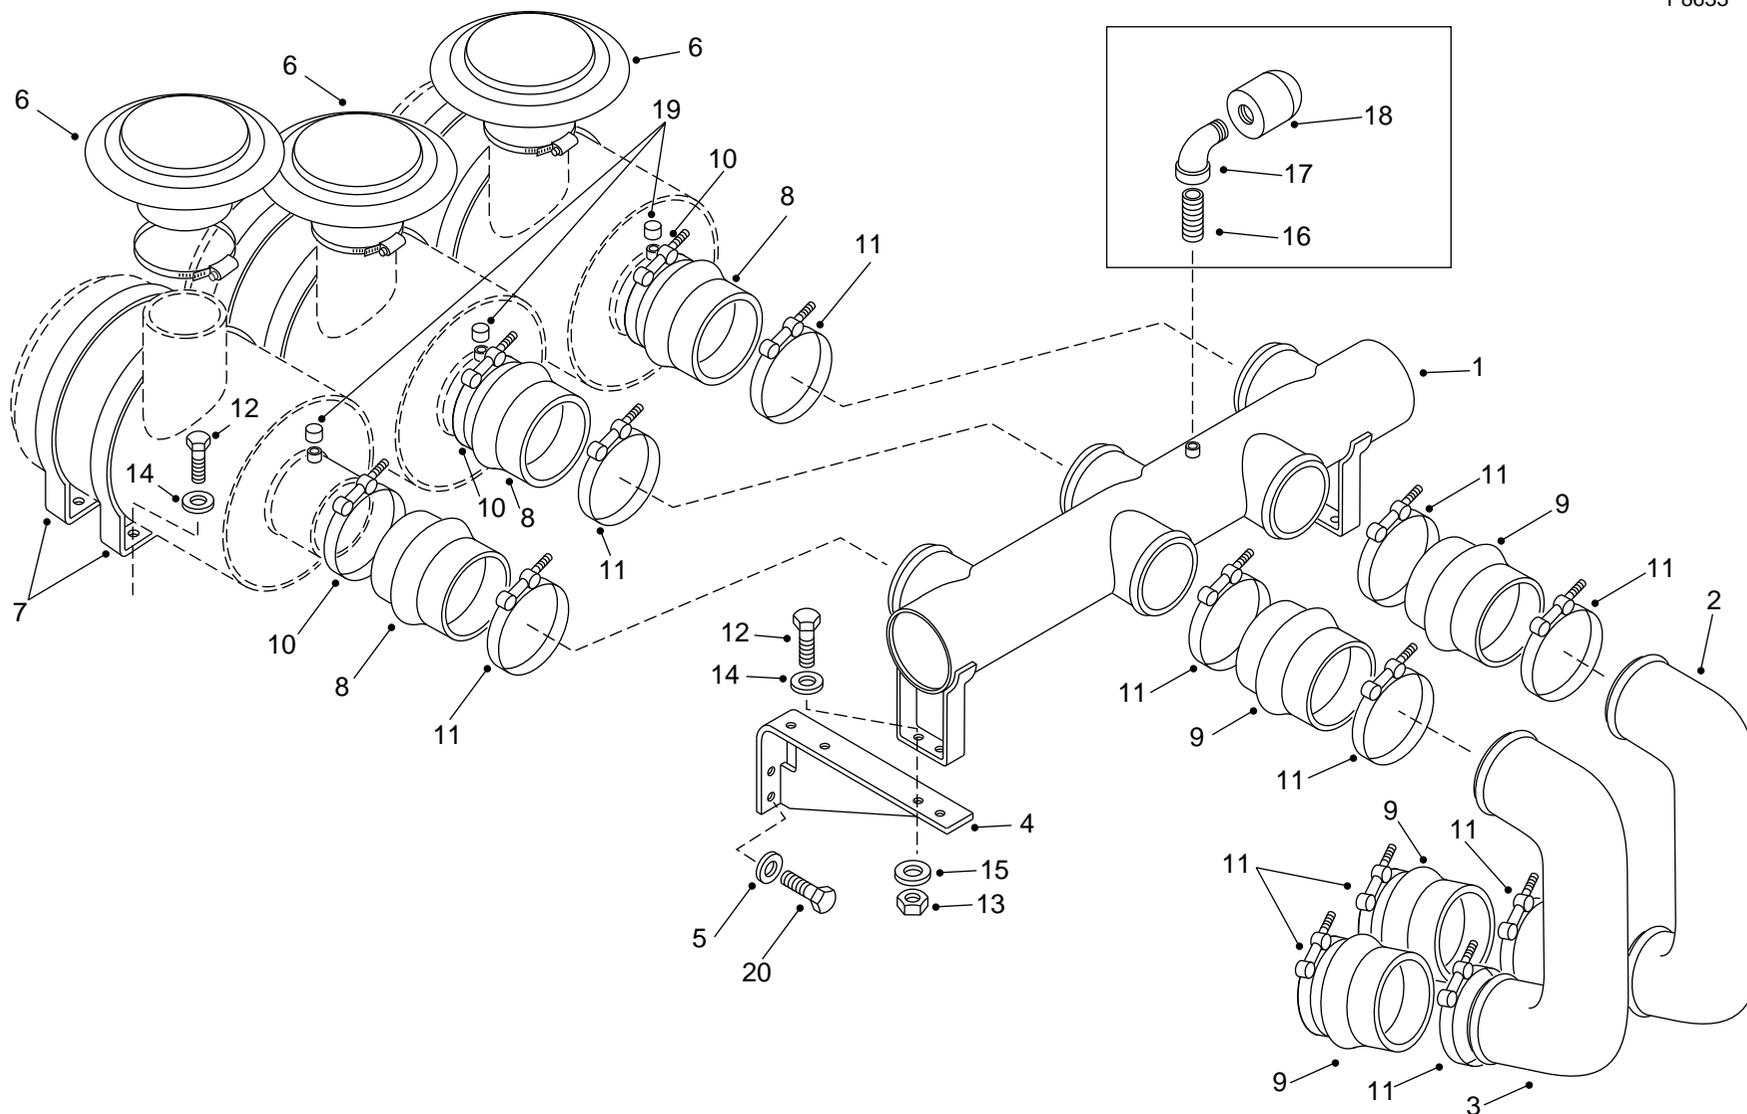

110-0060-7551 AIR CLEANER PIPES AND HOSES
 FROM SERIAL NO. T7551001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15254841	PLENUM CHAMBER		
002	001		15254842	TUBE-LH		
003	001		15254843	TUBE-RH		
004	002		15255719	BRACKET ASSY		
005	004		09267949	WASHER-HARDENED		
006	003		09004851	CAP ASSY		
007	006		15254862	BAND-MOUNTING		
008	003		15253938	HOSE-HUMP		
009	002		09197976	HOSE-HUMP		
010	003		09229246	CLAMP		
011	011		09071447	CLAMP		
012	016		00179860	BOLT		
013	004		00271500	NUT		
014	004		00106264	WASHER		
015	004		09063065	WASHER		
016	001		00443977	NIPPLE		
017	001		00105422	ELBOW		
018	001		15235949	GAUGE-AIR RESTRICT		
019	003		00105410	CAP MB2101		
020	004		00179883	BOLT		

P9950

