

Product: 2009 TEREX TA35/40 G7 Dump Truck Operator Workshop Manual [OHE862/865/917/946]

Full Download: <https://www.arepairmanual.com/downloads/2009-terex-ta3540-g7>



## TEREX Equipment Limited Operator Handbook

# Operator Handbook TA35/40 G7



Sample of manual. Download All 168 pages at:

15502483

OHE862/865/

917/946

---

Product: 2009 TEREX TA35/40 G7 Dump Truck Operator Workshop Manual[OHE862/865/917/946]

Full Download: <https://www.arepairmanual.com/downloads/2009-terex-ta3540-g7-dump-truck-operator-workshop-manualohe862865917946/>

Blank Page

Sample of manual. Download All 168 pages at:

<https://www.arepairmanual.com/downloads/2009-terex-ta3540-g7-dump-truck-operator-workshop-manualohe862865917946/>



## TEREX Equipment Limited Operator Handbook Re-order

Operator Handbook  
TA35/40G7  
15502483  
OHE862/865/  
917/946

Issued by;  
Customer Support Department  
Terex Equipment Limited  
Newhouse Industrial Estate  
Motherwell, ML1 5RY  
Scotland

Tel; +44 (0) 1698 732121  
Fax; +44 (0) 1698 503210

[www.terex.com](http://www.terex.com)

OHE862/865/917/946

Re-order Part Number  
15502483

This controlled document is the original instructions and  
should remain with the vehicle at all times.

Revision: April 2009

---

Blank Page



## TEREX Equipment Limited Operator Handbook - Introduction

Operator Handbook  
TAA35/40G7

For further information on the subject matter detailed within this operator handbook, please refer to Terex Equipment Limited Service Manuals and Product Parts Books.

Alternatively, please contact;

Customer Support Department  
Terex Equipment Limited  
Newhouse Industrial Estate  
Motherwell, ML1 5RY

Tel; +44 (0) 1698 732121  
Fax; +44 (0) 1698 503210

The illustrations, technical information, data and descriptive text in this manual, to the best of our knowledge, were correct at the time of print. The right to change specifications, equipment and maintenance instructions at any time without notice, is reserved as part of the Terex Equipment Limited policy of continuous development and improvement of the product.

No part of this publication may be reproduced, transmitted in any form - electronic, mechanical, photocopying, recording, translating or by any other means without prior permission of Customer Support Department - Terex Equipment Limited.

Please refer to TEREX Specification Sheets or consult Factory Representatives to ensure that information is current.

---

Blank Page

---

**ONLY TRAINED PERSONNEL SHOULD BE  
ALLOWED TO OPERATE THIS VEHICLE**

The operator is responsible and must be familiar with the contents of the Operator's Handbook and any local regulations prior to operating this vehicle.

---

Blank Page

---

## **CALIFORNIA Proposition 65 Warnings**

**WARNING:** Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

**WARNING:** Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.

**Wash hands after handling.**

---

## **SPARE PARTS STATEMENT**

When carrying out repairs, alterations or fitting attachments, it is important that only genuine spare parts are used to ensure the operating safety of the machine is not impaired.

It is only by using genuine parts that the technical requirements stipulated by the manufacturer can be maintained.

If a General Operating Approval is issued for this machine, it may be considered null and void if non-genuine parts are used.



## EC DECLARATION OF CONFORMITY


### MANUFACTURERS NAME AND FULL ADDRESS

TEREX EQUIPMENT LIMITED,  
MOTHERWELL,  
SCOTLAND,  
ML1 5RY

DESCRIPTION OF MACHINERY		DIRECTIVES COMPLIED WITH	
MAKE:	TEREX	87/404/EEC	97/23/EC
MODEL:	TA35 ARTICULATED TRUCK	89/336/EEC	
	TA40 ARTICULATED TRUCK	98/37/EEC	
		2000/14/EC	
UNIT SERIAL NO.		DATE OF MANUFACTURE:	
INSPECTOR:			

THE ABOVE MACHINERY, TAKING INTO ACCOUNT THE STATE OF THE ART,  
COMPLIES WITH, OR IS DESIGNED AND CONSTRUCTED AS FAR AS POSSIBLE TO COMPLY WITH,  
THE ESSENTIAL HEALTH AND SAFETY REQUIREMENTS OF THE MACHINERY DIRECTIVE.

FOR AND ON BEHALF OF THE MANUFACTURER:

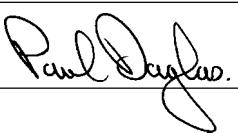NAME:	PAUL DOUGLAS	SIGNATURE:
POSITION:	CHIEF ENGINEER	

---

## **SPARE PARTS STATEMENT**

When carrying out repairs, alterations or fitting attachments, it is important that only genuine spare parts are used to ensure the operating safety of the machine is not impaired.

It is only by using genuine parts that the technical requirements stipulated by the manufacturer can be maintained.

If a General Operating Approval is issued for this machine, it may be considered null and void if non-genuine parts are used.



## EC DECLARATION OF CONFORMITY

### MANUFACTURERS NAME AND FULL ADDRESS

TEREX EQUIPMENT LIMITED,  
MOTHERWELL,  
SCOTLAND,  
ML1 5RY

DESCRIPTION OF MACHINERY		DIRECTIVES COMPLIED WITH	
MAKE:	TEREX	87/404/EEC	97/23/EC
MODEL:	TA35 ARTICULATED TRUCK	89/336/EEC	
	TA40 ARTICULATED TRUCK	98/37/EEC	
		2000/14/EC	
UNIT SERIAL NO.		DATE OF MANUFACTURE:	
INSPECTOR:			
THE ABOVE MACHINERY, TAKING INTO ACCOUNT THE STATE OF THE ART, COMPLIES WITH, OR IS DESIGNED AND CONSTRUCTED AS FAR AS POSSIBLE TO COMPLY WITH, THE ESSENTIAL HEALTH AND SAFETY REQUIREMENTS OF THE MACHINERY DIRECTIVE.			
FOR AND ON BEHALF OF THE MANUFACTURER:			
NAME:	PAUL DOUGLAS	SIGNATURE:	
POSITION:	CHIEF ENGINEER		

---

## **SPARE PARTS STATEMENT**

When carrying out repairs, alterations or fitting attachments, it is important that only genuine spare parts are used to ensure the operating safety of the machine is not impaired.

It is only by using genuine parts that the technical requirements stipulated by the manufacturer can be maintained.

If a General Operating Approval is issued for this machine, it may be considered null and void if non-genuine parts are used.

---

## CONTENTS

### 1. INTRODUCTION

Introduction	1-5
Safety Precautions	1-5
Machine Identification	1-6
Theft Deterrent Practices	1-6

### 2. SAFETY PRECAUTIONS

General	2-4
Articulation and Oscillation Locks	2-5
Vehicle Lifting Precautions	2-5
Vehicle Tie Down Precautions	2-5
Preventing Fire Hazards	2-6
Mounting and Dismounting	2-7
Pre-Starting	2-8
Starting	2-8
Operating	2-8
Roading	2-10
Lubrication and Servicing	2-10
Wheels and Tyres	2-12
Avoid Tyre Explosion Hazard	2-13
Decals and Instruction Plates	2-14

### 3. CONTROLS AND OPERATING

Controls and Instruments	3-3
Fuse / Relay Box	3-4
Basic Data	3-5
Warning Lights	3-5
Instruments	3-7
Switches	3-9
Controls	3-12
Heater	3-13
Air Conditioning	3-13
Operator's Seat -	
Air Suspension	3-14
Operator's Seat - Operation	3-15
Seat Belt	3-16
Machine Controls	3-17
Braking	3-17
Transmission Retarder	3-18
Engine Brake	3-19
Engine	3-20
Electronic Foot Pedal	3-20
Detroit Diesel Electronic	
Control	3-20
Description	3-21
Operation	3-22
Allison Series 4000 Automatic	
Shift Transmission	3-29
4th GEN Shift Controller	3-30
Dropbox	3-36

---

Blank Page

---

### **3. CONTROLS AND OPERATING (cont.)**

Differential Lock	3-36
Hydraulic Controls	3-37
Steering	3-38
Body Control	3-39
Tilting Cab	3-40
Hood	3-41

### **4. OPERATING THE TRUCK**

Pre-Starting Inspection	4-3
Component Checks	4-3
Engine Operation	4-6
Starting the Engine	4-7
Starting the Engine with Jumper Cables	4-9
Pre-Operating Checks	4-10
Brake Function Checks	4-11
Driving and Stopping	4-12
Stopping the Engine	4-14
Parking	4-15

### **5. WORKING THE TRUCK**

Working the Truck .....	5-3
Loading .....	5-3
Hauling .....	5-5
Dumping .....	5-6
Empty Return .....	5-7

### **6. ROADING**

Roading .....	6-3
General .....	6-3
Preparation Prior to Roading	6-3
In Case Of Trouble	6-4

### **7. MOVING DISABLED TRUCK**

Moving Disabled Truck	7-3
-----------------------	-----

### **8. LUBRICATION AND SERVICING**

Safety Precautions	8-3
Lubrication and Servicing	8-4
Lubrication and Service Chart	8-5
Miscellaneous Servicing Information	8-7
Recommended Lubricants	8-10

### **9. TECHNICAL DATA**

TA35	9-3
TA40	9-9

### **10. SYMBOL IDENTIFICATION**

### **11. TECHNICAL LITERATURE REQUEST FORM**

---

Blank Page

## INTRODUCTION

This Handbook is provided as a guide to familiarize the operator and serviceman with the controls, recommended inspections, start-up, operating, shutdown and parking procedures for TA35/TA40 Articulated Trucks.

Pay particular attention to the safety alert symbol, which is intended to alert you to important safety precautions. It signifies:



Safety alert symbol

**ATTENTION! BECOME ALERT! YOUR SAFETY AND THE SAFETY OF OTHERS IS INVOLVED!**

### Safety Precautions

The machine should be properly operated and maintained to keep it in safe, efficient operating condition. Be sure that all controls are free of mud, grease, or other matter that might cause slips hazardous to the operator, serviceman, or other personnel or equipment. Report all malfunctions to those responsible for maintenance, and, do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This Handbook describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide however, for other than normal conditions or situations, and therefore, servicemen and operators must be safety conscious and alert to recognize potential servicing or operating safety hazards at all times, and take necessary precautions to assure safe servicing and operation of the machine.




### WARNING

**These machines are equipped with cylinders containing compressed nitrogen gas. Transportation of these machines by any method may require a special permit from the appropriate authority of the country involved. Consult your dealer for details.**

All information, illustrations and specifications contained in this publication are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

Continuing improvement and advancement of the design may cause changes to your machine which may not be included in this publication. Each publication is reviewed and revised, as required, to update and include these changes in later editions.

This Handbook contains lubrication and routine servicing instructions, most of which can be performed in the field. Maintenance manuals containing repair/rebuild procedures can be obtained from your dealer.

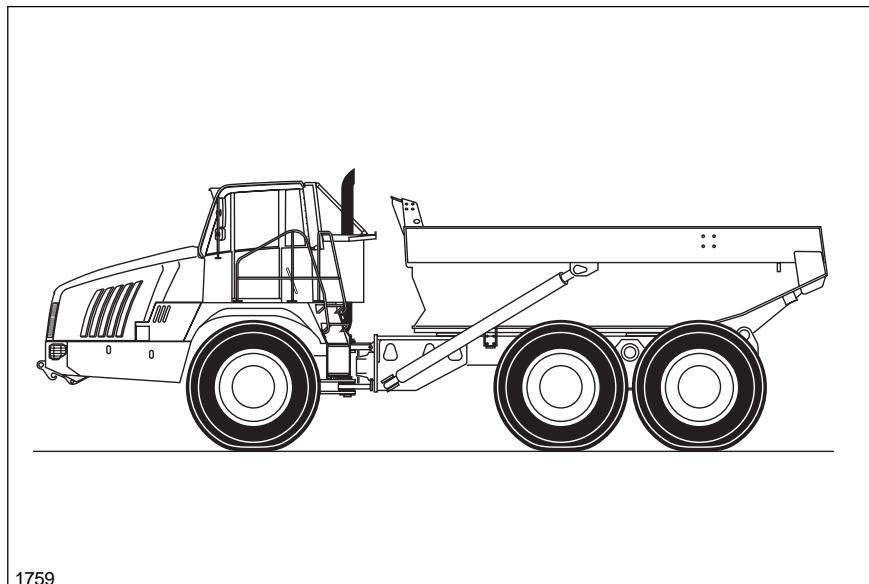

## Intended use of machine

This product and its approved attachments are primarily intended to be used as described in this manual.

Use of this product in any other way is prohibited and contrary to its intended use.

## Machine Identification

While reading this handbook you will notice references to controls and equipment which may not be found on all machines. It is important that you know your machine and its equipment and how to operate it properly.

Information regarding the machine model, code and chassis serial number is found on the unit serial number plate on the rear right of the front frame. The machine model and serial number should always be referenced in any correspondence with your dealer or factory.

There is a dealer serving every part of the world where these products are sold. Your dealer is ready to provide you with any additional information needed and should be consulted for additional publications for this machine.

## Theft Deterrent Practices

### General

The owner/operator should take the following precautions to discourage theft, to aid in the recovery in the event that the machine is stolen, or to reduce vandalism.

### Actions to Discourage Theft and Vandalism

Remove all keys any time the machine is left unattended.

At night lock all doors and attach, secure or lock all anti-vandalism and anti-theft devices on the machine.

Immobilize the machine by removing a critical electrical or starting

system device, for example Fuse 31 or 32.

Upon receipt of a machine, record the machine serial number and the serial numbers of all major components and attachments. Keep this list up to date and filed in a safe location for fast retrieval.

Place a decal or notice on the machine that all serial numbers are recorded.

Discourage the thief! Inspect the gates and fences of the machinery storage yard or construction site. Keep machines in well-lit areas and ask the local law enforcement authorities to make frequent checks around the storage yard or work site.

Establish liaison with neighbours and ask them to watch equipment left at job sites and to report any suspicious activities to the local law enforcement authorities.

Make frequent inventories of machines to promptly detect losses or vandalism.

### **Actions to Aid in Recovery of Stolen Machines**

In the event of theft, immediately notify the law enforcement authorities having jurisdiction. Provide the investigating officer with name, type of equipment, chassis and serial numbers of major attachments and components. It is helpful to show the investigating officer an Operator's Handbook, photographs, and advertising, to familiarize him with the appearance of the machine.

Report the theft to the insurance company. Provide the model and all serial numbers.

Report the model and serial numbers of the stolen machine to a dealer handling the respective line of equipment. Request that the dealer forward this same information to the equipment manufacturer.

---

Blank Page



## 2 - Safety Precautions

---

Blank Page

## SAFETY

### Safety Alert Symbol

The safety alert symbol is used to alert you to a potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



Safety alert symbol

### Hazard Classification

A multi-tier hazard classification system is used to communicate potential personal injury hazards. The following signal words used with the safety alert symbol indicate a specific level of severity of the potential hazard. Signal words used without the safety alert symbol relate to property damage and protection only. All are used as attention getting devices throughout this manual as well as on decals and labels fixed to the machinery to assist in potential hazard recognition and prevention.



**DANGER**

**DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**CAUTION**

**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

**CAUTION**





**CAUTION** used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

# Safety Precautions

## SAFETY PRECAUTIONS

### General

- \* Read this Operator's Handbook and learn the operating characteristics and limitations of the vehicle. Know what operating clearances the vehicle requires.
- \* Read the AEM Safety Manual and follow the recommended safety precautions.
- \* Know clearances of all side and overhead obstructions such as wires, bridges, etc., for operating safely.
- Be especially aware of overhead power lines.
- \* Always know all traffic rules, signs, flags and hand signals used on the job and know who has the responsibility for signalling.
- \* Be aware of operating hazards that weather changes can create on the job. Know proper procedures to follow when a severe rain or electrical storm strikes.
- \* Never attempt to operate or work on a vehicle when not feeling physically fit.
- \* Know what safety equipment is required and use it. Such equipment may be: Hard hat, safety glasses, reflector type vests, respirators and ear plugs.
- \* Never wear loose clothing, rings, watches etc., that might catch levers and controls and cause loss of control.
- \* Keep hands and controls free from water, grease and mud to assure nonslip control.
- \* Handle fuels and lubricants carefully and clean up spills to avoid fire and slipping hazards.
- \* Clean any mud, grease or oil from controls, handrails, ladders and decks. Lash necessary tools securely and remove all loose items before operating the vehicle. Never rush. Walk, do not run.
- \* Never carry more than one passenger and only in the passenger seat.

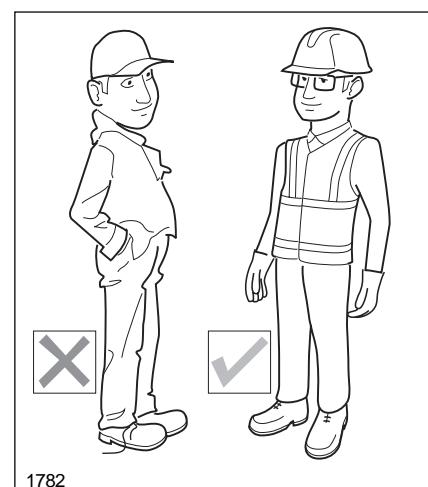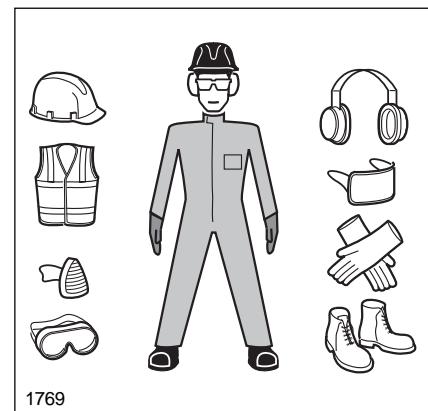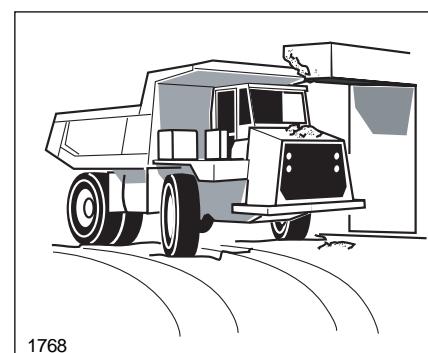
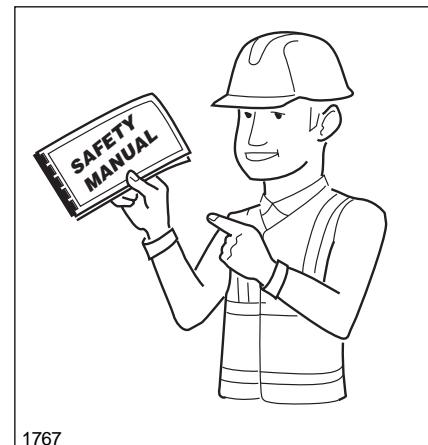


### ⚠️ WARNING

**The protection offered by the roll over and falling object protective structure may be impaired if it has been subjected to any modification or damage. Unauthorized modification will void certification.**

## Articulation and Oscillation Lock


- \* Always connect the articulation and oscillation lock bar before working in the articulation area, before lifting the vehicle and during transportation of this vehicle by trailer/vessel.
- \* Always disconnect the articulation and oscillation lock bar and secure in the 'Stowed' position before operating the vehicle. The vehicle would not be free to steer otherwise.

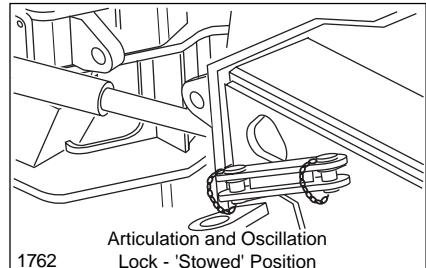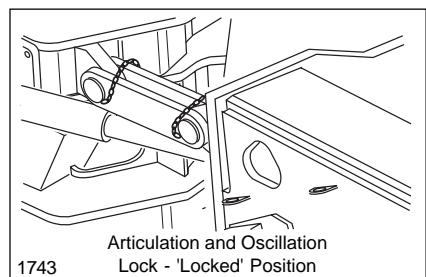

## Vehicle Lifting Precautions


- \* Prior to lifting, the vehicle should be parked on a level surface, wheels blocked, articulation and oscillation lock bar connected, and the parking brake disengaged.
- \* The vehicle should be lifted using a spreader bar if possible. Lift using FOUR slings from the lifting points provided at the bumper end of the front chassis and at the rear of the body.

**Note:** Be aware that this vehicle is free to oscillate if not lifted correctly. If in any doubt contact your dealer for further information.

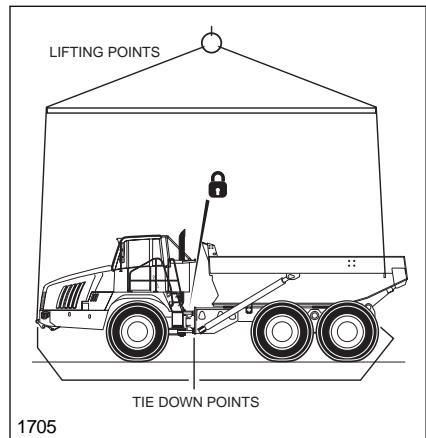

## Vehicle Tie Down Precautions

- \* The vehicle should be secured at the tie down points located at the bumper end of the front chassis, the front face of the trailer chassis and the tow pin at the rear of the trailer chassis.

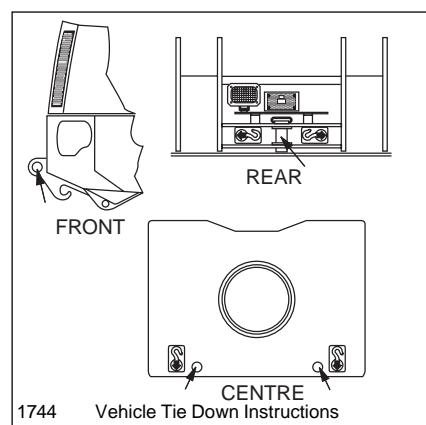


# Safety Precautions

## Preventing Fire Hazards


### General Fire Precautions

- \* Make sure the vehicle has a fire extinguisher and that it is accessible and fully charged. (Not furnished with the vehicle.)
- \* Never use an open flame as a light anywhere on, or around, the vehicle.
- \* Clean all dirt, oil, grease and other fluids from systems and components to minimize fire hazards and aid in identifying loose or leaking lines or fittings.
- \* Check the engine compartment for rubbish, oily rags or other debris that could cause fires before starting the engine.
- \* Don't let greasy, oily rags or similar hazards accumulate in the cab.
- \* If the vehicle has been operated with an under inflated tyre. Make sure that the tyre has cooled sufficiently before parking and leaving the vehicle unattended.

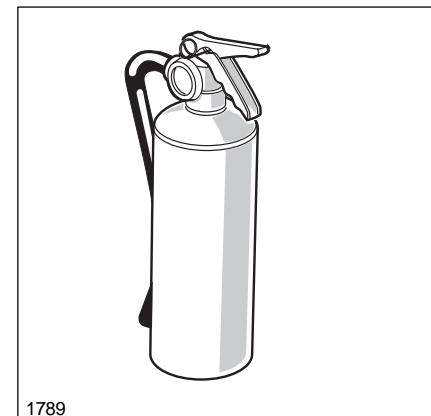

### Flammable Fluid Precautions


- \* Don't use diesel fuel or other flammable fluids for cleaning purposes. Use approved, nonflammable solvents.
- \* Make sure all fluid system caps, drain cocks, valves, fittings, lines, etc., are secure and leak free.
- \* Never use an open flame (match, lighter, etc.) when checking fuel, lubricant, coolant and battery fluid levels, or when checking for fluid leaks. Use a flashlight or other safe lighting only.
- \* Shut off engine and use extra caution if engine is hot when refuelling. Ground the hose spout to prevent sparks when spout is touched to fuel tank filler tube.
- \* Never smoke while checking or adding fuel or other fluids or handling fluid containers and lines.
- \* Use care and do not stand downwind when adding fuel or other flammable fluids to tanks and reservoirs to avoid fluids being blown or splashed onto clothing.
- \* Close fuel tank shut-off valves, if used, before servicing fuel system.
- \* When preparing vehicles or components for storage, seal and tape all openings and close containers tightly to seal in all volatile inhibitor fluids and compounds used.

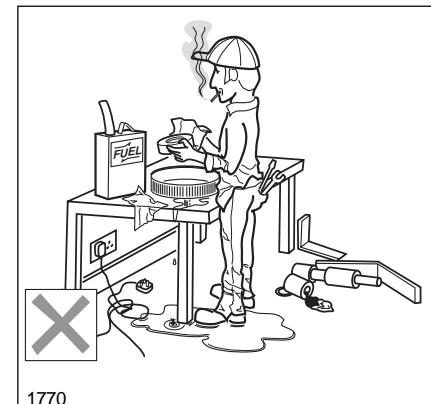

- \* Follow manufacturer's recommendations when handling and using engine-starting fluids and disposing of spent containers. Do not puncture or burn empty containers. These fluids are explosive and highly flammable.


## Electrical Hazard Precautions

- \* Never smoke or allow open flames or sparks near batteries.
- \* Leave battery box open when charging batteries in the vehicle for adequate ventilation of explosive gas (hydrogen) produced.
- \* Always disconnect batteries before repairing electrical system to avoid danger of fire-causing sparks. Disconnect the battery ground cable first and reconnect it last.
- \* Always disconnect batteries, alternator leads, engine ECM, hydraulic system ECU, body control lever, transmission ECU, instrument panel ECU and all harness connections at the front of the cab before carrying out any welding on the vehicle.
- \* Never check the battery charge by placing metal objects across the battery posts, to avoid sparks at battery posts.
- \* Use jumper cables only as recommended. Improper use can result in battery explosion or unexpected vehicle motion.
- \* Never operate the engine starter for more than 30 seconds, and allow two minutes between long cranking periods for cooling. An overheated starter could cause a fire.
- \* If electric coolant or lubricant heaters are used, be sure to follow heater manufacturer's recommendations for use to avoid electrical or fire hazards or both.

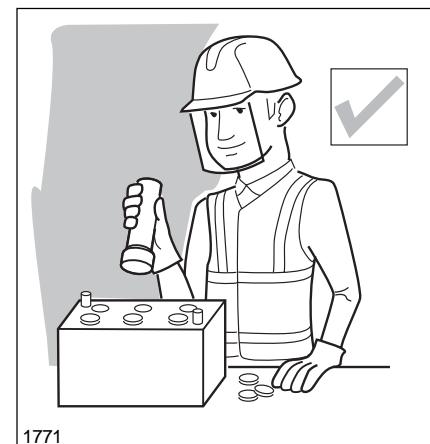

## Mounting and Dismounting

- \* Only use steps and hand holds provided to mount or dismount the vehicle. Do not grasp the steering wheel.
- \* Always face the access system and maintain at least three points of support to mount or dismount the vehicle.
- \* Always use care when mounting the vehicle with oil covered, frosted, or iced fenders, decks, hand holds or steps.
- \* Never mount or dismount a moving vehicle. Never jump off the vehicle.

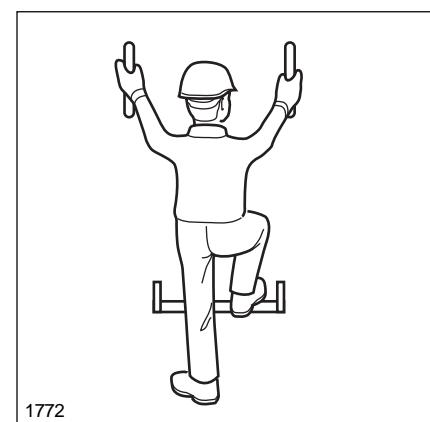

# Safety Precautions

Product: 2009 TEREX TA35/40 G7 Dump Truck Operator Workshop Manual [OHE862/865/917/946]

## Pre-Starting


Product Download: <https://www.arepairmanual.com/downloads/2009-terex-ta3540-g7>

- \* If engine is to be started and run indoors, ensure proper ventilation to remove deadly exhaust gases.
- \* Always perform 'Pre-Starting Inspection' instructions described on page 4-3 to ensure the vehicle is ready for operation.
- \* Always walk around the vehicle to make sure no-one is working on, underneath or close to the vehicle before starting the engine or operating the vehicle.
- \* Adjust, secure and latch the seat and fasten the seat belt before starting the vehicle.
- \* Sound horn before starting the engine or beginning to move the vehicle; two blasts for forward and three blasts for reverse.




## Starting

- \* Do not start the engine or operate any control if there is a 'DO NOT OPERATE' or similar warning sign attached to any control.
- \* Use jumper cables only as recommended. Improper use can result in battery explosion or unexpected vehicle motion.
- \* Always obey 'Starting the Engine' instructions described on page 4-7.
- \* Do not bypass the vehicle's neutral-start system. The neutral-start system must be repaired if it malfunctions.
- \* Start and operate the vehicle only from the operator's seat.

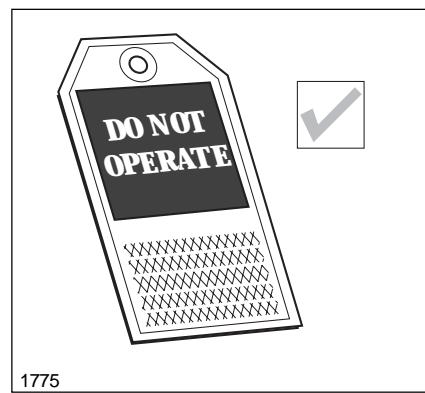

## Operating

- \* Ensure all cab glass, mirrors and light lenses are clean during vehicle operation for maximum visibility. Ensure mirrors are properly set / positioned.
- \* Always keep cab floor clear of anything that could restrict full operation of pedals.
- \* Always make sure all gauges, warning/indicator lights and controls are working properly before operating the vehicle.
- \* Always perform 'Pre-Operating Checks' described on page 4-10 to ensure the vehicle is ready for operating.
- \* Always wear seat belts when operating the vehicle.
- \* Do not operate if exposed personnel enter the immediate work area.

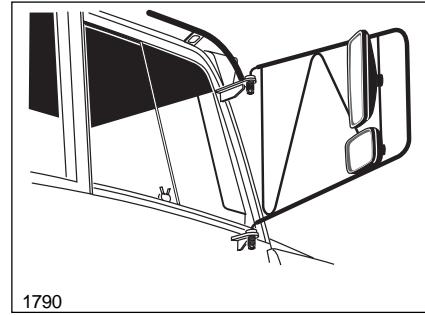

Sample of manual. Download All 168 pages at:

- \* <https://www.arepairmanual.com/downloads/2009-terex-ta3540-g7-dump-truck-operator-workshop-manualhe862865917946>

