


Product: 2000 [CLICK HERE FOR STANDARD TABLE OF CONTENTS](#) Off-Highway Truck [CLICK HERE FOR OPTIONAL TABLE OF CONTENTS](#) Manual  
Full Download: <https://www.arepairmanual.com/downloads/2000-2009-terex-tr70-off-highway-truck-workshop-parts-manual/>

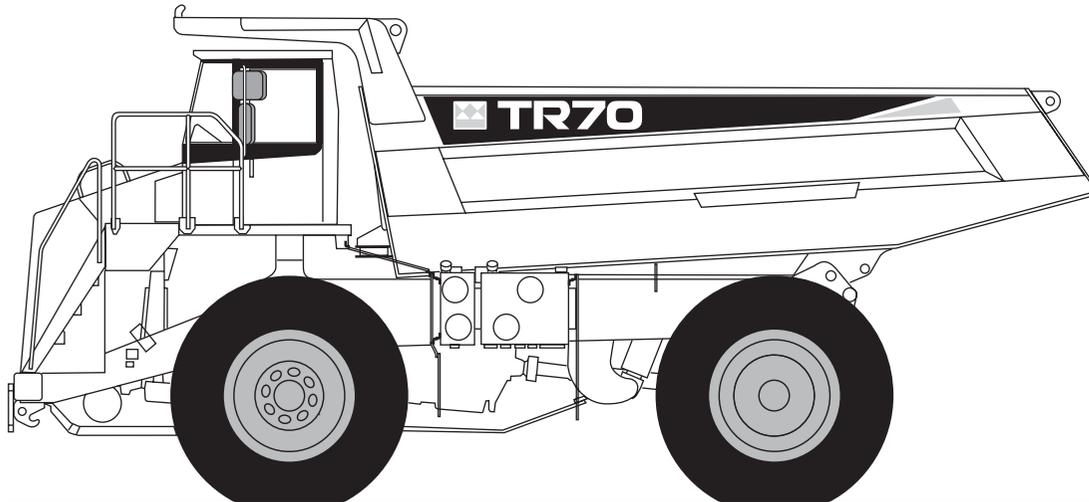

# **TEREX**

# Parts Book

[CLICK HERE TO RETURN TO MAIN LIBRARY INDEX](#)

**Part Number**  
**15274019**

## **TR70 Off-Highway Truck**

(Detroit Diesel 12V2000 760 hp Engine)

**Serial No. T7891001 through T7891134**

Sample of manual. Download All 558 pages at:

<https://www.arepairmanual.com/downloads/2000-2009-terex-tr70-off-highway-truck-workshop-parts-manual/>

July 2000

**Revised: December 2009**

PUBLISHED BY:  
CUSTOMER SUPPORT DEPARTMENT

TEREX EQUIPMENT LIMITED  
MOTHERWELL, SCOTLAND

Product: 2000-2009 TEREX TR70 Off-Highway Truck Workshop Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/2000-2009-terex-tr70-off-highway-truck-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 558 pages at:  
<https://www.arepairmanual.com/downloads/2000-2009-terex-tr70-off-highway-truck-workshop-parts-manual/>



## WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

\* \* \* \* \*

### SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK



## INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

**SECTION 100 - CHASSIS**

**SECTION 140 - FRONT AXLE GROUP**

**SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings.

For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.

**EXAMPLE - 220-0120.**

**SERIAL NUMBERS** - Each Parts Book covers a particular range of unit Serial Numbers.

**It is important that unit Serial Numbers are quoted on all orders for Parts.**

**PARTS LISTS** - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

**ILLUSTRATIONS** - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

---



**INDENTATIONS** - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.  
          2 9058512 . Shaft  
          3 9024169 . Ring  
          4 9058132 . Control Assy.  
          5 9058135 . . Spring  
          6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

**NOTES** - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

**ABBREVIATIONS** - The abbreviations in this book have the following meanings -

Amps .....	Amperes	Hsg .....	Housing	N.I .....	Not Illustrated
As R .....	As Required	I.D .....	Inside Diameter	N.L.A .....	No Longer Available
Assy .....	Assembly	L.H .....	Left Hand	N.S.S .....	Not Sold Separately
Brkt .....	Bracket	L.W .....	Lockwasher	O.D .....	Outside Diameter
Cad-Pltd .....	Cadium Plated	Lg .....	Long	Pr .....	Pair
Comm .....	Commencement of production	Lkg .....	Linkage	P.T.O .....	Power-Take-Off
E.S.N .....	Elastic Stop Nut	Mtg .....	Mounting	R.H .....	Right Hand
Ftgs .....	Fittings	N.C .....	Note Code	Std .....	Standard



# Truck



## STANDARD SECTIONS



**CHASSIS**

**100**



**ENGINE**

**110**



**TRANSMISSION**

**120**



**DRIVELINE**

**130**



**FRONT AXLE**

**140**



**REAR AXLE**

**160**



**BRAKE PARTS**

**165**



**SUSPENSION SYSTEM**

**180**



**ELECTRICAL SYSTEM**

**190**



**FUEL SYSTEM**

**200**



**COOLING SYSTEM**

**210**



**STEERING SYSTEM**

**220**



**BODY SYSTEM**

**230**



**BRAKING SYSTEM**

**250**



**CAB**

**260**



**BODY**

**270**



**DECALS**

**290**



**MISCELLANEOUS**

**300**

**TABLE OF CONTENTS FOR MODEL TR70**

**FROM SERIAL NO T7891001**

**REVISED 12/09**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 100</u></b>			
	<b><u>CHASSIS</u></b>		
100-0010-7891	CHASSIS		R2 11/06
100-0040-7891	HOOD AND MOUNTING		R1 01/03
100-0070-7891	FENDERS AND MOUNTING	T7891001 TO T7891022	R2 04/04
100-0070-7891	FENDERS AND MOUNTING	T7891023 TO T7891087	R3 04/04
100-0070-7891	FENDERS AND MOUNTING	T7891088	R2 09/05
100-0090-7891	LADDERS AND HANDRAILS	T7891001 TO T7891115	R2 09/02
100-0090-7891	LADDERS AND HANDRAILS	T7891116	09/05
100-0100-7891	RADIATOR GUARD AND MOUNTING	T7891001 TO T7891036	R1 01/02
100-0100-7891	RADIATOR GUARD AND MOUNTING	T7891037	R1 09/02
100-0140-7891	MUDGUARDS		R1 07/01
<b><u>SECTION 110</u></b>			
	<b><u>ENGINE</u></b>		
110-0020-7891	ENGINE ORDERING INSTRUCTIONS		
110-0030-7891	ENGINE AND MOUNTING	T7891001 TO T7891067	R6 06/03
110-0030-7891	ENGINE AND MOUNTING	T7891068 TO T7891121	R1 04/05
110-0030-7891	ENGINE AND MOUNTING	T7891122	R1 11/06
110-0050-7891	AIR CLEANER		
110-0060-7891	AIR CLEANER PIPES AND HOSES		R4 04/05
110-0130-7891	POWER TAKEOFF-ENG		R1 09/09
<b><u>SECTION 120</u></b>			
	<b><u>TRANSMISSION</u></b>		
120-0010-7891	TRANSMISSION MOUNTING		R1 03/01
120-0020-7891	TRANSMISSION BREAKDOWN	T7891001 TO T7891022	R1 03/01
120-0020-7891	TRANSMISSION BREAKDOWN	T7891023	R2 04/05
120-0050-7891	CONTROL VALVE	T7891001 TO T7891022	R1 03/01
120-0050-7891	CONTROL VALVE	T7891023	03/01
120-0070-7891	SHIFT CONTROL	T7891001 TO T7891022	R1 03/01
120-0070-7891	SHIFT CONTROL	T7891023 TO T7891035	R1 01/02
120-0070-7891	SHIFT CONTROL	T7891036	R1 08/03
120-0090-7891	POWER TAKEOFF-TRANS		
120-0100-7891	FILTER	T7891001 TO T7891022	R1 03/01
120-0100-7891	FILTER	T7891023	R1 04/04
120-0110-7891	OIL LINES-TRANSMISSION		R1 04/04
120-0190-7891	RETARDER CONTROL LINES-HYD		R3 11/06
120-0200-7891	FRONT COVER & CONVERTER GROUP	T7891001 TO T7891022	R1 03/01
120-0200-7891	FRONT COVER & CONVERTER GROUP	T7891023	03/01
120-0210-7891	CONVERTER HOUSING GROUP	T7891001 TO T7891022	R1 03/01
120-0210-7891	CONVERTER HOUSING GROUP	T7891023	R1 07/01
120-0220-7891	OIL PUMP	T7891001 TO T7891022	R1 03/01
120-0220-7891	OIL PUMP	T7891023	03/01

## TABLE OF CONTENTS FOR MODEL TR70

FROM SERIAL NO T7891001

REVISED 12/09

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 120</u></b>	<b><u>TRANSMISSION-CONT.</u></b>		
120-0230-7891	FILTER ADAPT/REGULATOR VALVES	T7891001 TO T7891022	R1 03/01
120-0230-7891	FILTER ADAPT/REGULATOR VALVES	T7891023	03/01
120-0240-7891	LOCKUP VALVE	T7891001 TO T7891022	R1 03/01
120-0240-7891	LOCKUP VALVE	T7891023	03/01
120-0250-7891	LOCKUP DROP OUT	T7891001 TO T7891022	R1 03/01
120-0260-7891	RETARDER GROUP	T7891001 TO T7891022	R1 03/01
120-0260-7891	RETARDER GROUP	T7891023	03/01
120-0270-7891	RETARDER CONTROL VALVE	T7891001 TO T7891022	R1 03/01
120-0270-7891	RETARDER CONTROL VALVE	T7891023	03/01
120-0280-7891	SPLITTER GEARING AND CLUTCHES	T7891001 TO T7891022	R1 03/01
120-0280-7891	SPLITTER GEARING AND CLUTCHES	T7891023	03/01
120-0290-7891	MAIN HOUSING GROUP	T7891001 TO T7891022	R1 03/01
120-0290-7891	MAIN HOUSING GROUP	T7891023	03/01
120-0300-7891	HIGH RANGE GEARING & CLUTCHES	T7891001 TO T7891022	R1 03/01
120-0300-7891	HIGH RANGE GEARING & CLUTCHES	T7891023	03/01
120-0310-7891	INTER RANGE GEARING & CLUTCHES	T7891001 TO T7891022	R1 03/01
120-0310-7891	INTER RANGE GEARING & CLUTCHES	T7891023	03/01
120-0320-7891	LOW RANGE GEARING & CLUTCHES	T7891001 TO T7891022	R1 03/01
120-0320-7891	LOW RANGE GEARING & CLUTCHES	T7891023	03/01
120-0330-7891	REV RANGE GEARING & CLUTCHES	T7891001 TO T7891022	R1 03/01
120-0330-7891	REV RANGE GEARING & CLUTCHES	T7891023	03/01
120-0340-7891	REAR COVER GROUP	T7891001 TO T7891022	R1 03/01
120-0340-7891	REAR COVER GROUP	T7891023	03/01
<b><u>SECTION 130</u></b>	<b><u>DRIVELINE</u></b>		
130-0010-7891	FRONT DRIVELINE		
130-0020-7891	REAR DRIVELINE		
<b><u>SECTION 140</u></b>	<b><u>FRONT AXLE</u></b>		
140-0040-7891	WHEEL, RIM AND TYRE-FRONT	T7891001 TO T7891035	R1 08/01
140-0040-7891	WHEEL, RIM AND TYRE-FRONT	T7891036	08/01
<b><u>SECTION 160</u></b>	<b><u>REAR AXLE</u></b>		
160-0020-7891	DIFFERENTIAL-REAR	T7891001 TO T7891012	R3 10/04
160-0020-7891	DIFFERENTIAL-REAR	T7891013 TO T7891132	R1 10/04
160-0020-7891	DIFFERENTIAL-REAR	T7891133	11/06
160-0030-7891	AXLE GROUP-REAR		R4 11/06
160-0040-7891	PLANETARY GEARING-REAR	T7891001 TO T7891039	R1 01/02
160-0040-7891	PLANETARY GEARING-REAR	T7891040	01/02
160-0050-7891	WHEEL, RIM AND TYRE-REAR		R1 01/02

**TABLE OF CONTENTS FOR MODEL TR70**

**FROM SERIAL NO T7891001**

**REVISED 12/09**

<b>SECT--PAGE--PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 165</u></b>	<b><u>BRAKE PARTS</u></b>		
165-0020-7891	BRAKE PARTS-FRONT WHEEL-RIGIDS		
165-0030-7891	BRAKE PARTS-REAR WHEEL-RIGIDS		
<b><u>SECTION 180</u></b>	<b><u>SUSPENSION SYSTEM</u></b>		
180-0030-7891	FRONT RIDE CYLINDER		R1 03/01
180-0050-7891	REAR RIDE CYLINDER		
<b><u>SECTION 190</u></b>	<b><u>ELECTRICAL SYSTEM</u></b>		
190-0010-7891	TERMINALS		
190-0011-7891	CONNECTORS		
190-0030-7891	CABLES/HARNESSES-CAB	T7891001 TO T7891022	R1 03/01
190-0030-7891	CABLES/HARNESSES-CAB	T7891023 TO T7891035	R1 01/02
190-0030-7891	CABLES/HARNESSES-CAB	T7891036 TO T7891118	R1 06/03
190-0030-7891	CABLES/HARNESSES-CAB	T7891119	02/06
190-0040-7891	CABLES/HARNESSES-CHASS/ENG	T7891001 TO T7891022	R1 03/01
190-0040-7891	CABLES/HARNESSES-CHASS/ENG	T7891023	R2 10/04
190-0070-7891	BATTERY AND CABLES		
190-0080-7891	BATTERY MOUNTING	T7891001 TO T7891022	R1 03/01
190-0080-7891	BATTERY MOUNTING	T7891023	03/01
190-0100-7891	ELECTRICAL LIGHTING SYSTEM	T7891001 TO T7891118	R1 04/03
190-0100-7891	ELECTRICAL LIGHTING SYSTEM	T7891119	02/06
190-0110-7891	ALTERNATOR		
190-0120-7891	STARTER MOTOR		
190-0270-7891	SWITCHES & SENSORS		R8 04/05
190-0300-7891	RADIO CASSETTE AND SPEAKERS	T7891001 TO T7891035	R1 01/02
190-0300-7891	RADIO CASSETTE AND SPEAKERS	T7891036	01/02
190-0310-7891	ELECTRICAL HORN		R1 08/03
<b><u>SECTIN 200</u></b>	<b><u>FUEL SYSTEM</u></b>		
200-0010-7891	FUEL TANK AND MOUNTING	T7891001 TO T7891095	R3 11/03
200-0010-7891	FUEL TANK AND MOUNTING	T7891096	04/05
200-0040-7891	FUEL LINES	T7891001 TO T7891074	R3 06/03
200-0040-7891	FUEL LINES	T7891075	R1 04/05
200-0050-7891	ACCELERATOR LINKAGE		
200-0080-7891	COLD START KIT		R1 01/02
<b><u>SECTION 210</u></b>	<b><u>COOLING SYSTEM</u></b>		
210-0010-7891	RADIATOR ASSEMBLY		R3 03/09
210-0020-7891	RADIATOR MOUNTING		R1 03/01
210-0030-7891	RADIATOR PIPING		R2 09/05

**TABLE OF CONTENTS FOR MODEL TR70**

**FROM SERIAL NO T7891001**

**REVISED 12/09**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 210</u></b>			
<b><u>COOLING SYSTEM-CONTINUED</u></b>			
210-0040-7891	RADIATOR HEADER TANK AND HOSES		R1 04/04
210-0050-7891	OIL COOLER-DISC BRAKES		R6 04/07
210-0051-7891	OIL COOLER PIPING-DISC BRAKES		R4 11/06
210-0060-7891	OIL COOLER AND PIPING-TRANS	T7891001 TO T7891083	R5 09/05
210-0060-7891	OIL COOLER AND PIPING-TRANS	T7891084	R1 09/05
<b><u>SECTION 220</u></b>			
<b><u>STEERING SYSTEM</u></b>			
220-0010-7891	STEERING LINES		R2 06/03
220-0040-7891	TANK AND MOUNTING-STEERING		
220-0050-7891	PUMP-STEERING	T7891001 TO T7891095	
220-0050-7891	PUMP-STEERING	T7891096 TO T7891108	10/04
220-0050-7891	PUMP-STEERING	T7891109	09/05
220-0060-7891	PUMP AND ACCUMULATOR MOUNTING	T7891001 TO T7891074	
220-0060-7891	PUMP AND ACCUMULATOR MOUNTING	T7891075 TO T7891092	11/03
220-0060-7891	PUMP AND ACCUMULATOR MOUNTING	T7891093	07/04
220-0080-7891	ACCUMULATOR-STEERING	T7891001 TO T7891052	R1 06/03
220-0080-7891	ACCUMULATOR-STEERING	T7891053 TO T7891059	09/02
220-0080-7891	ACCUMULATOR-STEERING	T7891060 TO T7891074 ALSO T7891129 & ABOVE	R2 11/06
220-0080-7891	ACCUMULATOR-STEERING	T7891075 TO T7891092	11/03
220-0080-7891	ACCUMULATOR-STEERING	T7891093 TO T7891128	07/04
220-0090-7891	STEERING VALVE		R2 08/07
220-0110-7891	DOUBLE RELIEF VALVE	T7891001 TO T7891012	R1 06/03
220-0110-7891	DOUBLE RELEIF VALVE	T7891013 TO T7891108	06/03
220-0110-7891	DOUBLE RELEIF VALVE	T7891109	02/06
220-0120-7891	STEERING CYLINDER	T7891001 TO T7891039	R1 01/02
220-0120-7891	STEERING CYLINDER	T7891040 TO T7891070	01/02
220-0120-7891	STEERING CYLINDER	T7891071 TO T7891126	11/03
220-0120-7891	STEERING CYLINDER	T7891127	11/06
220-0130-7891	RELIEF VALVE-STEERING	T7891001 TO T7891134	R1 04/03
220-0130-7891	RELIEF VALVE-STEERING	T7891135	11/06
220-0150-7891	FILTER-STEERING		
220-0190-7891	STEERING LINKAGE		07/04
220-0230-7891	STEERING COLUMN MOUNTING		01/02
<b><u>SECTION 230</u></b>			
<b><u>BODY HOIST SYSTEM</u></b>			
230-0020-7891	LINES AND FITTINGS-BODY HOIST		R2 11/06
230-0021-7891	SERVO CONTROL LINES-BODY		R2 11/06
230-0040-7891	TANK AND MOUNTING-BODY HOIST		R2 04/04
230-0041-7891	BREATHER LINE-HYDRAULIC TANKS		
230-0050-7891	PUMP-BODY HOIST	T7891001 TO T7891107	

## TABLE OF CONTENTS FOR MODEL TR70

FROM SERIAL NO T7891001

REVISED 12/09

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 230</u></b>	<b><u>BODY HOIST SYSTEM-CONTINUED</u></b>		
230-0050-7891	PUMP-BODY HOIST	T7891108	04/05
230-0060-7891	CONTROL VALVE-BODY HOIST		R2 04/05
230-0070-7891	CONTROL VALVE MOUNTING		
230-0081-7891	JOYSTICK-BODY CONTROL		
230-0110-7891	MANIFOLD RELIEF VALVE		
230-0120-7891	RELIEF VALVE		
230-0121-7891	PILOT SUPPLY VALVE		
230-0130-7891	HOIST CYLINDERS		
<b><u>SECTION 250</u></b>	<b><u>BRAKING SYSTEM</u></b>		
250-0020-7891	BRAKE LINES-HYDRAULIC		R4 06/03
250-0050-7891	BRAKE MANIFOLD/PAS VALVE		
250-0060-7891	BRAKE ACCUMULATOR	T7891001 TO T7891012	R1 06/03
250-0060-7891	BRAKE ACCUMULATOR	T7891013 TO T7891122	06/03
250-0060-7891	BRAKE ACCUMULATOR	T7891123	02/06
250-0070-7891	TREADLE VALVE		R1 09/00
250-0090-7891	DIRECTIONAL CONTROL VALVE		
250-0100-7891	MONOBLOCK BRAKE VALVE		
250-0130-7891	RETARDER CONTROL VALVE-BRAKES		R1 09/00
250-0240-7891	FILTER ASSY-DISC BRAKE	T7891001 TO T7891132	
250-0240-7891	FILTER ASSY-DISC BRAKE	T7891133	11/06
<b><u>SECTION 260</u></b>	<b><u>CAB</u></b>		
260-0010-7891	CAB ASSEMBLY	T7891001 TO T7891012	
260-0010-7891	CAB ASSEMBLY	T7891013 TO T7891033	R1 07/01
260-0010-7891	CAB ASSEMBLY	T7891034	07/01
260-0011-7891	CAB CENTRE CONSOLE	T7891001 TO T7891022	R1 03/01
260-0011-7891	CAB CENTRE CONSOLE	T7891023	03/01
260-0015-7891	CAB MOUNTING		R3 09/05
260-0030-7891	CAB DOOR-LEFT HAND		
260-0040-7891	CAB DOOR-RIGHT HAND		
260-0080-7891	SWITCHES AND INSTRUMENTS	T7891001 TO T7891022	R2 03/01
260-0080-7891	SWITCHES AND INSTRUMENTS	T7891023	03/01
260-0090-7891	SEAT-DRIVER	T7891001 TO T7891033	R1 03/01
260-0090-7891	SEAT-DRIVER	T7891034	R3 08/03
260-0110-7891	SEAT-INSTRUCTOR	T7891001 TO T7891016	R1 03/01
260-0110-7891	SEAT-INSTRUCTOR	T7891017	03/01
260-0130-7891	AIR CONDITIONER/HEATER	T7891001 TO T7891077	
260-0130-7891	AIR CONDITIONER/HEATER	T7891078	R1 10/04

TABLE OF CONTENTS FOR MODEL TR70

FROM SERIAL NO T7891001

REVISED 12/09


SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 260</u></b>			
<b><u>CAB-CONTINUED</u></b>			
260-0140-7891	HEATER LINES & WIRING		
260-0145-7891	AIR CONDITIONER LINES	T7891001 TO T7891128	R1 09/05
260-0145-7891	AIR CONDITIONER LINES	T7891129	11/06
260-0190-7891	WINDSCREEN WASHER		
<b><u>SECTION 270</u></b>			
<b><u>BODY</u></b>			
270-0010-7891	BODY ASSEMBLY	T7891001 TO T7891033	R2 07/01
270-0010-7891	BODY ASSEMBLY	T7891034	R2 09/02
270-0020-7891	EXHAUST HEATED BODY		R2 09/05
270-0080-7891	ROCK EJECTORS		R2 04/05
<b><u>SECTION 290</u></b>			
<b><u>DECALS</u></b>			
290-0010-7891	DECALS-ENGLISH	T7891001 TO T7891033	07/01
290-0010-7891	DECALS-ENGLISH	T7891034 TO T7891070	06/03
290-0010-7891	DECALS-ENGLISH	T7891071	R2 02/06
290-0100-7891	WALKWAY SURFACES (ANTI-SLIP)	T7891102	09/05
<b><u>SECTION 300</u></b>			
<b><u>MISCELLANEOUS</u></b>			
300-0020-7891	LUBRICATION SYSTEM		
300-0040-7891	MULTI-TUBE CLAMPS AND HARDWARE		

R2 11/06 (ECN 102072, ECN 108206)

100-0010-7891 CHASSIS  
FROM SERIAL NO. T7891001

DRAWING NO. P10311

P10311

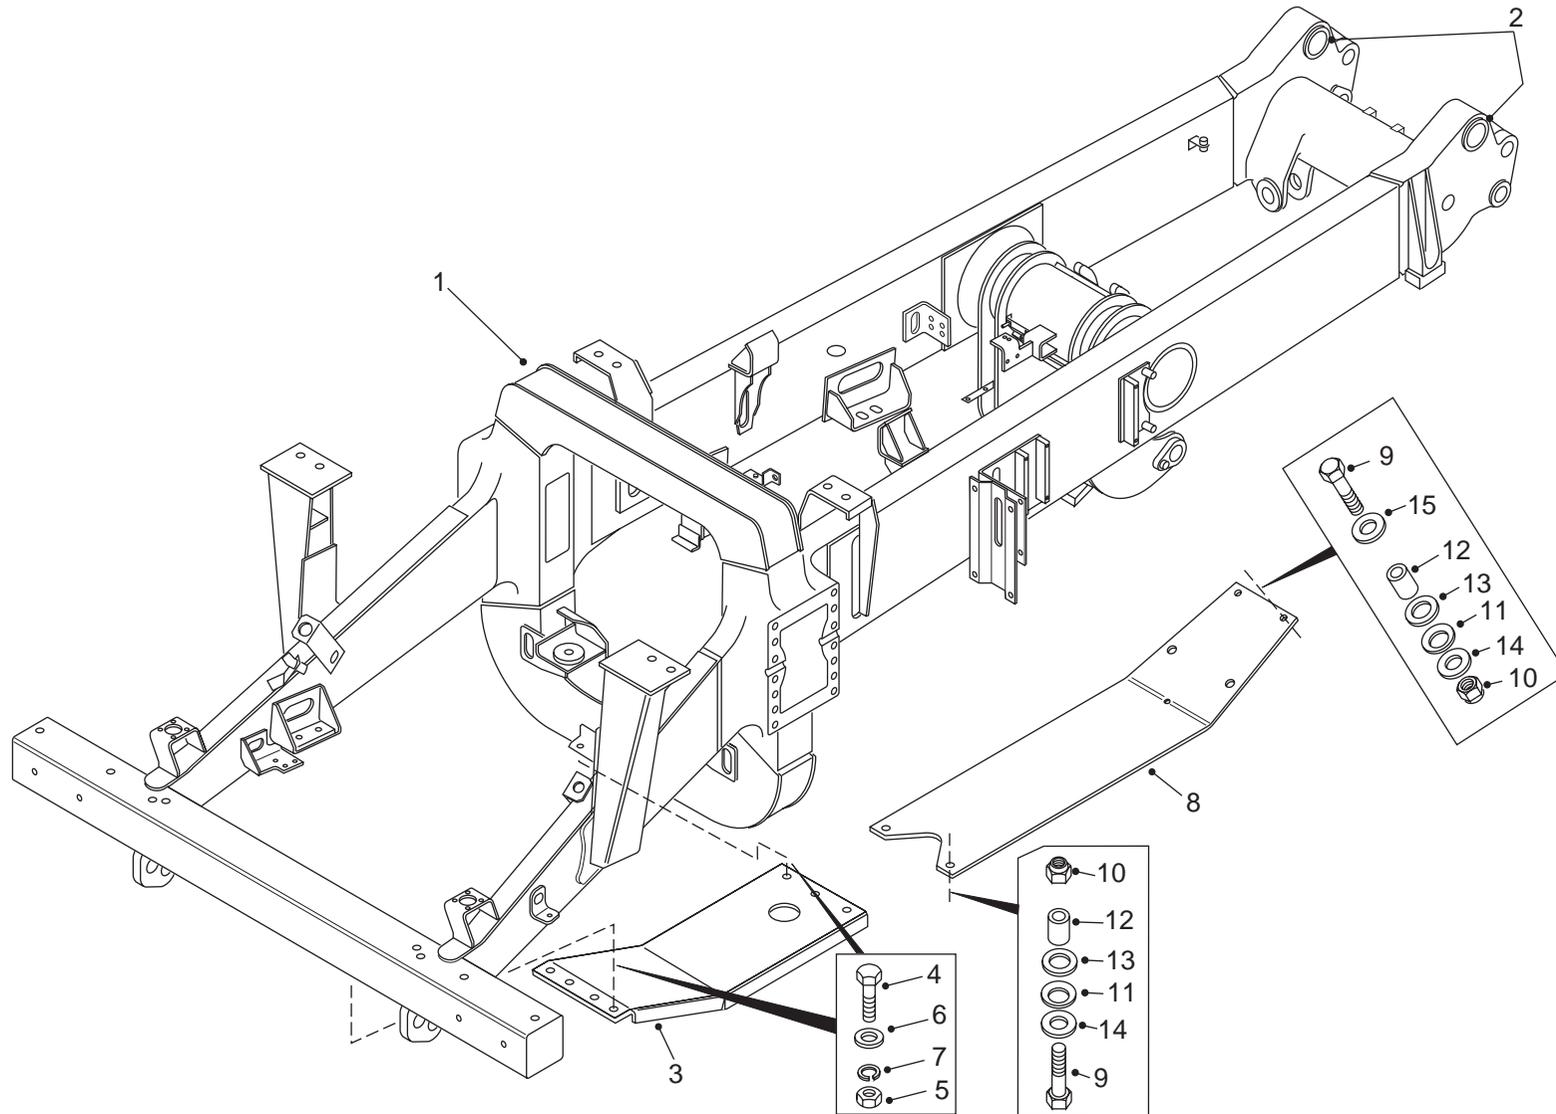

**100-0010-7891 CHASSIS**  
 FROM SERIAL NO. T7891001


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15306332	FRAME ASSY-COMplete		
002	002		09011828	.BUSHING		
003	001		15306954	GUARD ASSY-ENG SUMP	T7891011	T7891132
003	001		15333370	GUARD ASSY-ENG SUMP	T7891133	
004	007		00271612	BOLT		
005	007		00220081	NUT		
006	007		09250715	WASHER-HARDENED		
007	007		00103332	LOCKWASHER		
008	001		15306929	GUARD ASSY-TRANS		
009	004		00271621	BOLT		
010	004		09355771	NUT		
011	004		15250985	SPRING-DISC		
012	004		15303750	SPACER		
013	004		15303749	WASHER-HARDENED		
014	004		15020053	WASHER		
015	002		09011226	WASHER		

R1 01/03 (ECN 105489)

100-0040-7891 HOOD AND MOUNTING  
FROM SERIAL NO. T7891001

DRAWING NO. P10476

P10476

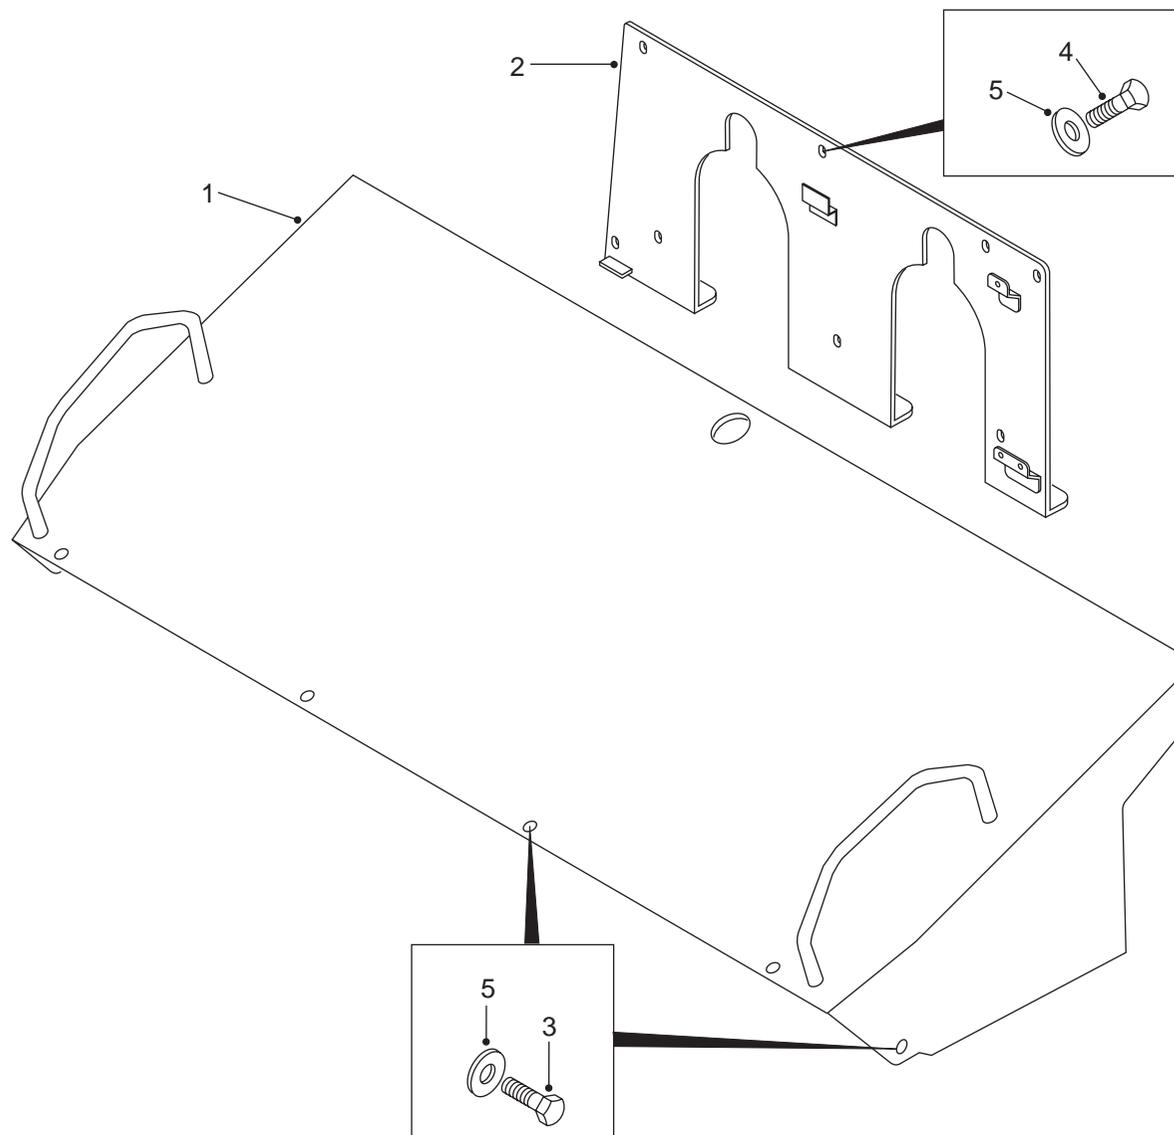

**100-0040-7891 HOOD AND MOUNTING**  
FROM SERIAL NO. T7891001


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15307515	HOOD ASSEMBLY		
002	001		15307669	PLATE ASSY - AIR CLEAN		
003	010		00179881	BOLT		
004	005		00179883	BOLT		
005	015		09267949	WASHER-HARDENED		

R2 04/04 (ECN 102630, SER CORR)

100-0070-7891 FENDERS AND MOUNTING  
SERIAL NO. T7891001 TO T7891022

DRAWING NO. P10479A


P10479

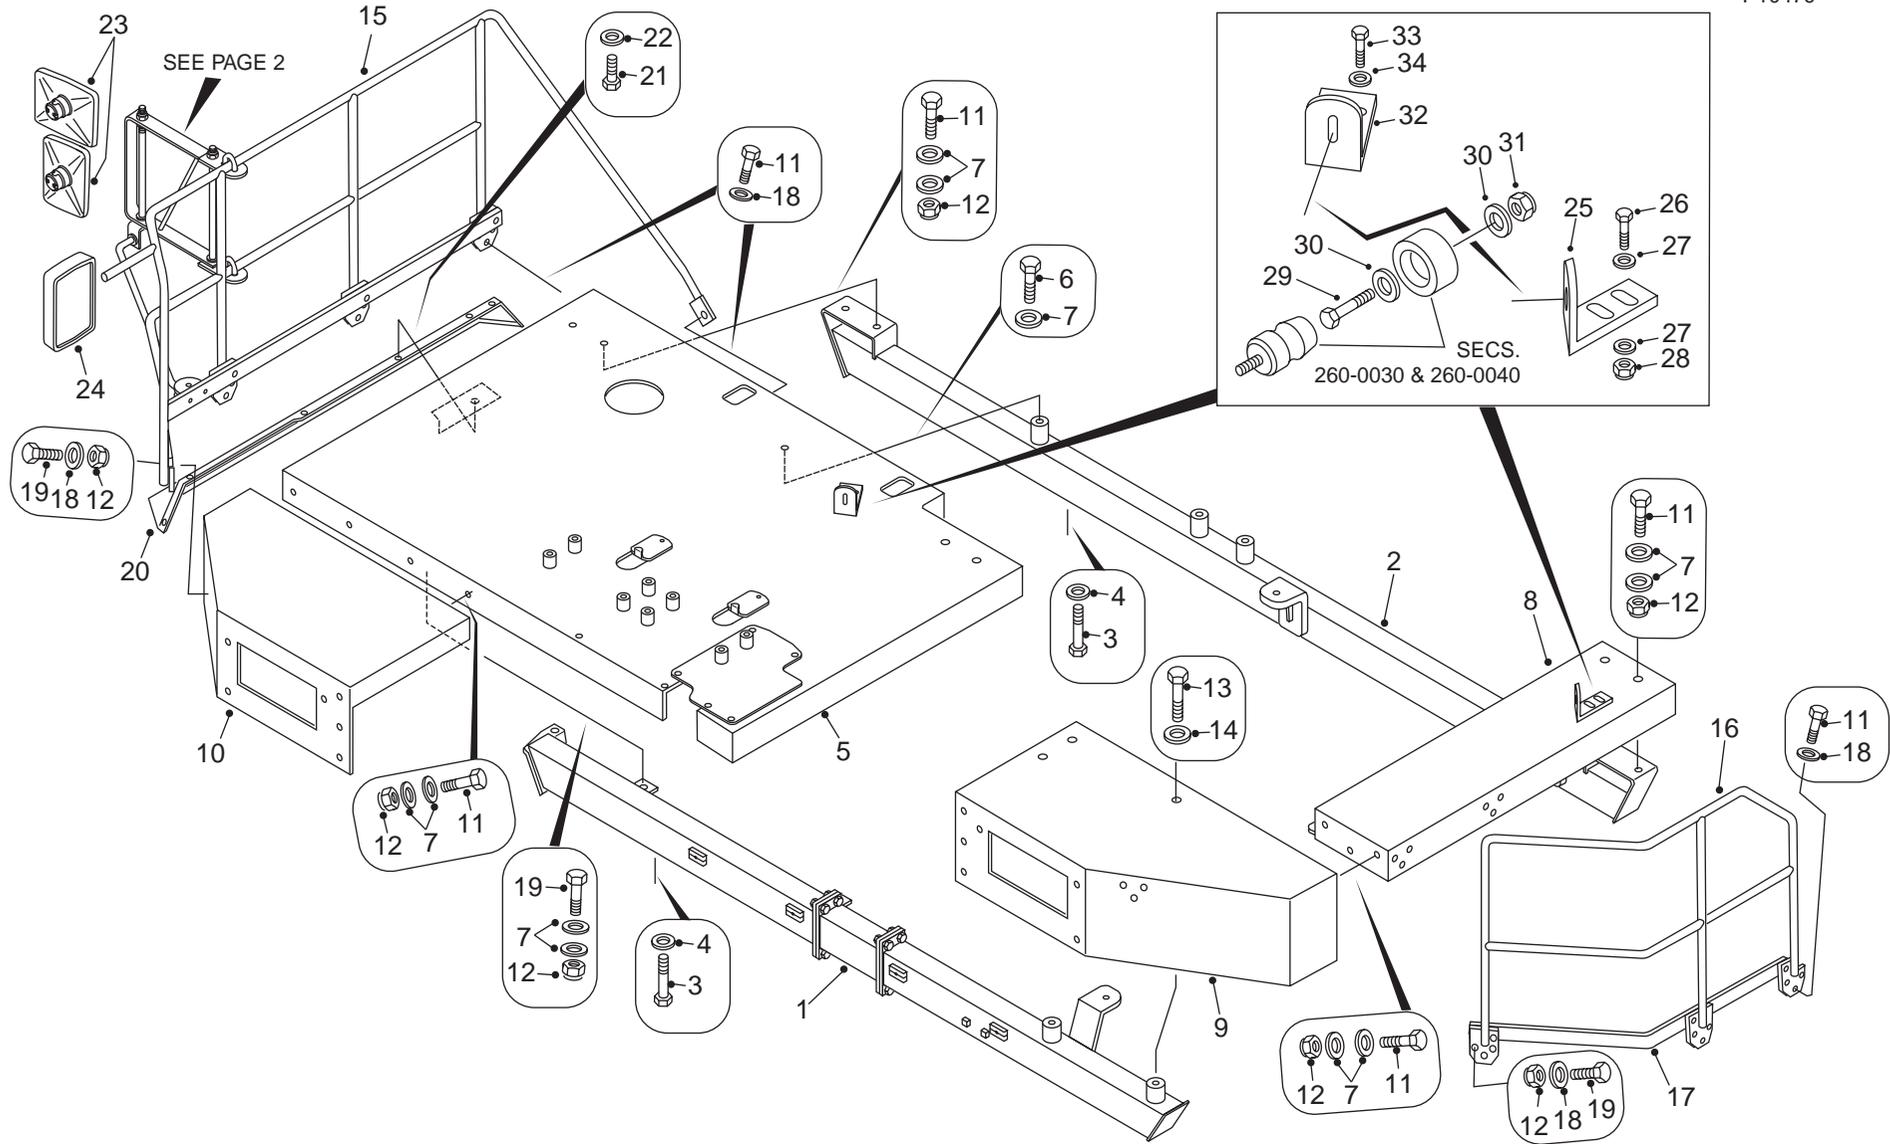

**100-0070-7891 FENDERS AND MOUNTING**  
SERIAL NO. T7891001 TO T7891022

DRAWING NO. P10479B

P10479

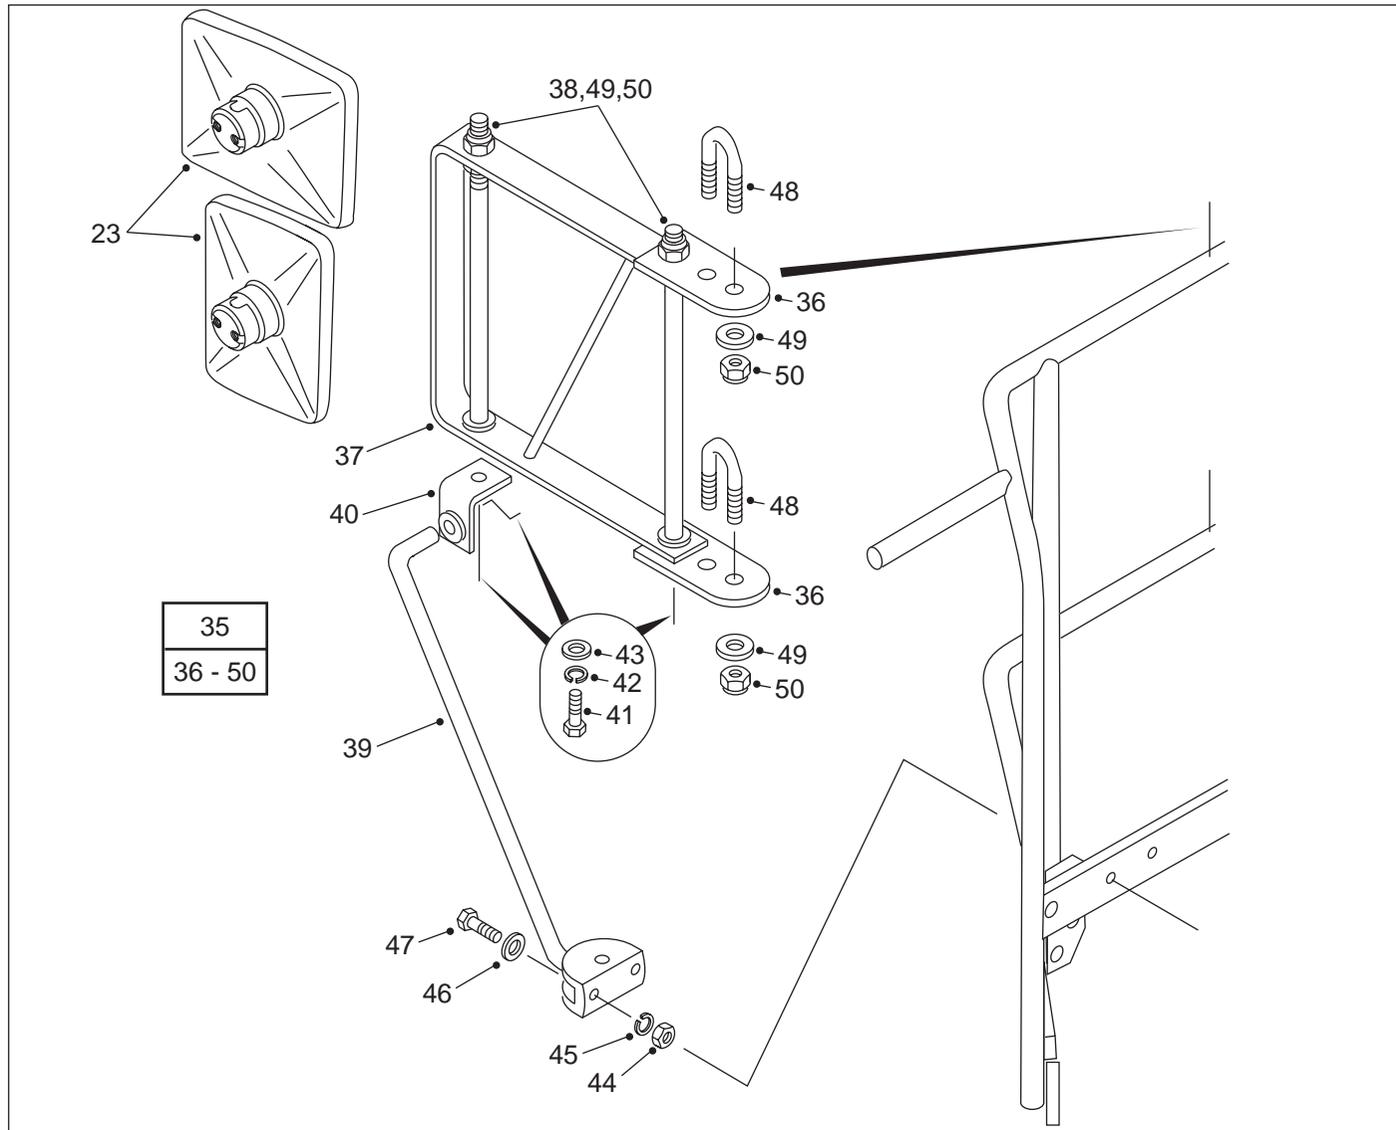




THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0070-7891 FENDERS AND MOUNTING  
FROM SERIAL NO. T7891023 TO T7891087

DRAWING NO. P10703A


P10703

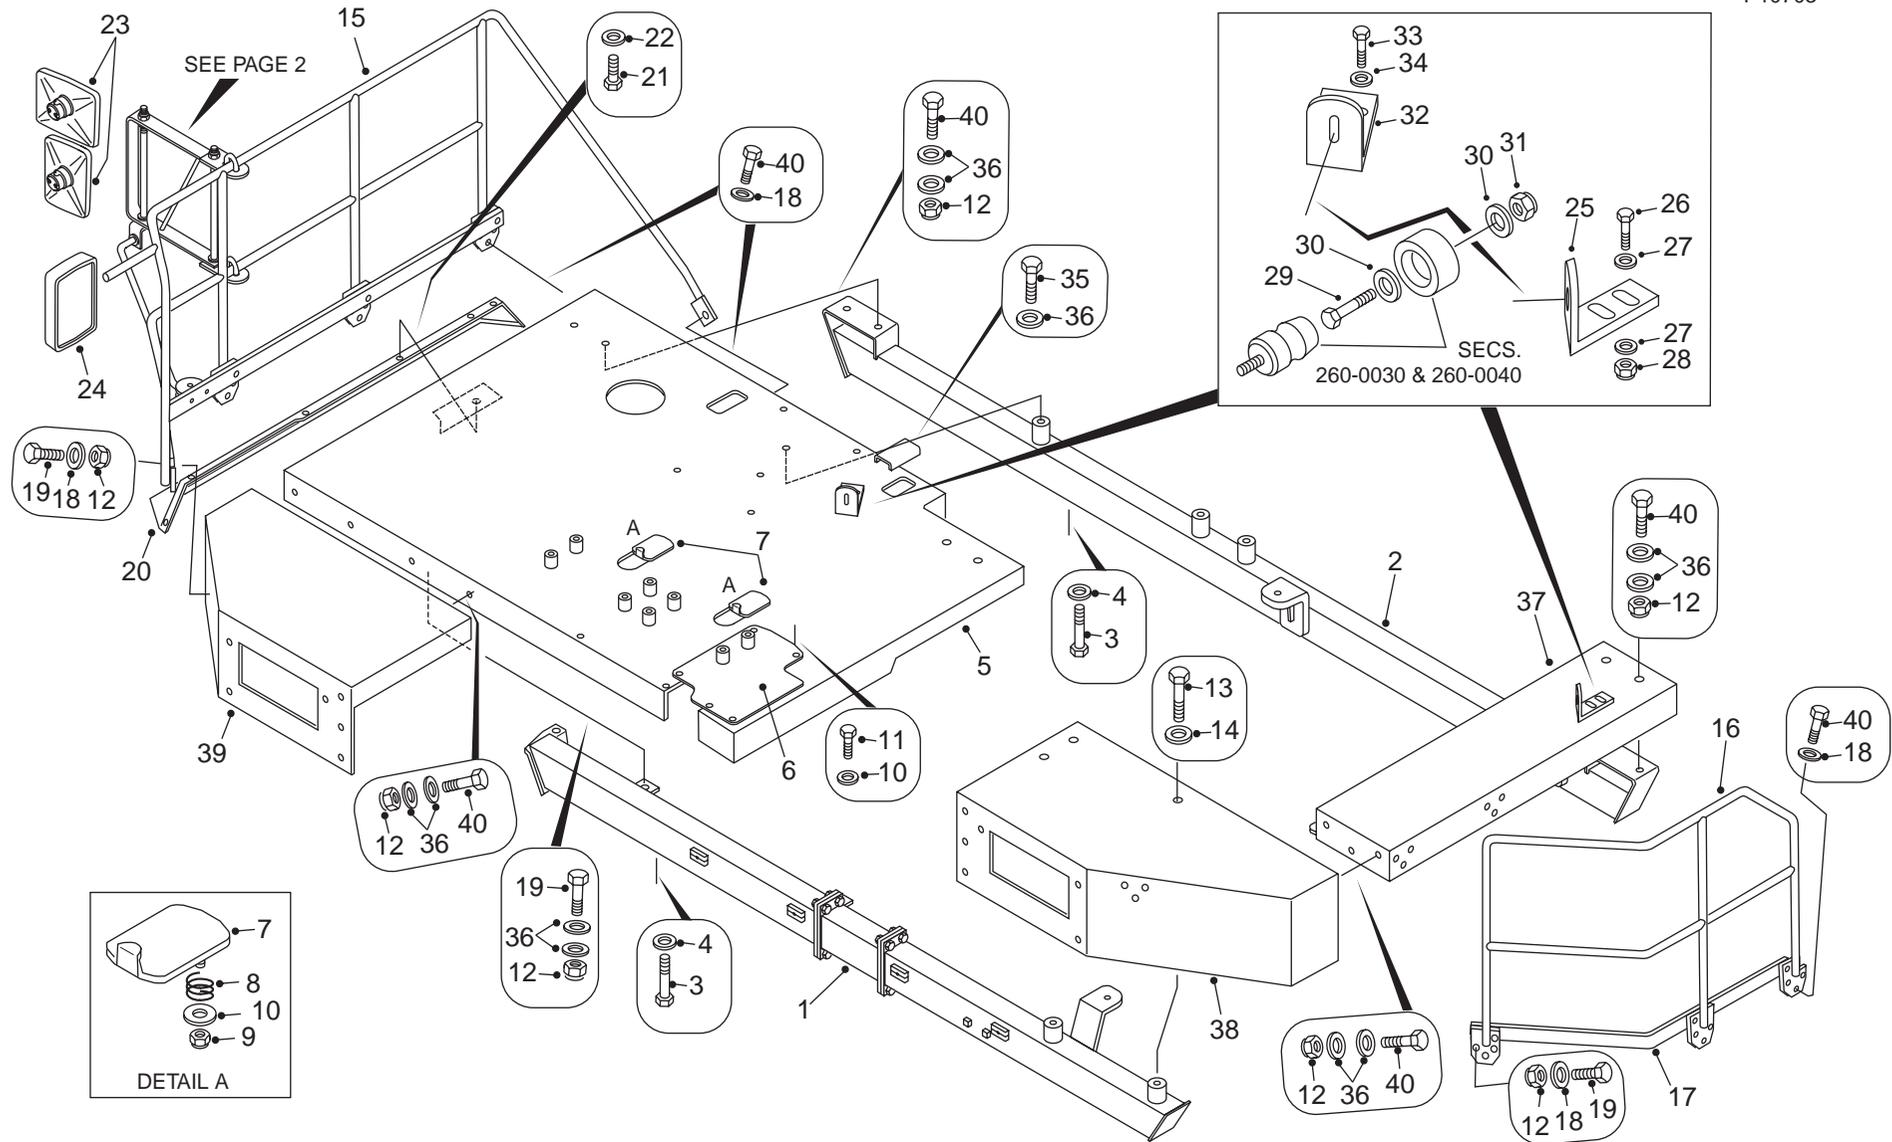

**100-0070-7891 FENDERS AND MOUNTING**  
FROM SERIAL NO. T7891023 TO T7891087

DRAWING NO. P10703B

P10703

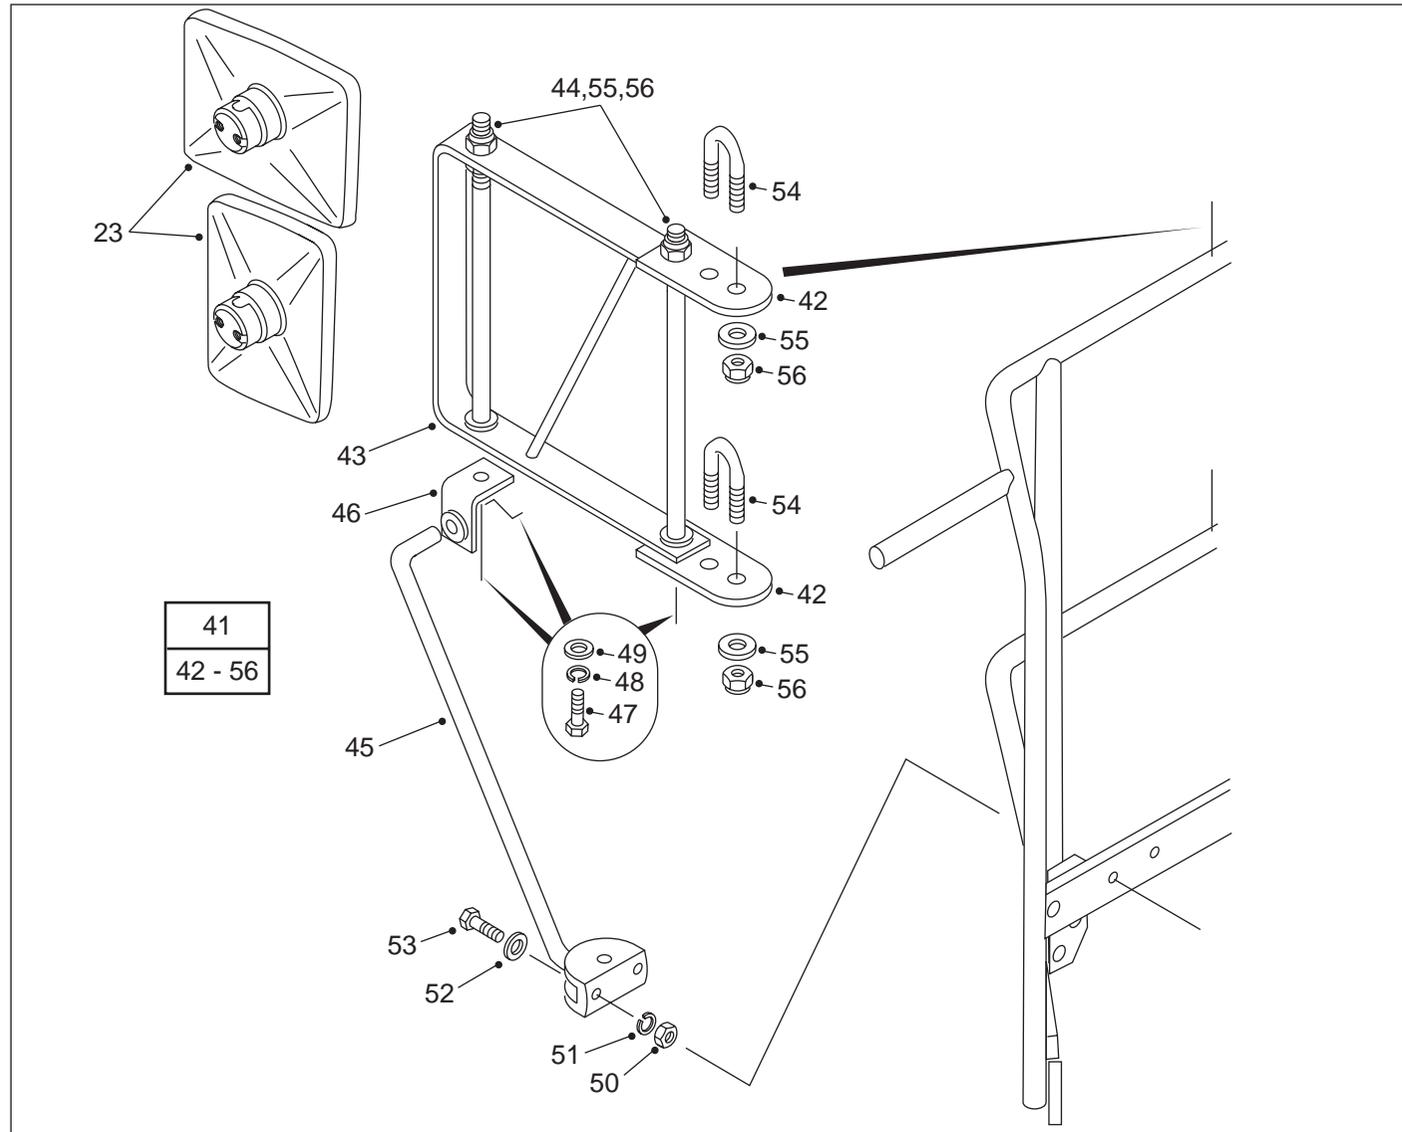




THIS PAGE IS INTENTIONALLY LEFT BLANK



**100-0070-7891 FENDERS AND MOUNTING**  
FROM SERIAL NO. T7891088

DRAWING NO P11453B

P11453

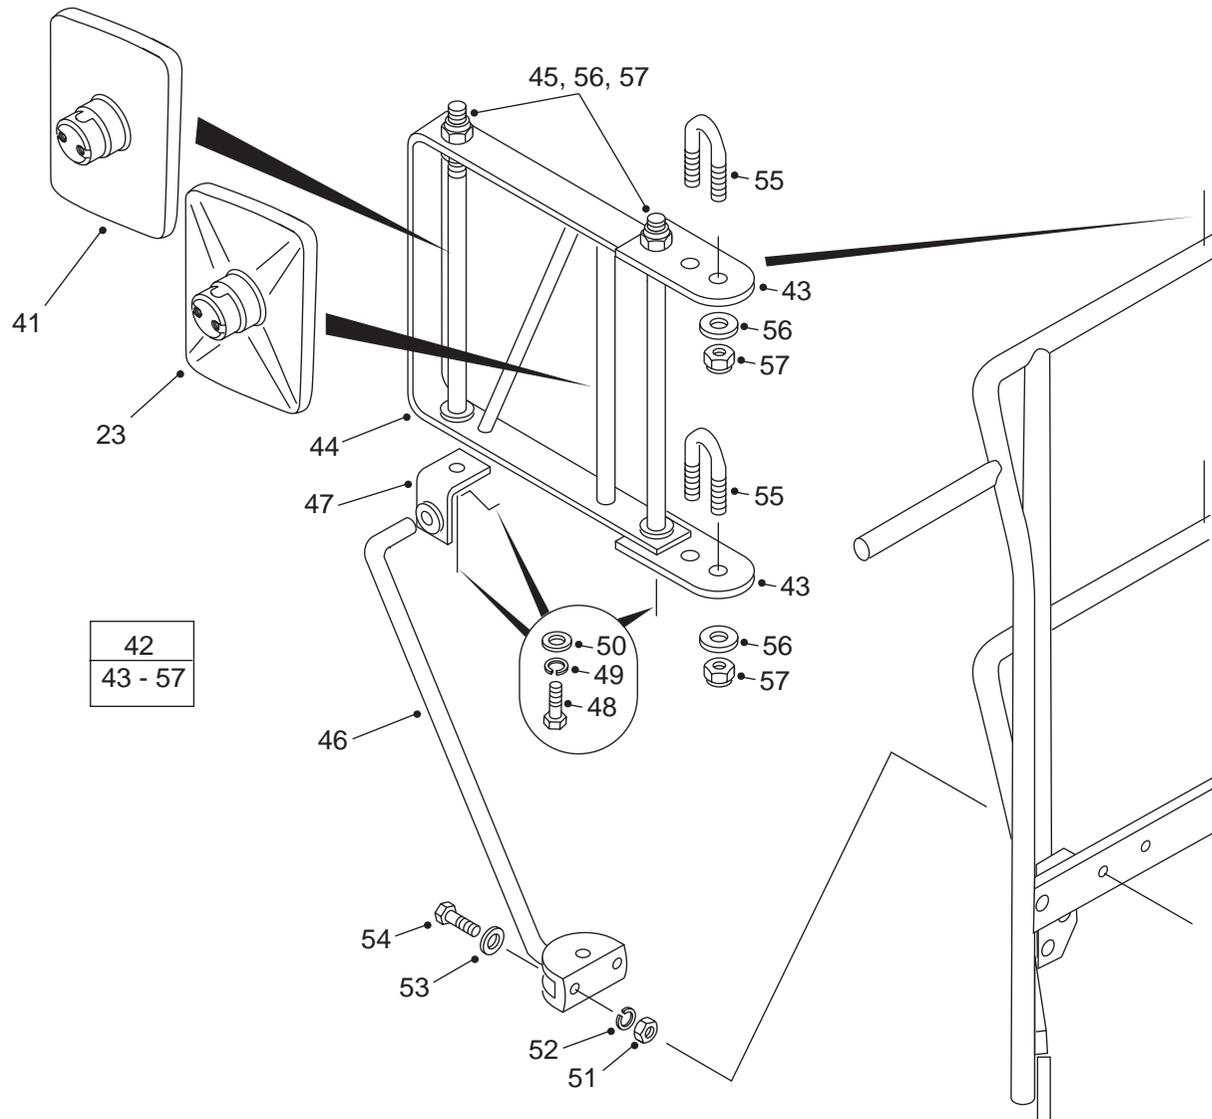



THIS PAGE IS INTENTIONALLY LEFT BLANK

