


Product: 1999 [CLICK HERE FOR 1999 Mining Truck](#) [CLICK HERE FOR manual](#)
Full Download: [STANDARD repair manual.com/download/optional/2009-terex-tr10](#)
[TABLE OF CONTENTS](#) [TABLE OF CONTENTS](#)
[0-mining-truck-workshop-parts-manual/](#)

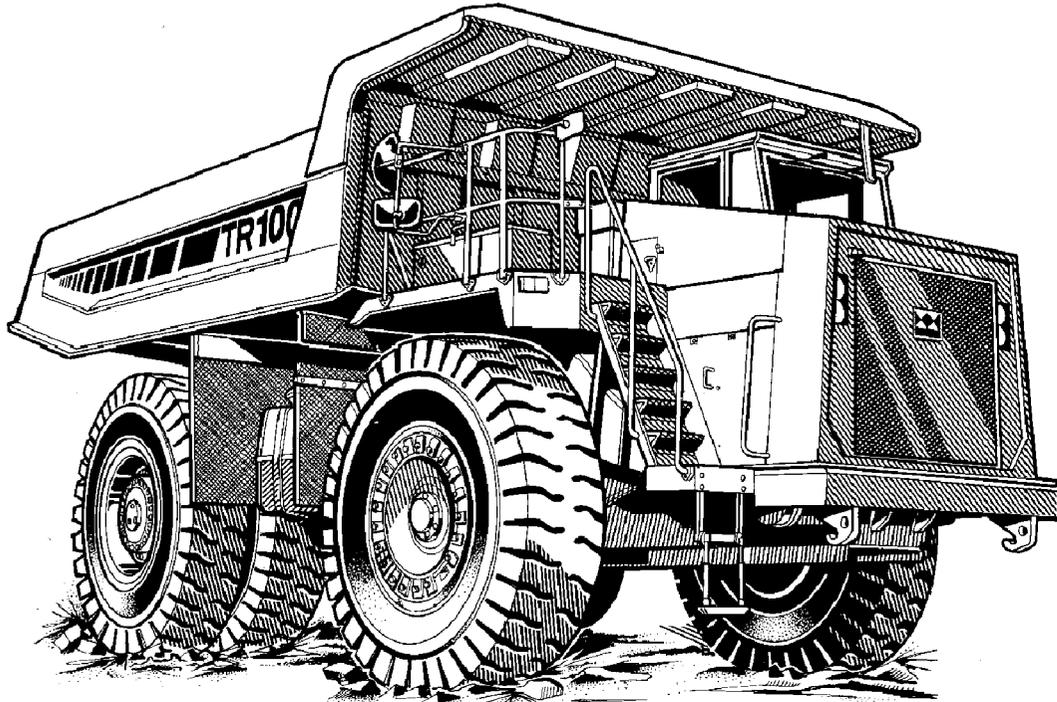

TEREX

Parts Book

[CLICK HERE TO RETURN TO
MAIN LIBRARY INDEX](#)

**Part Number
15272787**

TR100 Mining Truck

(Cummins KTA-38C Powered)

Volume 1 - Serial Nos. T7831001 through T7831478

Sample of manual. Download All 744 pages at:

<https://www.aresairmanual.com/downloads/1999-2009-terex-tr100-mining-truck-workshop-parts-manual/>

**PUBLISHED BY:
CUSTOMER SUPPORT DEPARTMENT**

**TEREX EQUIPMENT LIMITED
MOTHERWELL, SCOTLAND**

January 1999

Revised: 1st December 2009

Product: 1999-2009 TEREX TR100 Mining Truck Workshop Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/1999-2009-terex-tr100-mining-truck-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 744 pages at:
<https://www.arepairmanual.com/downloads/1999-2009-terex-tr100-mining-truck-workshop-parts-manual/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK



INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
 2 9058512 . Shaft
 3 9024169 . Ring
 4 9058132 . Control Assy.
 5 9058135 . . Spring
 6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

| | | | | | |
|----------------|----------------------------|-----------|-----------------|-------------|---------------------|
| Amps | Amperes | Hsg | Housing | N.I | Not Illustrated |
| As R | As Required | I.D | Inside Diameter | N.L.A | No Longer Available |
| Assy | Assembly | L.H | Left Hand | N.S.S | Not Sold Separately |
| Brkt | Bracket | L.W | Lockwasher | O.D | Outside Diameter |
| Cad-Pltd | Cadium Plated | Lg | Long | Pr | Pair |
| Comm | Commencement of production | Lkg | Linkage | P.T.O | Power-Take-Off |
| E.S.N | Elastic Stop Nut | Mtg | Mounting | R.H | Right Hand |
| Ftgs | Fittings | N.C | Note Code | Std | Standard |



Mining Truck



STANDARD SECTIONS



CHASSIS

100



ENGINE

110



TRANSMISSION

120



DRIVELINE

130



FRONT AXLE

140



REAR AXLE

160



 
BRAKE PARTS

165



SUSPENSION SYSTEM

180

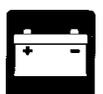

ELECTRICAL SYSTEM

190



FUEL SYSTEM

200



COOLING SYSTEM

210



STEERING SYSTEM

220



BODY HOIST SYSTEM

230



BRAKING SYSTEM

250



CAB

260



BODY

270



DECALS

290



MISCELLANEOUS

300

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|----------------------|-----------------------------|-----------------------------|-------------------|
| SECTION 100 | CHASSIS | | |
| 100-0010-7831 | CHASSIS | T7831001 TO T7831020 | R1 01/00 |
| 100-0010-7831 | CHASSIS | T7831021 | R2 07/03 |
| 100-0040-7831 | HOOD AND MOUNTING | | |
| 100-0070-7831 | FENDERS AND MOUNTING | T7831001 TO T7831193 | R4 07/03 |
| 100-0070-7831 | FENDERS AND MOUNTING | T7831194 TO T7831221 | R1 04/04 |
| 100-0070-7831 | FENDERS AND MOUNTING | T7831222 | R2 08/08 |
| 100-0090-7831 | LADDERS AND HANDRAILS | T7831001 TO T7831042 | R1 01/00 |
| 100-0090-7831 | LADDERS AND HANDRAILS | T7831043 TO T7831282 | 01/00 |
| 100-0090-7831 | LADDERS AND HANDRAILS | T7831283 | R1 06/08 |
| 100-0100-7831 | RADIATOR GUARD AND MOUNTING | T7831001 TO T7831431 | |
| 100-0100-7831 | RADIATOR GUARD AND MOUNTING | T7831432 | 08/08 |
| 100-0140-7831 | MUDGUARDS | T7831001 TO T7831028 | R1 01/00 |
| 100-0140-7831 | MUDGUARDS | T7831029 TO T7831116 | R1 05/01 |
| 100-0140-7831 | MUDGUARDS | T7831117 TO T7831309 | 09/02 |
| 100-0140-7831 | MUDGUARDS | T7831310 TO T7831393 | R3 11/07 |
| 100-0140-7831 | MUDGUARDS | T7831394 | 01/08 |
| SECTION 110 | ENGINE | | |
| 110-0030-7831 | ENGINE AND MOUNTING | T7831001 TO T7831391 | R5 11/06 |
| 110-0030-7831 | ENGINE AND MOUNTING | T7831392 | R1 03/08 |
| 110-0050-7831 | AIR CLEANER | | |
| 110-0060-7831 | AIR CLEANER PIPES AND HOSES | | |
| 110-0130-7831 | POWER TAKEOFF-ENG | T7831001 TO T7831235 | R2 01/02 |
| 110-0130-7831 | POWER TAKEOFF-ENG | T7831236 TO T7831391 | R1 07/04 |
| 110-0130-7831 | POWER TAKEOFF-ENG | T7831392 TO T7831480 | 10/07 |
| 110-0130-7831 | POWER TAKEOFF-ENG | T7831481 | 03/08 |
| SECTION 120 | TRANSMISSION | | |
| 120-0010-7831 | TRANSMISSION MOUNTING | T7831001 TO T7831020 | R2 07/03 |
| 120-0010-7831 | TRANSMISSION MOUNTING | T7831021 | R4 08/07 |
| 120-0020-7831 | TRANSMISSION BREAKDOWN | T7831001 TO T7831193 | |
| 120-0020-7831 | TRANSMISSION BREAKDOWN | T7831194 | R3 04/05 |
| 120-0050-7831 | CONTROL VALVE | T7831001 TO T7831193 | R2 12/09 |
| 120-0050-7831 | CONTROL VALVE | T7831194 | R1 12/09 |
| 120-0070-7831 | SHIFT CONTROL | T7831001 TO T7831056 | R4 07/04 |
| 120-0070-7831 | SHIFT CONTROL | T7831057 TO T7831193 | R1 07/04 |
| 120-0070-7831 | SHIFT CONTROL | T7831194 | R2 06/09 |
| 120-0090-7831 | POWER TAKEOFF-TRANS | | |
| 120-0100-7831 | FILTER | T7831001 TO T7831193 | |
| 120-0100-7831 | FILTER | T7831194 | R1 04/04 |

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|--------------------|--------------------------------|------------------------|-------------------|
| SECTION 120 | TRANSMISSION-CONTINUED | | |
| 120-0110-7831 | OIL LINES-TRANSMISSION | T7831001 TO T7831227 | |
| 120-0110-7831 | OIL LINES-TRANSMISSION | T7831228 | 04/04 |
| 120-0190-7831 | RETARDER CONTROL LINES-HYD | | R5 06/08 |
| 120-0200-7831 | FRONT COVER & CONVERTER GROUP | T7831001 TO T7831193 | |
| 120-0200-7831 | FRONT COVER & CONVERTER GROUP | T7831194 | 01/04 |
| 120-0210-7831 | CONVERTER HOUSING GROUP | T7831001 TO T7831193 | R1 09/02 |
| 120-0210-7831 | CONVERTER HOUSING GROUP | T7831194 | 01/04 |
| 120-0220-7831 | OIL PUMP | T7831001 TO T7831193 | |
| 120-0220-7831 | OIL PUMP | T7831194 | 01/04 |
| 120-0230-7831 | FILTER ADAPT/REGULATOR VALVES | T7831001 TO T7831193 | |
| 120-0230-7831 | FILTER ADAPT/REGULATOR VALVES | T7831194 | 01/04 |
| 120-0240-7831 | LOCKUP VALVE | T7831001 TO T7831193 | |
| 120-0240-7831 | LOCKUP VALVE | T7831194 | 01/04 |
| 120-0250-7831 | ATEC LOCKUP DROP OUT | T7831001 TO T7831031 | R1 01/00 |
| 120-0250-7831 | ATEC LOCKUP DROP OUT | T7831032 TO T7831193 | R1 04/04 |
| 120-0260-7831 | RETARDER GROUP | T7831001 TO T7831193 | |
| 120-0260-7831 | RETARDER GROUP | T7831194 | 01/04 |
| 120-0270-7831 | RETARDER CONTROL VALVE | T7831001 TO T7831193 | |
| 120-0270-7831 | RETARDER CONTROL VALVE | T7831194 | 01/04 |
| 120-0280-7831 | SPLITTER GEARING AND CLUTCHES | T7831001 TO T7831193 | |
| 120-0280-7831 | SPLITTER GEARING AND CLUTCHES | T7831194 | R1 01/09 |
| 120-0290-7831 | MAIN HOUSING GROUP | T7831001 TO T7831193 | |
| 120-0290-7831 | MAIN HOUSING GROUP | T7831194 | 01/04 |
| 120-0300-7831 | HIGH RANGE GEARING & CLUTCHES | T7831001 TO T7831193 | R1 04/03 |
| 120-0300-7831 | HIGH RANGE GEARING & CLUTCHES | T7831194 | 01/04 |
| 120-0310-7831 | INTER RANGE GEARING & CLUTCHES | T7831001 TO T7831193 | |
| 120-0310-7831 | INTER RANGE GEARING & CLUTCHES | T7831194 | 01/04 |
| 120-0320-7831 | LOW RANGE GEARING & CLUTCHES | T7831001 TO T7831193 | R1 11/03 |
| 120-0320-7831 | LOW RANGE GEARING & CLUTCHES | T7831194 | 01/04 |
| 120-0330-7831 | REV RANGE GEARING & CLUTCHES | T7831001 TO T7831193 | |
| 120-0330-7831 | REV RANGE GEARING & CLUTCHES | T7831194 | 01/04 |
| 120-0340-7831 | REAR COVER GROUP | T7831001 TO T7831193 | |
| 120-0340-7831 | REAR COVER GROUP | T7831194 | 01/04 |
| 120-0360-7831 | THROTTLE SENSOR AND MOUNTING | | |
| SECTION 130 | DRIVELINE | | |
| 130-0010-7831 | FRONT DRIVELINE | | R3 10/07 |
| 130-0020-7831 | REAR DRIVELINE | | |

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------------|--------------------------------|------------------------|-------------------|
| <u>SECTION 140</u> | | | |
| <u>FRONT AXLE</u> | | | |
| 140-0040-7831 | WHEEL, RIM AND TYRE-FRONT | T7831001 TO T7831062 | R3 11/08 |
| 140-0040-7831 | WHEEL, RIM AND TYRE-FRONT | T7831063 | R1 11/03 |
| <u>SECTION 160</u> | | | |
| <u>REAR AXLE</u> | | | |
| 160-0020-7831 | DIFFERENTIAL-REAR | T7831001 TO T7831016 | R3 10/04 |
| 160-0020-7831 | DIFFERENTIAL-REAR | T7831017 TO T7831058 | R5 04/09 |
| 160-0020-7831 | DIFFERENTIAL-REAR | T7831059 TO T7831317 | R3 07/04 |
| 160-0020-7831 | DIFFERENTIAL-REAR | T7831318 TO T7831394 | 11/06 |
| 160-0020-7831 | DIFFERENTIAL-REAR | T7831395 | 10/07 |
| 160-0030-7831 | AXLE GROUP-REAR | T7831001 TO T7831014 | R1 02/99 |
| 160-0030-7831 | AXLE GROUP-REAR | T7831015 TO T7831042 | R1 01/00 |
| 160-0030-7831 | AXLE GROUP-REAR | T7831043 | R4 01/08 |
| 160-0040-7831 | PLANETARY GEARING-REAR | T7831001 TO T7831394 | R1 08/03 |
| 160-0040-7831 | PLANETARY GEARING-REAR | T7831395 | 10/07 |
| 160-0050-7831 | WHEEL, RIM AND TYRE-REAR | T7831001 TO T7831062 | R1 11/00 |
| 160-0050-7831 | WHEEL, RIM AND TYRE-REAR | T7831063 | R1 11/03 |
| <u>SECTION 165</u> | | | |
| <u>BRAKE PARTS</u> | | | |
| 165-0020-7831 | BRAKE PARTS-FRONT WHEEL-RIGIDS | | R1 01/02 |
| 165-0030-7831 | BRAKE PARTS-REAR WHEEL-RIGIDS | T7831001 TO T7831014 | R2 01/00 |
| 165-0030-7831 | BRAKE PARTS-REAR WHEEL-RIGIDS | T7831015 TO T7831042 | R2 02/01 |
| 165-0030-7831 | BRAKE PARTS-REAR WHEEL-RIGIDS | T7831043 | R6 07/09 |
| <u>SECTION 180</u> | | | |
| <u>SUSPENSION SYSTEM</u> | | | |
| 180-0030-7831 | FRONT RIDE CYLINDER | T7831001 TO T7831176 | R2 04/03 |
| 180-0030-7831 | FRONT RIDE CYLINDER | T7831177 TO T7831340 | R1 04/04 |
| 180-0030-7831 | FRONT RIDE CYLINDER | T7831341 | 05/07 |
| 180-0050-7831 | REAR RIDE CYLINDER | | R2 02/06 |
| <u>SECTION 190</u> | | | |
| <u>ELECTRICAL SYSTEM</u> | | | |
| TERMINALS | | | |
| CONNECTORS | | | |
| 190-0030-7831 | CABLES/HARNESSES-CAB | T7831001 TO T7831020 | R1 01/00 |
| 190-0030-7831 | CABLES/HARNESSES-CAB | T7831021 TO T7831048 | R1 11/00 |
| 190-0030-7831 | CABLES/HARNESSES-CAB | T7831049 TO T7831193 | 11/00 |
| 190-0030-7831 | CABLES/HARNESSES-CAB | T7831194 TO T7831431 | R1 07/04 |
| 190-0030-7831 | CABLES/HARNESSES-CAB | T7831432 | 08/08 |
| 190-0040-7831 | CABLES/HARNESSES-CHASS/ENG | T7831001 TO T7831020 | R1 01/00 |
| 190-0040-7831 | CABLES/HARNESSES-CHASS/ENG | T7831021 TO T7831193 | R1 08/03 |
| 190-0040-7831 | CABLES/HARNESSES-CHASS/ENG | T7831194 TO T7831431 | R4 10/09 |
| 190-0040-7831 | CABLES/HARNESSES-CHASS/ENG | T7831432 | R3 10/09 |

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|---|------------------------|-------------------|
| <u>SECTION 190</u> | <u>ELECTRICAL SYSTEM-CONTINUED</u> | | |
| 190-0070-7831 | BATTERY AND CABLES | T7831001 TO T7831020 | R2 11/03 |
| 190-0070-7831 | BATTERY AND CABLES | T7831021 TO T7831193 | R2 11/03 |
| 190-0070-7831 | BATTERY AND CABLES | T7831194 | R1 02/06 |
| 190-0080-7831 | BATTERY MOUNTING | | |
| 190-0100-7831 | ELECTRICAL LIGHTING SYSTEM | T7831001 TO T7831018 | R1 01/00 |
| 190-0100-7831 | ELECTRICAL LIGHTING SYSTEM | T7831019 TO T7831297 | R1 04/03 |
| 190-0100-7831 | ELECTRICAL LIGHTING SYSTEM | T7831298 TO T7831431 | R1 03/08 |
| 190-0100-7831 | ELECTRICAL LIGHTING SYSTEM | T7831432 | R1 01/09 |
| 190-0110-7831 | ALTERNATOR AND MOUNTING | | R1 01/00 |
| 190-0120-7831 | STARTER MOTOR | | R1 04/09 |
| 190-0210-7831 | REVERSE ALARM | | |
| 190-0270-7831 | SWITCHES AND SENSORS | | R8 10/09 |
| 190-0300-7831 | RADIO CASSETTE | T7831001 TO T7831094 | R1 01/02 |
| 190-0300-7831 | RADIO CASSETTE | T7831095 | 01/02 |
| 190-0310-7831 | ELECTRICAL HORN | | R1 08/03 |
| <u>SECTION 200</u> | <u>FUEL SYSTEM</u> | | |
| 200-0010-7831 | FUEL TANK AND MOUNTING | T7831001 TO T7831279 | R1 07/04 |
| 200-0010-7831 | FUEL TANK AND MOUNTING | T7831280 TO T7831393 | 04/05 |
| 200-0010-7831 | FUEL TANK AND MOUNTING | T7831394 | 01/08 |
| 200-0040-7831 | FUEL LINES | | |
| 200-0050-7831 | ACCELERATOR LINKAGE | | |
| 200-0080-7831 | COLD START KIT | | |
| <u>SECTION 210</u> | <u>COOLING SYSTEM</u> | | |
| 210-0010-7831 | RADIATOR ASSEMBLY | T7831001 TO T7831087 | R4 02/06 |
| 210-0010-7831 | RADIATOR ASSEMBLY | T7831088 TO T7831388 | R4 09/05 |
| 210-0010-7831 | RADIATOR ASSEMBLY | T7831389 TO T7831400 | 10/07 |
| 210-0010-7831 | RADIATOR ASSEMBLY | T7831401 | 06/08 |
| 210-0020-7831 | RADIATOR MOUNTING | T7831001 TO T7831388 | R3 10/04 |
| 210-0020-7831 | RADIATOR MOUNTING | T7831389 | 10/07 |
| 210-0030-7831 | RADIATOR PIPING | T7831001 TO T7831028 | R2 09/05 |
| 210-0030-7831 | RADIATOR PIPING | T7831029 TO T7831068 | R1 11/00 |
| 210-0030-7831 | RADIATOR PIPING | T7831069 TO T7831193 | R1 09/05 |
| 210-0030-7831 | RADIATOR PIPING | T7831194 TO T7831388 | R1 09/04 |
| 210-0030-7831 | RADIATOR PIPING | T7831389 | R1 11/07 |
| 210-0040-7831 | RADIATOR HEADER TANK AND HOSES | T7831001 TO T7831074 | R2 09/02 |
| 210-0040-7831 | RADIATOR HEADER TANK AND HOSES | T7831075 TO T7831400 | R4 11/08 |
| 210-0040-7831 | RADIATOR HEADER TANK AND HOSES | T7831401 | R1 11/08 |
| 210-0050-7831 | OIL COOLER-DISC BRAKES | T7831001 TO T7831096 | R1 01/02 |

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|--|-------------------------------|--|--------------------------|
| <u>SECTION 210</u> | | | |
| <u>COOLING SYSTEM-CONTINUED</u> | | | |
| 210-0050-7831 | OIL COOLER-DISC BRAKES | T7831097 | 01/02 |
| 210-0051-7831 | OIL COOLER PIPING-DISC BRAKES | T7831001 TO T7831096 | R1 01/02 |
| 210-0051-7831 | OIL COOLER PIPING-DISC BRAKES | T7831097 TO T7831400 | R5 01/08 |
| 210-0051-7831 | OIL COOLER PIPING-DISC BRAKES | T7831401 | R1 08/08 |
| 210-0060-7831 | OIL COOLER AND PIPING-TRANS | T7831001 TO T7831060 | R2 09/05 |
| 210-0060-7831 | OIL COOLER AND PIPING-TRANS | T7831061 TO T7831096 | R3 09/05 |
| 210-0060-7831 | OIL COOLER AND PIPING-TRANS | T7831097 | R3 09/05 |
| 210-0065-7831 | OIL COOLER-TRANS | T7831097 | R1 09/02 |
| <u>SECTION 220</u> | | | |
| <u>STEERING SYSTEM</u> | | | |
| 220-0010-7831 | STEERING LINES | T7831001 TO T7831061 | R2 11/00 |
| 220-0010-7831 | STEERING LINES | T7831062 TO T7831369 | R7 02/06 |
| 220-0010-7831 | STEERING LINES | T7831370 | R2 01/08 |
| 220-0040-7831 | TANK AND MOUNTING-STEERING | T7831001 TO T7831142 | R2 06/09 |
| 220-0040-7831 | TANK AND MOUNTING-STEERING | T7831143 TO T7831375 (T7831376 & ABOVE 230-0040) | R3 06/09 |
| 220-0050-7831 | PUMP-STEERING | T7831001 TO T7831260 | |
| 220-0050-7831 | PUMP-STEERING | T7831261 TO T7831282 | 10/04 |
| 220-0050-7831 | PUMP-STEERING | T7831283 TO T7831369 | 09/05 |
| 220-0050-7831 | PUMP-STEERING | T7831370 | R1 03/09 |
| 220-0060-7831 | PUMP AND ACCUMULATOR MOUNTING | T7831001 TO T7831186 | |
| 220-0060-7831 | PUMP AND ACCUMULATOR MOUNTING | T7831187 TO T7831226 | 11/03 |
| 220-0060-7831 | PUMP AND ACCUMULATOR MOUNTING | T7831227 | 07/04 |
| 220-0080-7831 | ACCUMULATOR-STEERING | T7831001 TO T7831130 | |
| 220-0080-7831 | ACCUMULATOR-STEERING | T7831131 TO T7831155 | 09/02 |
| 220-0080-7831 | ACCUMULATOR-STEERING | T7831156 TO T7831186 ALSO T7831316 & ABOVE | 11/06 |
| 220-0080-7831 | ACCUMULATOR-STEERING | T7831187 TO T7831226 | 07/04 |
| 220-0080-7831 | ACCUMULATOR-STEERING | T7831227 TO T7831315 | 07/03 |
| 220-0090-7831 | STEERING VALVE | | R2 08/07 |
| 220-0120-7831 | STEERING CYLINDER | T7831001 TO T7831061 | R2 07/01 |
| 220-0120-7831 | STEERING CYLINDER | T7831062 TO T7831191 ALSO T7831312 & ABOVE | R3 11/06 |
| 220-0120-7831 | STEERING CYLINDER | T7831192 TO T7831311 | 11/03 |
| 220-0130-7831 | RELIEF VALVE-STEERING | T7831001 TO T7831335 | |
| 220-0130-7831 | RELIEF VALVE-STEERING | T7831336 | 11/06 |
| 220-0150-7831 | FILTER-STEERING | T7831001 TO T7831369 | |
| 220-0150-7831 | FILTER-STEERING | T7831370 | 08/07 |
| 220-0190-7831 | STEERING LINKAGE | | R3 07/04 |
| 220-0230-7831 | STEERING COLUMN MOUNTING | T7831001 TO T7831056 | R1 11/00 |
| 220-0230-7831 | STEERING COLUMN MOUNTING | T7831057 TO T7831066 | R1 05/01 |
| 220-0230-7831 | STEERING COLUMN MOUNTING | T7831067 TO T7831219 | 05/01 |
| 220-0230-7831 | STEERING COLUMN MOUNTING | T7831220 | 07/04 |

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|--------------------|-------------------------------|------------------------|-------------------|
| SECTION 230 | BODY HOIST SYSTEM | | |
| 230-0020-7831 | LINES AND FITTINGS-BODY HOIST | T7831001 TO T7831348 | R5 11/06 |
| 230-0020-7831 | LINES AND FITTINGS-BODY HOIST | T7831349 | 05/07 |
| 230-0021-7831 | SERVO CONTROL LINES-BODY | | R5 11/06 |
| 230-0040-7831 | TANK AND MOUNTING-BODY HOIST | T7831001 TO T7831375 | R3 06/09 |
| 230-0040-7831 | TANK AND MOUNTING-BODY HOIST | T7831376 TO T7831442 | R2 06/09 |
| 230-0040-7831 | TANK AND MOUNTING-BODY HOIST | T7831443 | R1 06/09 |
| 230-0041-7831 | BREATHER LINE-HYDRAULIC TANKS | T7831001 TO T7831375 | |
| 230-0050-7831 | PUMP-BODY HOIST | | R1 03/08 |
| 230-0060-7831 | CONTROL VALVE-BODY HOIST | T7831001 TO T7831348 | R2 04/05 |
| 230-0060-7831 | CONTROL VALVE-BODY HOIST | T7831349 | 05/07 |
| 230-0070-7831 | CONTROL VALVE MOUNTING | T7831001 TO T7831348 | R1 07/01 |
| 230-0070-7831 | CONTROL VALVE MOUNTING | T7831349 | 05/07 |
| 230-0081-7831 | JOYSTICK-BODY CONTROL | | |
| 230-0110-7831 | MANIFOLD RELIEF VALVE | | |
| 230-0120-7831 | RELIEF VALVE | T7831001 TO T7831348 | |
| 230-0121-7831 | PILOT SUPPLY VALVE | | 01/00 |
| 230-0130-7831 | HOIST CYLINDERS | | |
| SECTION 250 | BRAKING SYSTEM | | |
| 250-0020-7831 | BRAKE LINES-HYDRAULIC | T7831001 TO T7831087 | R3 05/01 |
| 250-0020-7831 | BRAKE LINES-HYDRAULIC | T7831088 | R7 07/09 |
| 250-0050-7831 | BRAKE MANIFOLD/PAS VALVE | T7831001 TO T7831048 | R1 11/00 |
| 250-0050-7831 | BRAKE MANIFOLD/PAS VALVE | T7831049 | 11/00 |
| 250-0055-7831 | PUMP-TANDEM | T7831001 TO T7831381 | |
| 250-0055-7831 | PUMP-TANDEM | T7831382 | 06/07 |
| 250-0060-7831 | BRAKE ACCUMULATOR | T7831001 TO T7831308 | |
| 250-0060-7831 | BRAKE ACCUMULATOR | T7831309 | 02/06 |
| 250-0070-7831 | TREADLE VALVE | | R1 05/01 |
| 250-0090-7831 | DIRECTIONAL CONTROL VALVE | T7831001 TO T7831218 | |
| 250-0090-7831 | DIRECTIONAL CONTROL VALVE | T7831219 | 07/04 |
| 250-0100-7831 | MONOBLOCK BRAKE VALVE | | |
| 250-0110-7831 | PRESSURE REDUCING VALVE | | |
| 250-0130-7831 | RETARDER CONTROL VALVE-BRAKES | | R1 01/00 |
| 250-0151-7831 | PARKING BRAKE VALVE | | R1 11/00 |
| 250-0152-7831 | BRAKE DUMP VALVE | T7831001 TO T7831315 | |
| 250-0152-7831 | BRAKE DUMP VALVE | T7831316 | 11/06 |
| 250-0240-7831 | FILTER ASSEMBLY-DISC BRAKE | T7831001 TO T7831317 | |
| 250-0240-7831 | FILTER ASSEMBLY-DISC BRAKE | T7831318 TO T7831421 | 11/06 |
| 250-0240-7831 | FILTER ASSEMBLY-DISC BRAKE | T7831422 | 06/08 |

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|--------------------------|-------------------------------|--------------------------|
| <u>SECTION 260</u> | <u>CAB</u> | | |
| 260-0010-7831 | CAB ASSEMBLY | T7831001 TO T7831042 | R1 01/00 |
| 260-0010-7831 | CAB ASSEMBLY | T7831043 TO T7831087 | R1 05/01 |
| 260-0010-7831 | CAB ASSEMBLY | T7831088 | 05/01 |
| 260-0011-7831 | CAB CENTRE CONSOLE | T7831043 TO T7831114 | 01/00 |
| 260-0011-7831 | CAB CENTRE CONSOLE | T7831115 TO T7831193 | 09/02 |
| 260-0011-7831 | CAB CENTRE CONSOLE | T7831194 | 11/03 |
| 260-0015-7831 | CAB MOUNTING | T7831001 TO T7831042 | R1 01/00 |
| 260-0015-7831 | CAB MOUNTING | T7831043 TO T7831293 | R2 07/04 |
| 260-0015-7831 | CAB MOUNTING | T7831294 | 02/06 |
| 260-0030-7831 | CAB DOOR-LEFT HAND | T7831001 TO T7831398 | R2 10/09 |
| 260-0030-7831 | CAB DOOR-LEFT HAND | T7831399 | R1 10/09 |
| 260-0040-7831 | CAB DOOR-RIGHT HAND | | R1 01/00 |
| 260-0080-7831 | SWITCHES AND INSTRUMENTS | T7831001 TO T7831048 | R3 02/01 |
| 260-0080-7831 | SWITCHES AND INSTRUMENTS | T7831049 TO T7831060 | R1 02/01 |
| 260-0080-7831 | SWITCHES AND INSTRUMENTS | T7831061 | R5 08/08 |
| 260-0090-7831 | SEAT-DRIVER | T7831001 TO T7831085 | R2 05/01 |
| 260-0090-7831 | SEAT-DRIVER | T7831086 TO T7831398 | R2 07/03 |
| 260-0090-7831 | SEAT-DRIVER | T7831399 | R1 01/09 |
| 260-0110-7831 | SEAT-INSTRUCTOR | T7831001 TO T7831038 | R1 01/00 |
| 260-0110-7831 | SEAT-INSTRUCTOR | T7831039 TO T7831063 | R1 11/00 |
| 260-0110-7831 | SEAT-INSTRUCTOR | T7831064 TO T7831398 | R1 05/01 |
| 260-0110-7831 | SEAT-INSTRUCTOR | T7831399 | 01/08 |
| 260-0120-7831 | HEATER | T7831001 TO T7831042 | R2 04/03 |
| 260-0130-7831 | AIR CONDITIONER/HEATER | T7831001 TO T7831042 | R2 04/03 |
| 260-0130-7831 | AIR CONDITIONER/HEATER | T7831043 TO T7831192 | R1 04/04 |
| 260-0130-7831 | AIR CONDITIONER/HEATER | T7831193 TO T7831398 | R2 10/04 |
| 260-0130-7831 | AIR CONDITIONER/HEATER | T7831399 | 02/08 |
| 260-0140-7831 | HEATER LINES AND WIRING | | R3 07/03 |
| 260-0145-7831 | AIR CONDITIONER LINES | | R5 08/07 |
| 260-0190-7831 | WINDSCREEN WASHER | | |
| <u>SECTION 270</u> | <u>BODY</u> | | |
| 270-0010-7831 | BODY ASSEMBLY | T7831001 TO T7831116 | R4 01/02 |
| 270-0010-7831 | BODY ASSEMBLY | T7831117 | R2 11/07 |
| 270-0020-7831 | EXHAUST HEATED BODY | T7831001 TO T7831028 | R2 03/09 |
| 270-0020-7831 | EXHAUST HEATED BODY | T7831029 TO T7831032 | R2 03/09 |
| 270-0020-7831 | EXHAUST HEATED BODY | T7831033 | R5 03/09 |
| 270-0080-7831 | ROCK EJECTORS | | |

TABLE OF CONTENTS FOR MODEL TR100

FROM SERIAL NO T7831001 THRU T7831478

REVISED 12/09


| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|--------------------------------|-------------------------------|--------------------------|
| <u>SECTION 290</u> | <u>DECALS</u> | | |
| 290-0010-7831 | DECALS-ENGLISH | T7831001 TO T7831087 | R2 05/01 |
| 290-0010-7831 | DECALS-ENGLISH | T7831088 TO T7831116 | 05/01 |
| 290-0010-7831 | DECALS-ENGLISH | T7831117 TO T7831184 | R2 07/03 |
| 290-0010-7831 | DECALS-ENGLISH | T7831185 TO T7831346 | R1 09/05 |
| 290-0010-7831 | DECALS-ENGLISH (ISO) | T7831347 | R2 08/08 |
| 290-0011-7831 | DECALS-ENGLISH (ANSI) | T7831347 | R2 08/08 |
| 290-0100-7831 | WALKWAY SURFACES | 77831273 | R1 06/08 |
| <u>SECTION 300</u> | <u>MISCELLANEOUS</u> | | |
| 300-0020-7831 | LUBRICATION SYSTEM | | 09/02 |
| 300-0040-7831 | MULTI-TUBE CLAMPS AND HARDWARE | | |
| 300-0200-7831 | UNIT FILTERS AND ELEMENT KITS | | 11/08 |

R1 01/00 (ECN 101112)

100-0010-7831 CHASSIS
SERIAL NO. T7831001 TO T7831020

DRAWING NO. P8589


P8589

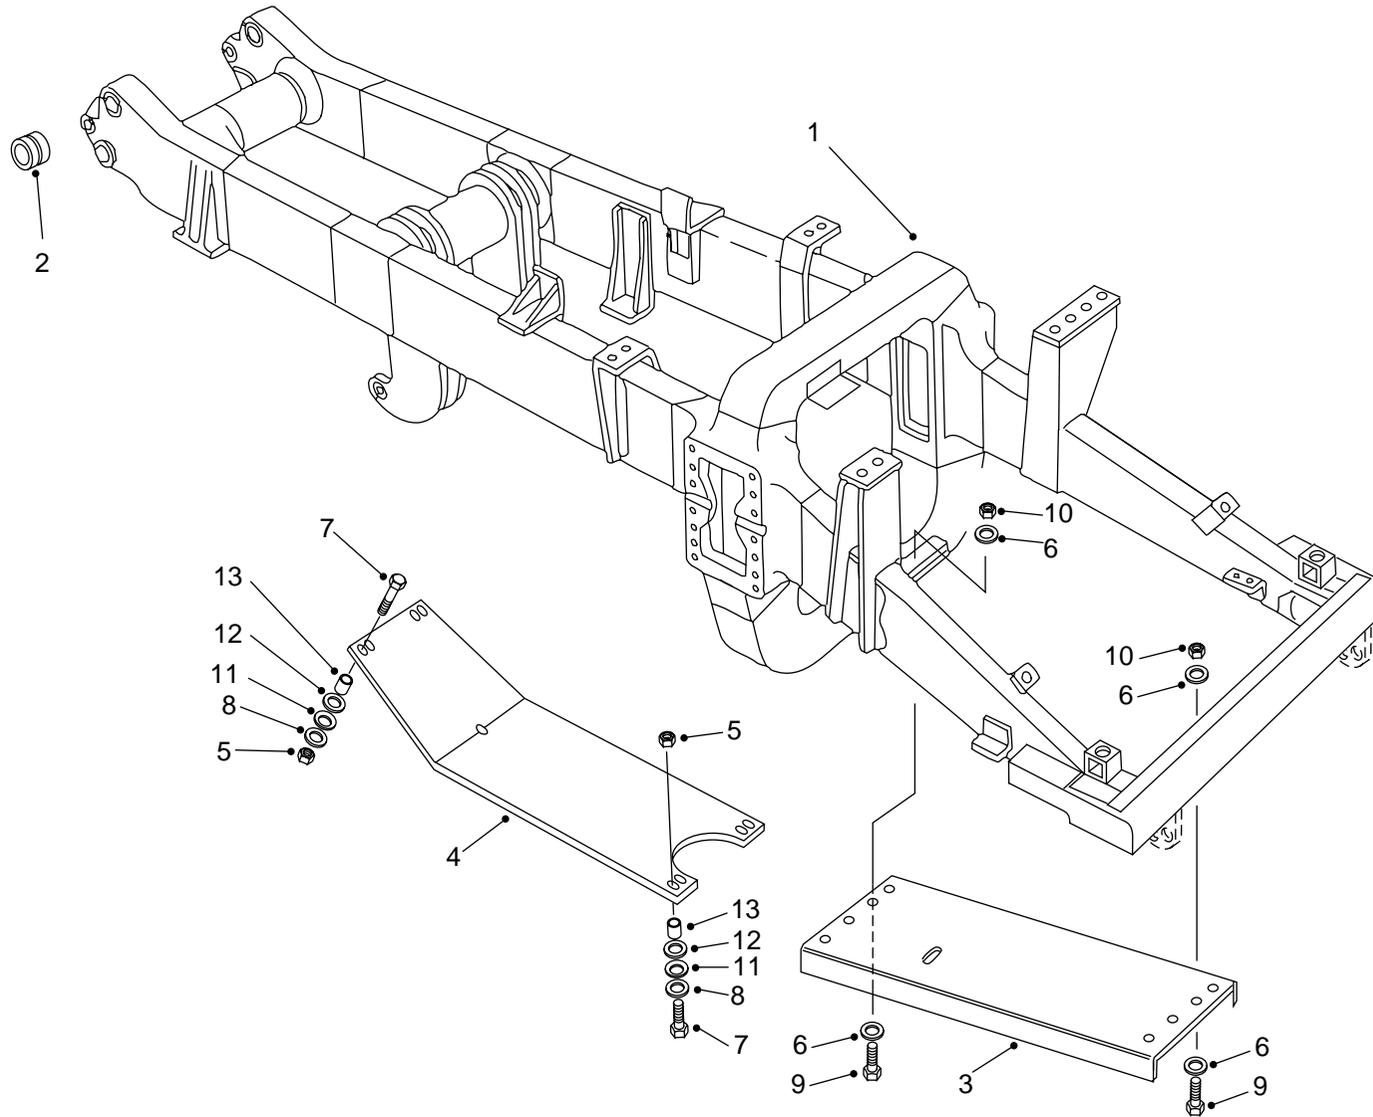

100-0010-7831 CHASSIS

SERIAL NO. T7831001 TO T7831020

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|----------------------|-----------------|---------------|
| 001 | 001 | | 15254656 | FRAME ASSEMBLY COMPL | | |
| 002 | 002 | | 09011828 | .BUSHING | | |
| 003 | 001 | | 15247058 | GUARD-ENGINE | | |
| 004 | 001 | | 15252399 | GUARD-TRANS | | |
| 005 | 008 | | 09355771 | NUT | | |
| 006 | 016 | | 09176228 | WASHER-HARDENED | | |
| 007 | 008 | | 00271621 | BOLT | | |
| 008 | 008 | | 15250976 | WASHER-HARDENED | | |
| 009 | 008 | | 00223453 | BOLT | | |
| 010 | 008 | | 00274141 | NUT | | |
| 011 | 008 | | 15250985 | SPRING-DISC | | |
| 012 | 008 | | 15250984 | WASHER-HARDENED | | |
| 013 | 008 | | 15250945 | SPACER-HARDENED | | |

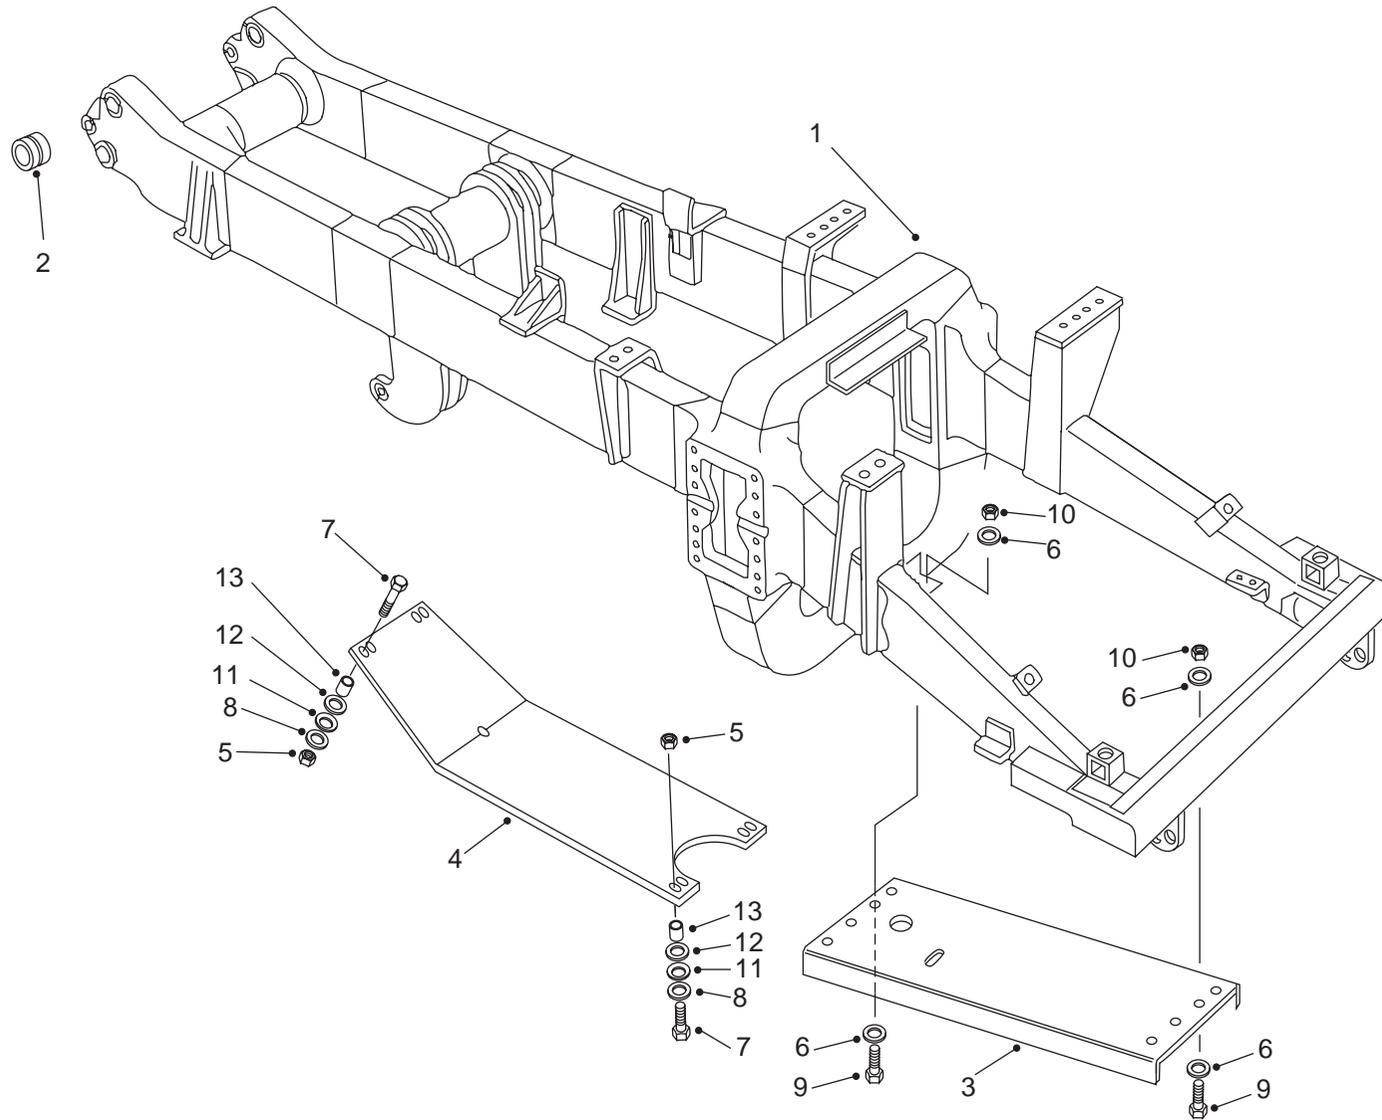


100-0010-7831 CHASSIS
FROM SERIAL NO. T7831021

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|---------------------|-----------------|---------------|
| 001 | 001 | | 15303889 | FRAME ASSY COMPLETE | | |
| 002 | 002 | | 09011828 | .BUSHING | | |
| 003 | 001 | | 15247058 | GUARD-ENGINE | | |
| 004 | 001 | | 15252399 | GUARD-TRANS | | |
| 005 | 008 | | 09355771 | NUT | | |
| 006 | 016 | | 09176228 | WASHER-HARDENED | | |
| 007 | 008 | | 00223464 | BOLT | | |
| 008 | 008 | | 15020053 | WASHER-HARDENED | | |
| 009 | 008 | | 00223453 | BOLT | | |
| 010 | 008 | | 00274141 | NUT | | |
| 011 | 008 | | 15250985 | SPRING-DISC | | |
| 012 | 008 | | 15303749 | WASHER-HARDENED | | |
| 013 | 008 | | 15303750 | SPACER-HARDENED | | |

100-0040-7831 HOOD AND MOUNTING
FROM SERIAL NO. T7831001

DRAWING NO. P9733

P9733

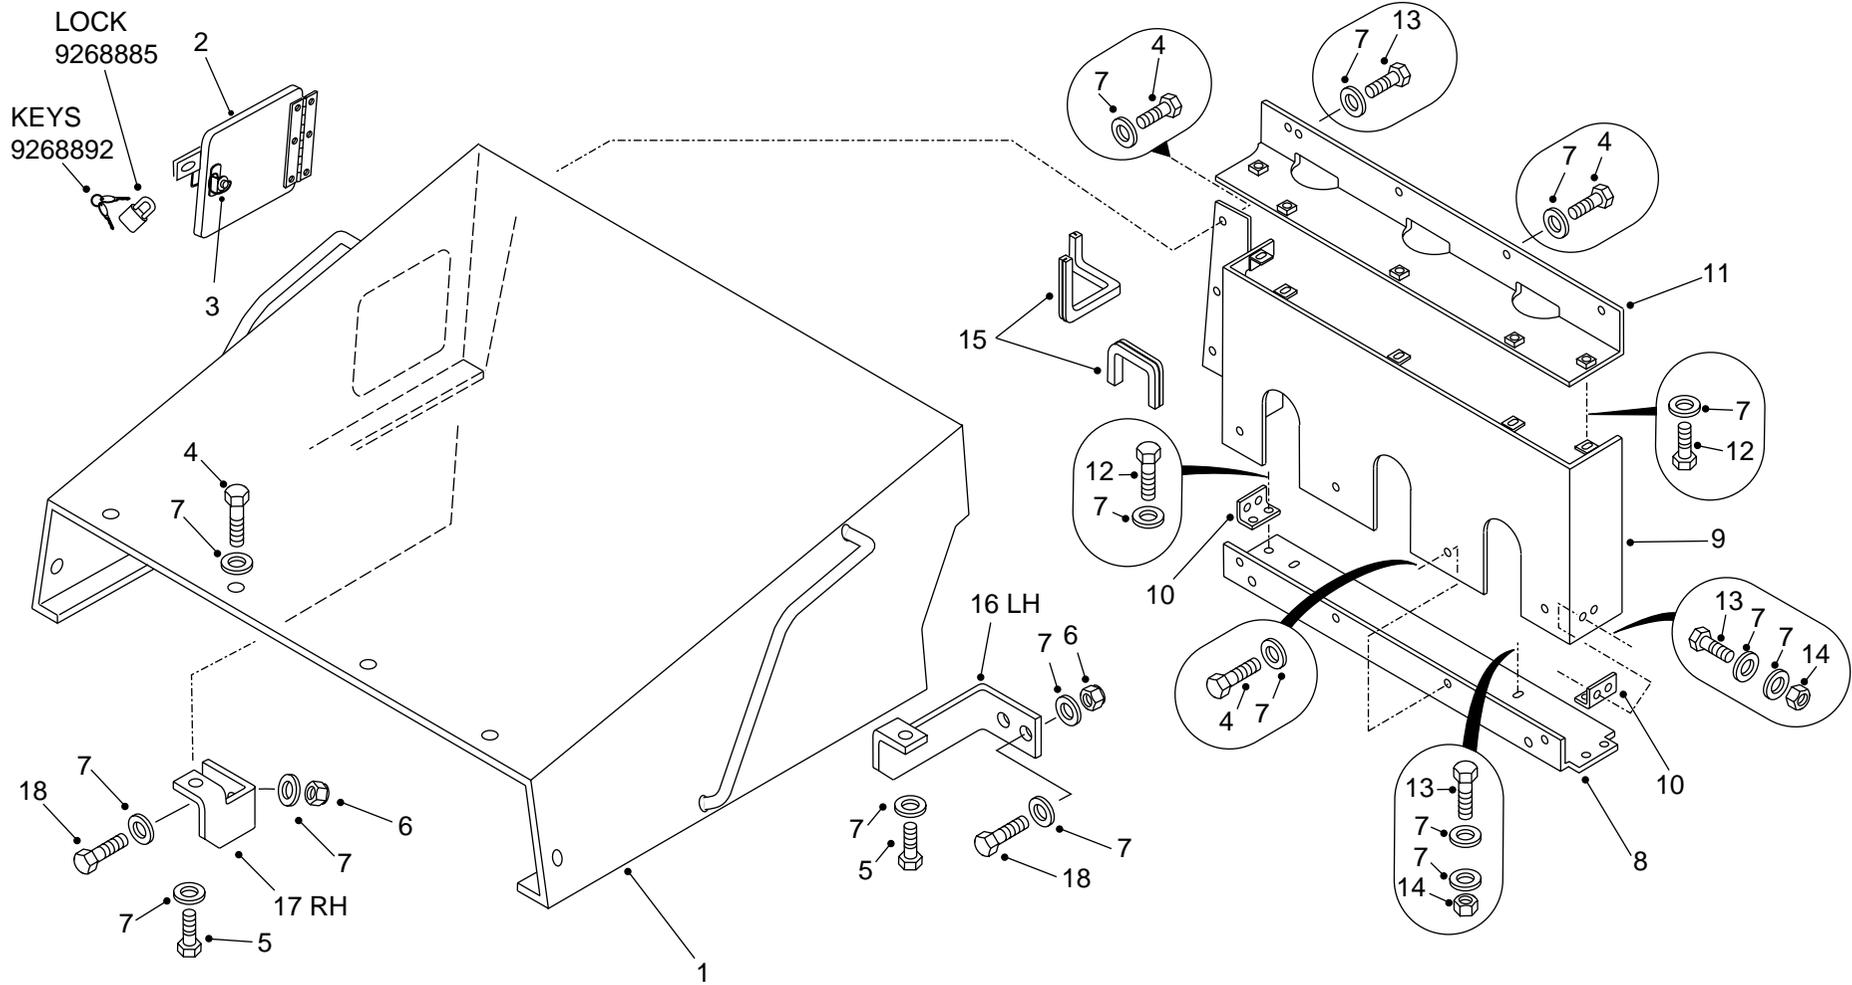

100-0040-7831 HOOD AND MOUNTING
FROM SERIAL NO. T7831001


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|---------------------|-----------------|---------------|
| 001 | 001 | | 15301618 | HOOD ASSEMBLY | | |
| 002 | 001 | | 15256858 | .DOOR ASSY | | |
| 003 | 001 | | 15006324 | ..LATCH SPRING | | |
| 004 | 022 | | 00179881 | BOLT | | |
| 005 | 002 | | 00179887 | BOLT | | |
| 006 | 004 | | 00274209 | LOCKNUT | | |
| 007 | 059 | | 09267949 | WASHER-HARDENED | | |
| 008 | 001 | | 15255682 | BASE PLATE ASSEMBLY | | |
| 009 | 001 | | 15255686 | BAFFLE ASSEMBLY | | |
| 010 | 002 | | 15255707 | BRACKET | | |
| 011 | 001 | | 15255714 | PLATE ASSY-TOP | | |
| 012 | 013 | | 00179883 | BOLT | | |
| 013 | 006 | | 00179885 | BOLT | | |
| 014 | 004 | | 00120378 | NUT | | |
| 015 | ASR | | 09368561 | BEADING | | |
| 016 | 001 | | 15254585 | BRACKET-HOOD LH | | |
| 017 | 001 | | 15254586 | BRACKET-HOOD RH | | |
| 018 | 004 | | 00179889 | BOLT | | |

R4 07/03 (ECN 100496, ECN 104273, ECN 105422, ECN 105627)

100-0070-7831 FENDERS AND MOUNTING
FROM SERIAL NO. T7831001 TO T7831193

DRAWING NO. P9996A


P9996a

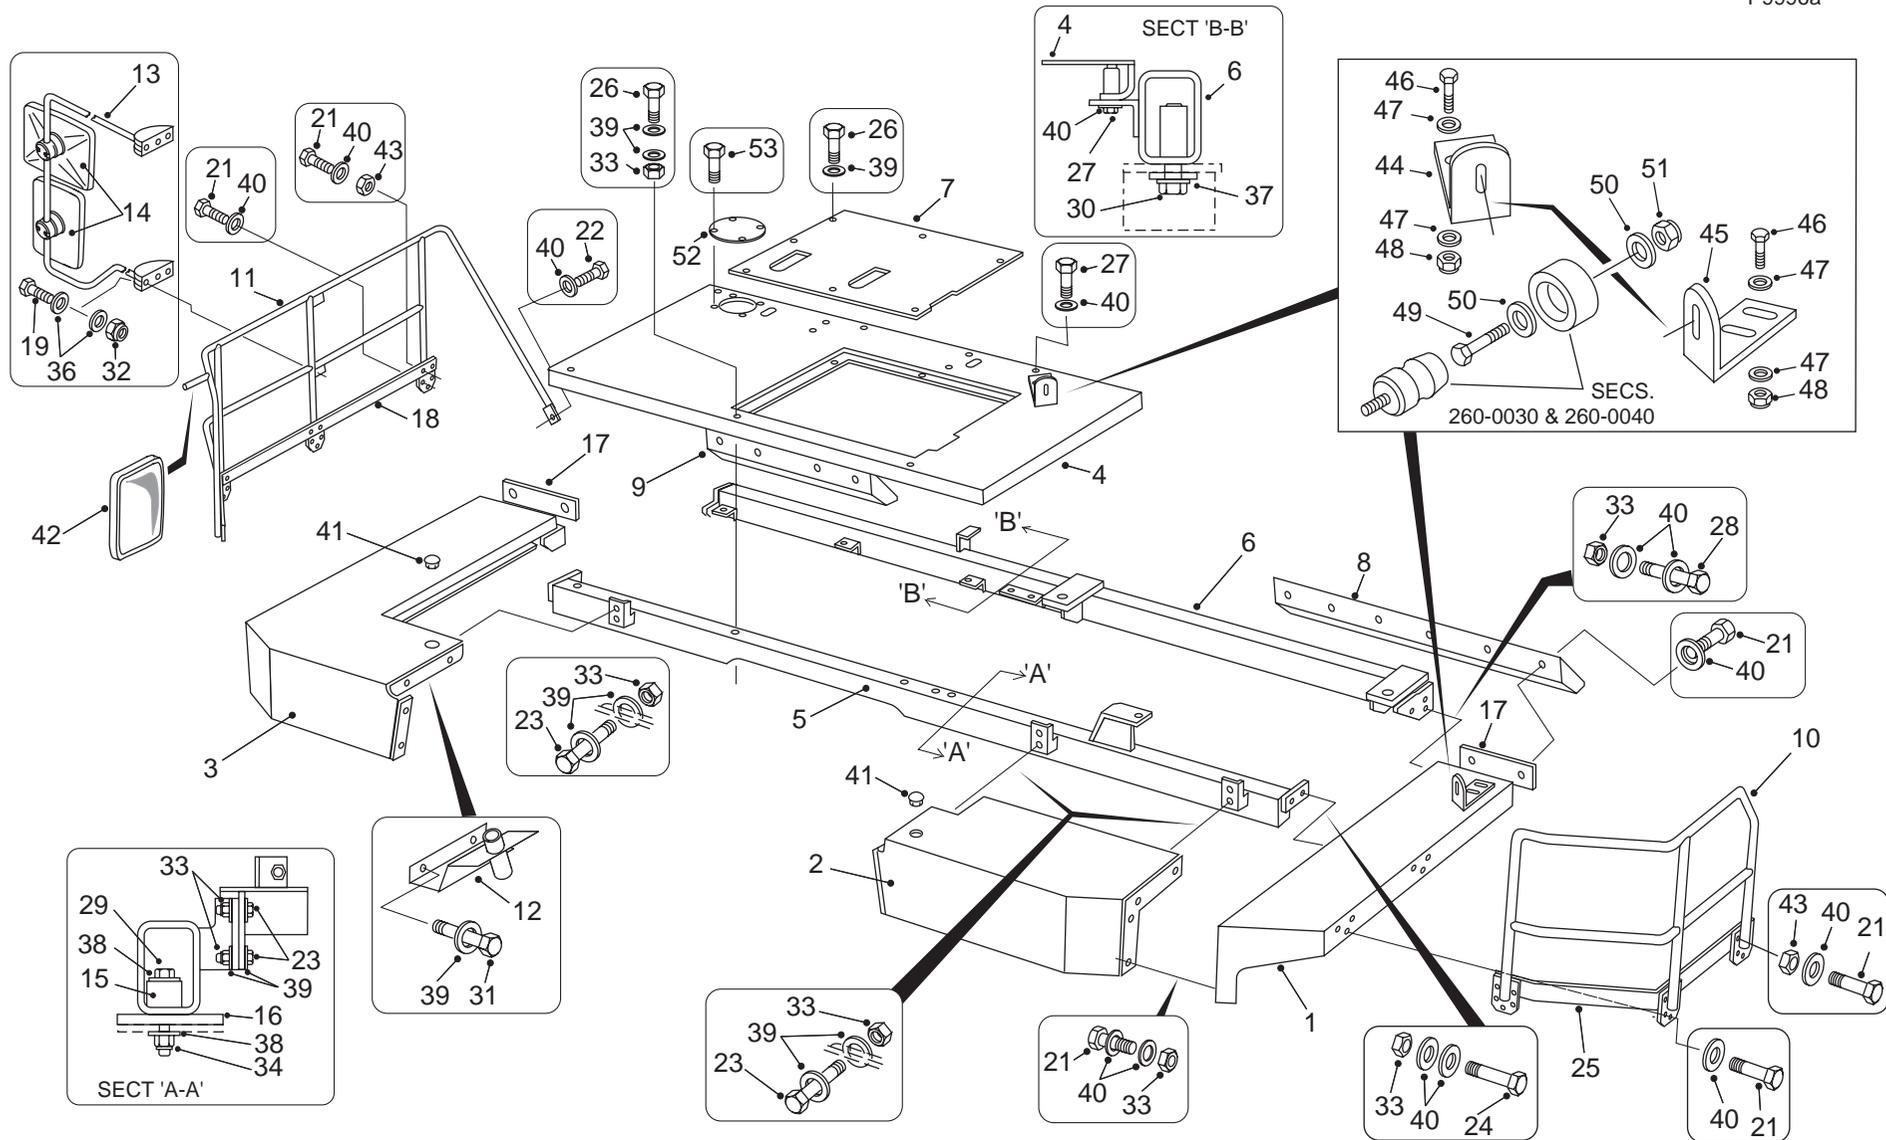

100-0070-7831 FENDERS AND MOUNTING
FROM SERIAL NO. T7831001 TO T7831193

DRAWING NO P9996B


P9996B

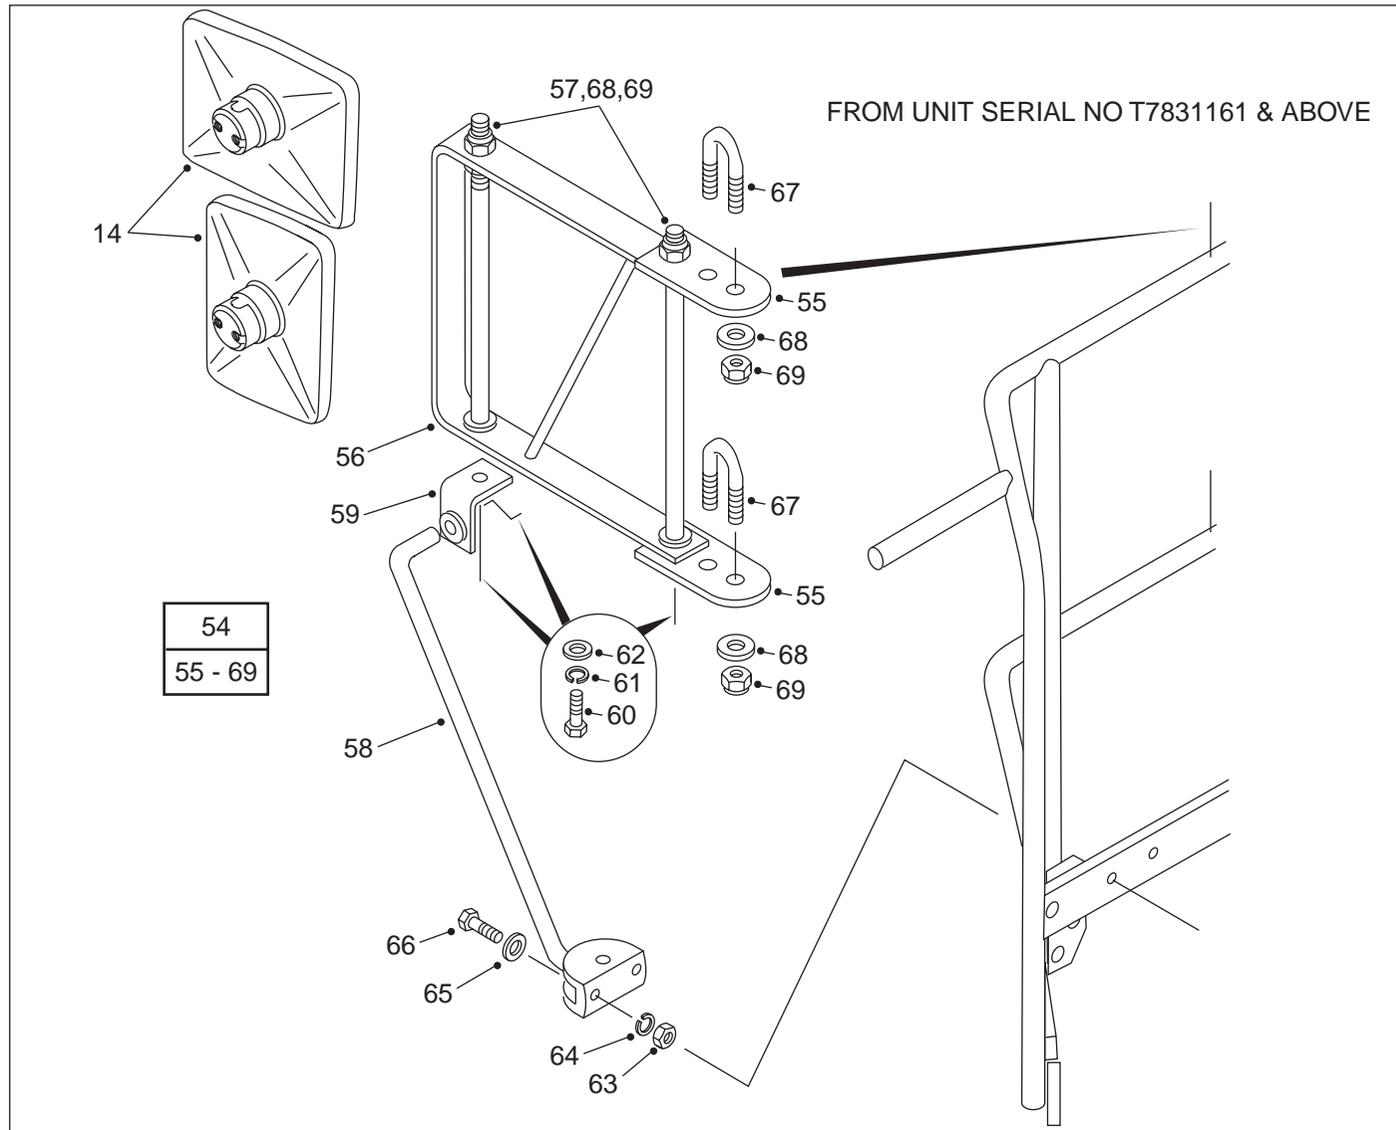

THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0070-7831 FENDERS AND MOUNTING
FROM SERIAL NO. T7831194 TO T7831221


P11372

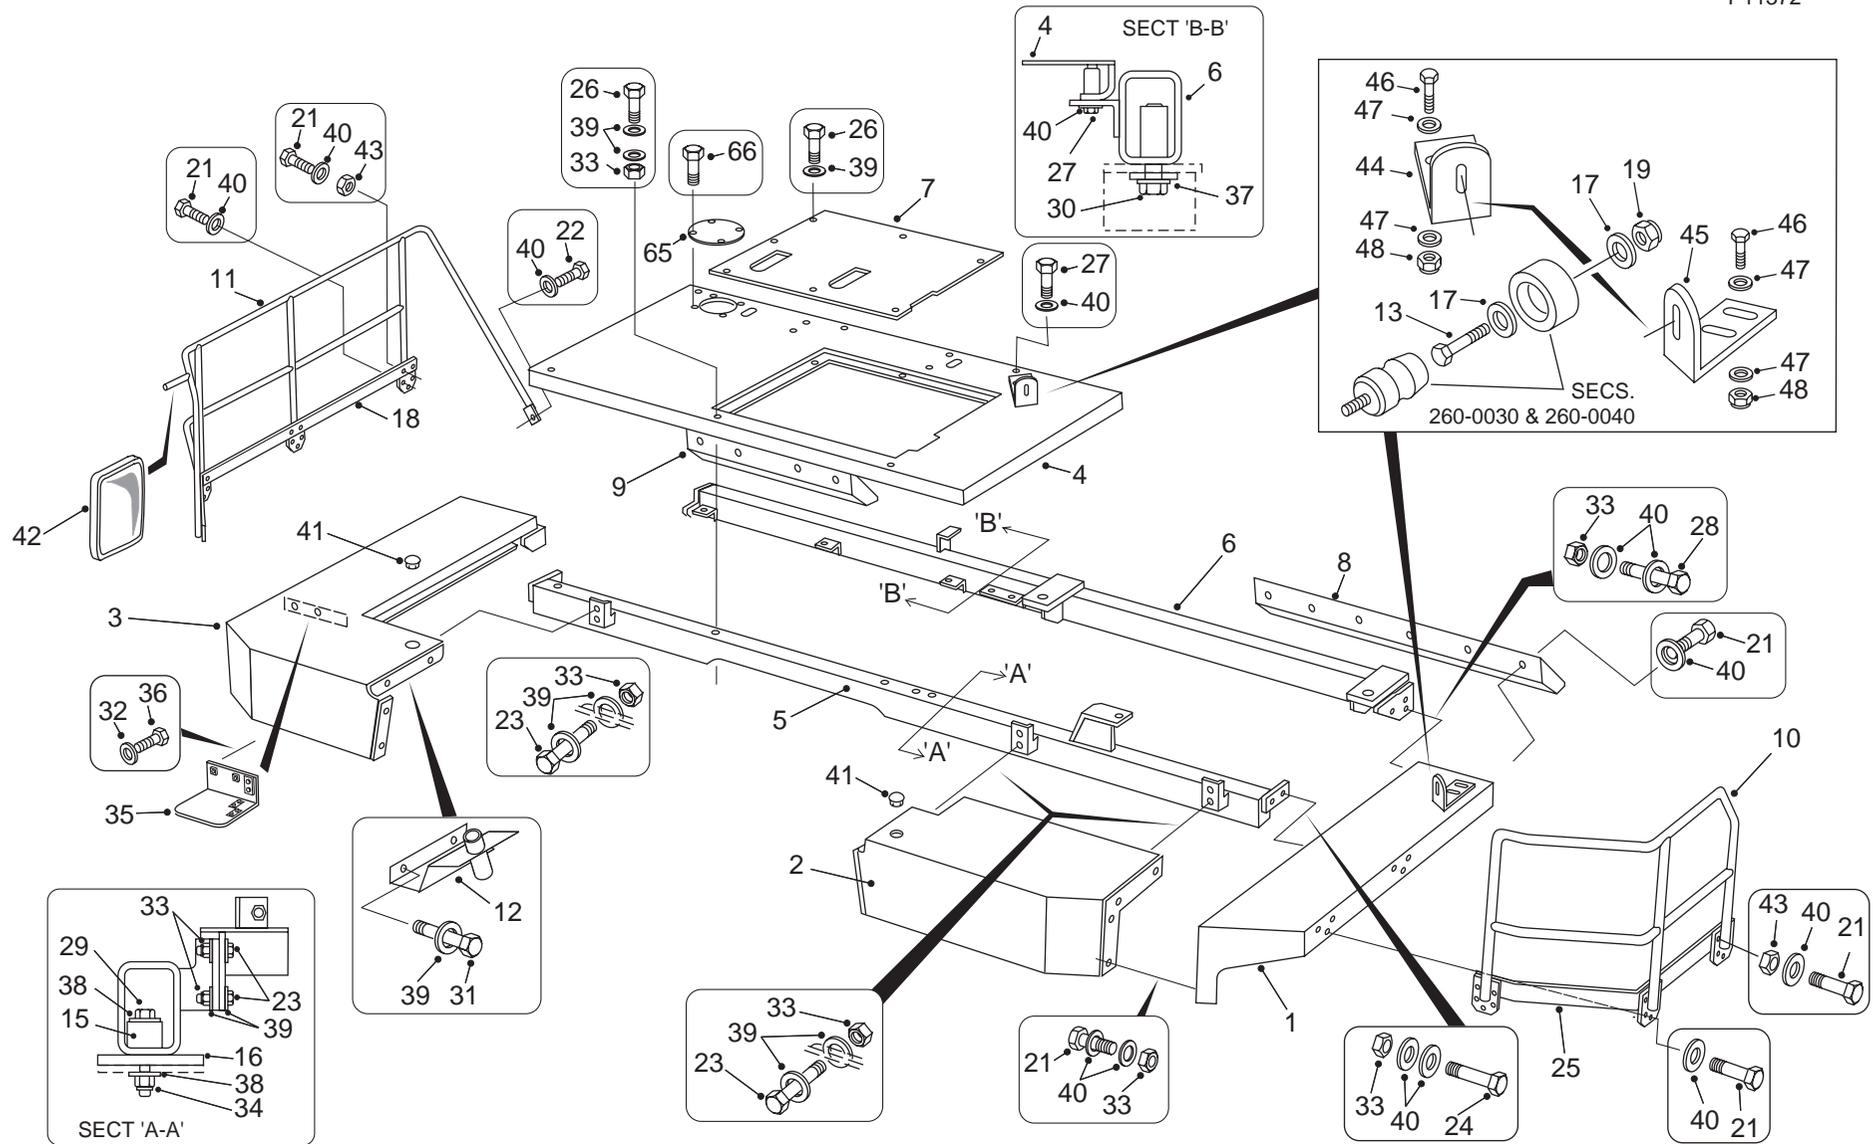

100-0070-7831 FENDERS AND MOUNTING
FROM SERIAL NO. T7831194 TO T7831221

DRAWING NO. P11372B

P11372

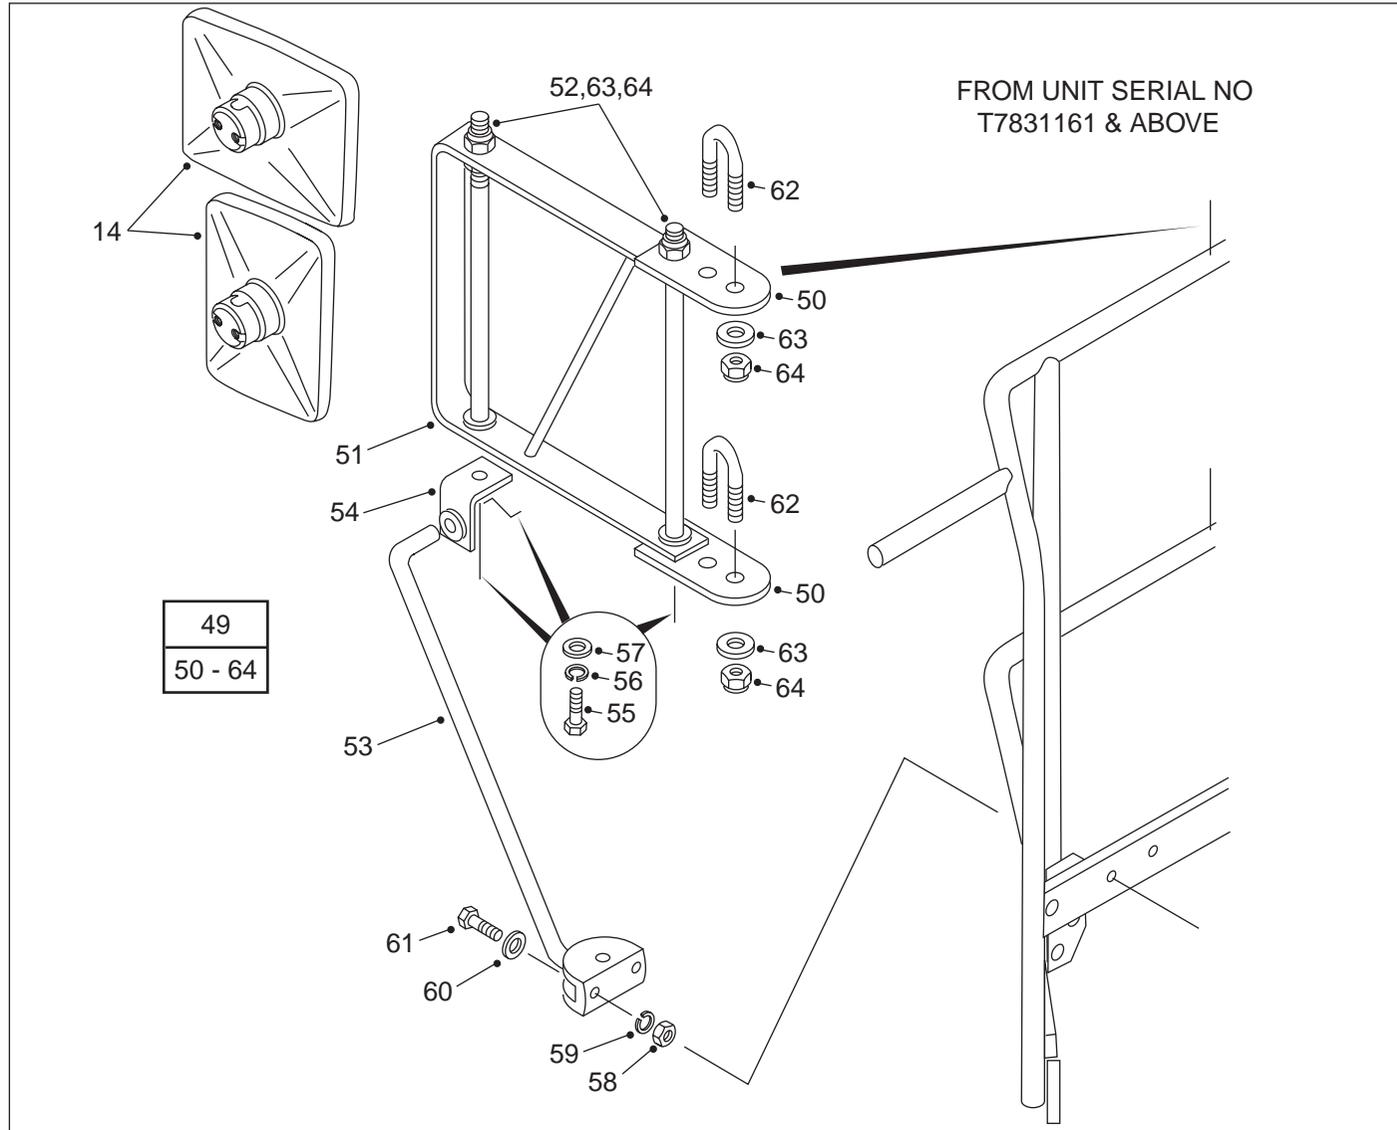

THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0070-7831 FENDERS AND MOUNTING
FROM SERIAL NO. T7831222

DRAWING NO. P11456A

P11456

