


Product: 2002-2010 TEREX TR100 Mining Truck [Click Here For Manual](#)  
Full Download: <http://www.terex.com/repairmanual.com/download/2002-2010-terex-tr100-mining-truck-workshop-parts-manual-2/>  
[Click Here For STANDARD TABLE OF CONTENTS](#) [Click Here For OPTIONAL TABLE OF CONTENTS](#)

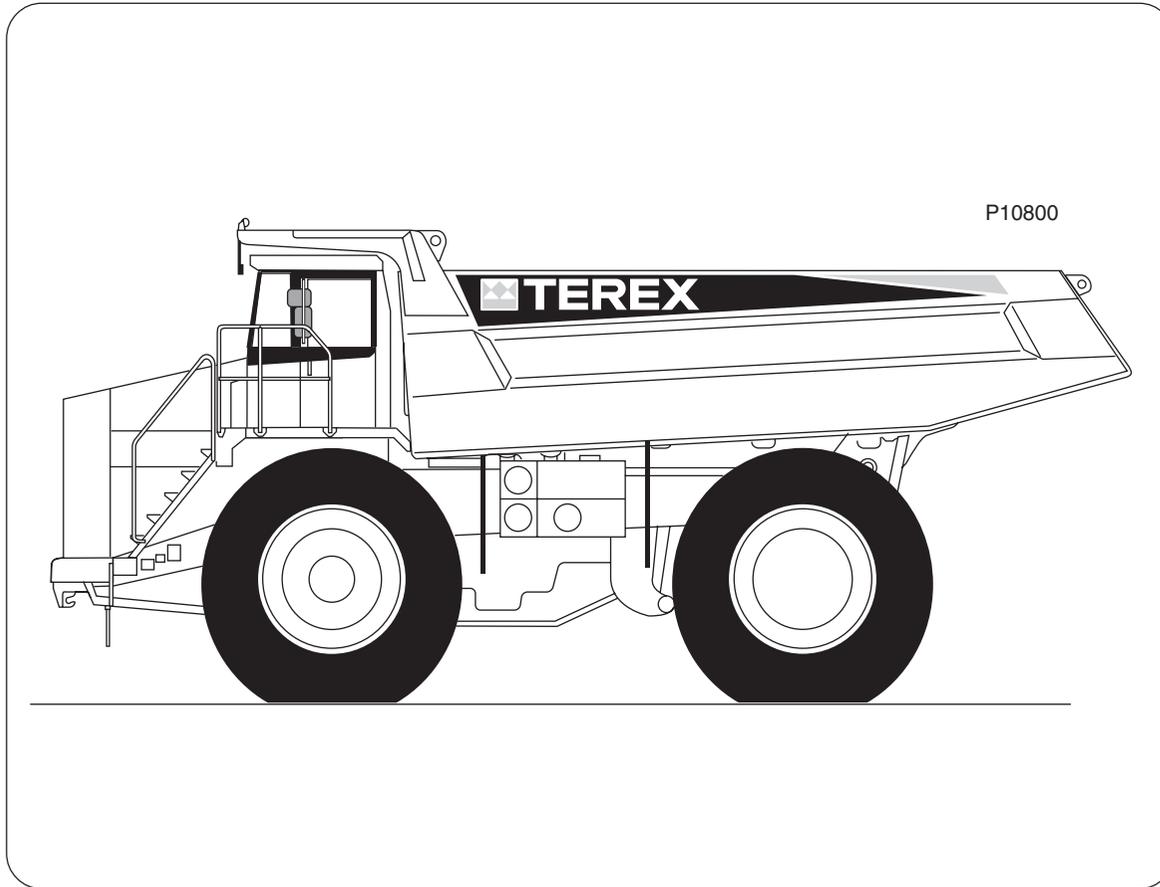

# **TEREX**

# Parts Book

[CLICK HERE TO RETURN TO  
MAIN LIBRARY INDEX](#)

**Part Number  
15275432**

## **TR100 Mining Truck** (DD/MTU 16V-2000 Powered)

**Serial Nos. T8081011 through T8081063**

Sample of manual. Download All 432 pages at:

<https://www.terex.com/repairmanual.com/download/2002-2010-terex-tr100-mining-truck-workshop-parts-manual-2/>

**PUBLISHED BY:  
CUSTOMER SUPPORT DEPARTMENT**

**TEREX EQUIPMENT LIMITED  
MOTHERWELL, SCOTLAND**

January 2002

*Revised: 7th May 2010*

Product: 2002-2010 TEREX TR100 Mining Truck Workshop Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/2002-2010-terex-tr100-mining-truck-workshop-parts-manual-2/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 432 pages at:  
<https://www.arepairmanual.com/downloads/2002-2010-terex-tr100-mining-truck-workshop-parts-manual-2/>



## **WARRANTY ON PARTS AND ATTACHMENTS**

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

\* \* \* \* \*

### **SOLE WARRANTY**

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

## INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

**SECTION 100 - CHASSIS**

**SECTION 140 - FRONT AXLE GROUP**

**SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings.

For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.

**EXAMPLE - 220-0120.**

**SERIAL NUMBERS** - Each Parts Book covers a particular range of unit Serial Numbers.

**It is important that unit Serial Numbers are quoted on all orders for Parts.**

**PARTS LISTS** - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

**ILLUSTRATIONS** - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

---

**INDENTATIONS** - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.  
2 9058512 . Shaft  
3 9024169 . Ring  
4 9058132 . Control Assy.  
5 9058135 . . Spring  
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

**NOTES** - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

**ABBREVIATIONS** - The abbreviations in this book have the following meanings -

Amps .....	Amperes	Hsg .....	Housing	N.I .....	Not Illustrated
As R .....	As Required	I.D .....	Inside Diameter	N.L.A .....	No Longer Available
Assy .....	Assembly	L.H .....	Left Hand	N.S.S .....	Not Sold Separately
Brkt .....	Bracket	L.W .....	Lockwasher	O.D .....	Outside Diameter
Cad-Pltd .....	Cadium Plated	Lg .....	Long	Pr .....	Pair
Comm .....	Commencement of production	Lkg .....	Linkage	P.T.O .....	Power-Take-Off
E.S.N .....	Elastic Stop Nut	Mtg .....	Mounting	R.H .....	Right Hand
Ftgs .....	Fittings	N.C .....	Note Code	Std .....	Standard



# Truck



## STANDARD SECTIONS

	<b>CHASSIS</b>	<b>100</b>		<b>FUEL SYSTEM</b>	<b>200</b>
	<b>ENGINE</b>	<b>110</b>		<b>COOLING SYSTEM</b>	<b>210</b>
	<b>TRANSMISSION</b>	<b>120</b>		<b>STEERING SYSTEM</b>	<b>220</b>
	<b>DRIVELINE</b>	<b>130</b>		<b>BODY SYSTEM</b>	<b>230</b>
	<b>FRONT AXLE</b>	<b>140</b>		<b>BRAKING SYSTEM</b>	<b>250</b>
	<b>REAR AXLE</b>	<b>160</b>		<b>CAB</b>	<b>260</b>
	<b>BRAKE PARTS</b>	<b>165</b>		<b>BODY</b>	<b>270</b>
	<b>SUSPENSION SYSTEM</b>	<b>180</b>		<b>DECALS</b>	<b>290</b>
	<b>ELECTRICAL SYSTEM</b>	<b>190</b>		<b>MISCELLANEOUS</b>	<b>300</b>

## TABLE OF CONTENTS FOR MODEL TR100 (DD)

FROM SERIAL NO T8081011

REVISED 05/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 100</b>	<b>CHASSIS</b>		
100-0010-8081	CHASSIS		R1 07/03
100-0040-8081	HOOD AND MOUNTING		
100-0070-8081	FENDERS AND MOUNTING	T8081011 TO T8081024	R4 03/04
100-0070-8081	FENDERS AND MOUNTING	T8081025	R1 04/05
100-0090-8081	LADDERS AND HANDRAILS	T8081011 TO T8081030	
100-0090-8081	LADDERS AND HANDRAILS	T8081031	09/05
100-0100-8081	RADIATOR GUARD AND MOUNTING	T8081011 TO T8081027	
100-0100-8081	RADIATOR GUARD AND MOUNTING	T8081028	09/05
100-0140-8081	MUDGUARDS	T8081011 TO T8081043	R1 09/02
100-0140-8081	MUDGUARDS	T8081044	02/06
<b>SECTION 110</b>	<b>ENGINE</b>		
110-0030-8081	ENGINE AND MOUNTING		R4 11/06
110-0050-8081	AIR CLEANER		
110-0060-8081	AIR CLEANER PIPES AND HOSES		R1 11/06
110-0130-8081	POWER TAKEOFF-ENGINE	T8081011 TO T8081024	
110-0130-8081	POWER TAKEOFF-ENGINE	T8081025	R1 07/04
<b>SECTION 120</b>	<b>TRANSMISSION</b>		
120-0010-8081	TRANSMISSION MOUNTING		R2 04/04
120-0020-8081	TRANSMISSION BREAKDOWN	T8081011 TO T8081024	
120-0020-8081	TRANSMISSION BREAKDOWN	T8081025	R1 04/05
120-0050-8081	CONTROL VALVE	T8081011 TO T8081024	
120-0050-8081	CONTROL VALVE	T8081025	04/04
120-0070-8081	SHIFT CONTROL	T8081011 TO T8081024	R2 12/06
<b>120-0070-8081</b>	<b>SHIFT CONTROL</b>	<b>T8081025</b>	<b>05/10</b>
120-0090-8081	POWER TAKEOFF-TRANS		
120-0100-8081	FILTER		R1 04/04
120-0110-8081	OIL LINES-TRANSMISSION	T8081011 TO T8081024	R1 09/02
120-0110-8081	OIL LINES-TRANSMISSION	T8081025	04/04
120-0190-8081	RETARDER CONTROL LINES-HYD		R3 11/06
120-0200-8081	FRONT COVER & CONVERTER GROUP	T8081011 TO T8081024	
120-0200-8081	FRONT COVER & CONVERTER GROUP	T8081025	04/04
120-0210-8081	CONVERTER HOUSING GROUP	T8081011 TO T8081024	R1 09/02
120-0210-8081	CONVERTER HOUSING GROUP	T8081025	04/04
120-0220-8081	OIL PUMP	T8081011 TO T8081024	
120-0220-8081	OIL PUMP	T8081025	04/04
120-0230-8081	FILTER ADAPT/REGULATOR VALVES	T8081011 TO T8081024	
120-0230-8081	FILTER ADAPT/REGULATOR VALVES	T8081025	04/04
120-0240-8081	LOCKUP VALVE	T8081011 TO T8081024	
<b>120-0240-8081</b>	<b>LOCKUP VALVE</b>	<b>T8081025</b>	<b>R1 05/10</b>

**TABLE OF CONTENTS FOR MODEL TR100 (DD)**

**FROM SERIAL NO T8081011**

**REVISED 05/10**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 120</u></b>			
<b><u>TRANSMISSION-CONTINUED</u></b>			
120-0250-8081	ATEC LOCKUP DROP OUT	T8081011 TO T8081024	R1 04/04
120-0260-8981	RETARDER GROUP	T8081011 TO T8081024	
120-0260-8081	RETARDER GROUP	T8081025	04/04
120-0270-8081	RETARDER CONTROL VALVE	T8081011 TO T8081024	
120-0270-8081	RETARDER CONTROL VALVE	T8081025	04/04
120-0280-8081	SPLITTER GEARING AND CLUTCHES	T8081011 TO T8081024	
120-0280-8081	SPLITTER GEARING AND CLUTCHES	T8081025	04/04
120-0290-8081	MAIN HOUSING GROUP	T8081011 TO T8081024	
120-0290-8081	MAIN HOUSING GROUP	T8081025	04/04
120-0300-8081	HIGH RANGE GEARING & CLUTCHES	T8081011 TO T8081024	R1 04/04
120-0300-8081	HIGH RANGE GEARING & CLUTCHES	T8081025	04/04
120-0310-8081	INTER RANGE GEARING & CLUTCHES	T8081011 TO T8081024	
120-0310-8081	INTER RANGE GEARING & CLUTCHES	T8081025	04/04
120-0320-8081	LOW RANGE GEARING & CLUTCHES	T8081011 TO T8081024	
120-0320-8081	LOW RANGE GEARING & CLUTCHES	T8081025	04/04
120-0330-8081	REV RANGE GEARING & CLUTCHES	T8081011 TO T8081024	
120-0330-8081	REV RANGE GEARING & CLUTCHES	T8081025	04/04
120-0340-8081	REAR COVER GROUP	T8081011 TO T8081024	
120-0340-8081	REAR COVER GROUP	T8081025	04/04
<b><u>SECTION 130</u></b>			
<b><u>DRIVELINE</u></b>			
130-0010-8081	FRONT DRIVELINE		
130-0020-8081	REAR DRIVELINE		
<b><u>SECTION 140</u></b>			
<b><u>FRONT AXLE</u></b>			
140-0040-8081	WHEEL, RIM AND TYRE-FRONT		
<b><u>SECTION 160</u></b>			
<b><u>REAR AXLE</u></b>			
160-0020-8081	DIFFERENTIAL-REAR	T8081011 TO T8081056	R2 07/04
160-0020-8081	DIFFERENTIAL-REAR	T8081057	11/06
160-0030-8081	AXLE GROUP-REAR		R1 11/06
160-0040-8081	PLANETARY GEARING-REAR		
160-0050-8081	WHEEL, RIM AND TYRE-REAR		
<b><u>SECTION 165</u></b>			
<b><u>BRAKE PARTS</u></b>			
165-0020-8081	BRAKE PARTS-FRONT WHEEL-RIGIDS		
165-0030-8081	BRAKE PARTS-REAR WHEEL-RIGIDS		
<b><u>SECTION 180</u></b>			
<b><u>SUSPENSION SYSTEM</u></b>			
180-0030-8081	FRONT RIDE CYLINDER	T8081011 TO T8081022	R2 04/04
180-0030-8081	FRONT RIDE CYLINDER	T8081023	R1 04/04
180-0050-8081	REAR RIDE CYLINDER		R1 09/02

## TABLE OF CONTENTS FOR MODEL TR100 (DD)

FROM SERIAL NO T8081011

REVISED 05/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 190</b>	<b>ELECTRICAL SYSTEM</b>		
190-0010-8081	TERMINALS		
190-0011-8081	CONNECTORS		
190-0030-8081	CABLES/HARNESSES-CAB		R1 07/04
190-0040-8081	CABLES/HARNESSES-CHASS/ENG		R2 10/04
190-0045-8081	CABLES/HARNESSES-ENGINE DDEC		09/02
190-0070-8081	BATTERY AND CABLES	T8081011 TO T8081029	R1 09/02
190-0070-8081	BATTERY AND CABLES	T8081030	R1 02/06
190-0080-8081	BATTERY MOUNTING		
190-0100-8081	ELECTRICAL LIGHTING SYSTEM	T8081011 TO T8081030	R1 04/03
190-0100-8081	ELECTRICAL LIGHTING SYSTEM	T8081031	02/06
190-0110-8081	ALTERNATOR		
190-0120-8081	STARTER MOTOR		
190-0270-8081	SWITCHES AND SENSORS		R1 10/04
190-0300-8081	RADIO CASSETTE AND SPEAKERS		
190-0310-8081	ELECTRICAL HORN		R1 08/03
<b>SECTION 200</b>	<b>FUEL SYSTEM</b>		
200-0010-8081	FUEL TANK AND MOUNTING	T8081011 TO T8081024	
200-0010-8081	FUEL TANK AND MOUNTING	T8081025	04/05
200-0040-8081	FUEL LINES	T8081011 TO T8081024	R1 07/03
200-0040-8081	FUEL LINES	T8081025	08/03
200-0050-8081	ACCELERATOR LINKAGE		
200-0080-8081	COLD START KIT		
<b>SECTION 210</b>	<b>COOLING SYSTEM</b>		
210-0010-8081	RADIATOR ASSEMBLY		R2 09/05
210-0020-8081	RADIATOR MOUNTING		
210-0030-8081	RADIATOR PIPING		R2 09/05
210-0040-8081	RADIATOR HEADER TANK AND HOSES		R5 11/06
210-0050-8081	OIL COOLER-DISC BRAKES		
210-0051-8081	OIL COOLER PIPING-DISC BRAKES		R2 09/05
210-0060-8081	OIL COOLER AND PIPING-TRANS		R2 09/05
210-0065-8081	OIL COOLER-TRANSMISSION		
<b>SECTION 220</b>	<b>STEERING SYSTEM</b>		
220-0010-8081	STEERING LINES		R6 02/06
220-0040-8081	TANK AND MOUNTING-STEERING	T8081011 TO T8081020	R1 09/02
220-0040-8081	TANK AND MOUNTING-STEERING	T8081021	R2 04/04
220-0050-8081	PUMP-STEERING	T8081011 TO T8081024	
220-0050-8081	PUMP-STEERING	T8081025 TO T8081030	10/04

**TABLE OF CONTENTS FOR MODEL TR100 (DD)**

**FROM SERIAL NO T8081011**

**REVISED 05/10**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 220</u></b>	<b><u>STEERING SYSTEM-CONTINUED</u></b>		
220-0050-8081	PUMP-STEERING	T8081031	09/05
220-0060-8081	PUMP AND ACCUMULATOR MOUNTING	T8081011 TO T8081024	
220-0060-8081	PUMP AND ACCUMULATOR MOUNTING	T8081025	11/03
220-0080-8081	ACCUMULATOR-STEERING	T8081011 TO T8081020	R1 01/03
220-0080-8081	ACCUMULATOR-STEERING	T8081011 TO T8081024 ALSO T8081051 & ABOVE	R2 11/06
220-0080-8081	ACCUMULATOR-STEERING	T8081025 TO T8081050	
220-0090-8081	STEERING VALVE		R1 08/07
220-0120-8081	STEERING CYLINDER	T8081011 TO T8081024 ALSO T8081051 & ABOVE	R2 11/06
220-0120-8081	STEERING CYLINDER	T8081025 TO T8081041	11/03
220-0130-8081	RELIEF VALVE-STEERING	T8081011 TO T8081056	
220-0130-8081	RELIEF VALVE-STEERING	T8081057	11/06
220-0150-8081	FILTER-STEERING		
220-0190-8081	STEERING LINKAGE		R1 07/04
220-0230-8081	STEERING COLUMN MOUNTING	T8081011 TO T8081024	
220-0230-8081	STEERING COLUMN MOUNTING	T8081025	07/04
<b><u>SECTION 230</u></b>	<b><u>BODY HOIST SYSTEM</u></b>		
230-0020-8081	LINES AND FITTINGS-BODY HOIST		R3 11/06
230-0021-8081	SERVO CONTROL LINES-BODY		R1 11/06
230-0040-8081	TANK AND MOUNTING-BODY HOIST		R1 09/02
230-0041-8081	BREATHER LINE-HYDRAULIC TANKS		
230-0050-8081	PUMP-BODY HOIST		
230-0060-8081	CONTROL VALVE-BODY HOIST		R2 04/05
230-0070-8081	CONTROL VALVE MOUNTING		R1 09/02
230-0081-8081	JOYSTICK-BODY CONTROL		
230-0110-8081	MANIFOLD RELIEF VALVE		
230-0120-8081	RELIEF VALVE		
230-0121-8081	PILOT SUPPLY VALVE		
230-0130-8081	HOIST CYLINDERS		
<b><u>SECTION 250</u></b>	<b><u>BRAKING SYSTEM</u></b>		
250-0020-8081	BRAKE LINES-HYDRAULIC		R5 09/05
250-0050-8081	BRAKE MANIFOLD/PAS VALVE		
250-0055-8081	PUMP-TANDEM		
250-0060-8081	BRAKE ACCUMULATOR	T8081011 TO T8081038	
250-0060-8081	BRAKE ACCUMULATOR	T8081039	02/06
250-0070-8081	TREADLE VALVE		
250-0090-8081	DIRECTIONAL CONTROL VALVE	T8081011 TO T8081024	
250-0090-8081	DIRECTIONAL CONTROL VALVE	T8081025	07/04
250-0100-8081	MONOBLOCK BRAKE VALVE		
250-0110-8081	PRESSURE REDUCING VALVE		

## TABLE OF CONTENTS FOR MODEL TR100 (DD)

FROM SERIAL NO T8081011

REVISED 05/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 250</u></b>	<b><u>BRAKING SYSTEM-CONTINUED</u></b>		
250-0130-8081	RETARDER CONTROL VALVE-BRAKES		
250-0151-8081	PARKING BRAKE VALVE		
250-0152-8081	BRAKE DUMP VALVE	T8081011 TO T8081053	
250-0152-8081	BRAKE DUMP VALVE	T8081054	11/06
250-0240-8081	FILTER ASSEMBLY-DISC BRAKE	T8081011 TO T8081056	
250-0240-8081	FILTER ASSEMBLY-DISC BRAKE	T8081057	11/06
<b><u>SECTION 260</u></b>	<b><u>CAB</u></b>		
260-0010-8081	CAB ASSEMBLY		
260-0011-8081	CAB CENTRE CONSOLE		R1 09/02
260-0015-8081	CAB MOUNTING	T8081011 TO T8081030	R1 07/04
260-0015-8081	CAB MOUNTING	T8081031	02/06
260-0030-8081	CAB DOOR-LEFT HAND		
260-0040-8081	CAB DOOR-RIGHT HAND		
260-0080-8081	SWITCHES AND INSTRUMENTS		R1 07/04
260-0090-8081	SEAT-DRIVER		R1 07/03
260-0110-8081	SEAT-INSTRUCTOR		
260-0130-8081	AIR CONDITIONER/HEATER	T8081011 TO T8081024	
260-0130-8081	AIR CONDITIONER/HEATER	T8081025	R1 10/04
260-0140-8081	HEATER LINES AND WIRING		R1 11/06
260-0145-8081	AIR CONDITIONER LINES	T8081011 TO T8081049	R1 09/02
260-0145-8081	AIR CONDITIONER LINES	T8081050	11/06
260-0190-8081	WINDSCREEN WASHER		
<b><u>SECTION 270</u></b>	<b><u>BODY</u></b>		
270-0010-8081	BODY ASSEMBLY		R1 09/02
270-0020-8081	EXHAUST HEATED BODY	T8081011 TO T8081020	
270-0020-8081	EXHAUST HEATED BODY	T8081021	R1 10/04
270-0080-8081	ROCK EJECTORS		
<b><u>SECTION 290</u></b>	<b><u>DECALS</u></b>		
290-0010-8081	DECALS-ENGLISH	T8081011 TO T8081024	R3 07/03
290-0010-8081	DECALS-ENGLISH	T8081025	R2 02/06
290-0100-8081	WALKWAY SURFACES (ANTI-SLIP)	T8081028	09/05
<b><u>SECTION 300</u></b>	<b><u>MISCELLANEOUS</u></b>		
300-0020-8081	LUBRICATION SYSTEM		
300-0040-8081	MULTI-TUBE CLAMPS AND HARDW		


THIS PAGE IS INTENTIONALLY LEFT BLANK

R1 07/03 (ECN 105909)

100-0010-8081 CHASSIS  
FROM SERIAL NO. T8081011

DRAWING NO. P10265

P10265

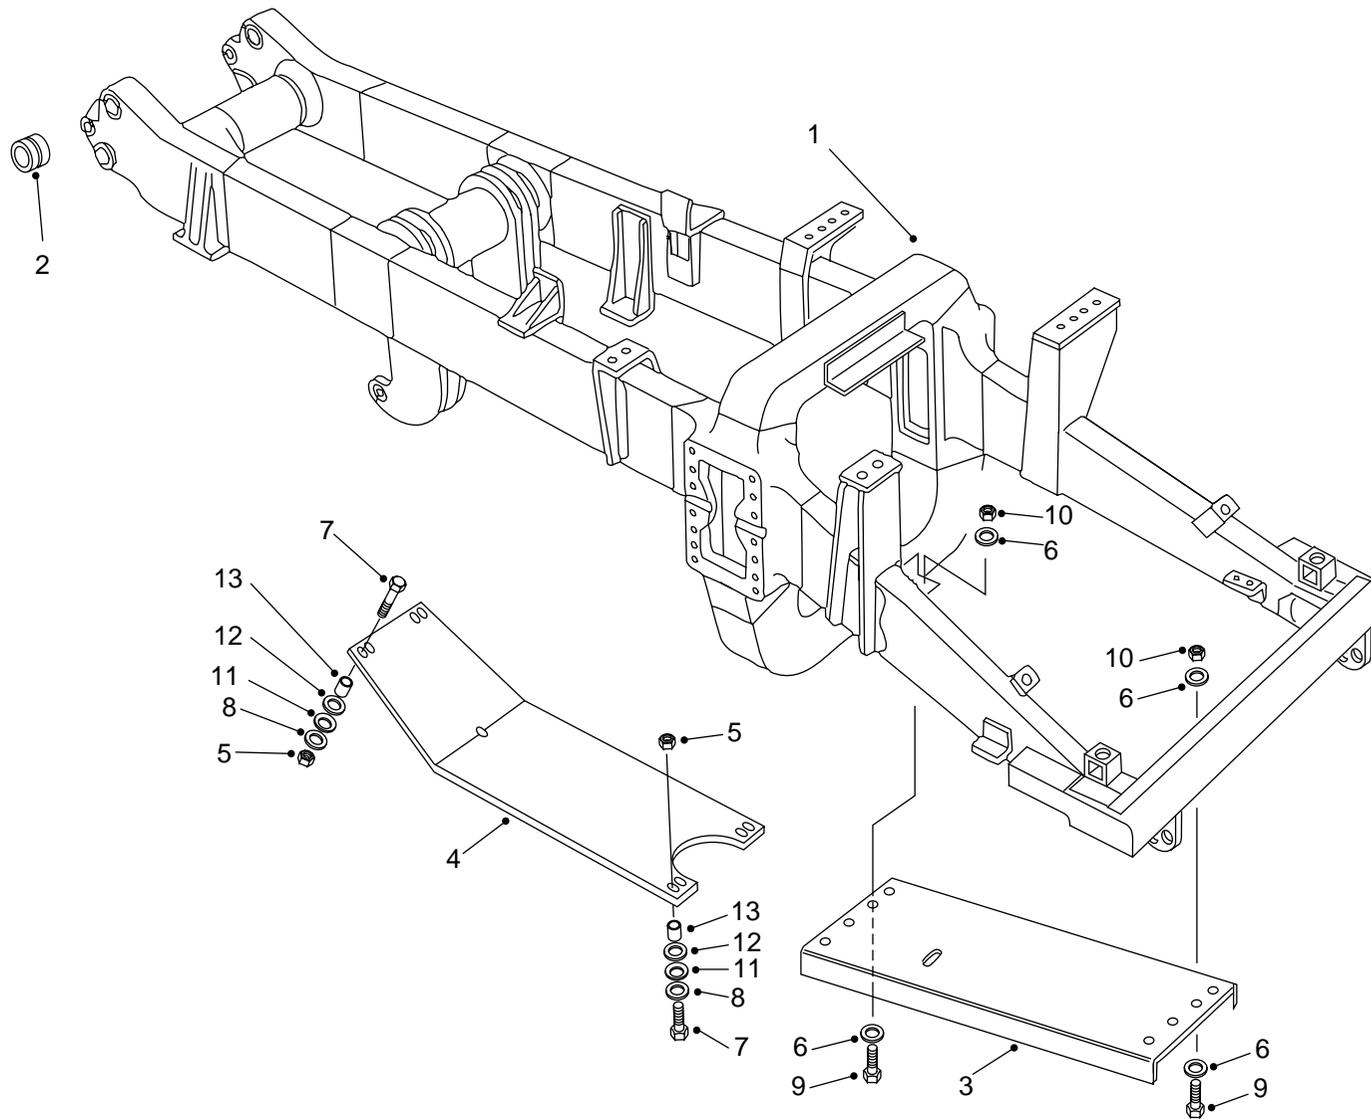

**100-0010-8081 CHASSIS**  
FROM SERIAL NO. T8081011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15308618	FRAME ASSY COMPLETE		
002	002		09011828	.BUSHING		
003	001		15247058	GUARD-ENGINE		
004	001		15252399	GUARD-TRANS		
005	008		09355771	NUT		
006	016		09176228	WASHER-HARDENED		
007	008		00223464	BOLT		
008	008		15020053	WASHER		
009	008		00223453	BOLT		
010	008		00274141	NUT		
011	008		15250985	SPRING-DISC		
012	008		15303749	WASHER-HARDENED		
013	008		15303750	SPACER		



**100-0040-8081 HOOD AND MOUNTING**  
FROM SERIAL NO. T8081011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15309808	HOOD ASSY		
002	004		00179883	BOLT		
003	045		09267949	WASHER-HARDENED		
004	001		15309837	BASE PLATE ASSY		
005	007		00179885	BOLT		
006	006		00120378	NUT		
007	001		15309840	BAFFLE PLATE ASSY		
008	020		00179881	BOLT		
009	001		15255707	BRACKET		
010	001		15311977	BRACKET-HOOD LH		
011	001		15254586	BRACKET-HOOD RH		
012	004		00179889	BOLT		
013	004		00274209	LOCKNUT		
014	002		00117958	GROMMET		
015	ASR		09368561	BEADING		

R4 04/04 (ECN 105422, ECN 105627, SER CORR)

**100-0070-8081 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8081011 TO T8081024

DRAWING NO. P10960A


P10960a

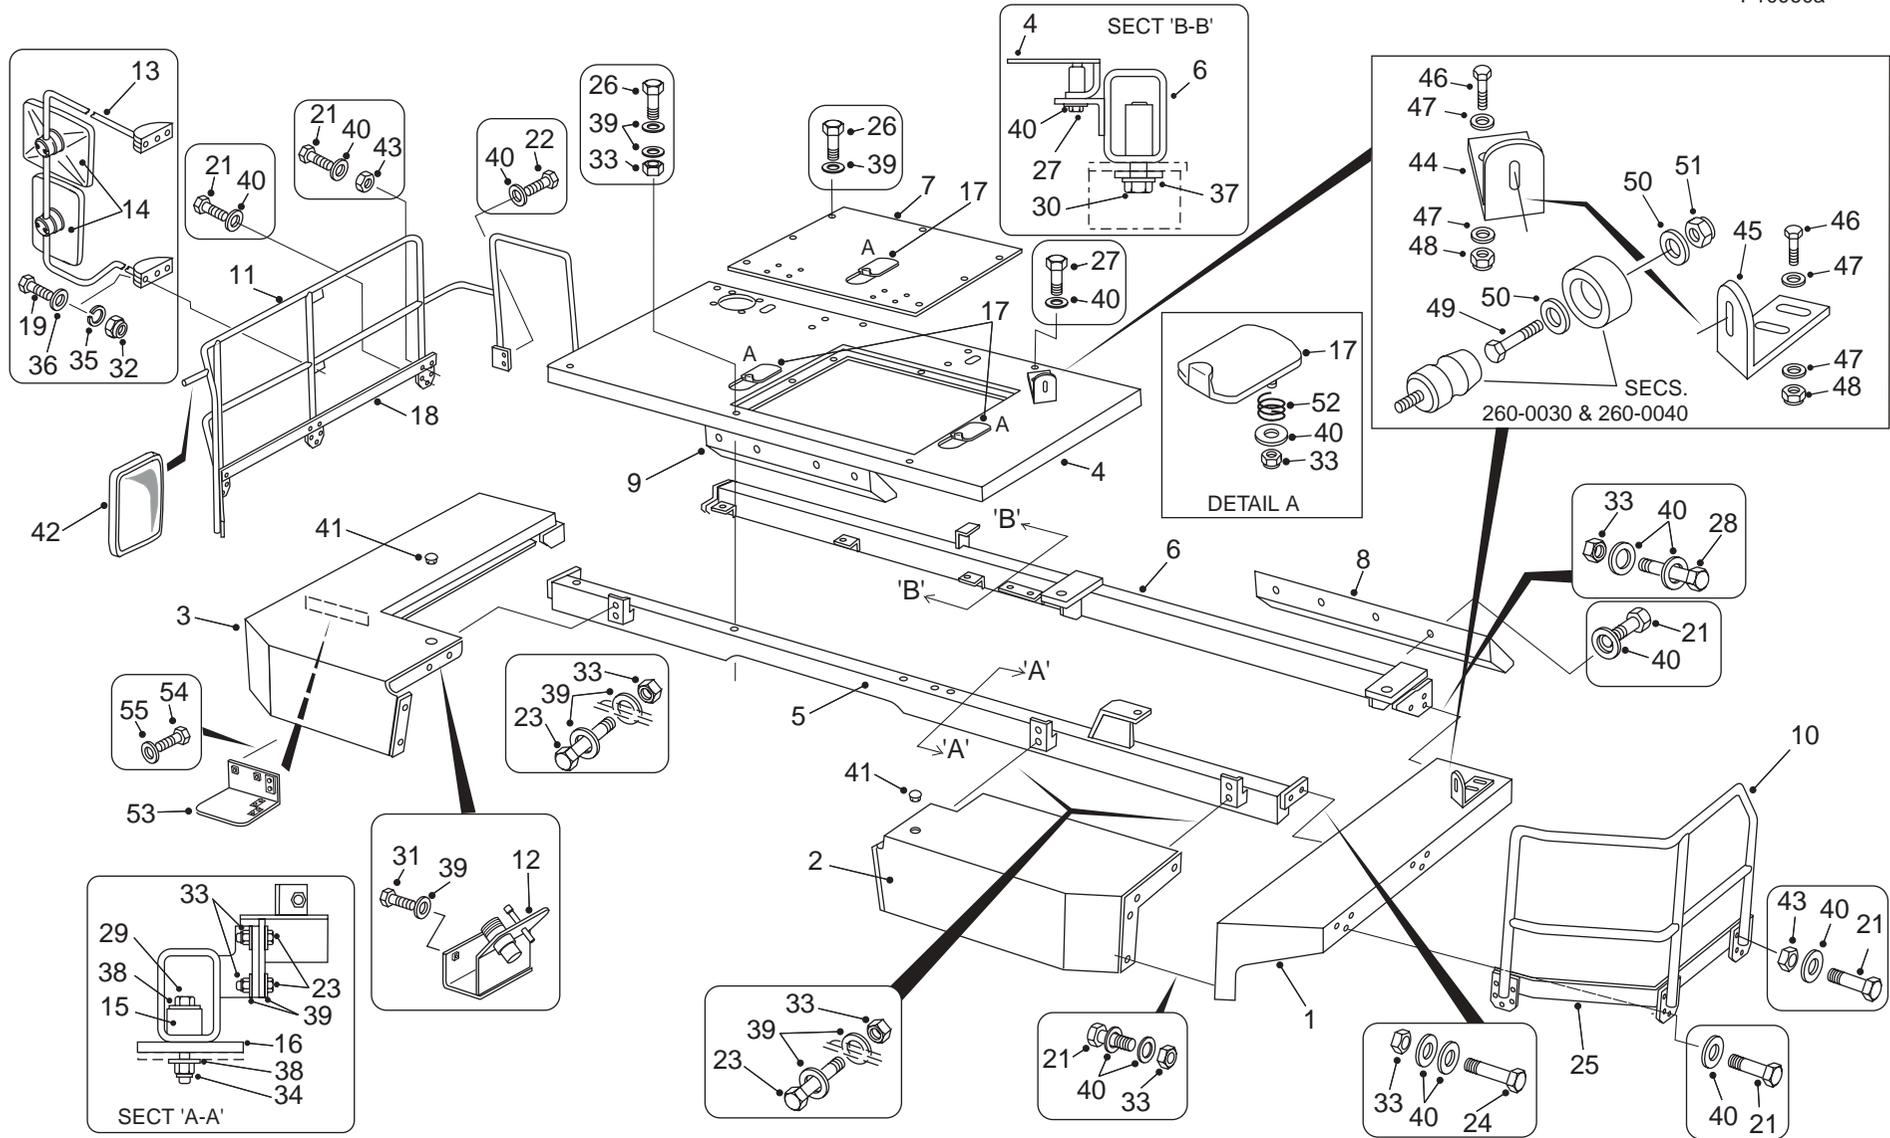

**100-0070-8081 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8081011 TO T8081024

DRAWING NO. P10960B

P10960b

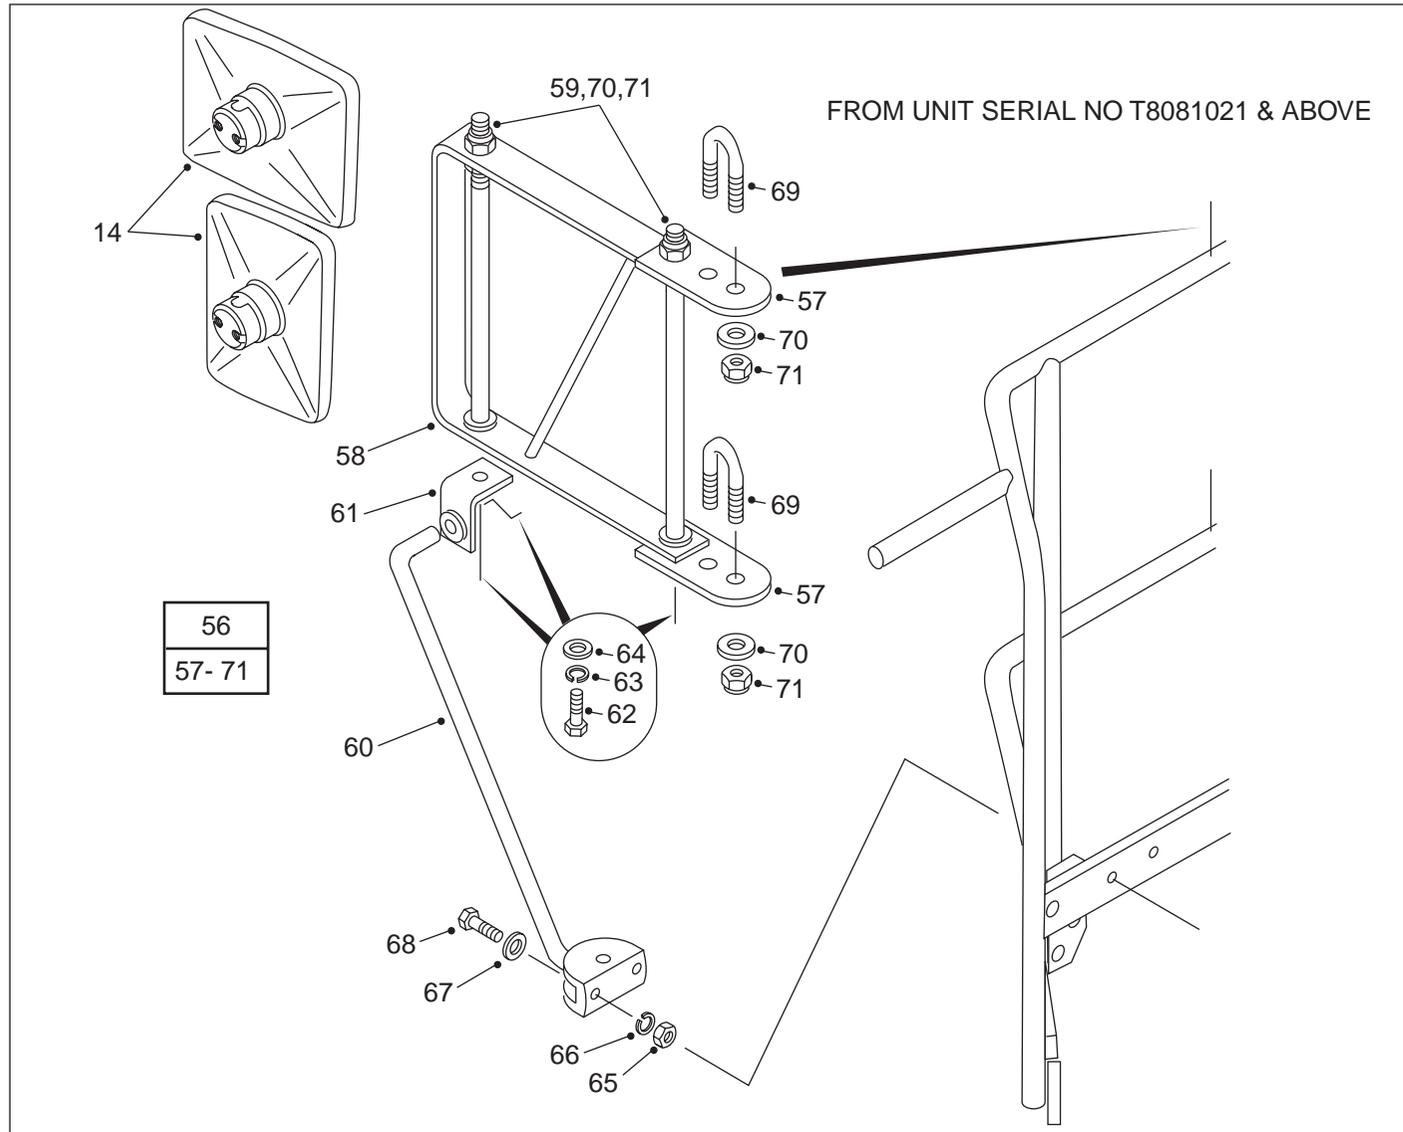




THIS PAGE IS INTENTIONALLY LEFT BLANK

R1 04/05 (ECN 106423, ECN 106977, ECN 107162)

**100-0070-8081 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8081025

DRAWING NO. P11461A


P11461

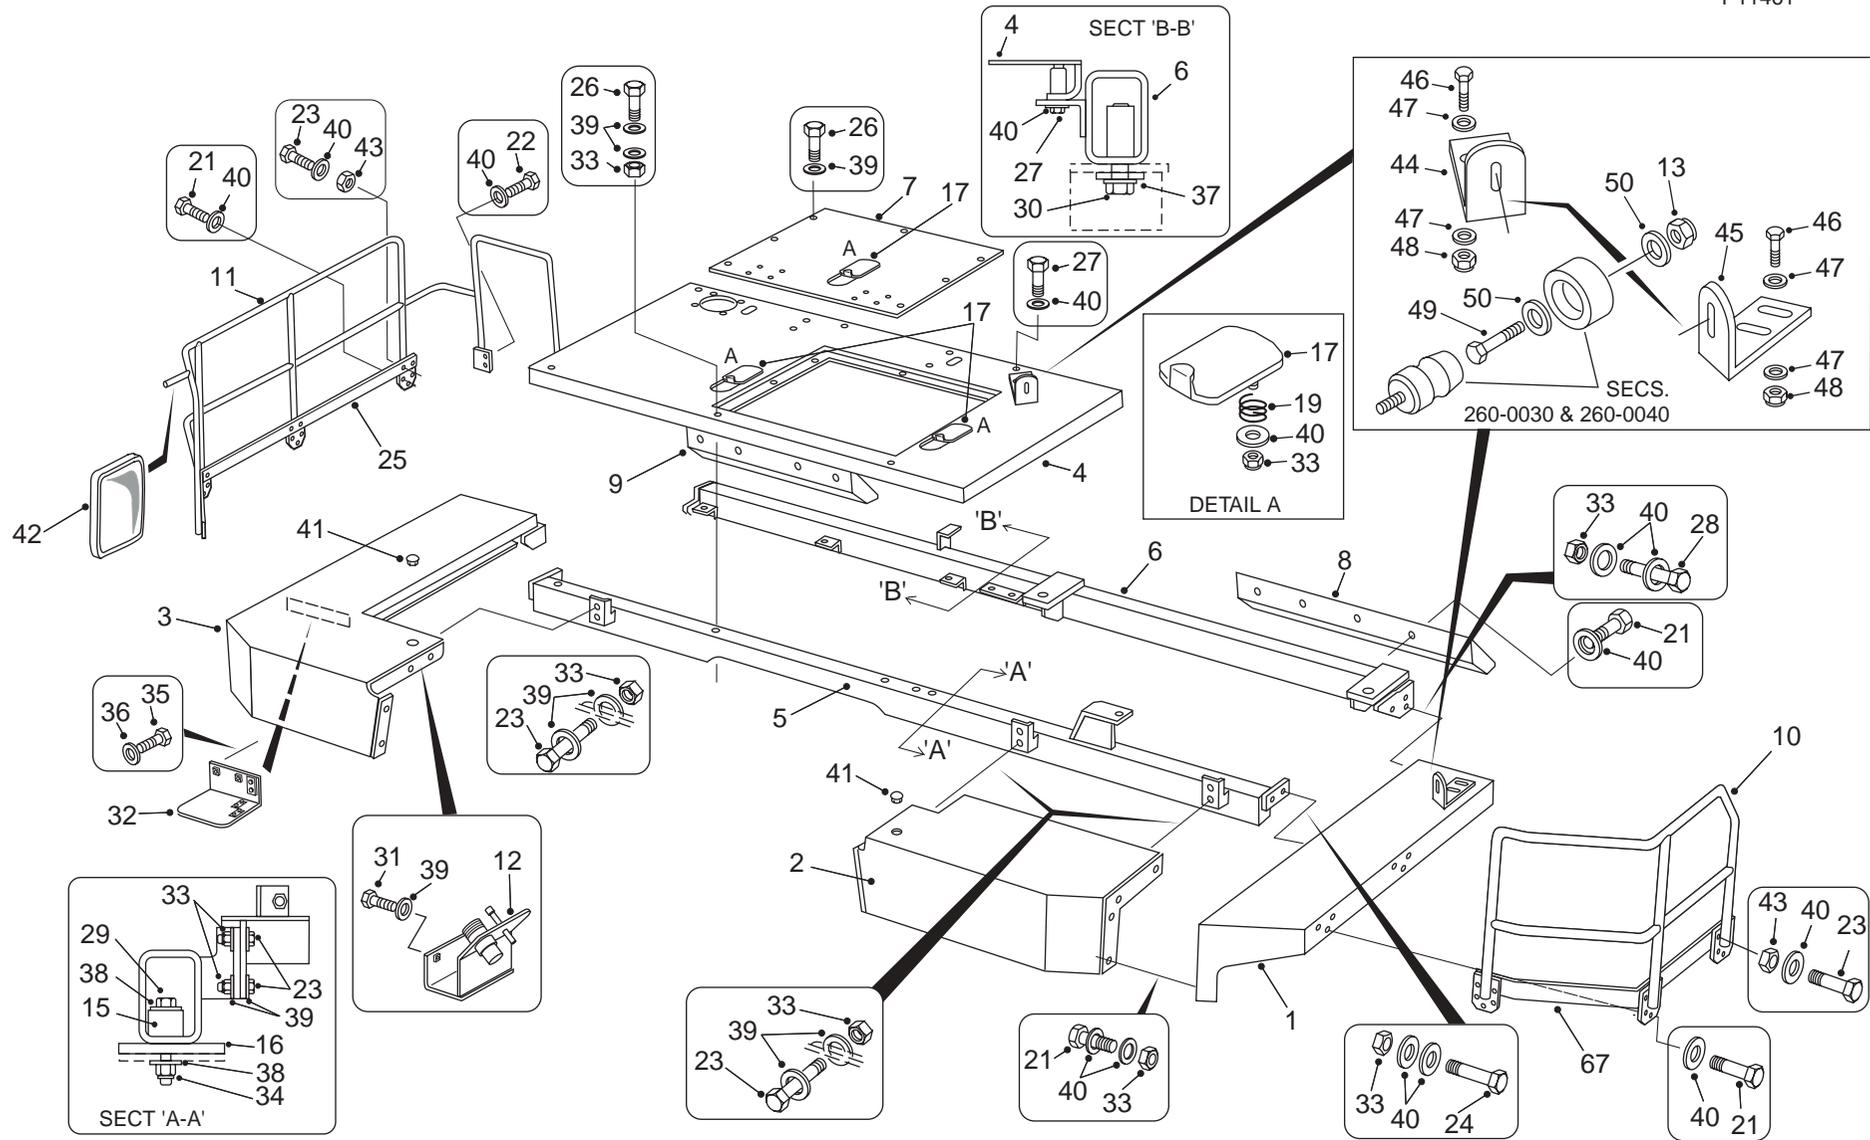

**100-0070-8081 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8081025

DRAWING NO. P11461B

P11461

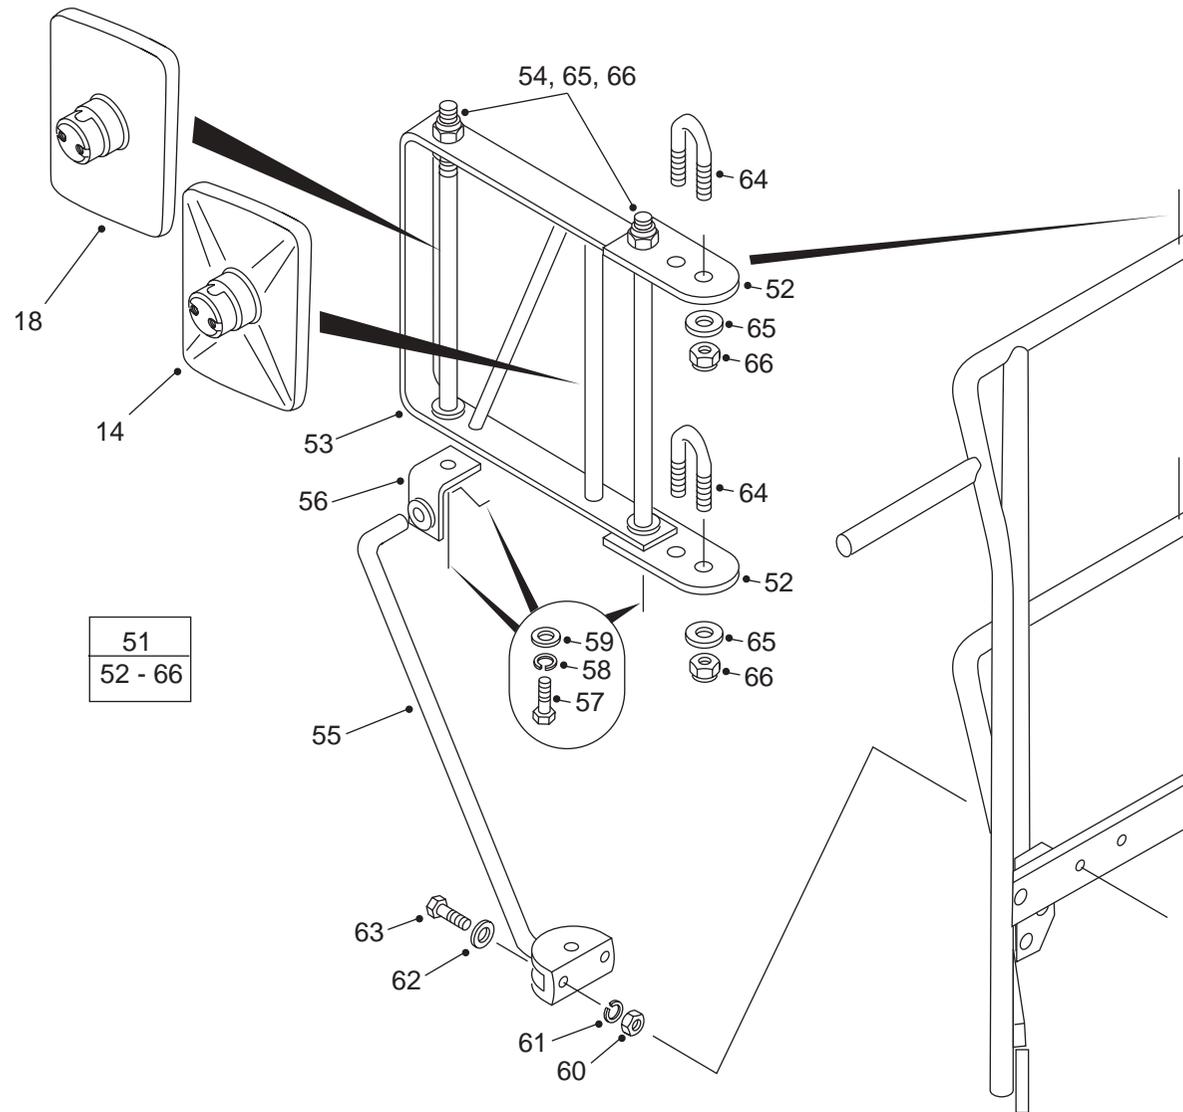




THIS PAGE IS INTENTIONALLY LEFT BLANK

**100-0090-8081 LADDERS AND HANDRAILS**  
FROM SERIAL NO. T8081011 TO T8081030

DRAWING NO. P10269

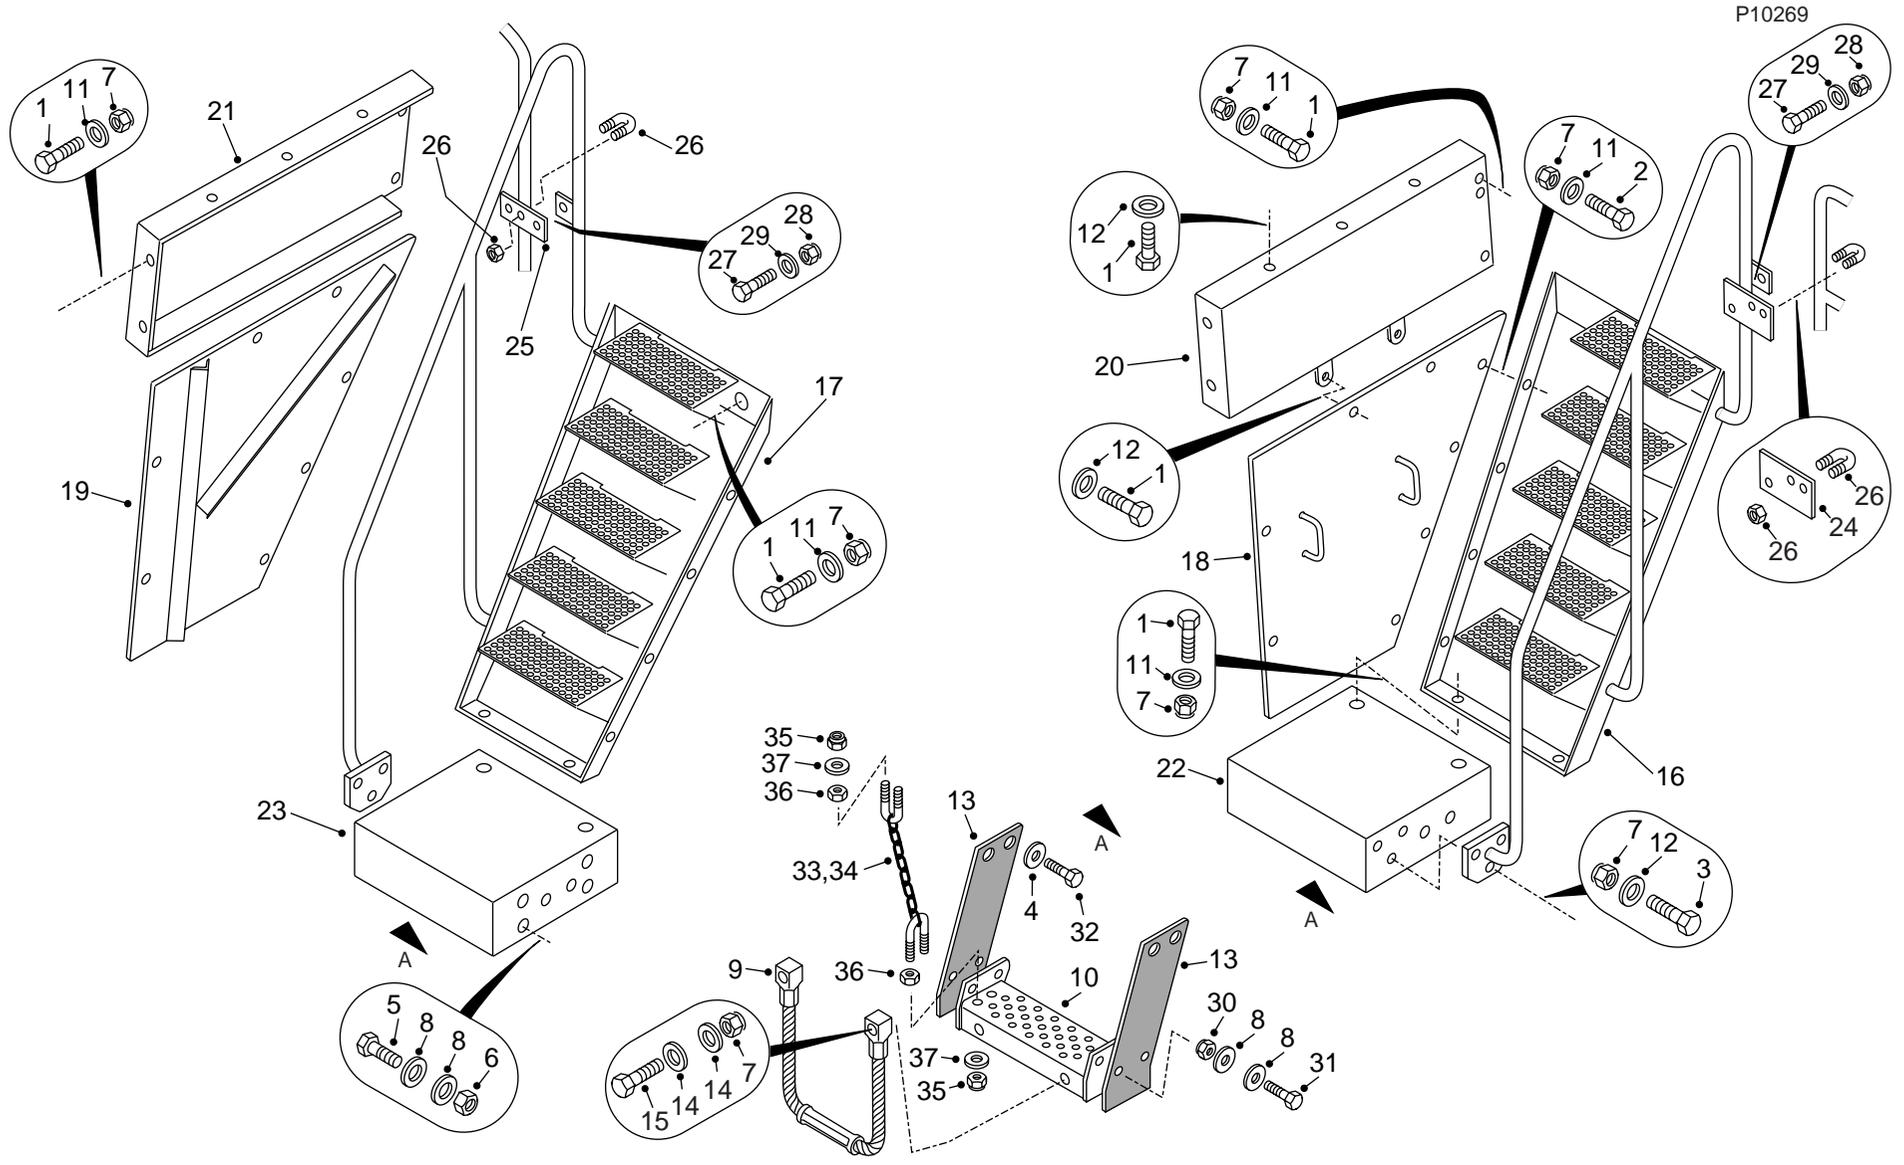

**100-0090-8081 LADDERS AND HANDRAILS**  
 FROM SERIAL NO. T8081011 TO T8081030


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	036		00179885	BOLT		
002	009		00179887	BOLT		
003	004		00179889	BOLT		
004	008		15306895	WASHER-SPECIAL		
005	008		00223451	BOLT		
006	008		00274141	NUT		
007	028		00274209	LOCKNUT		
008	032		09176228	WASHER-HARDENED		
009	002		15255698	STEP ASSY		
010	002		15304237	STEP		
011	036		09267949	WASHER-HARDENED		
012	042		09270000	WASHER-HARDENED		
013	004		15304238	RUBBER STRIP		
014	008		00106265	WASHER		
015	004		00179893	BOLT		
016	001		15254615	STEP ASSY-LH		
017	001		15254626	STEP ASSY-RH		
018	001		15254673	HOODSIDE-LH		
019	001		15254689	HOODSIDE-RH		
020	001		15254709	PANEL ASSY-LH		
021	001		15254710	PANEL ASSY-RH		
022	001		15254725	BUMPER EXTENSION-LH		
023	001		15254726	BUMPER EXTENSION-RH		
024	001		15303031	PLATE		
025	001		15303030	PLATE		
026	002		15302982	U-BOLT		
027	002		00179839	BOLT		
028	002		09417713	NUT		
029	002		09060202	WASHER-HARDENED		
030	008		09355771	NUT		
031	008		00271613	BOLT		
032	008		00271600	BOLT		
033	004		15306894	CHAIN ASSY		
034	008		15246583	BOLT-U		
035	016		06471001	LOCKNUT		
036	016		06431001	NUT		
037	016		00106263	WASHER		

09/05 (ECN 107029)

100-0090-8081 LADDERS AND HANDRAILS  
FROM SERIAL NO. T8081031

DRAWING NO. P11804

P11804

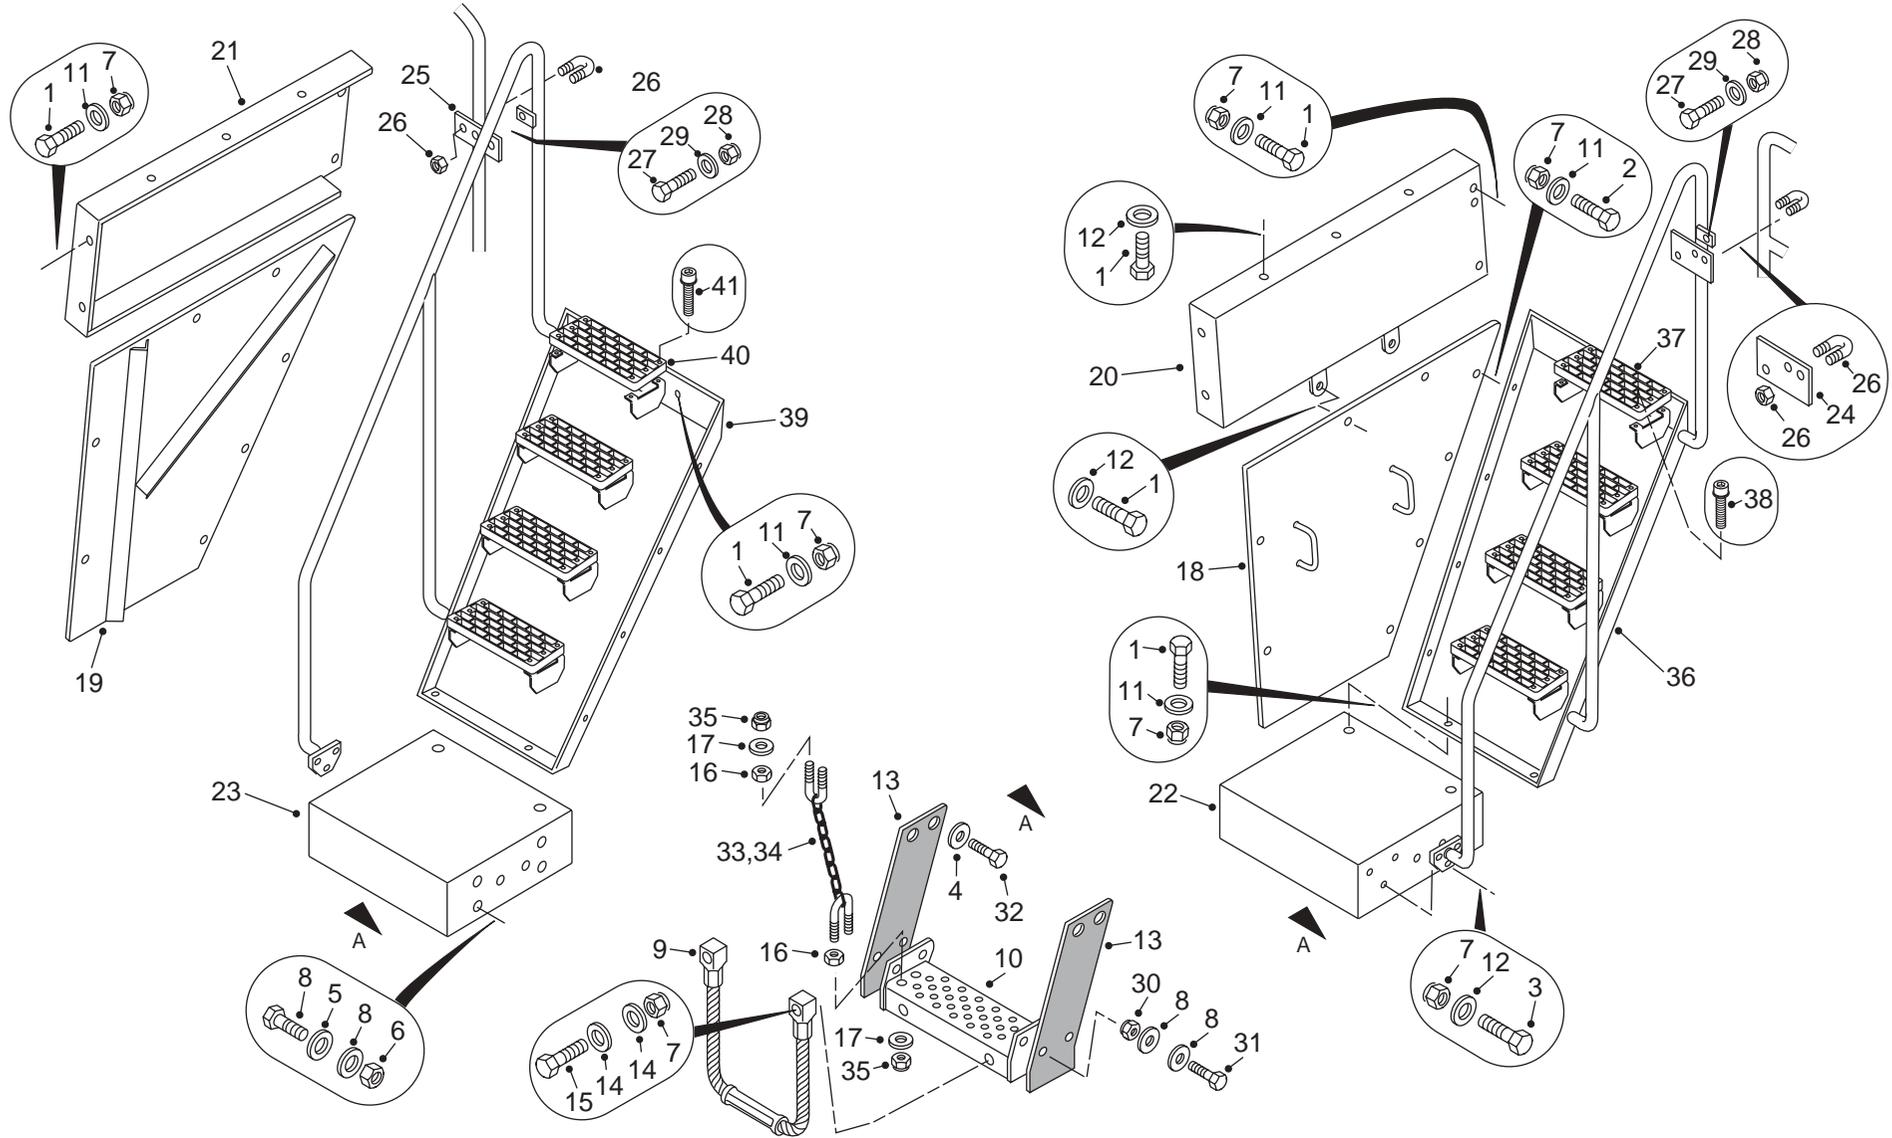

**100-0090-8081 LADDERS AND HANDRAILS**  
FROM SERIAL NO. T8081031

**100-0090-8081 LADDERS AND HANDRAILS**  
FROM SERIAL NO. T8081031

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	036		00179885	BOLT			039	001		15320359	STEP ASSY-RH		
002	008		00179887	BOLT			040	004		15320662	.STEP		
003	004		00179889	BOLT			041	016		15320359	.CAPSCREW		
004	008		15306895	WASHER-SPECIAL									
005	008		00223451	BOLT									
006	008		00274141	NUT									
007	028		00274209	LOCKNUT									
008	032		09176228	WASHER-HARDENED									
009	002		15255698	STEP ASSY									
010	002		15304237	STEP									
011	036		09267949	WASHER-HARDENED									
012	042		09270000	WASHER-HARDENED									
013	004		15304238	RUBBER STRIP									
014	008		00106265	WASHER									
015	004		00179893	BOLT									
016	016		06431001	NUT									
017	016		00106263	WASHER									
018	001		15254673	HOODSIDE-LH									
019	001		15254689	HOODSIDE-RH									
020	001		15254709	PANEL ASSY-LH									
021	001		15254710	PANEL ASSY-RH									
022	001		15254725	BUMPER EXTENSION-LH									
023	001		15254726	BUMPER EXTENSION-RH									
024	001		15303031	PLATE									
025	001		15303030	PLATE									
026	002		15302982	U-BOLT									
027	002		00179839	BOLT									
028	002		09417713	NUT									
029	002		09060202	WASHER-HARDENED									
030	008		09355771	NUT									
031	008		00271613	BOLT									
032	008		00271600	BOLT									
033	004		15306894	CHAIN ASSY									
034	008		15246583	BOLT-U									
035	016		06471001	LOCKNUT									
036	001		15320358	STEP ASSY-LH									
037	004		15320662	.STEP									
038	016		15320295	.CAPSCREW									

**100-0100-8081 RADIATOR GUARD AND MOUNTING**  
FROM SERIAL NO. T8081011 TO T8081027

DRAWING NO. P10966

P10966

