

Product: 2006-2010 TEREX TR40/45 Off-Highway Truck Workshop Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/2006-2010-terex-tr40-45-off-highway-truck-workshop-parts-manual/>



Publication Part Number: **15503223**


Published by : Customer Support Department - TEREX Equipment Limited, Motherwell, Scotland

PARTS BOOK

CLICK HERE FOR  
STANDARD  
TABLE OF CONTENTS

CLICK HERE FOR  
OPTIONAL  
TABLE OF CONTENTS

CLICK HERE  
TO RETURN TO MAIN  
LIBRARY INDEX

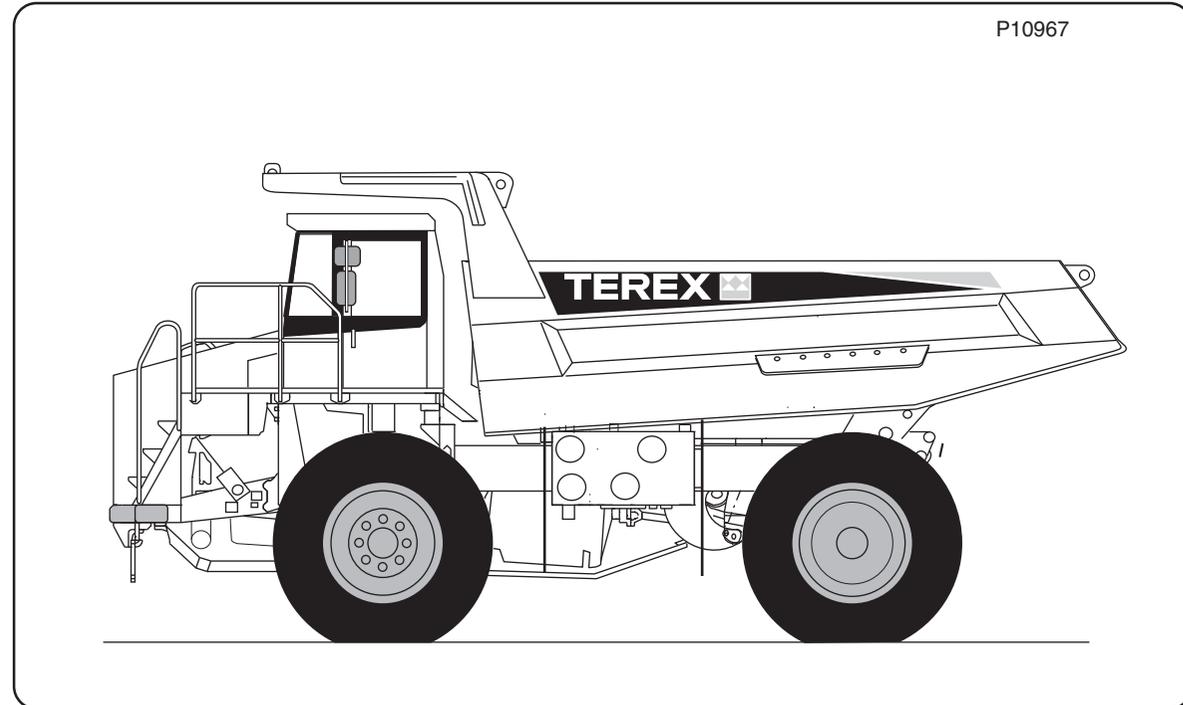

# TR40/45 Off-Highway Truck

(Cummins QSK19-C525 Tier 3 and Allison M5610AR Trans)

**Serial Nos. T8811011 and above**

Date: Sept. 2006

Sample of manual. Download All 440 pages at:

<https://www.arepairmanual.com/downloads/2006-2010-terex-tr4045-off-highway-truck-workshop-parts-manual/>

*Revised: 7th September 2010*

Product: 2006-2010 TEREX TR40/45 Off-Highway Truck Workshop Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/2006-2010-terex-tr40-45-off-highway-truck-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 440 pages at:  
<https://www.arepairmanual.com/downloads/2006-2010-terex-tr4045-off-highway-truck-workshop-parts-manual/>



## **WARRANTY ON PARTS AND ATTACHMENTS**

Terex Equipment Limited warrants that for a period of 12 months or unlimited hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

\* \* \* \* \*

### **SOLE WARRANTY**

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

## INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

**SECTION 100 - CHASSIS**

**SECTION 140 - FRONT AXLE GROUP**

**SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings.

For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.

**EXAMPLE - 220-0120.**

**SERIAL NUMBERS** - Each Parts Book covers a particular range of unit Serial Numbers.

**It is important that unit Serial Numbers are quoted on all orders for Parts.**

**PARTS LISTS** - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

**ILLUSTRATIONS** - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

---

**INDENTATIONS** - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.  
2 9058512 . Shaft  
3 9024169 . Ring  
4 9058132 . Control Assy.  
5 9058135 . . Spring  
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

**NOTES** - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

**ABBREVIATIONS** - The abbreviations in this book have the following meanings -

Amps .....	Amperes	Hsg .....	Housing	N.I .....	Not Illustrated
As R .....	As Required	I.D .....	Inside Diameter	N.L.A .....	No Longer Available
Assy .....	Assembly	L.H .....	Left Hand	N.S.S .....	Not Sold Separately
Brkt .....	Bracket	L.W .....	Lockwasher	O.D .....	Outside Diameter
Cad-Pltd .....	Cadium Plated	Lg .....	Long	Pr .....	Pair
Comm .....	Commencement of production	Lkg .....	Linkage	P.T.O .....	Power-Take-Off
E.S.N .....	Elastic Stop Nut	Mtg .....	Mounting	R.H .....	Right Hand
Ftgs .....	Fittings	N.C .....	Note Code	Std .....	Standard



# Truck



# TEREX

## STANDARD SECTIONS

	<b>CHASSIS</b>	<b>100</b>		<b>FUEL SYSTEM</b>	<b>200</b>
	<b>ENGINE</b>	<b>110</b>		<b>COOLING SYSTEM</b>	<b>210</b>
	<b>TRANSMISSION</b>	<b>120</b>		<b>STEERING SYSTEM</b>	<b>220</b>
	<b>DRIVELINE</b>	<b>130</b>		<b>BODY SYSTEM</b>	<b>230</b>
	<b>FRONT AXLE</b>	<b>140</b>		<b>BRAKING SYSTEM</b>	<b>250</b>
	<b>REAR AXLE</b>	<b>160</b>		<b>CAB</b>	<b>260</b>
	<b>BRAKE PARTS</b>	<b>165</b>		<b>BODY</b>	<b>270</b>
	<b>SUSPENSION SYSTEM</b>	<b>180</b>		<b>DECALS</b>	<b>290</b>
	<b>ELECTRICAL SYSTEM</b>	<b>190</b>		<b>MISCELLANEOUS</b>	<b>300</b>

**TABLE OF CONTENTS FOR MODEL TR45 QSK19C T3 ENG**

**FROM SERIAL NO T8811011**

**REVISED 09/10**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 100</u></b>	<b><u>CHASSIS</u></b>		
100-0010-8811	CHASSIS	T8811011 TO T8811114	R1 01/09
<b>100-0010-8811</b>	<b>CHASSIS</b>	<b>T8811115</b>	<b>09/10</b>
100-0040-8811	HOOD AND MOUNTING		
100-0070-8811	FENDERS AND MOUNTING	T8811011 TO T8811105	
100-0070-8811	FENDERS AND MOUNTING	T8811106 TO T8811114	02/09
<b>100-0070-8811</b>	<b>FENDERS AND MOUNTING</b>	<b>T8811115</b>	<b>09/10</b>
100-0090-8811	LADDERS AND HANDRAILS	T8811011 TO T8811114	
<b>100-0090-8811</b>	<b>LADDERS AND HANDRAILS</b>	<b>T8811115</b>	<b>09/10</b>
100-0100-8811	RADIATOR GUARD AND MOUNTING	T8811011 TO T8811105	
<b>100-0100-8811</b>	<b>RADIATOR GUARD AND MOUNTING</b>	<b>T8811106</b>	<b>R1 09/10</b>
100-0140-8811	MUDGUARDS		
<b><u>SECTION 110</u></b>	<b><u>ENGINE</u></b>		
110-0020-8811	ENGINE ORDERING INSTRUCTIONS		
110-0030-8811	ENGINE AND MOUNTING		R4 03/10
110-0050-8811	AIR CLEANER		
110-0060-8811	AIR CLEANER PIPES AND HOSES		
110-0130-8811	POWER TAKEOFF-ENG PTO		
<b><u>SECTION 120</u></b>	<b><u>TRANSMISSION</u></b>		
120-0010-8811	TRANSMISSION MOUNTING		
120-0020-8811	TRANSMISSION BREAKDOWN		
120-0050-8811	CONTROL VALVE		
120-0070-8811	SHIFT CONTROL		
120-0090-8811	POWER TAKEOFF-TRANS		
120-0100-8811	FILTER		
120-0110-8811	OIL LINES-TRANSMISSION		
120-0190-8811	RETARDER CONTROL LINES-HYD		R2 02/09
120-0200-8811	FRONT COVER & CONVERTER GROUP		
120-0210-8811	CONVERTER HOUSING GROUP		
120-0220-8811	OIL PUMP		
120-0230-8811	FILTER ADAPT/REGULATOR VALVES		
120-0240-8811	LOCKUP VALVE		
120-0260-8811	RETARDER GROUP		
120-0270-8811	RETARDER CONTROL VALVE		
120-0280-8811	SPLITTER GEARING AND CLUTCHES		
120-0290-8811	MAIN HOUSING GROUP		
120-0300-8811	HIGH RANGE GEARING & CLUTCHES		
120-0310-8811	INTER RANGE GEARING & CLUTCHES		
120-0320-8811	LOW RANGE GEARING & CLUTCHES		

**TABLE OF CONTENTS FOR MODEL TR45 QSK19C T3 ENG**

**FROM SERIAL NO T8811011**

**REVISED 09/10**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 120</u></b>	<b><u>TRANSMISSION-CONTINUED</u></b>		
120-0330-8811	REV RANGE GEARING & CLUTCHES		
120-0340-8811	REAR COVER GROUP		
<b><u>SECTION 130</u></b>	<b><u>DRIVELINE</u></b>		
130-0010-8811	FRONT DRIVELINE		
130-0020-8811	REAR DRIVELINE		
<b><u>SECTION 140</u></b>	<b><u>FRONT AXLE</u></b>		
140-0040-8811	WHEEL, RIM AND TYRE-FRONT		R2 03/10
<b><u>SECTION 160</u></b>	<b><u>REAR AXLE</u></b>		
160-0020-8811	DIFFERENTIAL-REAR	T8811011 TO T8811011	
160-0020-8811	DIFFERENTIAL-REAR	T8811012	R1 04/09
160-0030-8811	AXLE GROUP-REAR		R1 11/06
160-0040-8811	PLANETARY GEARING-REAR		
160-0050-8811	WHEEL, RIM AND TYRE-REAR		R2 03/10
<b><u>SECTION 165</u></b>	<b><u>BRAKE PARTS</u></b>		
165-0020-8811	BRAKE PARTS-FRONT WHEEL-RIGIDS		
165-0030-8811	BRAKE PARTS-REAR WHEEL-RIGIDS		
<b><u>SECTION 180</u></b>	<b><u>SUSPENSION SYSTEM</u></b>		
180-0030-8811	FRONT RIDE CYLINDER	T8811011 TO T8811079	R1 02/08
180-0030-8811	FRONT RIDE CYLINDER	T8811078	06/08
180-0050-8811	REAR RIDE CYLINDER		
<b><u>SECTION 190</u></b>	<b><u>ELECTRICAL SYSTEM</u></b>		
190-0010-8811	TERMINALS		
190-0011-8811	CONNECTORS		
190-0030-8811	CABLES/HARNESSES-CAB		
190-0040-8811	CABLES/HARNESSES-CHASS/ENG		R3 10/09
190-0070-8811	BATTERY AND CABLES		
190-0080-8811	BATTERY MOUNTING		
190-0100-8811	ELECTRICAL LIGHTING SYSTEM		R2 03/09
190-0110-8811	ALERNATOR		
190-0120-8811	STARTER MOTOR		
190-0270-8811	SWITCHES AND SENSORS		R2 10/09
190-0300-8811	RADIO CASSETTE & SPEAKERS		R1 04/09
190-0310-8811	ELECTRICAL HORN		
190-0330-8811	CCTV REAR VIEW SYSTEM	T8811106	02/09

TABLE OF CONTENTS FOR MODEL TR45 QSK19C T3 ENG

FROM SERIAL NO T8811011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 200</u></b>			
<b><u>FUEL SYSTEM</u></b>			
200-0010-8811	FUEL TANK AND MOUNTING	T8811011 TO T8811105	
200-0010-8811	FUEL TANK AND MOUNTING	T8811106	R1 03/10
200-0040-8811	FUEL LINES		R1 11/06
200-0050-8811	ACCELERATOR LINKAGE	T8811011 TO T8811069	
200-0050-8811	ACCELERATOR LINKAGE	T8811070 TO T8811109	10/07
200-0050-8811	ACCELERATOR LINKAGE	T8811110	03/10
<b><u>SECTION 210</u></b>			
<b><u>COOLING SYSTEM</u></b>			
210-0010-8811	RADIATOR ASSEMBLY		
210-0020-8811	RADIATOR MOUNTING	T8811011 TO T8811114	
<b>210-0020-8811</b>	<b>RADIATOR MOUNTING</b>	<b>T8811115</b>	<b>09/10</b>
210-0030-8811	RADIATOR PIPING		
210-0035-8811	CHARGE AIR COOLER AND PIPING		
210-0040-8811	RADIATOR HEADER TANK AND HOSES		R2 11/08
210-0050-8811	OIL COOLER-DISC BRAKES		
210-0051-8811	OIL COOLER PIPING-DISC BRAKES		R3 01/08
210-0060-8811	OIL COOLER AND PIPING-TRANS		R1 05/07
<b><u>SECTION 220</u></b>			
<b><u>STEERING SYSTEM</u></b>			
<b>220-0010-8811</b>	<b>STEERING LINES</b>		<b>R2 09/10</b>
220-0015-8811	STEERING LINES FILTRATION		
220-0040-8811	TANK AND MOUNTING-STEERING	T8811011 TO T8811011	R1 06/09
220-0050-8811	PUMP-STEERING		
220-0060-8811	PUMP AND ACCUMULATOR MOUNTING		
220-0080-8811	ACCUMULATOR-STEERING	T8811011 TO T8811011	11/06
220-0080-8811	ACCUMULATOR-STEERING	T8811012	R1 11/06
220-0090-8811	STEERING VALVE		
220-0110-8811	DOUBLE RELIEF VALVE		
220-0120-8811	STEERING CYLINDER	T8811011 TO T8811011	11/06
220-0120-8811	STEERING CYLINDER	T8811012	R1 11/06
220-0130-8811	RELIEF VALVE-STEERING	T8811011 TO T8811012	
220-0130-8811	RELIEF VALVE-STEERING	T8811013	R1 03/10
220-0150-8811	FILTER-STEERING		
220-0190-8811	STEERING LINKAGE		
220-0230-8811	STEERING COLUMN MOUNTING		

**TABLE OF CONTENTS FOR MODEL TR45 QSK19C T3 ENG**

**FROM SERIAL NO T8811011**

**REVISED 09/10**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 230</u></b>	<b><u>BODY SYSTEM</u></b>		
230-0020-8811	LINES AND FITTINGS-BODY HOIST		
230-0021-8811	SERVO CONTROL LINES-BODY		R1 11/06
230-0040-8811	TANK AND MOUNTING-BODY HOIST	T8811011 TO T8811011	R1 06/09
230-0040-8811	TANK AND MOUNTING-BODY HOIST	T8811012 TO T8811098	R3 06/09
230-0040-8811	TANK AND MOUNTING-BODY HOIST	T8811099 TO T8811105	R2 07/09
230-0040-8811	TANK AND MOUNTING-BODY HOIST	T8811106	05/10
230-0041-8811	BREATHER LINE-HYDRAULIC TANKS	T8811011 TO T8811011	
230-0050-8811	PUMP-BODY HOIST		R1 05/10
230-0060-8811	CONTROL VALVE-BODY HOIST		
230-0070-8811	CONTROL VALVE MOUNTING		
230-0081-8811	JOYSTICK-BODY CONTROL		
230-0090-8811	KICK-OVER VALVE		
230-0100-8811	KICK-OVER VALVE MOUNTING		
230-0120-8811	RELIEF VALVE		
230-0121-8811	PILOT SUPPLY VALVE		
230-0130-8811	HOIST CYLINDERS		
<b><u>SECTION 250</u></b>	<b><u>BRAKING SYSTEM</u></b>		
<b>250-0020-8811</b>	<b>BRAKE LINES-HYDRAULIC</b>		<b>R2 09/10</b>
250-0050-8811	BRAKE MANIFOLD/PAS VALVE		
250-0060-8811	BRAKE ACCUMULATOR		
250-0070-8811	TREADLE VALVE		
250-0090-8811	DIRECTIONAL CONTROL VALVE		
250-0100-8811	MONOBLOCK BRAKE VALVE		
250-0130-8811	RETARDER CONTROL VALVE-BRAKES		
250-0240-8811	FILTER ASSEMBLY-DISC BRAKE	T8811011 TO T8811011	
250-0240-8811	FILTER ASSEMBLY-DISC BRAKE	T8811012 TO T8811084	10/06
250-0240-8811	FILTER ASSEMBLY-DISC BRAKE	T8811085	06/08

## TABLE OF CONTENTS FOR MODEL TR45 QSK19C T3 ENG

FROM SERIAL NO T8811011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 260</u></b>			
	<b><u>CAB</u></b>		
260-0010-8811	CAB ASSEMBLY		R1 05/10
260-0011-8811	CAB CENTRE CONSOLE		
260-0015-8811	CAB MOUNTING		R1 05/07
260-0030-8811	CAB DOOR-LEFT HAND	T8811011 TO T8811069	R1 10/09
260-0030-8811	CAB DOOR-LEFT HAND	T8811070 TO T8811098	R1 10/09
260-0030-8811	CAB DOOR-LEFT HAND	T8811099	R1 10/09
260-0040-8811	CAB DOOR-RIGHT HAND		
260-0080-8811	SWITCHES AND INSTRUMENTS		R1 06/08
260-0090-8811	SEAT-DRIVER	T8811011 TO T8811069	
260-0090-8811	SEAT-DRIVER	T8811070	R2 03/10
260-0110-8811	SEAT-INSTRUCTOR	T8811011 TO T8811069	
260-0110-8811	SEAT-INSTRUCTOR	T8811070	01/08
260-0130-8811	AIR COND./HEATER	T8811011 TO T8811069	
260-0130-8811	AIR COND./HEATER	T8811070	02/08
260-0140-8811	HEATER LINES AND WIRING		
260-0145-8811	AIR COND. LINES		R1 06/08
260-0175-8811	MIRRORS-WIDE ANGLE (HANDRAILS)	T8811106	02/09
260-0190-8811	WINDSCREEN WASHER		
<b><u>SECTION 270</u></b>			
	<b><u>BODY</u></b>		
270-0010-8811	BODY ASSEMBLY		R2 08/07
270-0020-8811	EXHAUST HEATED BODY	T8811011 TO T8811061	R1 11/06
270-0020-8811	EXHAUST HEATED BODY	T8811062	R2 10/09
270-0080-8811	ROCK EJECTORS		
<b><u>SECTION 290</u></b>			
	<b><u>DECALS</u></b>		
290-0010-8811	DECALS-ENGLISH	T8811011 TO T8811034	
290-0010-8811	DECALS-ENGLISH (ISO)	T8811035	R3 04/09
290-0011-8811	DECALS-ENGLISH (ANSI)	T8811035	R3 04/09
290-0100-8811	WALKWAY SURFACES (ANTI-SLIP)		R1 05/07
<b><u>SECTION 300</u></b>			
	<b><u>MISCELLANEOUS</u></b>		
300-0040-8811	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-8811	POLYPROPELENE CLAMPS		
300-0200-8811	UNIT FILTERS AND ELEMENT KITS		R1 03/10

THIS PAGE IS INTENTIONALLY LEFT BLANK


R1 01/09 (ECN 109566)

**100-0010-8811 CHASSIS**

FROM SERIAL NO. T8811011 TO T8811114

DRAWING NO. P12007

P12007

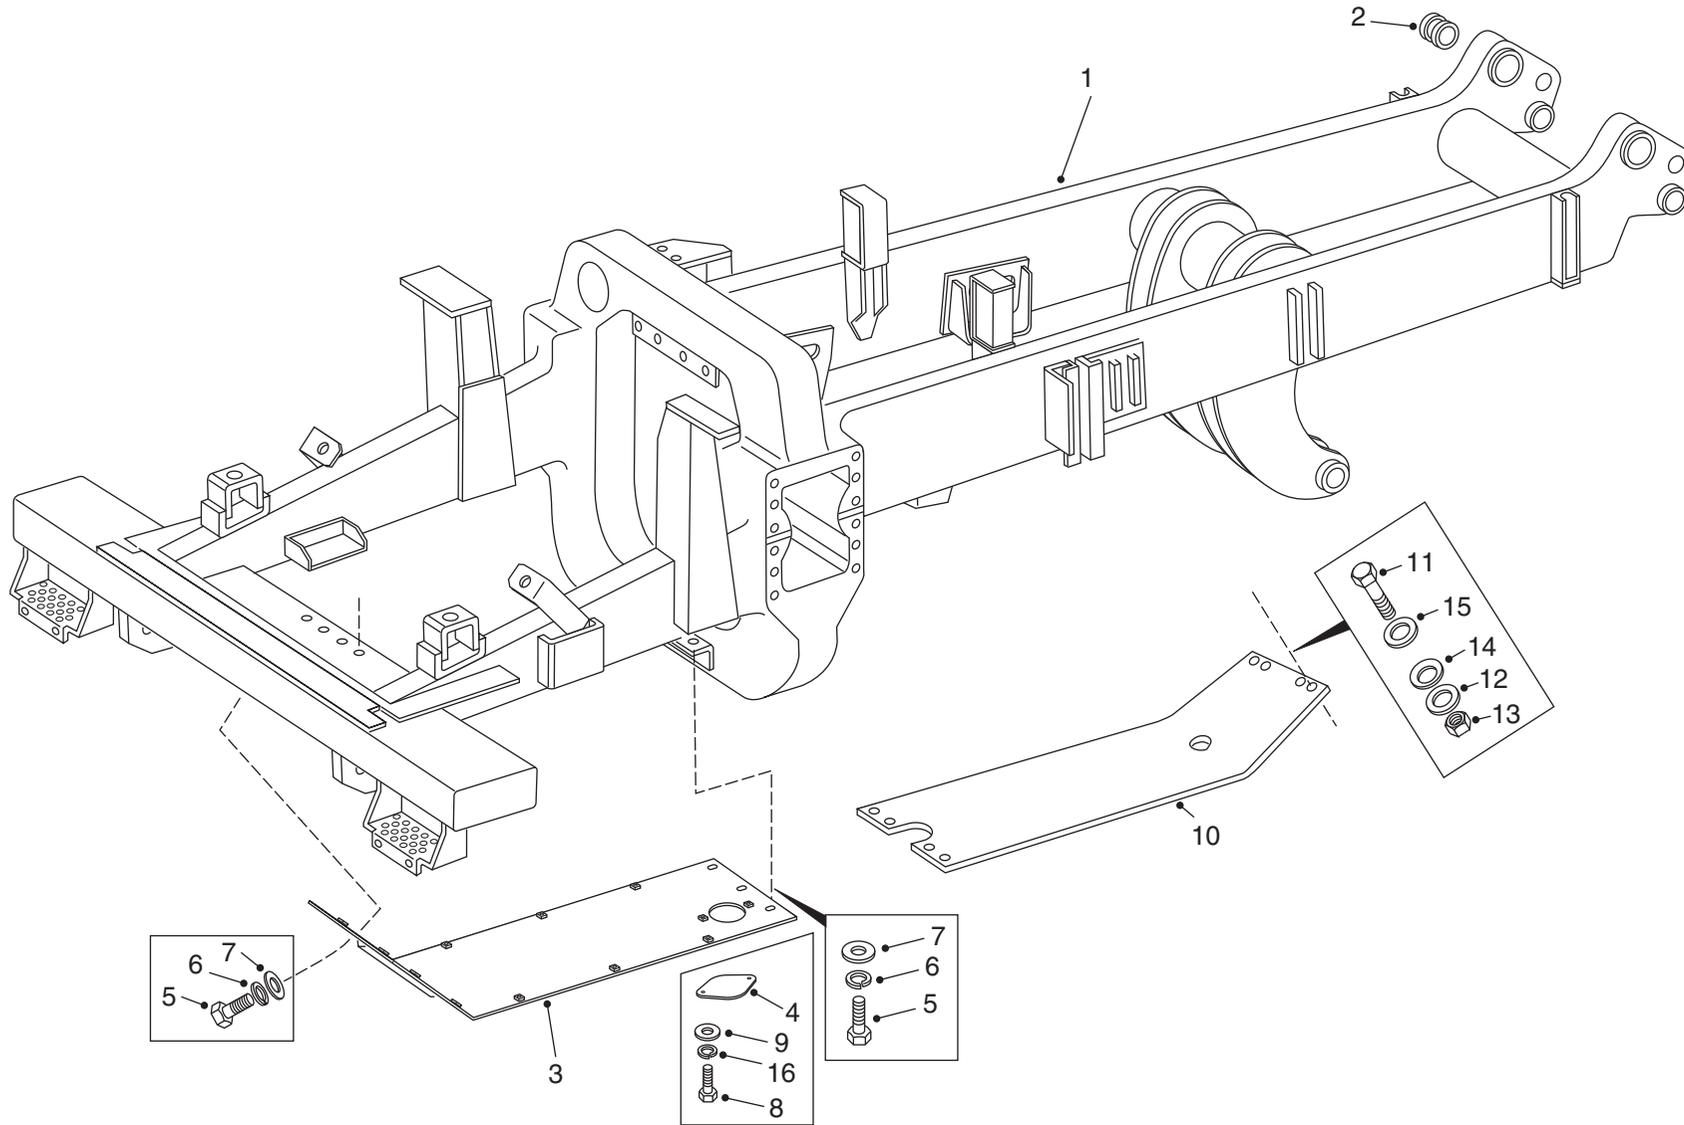

**100-0010-8811 CHASSIS**

FROM SERIAL NO. T8811011 TO T8811114


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15323172	FRAME ASSY COMPLETE		
002	002		09015394	.BUSHING		
003	001		15323187	GUARD ASSY	T8811011	T8811102
003	001		15347493	GUARD ASSY	T8811103	
004	001		15323006	COVER PLATE		
005	006		00271612	BOLT		
006	006		00103332	LOCKWASHER		
007	006		00106268	WASHER		
008	002		00179883	BOLT	T8811011	T8811102
009	002		00106265	WASHER	T8811011	T8811102
010	001		15001042	GUARD-TRANSMISSION		
011	008		00271620	BOLT		
012	008		09176228	WASHER-HARDENED		
013	008		09355771	NUT		
014	008		15247567	DISC-SPRING		
015	004		09011226	WASHER		
016	002		00103329	LOCKWASHER	T8811011	T8811102

09/10 (ECN 110171)

100-0010-8811 CHASSIS  
FROM SERIAL NO. T8811115

DRAWING NO. P12485

P12485

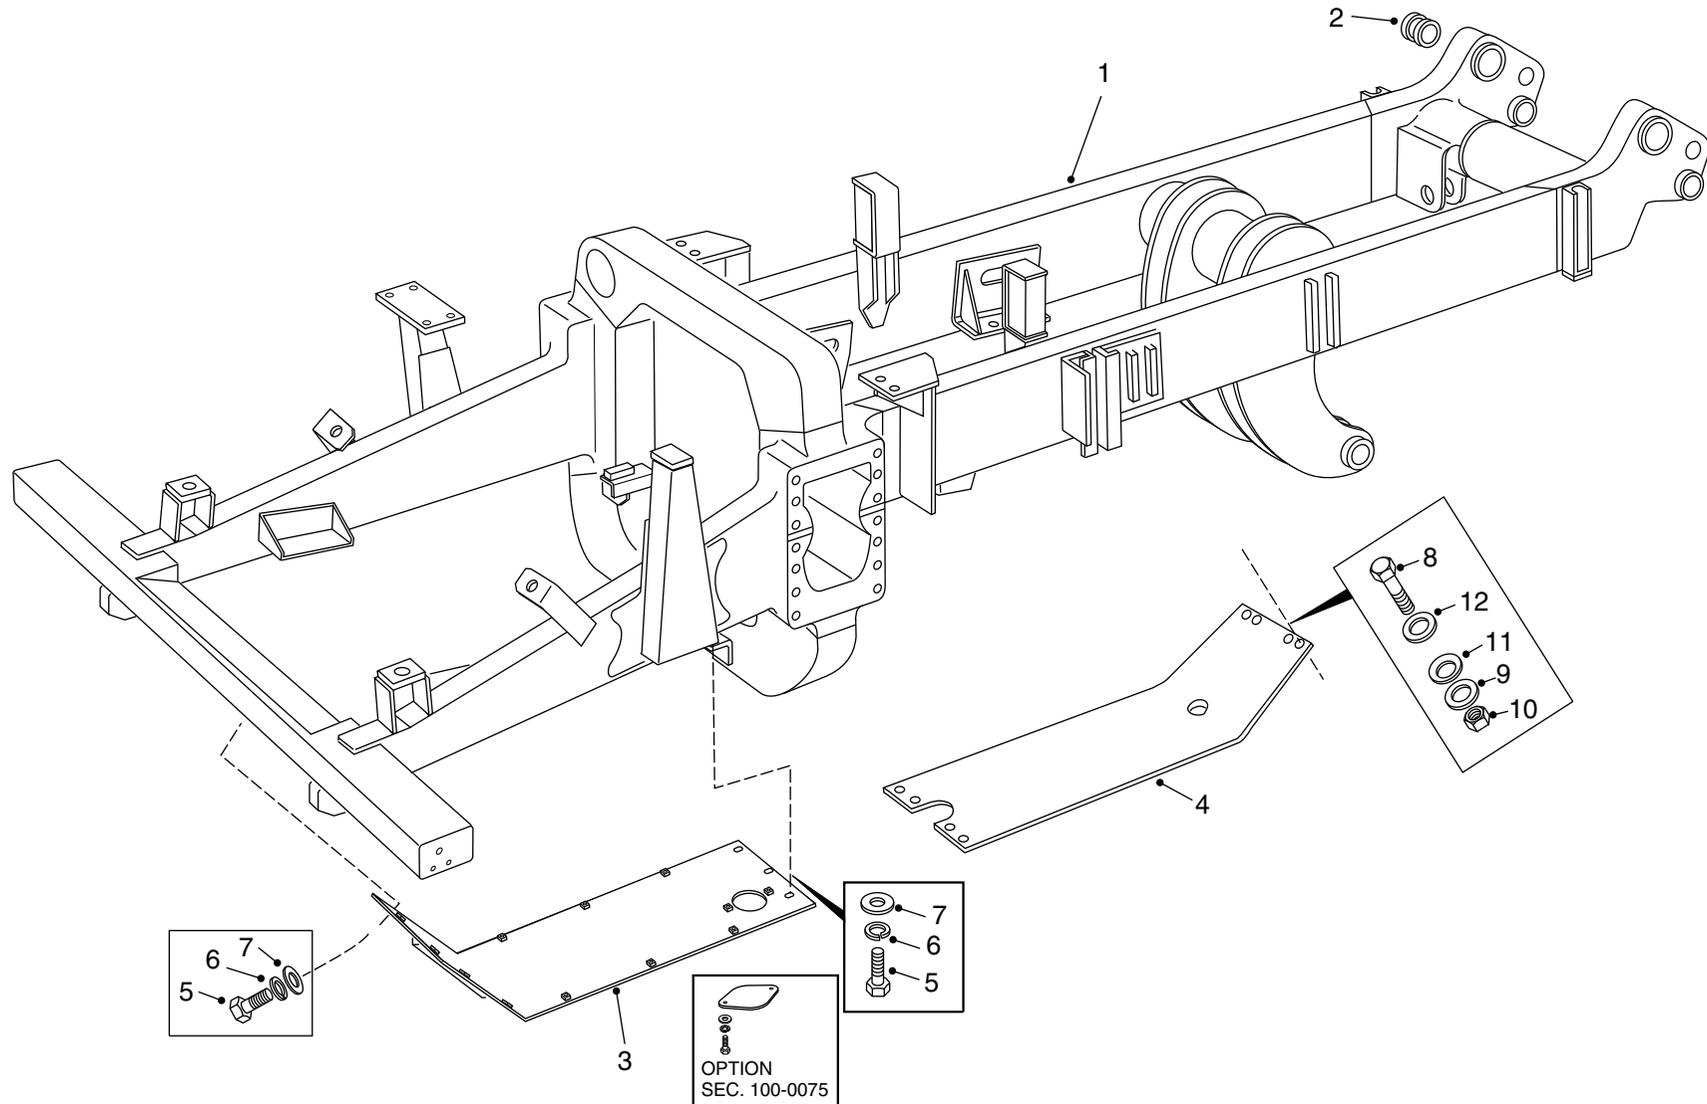


**100-0010-8811 CHASSIS**  
FROM SERIAL NO. T8811115

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15357888	FRAME ASSY COMPLETE		
002	002		09015394	.BUSHING		
003	001		15347493	GUARD ASSY		
004	001		15001042	GUARD-TRANSMISSION		
005	006		00271612	BOLT		
006	006		00103332	LOCKWASHER		
007	006		00106268	WASHER		
008	008		00271620	BOLT		
009	008		09176228	WASHER-HARDENED		
010	008		09355771	NUT		
011	008		15247567	DISC-SPRING		
012	004		09011226	WASHER		

**100-0040-8811 HOOD AND MOUNTING**  
FROM SERIAL NO. T8811011

DRAWING NO. P9190

P9190

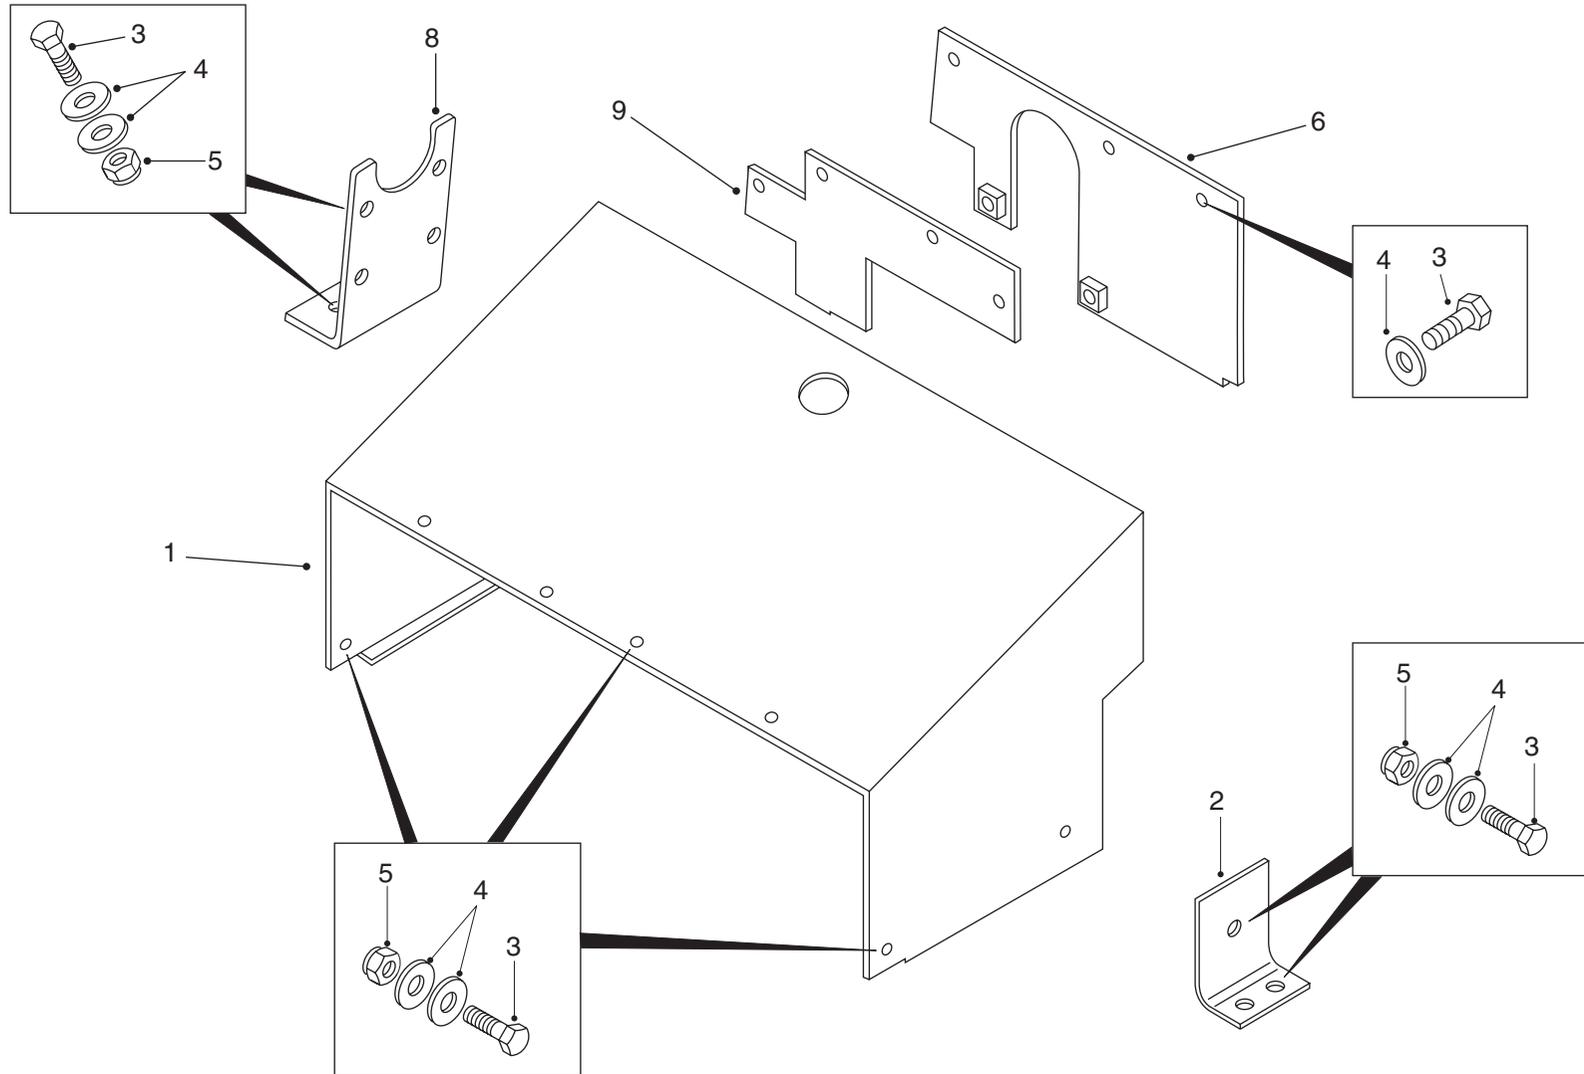



**100-0040-8811 HOOD AND MOUNTING**  
FROM SERIAL NO. T8811011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15318429	HOOD ASSY		
002	001		15252142	PLATE		
003	024		00179885	BOLT		
004	034		09267949	WASHER-HARDENED		
005	009		00120378	NUT		
006	001		15301920	BAFFLE ASSY		
007	030		09368561	BEADING		
008	001		15318430	PLATE BENT		
009	001		15258462	BAFFLE-HOOD		

**100-0070-8811 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8811011 TO T8821105

DRAWING NO. P12010A


P12010A

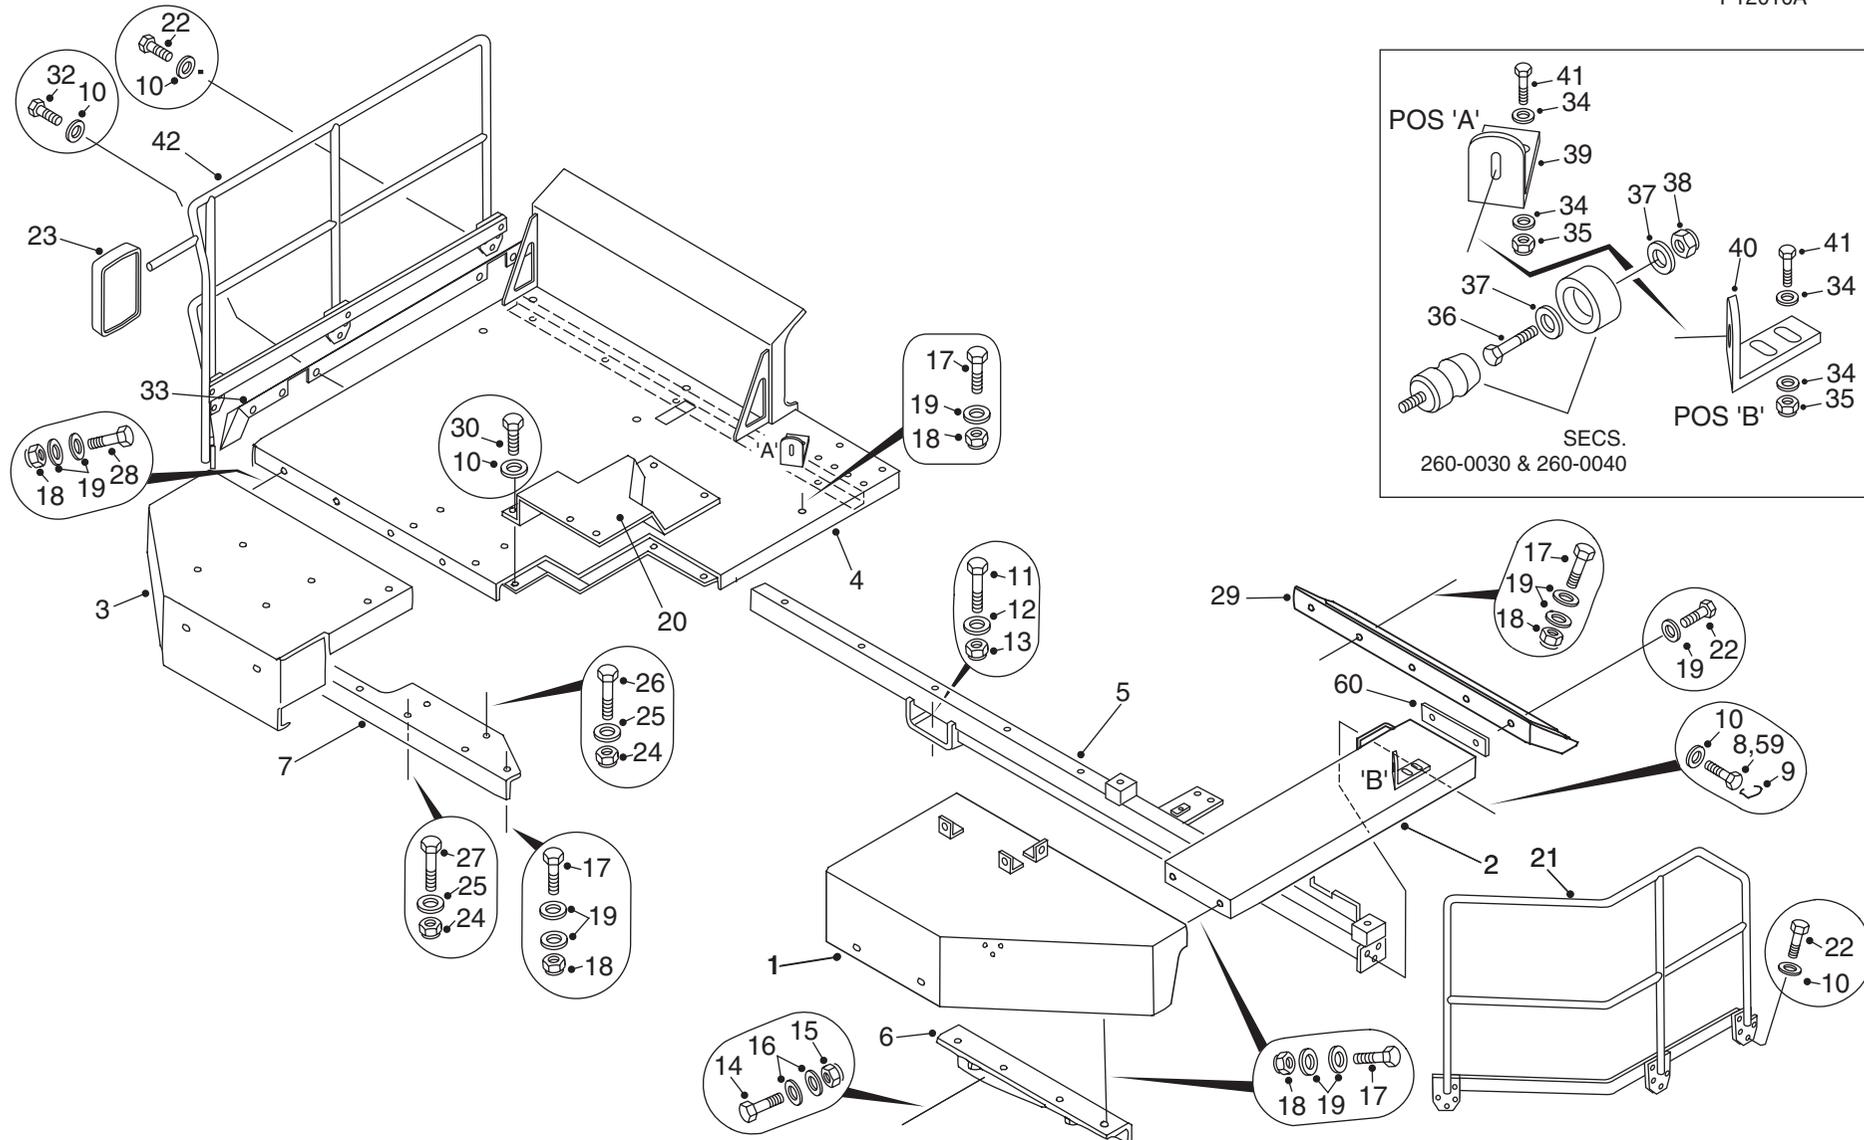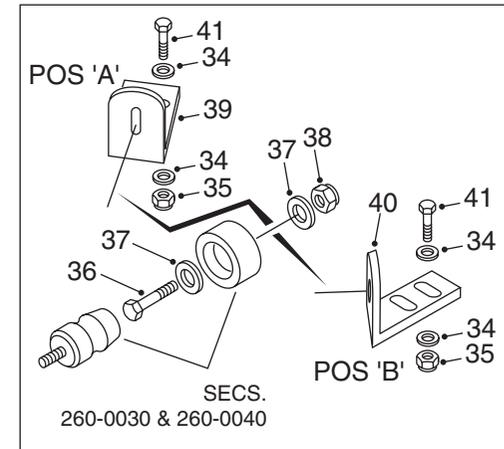

**100-0070-8811 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8811011 TO T8821105

DRAWING NO. P12010B

P12010

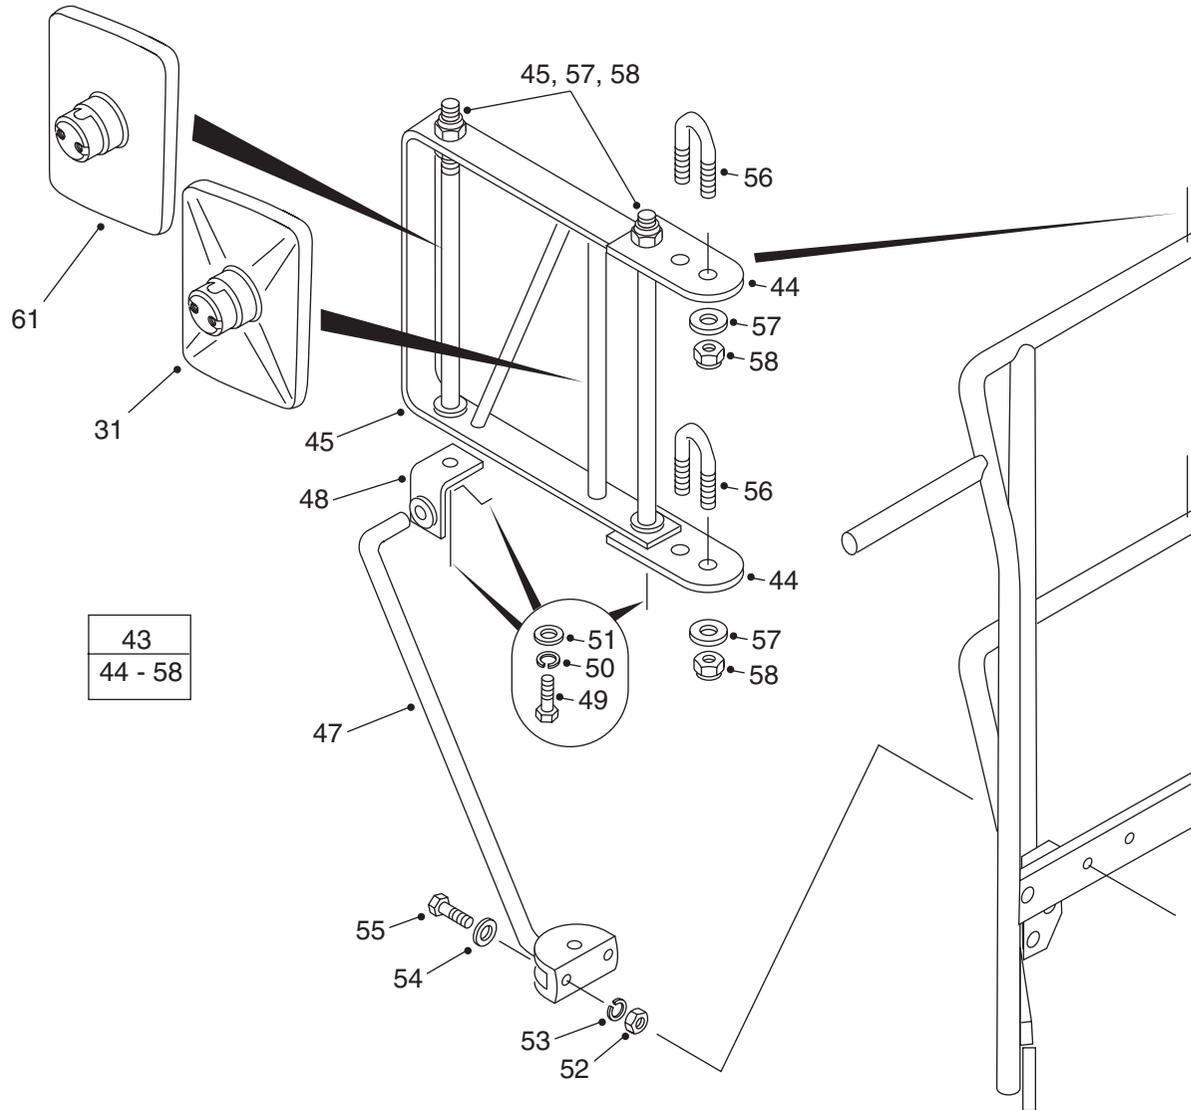




THIS PAGE IS INTENTIONALLY LEFT BLANK

02/09 (ECN 109533)

**100-0070-8811 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8811106 TO T8811114

DRAWING NO. P12363A


P12363

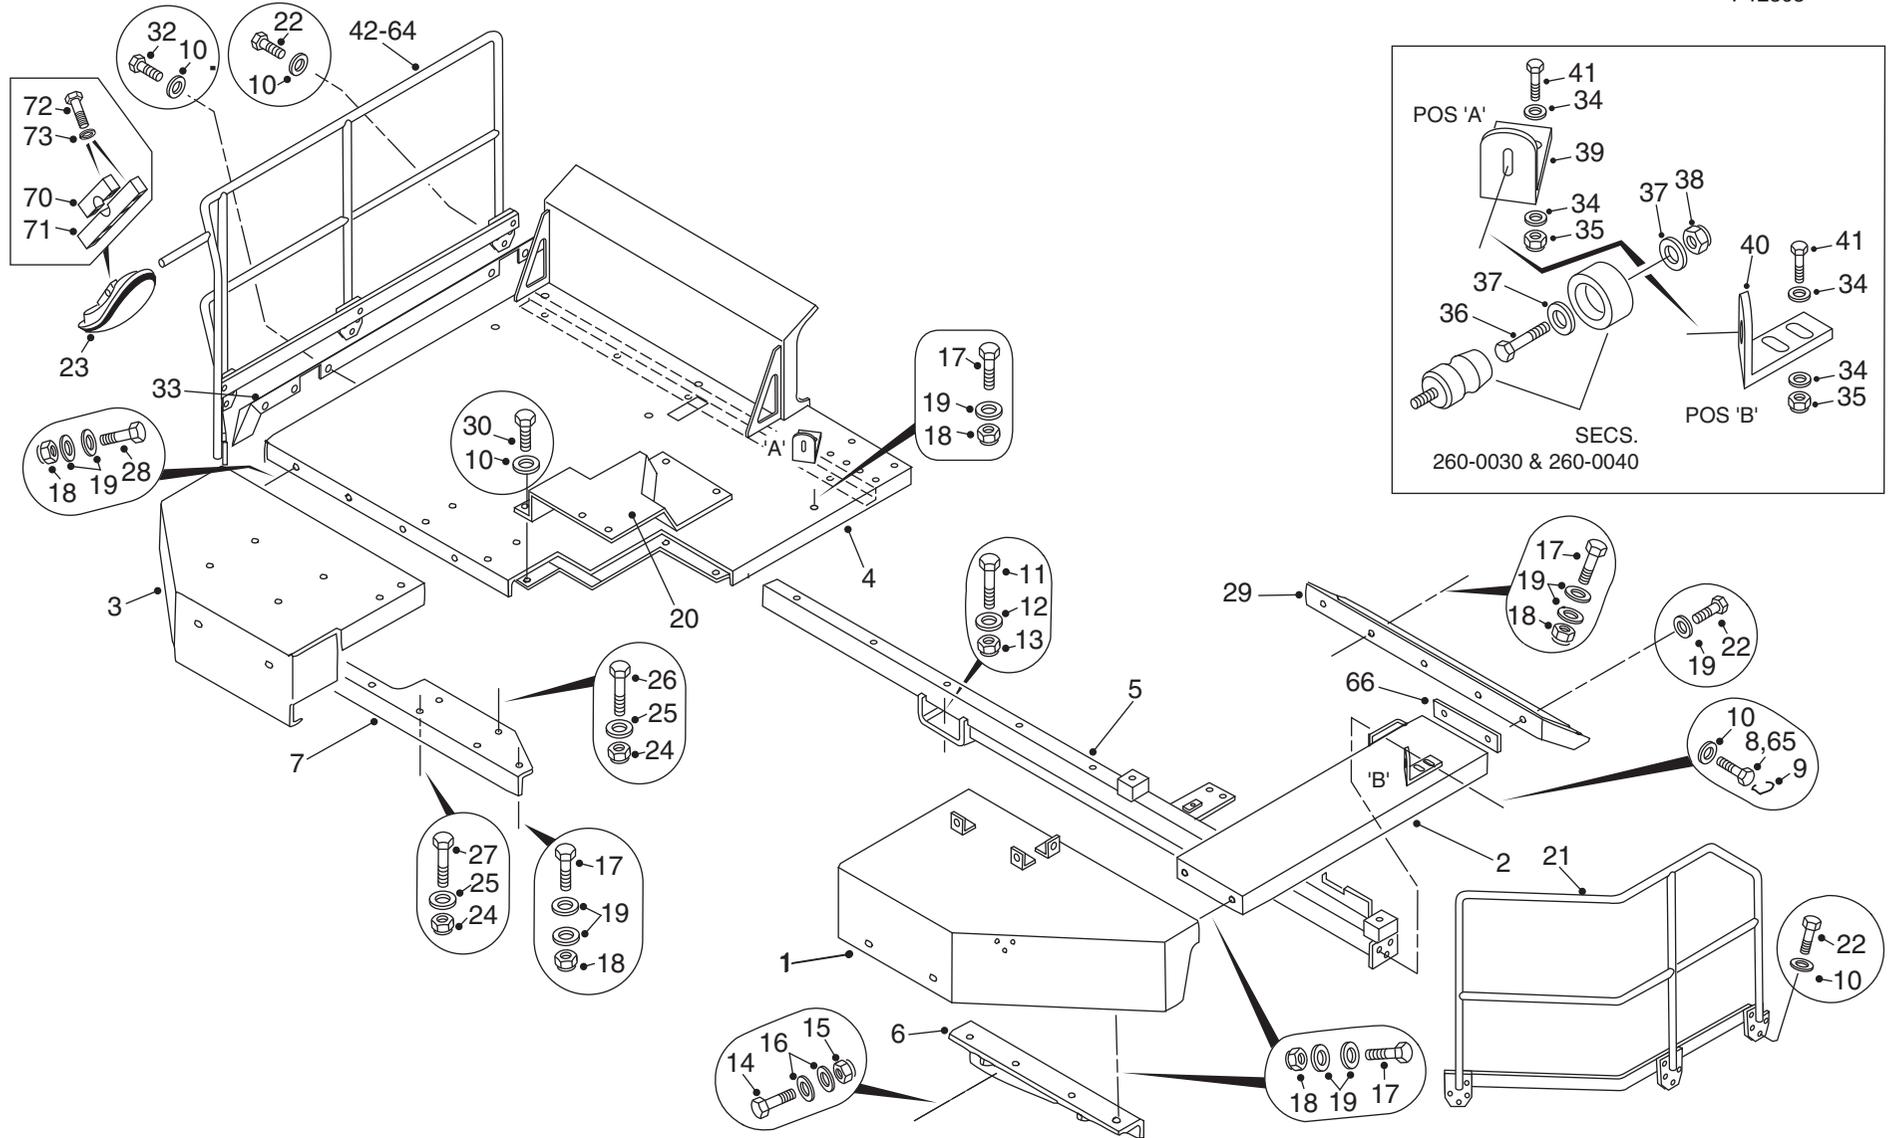

**100-0070-8811 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8811106 TO T8811114

DRAWING NO. P12363B

P12363

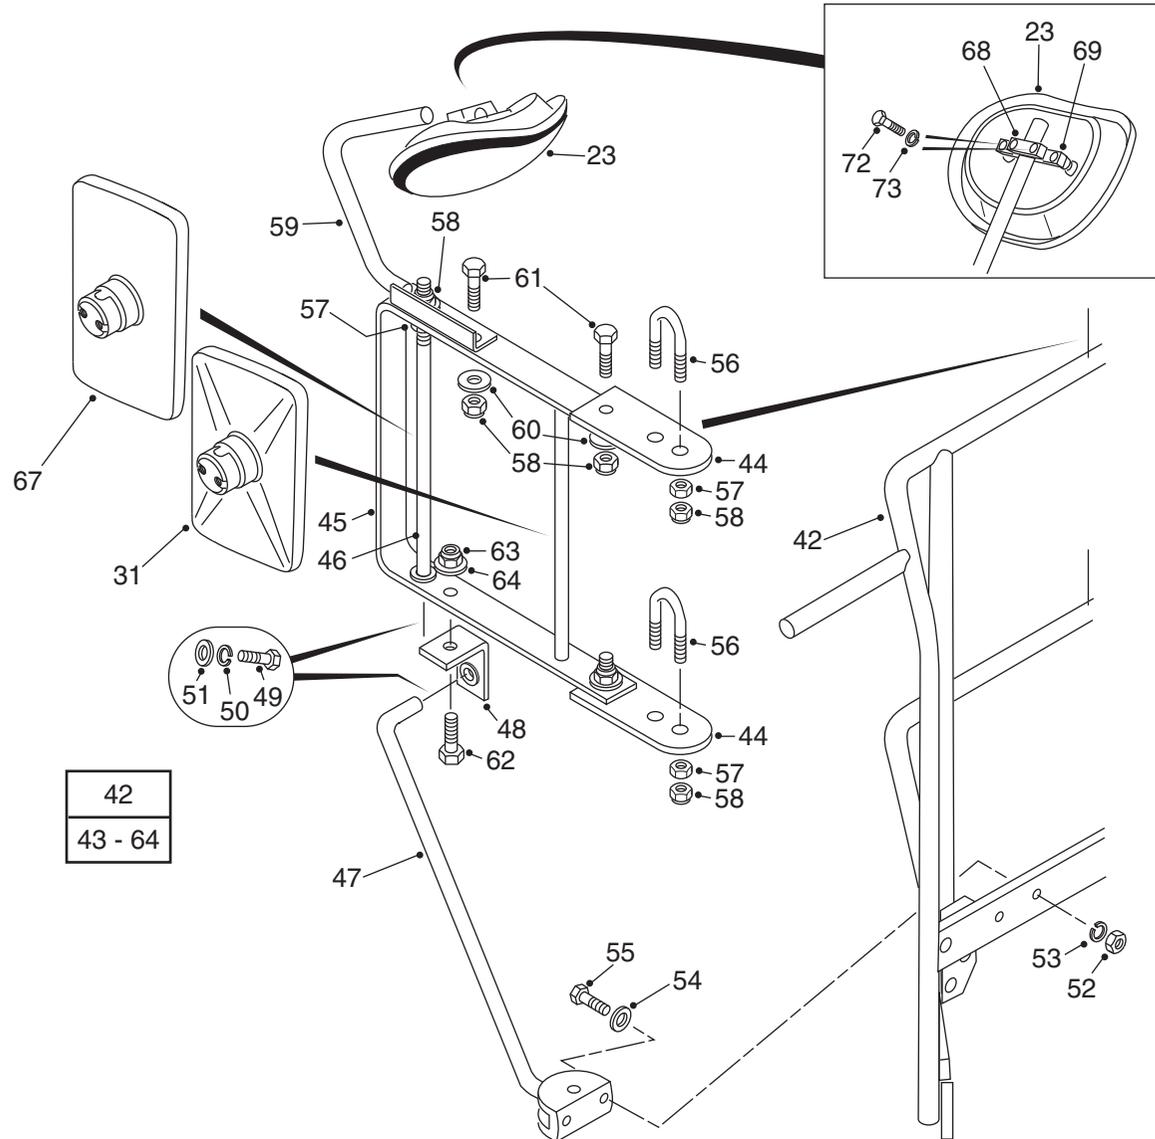

02/09 (ECN 109533)

**100-0070-8811 FENDERS AND MOUNTING**  
 FROM SERIAL NO. T8811106 TO T8811114

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15301768	LH FENDER ASSY		
002	001		15251926	PLATFORM ASSY-LH		
003	001		15322853	FENDER ASSY-RH		
004	001		15322860	RH PLATFORM ASSY		
005	001		15322857	REAR CROSSMEMBER ASSY		
006	001		09016879	SUPPORT		
007	001		15256827	SUPPORT-RH		
008	002		09262364	BOLT		
009	ASR		09113457	LOCKWIRE		
010	031		09270000	WASHER-HARDENED		
011	004		00271703	BOLT		
012	004		09019631	WASHER-HARDENED		
013	004		00273852	LOCKNUT		
014	004		00271612	BOLT		
015	008		09355771	NUT		
016	008		09250715	WASHER-HARDENED		
017	017		00179887	BOLT		
018	021		00274209	LOCKNUT		
019	045		09267949	WASHER-HARDENED		
020	001		15258419	ENGINE ACCESS COVER		
021	001		15302732	HANDRAIL ASSEMBLY-LH		
022	023		00179885	BOLT		
023	002		15343316	MIRROR-WIDE ANGLE		
024	004		09355771	NUT		
025	004		00106268	WASHER		
026	002		00271612	BOLT		
027	002		00271614	BOLT		
028	004		00179889	BOLT		
029	001		09060215	GUARD-MUD		
030	003		00179883	BOLT		
031	001		09077400	MIRROR		
032	005		00179881	BOLT		
033	001		15301189	FENDER EXTENSION		
034	008		09270000	WASHER-HARDENED		
035	004		00274209	LOCKNUT		
036	002		06350625	BOLT		
037	004		07150620	WASHER		
038	002		06470601	LOCKNUT		
039	001		15331963	BENT PLATE		
040	001		15302618	BRACKET-LH DOOR STOP		

**100-0070-8811 FENDERS AND MOUNTING**  
 FROM SERIAL NO. T8811106 TO T8811114

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	004		00179887	BOLT		
042	001		15323353	HANDRAIL ASSY-RH		
043	001		15346823	.MIRROR ATTACHMENT ASSY		
044	002		15344208	..PLATE		
045	001		15344260	..ARM ASSY-MIRROR		
046	002		15304663	..BAR-MIRROR MTG		
047	001		15304704	..ROD ASSY		
048	001		15344597	..BRACKET ASSY		
049	003		00179820	..BOLT		
050	003		00103320	..LOCKWASHER		
051	003		00103340	..WASHER		
052	002		00109084	..NUT		
053	002		00103319	..LOCKWASHER		
054	002		00103339	..WASHER		
055	002		00179795	..BOLT		
056	002		15302982	..U-BOLT		
057	002		00102639	..NUT		
058	002		09354243	..LOCKNUT		
059	001		15345088	..BRACKET		
060	003		00103345	..WASHER		
061	003		00271560	..BOLT		
062	001		06351030	..BOLT		
063	001		06471001	..LOCKNUT		
064	001		07151020	..WASHER		
065	001		15313242	BOLT		
066	ASR		15244346	SPACER		
067	001		15308693	MIRROR		
068	001		15343295	BAR CLAMP		
069	001		15343296	BAR-MIRROR MTG		
070	001		15345290	BAR CLAMP		
071	001		15345289	BAR-MIRROR MTG		
072	008		00181370	BOLT		
073	008		00108580	LOCKWASHER		


THIS PAGE IS INTENTIONALLY LEFT BLANK



100-0070-8811 FENDERS AND MOUNTING  
FROM SERIAL NO. T8811115

DRAWING NO. P12487B

P12487

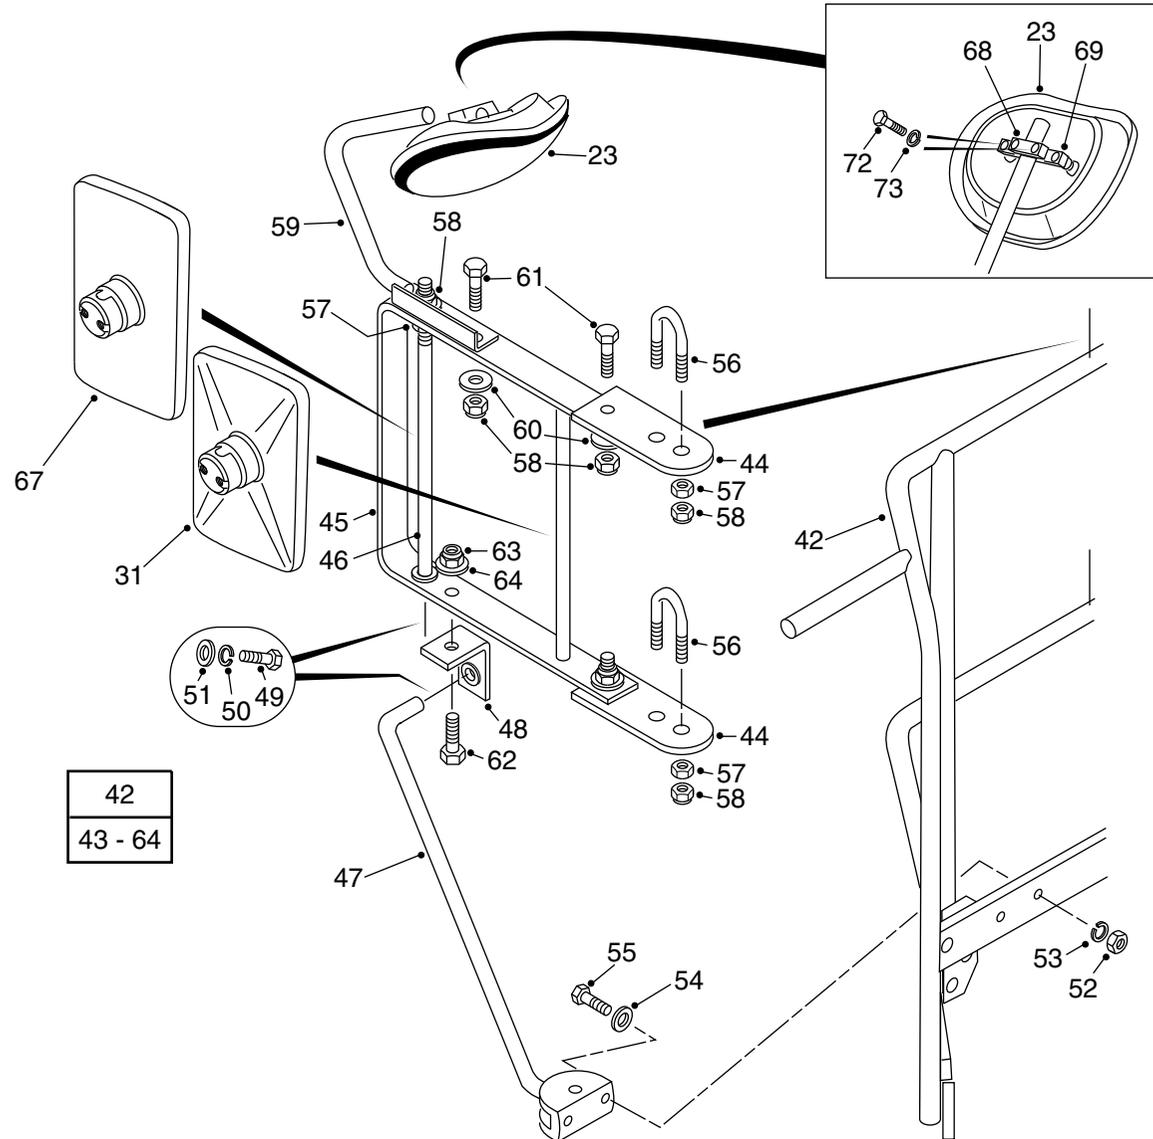

**100-0070-8811 FENDERS AND MOUNTING**

FROM SERIAL NO. T8811115

**100-0070-8811 FENDERS AND MOUNTING**

FROM SERIAL NO. T8811115

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15357829	LH FENDER ASSY			041	004		00179887	BOLT		
002	001		15251926	PLATFORM ASSY-LH			042	001		15323353	HANDRAIL ASSY-RH		
003	001		15357645	FENDER ASSY-RH			043	001		15346823	.MIRROR ATTACHMENT ASSY		
004	001		15322860	RH PLATFORM ASSY			044	002		15344208	..PLATE		
005	001		15322857	REAR CROSSMEMBER ASSY			045	001		15344260	..ARM ASSY-MIRROR		
006	001		09016879	SUPPORT			046	002		15304663	..BAR-MIRROR MTG		
007	001		15256827	SUPPORT-RH			047	001		15304704	..ROD ASSY		
008	002		09262364	BOLT			048	001		15344597	..BRACKET ASSY		
009	ASR		09113457	LOCKWIRE			049	003		00179820	..BOLT		
010	037		09270000	WASHER-HARDENED			050	003		00103320	..LOCKWASHER		
011	004		00271703	BOLT			051	003		00103340	..WASHER		
012	004		09019631	WASHER-HARDENED			052	002		00109084	..NUT		
013	004		00273852	LOCKNUT			053	002		00103319	..LOCKWASHER		
014	004		00271612	BOLT			054	002		00103339	..WASHER		
015	008		09355771	NUT			055	002		00179795	..BOLT		
016	008		09250715	WASHER-HARDENED			056	002		15302982	..U-BOLT		
017	017		00179887	BOLT			057	002		00102639	..NUT		
018	021		00274209	LOCKNUT			058	002		09354243	..LOCKNUT		
019	045		09267949	WASHER-HARDENED			059	001		15345088	..BRACKET		
020	001		15258419	ENGINE ACCESS COVER			060	003		00103345	..WASHER		
021	001		15302732	HANDRAIL ASSEMBLY-LH			061	003		00271560	..BOLT		
022	029		00179885	BOLT			062	001		06351030	..BOLT		
023	002		15343316	MIRROR-WIDE ANGLE			063	001		06471001	..LOCKNUT		
024	004		09355771	NUT			064	001		07151020	..WASHER		
025	004		00106268	WASHER			065	001		15313242	BOLT		
026	002		00271612	BOLT			066	ASR		15244346	SPACER		
027	002		00271614	BOLT			067	001		15308693	MIRROR		
028	004		00179889	BOLT			068	001		15343295	BAR CLAMP		
029	001		09060215	GUARD-MUD			069	001		15343296	BAR-MIRROR MTG		
030	003		00179883	BOLT			070	001		15345290	BAR CLAMP		
031	001		09077400	MIRROR			071	001		15345289	BAR-MIRROR MTG		
032	005		00179881	BOLT			072	008		00181370	BOLT		
033	001		15301189	FENDER EXTENSION			073	011		00108580	LOCKWASHER		
034	008		09270000	WASHER-HARDENED			074	001		15359031	HANDRAIL-REAR		
035	004		00274209	LOCKNUT			075	002		15359027	PLATE-SUPPORT		
036	002		06350625	BOLT			076	002		15302982	U-CLAMP		
037	004		07150620	WASHER			077	008		09060202	WASHER-HDN		
038	002		06470601	LOCKNUT			078	002		00179845	BOLT		
039	001		15331963	BENT PLATE			079	002		00114503	BOLT		
040	001		15302618	BRACKET-REAR DOOR STOP									