




Published by : Customer Support Department - TEREX Equipment Limited, Motherwell, Scotland

PARTS BOOK

CLICK HERE FOR  
STANDARD  
TABLE OF CONTENTS

CLICK HERE FOR  
OPTIONAL  
TABLE OF CONTENTS

CLICK HERE  
TO RETURN TO MAIN  
LIBRARY INDEX

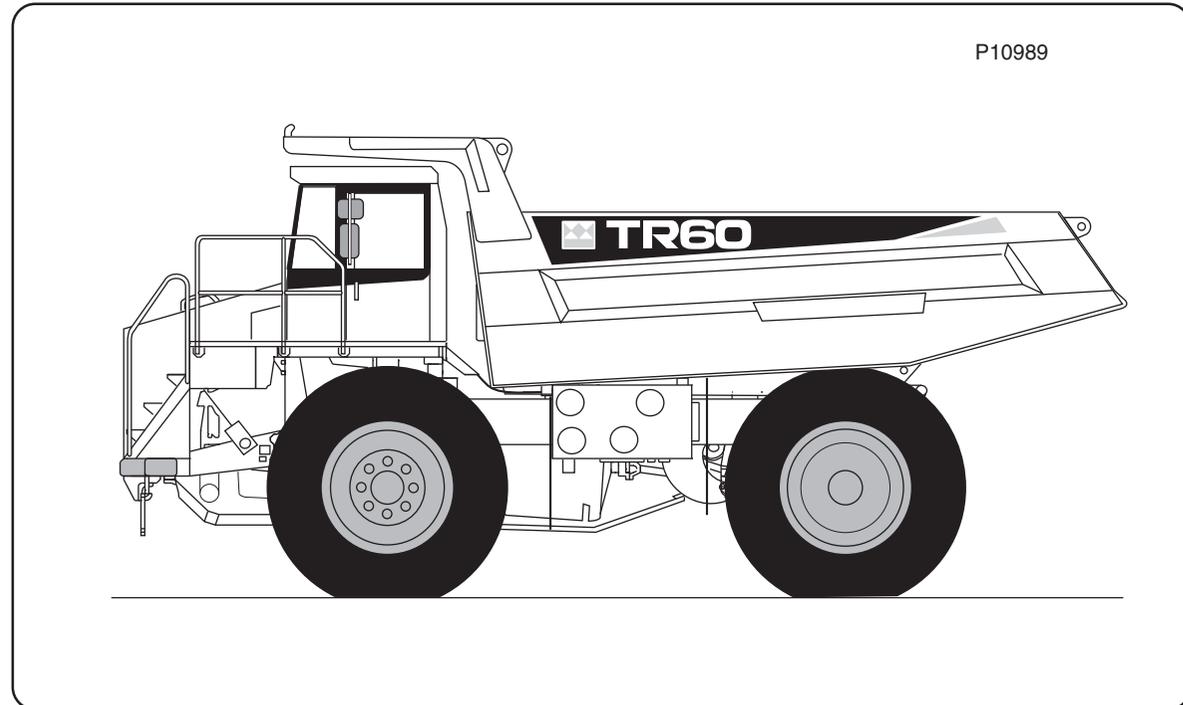

# TR60 Off-Highway Truck

(Cummins QSK19-C650 Tier 3 and Allison M6610AR Trans)

**Serial Nos. T8821011 and above**

Date: July 2006

*Revised: 8th September 2010*

Product: 2006-2010 TEREX TR60 Off-Highway Truck Workshop Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/2006-2010-terex-tr60-off-highway-truck-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 420 pages at:  
<https://www.arepairmanual.com/downloads/2006-2010-terex-tr60-off-highway-truck-workshop-parts-manual/>



## **WARRANTY ON PARTS AND ATTACHMENTS**

Terex Equipment Limited warrants that for a period of 12 months or unlimited hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

\* \* \* \* \*

### **SOLE WARRANTY**

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

## INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

**SECTION 100 - CHASSIS**

**SECTION 140 - FRONT AXLE GROUP**

**SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.  
**EXAMPLE - 220-0120.**

**SERIAL NUMBERS** - Each Parts Book covers a particular range of unit Serial Numbers.

**It is important that unit Serial Numbers are quoted on all orders for Parts.**

**PARTS LISTS** - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

**ILLUSTRATIONS** - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

---

**INDENTATIONS** - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.  
2 9058512 . Shaft  
3 9024169 . Ring  
4 9058132 . Control Assy.  
5 9058135 . . Spring  
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

**NOTES** - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

**ABBREVIATIONS** - The abbreviations in this book have the following meanings -

Amps .....	Amperes	Hsg .....	Housing	N.I .....	Not Illustrated
As R .....	As Required	I.D .....	Inside Diameter	N.L.A .....	No Longer Available
Assy .....	Assembly	L.H .....	Left Hand	N.S.S .....	Not Sold Separately
Brkt .....	Bracket	L.W .....	Lockwasher	O.D .....	Outside Diameter
Cad-Pltd .....	Cadium Plated	Lg .....	Long	Pr .....	Pair
Comm .....	Commencement of production	Lkg .....	Linkage	P.T.O .....	Power-Take-Off
E.S.N .....	Elastic Stop Nut	Mtg .....	Mounting	R.H .....	Right Hand
Ftgs .....	Fittings	N.C .....	Note Code	Std .....	Standard



# Truck



## STANDARD SECTIONS

	<b>CHASSIS</b>	<b>100</b>		<b>FUEL SYSTEM</b>	<b>200</b>
	<b>ENGINE</b>	<b>110</b>		<b>COOLING SYSTEM</b>	<b>210</b>
	<b>TRANSMISSION</b>	<b>120</b>		<b>STEERING SYSTEM</b>	<b>220</b>
	<b>DRIVELINE</b>	<b>130</b>		<b>BODY SYSTEM</b>	<b>230</b>
	<b>FRONT AXLE</b>	<b>140</b>		<b>BRAKING SYSTEM</b>	<b>250</b>
	<b>REAR AXLE</b>	<b>160</b>		<b>CAB</b>	<b>260</b>
	<b>BRAKE PARTS</b>	<b>165</b>		<b>BODY</b>	<b>270</b>
	<b>SUSPENSION SYSTEM</b>	<b>180</b>		<b>DECALS</b>	<b>290</b>
	<b>ELECTRICAL SYSTEM</b>	<b>190</b>		<b>MISCELLANEOUS</b>	<b>300</b>

TABLE OF CONTENTS FOR MODEL TR60T3 QSK19C ENG

FROM SERIAL NO T8821011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 100</b>			
<b>CHASSIS</b>			
100-0010-8821	CHASSIS	T8821011 TO T8821254	R1 01/09
<b>100-0010-8821</b>	<b>CHASSIS</b>	<b>T8821255</b>	<b>09/10</b>
100-0040-8821	HOOD AND MOUNTING		
100-0070-8821	FENDERS AND MOUNTING	T8821011 TO T8821226	
100-0070-8821	FENDERS AND MOUNTING	T8821227 TO T8821254	02/09
<b>100-0070-8821</b>	<b>FENDERS AND MOUNTING</b>	<b>T8821255</b>	<b>09/10</b>
100-0090-8821	LADDERS AND HANDRAILS	T8821011 TO T8821254	
<b>100-0090-8821</b>	<b>LADDERS AND HANDRAILS</b>	<b>T8821255</b>	<b>09/10</b>
100-0100-8821	RADIATOR GUARD AND MOUNTING	T8821011 TO T8821240	
<b>100-0100-8821</b>	<b>RADIATOR GUARD AND MOUNTING</b>	<b>T8821241</b>	<b>R1 09/10</b>
100-0140-8821	MUDGUARDS		
<b>SECTION 110</b>			
<b>ENGINE</b>			
110-0030-8821	ENGINE AND MOUNTING		R2 08/07
110-0050-8821	AIR CLEANER		
110-0060-8821	AIR CLEANER PIPES AND HOSES		R1 06/08
110-0130-8821	POWER TAKEOFF-ENG		
<b>SECTION 120</b>			
<b>TRANSMISSION</b>			
120-0010-8821	TRANSMISSION MOUNTING		
120-0020-8821	TRANSMISSION BREAKDOWN		
120-0050-8821	CONTROL VALVE		
120-0070-8821	SHIFT CONTROL		
120-0090-8821	POWER TAKEOFF-TRANS		
120-0100-8821	FILTER		
120-0110-8821	OIL LINES-TRANSMISSION		
120-0190-8821	RETARDER CONTROL LINES-HYD		R2 02/09
120-0200-8821	FRONT COVER & CONVERTER GROUP		
120-0210-8821	CONVERTER HOUSING GROUP		
120-0220-8821	OIL PUMP		
120-0230-8821	FILTER ADAPT/REGULATOR VALVES		
120-0240-8821	LOCKUP VALVE		
120-0260-8821	RETARDER GROUP		
120-0270-8821	RETARDER CONTROL VALVE		
120-0280-8821	SPLITTER GEARING AND CLUTCHES		
120-0290-8821	MAIN HOUSING GROUP		
120-0300-8821	HIGH RANGE GEARING & CLUTCHES		
120-0310-8821	INTER RANGE GEARING & CLUTCHES		
120-0320-8821	LOW RANGE GEARING & CLUTCHES		
120-0330-8821	REV RANGE GEARING & CLUTCHES		
120-0340-8821	REAR COVER GROUP		

## TABLE OF CONTENTS FOR MODEL TR60T3 QSK19C ENG

FROM SERIAL NO T8821011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 130</b>	<b>DRIVELINE</b>		
130-0010-8821	FRONT DRIVELINE		
130-0020-8821	REAR DRIVELINE		
<b>SECTION 140</b>	<b>FRONT AXLE</b>		
140-0040-8821	WHEEL, RIM AND TYRE-FRONT		R1 03/10
<b>SECTION 160</b>	<b>REAR AXLE</b>		
160-0020-8821	DIFFERENTIAL-REAR	T8821011 TO T8821028	
160-0020-8821	DIFFERENTIAL-REAR	T8821029	R1 04/09
160-0030-8821	AXLE GROUP-REAR		R1 11/06
160-0040-8821	PLANETARY GEARING-REAR		
160-0050-8821	WHEEL, RIM AND TYRE-REAR		R1 03/10
<b>SECTION 165</b>	<b>BRAKE PARTS</b>		
165-0020-8821	BRAKE PARTS-FRONT WHEEL-RIGIDS		R1 09/09
165-0030-8821	BRAKE PARTS-REAR WHEEL-RIGIDS		R3 07/09
<b>SECTION 180</b>	<b>SUSPENSION SYSTEM</b>		
180-0030-8821	FRONT RIDE CYLINDER	T8821011 TO T8821167	R1 02/08
180-0030-8821	FRONT RIDE CYLINDER	T8821168	06/08
180-0050-8821	REAR RIDE CYLINDER		
<b>SECTION 190</b>	<b>ELECTRICAL SYSTEM</b>		
190-0010-8821	TERMINALS		
190-0011-8821	CONNECTORS		
190-0030-8821	CABLES/HARNESSES-CAB		
190-0040-8821	CABLES/HARNESSES-CHASS/ENG		R3 10/09
190-0070-8821	BATTERY AND CABLES		
190-0080-8821	BATTERY MOUNTING		
190-0100-8821	ELECTRICAL LIGHTING SYSTEM		R2 03/09
190-0110-8821	ALTERNATOR		
190-0120-8821	STARTER MOTOR		
190-0270-8821	SWITCHES AND SENSORS		R2 10/09
190-0300-8821	RADIO CASSETTE AND SPEAKERS		R1 04/09
190-0310-8821	ELECTRICAL HORN		
190-0330-8821	CCTV REAR VIEW SYSTEM	T8821227	02/09

## TABLE OF CONTENTS FOR MODEL TR60T3 QSK19C ENG

FROM SERIAL NO T8821011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 200</u></b>			
<b><u>FUEL SYSTEM</u></b>			
200-0010-8821	FUEL TANK AND MOUNTING	T8821011 TO T8821240	
200-0010-8821	FUEL TANK AND MOUNTING	T8821241	R1 03/10
200-0040-8821	FUEL LINES		R1 11/06
200-0050-8821	ACCELERATOR LINKAGE	T8821011 TO T8821144	
200-0050-8821	ACCELERATOR LINKAGE	T8821145 TO T8821240	10/07
200-0050-8821	ACCELERATOR LINKAGE	T8821241	03/10
<b><u>SECTION 210</u></b>			
<b><u>COOLING SYSTEM</u></b>			
210-0010-8821	RADIATOR ASSEMBLY		
210-0020-8821	RADIATOR MOUNTING	T8821011 TO T8821249	
<b>210-0020-8821</b>	<b>RADIATOR MOUNTING</b>	<b>T8821250</b>	<b>09/10</b>
210-0030-8821	RADIATOR PIPING		
210-0035-8821	CHARGE AIR COOLER & PIPING		
210-0040-8821	RADIATOR HEADER TANK AND HOSES		R3 11/08
210-0050-8821	OIL COOLER-DISC BRAKES		
210-0051-8821	OIL COOLER PIPING-DISC BRAKES		R4 01/08
210-0060-8821	OIL COOLER AND PIPING-TRANS		R1 05/07
<b><u>SECTION 220</u></b>			
<b><u>STEERING SYSTEM</u></b>			
<b>220-0010-8821</b>	<b>STEERING LINES</b>		<b>R2 09/10</b>
220-0015-8821	STEERING LINES FILTRATION		
220-0050-8821	PUMP-STEERING		
220-0060-8821	PUMP AND ACCUMULATOR MOUNTING		
220-0080-8821	ACCUMULATOR-STEERING	T8821011 TO T8821011	
220-0080-8821	ACCUMULATOR-STEERING	T8821012	R1 11/06
220-0090-8821	STEERING VALVE		
220-0110-8821	DOUBLE RELIEF VALVE		
220-0120-8821	STEERING CYLINDER	T8821011 TO T8821011	
220-0120-8821	STEERING CYLINDER	T8821012	R1 11/06
220-0130-8821	RELIEF VALVE-STEERING	T8821011 TO T8821048	
220-0130-8821	RELIEF VALVE-STEERING	T8821049	R1 03/10
220-0150-8821	FILTER-STEERING		
220-0190-8821	STEERING LINKAGE		R1 01/09
220-0230-8821	STEERING COLUMN MOUNTING		
<b><u>SECTION 230</u></b>			
<b><u>BODY SYSTEM</u></b>			
230-0020-8821	LINES AND FITTINGS-BODY HOIST		
230-0021-8821	SERVO CONTROL LINES-BODY		
230-0040-8821	TANK AND MOUNTING-BODY HOIST	T8821011 TO T8821226	R3 06/09
230-0040-8821	TANK AND MOUNTING-BODY HOIST	T8821227 TO T8821240	R2 07/09
230-0040-8821	TANK AND MOUNTING-BODY HOIST	T8821241	05/10

## TABLE OF CONTENTS FOR MODEL TR60T3 QSK19C ENG

FROM SERIAL NO T8821011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 230</b>	<b>BODY SYSTEM-CONTINUED</b>		
230-0050-8821	PUMP-BODY HOIST		R1 05/10
230-0060-8821	CONTROL VALVE-BODY HOIST		
230-0070-8821	CONTROL VALVE MOUNTING		
230-0081-8821	JOYSTICK-BODY CONTROL		
230-0090-8821	KICK-OVER VALVE		
230-0100-8821	KICK-OVER VALVE MOUNTING		
230-0120-8821	RELIEF VALVE		
230-0121-8821	PILOT SUPPLY VALVE		
230-0130-8821	HOIST CYLINDERS		R1 10/09
<b>SECTION 250</b>	<b>BRAKING SYSTEM</b>		
250-0020-8821	<b>BRAKE LINES-HYDRAULIC</b>		R2 09/10
250-0050-8821	BRAKE MANIFOLD/PAS VALVE		
250-0060-8821	BRAKE ACCUMULATOR		
250-0070-8821	TREADLE VALVE		
250-0090-8821	DIRECTIONAL CONTROL VALVE		
250-0100-8821	MONOBLOCK BRAKE VALVE		
250-0130-8821	RETARDER CONTROL VALVE-BRAKES		
250-0240-8821	FILTER ASSEMBLY-DISC BRAKE	T8821011 TO T8821030	
250-0240-8821	FILTER ASSEMBLY-DISC BRAKE	T8821031 TO T8821173	11/06
250-0240-8821	FILTER ASSEMBLY-DISC BRAKE	T8821174	06/08
<b>SECTION 260</b>	<b>CAB</b>		
260-0010-8821	CAB ASSEMBLY		R1 05/10
260-0011-8821	CAB CENTRE CONSOLE		
260-0015-8821	CAB MOUNTING		R1 05/07
260-0030-8821	CAB DOOR-LEFT HAND	T8821011 TO T8821144	R1 10/09
260-0030-8821	CAB DOOR-LEFT HAND	T8821145 TO T8821220	R1 10/09
260-0030-8821	CAB DOOR-LEFT HAND	T8821221	R1 10/09
260-0040-8821	CAB DOOR-RIGHT HAND		
260-0080-8821	SWITCHES AND INSTRUMENTS		R1 06/08
260-0090-8821	SEAT-DRIVER	T8821011 TO T8821044	
260-0090-8821	SEAT-DRIVER	T8821045	R2 03/10
260-0110-8821	SEAT-INSTRUCTOR	T8821011 TO T8821044	
260-0110-8821	SEAT-INSTRUCTOR	T8821045	01/08
260-0130-8821	AIR CONDITIONER/HEATER	T8821011 TO T8821144	
260-0130-8821	AIR CONDITIONER/HEATER	T8821145	02/08
260-0140-8821	HEATER LINES AND WIRING		
260-0145-8821	AIR CONDITIONER LINES		R1 06/08
260-0175-8821	MIRRORS-WIDE ANGLE (HANDRAILS)		02/09
260-0190-8821	WINDSCREEN WASHER	T8821227	


TABLE OF CONTENTS FOR MODEL TR60T3 QSK19C ENG

FROM SERIAL NO T8821011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 270</u></b>			
	<b><u>BODY</u></b>		
270-0010-8821	BODY ASSEMBLY		R3 06/08
270-0020-8821	EXHAUST HEATED BODY	T8821011 TO T8821104	
270-0020-8821	EXHAUST HEATED BODY	T8821105	R2 10/09
270-0080-8821	ROCK EJECTORS		
<b><u>SECTION 290</u></b>			
	<b><u>DECALS</u></b>		
290-0010-8821	DECALS-ENGLISH	T8821011 TO T8821067	
290-0010-8821	DECALS-ENGLISH (ISO)	T8821068	R2 04/09
290-0011-8821	DECALS-ENGLISH (ANSI)	T8821068	R2 04/09
290-0100-8821	WALKWAY SURFACES (ANTI-SLIP)		R1 05/07
<b><u>SECTION 300</u></b>			
	<b><u>MISCELLANEOUS</u></b>		
300-0040-8821	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-8821	POLYPROPELENE CLAMPS		
300-0200-8821	UNIT FILTERS AND ELEMENT KITS		R1 03/10

THIS PAGE IS INTENTIONALLY LEFT BLANK

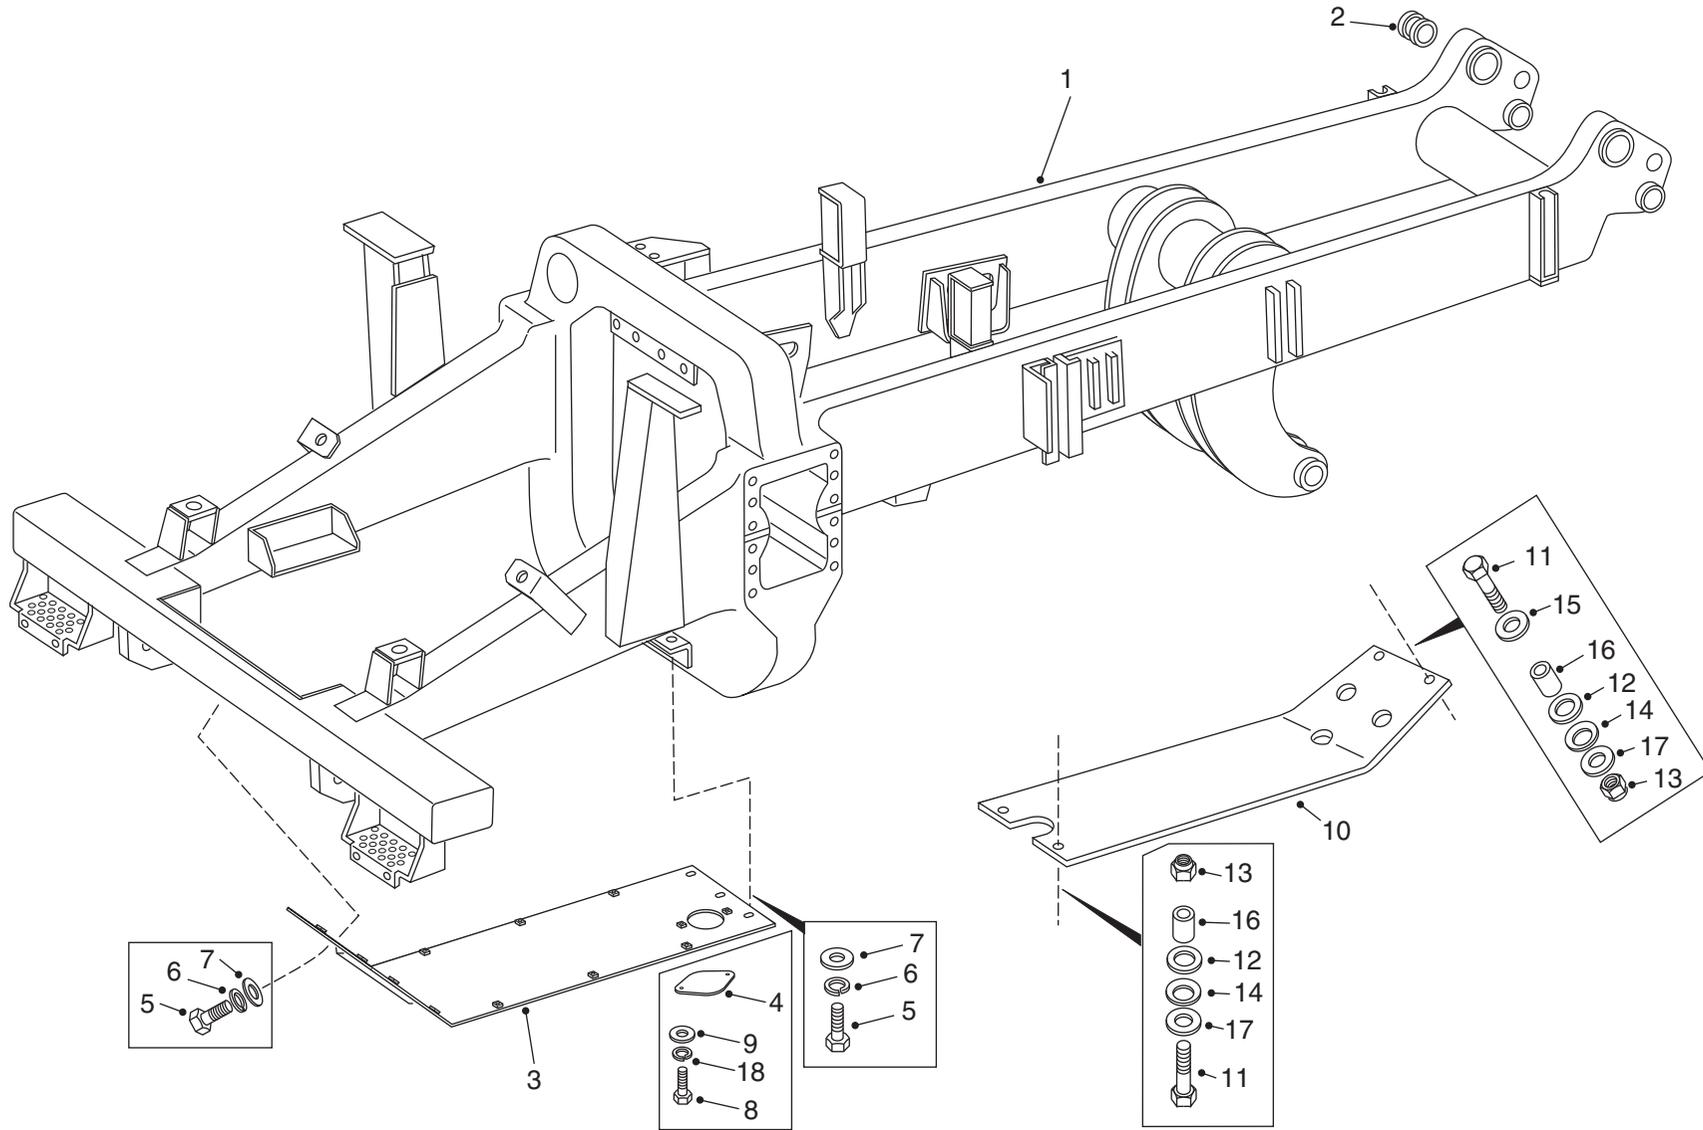

**100-0010-8821 CHASSIS**

FROM SERIAL NO. T8821011 TO T8821254


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15323490	FRAME ASSY		
002	002		09015394	.BUSHING		
003	001		15323187	SUMP GUARD ASSY	T8821011	T8821224
003	001		15347371	SUMP GUARD ASSY	T8821225	
004	001		15323006	COVER PLATE	T8821011	T8821224
005	006		00271612	BOLT		
006	006		00103332	LOCKWASHER		
007	006		00106268	WASHER		
008	002		00179885	BOLT	T8821011	T8821224
009	002		00106265	WASHER	T8821011	T8821224
010	001		15304072	GUARD-TRANSMISSION		
011	004		00271621	BOLT		
012	004		15303749	WASHER-HARDENED		
013	004		09355771	NUT		
014	004		15250985	SPRING-DISC		
015	004		09011226	WASHER		
016	004		15303750	SPACER		
017	004		15020053	WASHER		
018	002		00103329	LOCKWASHER	T8821011	T8821224

09/10 (ECN 110171)

100-0010-8821 CHASSIS  
FROM SERIAL NO. T8821255

DRAWING NO. P12486

P12486

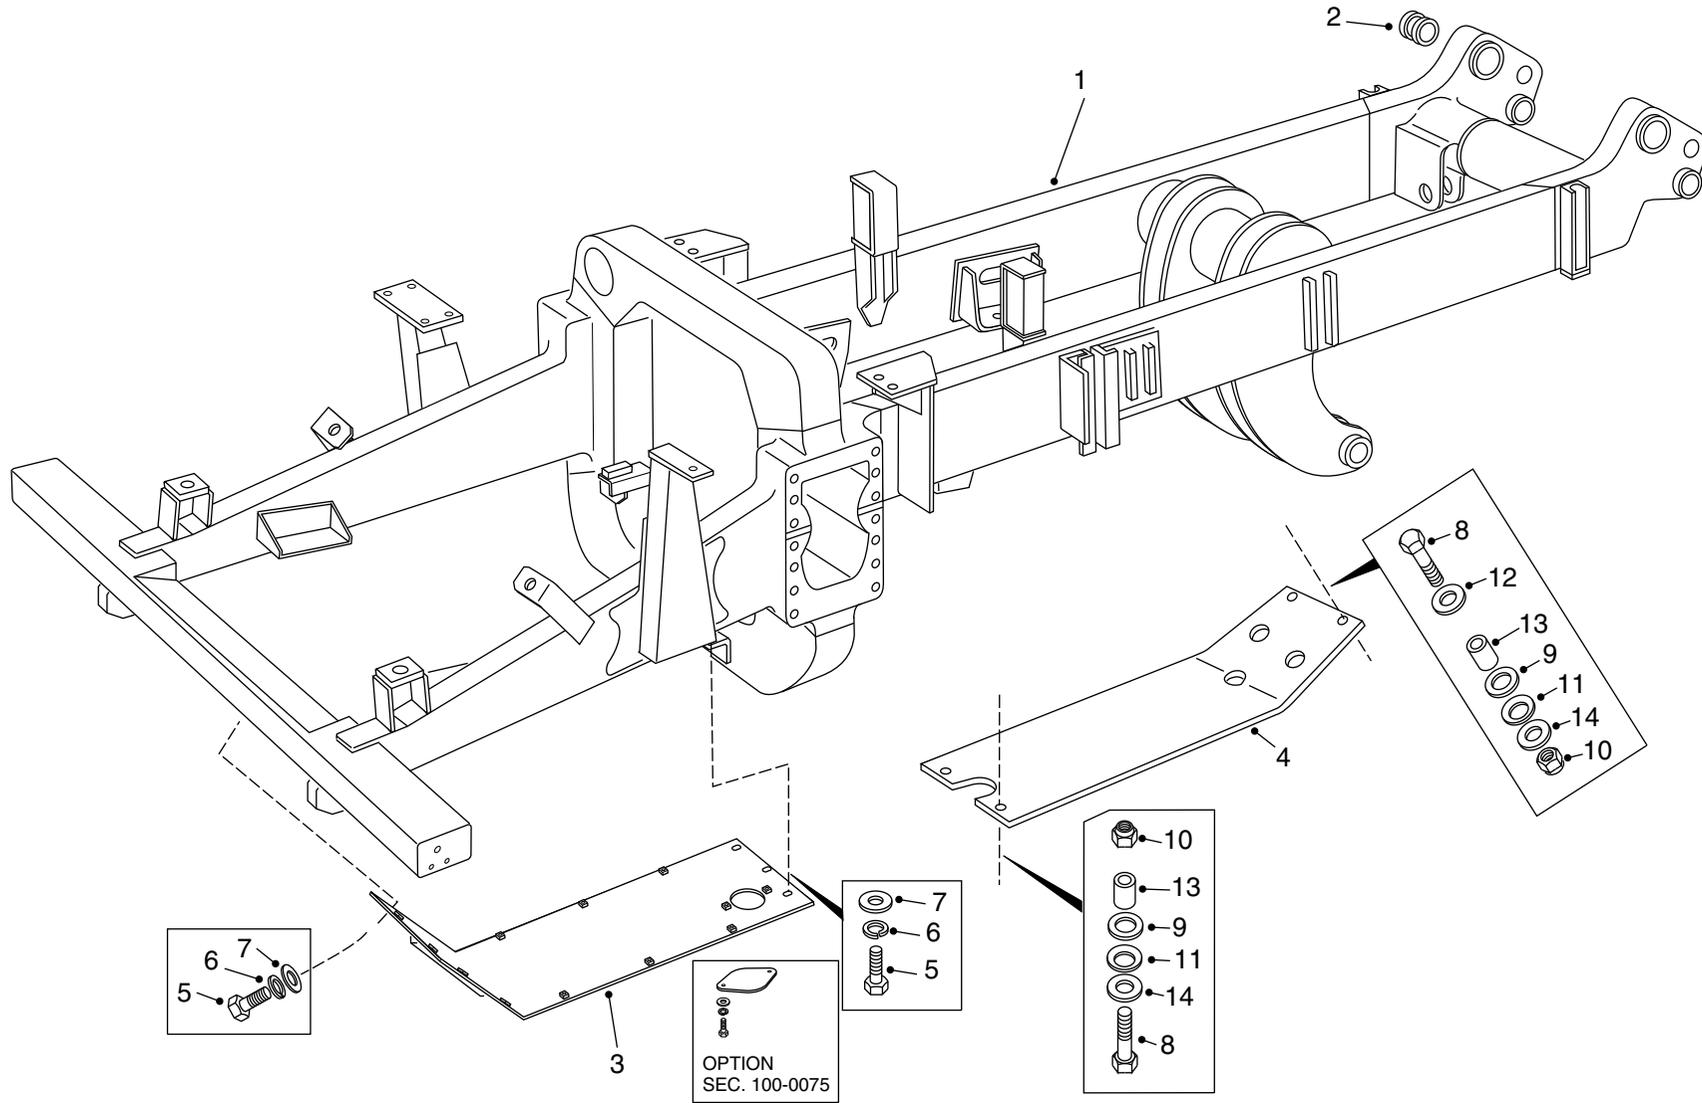


**100-0010-8821 CHASSIS**  
FROM SERIAL NO. T8821255

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15357704	FRAME ASSY		
002	002		09015394	.BUSHING		
003	001		15347371	SUMP GUARD ASSY		
004	001		15304072	GUARD-TRANSMISSION		
005	006		00271612	BOLT		
006	006		00103332	LOCKWASHER		
007	006		00106268	WASHER		
008	004		00271621	BOLT		
009	004		15303749	WASHER-HARDENED		
010	004		09355771	NUT		
011	004		15250985	SPRING-DISC		
012	004		09011226	WASHER		
013	004		15303750	SPACER		
014	004		15020053	WASHER		

**100-0040-8821 HOOD AND MOUNTING**  
FROM SERIAL NO. T8821011

DRAWING NO. P11953

P11953

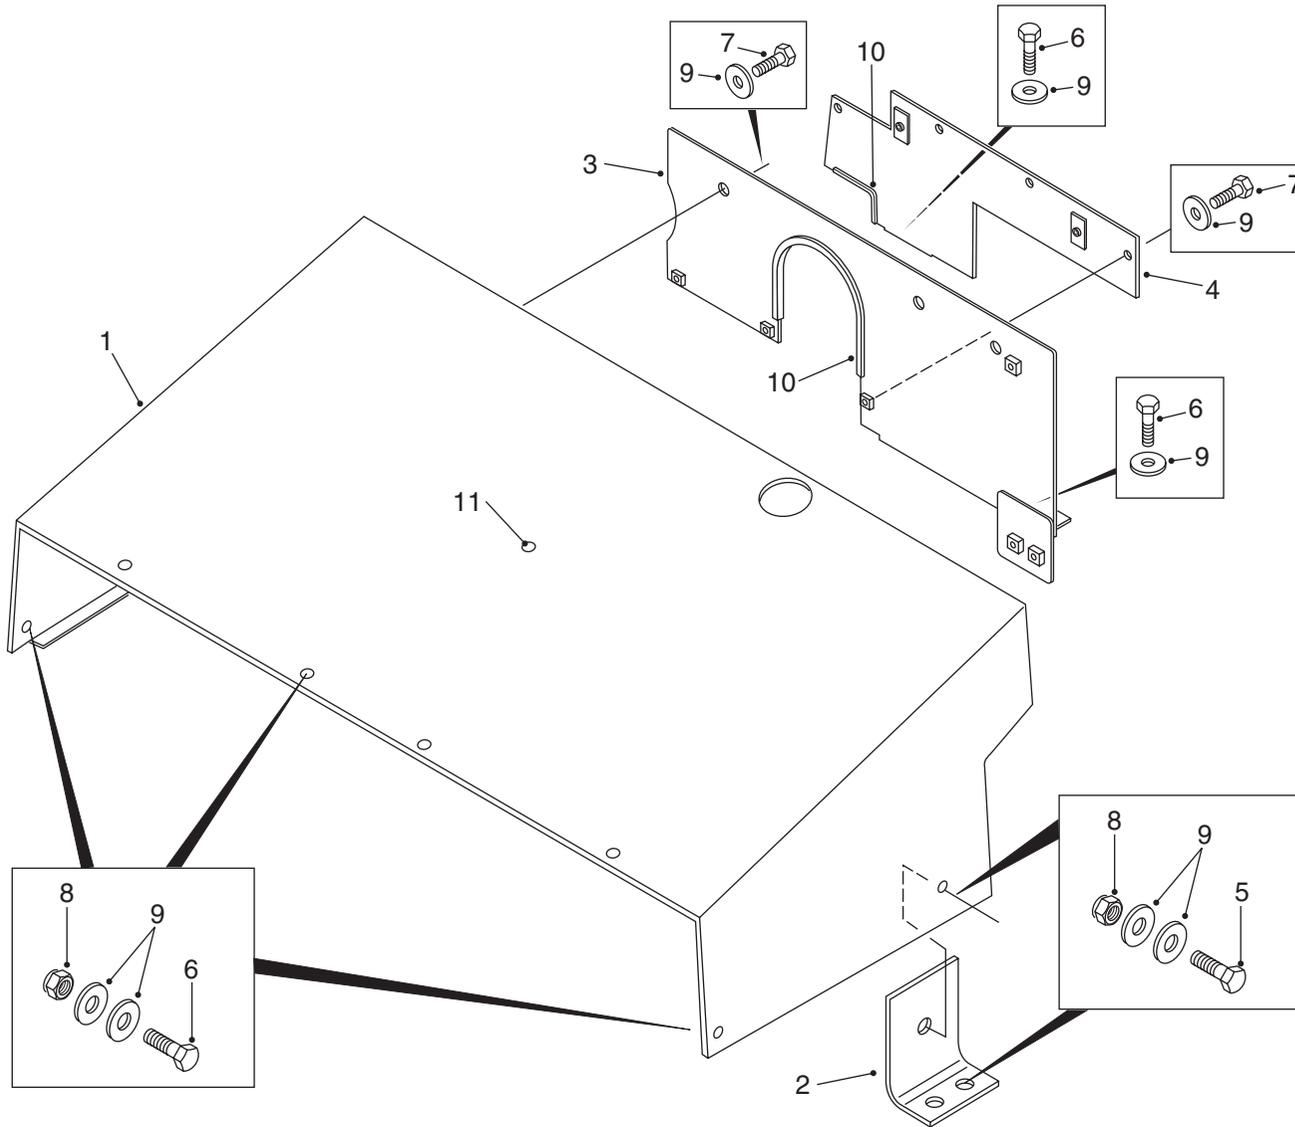


**100-0040-8821 HOOD AND MOUNTING**  
FROM SERIAL NO. T8821011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15323501	HOOD ASSY		
002	002		15252142	PLATE-HOOD MTG		
003	001		15323327	BAFFLE ASSY-HOOD		
004	001		15323341	BAFFLE ASSY-HOOD		
005	006		00179885	BOLT		
006	009		00179883	BOLT		
007	007		00179881	BOLT		
008	008		00120378	NUT		
009	027		09267949	WASHER-HARDENED		
010	ASR		09368561	BEADING-BULK		
011	001		09373552	BUTTON PLUG		

**100-0070-8821 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8821011 TO T8821226

DRAWING NO. P11954A


P11954

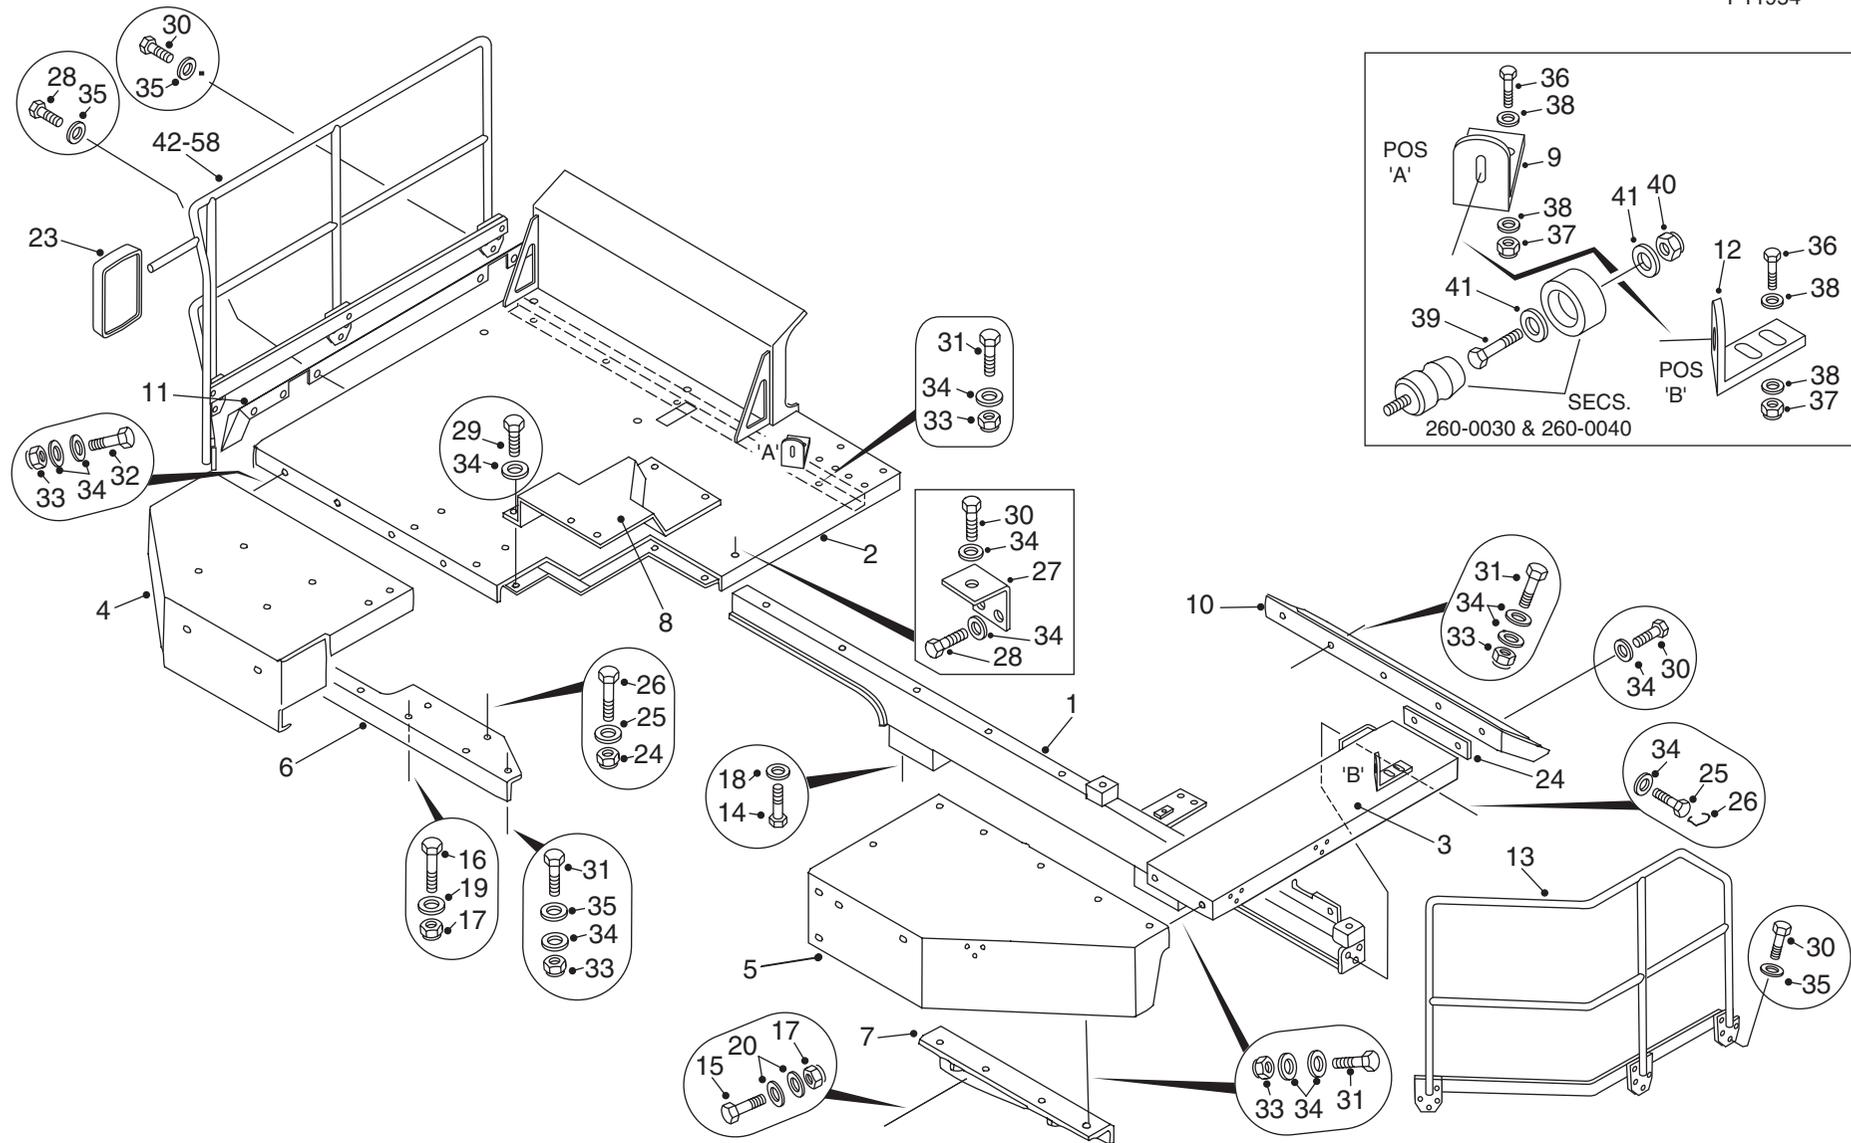

**100-0070-8821 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8821011 TO T8821226

DRAWING NO. P11954B

P11954

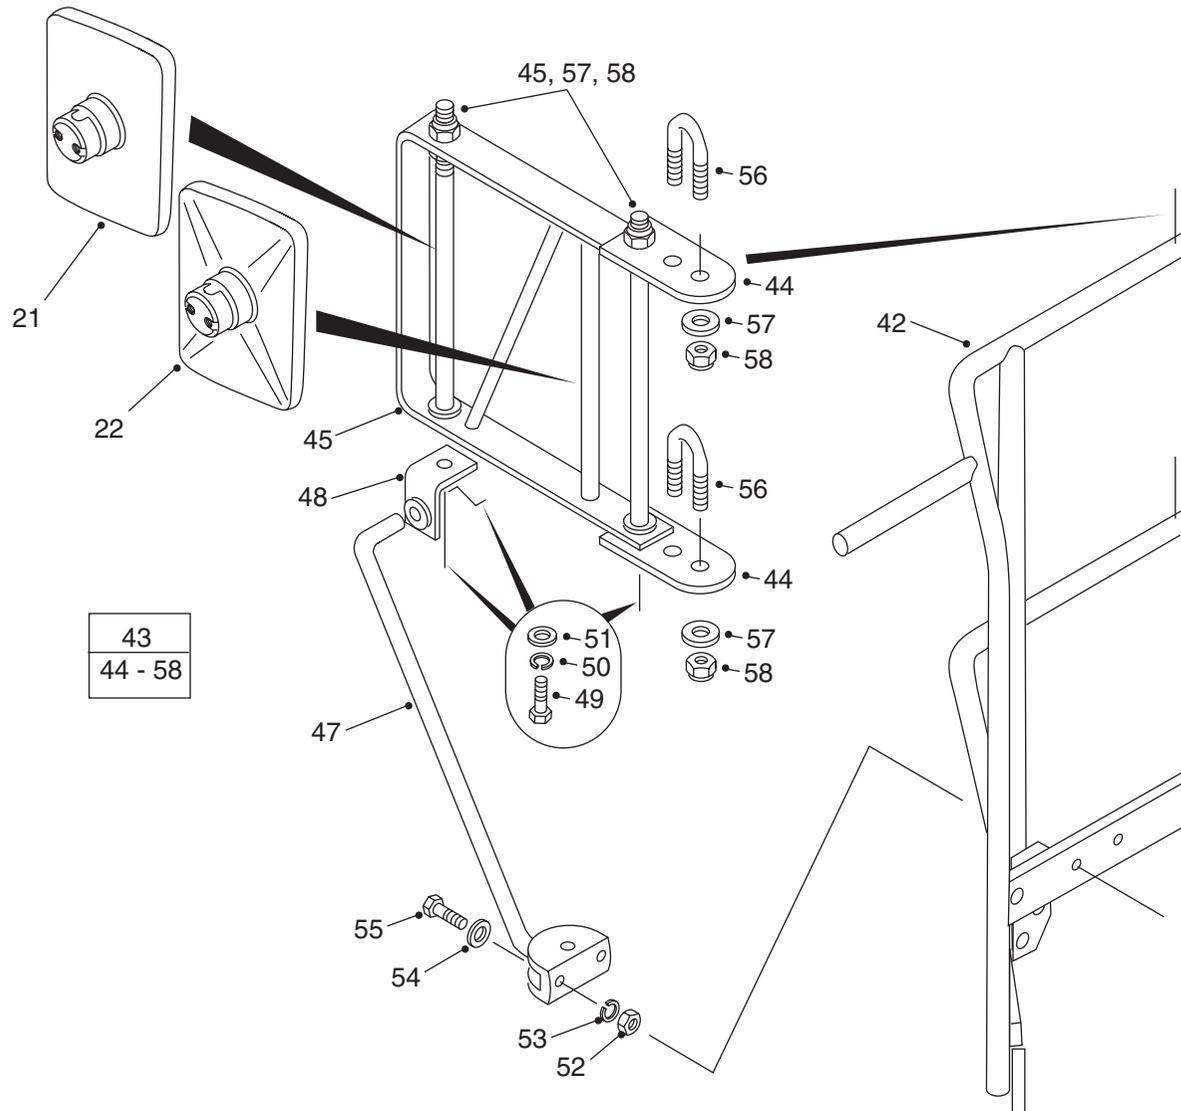




THIS PAGE IS INTENTIONALLY LEFT BLANK



**100-0070-8821 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8821227 TO T8821254

DRAWING NO. P12364B

P12364

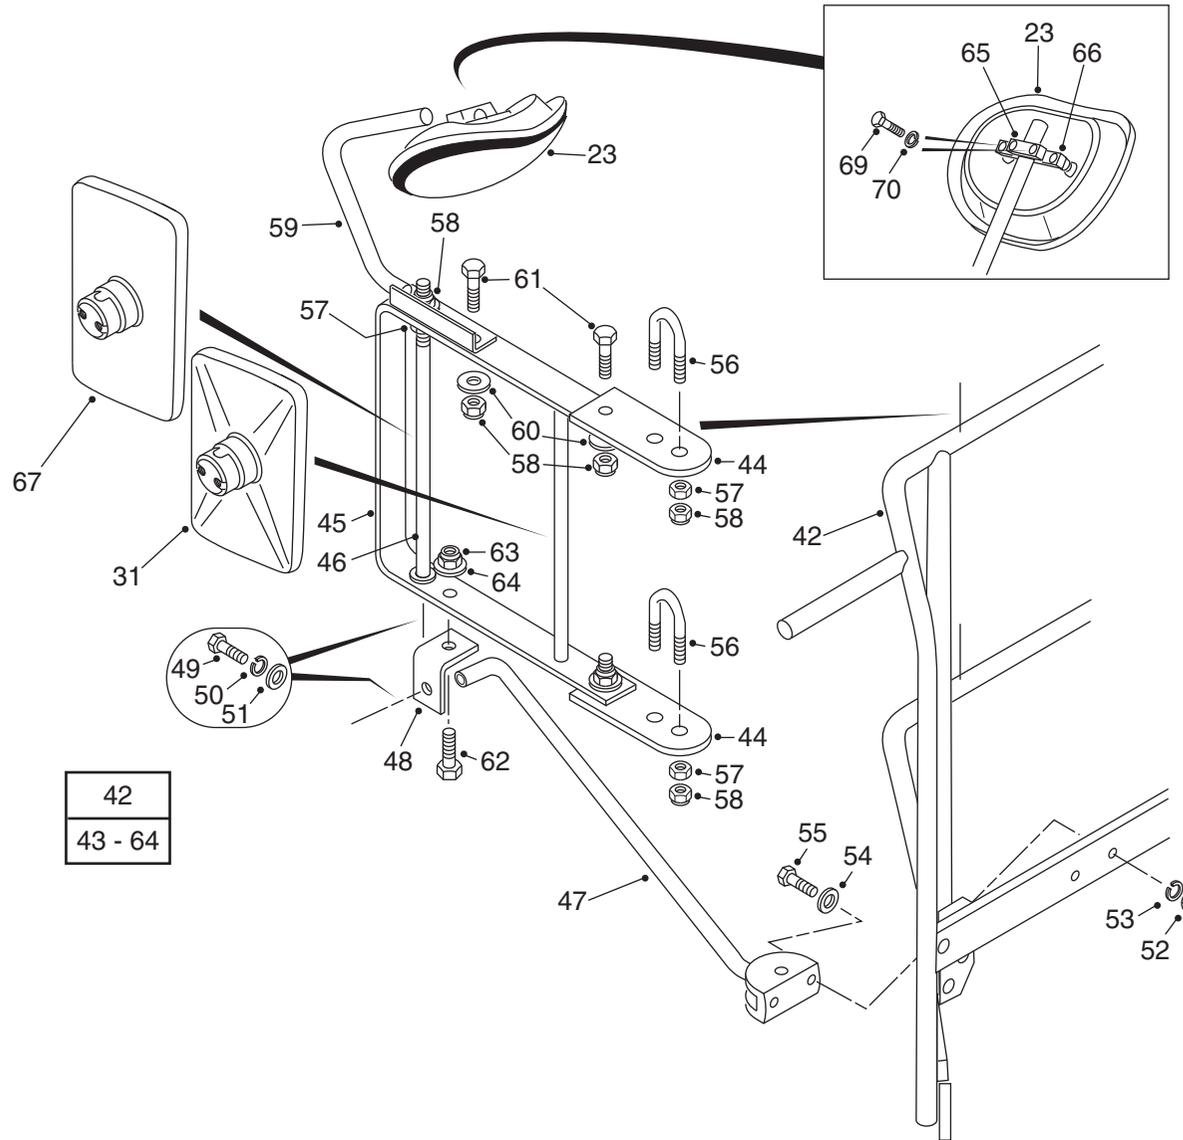




THIS PAGE IS INTENTIONALLY LEFT BLANK

09/10 (ECN 110171)

**100-0070-8821 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8821255

DRAWING NO. P12488A


P12488

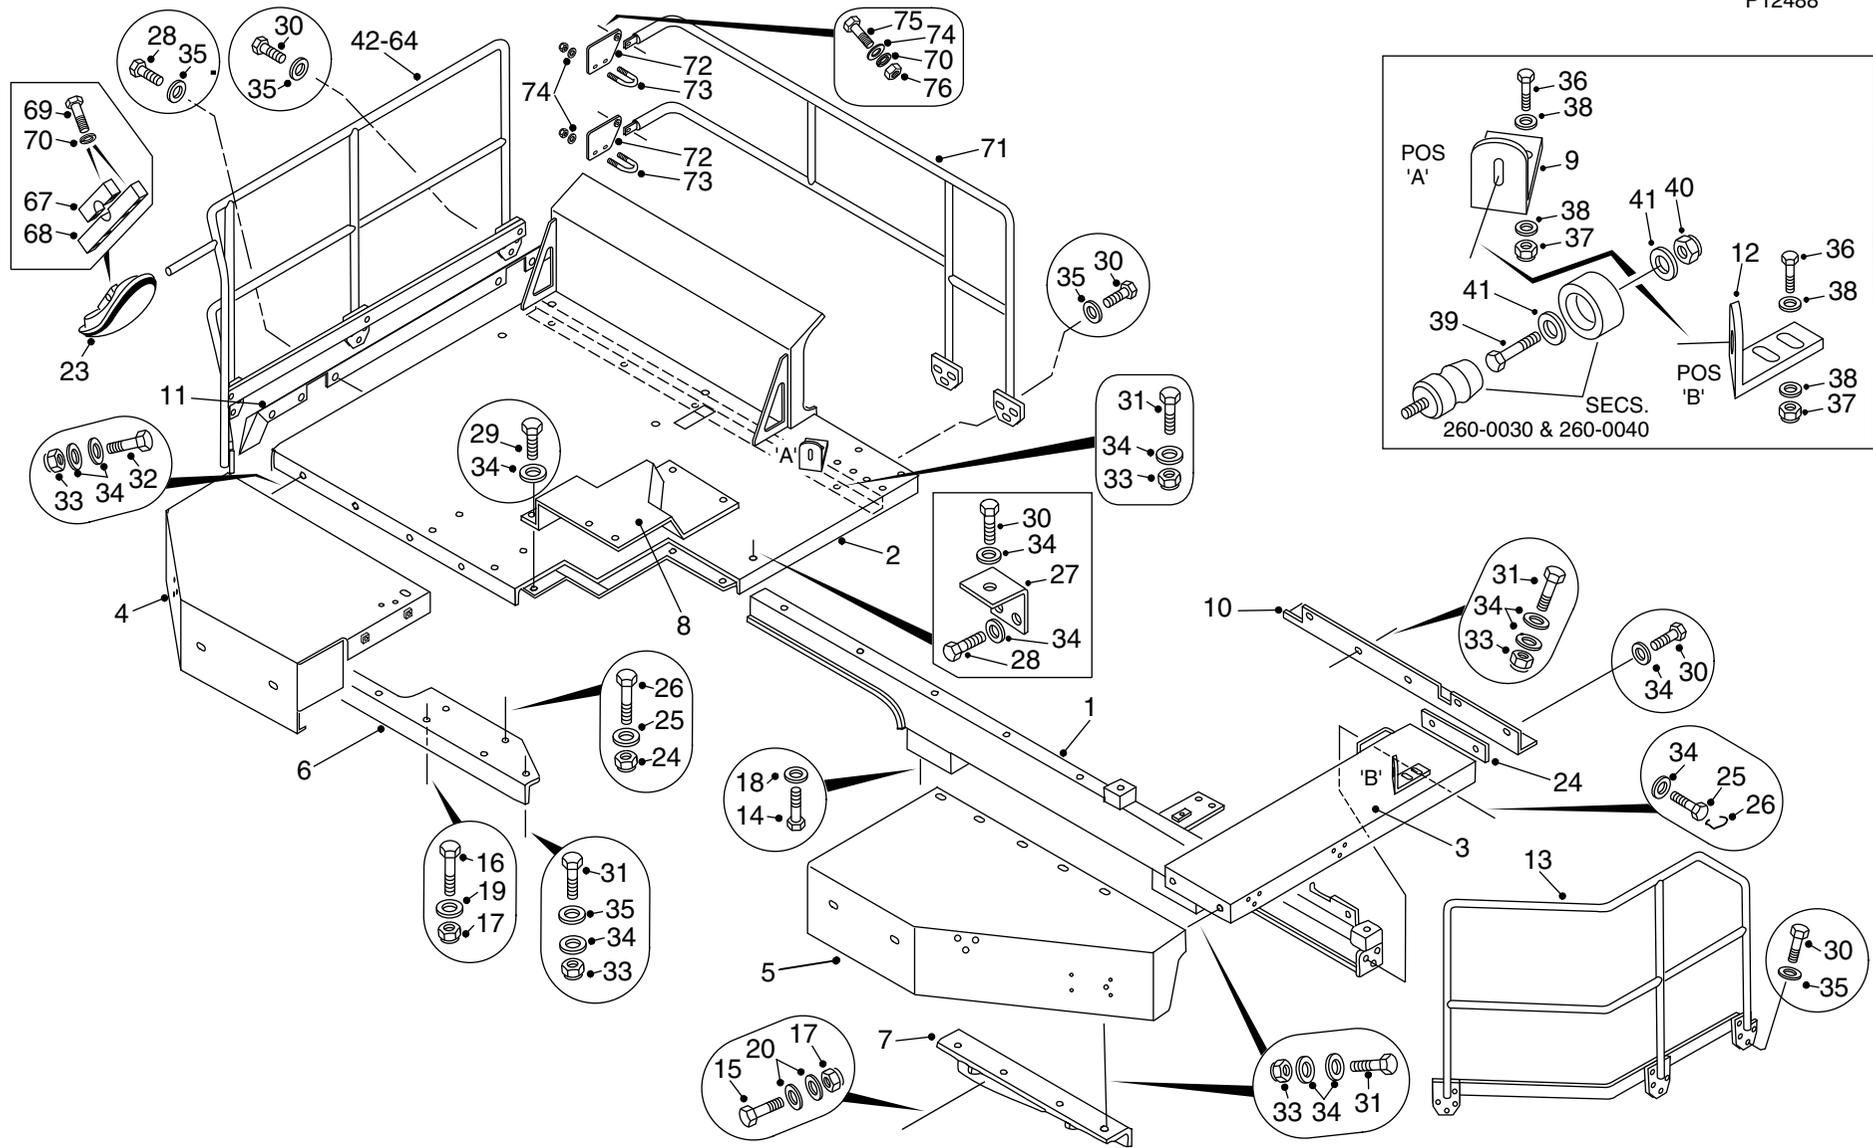

100-0070-8821 FENDERS AND MOUNTING  
FROM SERIAL NO. T8821255

DRAWING NO. P12488B

P12488

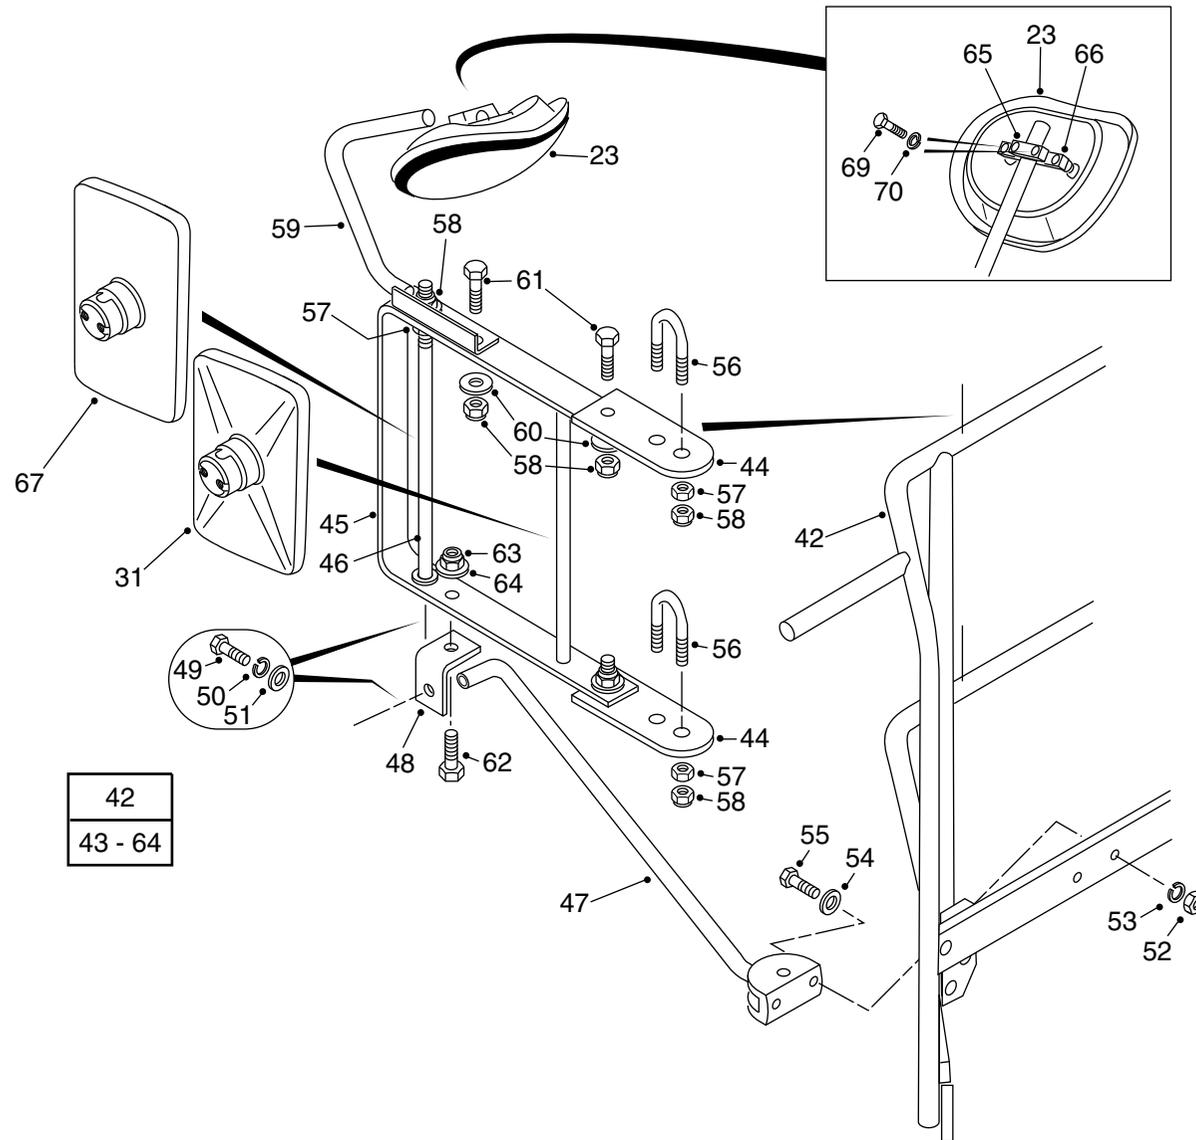

**100-0070-8821 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8821255

**100-0070-8821 FENDERS AND MOUNTING**  
FROM SERIAL NO. T8821255

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15323672	CAB CROSSMEMBER ASSY			041	004		07150620	WASHER		
002	001		15323623	PLATFORM ASSY-RH			042	001		15347164	HANDRAIL ASSY-RH		
003	001		15251926	PLATFORM ASSY-LH			043	001		15346823	.MIRROR ATTACHMENT ASSY		
004	001		15357645	FENDER ASSY-RH			044	002		15344208	..PLATE		
005	001		15357644	FENDER ASSY-LH			045	001		15344260	..MIRROR ARM ASSY		
006	001		15256827	SUPPORT-RH			046	002		15304663	..BAR-MIRROR MTG		
007	001		15247991	SUPPORT-LH			047	001		15304704	..ROD ASSY		
008	001		15323325	ENGINE ACCESS COVER			048	001		15344597	..BRACKET ASSY		
009	001		15331963	DOORSTOP-RH			049	003		00179820	..BOLT		
010	001		15348509	ANGLE SUPPORT			050	003		00103320	..LOCKWASHER		
011	001		15301189	EXTENSION-FENDER			051	003		00103340	..WASHER		
012	001		15302618	DOORSTOP-LH			052	002		00109084	..NUT		
013	001		15302681	HANDRAIL ASSY-LH			053	002		00103319	..LOCKWASHER		
014	004		09009275	BOLT			054	002		00103339	..WASHER		
015	006		00271612	BOLT			055	002		00179795	..BOLT		
016	002		00271614	BOLT			056	002		15302982	..U-BOLT		
017	008		09355771	NUT			057	002		00102639	..NUT		
018	004		09019631	WASHER-HARDENED			058	002		09354243	..LOCKNUT		
019	004		00106268	WASHER			059	001		15345088	..BRACKET		
020	008		09250715	WASHER-HARDENED			060	003		00103345	..WASHER		
021	001		15308693	MIRROR-EXTERIOR CONVEX			061	003		00271560	..BOLT		
022	001		09077400	MIRROR			062	001		06351030	..BOLT		
023	002		15343316	MIRROR-WIDE ANGLE			063	001		06471001	..LOCKNUT		
024	ASR		15244346	SPACER 0.125IN			064	001		07151020	..WASHER		
025	003		09262364	BOLT			065	001		15343295	BAR CLAMP		
026	ASR		09113457	LOCKWIRE			066	001		15343296	BAR-MIRROR MTG		
027	001		15302623	BENT PLATE			067	001		15345290	BAR CLAMP		
028	007		00179881	BOLT			068	001		15345289	BAR-MIRROR MTG		
029	003		00179883	BOLT			069	008		00181370	BOLT		
030	025		00179885	BOLT			070	011		00108580	LOCKWASHER		
031	022		00179887	BOLT			071	001		15359020	HANDRAIL REAR		
032	004		00179889	BOLT			072	002		15359027	SUPPORT PLATE		
033	022		00274209	LOCKNUT			073	002		15302982	U-CLAMP		
034	053		09267949	WASHER-HARDENED			074	008		09060202	WASHER-HDN		
035	034		09270000	WASHER-HARDENED			075	002		00179845	BOLT		
036	004		00179887	BOLT			076	002		00114503	NUT		
037	004		00274209	LOCKNUT									
038	008		09270000	WASHER-HARDENED									
039	002		06350625	BOLT									