

Product: 1998-2002 [CLICK HERE FOR TRACTOR TABLE OF CONTENTS](#) Off-Highway [CLICK HERE FOR OPTIONAL TABLE OF CONTENTS](#) Workshop Parts Manual
Full Download: <http://www.tractordownload.com/downloads/1998-2002-terex-tr60-off-highway-truck-workshop-parts-manual/>



TR60 Off-Highway Truck

(Cummins QSK19-C525 Powered)

Serial No. T7821001 through T7821121

Sample of manual. Download All 478 pages at:

<https://www.aresairmanual.com/downloads/1998-2002-terex-tr60-off-highway-truck-workshop-parts-manual/>

TEREX

Parts Book

[CLICK HERE TO RETURN TO MAIN LIBRARY INDEX](#)

**Part Number
15272780**

1 Dec 98
Revised Sept. 2002

PUBLISHED BY:
PRODUCT SUPPORT DEPARTMENT

TEREX EQUIPMENT LIMITED
MOTHERWELL, SCOTLAND

Product: 1998-2002 TEREX TR60 Off-Highway Truck Workshop Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/1998-2002-terex-tr60-off-highway-truck-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 478 pages at:
<https://www.arepairmanual.com/downloads/1998-2002-terex-tr60-off-highway-truck-workshop-parts-manual/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months after sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK



INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
 2 9058512 . Shaft
 3 9024169 . Ring
 4 9058132 . Control Assy.
 5 9058135 . . Spring
 6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

Amps Amperes
As R As Required
Assy Assembly
Brkt Bracket
Cad-Pltd Cadmium Plated
Comm Commencement of production
E.S.N Elastic Stop Nut
Ftgs Fittings

Hsg Housing
I.D Inside Diameter
L.H Left Hand
L.W Lockwasher
Lg Long
Lkg Linkage
Mtg Mounting
N.C Note Code

N.I Not Illustrated
N.L.A No Longer Available
N.S.S Not Sold Separately
O.D Outside Diameter
Pr Pair
P.T.O Power-Take-Off
R.H Right Hand
Std Standard



Truck



STANDARD SECTIONS



CHASSIS

100



ENGINE

110



TRANSMISSION

120



DRIVELINE

130



FRONT AXLE

140



REAR AXLE

160



BRAKE PARTS

165



SUSPENSION SYSTEM

180



ELECTRICAL SYSTEM

190



FUEL SYSTEM

200



COOLING SYSTEM

210



STEERING SYSTEM

220



BODY SYSTEM

230



BRAKING SYSTEM

250



CAB

260



BODY

270



DECALS

290



MISCELLANEOUS

300

TABLE OF CONTENTS FOR MODEL

TR60 QSK19C ENG

FROM SERIAL NO T7821001

REVISED 05/09/02

SECT - PAGE - PLI DESCRIPTION

SECTION 100 CHASSIS

100-0010-7821	CHASSIS	R2 01/00
100-0010-7821	CHASSIS	01/00
100-0040-7821	HOOD AND MOUNTING	R1 01/00
100-0070-7821	FENDERS AND MOUNTING	R1 01/00
100-0070-7821	FENDERS AND MOUNTING	R2 01/02
100-0090-7821	LADDERS AND HANDRAILS	
100-0100-7821	RADIATOR GUARD AND MOUNTING	R1 01/00
100-0100-7821	RADIATOR GUARD AND MOUNTING	R1 05/01
100-0140-7821	MUDGUARDS	R2 01/02

SECTION 110 ENGINE

110-0030-7821	ENGINE AND MOUNTING	R4 09/02
110-0050-7821	AIR CLEANER	
110-0060-7821	AIR CLEANER PIPES AND HOSES	R1 01/00
110-0130-7821	POWER TAKEOFF - ENG	R2 03/00

SECTION 120 TRANSMISSION

120-0010-7821	TRANSMISSION MOUNTING	R1 01/00
120-0010-7821	TRANSMISSION MOUNTING	R1 05/01
120-0020-7821	TRANSMISSION BREAKDOWN	R1 05/01
120-0020-7821	TRANSMISSION BREAKDOWN	R1 09/02
120-0050-7821	CONTROL VALVE	R1 05/01
120-0050-7821	CONTROL VALVE	05/01
120-0070-7821	SHIFT CONTROL	R2 05/01
120-0070-7821	SHIFT CONTROL	R1 01/02
120-0070-7821	SHIFT CONTROL	01/02
120-0090-7821	POWER TAKEOFF - TRANS	
120-0100-7821	FILTER	R1 05/01
120-0100-7821	FILTER	05/01
120-0110-7821	OIL LINES-TRANSMISSION	R1 01/00
120-0110-7821	OIL LINES-TRANSMISSION	01/00
120-0190-7821	RETARDER CONTROL LINES - HYD	R2 02/01
120-0200-7821	FRONT COVER & CONVERTER GROUP	R2 05/01
120-0200-7821	FRONT COVER & CONVERTER GROUP	05/01
120-0210-7821	CONVERTER HOUSING GROUP	R1 05/01
120-0210-7821	CONVERTER HOUSING GROUP	05/01
120-0220-7821	OIL PUMP	R1 05/01
120-0220-7821	OIL PUMP	05/01
120-0230-7821	FILTER ADAPT/REGULATOR VALVES	R1 05/01
120-0230-7821	FILTER ADAPT/REGULATOR VALVES	05/01

SECT - PAGE - PLI DESCRIPTION

SECTION 120 TRANSMISSION

120-0240-7821	LOCKUP VALVE	R1 05/01
120-0240-7821	LOCKUP VALVE	05/01
120-0250-7821	ATEC LOCKUP DROP OUT	R1 01/00
120-0250-7821	ATEC LOCKUP DROP OUT	01/00
120-0260-7821	RETARDER GROUP	R1 05/01
120-0260-7821	RETARDER GROUP	05/01
120-0270-7821	RETARDER CONTROL VALVE	R1 05/01
120-0270-7821	RETARDER CONTROL VALVE	05/01
120-0280-7821	SPLITTER GEARING AND CLUTCHES	R1 05/01
120-0280-7821	SPLITTER GEARING AND CLUTCHES	05/01
120-0290-7821	MAIN HOUSING GROUP	R1 05/01
120-0290-7821	MAIN HOUSING GROUP	05/01
120-0300-7821	HIGH RANGE GEARING & CLUTCHES	R1 05/01
120-0300-7821	HIGH RANGE GEARING & CLUTCHES	05/01
120-0310-7821	INTER RANGE GEARING & CLUTCHES	R1 05/01
120-0310-7821	INTER RANGE GEARING & CLUTCHES	05/01
120-0320-7821	LOW RANGE GEARING & CLUTCHES	R1 05/01
120-0320-7821	LOW RANGE GEARING & CLUTCHES	05/01
120-0330-7821	REV RANGE GEARING & CLUTCHES	R1 05/01
120-0330-7821	REV RANGE GEARING & CLUTCHES	05/01
120-0340-7821	REAR COVER GROUP	R1 05/01
120-0340-7821	REAR COVER GROUP	05/01

SECTION 130 DRIVELINE

130-0010-7821	FRONT DRIVELINE	
130-0020-7821	REAR DRIVELINE	

SECTION 140 FRONT AXLE

140-0040-7821	WHEEL, RIM AND TYRE-FRONT	R1 08/01
---------------	---------------------------	----------

SECTION 160 REAR AXLE

160-0020-7821	DIFFERENTIAL-REAR	R3 05/01
160-0030-7821	AXLE GROUP-REAR	R1 2-99
160-0030-7821	AXLE GROUP-REAR	2-99
160-0040-7821	PLANETARY GEARING-REAR	R1 01/02
160-0040-7821	PLANETARY GEARING-REAR	01/02
160-0050-7821	WHEEL, RIM AND TYRE-REAR	R2 09/02

TABLE OF CONTENTS FOR MODEL

TR60 QSK19C ENG

FROM SERIAL NO. T7821001

REVISED 05/09/02

SECT - PAGE - PLI DESCRIPTION

SECTION 165 BRAKE PARTS

165-0020-7821	BRAKE PARTS-FRONT WHEEL-RIGIDS	
165-0030-7821	BRAKE PARTS-REAR WHEEL-RIGIDS	R1 2-99
165-0030-7821	BRAKE PARTS-REAR WHEEL-RIGIDS	R1 01/00

SECTION 180 SUSPENSION SYSTEM

180-0030-7821	FRONT RIDE CYLINDER	
180-0050-7821	REAR RIDE CYLINDER	

SECTION 190 ELECTRICAL SYSTEM

190-0010-7821	TERMINALS	
190-0011-7821	CONNECTORS	
190-0030-7821	CABLES/HARNESSES-CAB	R1 01/00
190-0030-7821	CABLES/HARNESSES-CAB	R1 06/00
190-0030-7821	CABLES/HARNESSES-CAB	R1 05/01
190-0030-7821	CABLES/HARNESSES-CAB	R1 01/02
190-0030-7821	CABLES/HARNESSES-CAB	01/02
190-0040-7821	CABLES/HARNESSES-CHASS/ENG	R1 01/00
190-0040-7821	CABLES/HARNESSES-CHASS/ENG	R1 05/01
190-0040-7821	CABLES/HARNESSES-CHASS/ENG	05/01
190-0070-7821	BATTERY AND CABLES	R2 05/01
190-0070-7821	BATTERY AND CABLES	R1 09/02
190-0080-7821	BATTERY MOUNTING	R1 05/01
190-0080-7821	BATTERY MOUNTING	05/01
190-0100-7821	ELECTRICAL LIGHTING SYSTEM	R1 01/00
190-0100-7821	ELECTRICAL LIGHTING SYSTEM	01/00
190-0110-7821	ALTERNATOR AND MOUNTING	01/00
190-0120-7821	STARTER MOTOR	01/00
190-0210-7821	REVERSE ALARM	R1 01/00
190-0270-7821	SWITCHES AND SENSORS	R3 05/01
190-0300-7821	RADIO CASSETTE AND SPEAKERS	R1 01/02
190-0300-7821	RADIO CASSETTE AND SPEAKERS	01/02
190-0310-7821	ELECTRICAL HORN	

SECTION 200 FUEL SYSTEM

200-0010-7821	FUEL TANK AND MOUNTING	R1 03/00
200-0040-7821	FUEL LINES	R1 2-99
200-0050-7821	ACCELERATOR LINKAGE	

SECT - PAGE - PLI DESCRIPTION

SECTION 210 COOLING SYSTEM

210-0010-7821	RADIATOR ASSEMBLY	
210-0020-7821	RADIATOR MOUNTING	R1 01/00
210-0030-7821	RADIATOR PIPING	R2 09/02
210-0040-7821	RADIATOR HEADER TANK AND HOSES	
210-0050-7821	OIL COOLER-DISC BRAKES	R1 2-99
210-0051-7821	OIL COOLER PIPING-DISC BRAKES	R5 09/02
210-0060-7821	OIL COOLER AND PIPING-TRANS	R1 01/00
210-0060-7821	OIL COOLER AND PIPING-TRANS	R2 01/02

SECTION 220 STEERING SYSTEM

220-0010-7821	STEERING LINES	R4 09/02
220-0015-7821	STEERING LINES FILTRATION	R1 01/00
220-0040-7821	TANK AND MOUNTING-STEERING	R2 09/02
220-0050-7821	PUMP-STEERING	
220-0060-7821	PUMP AND ACCUMULATOR MOUNTING	
220-0080-7821	ACCUMULATOR-STEERING	
220-0090-7821	STEERING VALVE	R1 01/02
220-0110-7821	DOUBLE RELIEF VALVE	
220-0120-7821	STEERING CYLINDER	R1 01/00
220-0120-7821	STEERING CYLINDER	01/00
220-0130-7821	RELIEF VALVE-STEERING	
220-0150-7821	FILTER-STEERING	01/00
220-0190-7821	STEERING LINKAGE	R3 05/01
220-0190-7821	STEERING	05/01
220-0230-7821	STEERING COLUMN MOUNTING	R1 06/00
220-0230-7821	STEERING COLUMN MOUNTING	R1 05/01
220-0230-7821	STEERING COLUMN MOUNTING	05/01

SECTION 230 BODY SYSTEM

230-0020-7821	LINES AND FITTINGS-BODY HOIST	R3 01/02
230-0021-7821	SERVO CONTROL LINES-BODY	R2 05/01
230-0040-7821	TANK AND MOUNTING-BODY HOIST	R1 09/02
230-0041-7821	BREATHER LINE-HYDRAULIC TANKS	
230-0050-7821	PUMP BODY HOIST	
230-0060-7821	CONTROL VALVE-BODY HOIST	
230-0070-7821	CONTROL VALVE MOUNTING	
230-0081-7821	JOYSTICK-BODY CONTROL	
230-0090-7821	KICK-OVER VALVE	
230-0100-7821	KICK-OVER VALVE MOUNTING	
230-0120-7821	RELIEF VALVE	

TABLE OF CONTENTS FOR MODEL

TR60 QSK19C ENG

FROM SERIAL NO. T7821001

REVISED 05/09/02

SECT - PAGE - PLI DESCRIPTION

SECTION 230 BODY SYSTEM

230-0121-7821 PILOT SUPPLY VALVE
 230-0130-7821 HOIST CYLINDERS R1 03/00

SECTION 250 BRAKING SYSTEM

250-0020-7821 BRAKE LINES-HYDRAULIC R1 01/00
 250-0020-7821 BRAKE LINES-HYDRAULIC R2 01/02
 250-0050-7821 BRAKE MANIFOLD/PAS VALVE R1 06/00
 250-0050-7821 BRAKE MANIFOLD/PAS VALVE 06/00
 250-0060-7821 BRAKE ACCUMULATOR
 250-0070-7821 TREADLE VALVE R1 05/01
 250-0090-7821 DIRECTIONAL CONTROL VALVE
 250-0100-7821 MONOBLOCK BRAKE VALVE
 250-0130-7821 RETARDER CONTROL VALVE-BRAKES R1 01/00
 250-0240-7821 FILTER ASSEMBLY-DISC BRAKE

SECTION 260 CAB

260-0010-7821 CAB ASSEMBLY R1 01/00
 260-0010-7821 CAB ASSEMBLY R1 07/01
 260-0010-7821 CAB ASSEMBLY 07/01
 260-0011-7821 CAB CENTRE CONSOLE R1 05/01
 260-0011-7821 CAB CENTRE CONSOLE 05/01
 260-0015-7821 CAB MOUNTING R1 01/00
 260-0015-7821 CAB MOUNTING R1 05/01
 260-0030-7821 CAB DOOR-LEFT HAND R1 01/00
 260-0040-7821 CAB DOOR-RIGHT HAND R1 01/00
260-0080-7821 SWITCHES AND INSTRUMENTS R3 09/02
260-0080-7821 SWITCHES AND INSTRUMENTS R2 09/02
260-0080-7821 SWITCHES AND INSTRUMENTS R3 09/02
260-0080-7821 SWITCHES AND INSTRUMENTS R1 09/02
 260-0090-7821 SEAT-DRIVER R2 05/01
 260-0090-7821 SEAT-DRIVER R1 01/02
 260-0110-7821 SEAT-PASSENGER R1 01/00
 260-0110-7821 SEAT-PASSENGER R1 06/00
 260-0110-7821 SEAT-PASSENGER R1 05/01
 260-0120-7821 HEATER R1 01/00
 260-0130-7821 AIR CONDITIONER/HEATER R1 06/00
 260-0140-7821 HEATER LINES AND WIRING R1 06/00
 260-0140-7821 HEATER LINES AND WIRING R1 05/01
 260-0145-7821 AIR CONDITIONER LINES
 260-0190-7821 WINDSCREEN WASHER R2 02/01

SECT - PAGE - PLI DESCRIPTION

SECTION 270 BODY

270-0010-7821 BODY ASSEMBLY R3 01/02
270-0010-7821 BODY ASSEMBLY R1 09/02
 270-0020-7821 EXHAUST HEATED BODY R2 01/02
 270-0020-7821 EXHAUST HEATED BODY 07/01
 270-0080-7821 ROCK EJECTORS

SECTION 290 DECALS

290-0010-7821 DECALS-ENGLISH R2 07/01
 290-0010-7821 DECALS-ENGLISH R1 01/02
 290-0010-7821 DECALS-ENGLISH 01/02

SECTION 300 MISCELLANEOUS

300-0040-7821 MULTI-TUBE CLAMPS AND HARDWARE

THIS PAGE IS INTENTIONALLY LEFT BLANK


R2 01/00 (ECN 101312)

100-0010-7821 CHASSIS

SERIAL NO. T7821001 TO T7821038

DRAWING NO. P10001

P10001

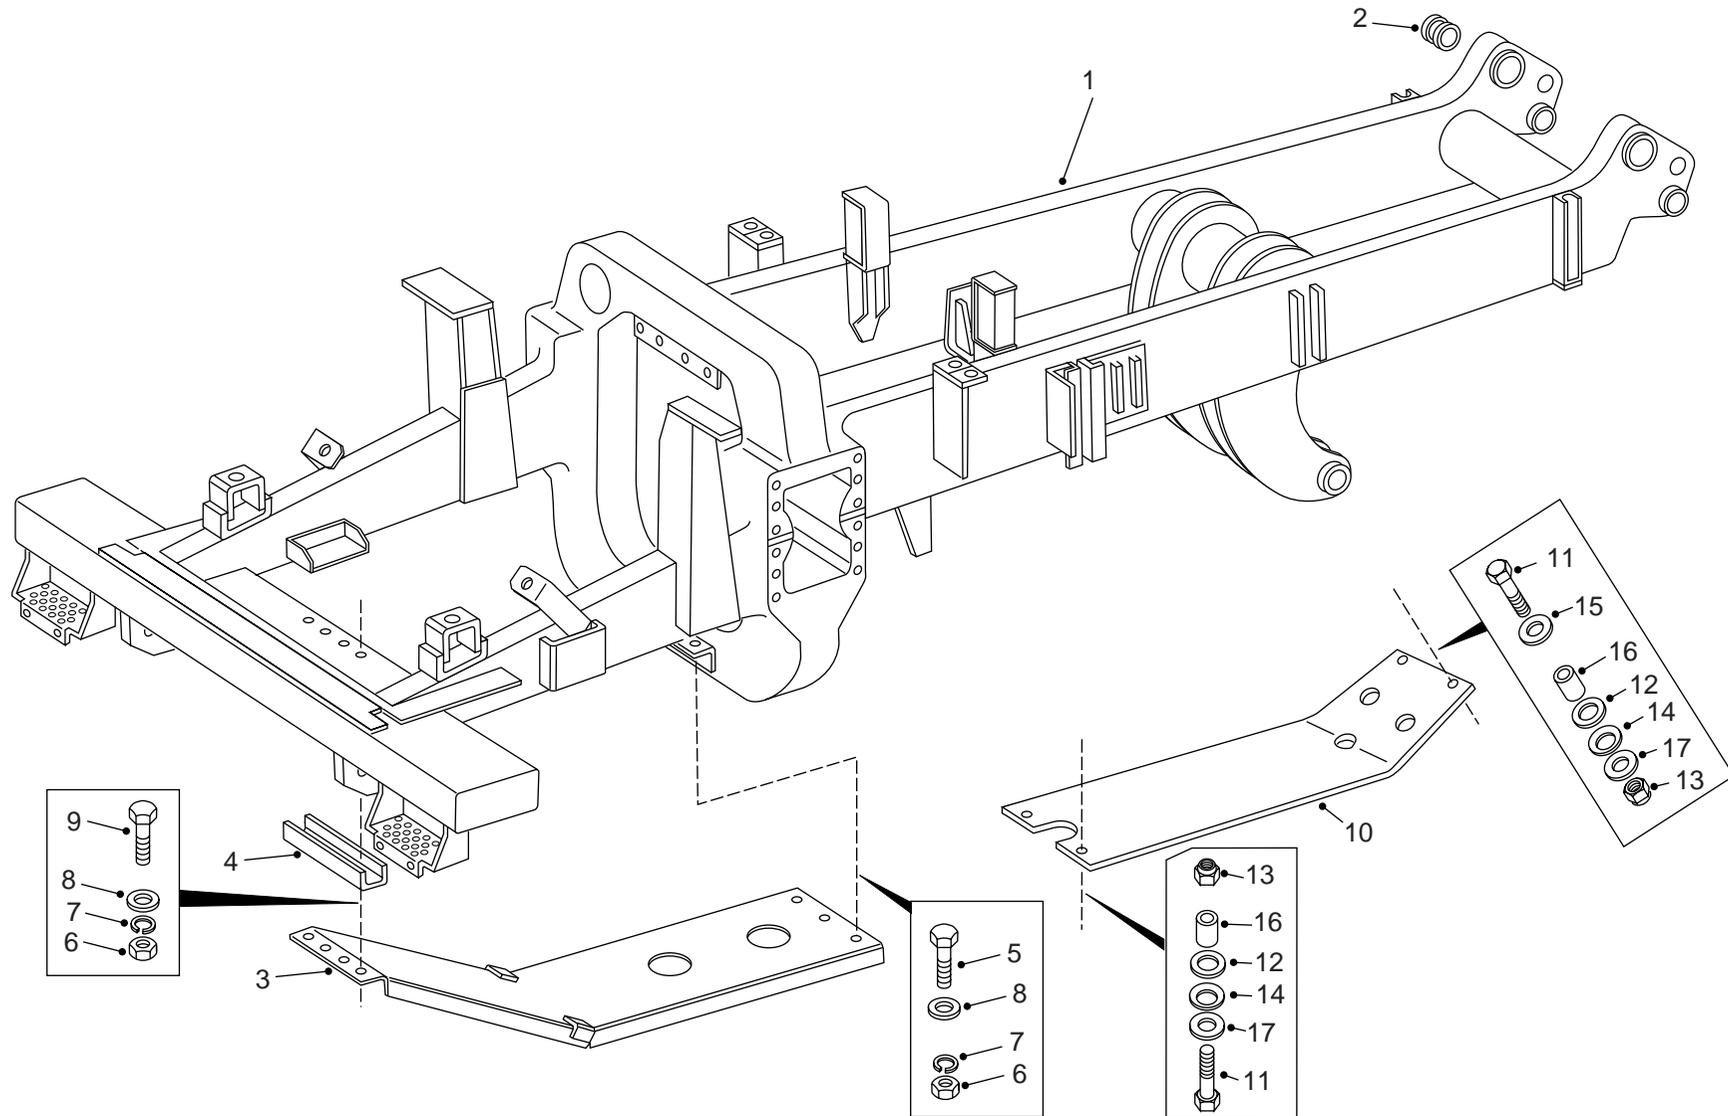

100-0010-7821 CHASSIS

SERIAL NO. T7821001 TO T7821038


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15258827	FRAME ASSEMBLY-COMPL		
002	002		09015394	.BUSHING		
003	001		15232910	GUARD ASSEMBLY		
004	001		15258186	CHANNEL ASSEMBLY		
005	003		00271612	BOLT		
006	007		00220081	NUT		
007	007		00103332	LOCKWASHER		
008	007		00106268	WASHER		
009	004		00271619	BOLT		
010	001		15304072	TRANS GUARD		
011	004		00271621	BOLT		
012	004		15303749	WASHER HARDENED		
013	004		09355771	NUT		
014	004		15250985	SPRING-DISC		
015	004		09011226	WASHER		
016	004		15303750	SPACER		
017	004		15020053	WASHER		

01/00 (ECN 101312)

100-0010-7821 CHASSIS
FROM SERIAL NO. T7821039

DRAWING NO. P10275

P10275

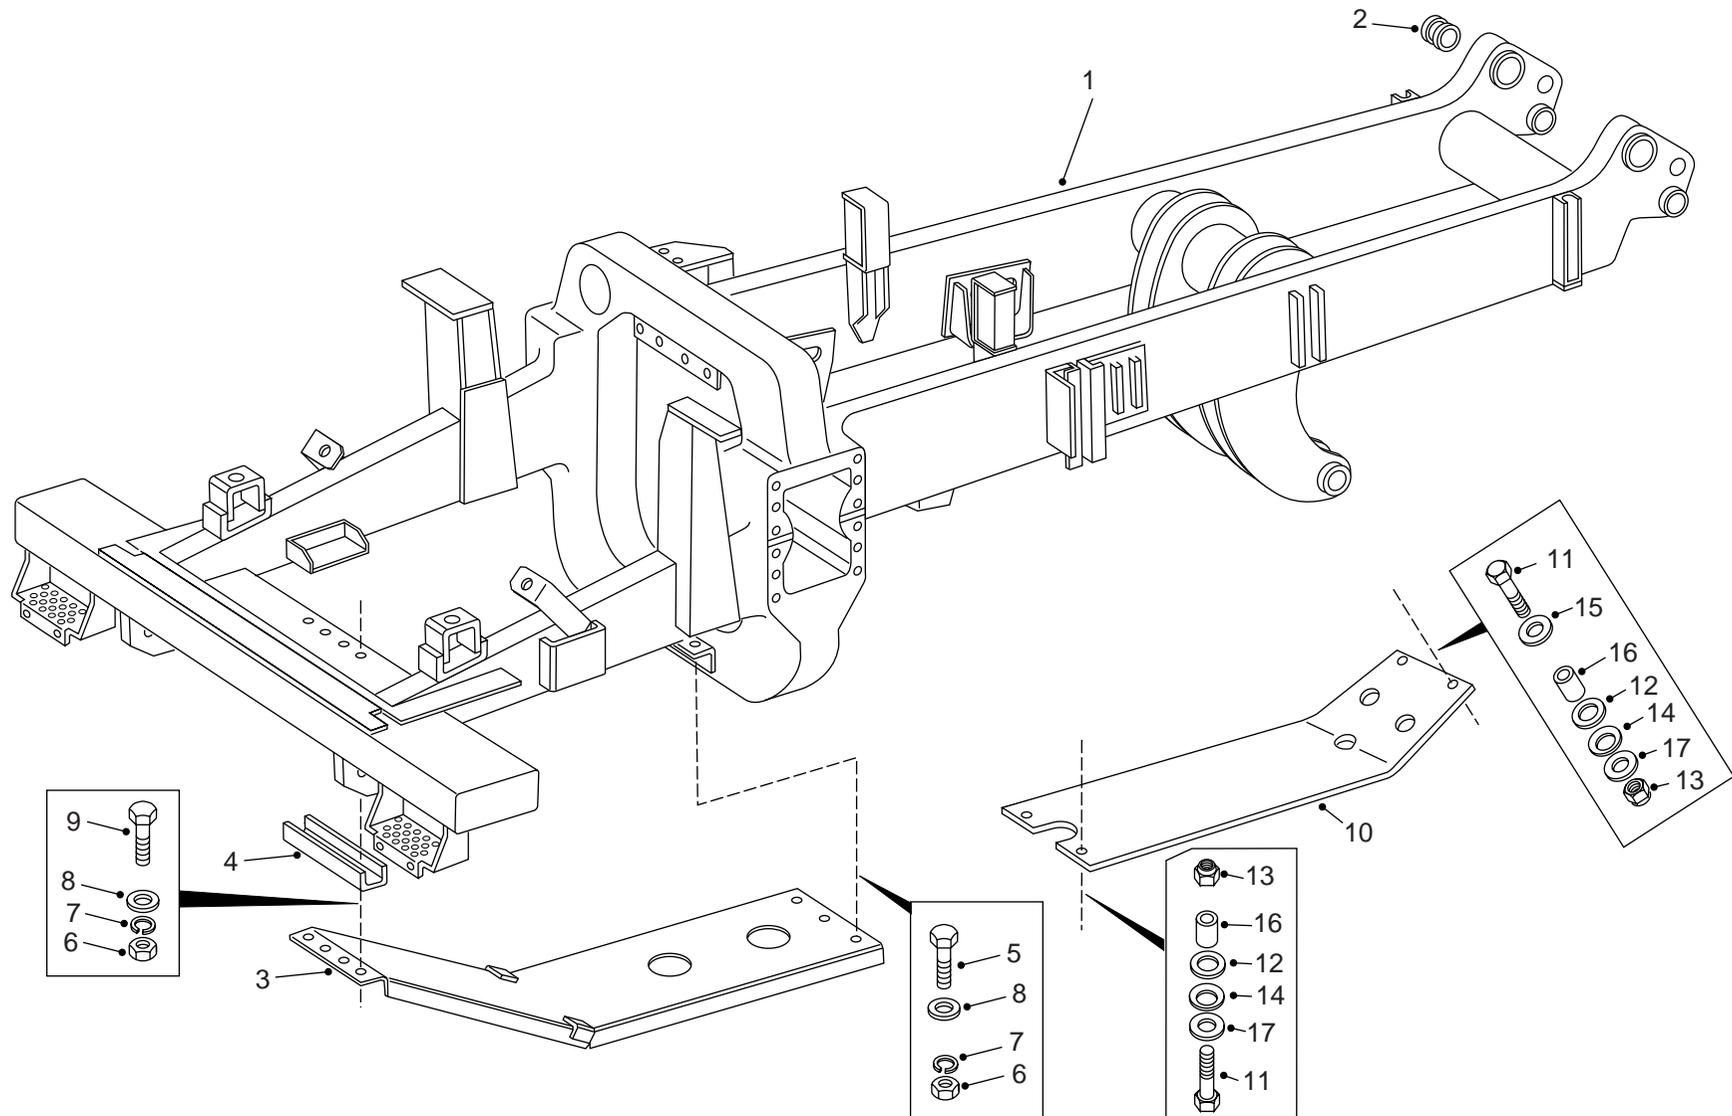

100-0010-7821 CHASSIS
 FROM SERIAL NO. T7821039


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15304430	FRAME ASSEMBLY - COMPL		
002	002		09015394	.BUSHING		
003	001		15232910	GUARD ASSEMBLY		
004	001		15258186	CHANNEL ASSEMBLY		
005	003		00271612	BOLT		
006	007		00220081	NUT		
007	007		00103332	LOCKWASHER		
008	007		00106268	WASHER		
009	004		00271619	BOLT		
010	001		15304072	TRANS GUARD		
011	004		00271621	BOLT T50		
012	004		15303749	WASHER HARDENED		
013	004		09355771	NUT T50		
014	004		15250985	SPRING-DISC		
015	004		09011226	WASHER		
016	004		15303750	SPACER		
017	004		15020053	WASHER		

R1 01/00 (ECN 101183)

100-0040-7821 HOOD AND MOUNTING
FROM SERIAL NO. T7821001

DRAWING NO. P9481

P9481

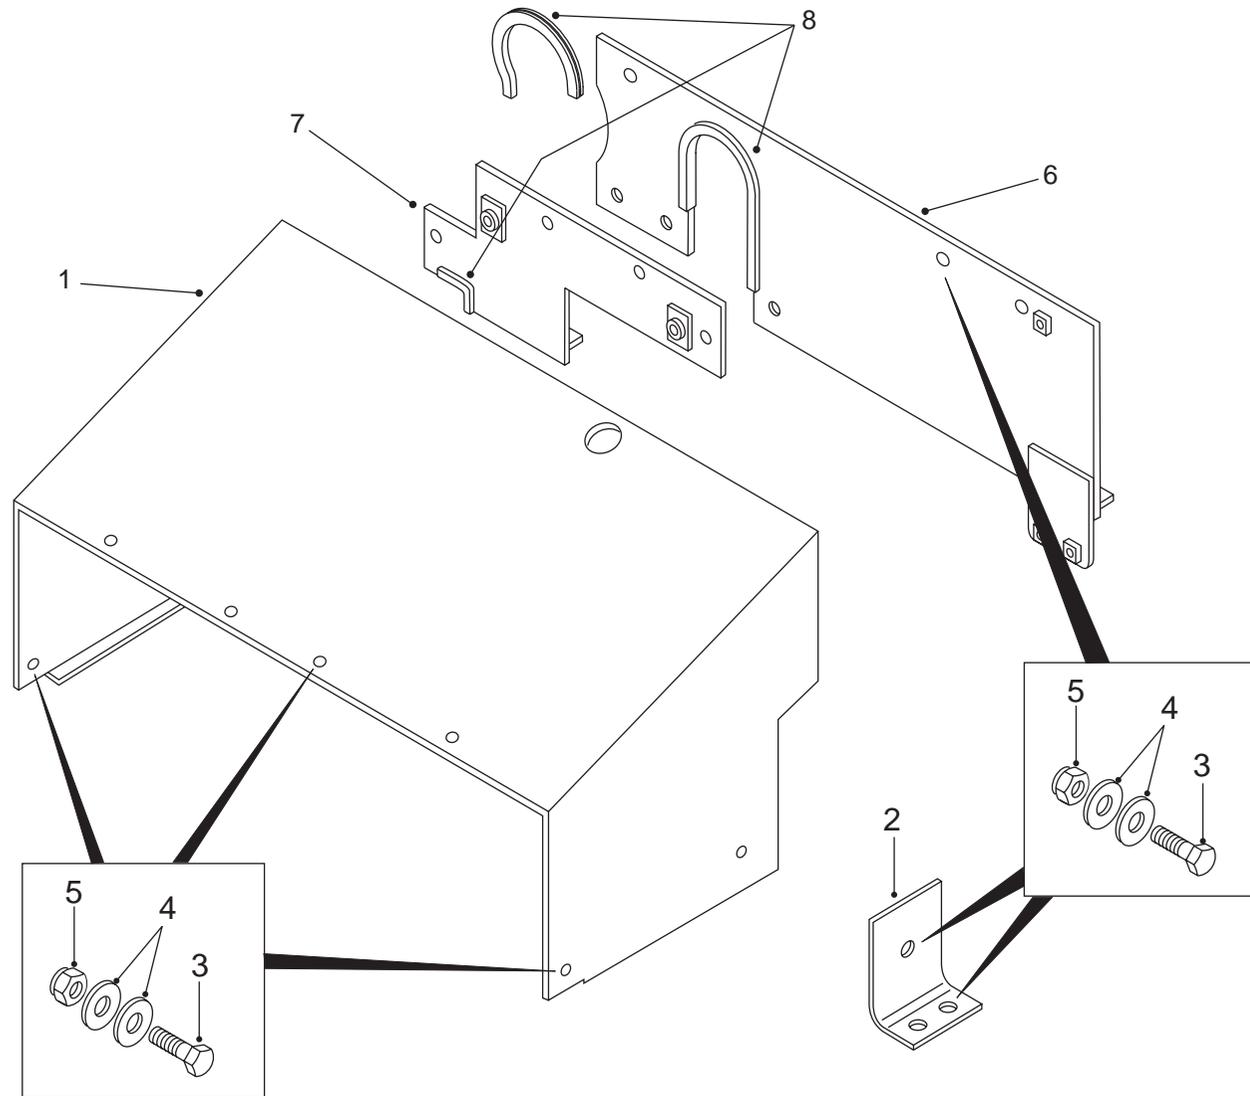

100-0040-7821 HOOD AND MOUNTING
FROM SERIAL NO. T7821001


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15300329	HOOD ASSEMBLY		
002	002		15252142	PLATE		
003	006		00179885	BOLT		
004	022		09267949	WASHER-HARDENED		
005	006		00120378	NUT		
006	001		15304242	BAFFLE ASSEMBLY		
007	001		15257809	BAFFLE ASSY-HOOD		
008	ASR		09368561	BEADING		

R1 01/00 (ECN 101550)

100-0070-7821 FENDERS AND MOUNTING
SERIAL NO. T7821001 TO T7821037

DRAWING NO. P9908

P9908

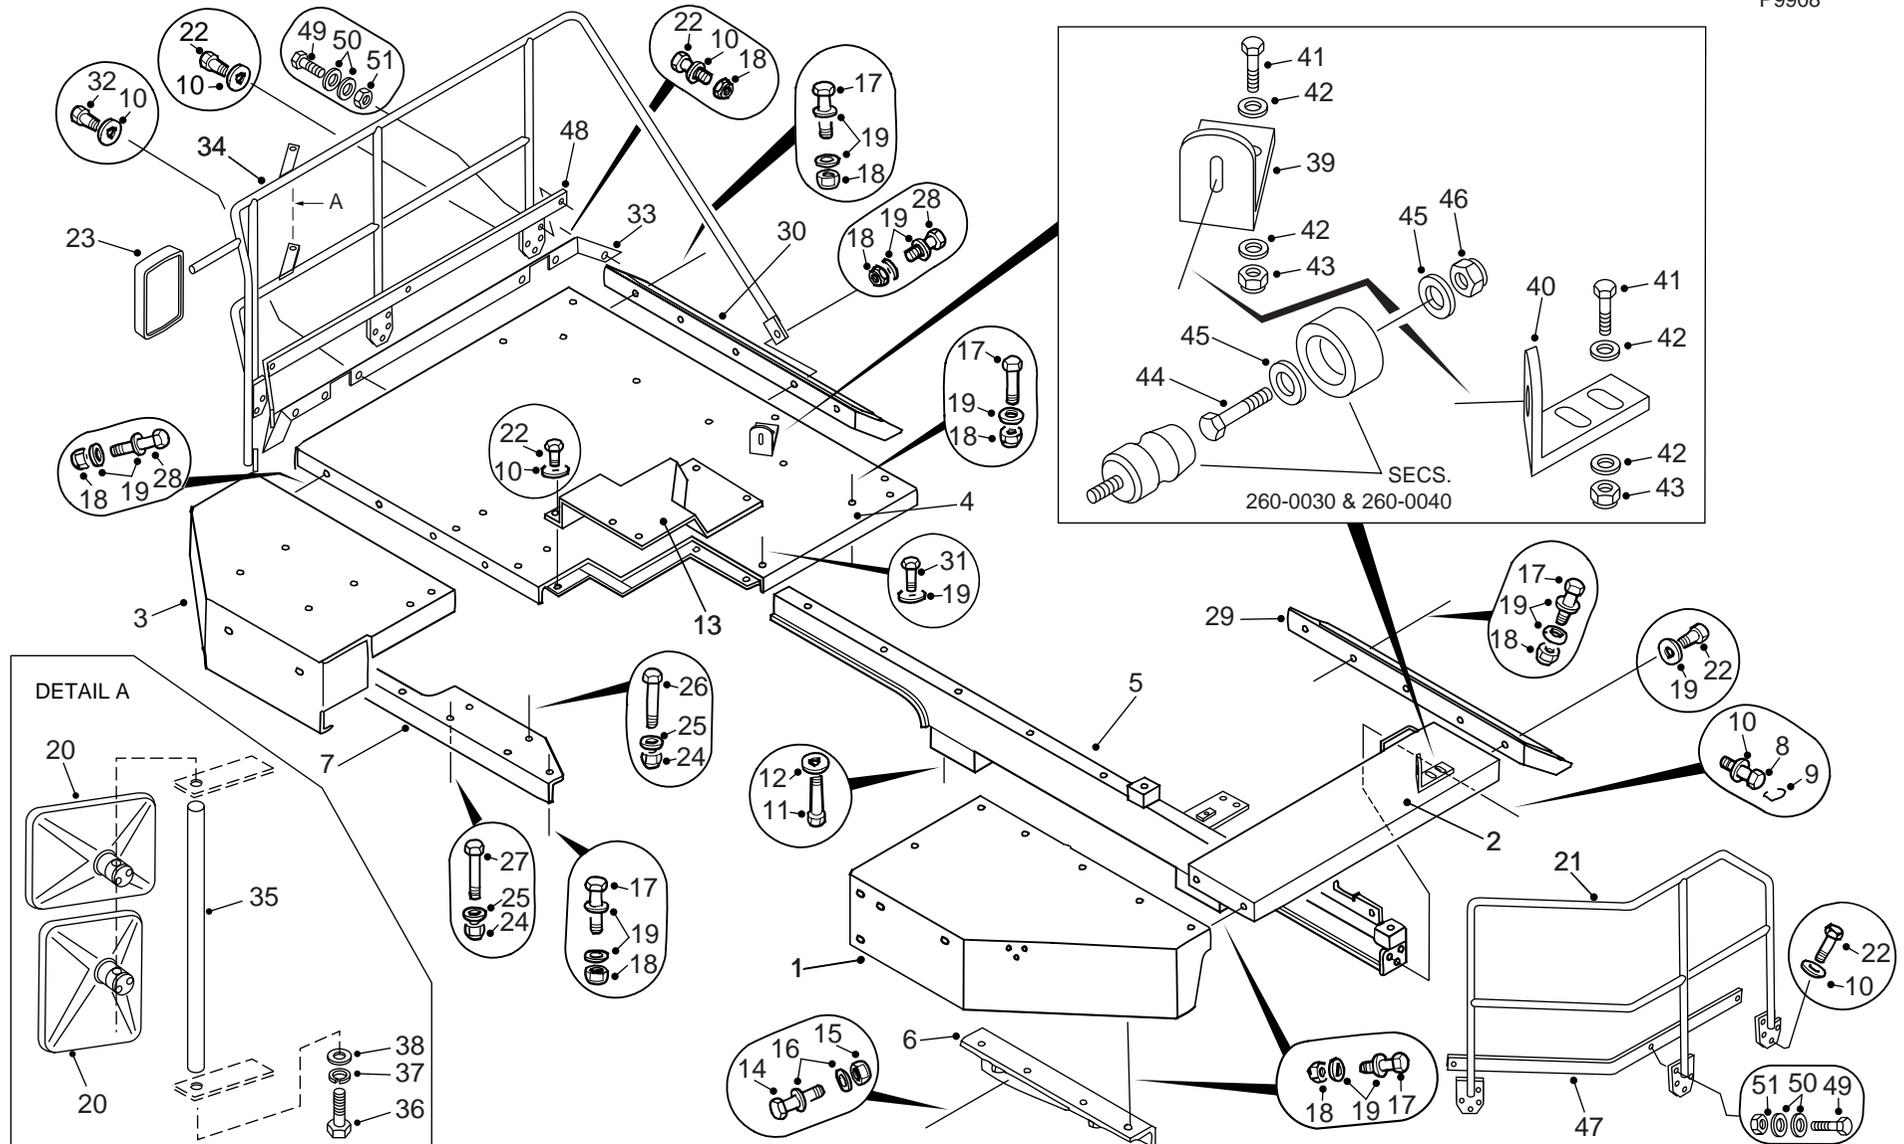

100-0070-7821 FENDERS AND MOUNTING

SERIAL NO. T7821001 TO T7821037

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15300480	LH FENDER ASSEMBLY		
002	001		15251926	PLATFORM ASSY-LH		
003	001		15303563	RH FENDER ASSY		
004	001		15300457	PLATFORM ASS Y R.H.S.		
005	001		15301205	CAB REAR CROSSMEMBER		
006	001		15247991	SUPPORT-LH		
007	001		15256827	SUPPORT-RH		
008	003		09262364	BOLT		
009	ASR		09113457	LOCKWIRE		
010	022		09270000	WASHER-HARDENED		
011	004		09009275	BOLT		
012	004		09019631	WASHER-HARDENED		
013	001		15257874	COVER-ENGINE ACCESS		
014	006		00271612	BOLT		
015	004		09355771	NUT		
016	008		09250715	WASHER-HARDENED		
017	010		00179887	BOLT		
018	018		00274209	LOCKNUT		
019	032		09267949	WASHER-HARDENED		
020	002		09077400	MIRROR		
021	001		15302681	HANDRAIL ASSEMBLY (LH)		
022	028		00179885	BOLT		
023	001		15246087	MIRROR-WIDE ANGLE		
024	004		09355771	NUT		
025	004		00106268	WASHER		
026	002		00271612	BOLT		
027	002		00271614	BOLT		
028	005		00179889	BOLT		
029	001		15254780	GUARD-MUD LH		
030	001		15248043	GUARD-MUD RH		
031	001		00190270	BOLT		
032	005		00179880	BOLT		
033	001		15301189	FENDER EXTENSION.		
034	001		15302682	HANDRAIL ASSY (RH)		
035	001		09077595	.BAR MIRROR MTG		
036	002		00179820	.BOLT		
037	002		00103320	.LOCKWASHER		
038	002		00103340	.WASHER		
039	001		15302574	BENT PLATE		
040	001		15302618	BENT PLATE		

100-0070-7821 FENDERS AND MOUNTING


SERIAL NO. T7821001 TO T7821037

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	004		00179885	BOLT		
042	008		09270000	WASHER-HARDENED		
043	004		00274209	LOCKNUT		
044	002		06350625	BOLT		
045	004		07150620	WASHER		
046	002		06470601	LOCKNUT		

100-0070-7821 FENDERS AND MOUNTING
FROM SERIAL NO. T7821038

DRAWING NO. P10278A


P10278

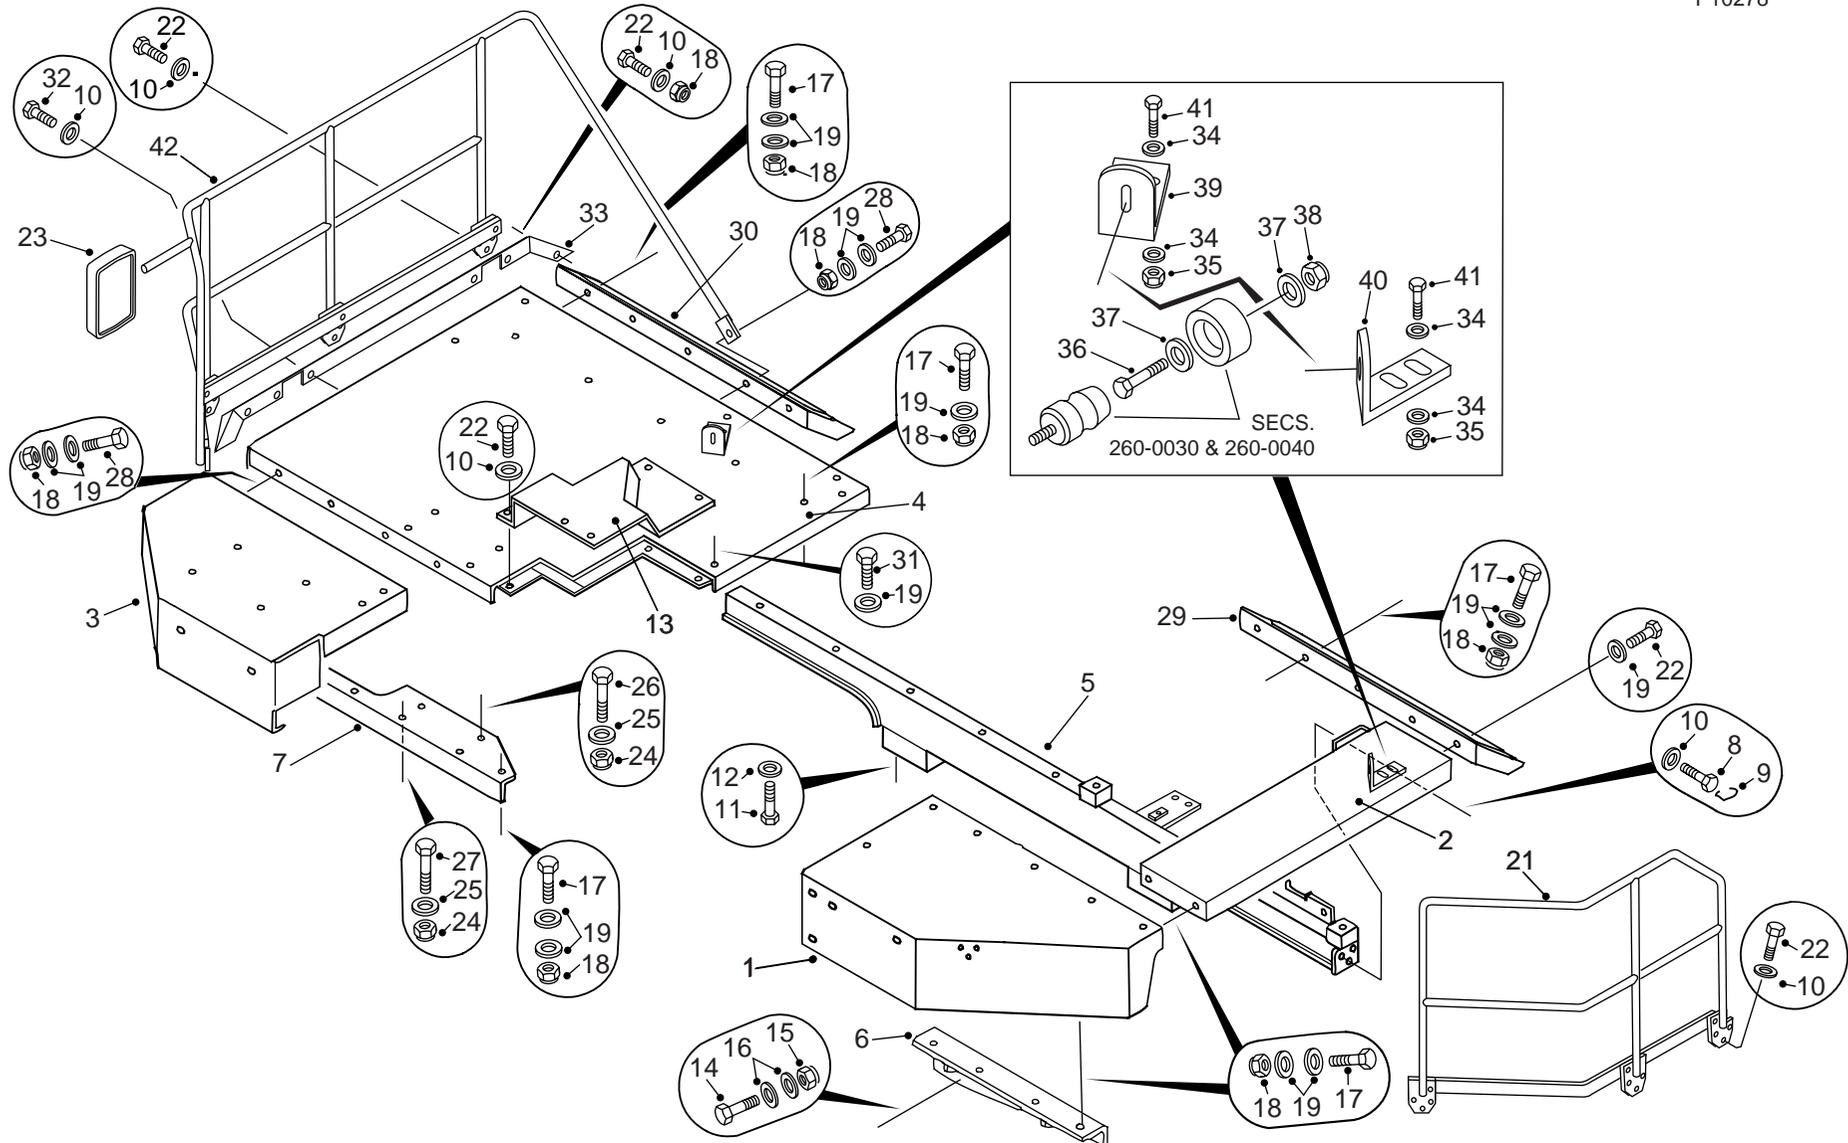

100-0070-7821 FENDERS AND MOUNTING
FROM SERIAL NO. T7821038

DRAWING NO. P10278B

P10278

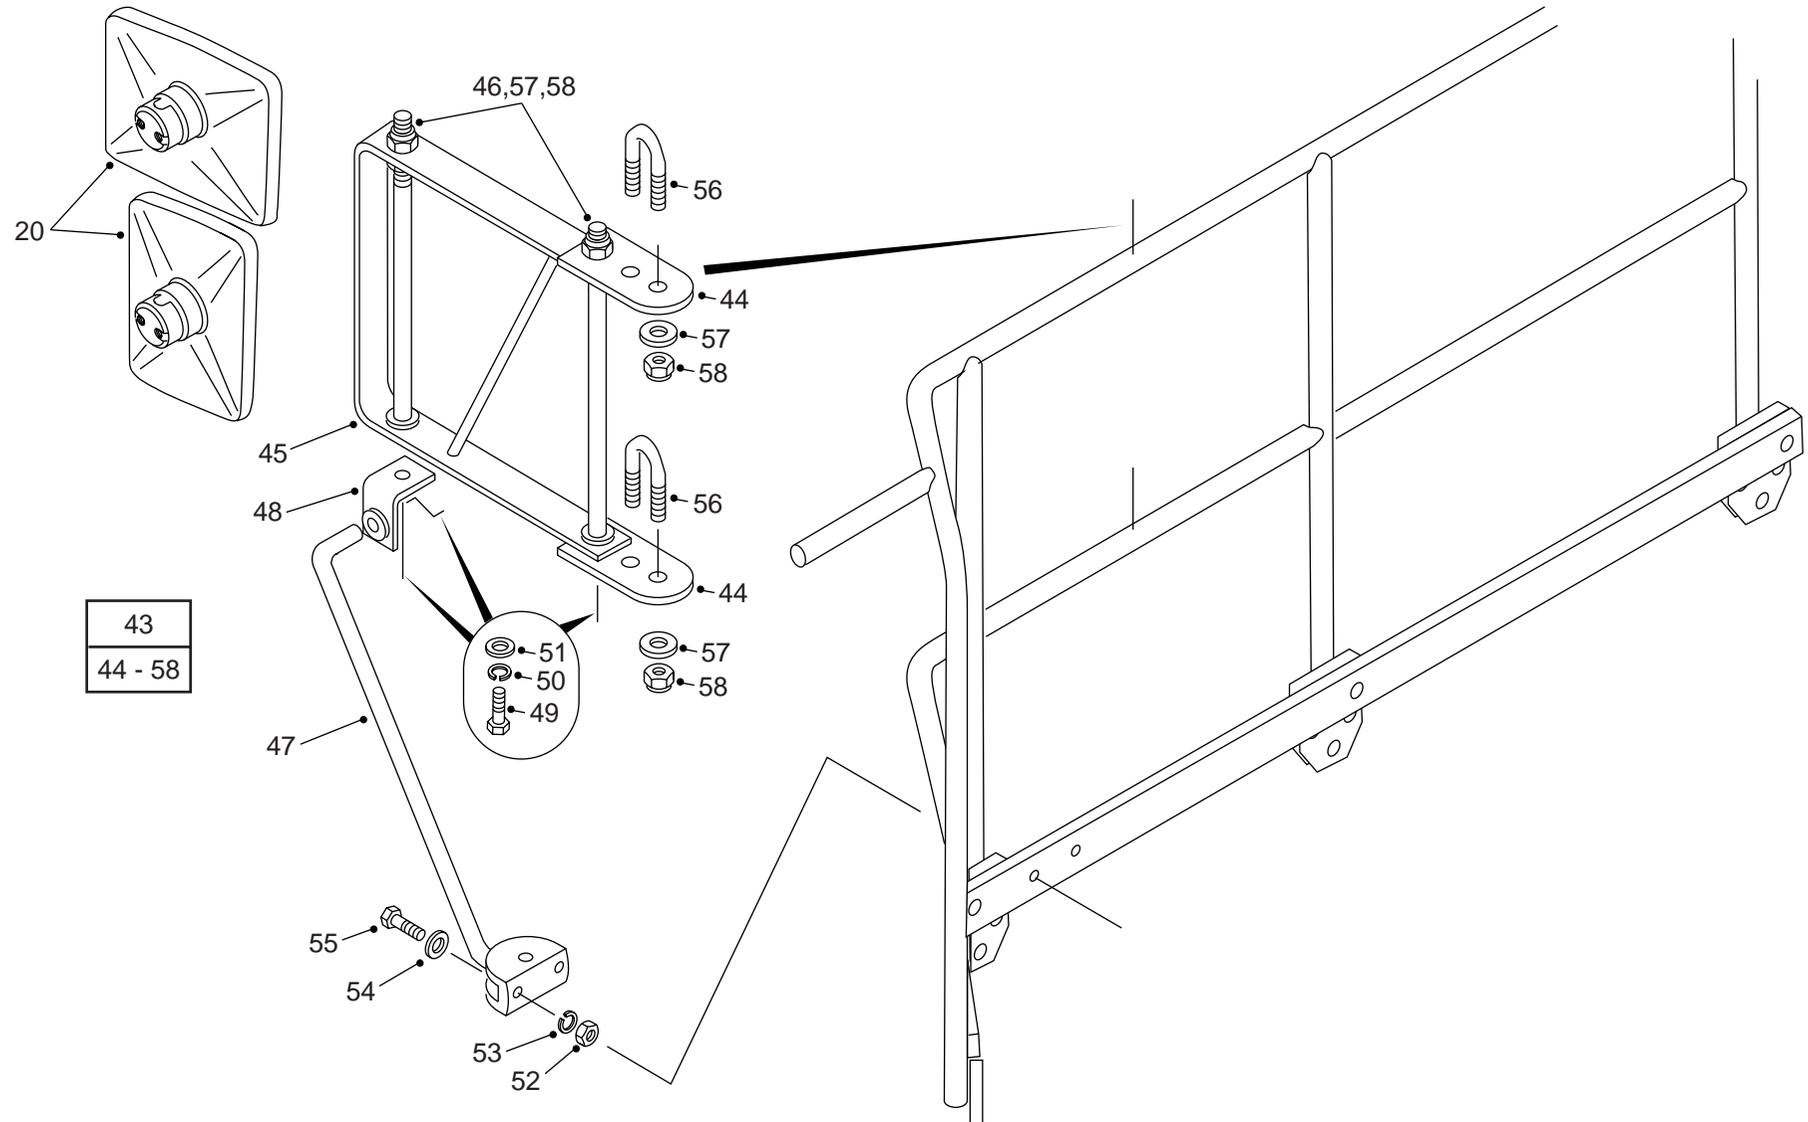


THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0090-7821 LADDERS AND HANDRAILS
FROM SERIAL NO. T7821001

DRAWING NO. P9473

P9473

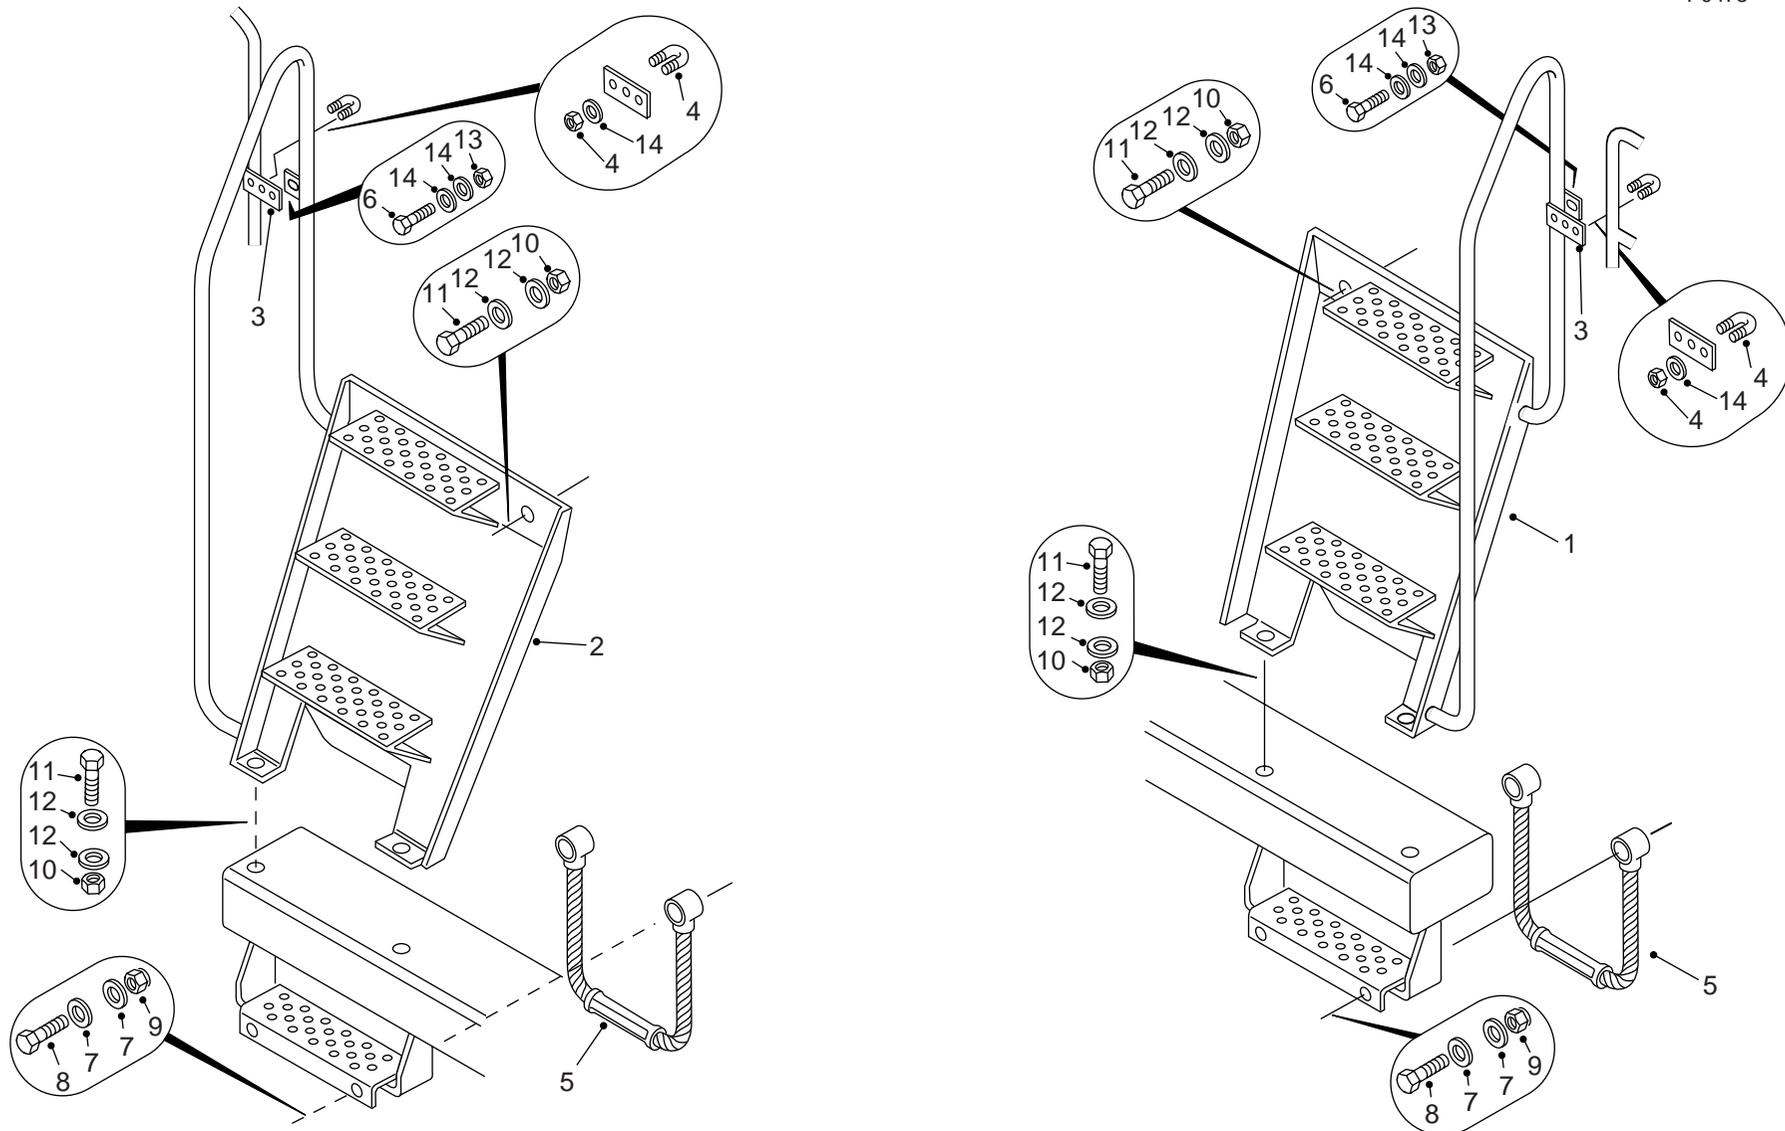

100-0090-7821 LADDERS AND HANDRAILS
 FROM SERIAL NO. T7821001

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15300256	LH STEP ASSY		
002	001		15300257	RH STEP ASSY		
003	002		15302981	PLATE		
004	002		15302982	U BOLT		
005	002		15255698	STEP ASSY		
006	002		00179840	BOLT		
007	008		00106265	WASHER		
008	004		00179893	BOLT		
009	004		00274209	LOCKNUT		
010	008		00102637	NUT		
011	004		00179885	BOLT		
012	016		09267949	WASHER-HARDENED		
013	004		09417713	NUT		
014	008		09060202	WASHER-HARDENED		

100-0100-7821 RADIATOR GUARD AND MOUNTING
 SERIAL NO. T7821001 TO T7821028


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15301268	RADIATOR GUARD ASSY		
002	002		15258135	.COVER PLATE		
003	004		00106263	.WASHER		
004	004		00179839	.BOLT		
005	002		00179891	BOLT		
006	001		00120378	NUT		
007	016		00179885	BOLT		
008	001		15252767	GRILLE		
009	016		00179881	BOLT		
010	001		15252077	BRACKET		
011	002		00179881	BOLT		
012	004		09270000	WASHER-HARDENED		
013	001		15300546	PLATE		

R1 05/01 (ECN 101678 AND ECN 102969)

100-0100-7821 RADIATOR GUARD AND MOUNTING
FROM SERIAL NO. T7821029

DRAWING NO. P10262

P10262

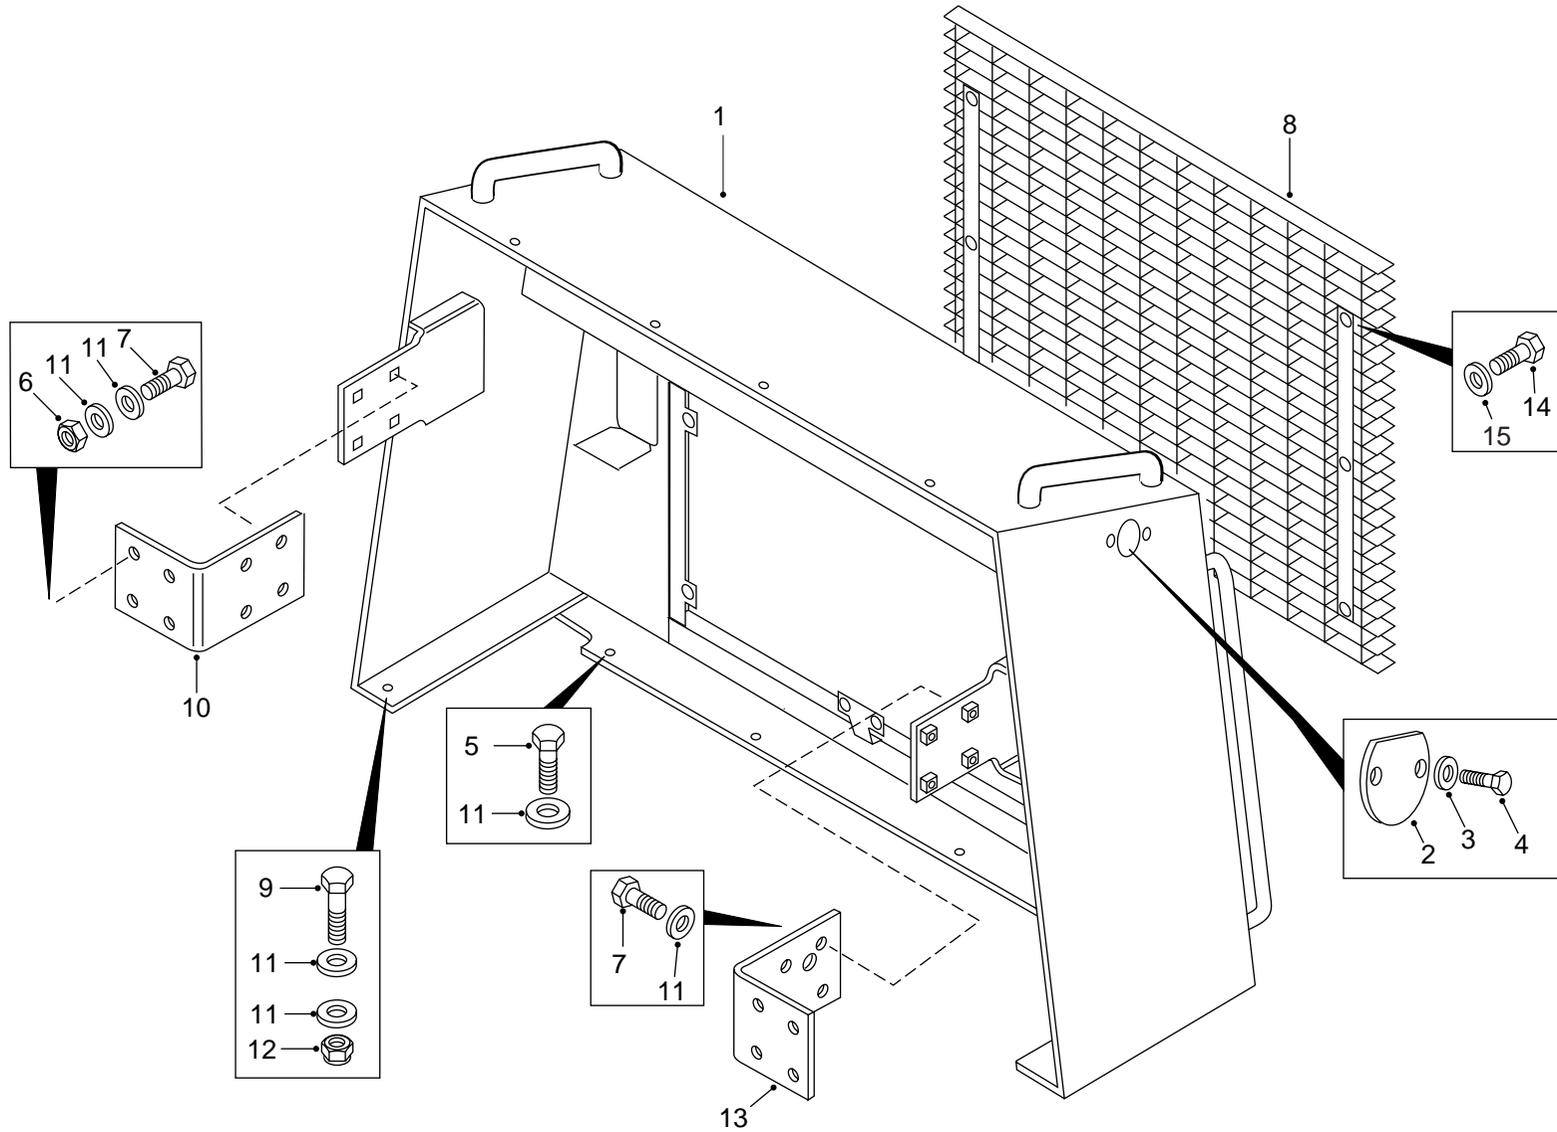

100-0100-7821 RADIATOR GUARD AND MOUNTING
 FROM SERIAL NO. T7821029


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15303705	RADIATOR GUARD ASSEMBL		
002	002		15258135	.COVER PLATE		
003	004		00106263	.WASHER T50		
004	004		00179839	.BOLT		
005	002		00179891	BOLT		
006	005		00120378	NUT T50		
007	016		00179885	BOLT T50		
008	001		15305470	RADIATOR GRILLE		
009	002		00179891	BOLT		
010	001		15252077	BRACKET		
011	040		09270000	WASHER-HARDENED		
012	002		00274209	LOCKNUT		
013	001		15300546	PLATE		
014	006		00179839	BOLT		
015	006		09060202	WASHER		

Product: 1998-2002 TEREX TR60 Off-Highway Truck Workshop Parts Manual

R2 01/02 (ECN 101837 AND ECN 104145)
Full Download: <https://www.aresairmanual.com/downloads/1998-2002-terex-tr60-off-highway-truck-workshop-parts-manual/>

100-0140-7821 MUDGUARDS
FROM SERIAL NO. T7821001

DRAWING NO. P9502

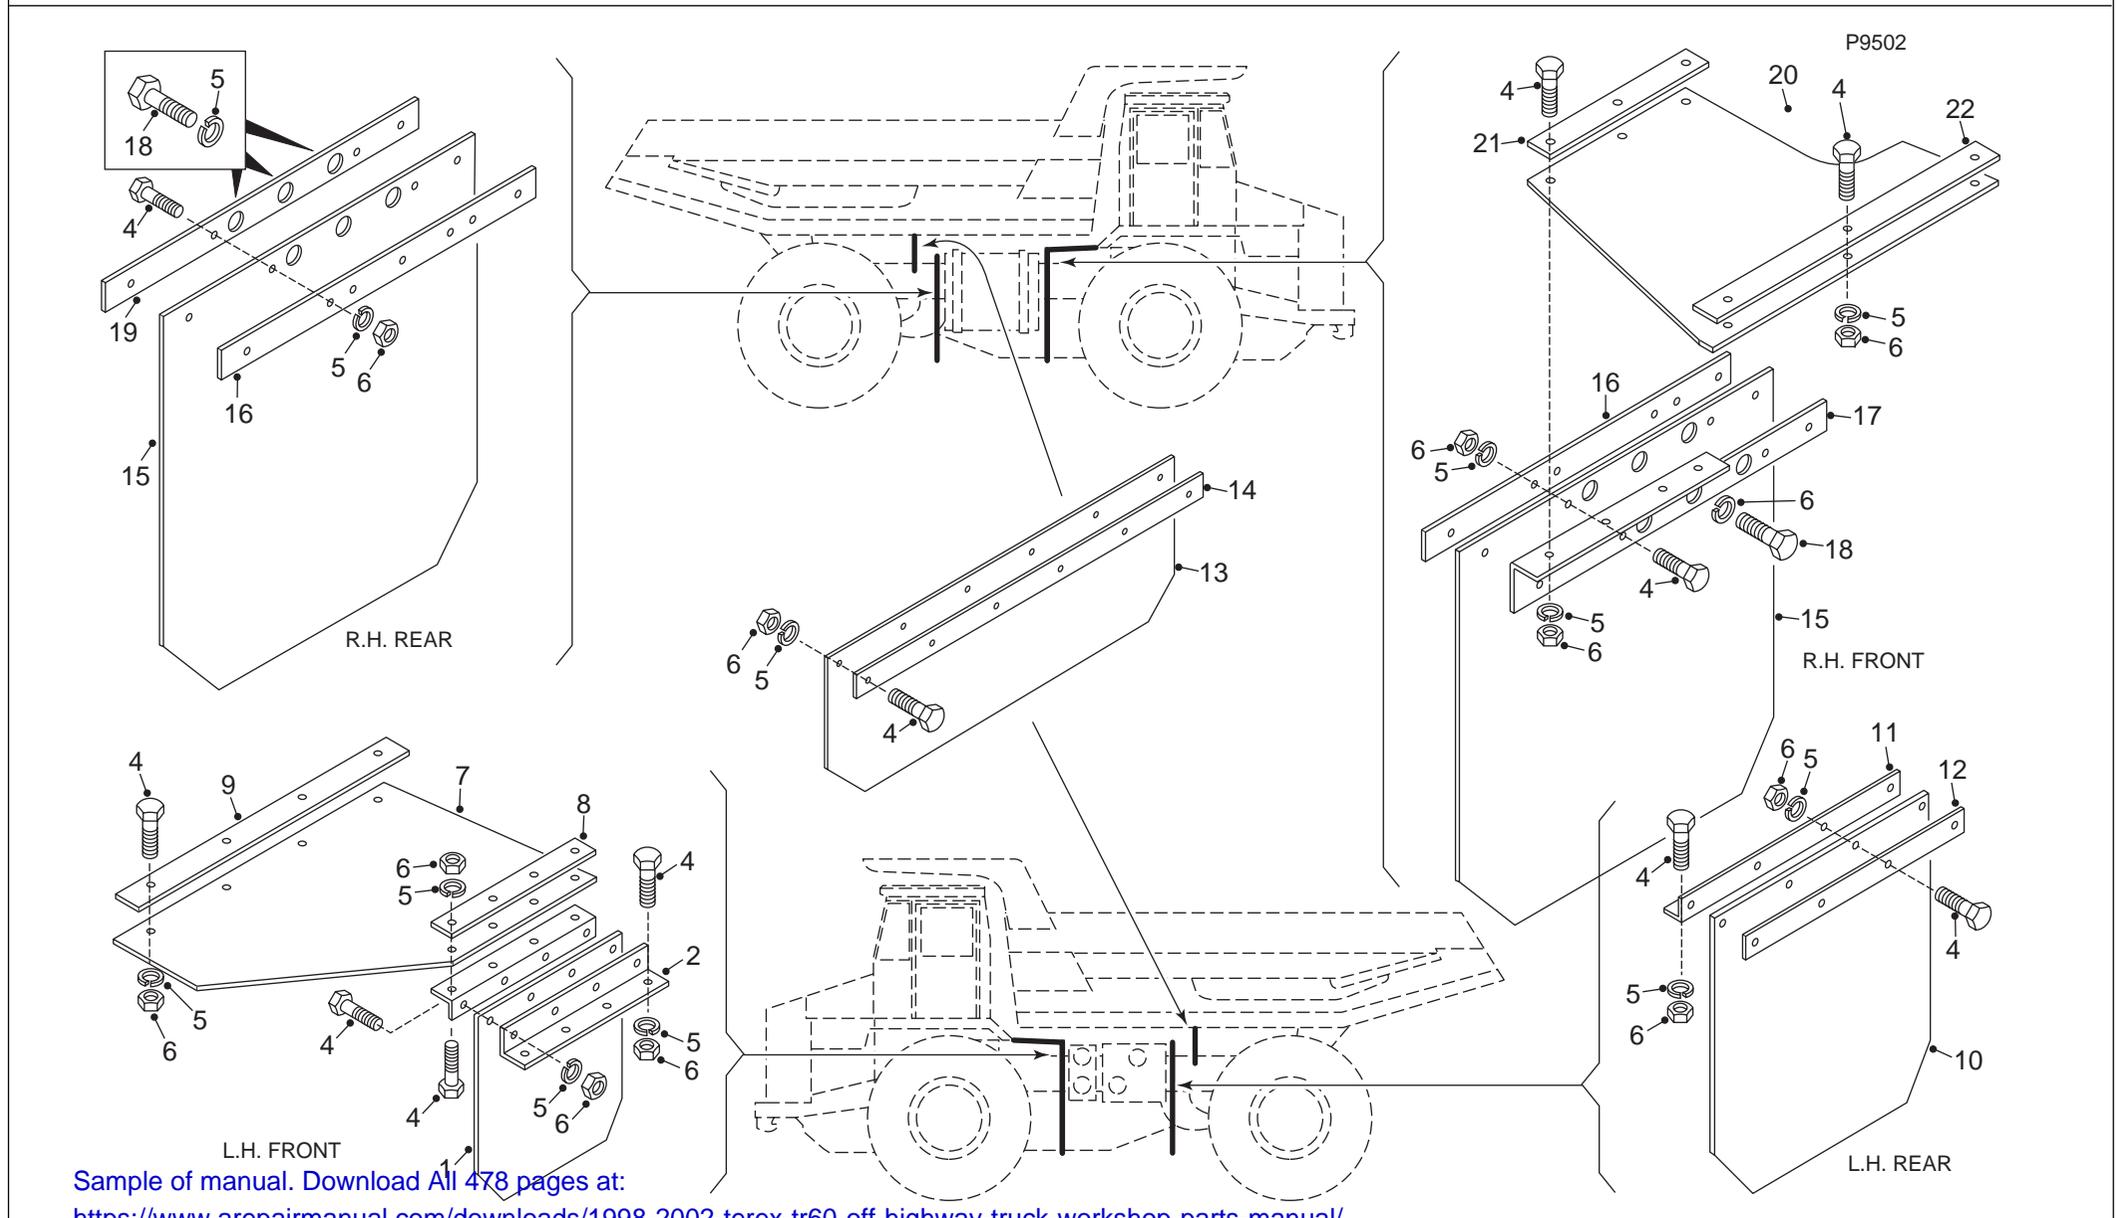

Sample of manual. Download All 478 pages at:

<https://www.aresairmanual.com/downloads/1998-2002-terex-tr60-off-highway-truck-workshop-parts-manual/>