

Product: 2007-2010 TEREX TR70 Off-Highway Truck Workshop Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/2007-2010-terex-tr70-off-highway-truck-workshop-parts-manual/>



Publication Part Number: **15503385**


Published by : Customer Support Department - TEREX Equipment Limited, Motherwell, Scotland

PARTS BOOK

CLICK HERE FOR  
STANDARD  
TABLE OF CONTENTS

CLICK HERE FOR  
OPTIONAL  
TABLE OF CONTENTS

CLICK HERE  
TO RETURN TO MAIN  
LIBRARY INDEX

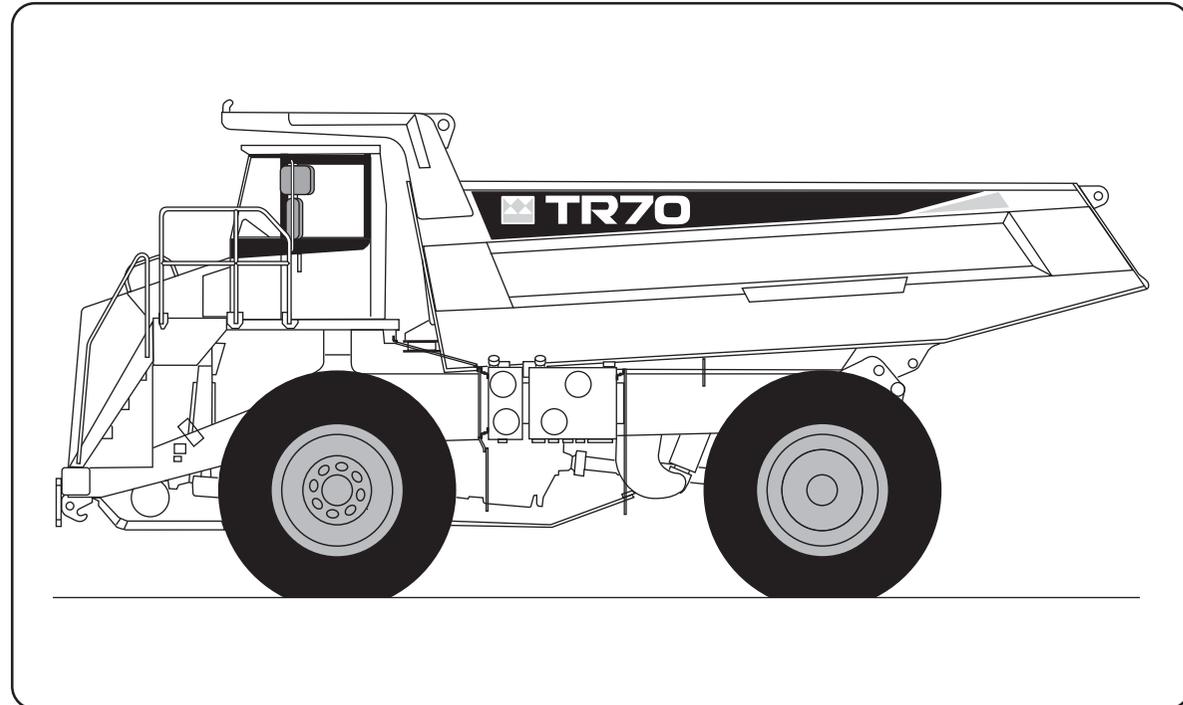

# TR70 Off-Highway Truck

(Detroit Diesel 12V2000 Tier 2 - 760 HP Engine)

**Serial Nos. T9131011 and above**

Date: February 2007

*Revised: 8th September 2010*

Sample of manual. Download All 418 pages at:

<https://www.arepairmanual.com/downloads/2007-2010-terex-tr70-off-highway-truck-workshop-parts-manual/>

Product: 2007-2010 TEREX TR70 Off-Highway Truck Workshop Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/2007-2010-terex-tr70-off-highway-truck-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 418 pages at:  
<https://www.arepairmanual.com/downloads/2007-2010-terex-tr70-off-highway-truck-workshop-parts-manual/>



## WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of 12 months or unlimited hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

\* \* \* \* \*

### SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

## INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

**SECTION 100 - CHASSIS**

**SECTION 140 - FRONT AXLE GROUP**

**SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings.

For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.

**EXAMPLE - 220-0120.**

**SERIAL NUMBERS** - Each Parts Book covers a particular range of unit Serial Numbers.

**It is important that unit Serial Numbers are quoted on all orders for Parts.**

**PARTS LISTS** - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

**ILLUSTRATIONS** - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

---

**INDENTATIONS** - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.  
2 9058512 . Shaft  
3 9024169 . Ring  
4 9058132 . Control Assy.  
5 9058135 . . Spring  
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

**NOTES** - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

**ABBREVIATIONS** - The abbreviations in this book have the following meanings -

Amps ..... Amperes  
As R ..... As Required  
Assy ..... Assembly  
Brkt ..... Bracket  
Cad-Pltd ..... Cadmium Plated  
Comm ..... Commencement of production  
E.S.N ..... Elastic Stop Nut  
Ftgs ..... Fittings

Hsg ..... Housing  
I.D ..... Inside Diameter  
L.H ..... Left Hand  
L.W ..... Lockwasher  
Lg ..... Long  
Lkg ..... Linkage  
Mtg ..... Mounting  
N.C ..... Note Code

N.I ..... Not Illustrated  
N.L.A ..... No Longer Available  
N.S.S ..... Not Sold Separately  
O.D ..... Outside Diameter  
Pr ..... Pair  
P.T.O ..... Power-Take-Off  
R.H ..... Right Hand  
Std ..... Standard



# Truck



## STANDARD SECTIONS

	<b>CHASSIS</b>	<b>100</b>		<b>FUEL SYSTEM</b>	<b>200</b>
	<b>ENGINE</b>	<b>110</b>		<b>COOLING SYSTEM</b>	<b>210</b>
	<b>TRANSMISSION</b>	<b>120</b>		<b>STEERING SYSTEM</b>	<b>220</b>
	<b>DRIVELINE</b>	<b>130</b>		<b>BODY SYSTEM</b>	<b>230</b>
	<b>FRONT AXLE</b>	<b>140</b>		<b>BRAKING SYSTEM</b>	<b>250</b>
	<b>REAR AXLE</b>	<b>160</b>		<b>CAB</b>	<b>260</b>
	<b>BRAKE PARTS</b>	<b>165</b>		<b>BODY</b>	<b>270</b>
	<b>SUSPENSION SYSTEM</b>	<b>180</b>		<b>DECALS</b>	<b>290</b>
	<b>ELECTRICAL SYSTEM</b>	<b>190</b>		<b>MISCELLANEOUS</b>	<b>300</b>

TABLE OF CONTENTS FOR MODEL TR70 T2 OPLI9131

FROM SERIAL NO T9131011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 100</u></b>			
100-0010-9131	<b><u>CHASSIS</u></b> CHASSIS		
100-0040-9131	HOOD AND MOUNTING		
100-0070-9131	FENDERS AND MOUNTING		R1 08/08
100-0090-9131	LADDERS AND HANDRAILS		
100-0100-9131	RADIATOR GUARD AND MOUNTING		R2 08/08
100-0140-9131	MUDGUARDS		R1 10/07
<b><u>SECTION 110</u></b>			
110-0020-9131	<b><u>ENGINE</u></b> ENGINE ORDERING INSTRUCTIONS		
<b>110-0030-9131</b>	<b>ENGINE AND MOUNTING</b>		<b>R4 09/10</b>
110-0050-9131	AIR CLEANER		
110-0060-9131	AIR CLEANER PIPES AND HOSES		R1 05/07
110-0130-9131	POWER TAKEOFF-ENG		R1 09/09
<b><u>SECTION 120</u></b>			
120-0010-9131	<b><u>TRANSMISSION</u></b> TRANSMISSION MOUNTING		R1 05/10
120-0020-9131	TRANSMISSION BREAKDOWN		
120-0050-9131	CONTROL VALVE		
120-0070-9131	SHIFT CONTROL		
120-0090-9131	POWER TAKEOFF-TRANS		
120-0100-9131	FILTER		
120-0110-9131	OIL LINES-TRANSMISSION		
120-0190-9131	RETARDER CONTROL LINES-HYD		R1 02/09
120-0200-9131	FRONT COVER & CONVERTER GROUP		
120-0210-9131	CONVERTER HOUSING GROUP		
120-0220-9131	OIL PUMP		
120-0230-9131	FILTER ADAPT/REGULATOR VALVES		
120-0240-9131	LOCKUP VALVE		
120-0260-9131	RETARDER GROUP		
120-0270-9131	RETARDER CONTROL VALVE		
120-0280-9131	SPLITTER GEARING AND CLUTCHES		
120-0290-9131	MAIN HOUSING GROUP		
120-0300-9131	HIGH RANGE GEARING & CLUTCHES		
120-0310-9131	INTER RANGE GEARING & CLUTCHES		
120-0320-9131	LOW RANGE GEARING & CLUTCHES		
120-0330-9131	REV RANGE GEARING & CLUTCHES		
120-0340-9131	REAR COVER GROUP		

TABLE OF CONTENTS FOR MODEL TR70 T2 OPLI9131

FROM SERIAL NO T9131011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 130</b>	<b>DRIVELINE</b>		
130-0010-9131	FRONT DRIVELINE		
130-0020-9131	REAR DRIVELINE		
<b>SECTION 140</b>	<b>FRONT AXLE</b>		
140-0040-9131	WHEEL, RIM AND TYRE-FRONT		R1 03/10
<b>SECTION 160</b>	<b>REAR AXLE</b>		
160-0020-9131	DIFFERENTIAL-REAR		R1 04/09
160-0030-9131	AXLE GROUP-REAR		
160-0040-9131	PLANETARY GEARING-REAR		
160-0050-9131	WHEEL, RIM AND TYRE-REAR		R1 03/10
<b>SECTION 165</b>	<b>BRAKE PARTS</b>		
165-0020-9131	BRAKE PARTS-FRONT WHEEL-RIGIDS		
165-0030-9131	BRAKE PARTS-REAR WHEEL-RIGIDS		R2 06/08
<b>SECTION 180</b>	<b>SUSPENSION SYSTEM</b>		
180-0030-9131	FRONT RIDE CYLINDER	T9131011 TO T9131014	R1 02/08
180-0030-9131	FRONT RIDE CYLINDER	T9131015	06/08
180-0050-9131	REAR RIDE CYLINDER		
<b>SECTION 190</b>	<b>ELECTRICAL SYSTEM</b>		
190-0010-9131	TERMINALS		
190-0011-9131	CONNECTORS		
190-0030-9131	CABLES/HARNESSES-CAB	T9131011 TO T9131017	
190-0030-9131	CABLES/HARNESSES-CAB	T9131018	08/08
190-0040-9131	CABLES/HARNESSES-CHASS/ENG	T9131011 TO T9131017	R2 10/09
190-0040-9131	CABLES/HARNESSES-CHASS/ENG	T9131018	R2 10/09
190-0070-9131	BATTERY AND CABLES		
190-0080-9131	BATTERY MOUNTING		
190-0100-9131	ELECTRICAL LIGHTING SYSTEM	T9131011 TO T9131017	
190-0100-9131	ELECTRICAL LIGHTING SYSTEM	T9131018	R3 12/09
190-0110-9131	ALTERNATOR		
190-0120-9131	STARTER MOTOR		
190-0270-9131	SWITCHES & SENSORS		R3 12/09
190-0300-9131	RADIO CASSETTE AND SPEAKERS		R1 04/09
190-0310-9131	ELECTRICAL HORN		

TABLE OF CONTENTS FOR MODEL TR70 T2 OPLI9131

FROM SERIAL NO T9131011

REVISED 09/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 200</u></b>			
<b><u>FUEL SYSTEM</u></b>			
200-0010-9131	FUEL TANK AND MOUNTING		
200-0040-9131	FUEL LINES		
200-0050-9131	ACCELERATOR LINKAGE	T9131011 TO T9131015	
200-0050-9131	ACCELERATOR LINKAGE	T9131016 TO T9131020	10/07
200-0050-9131	ACCELERATOR LINKAGE	T9131021	10/09
200-0080-9131	COLD START KIT		
<b><u>SECTION 210</u></b>			
<b><u>COOLING SYSTEM</u></b>			
210-0010-9131	RADIATOR ASSEMBLY	T9131011 TO T9131011	
210-0010-9131	RADIATOR ASSEMBLY	T9131012	06/07
210-0020-9131	RADIATOR MOUNTING		
210-0030-9131	RADIATOR PIPING		
210-0040-9131	RADIATOR HEADER TANK AND HOSES		R2 11/08
210-0050-9131	OIL COOLER-DISC BRAKES		R1 05/07
210-0051-9131	OIL COOLER PIPING-DISC BRAKES		R1 01/08
210-0060-9131	OIL COOLER AND PIPING-TRANS	T9131011 TO T91310120	
210-0060-9131	OIL COOLER AND PIPING-TRANS	T9131021	10/07
<b><u>SECTION 220</u></b>			
<b><u>STEERING SYSTEM</u></b>			
220-0010-9131	STEERING LINES		R3 12/09
220-0040-9131	TANK AND MOUNTING-STEERING	T9131011 TO T913 TBA	R1 06/09
220-0050-9131	PUMP-STEERING	T9131011 TO T9131015	
220-0050-9131	PUMP-STEERING	T9131016	R1 03/09
<b>220-0060-9131</b>	<b>PUMP AND ACCUMULATOR MOUNTING</b>		<b>R2 09/10</b>
220-0080-9131	ACCUMULATOR-STEERING		
220-0090-9131	STEERING VALVE		
220-0110-9131	DOUBLE RELIEF VALVE		
220-0120-9131	STEERING CYLINDER		
220-0130-9131	RELIEF VALVE-STEERING		R1 03/10
220-0150-9131	FILTER-STEERING	T9131011 TO T9131015	
220-0150-9131	FILTER-STEERING	T9131016	08/07
220-0190-9131	STEERING LINKAGE		
220-0230-9131	STEERING COLUMN MOUNTING		
<b><u>SECTION 230</u></b>			
<b><u>BODY HOIST SYSTEM</u></b>			
230-0020-9131	LINES AND FITTINGS-BODY HOIST	T9131011 TO T9131012	R1 05/07
230-0020-9131	LINES AND FITTINGS-BODY HOIST	T9131013	05/07
230-0021-9131	SERVO CONTROL LINES-BODY		
230-0040-9131	TANK AND MOUNTING-BODY HOIST	T9131011 TO T913 TBA	R1 06/09
230-0040-9131	TANK AND MOUNTING-BODY HOIST	T913 TBA	R1 06/09
230-0041-9131	BREATHING LINE-HYDRAULIC TANKS	T9131011 TO T913 TBA	

**TABLE OF CONTENTS FOR MODEL TR70 T2 OPLI9131**

**FROM SERIAL NO T9131011**

**REVISED 09/10**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 230</u></b>			
<b><u>BODY HOIST SYSTEM-CONTINUED</u></b>			
230-0050-9131	PUMP-BODY HOIST		
230-0060-9131	CONTROL VALVE-BODY HOIST	T9131011 TO T9131012	
230-0060-9131	CONTROL VALVE-BODY HOIST	T9131013	05/07
230-0070-9131	CONTROL VALVE MOUNTING	T9131011 TO T9131012	
230-0070-9131	CONTROL VALVE MOUNTING	T9131013	05/07
230-0081-9131	JOYSTICK-BODY CONTROL		
230-0110-9131	MANIFOLD RELIEF VALVE		
230-0120-9131	RELIEF VALVE	T9131011 TO T9131012	
230-0121-9131	PILOT SUPPLY VALVE		
230-0130-9131	HOIST CYLINDERS		
<b><u>SECTION 250</u></b>			
<b><u>BRAKING SYSTEM</u></b>			
250-0020-9131	<b>BRAKE LINES-HYDRAULIC</b>		<b>R2 09/10</b>
250-0050-9131	BRAKE MANIFOLD/PAS VALVE		
250-0060-9131	BRAKE ACCUMULATOR		
250-0070-9131	TREADLE VALVE		
250-0090-9131	DIRECTIONAL CONTROL VALVE		
250-0100-9131	MONOBLOCK BRAKE VALVE		
250-0130-9131	RETARDER CONTROL VALVE-BRAKES		
250-0240-9131	FILTER ASSY-DISC BRAKE	T9131011 TO T9131017	
250-0240-9131	FILTER ASSY-DISC BRAKE	T9131018	06/08
<b><u>SECTION 260</u></b>			
<b><u>CAB</u></b>			
260-0010-9131	CAB ASSEMBLY		R2 05/10
260-0011-9131	CAB CENTRE CONSOLE		
260-0015-9131	CAB MOUNTING		R1 05/07
260-0030-9131	CAB DOOR-LEFT HAND	T9131011 TO T9131015	R1 10/09
260-0030-9131	CAB DOOR-LEFT HAND	T9131016 TO T9131019	R1 10/09
260-0030-9131	CAB DOOR-LEFT HAND	T9131020	R1 10/09
260-0040-9131	CAB DOOR-RIGHT HAND		
260-0080-9131	SWITCHES AND INSTRUMENTS		R3 04/09
260-0090-9131	SEAT-DRIVER	T9131011 TO T9131015	
260-0090-9131	SEAT-DRIVER	T9131016	R2 03/10
260-0110-9131	SEAT-INSTRUCTOR	T9131011 TO T9131015	
260-0110-9131	SEAT-INSTRUCTOR	T9131016	01/08
260-0130-9131	AIR CONDITIONER/HEATER	T9131011 TO T9131015	
260-0130-9131	AIR CONDITIONER/HEATER	T9131016	02/08
260-0140-9131	HEATER LINES & WIRING		
260-0145-9131	AIR CONDITIONER LINES		
260-0190-9131	WINDSCREEN WASHER		

TABLE OF CONTENTS FOR MODEL TR70 T2 OPLI9131

FROM SERIAL NO T9131011

REVISED 09/10


SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 270</b>	<b>BODY</b>		
270-0010-9131	BODY ASSEMBLY		R1 08/07
270-0020-9131	EXHAUST HEATED BODY		R1 06/07
270-0080-9131	ROCK EJECTORS		
<b>SECTION 290</b>	<b>DECALS</b>		
290-0010-9131	DECALS-ENGLISH	T9131011 TO T9131012	
290-0010-9131	DECALS-ENGLISH (ISO)	T9131013	R3 04/09
290-0011-9131	DECALS-ENGLISH (ANSI)	T9131013	R3 04/09
290-0100-9131	WALKWAY SURFACES (ANTI-SLIP)		
<b>SECTION 300</b>	<b>MISCELLANEOUS</b>		
300-0020-9131	LUBRICATION SYSTEM		
300-0040-9131	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-9131	POLYPROPELENE CLAMPS		
<b>300-0200-9131</b>	<b>UNIT FILTERS AND ELEMENT KITS</b>		<b>R1 09/10</b>

THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0010-9131 CHASSIS  
FROM SERIAL NO. T9131011

DRAWING NO. P12089

P12089

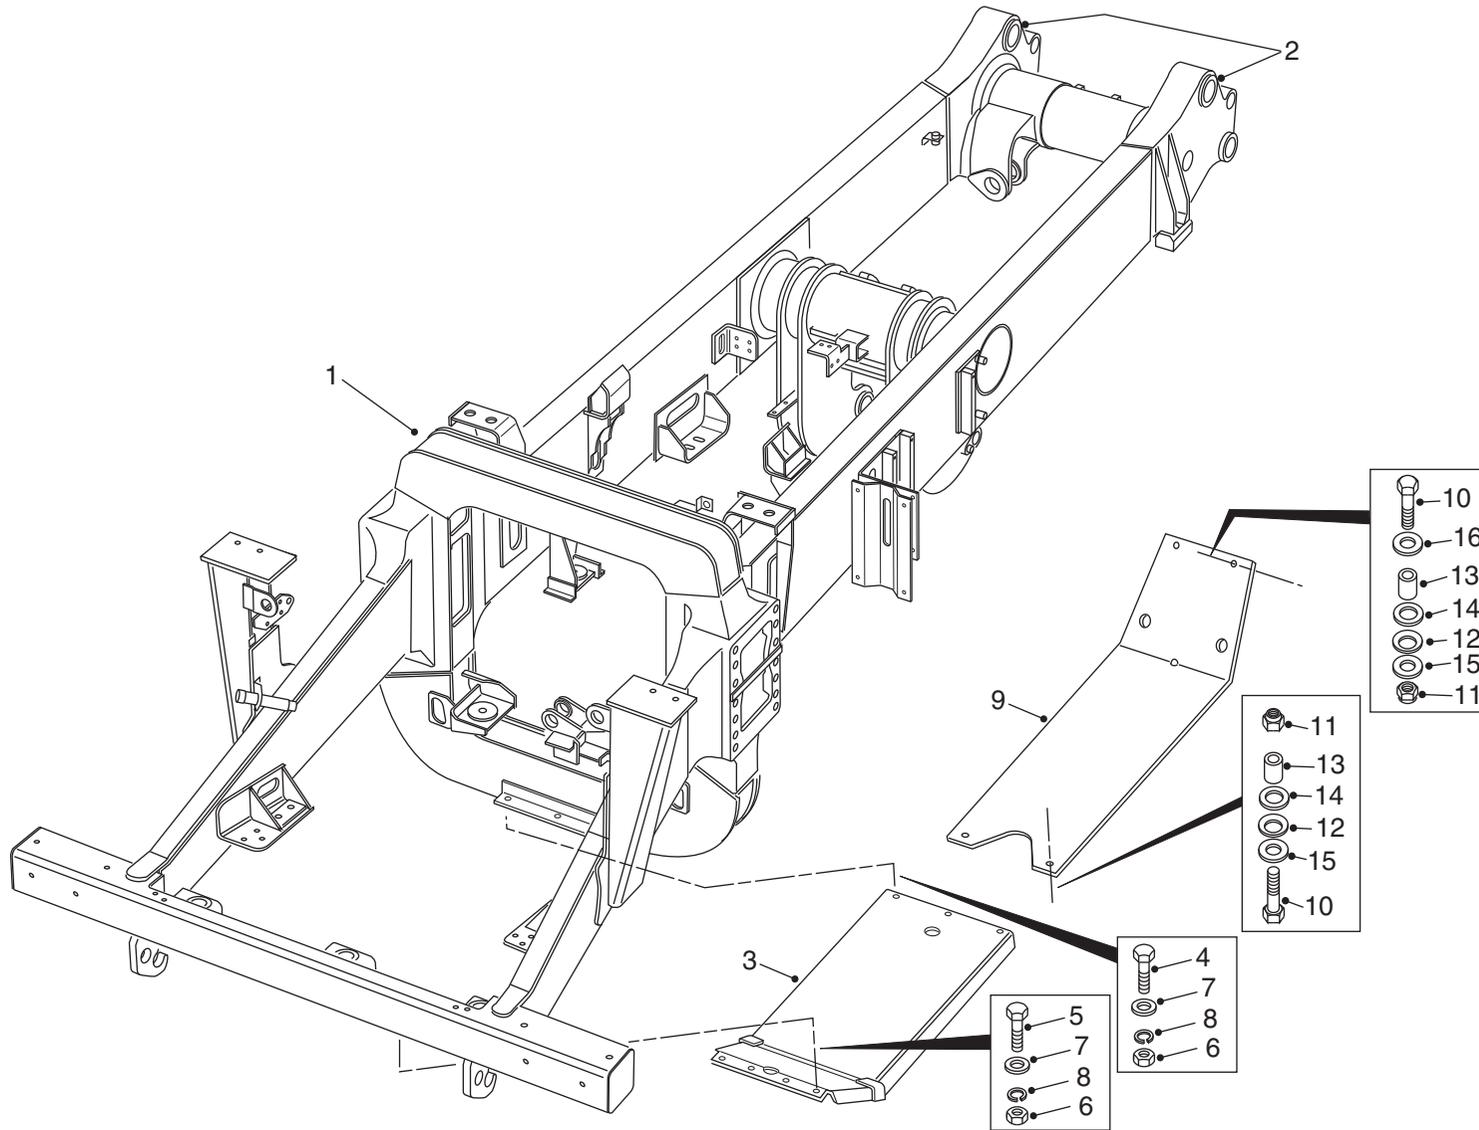


**100-0010-9131 CHASSIS**  
FROM SERIAL NO. T9131011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15336186	FRAME ASSY COMPLETE		
002	002		09011828	.BUSHING		
003	001		15336025	GUARD ASSY-ENG SUMP		
004	003		00271612	BOLT		
005	004		00271613	BOLT		
006	004		00220081	NUT		
007	011		09250715	WASHER-HARDENED		
008	007		00103332	LOCKWASHER		
009	001		15306929	GUARD ASSY-TRANS		
010	004		00271621	BOLT		
011	004		09355771	NUT		
012	004		15250985	SPRING-DISC		
013	004		15303750	SPACER		
014	004		15303749	WASHER-HARDENED		
015	004		15020053	WASHER		
016	002		09011226	WASHER		

**100-0040-9131 HOOD AND MOUNTING**  
FROM SERIAL NO. T9131011

DRAWING NO. P10476

P10476

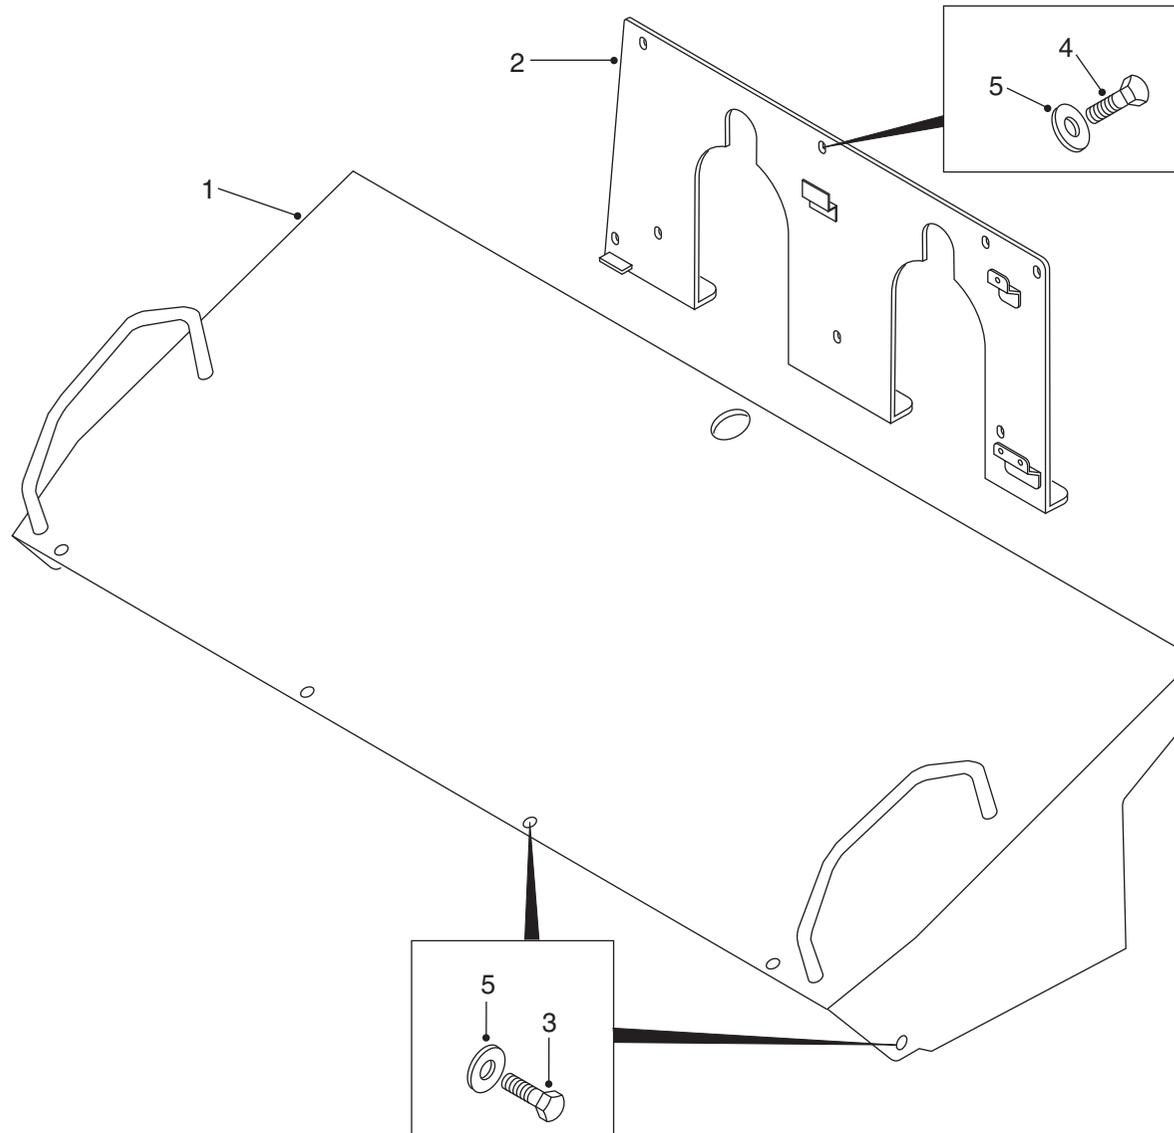


**100-0040-9131 HOOD AND MOUNTING**  
FROM SERIAL NO. T9131011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15307515	HOOD ASSY		
002	001		15307669	PLATE ASSY-AIR CLEANER		
003	010		00179881	BOLT		
004	005		00179883	BOLT		
005	015		09267949	WASHER-HARDENED		

100-0070-9131 FENDERS AND MOUNTING  
FROM SERIAL NO. T9131011


P12090

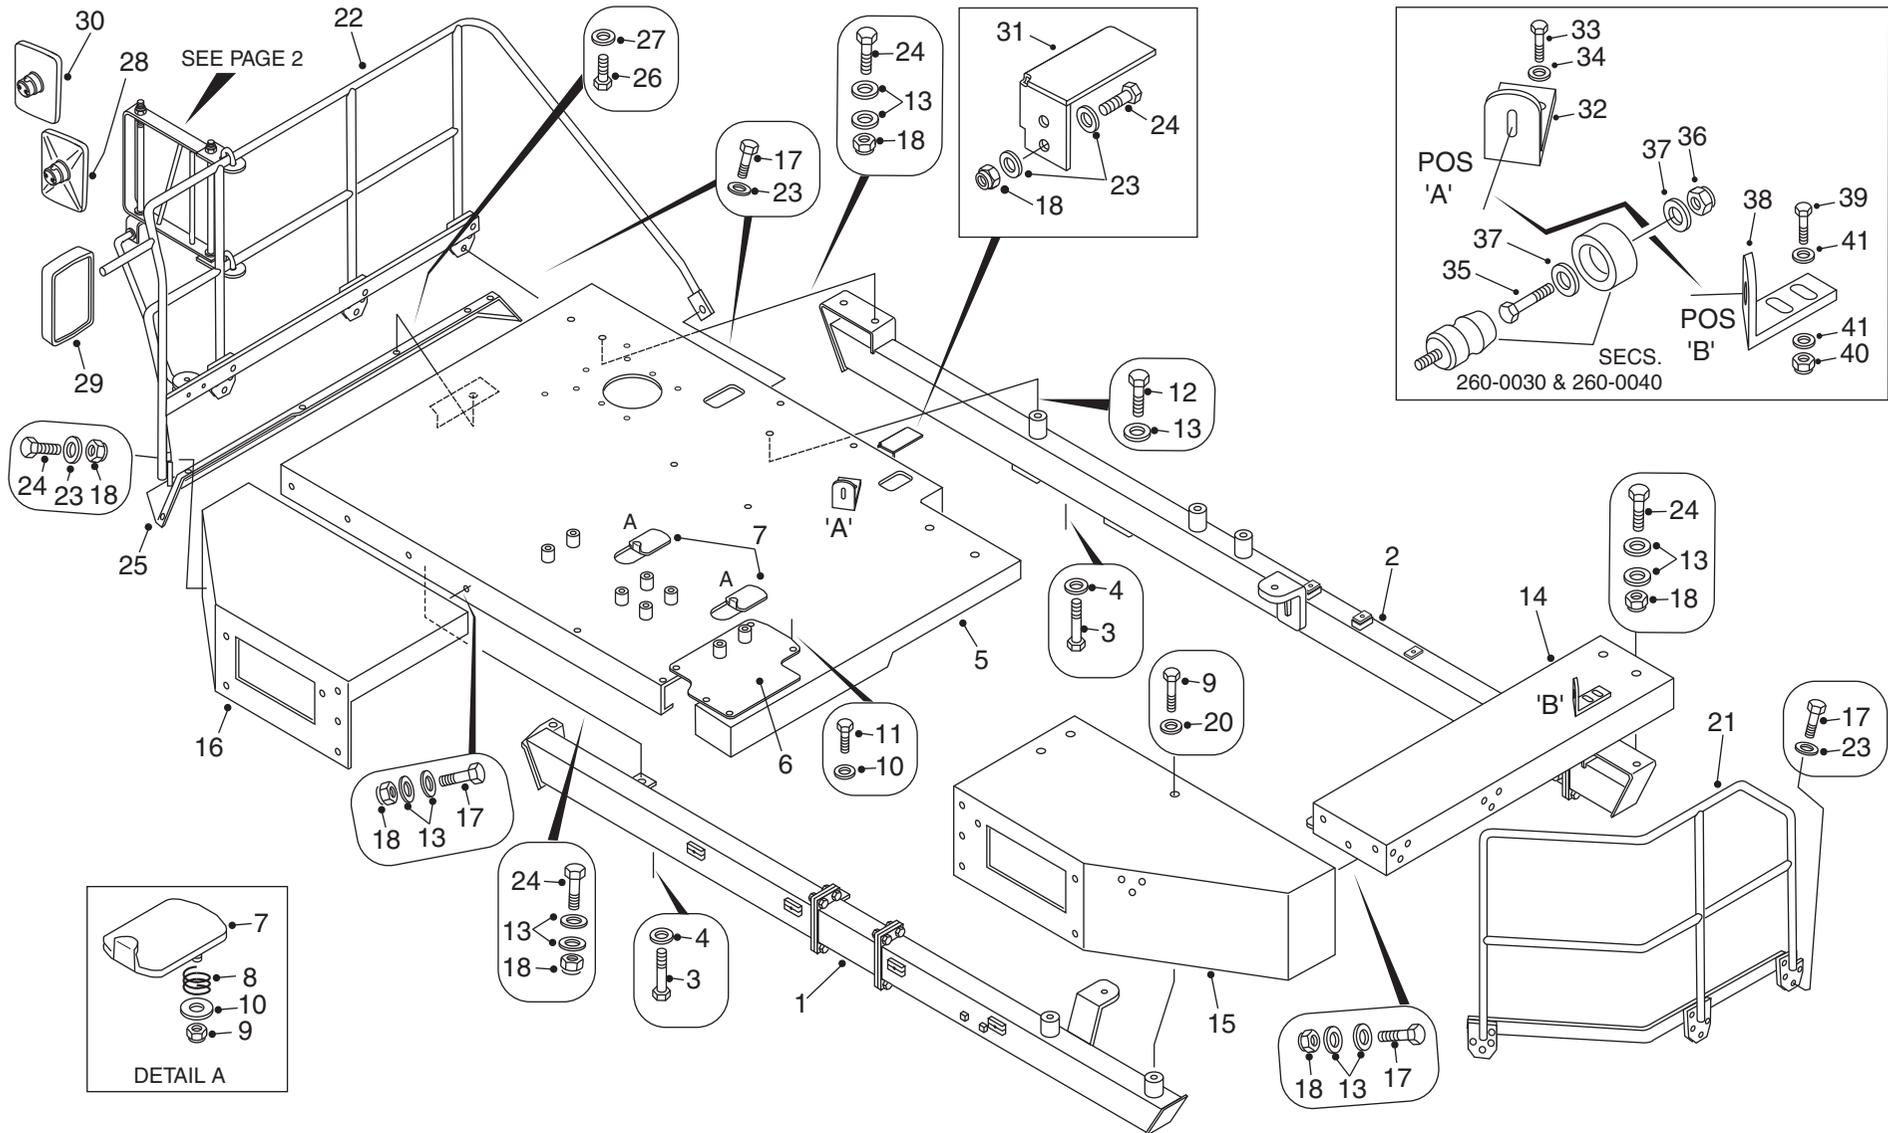

100-0070-9131 FENDERS AND MOUNTING  
FROM SERIAL NO. T9131011

DRAWING NO P12090B

P12090

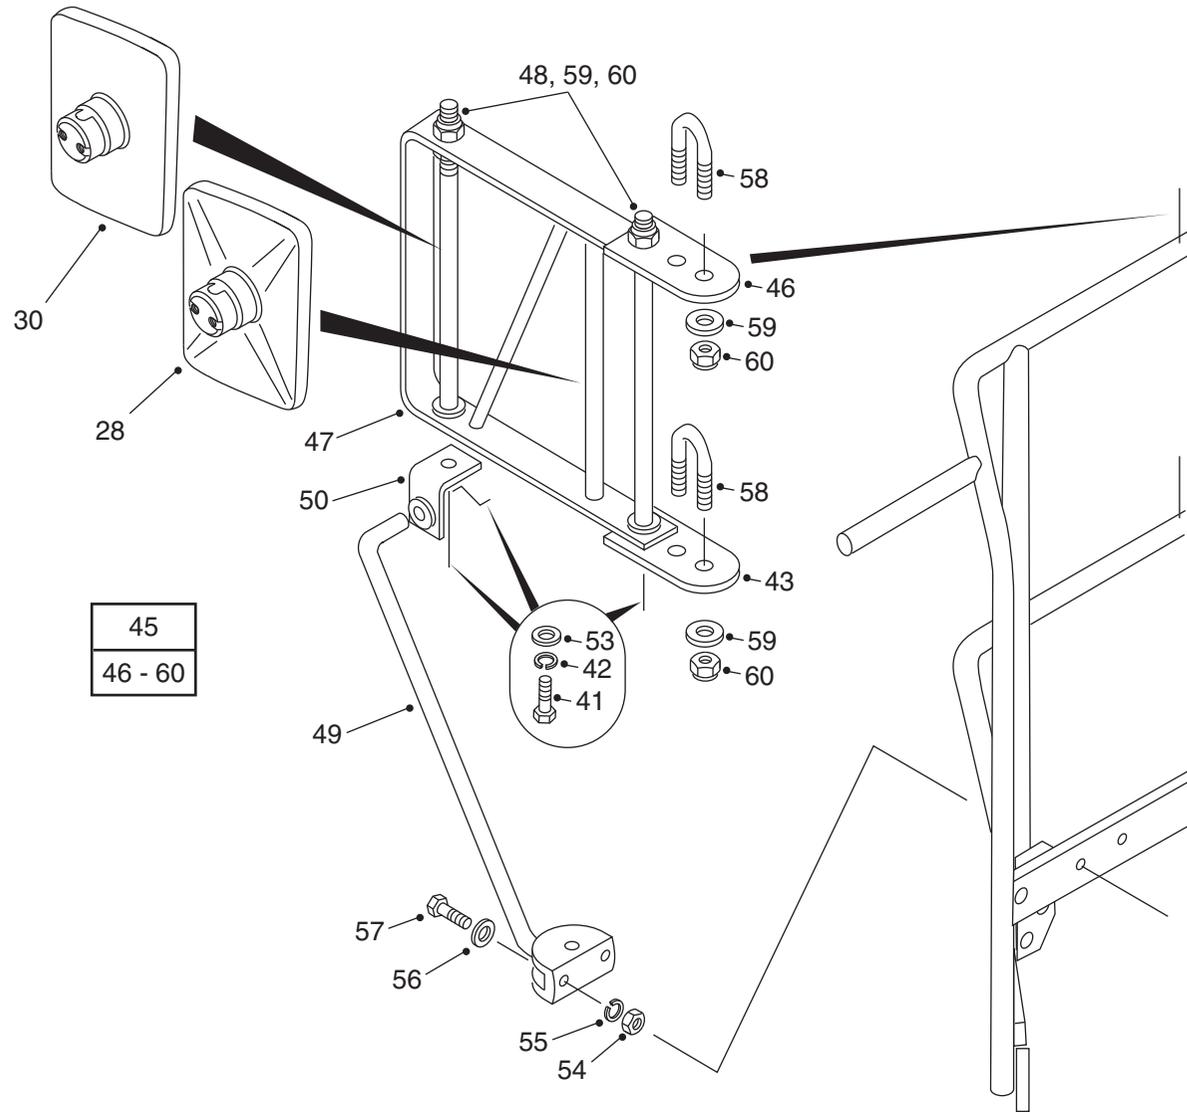





THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0090-9131 LADDERS AND HANDRAILS  
FROM SERIAL NO. T9131011

DRAWING NO. P11802

P11802

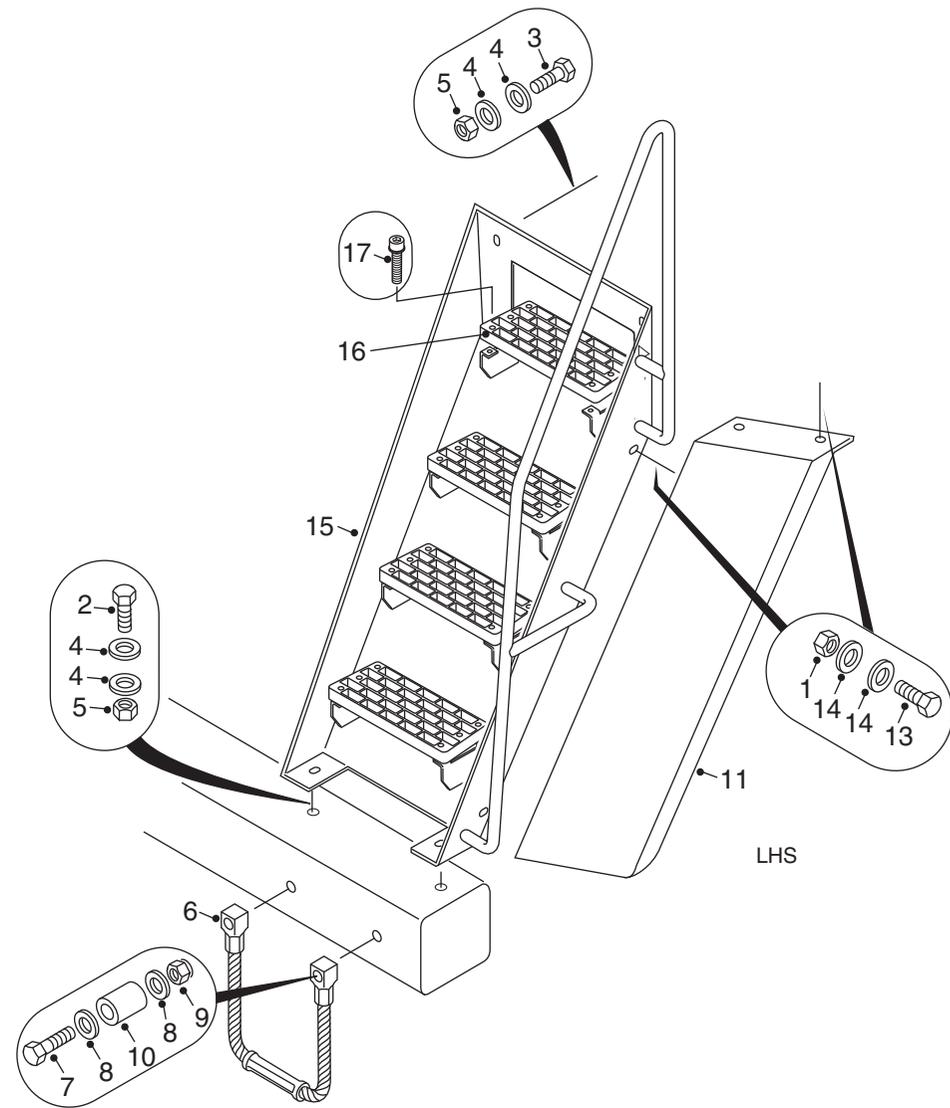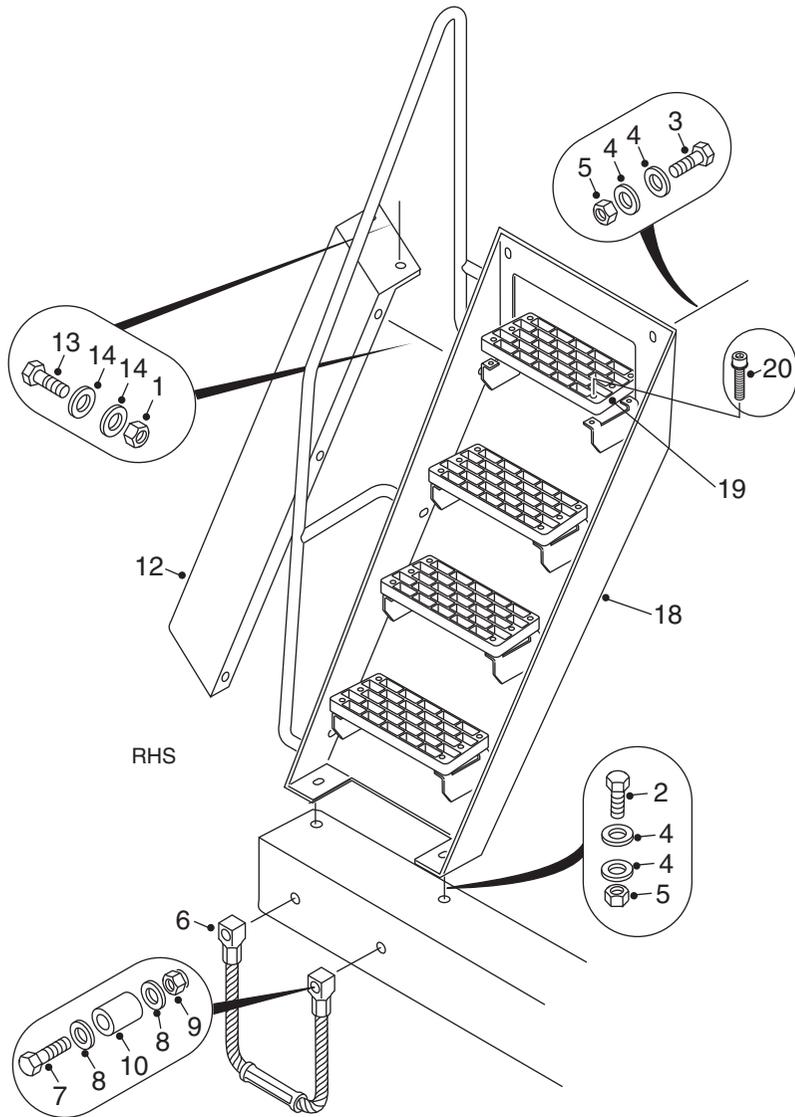

**100-0090-9131 LADDERS AND HANDRAILS**  
 FROM SERIAL NO. T9131011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	010		00274208	NUT		
002	004		00179887	BOLT		
003	006		00179885	BOLT		
004	020		09267949	WASHER-HARDENED		
005	010		00102637	NUT		
006	002		15308997	STEP ASSY		
007	004		00179894	BOLT		
008	012		00106265	WASHER		
009	004		00274209	LOCKNUT		
010	004		15308996	BUSH		
011	001		15310443	MUD DEFLECTOR-LH		
012	001		15310444	MUD DEFLECTOR-RH		
013	010		00179841	BOLT		
014	020		09060202	WASHER-HDN		
015	001		15320818	STEP ASSY-LH		
016	004		15320662	.STEP		
017	016		15320295	.CAPSCREW		
018	001		15320819	STEP ASSY-RH		
019	004		15320662	.STEP		
020	016		15320295	.CAPSCREW		

R2 08/08 (ECN 108067, ECN 109079)

100-0100-9131 RADIATOR GUARD AND MOUNTING  
FROM SERIAL NO. T9131011

DRAWING NO. P12097

P12097

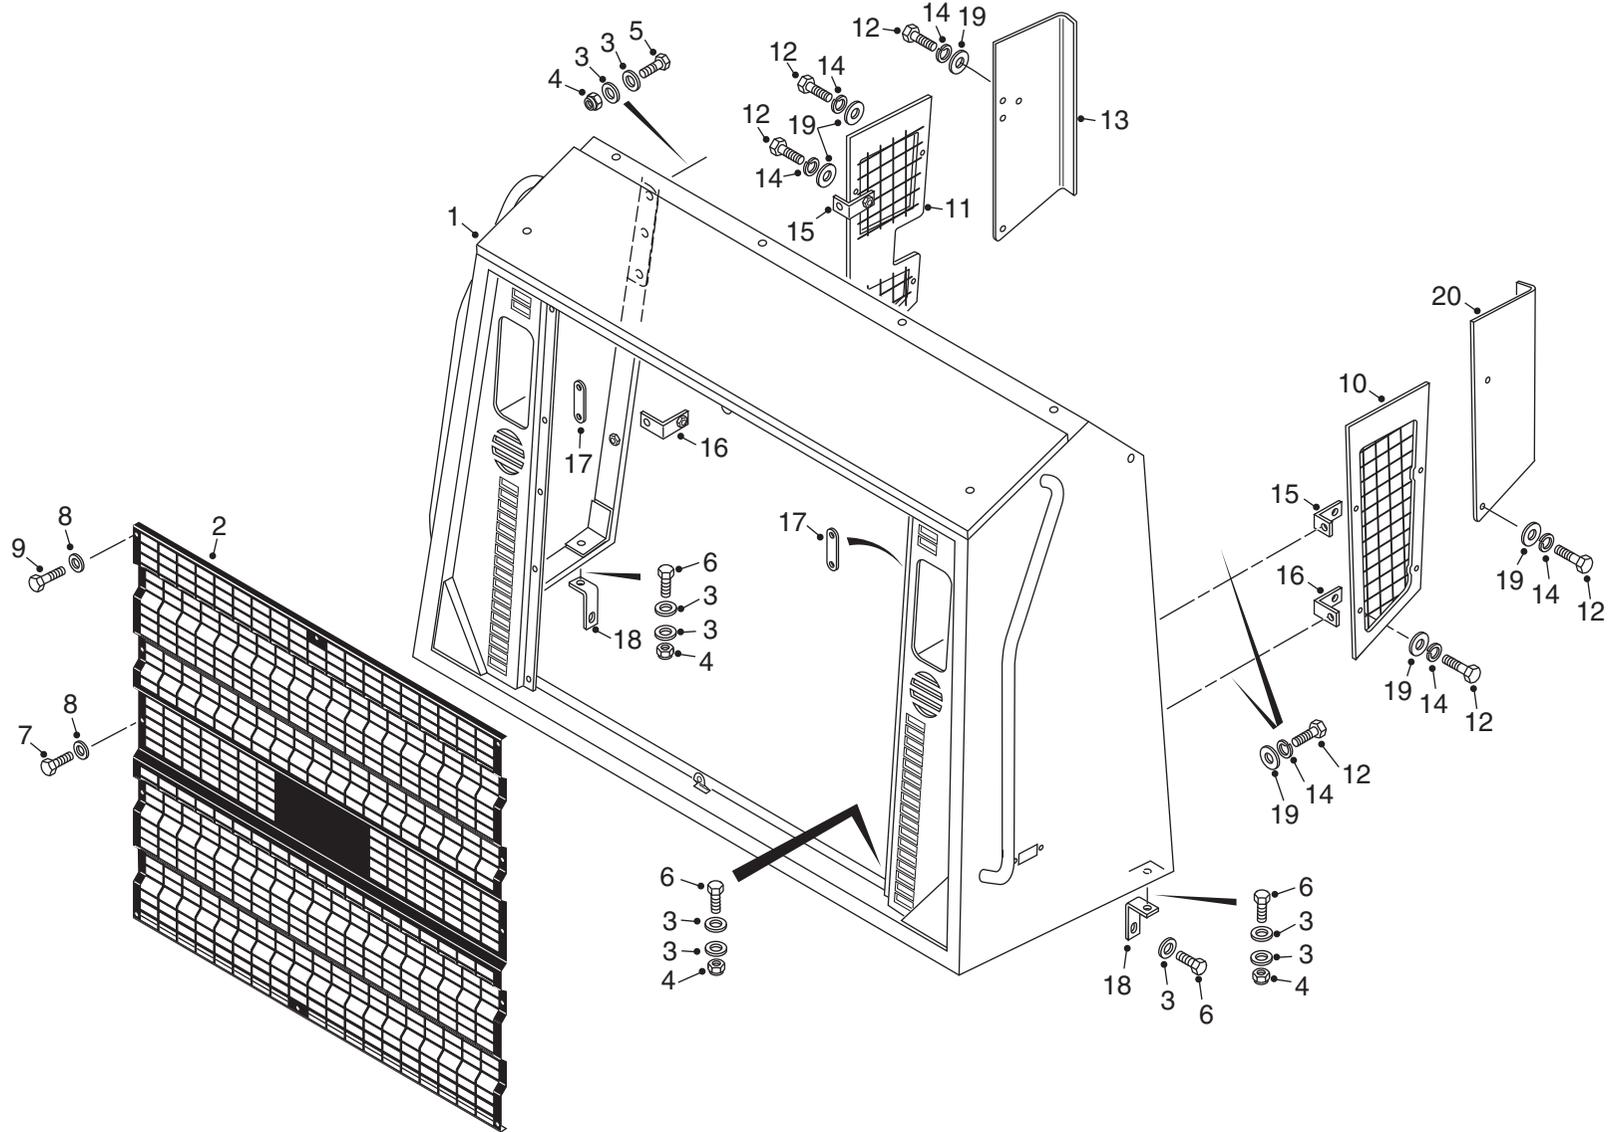







**100-0100-9131 RADIATOR GUARD AND MOUNTING**  
 FROM SERIAL NO. T9131011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15333793	RADIATOR GUARD ASSY	T9131011	T9131017
001	001		15339178	RADIATOR GUARD ASSY	T9131018	
002	001		15333803	RADIATOR GRILLE		
003	022		09267949	WASHER-HARDENED		
004	012		00274209	LOCKNUT		
005	006		00179887	BOLT		
006	008		00179889	BOLT		
007	008		00179839	BOLT		
008	012		01967341	WASHER		
009	004		00179843	BOLT		
010	001		15336305	WINDOW GUARD-LH	T9131011	T9131012
010	001		15337174	WINDOW GUARD-LH	T9131013	
011	001		15336304	WINDOW GUARD-RH	T9131011	T9131012
011	001		15337175	WINDOW GUARD-RH	T9131013	
012	016		06351030	BOLT		
013	001		15336337	GUARD-RH		
014	016		07161030	LOCKWASHER		
015	002		15336299	BRACKET		
016	002		15336300	BRACKET		
017	002		15336301	BRACKET		
018	002		15336311	BRACKET		
019	016		15244714	WASHER-HARDENED		
020	001		15336338	GUARD-LH		

R1 10/07 (108041)

**100-0140-9131 MUDGUARDS**  
FROM SERIAL NO. T9131011

DRAWING NO. P10312

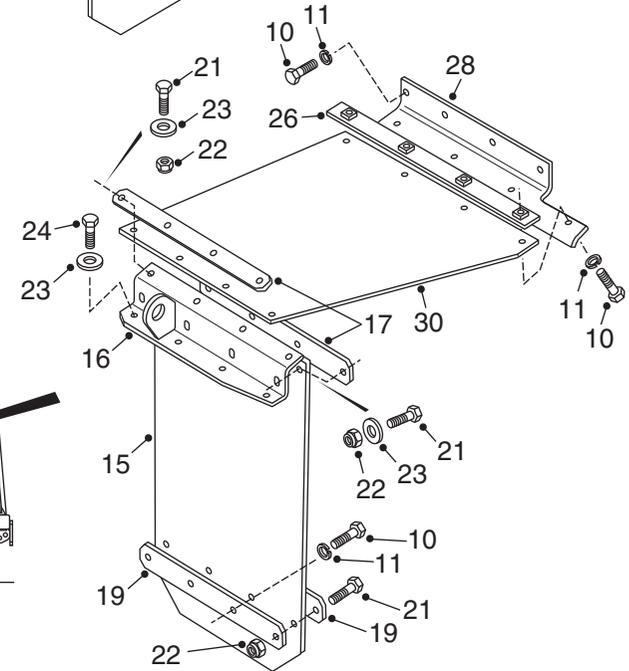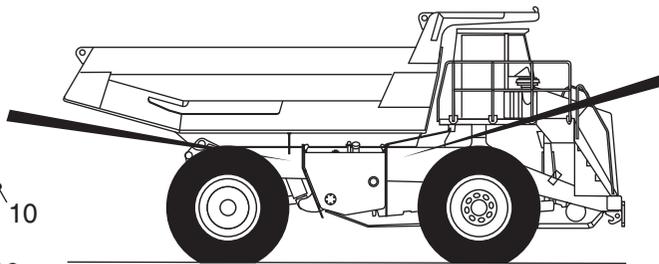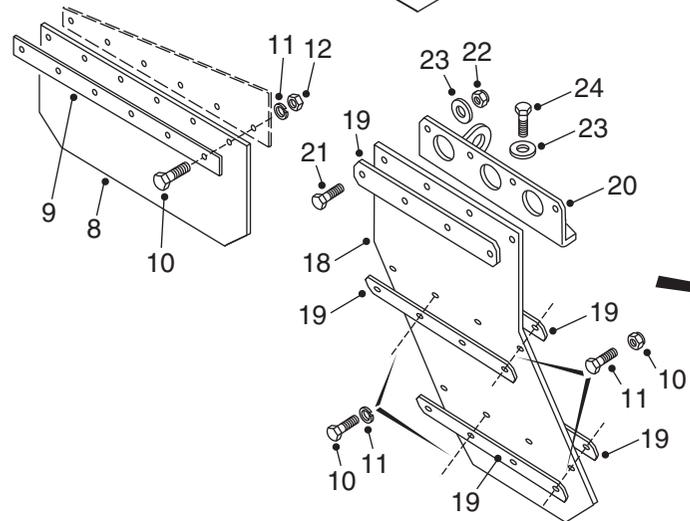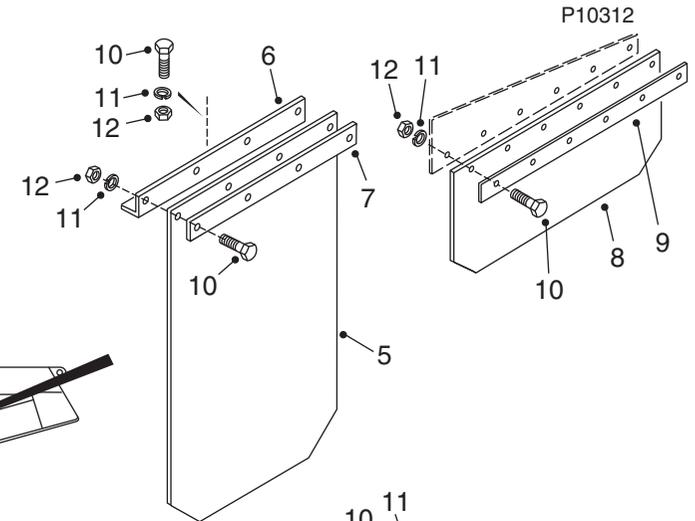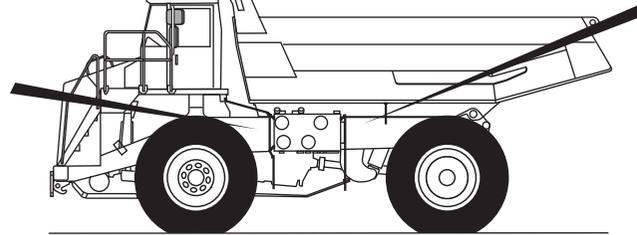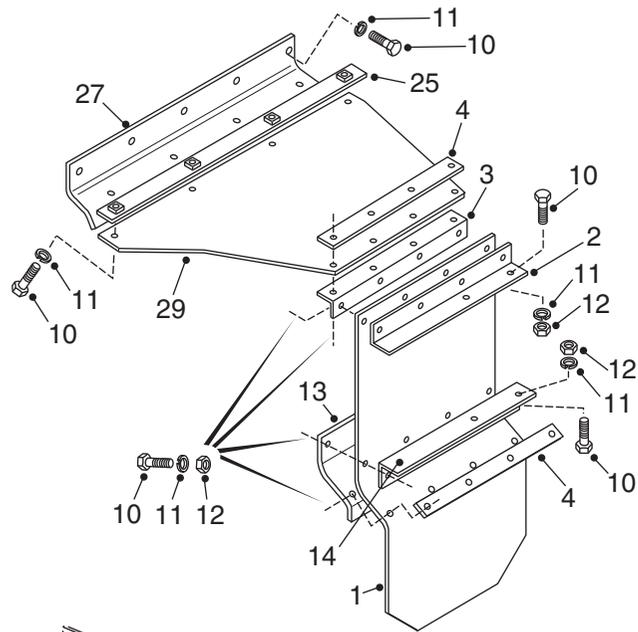

**100-0140-9131 MUDGUARDS**  
FROM SERIAL NO. T9131011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15307620	MUDFLAP FRONT		
002	001		15249123	ANGLE-MOUNTING		
003	001		15255372	ANGLE-MOUNTING		
004	002		15233492	PLATE-MOUNTING		
005	001		15300760	MUDFLAP		
006	001		15300761	ANGLE		
007	001		15300756	CLAMP PLATE		
008	002		15300762	MUDFLAP		
009	002		15249115	PLATE-CLAMPING		
010	065		00179885	BOLT T50		
011	065		00103329	LOCKWASHER		
012	038		00102637	NUT		
013	001		15307387	PLATE		
014	001		15307388	PLATE		
015	001		15306707	MUD FLAP RH FRONT LOWER		
016	001		15306703	BRACKET ASSY FRONT MUD		
017	002		15306709	BACKING STRIP		
018	001		15306708	MUDFLAP RH REAR		
019	007		15306710	BACKING STRIP		
020	001		15306705	BRACKET ASSY REAR MUD		
021	014		00179887	BOLT		
022	015		00274209	LOCKNUT		
023	018		09267949	WASHER-HARDENED		
024	006		00179883	BOLT		
025	001		15311819	PLATE ASSY (LH)		
026	001		15307549	PLATE ASSY (RH)		
027	001		15311818	MUDGUARD PLATE (LH)		
028	001		15307537	MUDGUARD PLATE (RH)		
029	001		15311817	MUDFLAP (LH)	T9131011	T913 TBA
029	001		15334829	MUDFLAP (LH)	T913	
030	001		15311446	MUDFLAP (RH)		

THIS PAGE IS INTENTIONALLY LEFT BLANK

P8544

## **DETROIT DIESEL ENGINE**

THIS UNIT IS EQUIPPED WITH A DETROIT DIESEL ENGINE.

TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.

ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.


Product: 2007-2010 TEREX TR70 Off-Highway Truck Workshop Parts Manual

R4 09/10 (ECN 108707, ECN 108969, SER CORR)  
Full Download: <https://www.aresairmanual.com/downloads/2007-2010-terex-tr70-off-highway-truck-workshop-parts-manual/>

110-0030-9131 ENGINE AND MOUNTING  
FROM SERIAL NO. T9131011

DRAWING NO. P12096

P12096

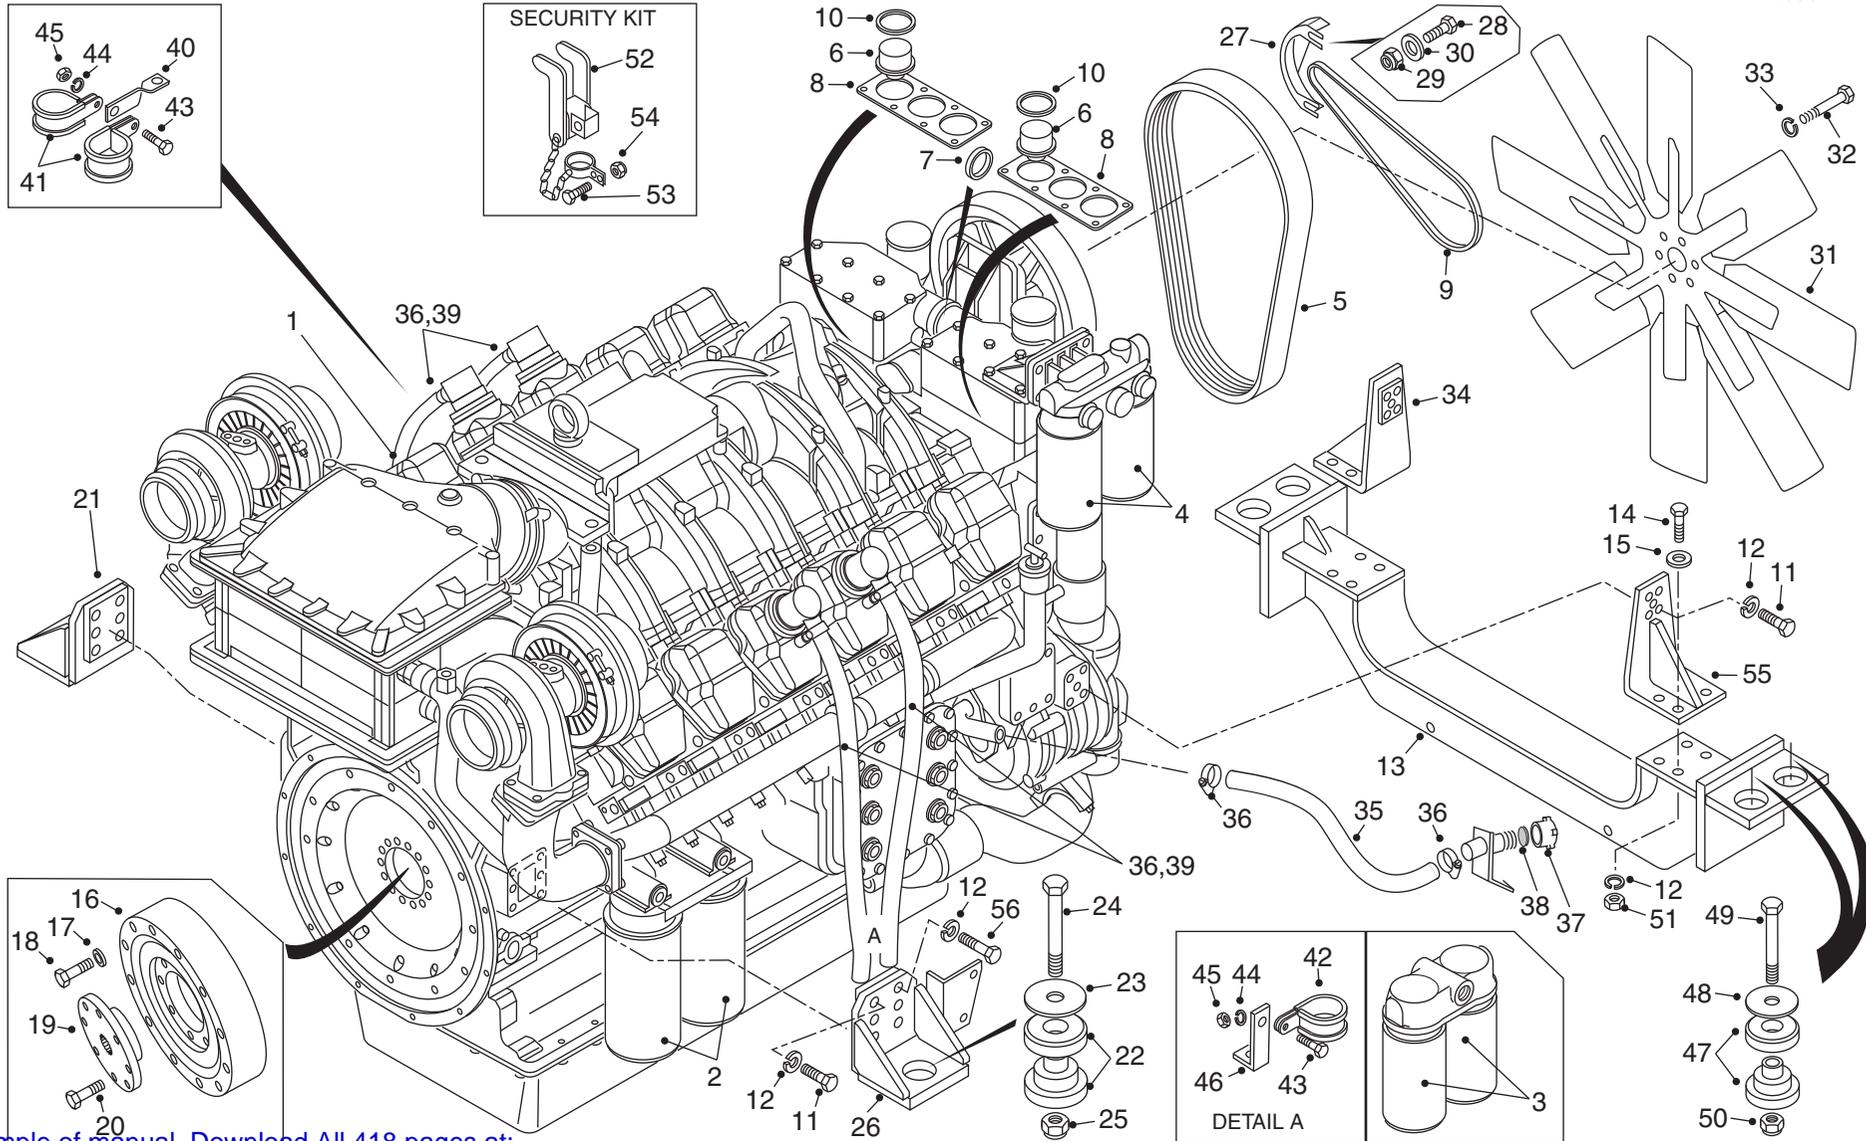

Sample of manual. Download All 418 pages at:

<https://www.aresairmanual.com/downloads/2007-2010-terex-tr70-off-highway-truck-workshop-parts-manual/>