



Publication Part Number: **15503462**

Published by : Customer Support Department - TEREX Equipment Limited, Motherwell, Scotland

PARTS BOOK


CLICK HERE FOR
TRACTOR
TABLE OF CONTENTS

CLICK HERE FOR
TRACTOR OPTIONAL
TABLE OF CONTENTS

CLICK HERE FOR
SCRAPER
TABLE OF CONTENTS

CLICK HERE FOR
SCRAPER OPTIONAL
TABLE OF CONTENTS

CLICK HERE
TO RETURN TO MAIN
LIBRARY INDEX

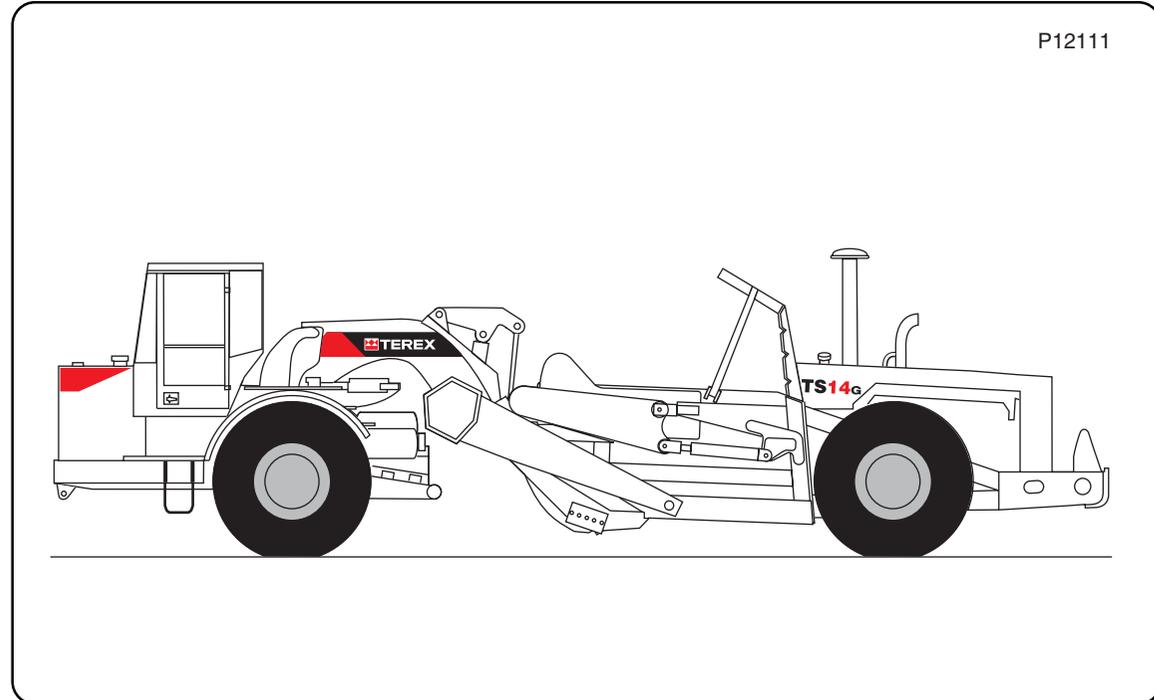

TS14G Overhung Scraper

(Cummins QSB Tier3 Engine and Funk DF158 Trans.)

Serial No. S9141011 and above

May 2007

Sample of manual. Download All 438 pages at:

<https://www.arepairmanual.com/downloads/2007-2010-terex-ts14g-overhung-scraper-workshop-parts-manual/>

Revised: 7th May 2010

Product: 2007-2010 TEREX TS14G Overhung Scraper Workshop Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/2007-2010-terex-ts14g-overhung-scraper-workshop-parts-manual/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 438 pages at:
<https://www.arepairmanual.com/downloads/2007-2010-terex-ts14g-overhung-scraper-workshop-parts-manual/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
 2 9058512 . Shaft
 3 9024169 . Ring
 4 9058132 . Control Assy.
 5 9058135 . . Spring
 6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

Amps	Amperes	Hsg	Housing	N.I	Not Illustrated
As R	As Required	I.D	Inside Diameter	N.L.A	No Longer Available
Assy	Assembly	L.H	Left Hand	N.S.S	Not Sold Separately
Brkt	Bracket	L.W	Lockwasher	O.D	Outside Diameter
Cad-Pltd	Cadium Plated	Lg	Long	Pr	Pair
Comm	Commencement of production	Lkg	Linkage	P.T.O	Power-Take-Off
E.S.N	Elastic Stop Nut	Mtg	Mounting	R.H	Right Hand
Ftgs	Fittings	N.C	Note Code	Std	Standard



Articulated Truck



TRACTOR SECTIONS

	CHASSIS	100
	ENGINE	110
	TRANSMISSION	120
	DRIVELINE	130
	FRONT AXLE	140
	BRAKE PARTS	165
	ELECTRICAL SYSTEM	190
	FUEL SYSTEM	200
	COOLING SYSTEM	210
	STEERING SYSTEM	220

	BOWL HYDRAULIC SYSTEM	235
	BRAKING SYSTEM	250
	AIR SYSTEM-GENERAL	255
	CAB	260
	DECALS	290
	MISCELLANEOUS	300
		
		
		
		

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 100</u>			
100-0010-9151	<u>CHASSIS</u> CHASSIS		R2 02/08
100-0040-9151	HOOD AND MOUNTING		R1 02/08
100-0070-9151	FENDERS AND MOUNTING		
100-0100-9151	RADIATOR GUARD AND MOUNTING		
100-0130-9151	DRAWBAR AND STEERING TRUNNION		R1 03/09
<u>SECTION 110</u>			
110-0020-9151	<u>ENGINE</u> ENGINE ORDERING INSTRUCTIONS		
110-0030-9151	ENGINE AND MOUNTING		
110-0050-9151	AIR CLEANER ASSEMBLY		
110-0060-9151	AIR CLEANER MTG PIPES & HOSES		
110-0070-9151	EXHAUST AND MOUNTING		
110-0130-9151	POWER TAKEOFF-(ENGINE)		R1 02/08
<u>SECTION 120</u>			
120-0010-9151	<u>TRANSMISSION</u> TRANSMISSION MOUNTING		
120-0020-9151	TRANSMISSION BREAKDOWN		
120-0110-9151	OIL LINES-TRANSMISSION		
120-0670-9151	FRONT COVER GROUP		
120-0680-9151	INPUT ASSEMBLY-FRONT COVER		
120-0690-9151	MIDSHIP MOUNTING GROUP		
120-0700-9151	CONVERTOR ASSEMBLY		
120-0710-9151	GEAR RATIO GROUP		
120-0720-9151	1ST STAGE SHAFT ASSEMBLY		
120-0730-9151	2ND STAGE SHAFT ASSEMBLY		
120-0740-9151	3RD STAGE SHAFT ASSEMBLY		
120-0750-9151	4TH STAGE SHAFT ASSEMBLY		
120-0760-9151	5TH STAGE SHAFT ASSEMBLY		
120-0770-9151	6TH STAGE SHAFT ASSEMBLY		
120-0780-9151	OUTPUT GROUP		
120-0790-9151	MAIN CASE GROUP		
120-0810-9151	CONTROL VALVE ASSEMBLY		
120-0820-9151	YOKE GROUP		
120-0830-9151	CONVERTOR LOCKUP VALVE		
120-0840-9151	CHARGE PUMP GROUP		
<u>SECTION 130</u>			
130-0010-9151	<u>DRIVELINES</u> FRONT DRIVELINE		
130-0020-9151	REAR DRIVELINE		

TABLE OF CONTENTS FOR MODEL TS14G T3 CUM TRACTOR

FROM SERIAL NO S9141011

REVISED 05/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 140</u>	<u>FRONT AXLE</u>		
140-0020-9151	AXLE GROUP-FRONT		
140-0030-9151	PLANETARY GEARING-FRONT		
140-0040-9151	WHEEL, RIM AND TYRE-FRONT		
140-0060-9151	DIFFERENTIAL-FRONT		
<u>SECTION 165</u>	<u>BRAKE PARTS</u>		
165-0031-9151	BRAKE PARTS-SCRAPERS		
165-0050-9151	BRAKE GUARDS		
165-0060-9151	SLACK ADJUSTER		
<u>SECTION 190</u>	<u>ELECTRICAL SYSTEM</u>		
190-0010-9151	TERMINALS		
190-0011-9151	CONNECTORS		
190-0030-9151	CABLES/HARNESSES-CAB		
190-0040-9151	CABLES/HARNESSES-CHASS/ENG		
190-0070-9151	BATTERY AND CABLES		
190-0080-9151	BATTERY MOUNTING		
190-0100-9151	ELECTRICAL LIGHTING SYSTEM		
190-0110-9151	ALTERNATOR		
190-0120-9151	STARTER MOTOR		
190-0270-9151	SWITCHES AND SENSORS		R1 08/07
190-0300-9151	RADIO CASSETTE AND SPEAKERS		
<u>SECTION 200</u>	<u>FUEL SYSTEM</u>		
200-0010-9151	FUEL TANK AND MOUNTING		
200-0040-9151	FUEL LINES		R1 02/08
200-0050-9151	ACCELERATOR LINKAGE		
<u>SECTION 210</u>	<u>COOLING SYSTEM</u>		
210-0010-9151	RADIATOR ASSEMBLY	S9141011 TO S9141011	
210-0010-9151	RADIATOR ASSEMBLY	S9141012	
210-0020-9151	RADIATOR MOUNTING		
210-0030-9151	RADIATOR PIPING		
210-0035-9151	CHARGE AIR COOLER & PIPING		
210-0040-9151	RADIATOR HEADER TANK & HOSES		
210-0060-9151	OIL COOLER AND PIPING-TRANS	S9141011 TO S9141016	R1 10/07
210-0060-9151	OIL COOLER AND PIPING-TRANS	S9141017	R1 10/07

TABLE OF CONTENTS FOR MODEL TS14G T3 CUM TRACTOR

FROM SERIAL NO S9141011

REVISED 05/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 220</u>			
<u>STEERING SYSTEM</u>			
220-0010-9151	STEERING LINES		R1 02/08
220-0090-9151	STEERING VALVE		
220-0120-9151	STEERING CYLINDER		
220-0130-9151	RELIEF VALVE-STEERING		
220-0160-9151	FLOW REVERSING VALVE		
220-0180-9151	STEERING GEAR		
220-0190-9151	STEERING LINKAGE		
220-0230-9151	STEERING COLUMN MOUNTING		
<u>SECTION 235</u>			
<u>HYDRAULIC SYSTEM</u>			
<u>LINES AND FITTINGS-HYDRAULIC</u>			
235-0010-9151	HYDRAULIC TANK	S9141011 TO S9141015	R2 05/10
235-0040-9151	HYDRAULIC TANK	S9141016	R1 06/09
235-0040-9151	HYDRAULIC TANK	S9141016	R1 06/09
235-0050-9151	PUMP ASSY	S9141011 TO S9141015	
235-0050-9151	PUMP ASSY	S9141016	R1 10/08
235-0060-9151	CONTROL VALVE ASSY		
235-0070-9151	ACCUMULATOR		
235-0120-9151	RELIEF VALVE ASSY		
235-0150-9151	HYDRAULIC SERVO LINES		R1 02/08
235-0160-9151	SERVO SELECTOR VALVE-BOWL		
<u>SECTION 250</u>			
<u>BRAKING SYSTEM</u>			
250-0010-9151	BRAKE LINES-AIR		
250-0070-9151	TREADLE VALVE		
250-0170-9151	AIR TANK AND MOUNTING		
250-0180-9151	QUICK RELEASE/LIMITING VALVE		
250-0190-9151	CONTROL VALVE-BRAKES		
250-0200-9151	AIR DRIER		
250-0260-9151	BRAKE CHAMBER/PRESS CONVERTER		
250-0280-9151	RELAY VALVE		
250-0290-9151	PRESSURE PROTECTION VALVE		
<u>SECTION 255</u>			
<u>AIR SYSTEM-GENERAL</u>			
255-0010-9151	AIR LINES-GENERAL		
255-0020-9151	AIR HORN		

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 260</u>			
260-0010-9151	<u>CAB</u> CAB ASSEMBLY		
260-0015-9151	CAB MOUNTING & AUXILARY PARTS		
260-0030-9151	CAB DOOR-LEFT HAND		
260-0080-9151	SWITCHES AND INSTRUMENTS		R1 05/07
260-0090-9151	SEAT-DRIVER		
260-0130-9151	AIR CONDITIONER/HEATER		
260-0140-9151	HEATER LINES AND WIRING		
260-0145-9151	AIR CONDITIONER LINES		
260-0190-9151	WINDSCREEN WASHER		
<u>SECTION290</u>			
290-0010-9151	<u>DECALS</u> DECALS-ENGLISH(ISO)		
290-0011-9151	DECALS-ENGLISH(ANSI)		
290-0100-9151	WALKWAY SURFACES (ANTI-SLIP)		
<u>SECTION 300</u>			
300-0020-9151	<u>MISCELLANEOUS</u> LUBRICATION SYSTEM		
300-0040-9151	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-9151	POLYPROPELENE CLAMPS		

THIS PAGE IS INTENTIONALLY LEFT BLANK

THIS PAGE IS INTENTIONALLY LEFT BLANK

100-0010-9151 CHASSIS
 FROM SERIAL NO. S9141011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15334362	FRAME ASSY-TRACTOR		
002	002		09177282	.SPINDLE ASSY		
003	002		09114572	..BUSHING		
004	004		09102047	..BUSHING		
005	001		15255576	GUARD ASSY		
006	004		00179887	BOLT		
007	004		00103329	LOCKWASHER		
008	001		15300366	BELLY GUARD	S9141011	S9141016
008	001		15338163	BELLY GUARD	S9141017	
009	002		00179885	BOLT		
010	008		00106265	WASHER		
011	001		15300281	STEP ASSY		
012	001		15005510	LATCH		
013	002		00271615	BOLT		
014	002		09355771	NUT		
015	004		00106268	WASHER		
016	004		06350512	BOLT		
017	004		00274209	LOCKNUT		
018	002		15255698	STEP ASSY		
019	001		15308137	COVER		
020	001		15304612	COVER ASSY-HINGED		
021	004		07160530	LOCKWASHER		
022	008		00179837	BOLT		
023	004		00179833	BOLT		
024	006		00108580	LOCKWASHER		
025	004		00106263	WASHER		
026	004		09270000	WASHER-HARDENED		
027	002		00179892	BOLT		
028	002		00179894	BOLT		
029	001		15334409	BRACKET-MIRROR MTG RHS		
030	004		07150510	WASHER		
031	004		06430501	NUT		
032	002		09162424	BUSHING		
033	001		15323622	BELLY GUARD	S9141011	S9141012
033	001		15342519	BELLY GUARD	S9141013	
034	002		15317299	WASHER-NYLON		
035	004		15225967	BOLT		
036	004		15003250	NUT-STACKING		
037	004		00103319	LOCKWASHER		
038	008		00103339	WASHER		

R1 02/08 (ECN 109177)

100-0040-9151 HOOD AND MOUNTING
FROM SERIAL NO. S9141011

DRAWING NO. P12116

P12116

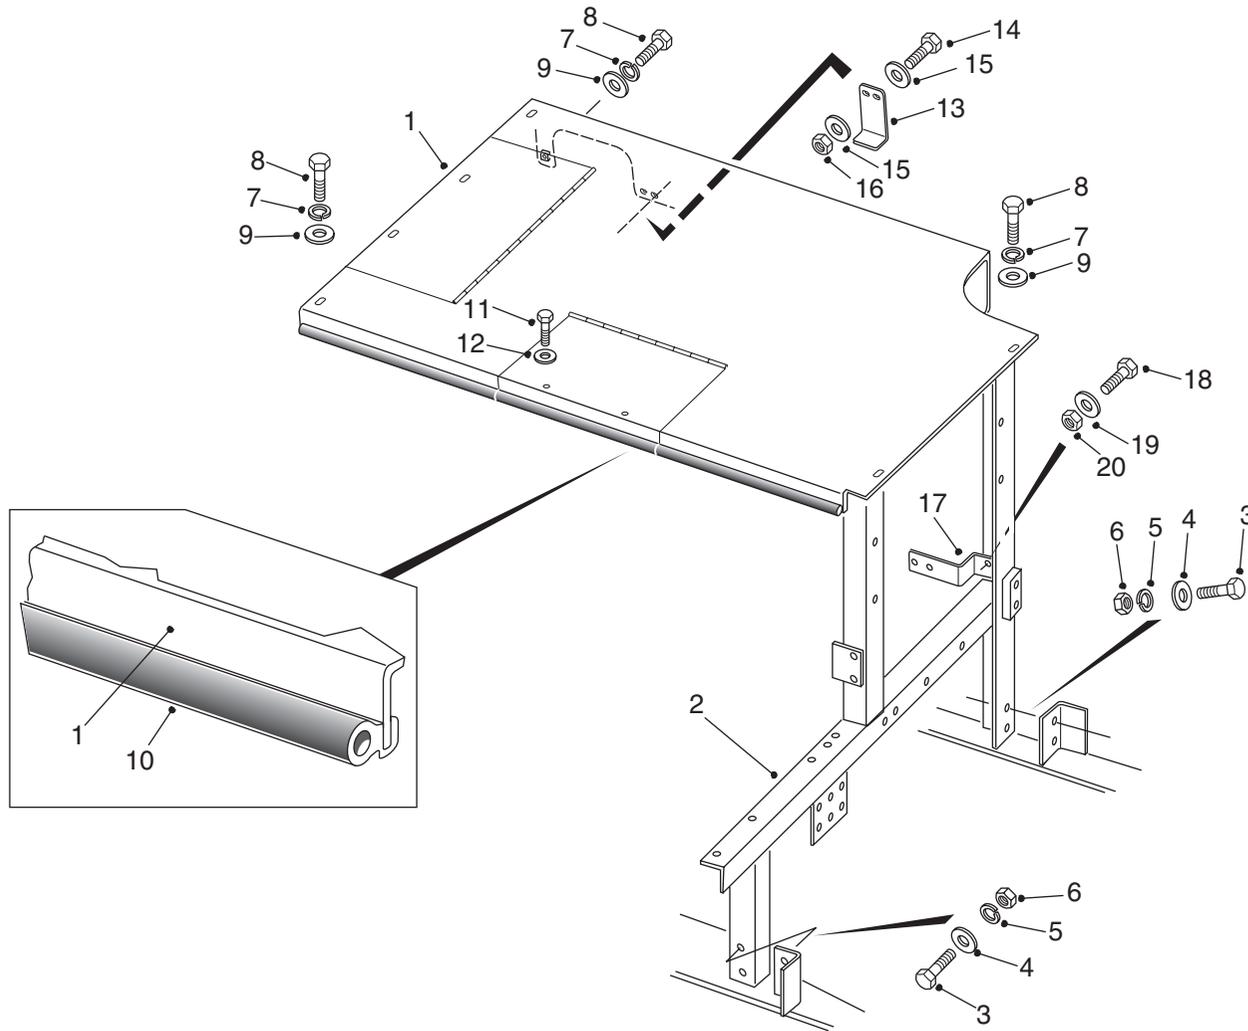


100-0040-9151 HOOD AND MOUNTING
 FROM SERIAL NO. S9141011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15334281	HOOD ASSY-TRACTOR		
002	001		15334286	SUPPORT FRAME ASSY		
003	004		00179887	BOLT		
004	008		00106265	WASHER		
005	004		00103329	LOCKWASHER		
006	004		00120378	NUT		
007	007		00108580	LOCKWASHER		
008	007		00179839	BOLT		
009	007		15244714	WASHER-HARDENED		
010	ASR		15017388	SEAL-BULK 55" LG		
011	002		00179795	BOLT		
012	002		00103339	WASHER		
013	001		15334411	BRACKET-FAN GUARD SUPP		
014	002		06351030	BOLT		
015	004		07151020	WASHER		
016	002		06471001	LOCKNUT		
017	001		15334471	BRACKET	S9141013	
018	002		06351025	BOLT	S9141013	
019	002		07151020	WASHER	S9141013	
020	002		06471001	LOCKNUT	S9141013	

100-0070-9151 FENDERS AND MOUNTING
FROM SERIAL NO. S9141011

DRAWING NO. P10613

P10613

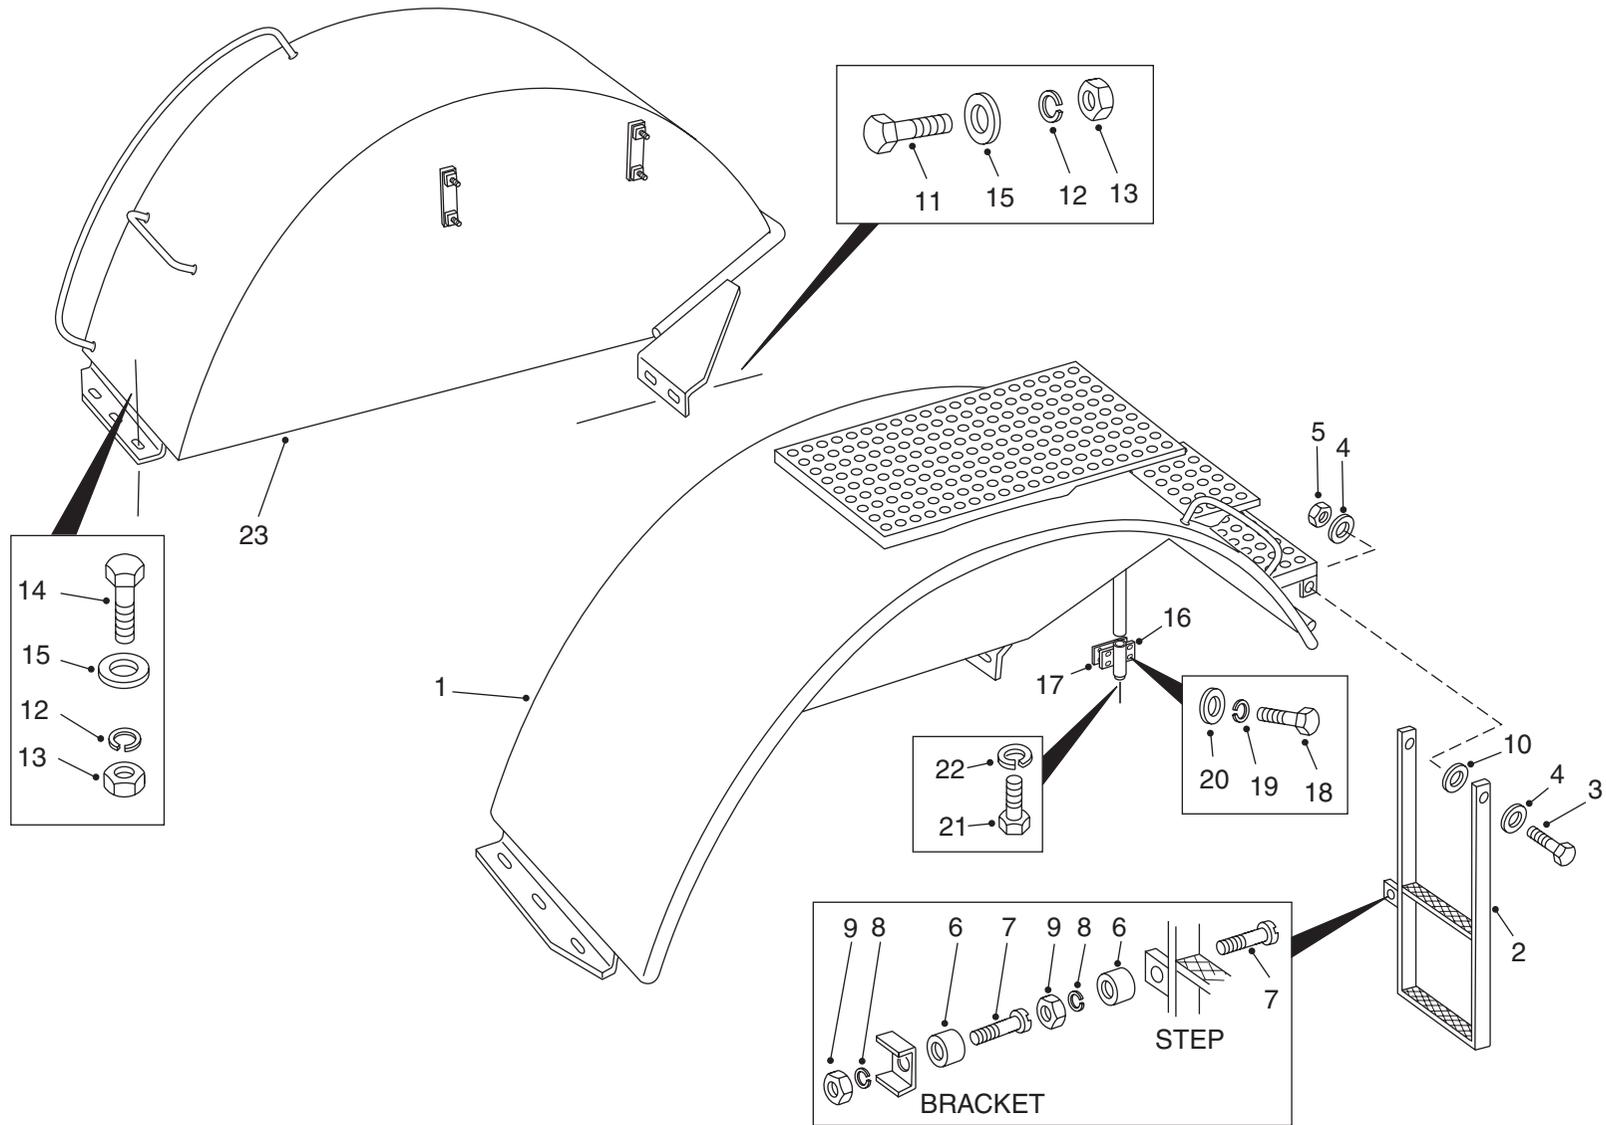


100-0070-9151 FENDERS AND MOUNTING
 FROM SERIAL NO. S9141011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15309532	FENDER ASSY-LH		
002	001		15300804	.STEP ASSY		
003	002		00271612	.BOLT		
004	004		00106268	.WASHER		
005	002		09355771	.NUT		
006	001		15230374	.RETAINER		
007	002		06350620	.SCREW		
008	002		07150615	.LOCKWASHER		
009	002		06430601	.NUT		
010	002		15317299	.WASHER-NYLON		
011	004		00179887	BOLT		
012	010		00103329	LOCKWASHER		
013	010		00120378	NUT		
014	006		00179885	BOLT		
015	010		09267949	WASHER-HARDENED		
016	001		15309529	BRACKET ASSY		
017	002		15309535	PLATE		
018	004		06351240	BOLT		
019	004		07161230	LOCKWASHER		
020	004		07151220	WASHER		
021	001		00223450	BOLT		
022	001		00103332	LOCKWASHER		
023	001		15300044	FENDER ASSY-RH		

100-0100-9151 RADIATOR GUARD AND MOUNTING
FROM SERIAL NO. S9141011

DRAWING NO. P12117

P12117

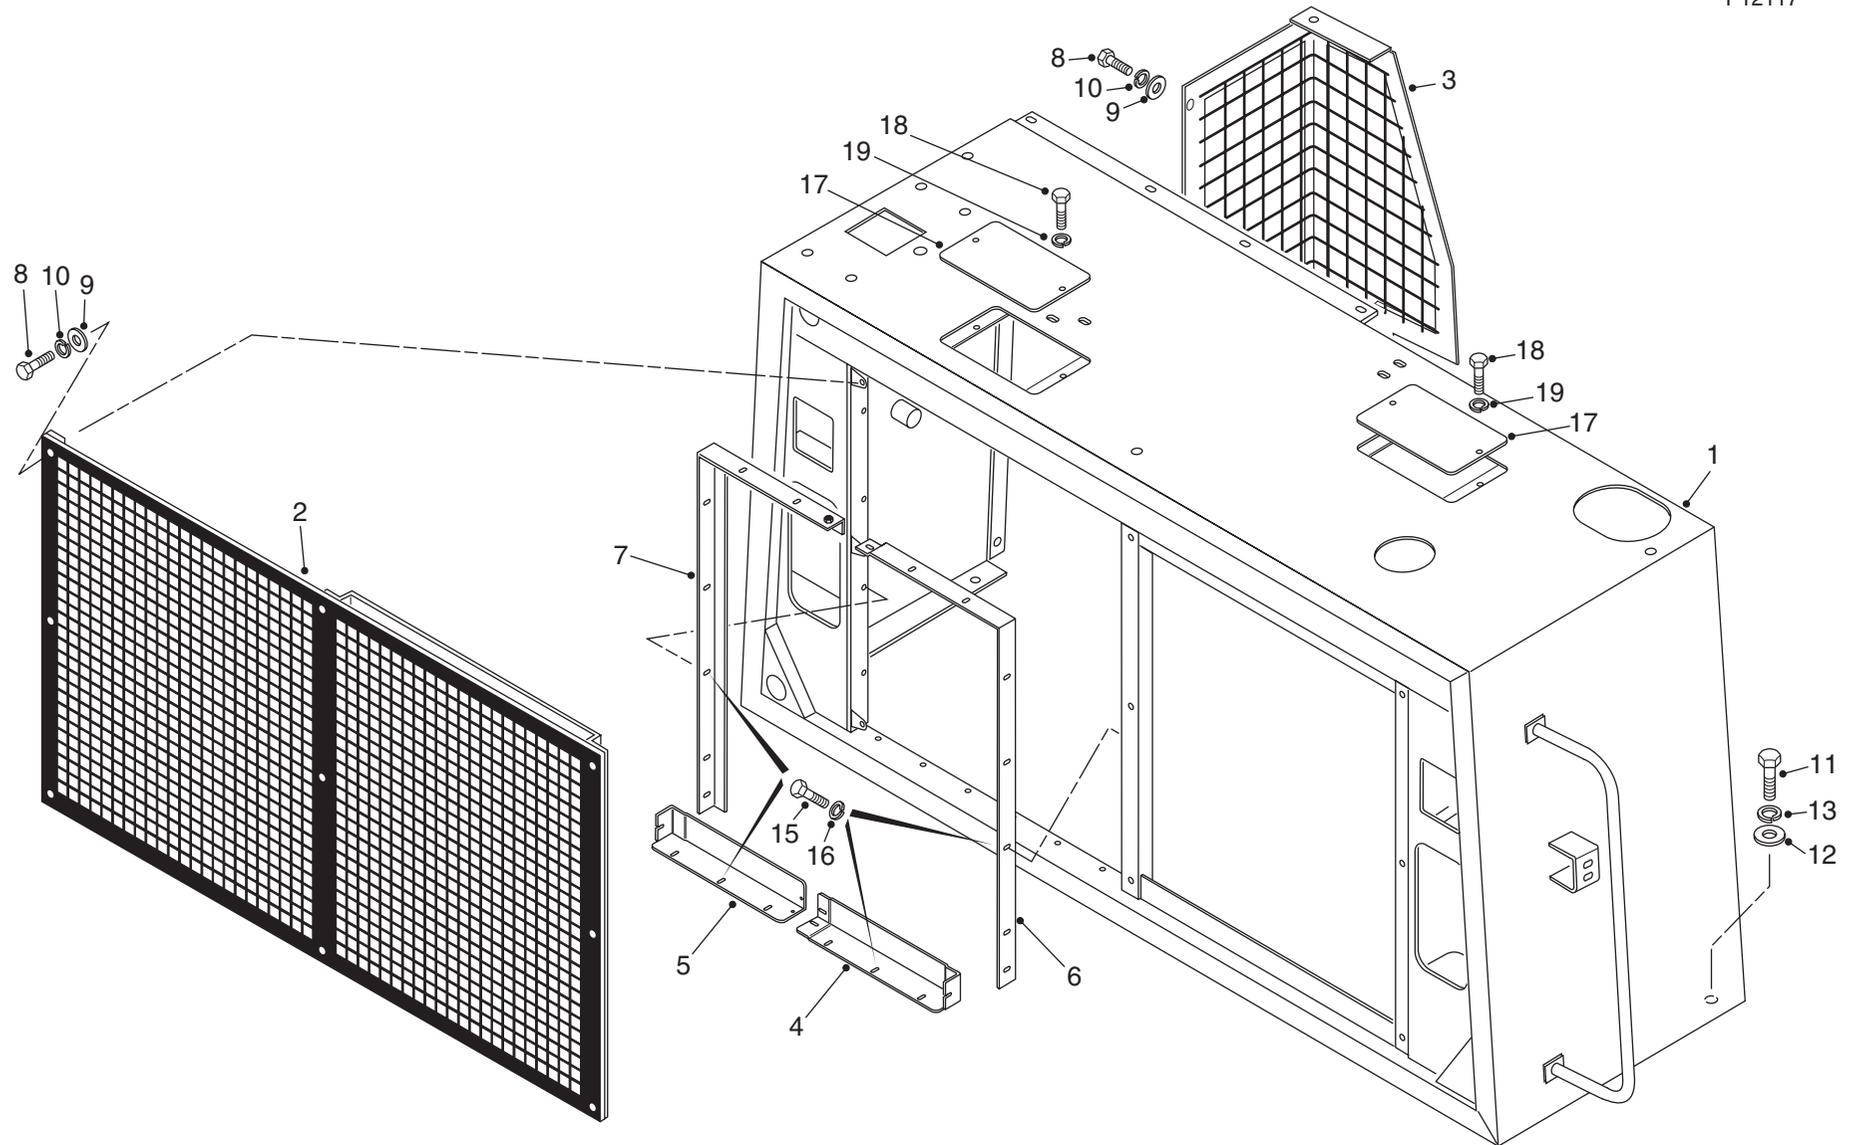

100-0100-9151 RADIATOR GUARD AND MOUNTING
 FROM SERIAL NO. S9141011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15333514	RADIATOR GUARD ASSY		
002	001		15335042	GRILLE ASSY		
003	001		15334372	GUARD-FAN RHS		
004	001		15334320	PLATE-ANTIRECIRC BTM-LH		
005	001		15334321	PLATE-ANTIRECIRC BTM-RH		
006	001		15334322	PLATE-ANTIRECIRC LH		
007	001		15334323	PLATE-ANTIRECIRC RH		
008	010		06351025	BOLT		
009	010		07151020	WASHER		
010	010		07161030	LOCKWASHER		
011	009		07151020	BOLT		
012	016		00106265	WASHER		
013	016		00103329	LOCKWASHER		
014	007		00120378	NUT		
015	023		06350616	BOLT		
016	023		07150615	LOCKWASHER		
017	002		15334351	PLATE		
018	004		00179839	BOLT		
019	004		00108580	LOCKWASHER		

R1 03/09 (SER CORR)

100-0130-9151 DRAWBAR AND STEERING TRUNNION
FROM SERIAL NO. S9141011

DRAWING NO. P6537

P6537

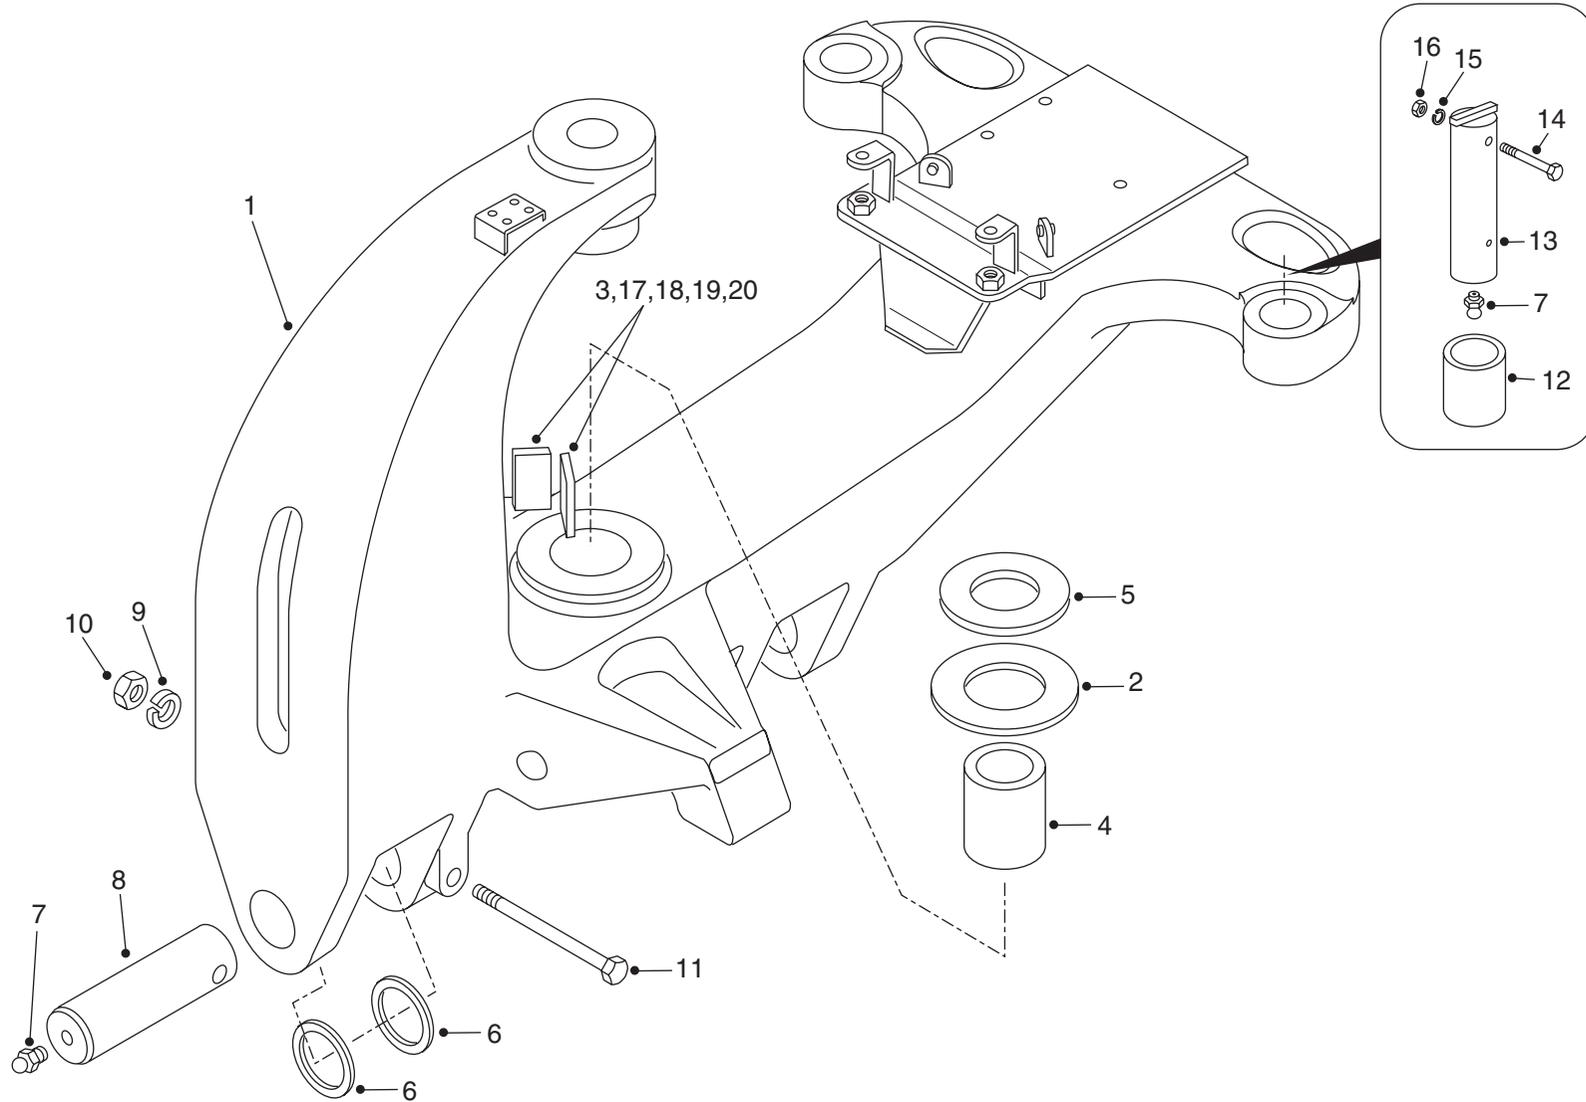

100-0130-9151 DRAWBAR AND STEERING TRUNNION
 FROM SERIAL NO. S9141011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15234832	TRUNNION ASSY		
002	001		09179608	.WASHER-THRUST		
003	002		09167186	.BAR-SPACER 10mm		
004	001		09222374	BUSHING		
005	001		09205646	WASHER		
006	004		09214857	WASHER		
007	004		09411010	FITTING-GREASE		
008	002		09162425	PIN		
009	002		00120350	LOCKWASHER		
010	002		00216353	NUT		
011	002		00273096	BOLT		
012	002		09162657	BUSHING-STEERING ARM		
013	002		15232281	PIN		
014	002		00189787	BOLT		
015	002		00103329	LOCKWASHER		
016	002		00120378	NUT		
017	ASR		09167185	BAR-SPACER		
018	ASR		09167187	BAR-SPACER		
019	ASR		09167188	BAR-SPACER		
020	ASR		09167189	BAR-SPACER		

THIS PAGE IS INTENTIONALLY LEFT BLANK

CUMMINS ENGINE

THIS UNIT IS EQUIPPED WITH A CUMMINS DIESEL ENGINE.

TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.


A SEPARATE CUMMINS ENGINE PARTS BOOK IS SUPPLIED WITH NEW UNITS FOR ENGINE PARTS COVERAGE.

ANY ADDITIONAL REQUESTS FOR THIS CUMMINS ENGINE PARTS BOOK OR ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

110-0030-9151 ENGINE AND MOUNTING
FROM SERIAL NO. S9141011

DRAWING NO. P12120

P12120

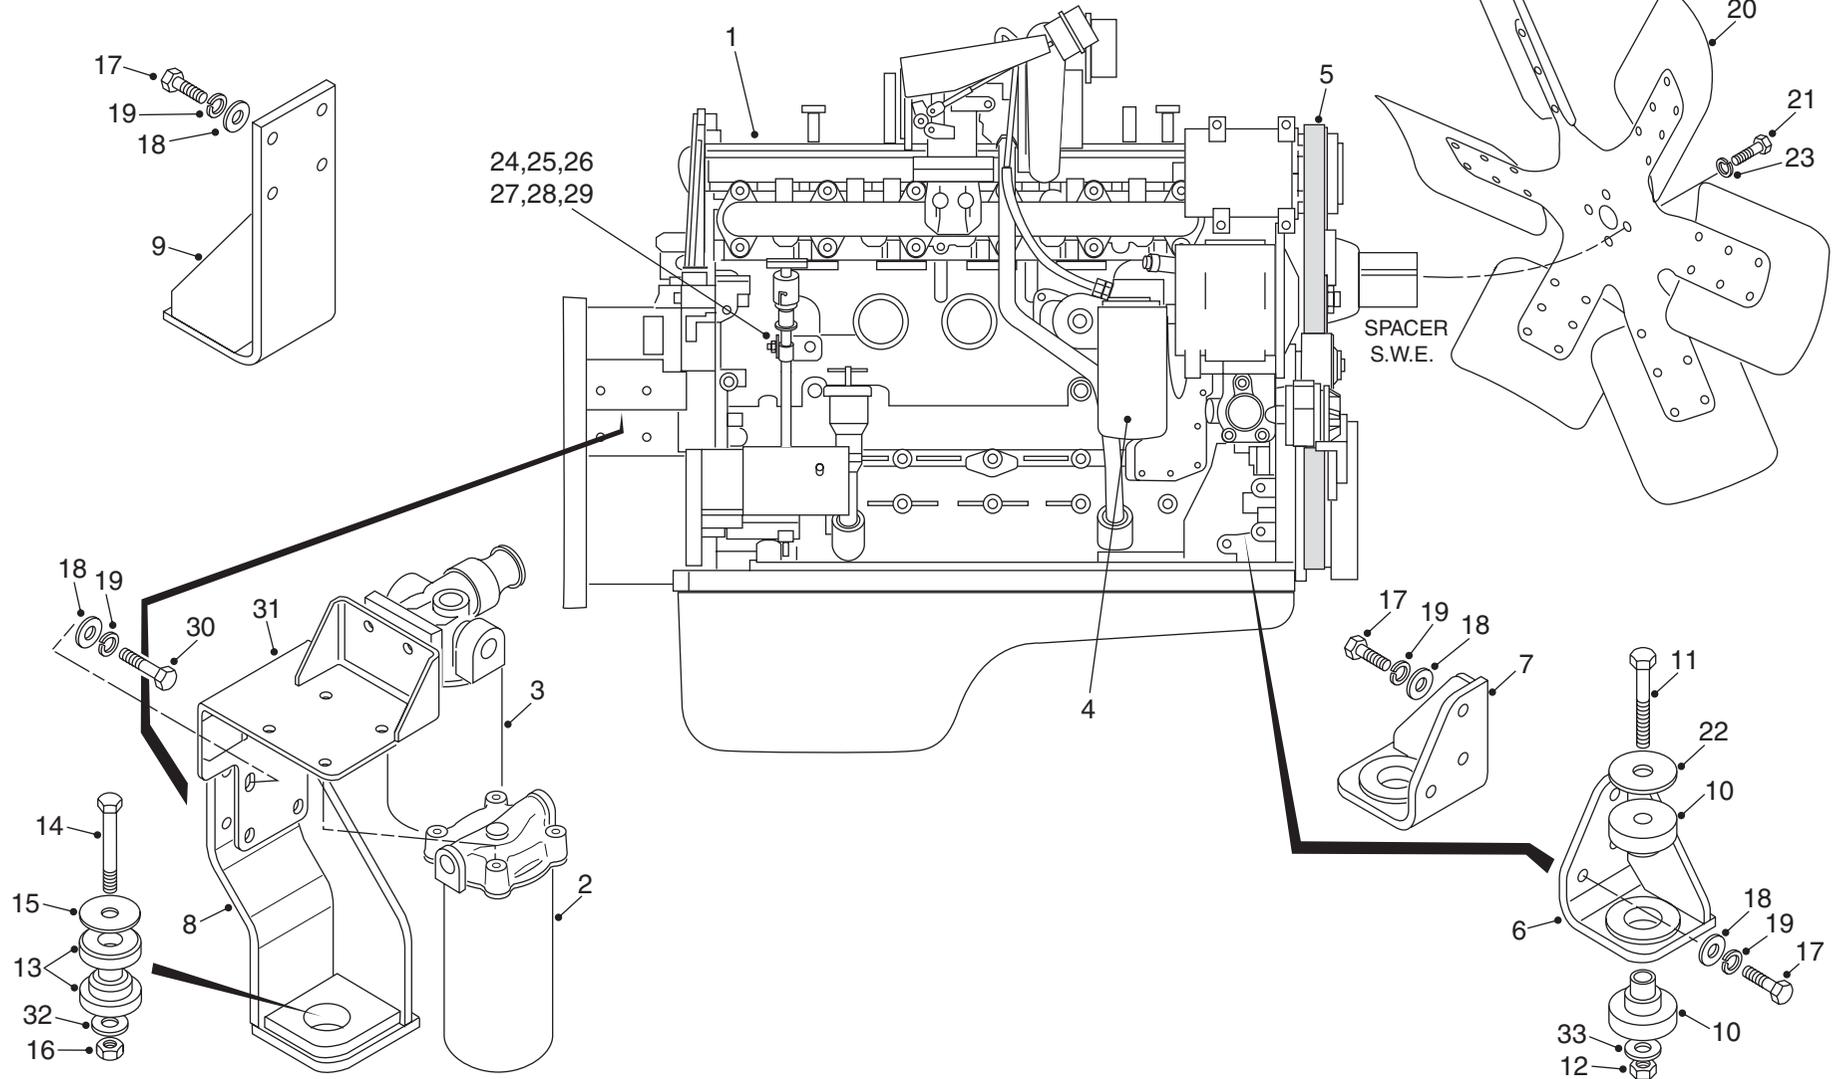


110-0030-9151 ENGINE AND MOUNTING
FROM SERIAL NO. S9141011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15334087	ENGINE ASSY-QSB TIER3		
002	001		15503455	.FUEL FILTER		
003	001		15503456	.FUEL PRE-FILTER		
004	001		15503457	.LUBE FILTER		
005	001		15503459	.BELT V-RIBBED		
006	001		15334182	ENGINE MOUNT-FRONT RH		
007	001		15334183	ENGINE MOUNT-FRONT LH		
008	001		15336617	ENGINE MOUNT-REAR RH	S9141011	S9141011
008	001		15334097	ENGINE MOUNT-REAR RH	S9141012	
009	001		15336618	ENGINE MOUNT-REAR LH	S9141011	S9141011
009	001		15334096	ENGINE MOUNT-REAR LH	S9141012	
010	002		15334416	ISOLATION MOUNT		
011	002		06351290	BOLT		
012	002		06471201	LOCKNUT		
013	002		15248345	RUBBER MOUNT		
014	002		15309750	BOLT		
015	002		15246956	WASHER-SNUBBING		
016	002		06471601	LOCKNUT		
017	010		06351235	BOLT		
018	014		07151220	WASHER		
019	014		07161230	LOCKWASHER		
020	001		15334418	FAN ASSY		
021	004		15337253	BOLT		
022	002		09262391	WASHER-HARDENED		
023	004		07161030	LOCKWASHER		
024	001		15336910	BRACKET-DIPSTICK MTG		
025	002		06350820	SCREW		
026	001		09131853	CLIP		
027	001		07160830	LOCKWASHER		
028	001		07150815	WASHER		
029	001		06470801	NUT		
030	004		06351245	BOLT		
031	001		15337103	BRKT ASSY-FUEL FILTER	S9141011	S9141011
031	001		15336941	BRKT ASSY-FUEL FILTER	S9141012	
032	002		15010758	WASHER		
033	002		15237139	WASHER-HARDENED		

110-0050-9151 AIR CLEANER ASSEMBLY
FROM SERIAL NO. S9141011

DRAWING NO. P12121

P12121

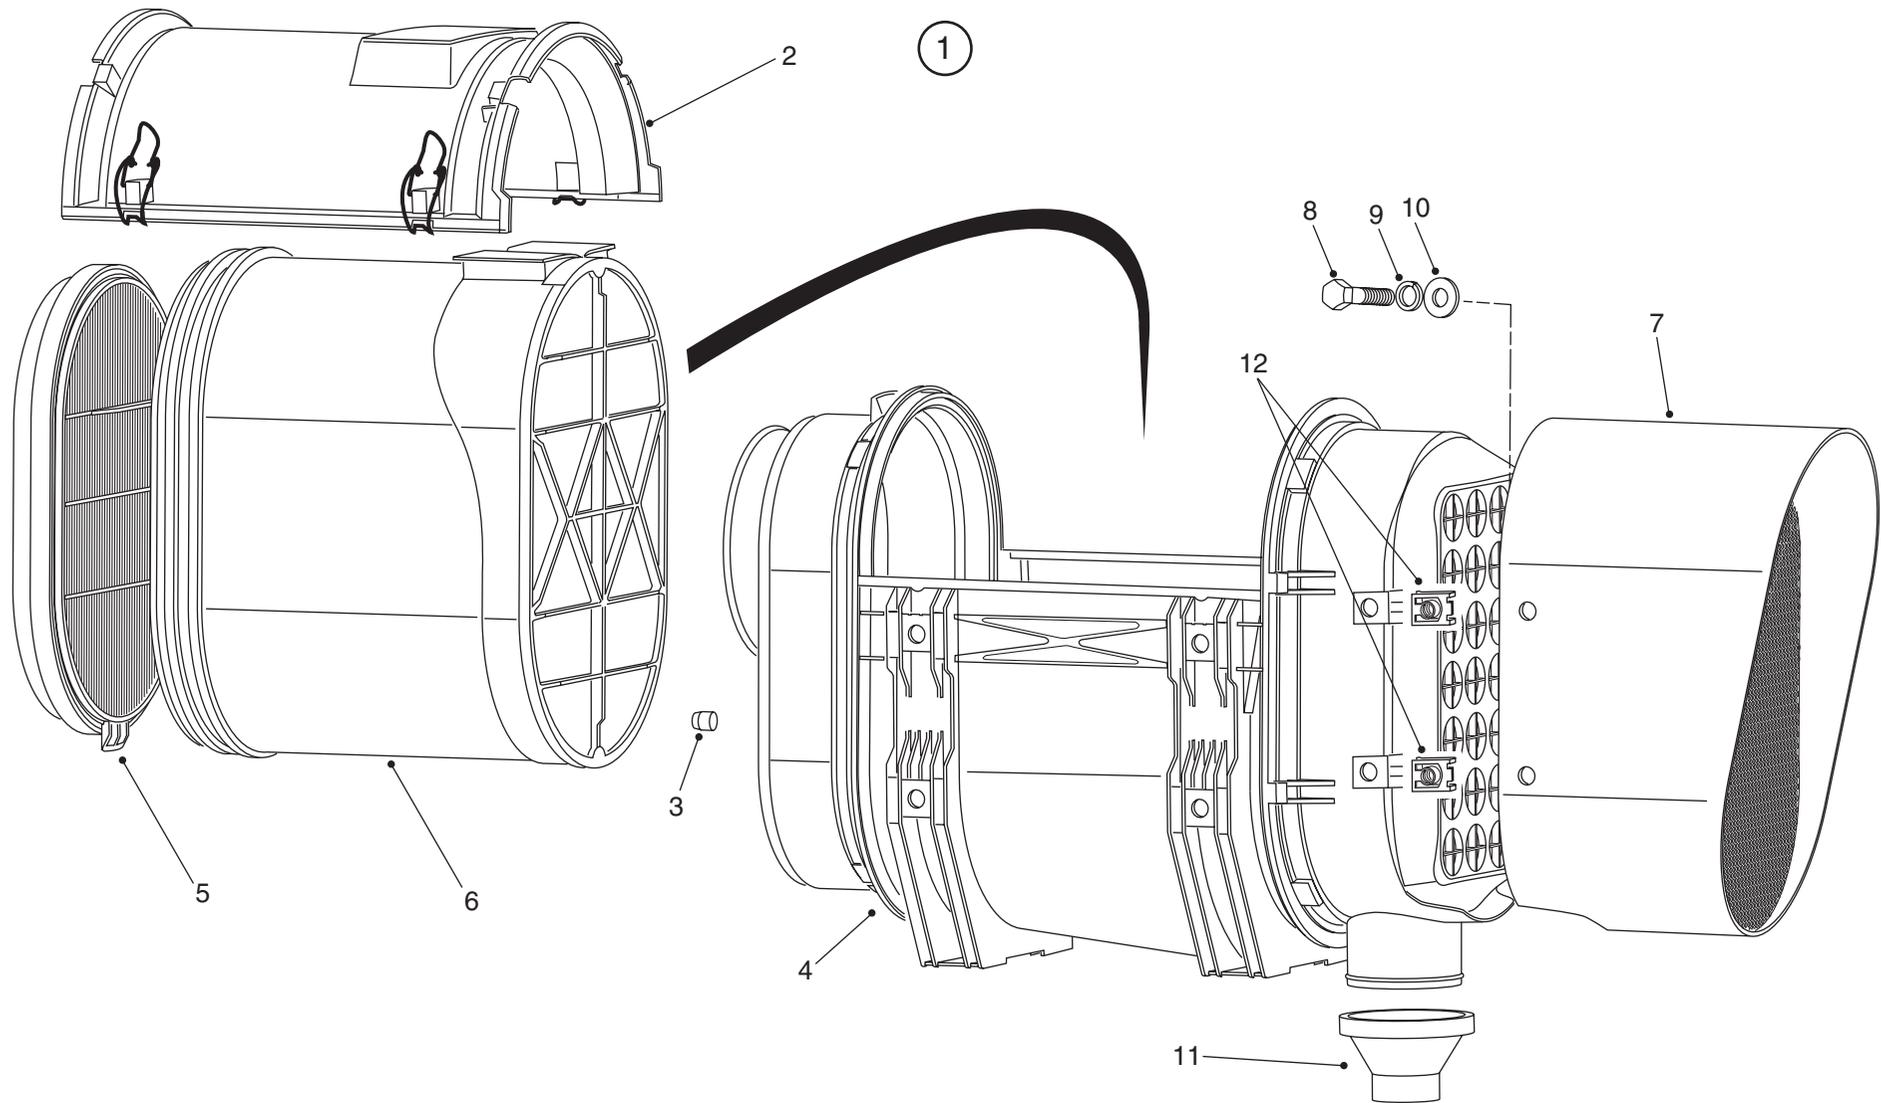

110-0050-9151 AIR CLEANER ASSEMBLY
FROM SERIAL NO. S9141011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15334235	AIR CLEANER ASSY		
002	001		15503426	.ACCESS COVER ASSY		
003	001		15272251	.CAP-PROTECTION		
004	001		15503427	.BODY ASSY		
005	001		15503428	.ELEMENT ASSY-SAFETY		
006	001		15503429	.ELEMENT ASSY-MAIN		
007	001		15334242	DUCT ASSY-AIR INTAKE		
008	004		06350820	SCREW		
009	004		07160830	LOCKWASHER		
010	004		07150815	WASHER		
011	001		15334825	SCAVENGE ADAPTER		
012	004		15336725	CAPTIVE NUT M8		

