

Product: 2007 TEREX TA25 G7 Articulated Truck Workshop Parts Manual[PN15503473]

Full Download: [https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-a](https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-articulated-truck-workshop-parts-manualpn15503473/)

[rticulated-truck-workshop-parts-manualpn15503473/](https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-articulated-truck-workshop-parts-manualpn15503473/)



# TEREX

Publication Part Number: **15503473**

PARTS BOOK

CLICK HERE FOR  
TRACTOR  
TABLE OF CONTENTS


CLICK HERE FOR  
TRACTOR OPTIONAL  
TABLE OF CONTENTS

CLICK HERE FOR  
TRAILER  
TABLE OF CONTENTS

CLICK HERE FOR  
TRAILER OPTIONAL  
TABLE OF CONTENTS

CLICK HERE  
TO RETURN TO MAIN  
LIBRARY INDEX

P11066

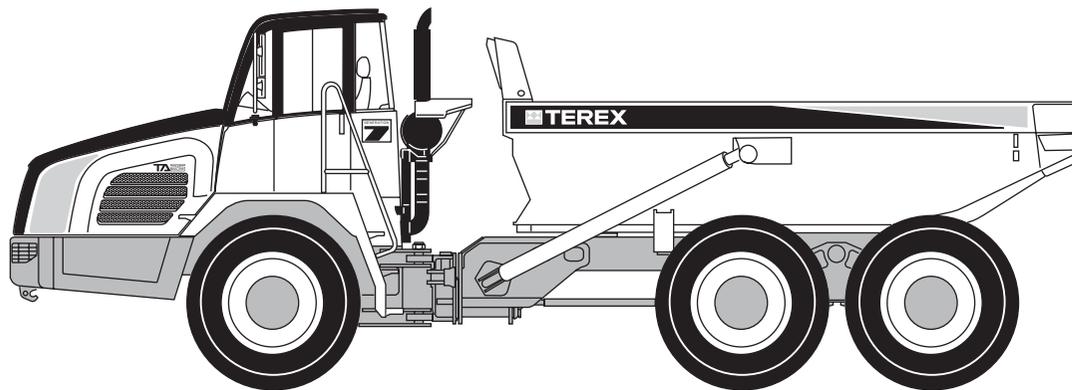

## TA25 G7 Articulated Truck

(Cummins QSM11 T3 Engine with ZF 6WG-260 Trans & NAF Axles)

**Serial No. A9201011 through A9201033**

Date: June 2007

Sample of manual. Download All 484 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-articulated-truck-workshop-parts-manualpn15503473/>

*Revised: 1st December 2009*

Product: 2007 TEREX TA25 G7 Articulated Truck Workshop Parts Manual[PN15503473]

Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-a>

[articulated-truck-workshop-parts-manualpn15503473/](https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-a-articulated-truck-workshop-parts-manualpn15503473/)

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 484 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-articulated-truck-workshop-parts-manualpn15503473/>



## **WARRANTY ON PARTS AND ATTACHMENTS**

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

\* \* \* \* \*

### **SOLE WARRANTY**

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

## INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

**SECTION 100 - CHASSIS**

**SECTION 140 - FRONT AXLE GROUP**

**SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.  
**EXAMPLE - 220-0120.**

**SERIAL NUMBERS** - Each Parts Book covers a particular range of unit Serial Numbers.

**It is important that unit Serial Numbers are quoted on all orders for Parts.**

**PARTS LISTS** - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

**ILLUSTRATIONS** - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

---

**INDENTATIONS** - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.  
2 9058512 . Shaft  
3 9024169 . Ring  
4 9058132 . Control Assy.  
5 9058135 . . Spring  
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

**NOTES** - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

**ABBREVIATIONS** - The abbreviations in this book have the following meanings -

Amps .....	Amperes	Hsg .....	Housing	N.I .....	Not Illustrated
As R .....	As Required	I.D .....	Inside Diameter	N.L.A .....	No Longer Available
Assy .....	Assembly	L.H .....	Left Hand	N.S.S .....	Not Sold Separately
Brkt .....	Bracket	L.W .....	Lockwasher	O.D .....	Outside Diameter
Cad-Pltd .....	Cadium Plated	Lg .....	Long	Pr .....	Pair
Comm .....	Commencement of production	Lkg .....	Linkage	P.T.O .....	Power-Take-Off
E.S.N .....	Elastic Stop Nut	Mtg .....	Mounting	R.H .....	Right Hand
Ftgs .....	Fittings	N.C .....	Note Code	Std .....	Standard



# Articulated Truck



## TRACTOR SECTIONS

	<b>CHASSIS</b>	<b>100</b>		<b>MAIN HYDRAULIC VALVE</b>	<b>215</b>
	<b>ENGINE</b>	<b>110</b>		<b>STEERING SYSTEM</b>	<b>220</b>
	<b>TRANSMISSION</b>	<b>120</b>		<b>BODY HOIST SYSTEM</b>	<b>230</b>
	<b>DRIVELINE</b>	<b>130</b>		<b>BRAKING SYSTEM</b>	<b>250</b>
	<b>FRONT AXLE</b>	<b>140</b>		<b>CAB</b>	<b>260</b>
	<b>BRAKE PARTS</b>	<b>165</b>		<b>DECALS</b>	<b>290</b>
	<b>SUSPENSION SYSTEM</b>	<b>180</b>		<b>MISCELLANEOUS</b>	<b>300</b>
	<b>ELECTRICAL SYSTEM</b>	<b>190</b>			
	<b>FUEL SYSTEM</b>	<b>200</b>			
	<b>COOLING SYSTEM</b>	<b>210</b>			

**TABLE OF CONTENTS FOR MODEL TA25 T3 TRACTOR**

**FROM SERIAL NO A9201011**

**REVISED 11/09**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 100</u></b>			
	<b><u>CHASSIS</u></b>		
100-0010-9211	CHASSIS		
100-0030-9211	SOUND INSULATION		R1 11/08
100-0040-9211	HOOD AND MOUNTING		R2 06/08
100-0070-9211	FENDERS AND MOUNTING	A9201011 TO A9201033	
100-0070-9211	FENDERS AND MOUNTING	A9201034	08/08
100-0135-9211	ROCK AND SUMP GUARDS		
<b><u>SECTION 110</u></b>			
	<b><u>ENGINE</u></b>		
110-0020-9211	ENGINE ORDERING INSTRUCTIONS		
110-0030-9211	ENGINE AND MOUNTING		R1 11/08
110-0050-9211	AIR CLEANER		
110-0060-9211	AIR CLEANER PIPES AND HOSES		
110-0070-9211	EXHAUST AND MOUNTING		R2 03/09
<b><u>SECTION 120</u></b>			
	<b><u>TRANSMISSION</u></b>		
120-0010-9211	TRANSMISSION MOUNTING		R1 10/07
120-0020-9211	TRANSMISSION BREAKDOWN		
120-0070-9211	SHIFT CONTROL	A9201011 TO A9201033	
120-0070-9211	SHIFT CONTROL	A9201034	08/08
120-0100-9211	FILTER		
120-0110-9211	OIL LINES-TRANSMISSION		R1 06/07
120-0220-9211	OIL PUMP		
120-0390-9211	TORQUE CONVERTER		
120-0400-9211	LUBRICATION PIPES		
120-0410-9211	INDUCTIVE TRANSMITTER		
120-0430-9211	ELECTRIC SHIFT CONTROL VALVE		
120-0440-9211	GEARSHIFT		
120-0450-9211	GEARBOX HOUSING		
120-0460-9211	CLUTCH ASSEMBLY KV+K1		
120-0470-9211	CLUTCH ASSEMBLY KR+K2		
120-0480-9211	CLUTCH ASSEMBLY K3+K4		
120-0500-9211	PTO MAIN HYDRAULIC PUMP		
120-0515-9211	EMERGENCY STEERING PUMP		
120-0520-9211	INPUT-DRIVE ASSEMBLY		
120-0530-9211	LAYSHAFT GEARING		
120-0540-9211	DIFFERENTIAL		
120-0625-9211	TEMPERATURE SENSOR		
120-0900-9211	LOOSE PARTS-TRANSMISSION		

**TABLE OF CONTENTS FOR MODEL TA25 T3 TRACTOR**

**FROM SERIAL NO A9201011**

**REVISED 11/09**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 130</u></b>	<b><u>DRIVELINE</u></b>		
130-0010-9211	FRONT DRIVELINE		R2 06/09
<b><u>SECTION 140</u></b>	<b><u>FRONT AXLE</u></b>		
140-0010-9211	AXLE COMPLETE-FRONT	A9201011 TO A9201023	
140-0010-9211	AXLE COMPLETE-FRONT	A9201024 TO A9201028	06/08
140-0010-9211	AXLE COMPLETE-FRONT	A9201029	06/08
140-0020-9211	AXLE GROUP-FRONT	A9201011 TO A9201023	
140-0020-9211	AXLE GROUP-FRONT	A9201024 TO A9201028	06/08
140-0020-9211	AXLE GROUP-FRONT	A9201029	06/08
140-0030-9211	PLANETARY GEARING-FRONT	A9201011 TO A9201016	R1 08/07
140-0030-9211	PLANETARY GEARING-FRONT	A9201017 TO A9201023	R1 08/07
140-0030-9211	PLANETARY GEARING-FRONT	A9201024 TO A9201028	06/08
<b>140-0030-9211</b>	<b>PLANETARY GEARING-FRONT</b>	<b>A9201029</b>	<b>R1 11/09</b>
140-0040-9211	WHEEL, RIM AND TYRE-FRONT		R1 09/07
140-0060-9211	DIFFERENTIAL-FRONT	A9201011 TO A9201023	R1 02/08
140-0060-9211	DIFFERENTIAL-FRONT	A9201024 TO A9201028	06/08
140-0060-9211	DIFFERENTIAL-FRONT	A9201029	06/08
140-0100-9211	DIFF-LOCK CONTROLS-FRONT		R1 06/08
<b><u>SECTION 165</u></b>	<b><u>BRAKE GUARDS</u></b>		
165-0050-9211	BRAKE GUARDS	A9201030	02/09
<b><u>SECTION 180</u></b>	<b><u>SUSPENSION SYSTEM</u></b>		
180-0020-9211	FRONT SUSPENSION		R4 06/09
<b><u>SECTION 190</u></b>	<b><u>ELECTRICAL SYSTEM</u></b>		
190-0010-9211	TERMINALS		
190-0011-9211	CONNECTORS		
190-0030-9211	CABLES/HARNESSES-CAB	A9201011 TO A9201033	
190-0030-9211	CABLES/HARNESSES-CAB	A9201034	06/08
190-0040-9211	CABLES/HARNESSES-CHASS/ENG		R1 04/09
190-0070-9211	BATTERY AND CABLES		
<b>190-0080-9211</b>	<b>BATTERY MOUNTING</b>		<b>R2 11/09</b>
190-0085-9211	ECU-HYD.SYSTEM MONITORING		
190-0100-9211	ELECTRICAL LIGHTING SYSTEM		
190-0110-9211	ALTERNATOR		
190-0120-9211	STARTER		
190-0270-9211	SWITCHES AND SENSORS		
190-0300-9211	RADIO CASSETTE AND SPEAKERS		
190-0310-9211	ELECTRICAL HORN		
190-0330-9211	CCTV REAR VIEW SYSTEM		04/09

**TABLE OF CONTENTS FOR MODEL TA25 T3 TRACTOR**

**FROM SERIAL NO A9201011**

**REVISED 11/09**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 200</u></b>			
<b><u>FUEL SYSTEM</u></b>			
200-0010-9211	FUEL TANK AND MOUNTING		
200-0040-9211	FUEL LINES		
200-0050-9211	ACCELERATOR LINKAGE		R1 06/08
<b><u>SECTION 210</u></b>			
<b><u>COOLING SYSTEM</u></b>			
210-0010-9211	RADIATOR ASSEMBLY	A9201011 TO A9201016	
210-0010-9211	RADIATOR ASSEMBLY	A9201017	08/07
210-0020-9211	RADIATOR MOUNTING		
210-0030-9211	RADIATOR PIPING		
210-0035-9211	CHARGE AIR COOLER & PIPING		R1 08/08
210-0040-9211	RADIATOR HEADER TANK & HOSES		R1 08/08
210-0060-9211	OIL COOLER AND PIPING-TRANS		R1 06/07
210-0061-9211	TRANS OIL COOLER MOUNTING		
210-0065-9211	OIL COOLER-TRANSMISSION		R3 09/09
<b><u>SECTION 215</u></b>			
<b><u>MAIN HYDRAULIC VALVE</u></b>			
215-0050-9211	MAIN HYDRAULIC VALVE ASSEMBLY		
<b><u>SECTION 220</u></b>			
<b><u>STEERING SYSTEM</u></b>			
220-0010-9211	STEERING LINES	A9201011 TO A9201033	R2 03/09
220-0010-9211	STEERING LINES	A9201034	03/09
220-0090-9211	STEERING VALVE		
220-0120-9211	STEERING CYLINDER		
220-0230-9211	STEERING COLUMN MOUNTING		
<b><u>SECTION 230</u></b>			
<b><u>BODY HOIST SYSTEM</u></b>			
230-0020-9211	LINES AND FITTINGS-BODY HOIST		
230-0040-9211	TANK AND MOUNTING-BODY HOIST		R1 08/08
230-0050-9211	PUMP-BODY HOIST		
230-0081-9211	JOYSTICK-BODY CONTROL		
<b><u>SECTION 250</u></b>			
<b><u>BRAKING SYSTEM</u></b>			
250-0020-9211	BRAKE LINES-HYDRAULIC	A9201011 TO A9201016	
250-0020-9211	BRAKE LINES-HYDRAULIC	A9201017 TO A9201029	09/07
250-0020-9211	BRAKE LINES-HYDRAULIC	A9201030	03/09
250-0060-9211	BRAKE ACCUMULATOR		
250-0070-9211	TREADLE VALVE	A9201011 TO A9201033	R2 01/08
250-0070-9211	TREADLE VALVE	A9201034	08/08

TABLE OF CONTENTS FOR MODEL TA25 T3 TRACTOR

FROM SERIAL NO A9201011


REVISED 11/09

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 260</u></b>	<b><u>CAB</u></b>		
260-0010-9211	CAB ASSEMBLY		R3 06/09
260-0015-9211	CAB MOUNTING	A9201011 TO A9201031	R1 08/07
260-0015-9211	CAB MOUNTING	A9201032 TO A9201033	06/08
260-0015-9211	CAB MOUNTING	A9201034	04/09
260-0018-9211	CAB TILT MECHANISM		R1 01/09
260-0030-9211	CAB DOOR-LEFT HAND		R1 09/07
<b>260-0080-9211</b>	<b>SWITCHES AND INSTRUMENTS</b>		<b>R5 05/10</b>
260-0090-9211	SEAT-DRIVER	A9201011 TO A9201016	R1 11/08
260-0090-9211	SEAT-DRIVER	A9201017	R1 04/09
260-0110-9211	SEAT-INSTRUCTOR		R1 06/07
260-0130-9211	AIR CONDITIONER/HEATER		
260-0140-9211	HEATER LINES AND WIRING		R1 04/09
260-0145-9211	AIR CONDITIONER LINES	A9201011 TO A9201016	
260-0145-9211	AIR CONDITIONER LINES	A9201017	08/07
260-0190-9211	WINDSCREEN WASHER		
<b><u>SECTION 290</u></b>	<b><u>DECALS</u></b>		
290-0010-9211	DECALS-ENGLISH (ISO)		R1 06/08
290-0011-9211	DECALS-ENGLISH (ANSI)		R2 06/09
290-0100-9211	WALKWAY SURFACES (ANTI-SLIP)		06/07
<b><u>SECTION 300</u></b>	<b><u>MISCELLANEOUS</u></b>		
300-0040-9211	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-9211	POLYPROPELENE CLAMPS		
300-0200-9211	FILTERS AND ELEMENT KITS		11/08

100-0010-9211 CHASSIS  
FROM SERIAL NO. A9201011

DRAWING NO. P11004

P11004

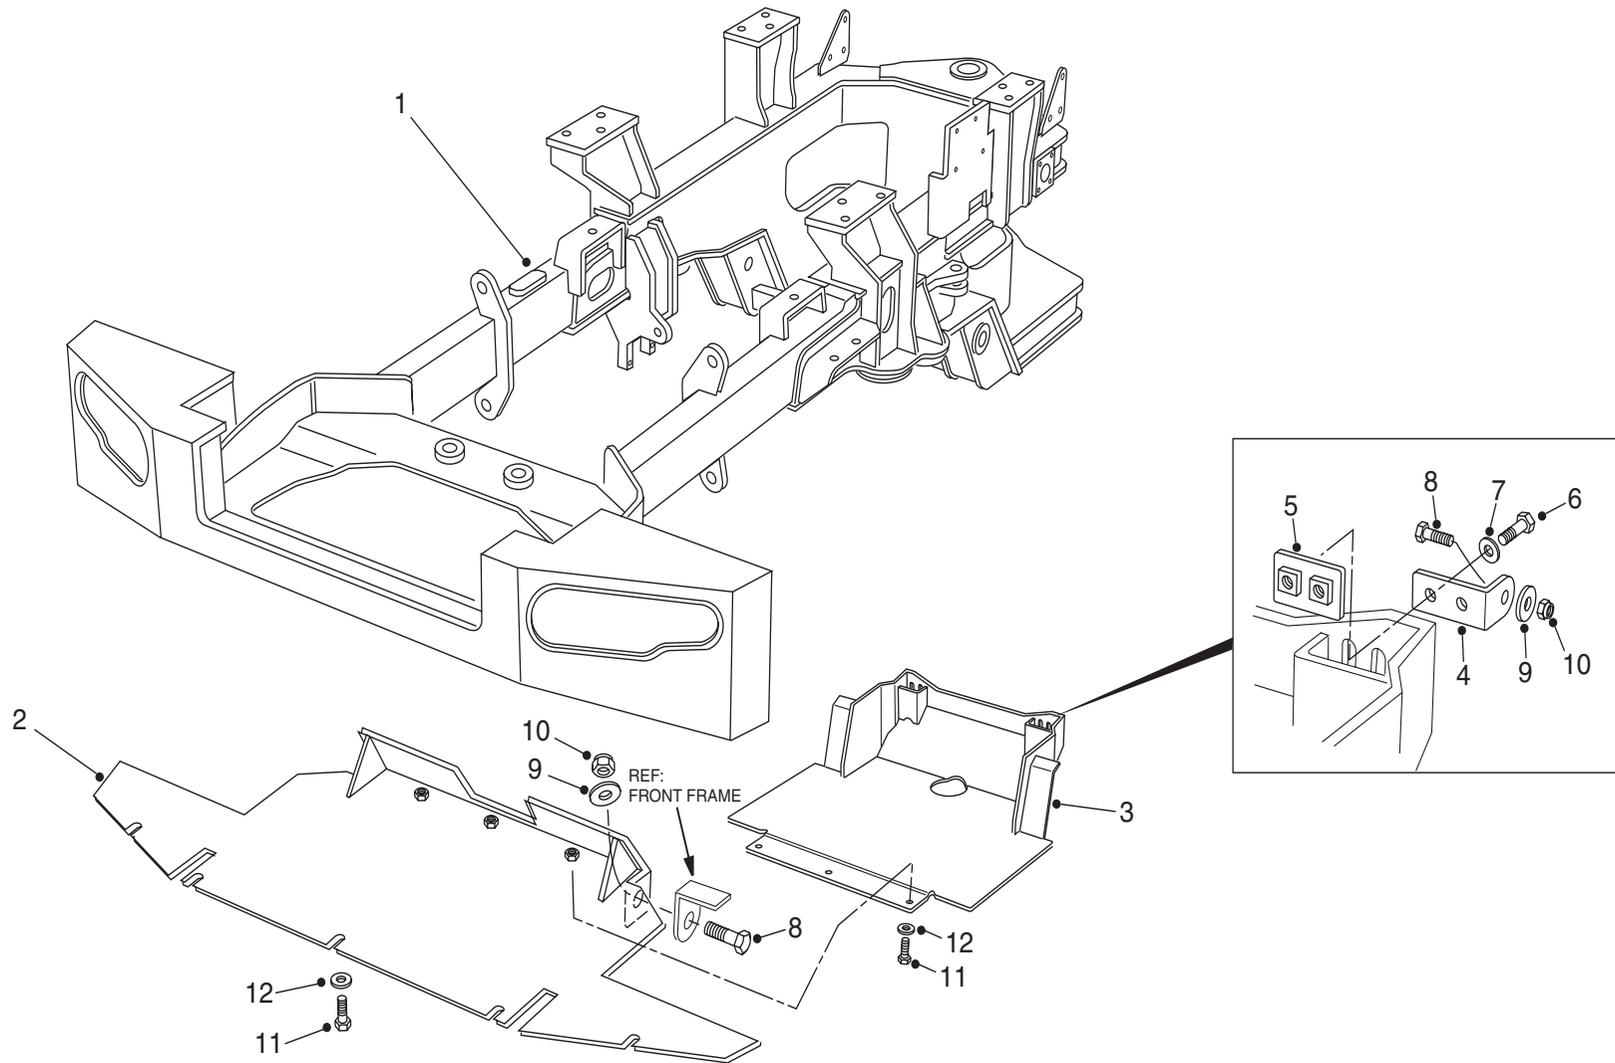

**100-0010-9211 CHASSIS**  
FROM SERIAL NO. A9201011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15331825	FRAME ASSY-COMplete		
002	001		15314756	GUARD ASSY-CHASSIS		
003	001		15317222	GUARD ASSY-SUMP		
004	002		15314724	BRACKET-HINGE		
005	002		15314726	CLAMP PLATE		
006	004		06351655	BOLT		
007	004		09191596	WASHER		
008	004		06351670	BOLT		
009	004		07151630	WASHER		
010	004		06471601	LOCKNUT		
011	008		06351235	BOLT		
012	008		09217321	WASHER		

R1 11/08 (ECN 109535)

100-0030-9211 SOUND INSULATION  
FROM SERIAL NO. A9201011

DRAWING NO. P11207

P11207

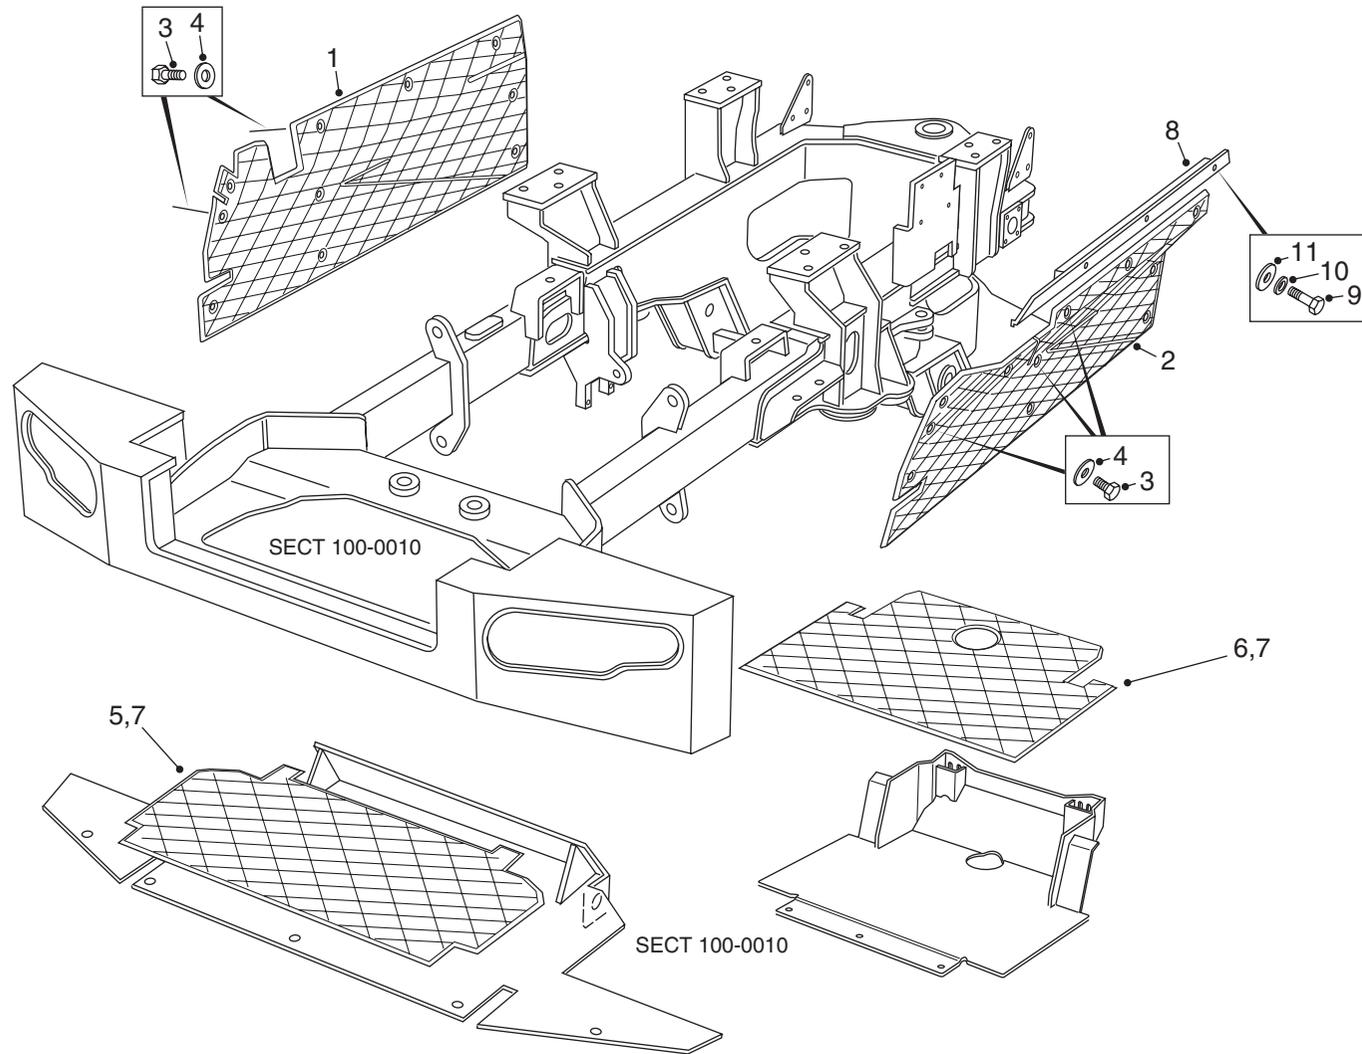

**100-0030-9211 SOUND INSULATION**  
FROM SERIAL NO. A9201011




NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15323970	QUILT-WHEEL ARCH-RH		
A	002	001	15323971	QUILT-WHEEL ARCH-LH		
	003	015	06351230	BOLT		
	004	015	15234758	WASHER		
	005	001	15316801	QUILT-SUMP GUARD FT		
	006	001	15317825	QUILT-SUMP GUARD REAR		
	007	ASR	09079599	ADHESIVE		
	008	001	15334034	PLATE-QUILT MTG		
	009	003	06351225	BOLT		
	010	003	07161230	LOCKWASHER		
	011	003	07151220	WASHER		

NOTE:A FOR UNITS FITTED WITH HI-INFLATION (WIDE) TYRES,  
REFER TO OPTIONAL SECTION 100-0030

R2 06/08 (ECN 108610, ECN 109321)

**100-0040-9211 HOOD AND MOUNTING**  
FROM SERIAL NO. A9201011

DRAWING NO. P11667

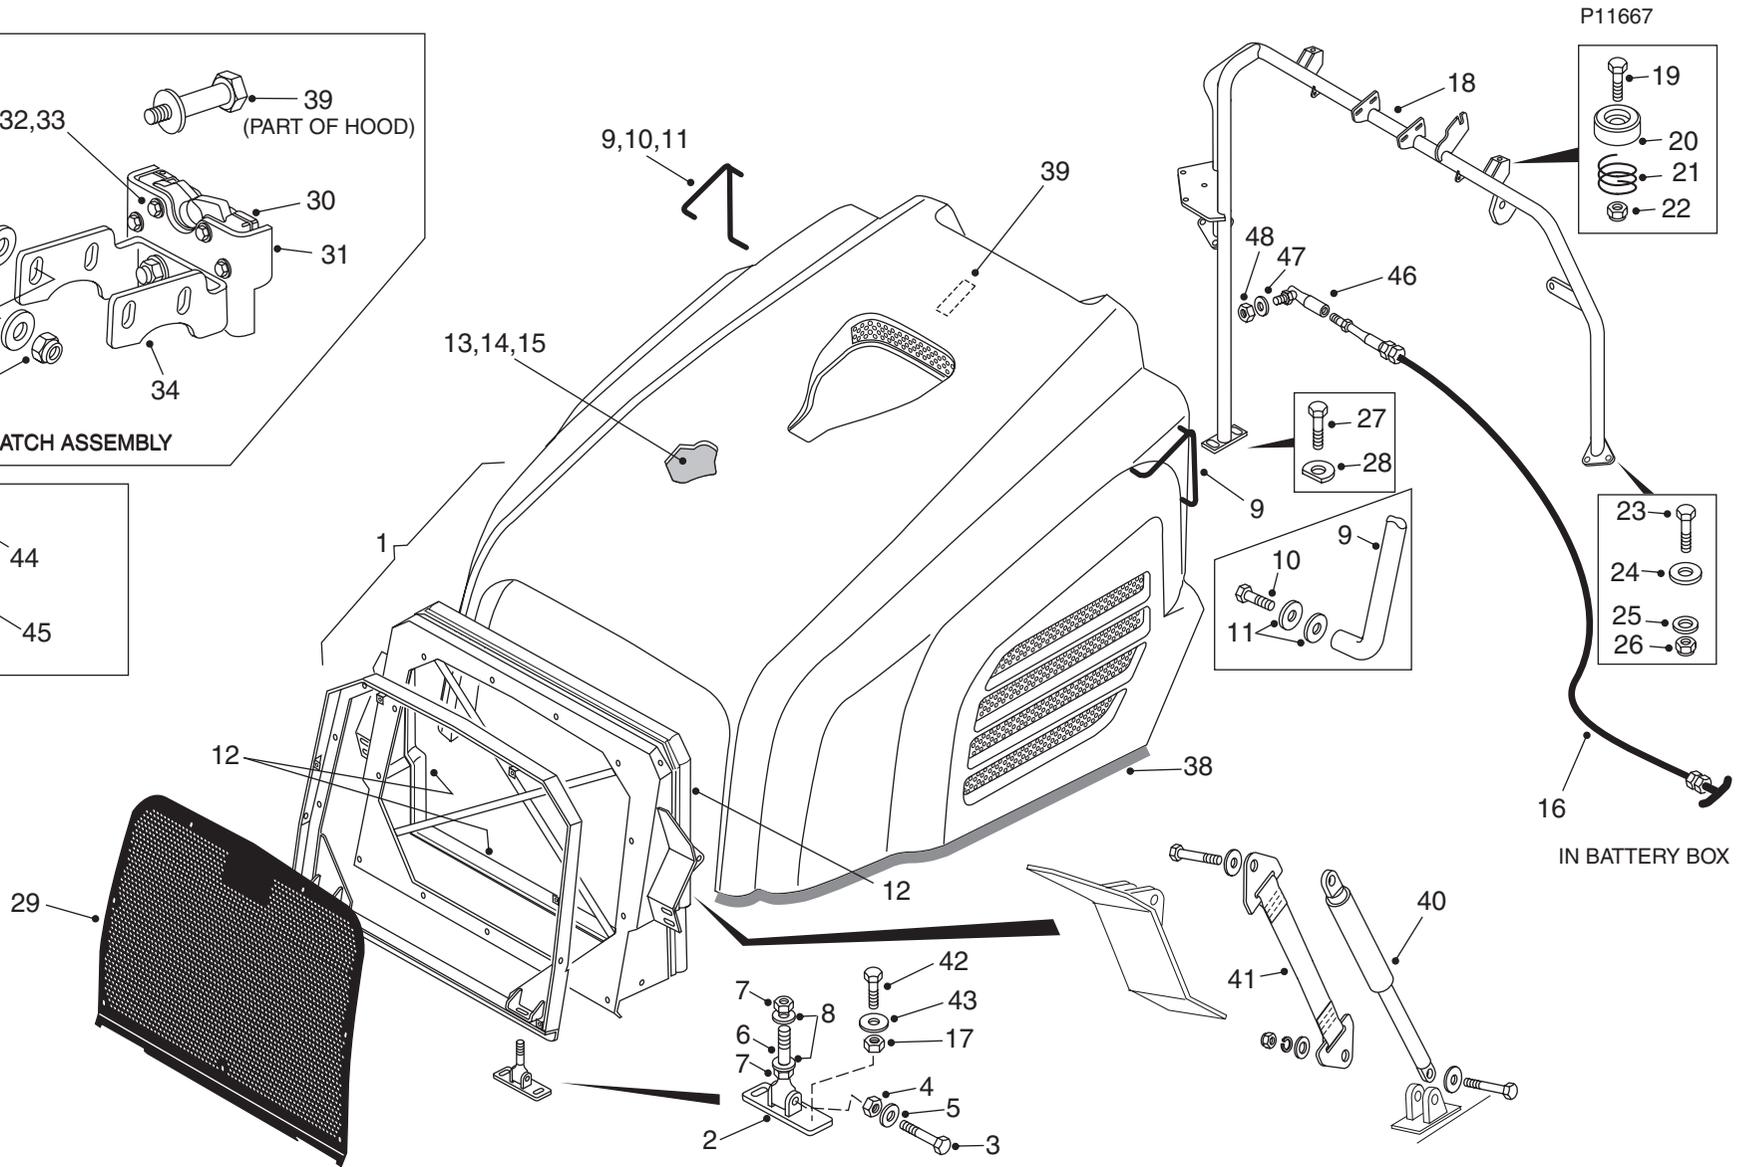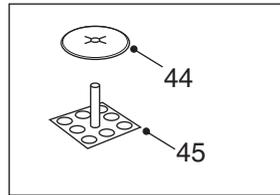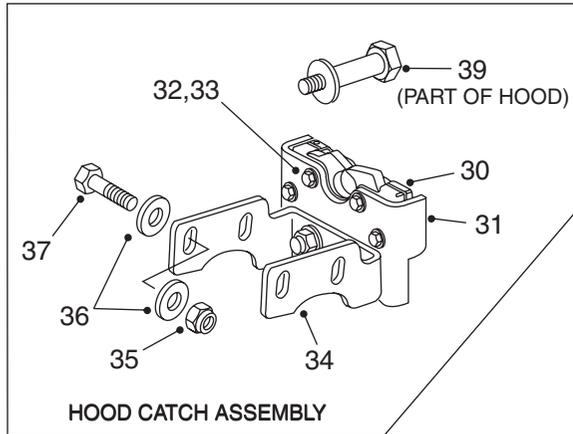

**100-0040-9211 HOOD AND MOUNTING**  
FROM SERIAL NO. A9201011


**100-0040-9211 HOOD AND MOUNTING**  
FROM SERIAL NO. A9201011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15331377	HOOD ASSY	A9201011	A9201016	039	001		15320831	STRIKER BOLT		
001	001		15337118	HOOD ASSY	A9201017		040	002		15313446	GAS STRUT		
002	002		15313176	.HINGE ASSY			041	002		15313472	STRAP-HOOD RETAINING		
003	002		06351675	.BOLT			042	004		06351655	BOLT		
004	002		15252584	.NUT			043	004		09191596	WASHER		
005	002		07151630	.WASHER			044	ASR		15501136	CAP		
006	002		15313179	.ROD-ADJUSTMENT			045	ASR		15503211	STUD 25MM LG		
007	004		06432001	.NUT			046	001		15256961	BALLJOINT		
008	004		09250715	.WASHER-HARDENED			047	001		00103319	LOCKWASHER		
009	002		15315116	.HANDLE-HOOD			048	001		00103024	LOCKNUT		
010	006		15309253	.BOLT									
011	012		15307237	.WASHER									
012	ASR		15244364	.SEAL-BULK									
013	001		15324159	HOOD QUILT-LHS									
014	001		15324160	HOOD QUILT-RHS									
015	001		15324161	HOOD QUILT-TOP									
016	001		15314415	CABLE-HOOD CATCH									
017	004		06471601	LOCKNUT									
018	001		15332275	GOALPOST WELDMENT									
019	002		00179828	BOLT									
020	002		15307804	STOP-HOOD									
021	002		05187308	SPRING									
022	002		09414094	LOCKNUT									
023	006		06351250	BOLT									
024	006		09217321	WASHER									
025	006		09267660	WASHER									
026	006		06471201	LOCKNUT									
027	002		06351230	BOLT									
028	002		15309558	WASHER-D SHAPE									
029	001		15313814	GRILLE	A9201011	A9201033							
029	001		15342528	GRILLE	A9201034								
030	001		15320830	HOOD CATCH									
031	001		15320980	BRACKET ASSY									
032	004		06350630	BOLT									
033	004		00147577	WASHER									
034	001		15323699	BRACKET									
035	004		06471201	LOCKNUT									
036	008		00116060	WASHER									
037	004		06351240	BOLT									
038	ASR		15319946	LIP SEAL									

100-0070-9211 FENDERS AND MOUNTING  
FROM SERIAL NO. A9201011 TO A9201033

DRAWING NO. P11921

P11921

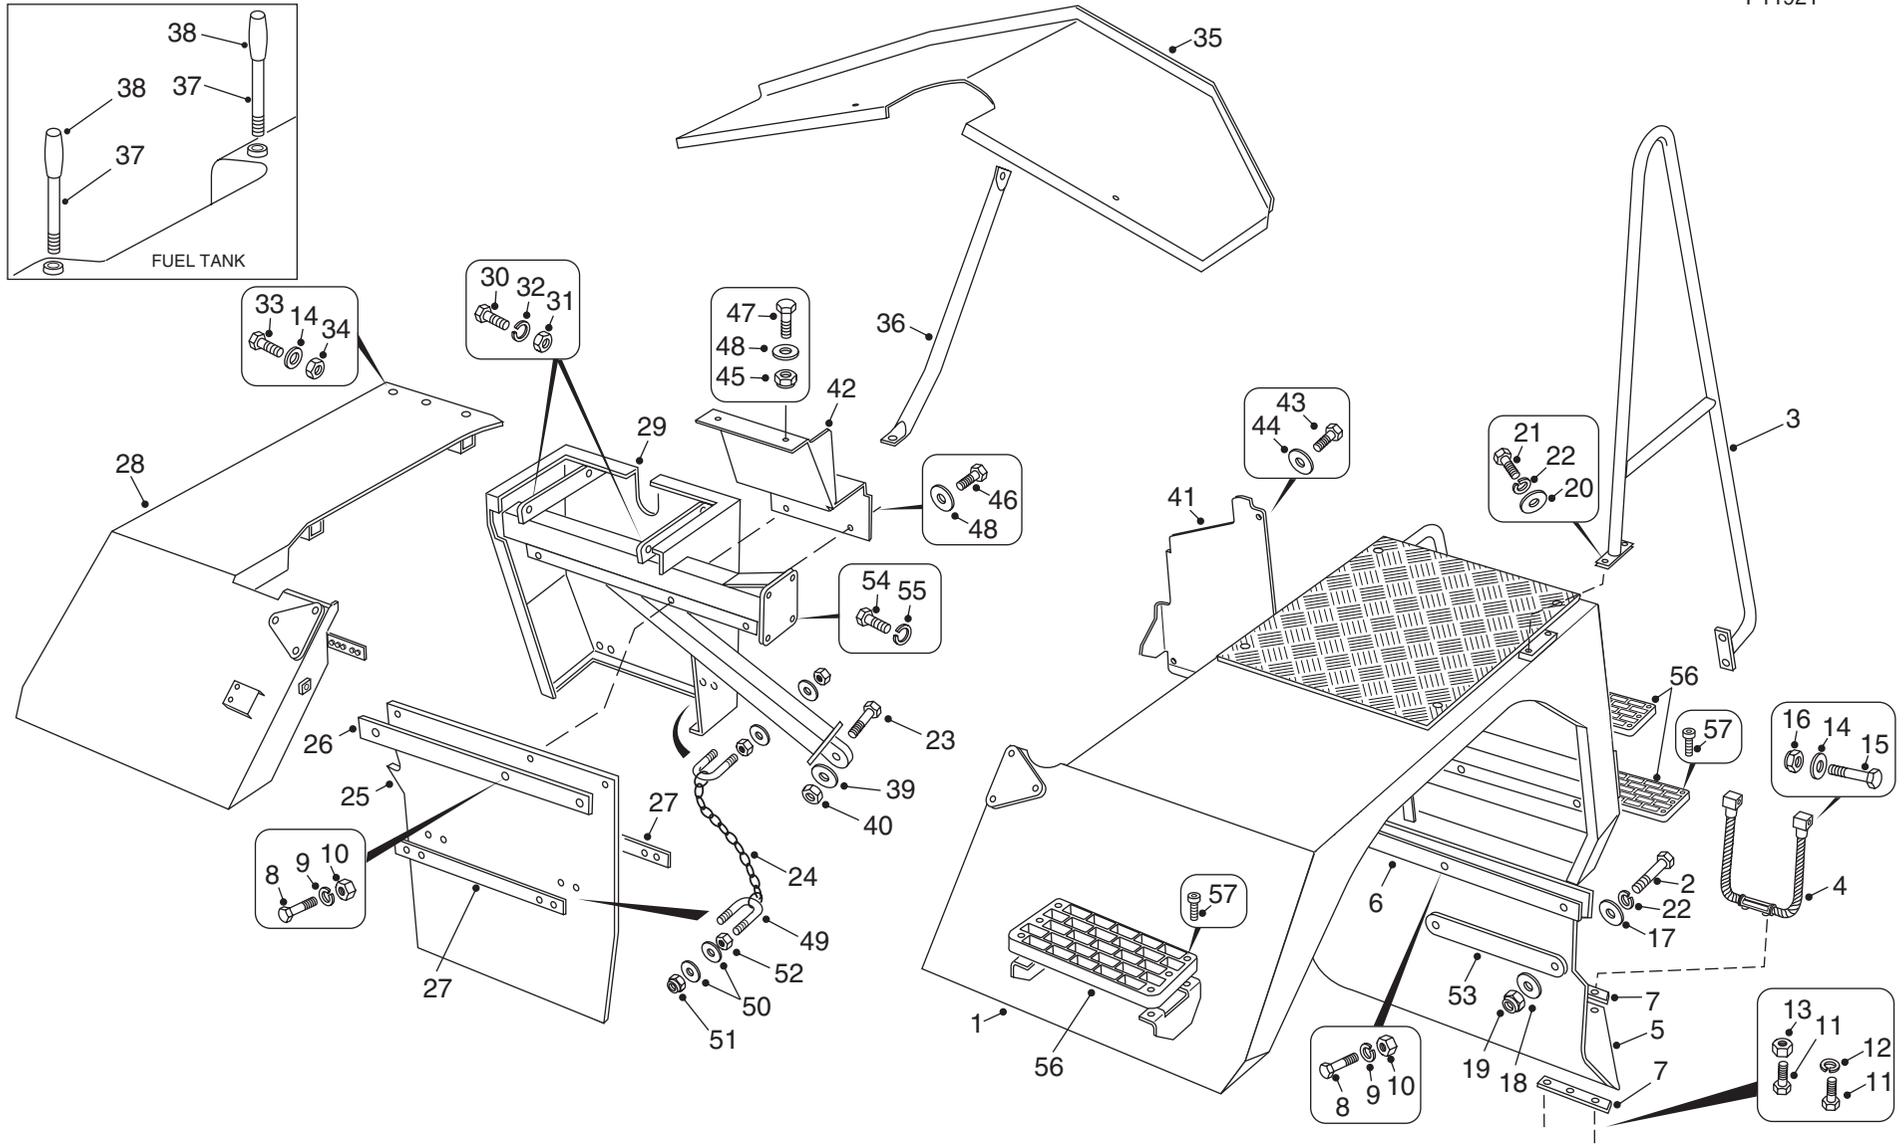

**100-0070-9211 FENDERS AND MOUNTING**  
FROM SERIAL NO. A9201011 TO A9201033

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15332703	LH FENDER PLATFORM		
002	002		15240002	BOLT		
003	001		15311946	HANDRAIL		
004	002		15330653	STEP ASSY-WIRE		
005	002		15318085	MUDFLAP-FRONT LH		
006	002		15311949	PLATE		
007	004		15303969	STIFFENER-MUDFLAP		
008	006		00179820	BOLT		
009	006		00103320	LOCKWASHER		
010	006		00102634	NUT		
011	006		06350825	BOLT		
012	004		07160830	LOCKWASHER		
013	002		06470801	NUT		
014	008		09267949	WASHER-HARDENED		
015	004		00179892	BOLT		
016	004		00274209	LOCKNUT		
017	002		07151220	WASHER		
018	002		15234758	WASHER		
019	002		06471201	LOCKNUT		
020	004		09267660	WASHER		
021	004		06351230	BOLT		
022	002		07161230	LOCKWASHER		
023	001		06372070	BOLT		
024	002		15317037	CHAIN-MUDFLAP STAY		
025	001		15318836	MUDFLAP-FRONT RH		
026	001		15318829	PLATE		
027	002		15316708	CLAMP PLATE		
028	001		15317173	PLATFORM-RH		
029	001		15318825	SIDE STEP ASSY-RH		
030	004		06442040	SCREW SET		
031	004		06472001	NUT		
032	004		07162030	LOCKWASHER		
033	003		06351240	BOLT		
034	003		06471201	LOCKNUT		
035	001		15331048	SPILL GUARD		
036	001		15331050	BRACE-SPILL GUARD		
037	002		15228110	TUBE		
038	002		09366021	GRIP		
039	001		09270005	WASHER-HARDENED		
040	001		06432001	NUT		

**100-0070-9211 FENDERS AND MOUNTING**  
FROM SERIAL NO. A9201011 TO A9201033


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	001		15332592	PANEL-INFILL LH		
042	001		15332595	PANEL-INFILL RH		
043	003		00179839	BOLT		
044	003		00106263	WASHER		
045	002		00274208	LOCKNUT		
046	002		00179837	BOLT		
047	002		00179839	BOLT		
048	004		00106263	WASHER		
049	004		15317030	U-BOLT		
050	008		07150815	WASHER		
051	008		06470801	NUT		
052	008		06430801	NUT		
053	001		15318086	PLATE-MUDFLAP CLAMPING		
054	004		15311176	BOLT		
055	004		07161630	LOCKWASHER		
056	003		15320662	FOOT-TREADPLATE		
057	012		15320295	CAPSCREW		

08/08 (ECN 109379)

100-0070-9211 FENDERS AND MOUNTING  
FROM SERIAL NO. A9201034

DRAWING NO. P12287

P12287


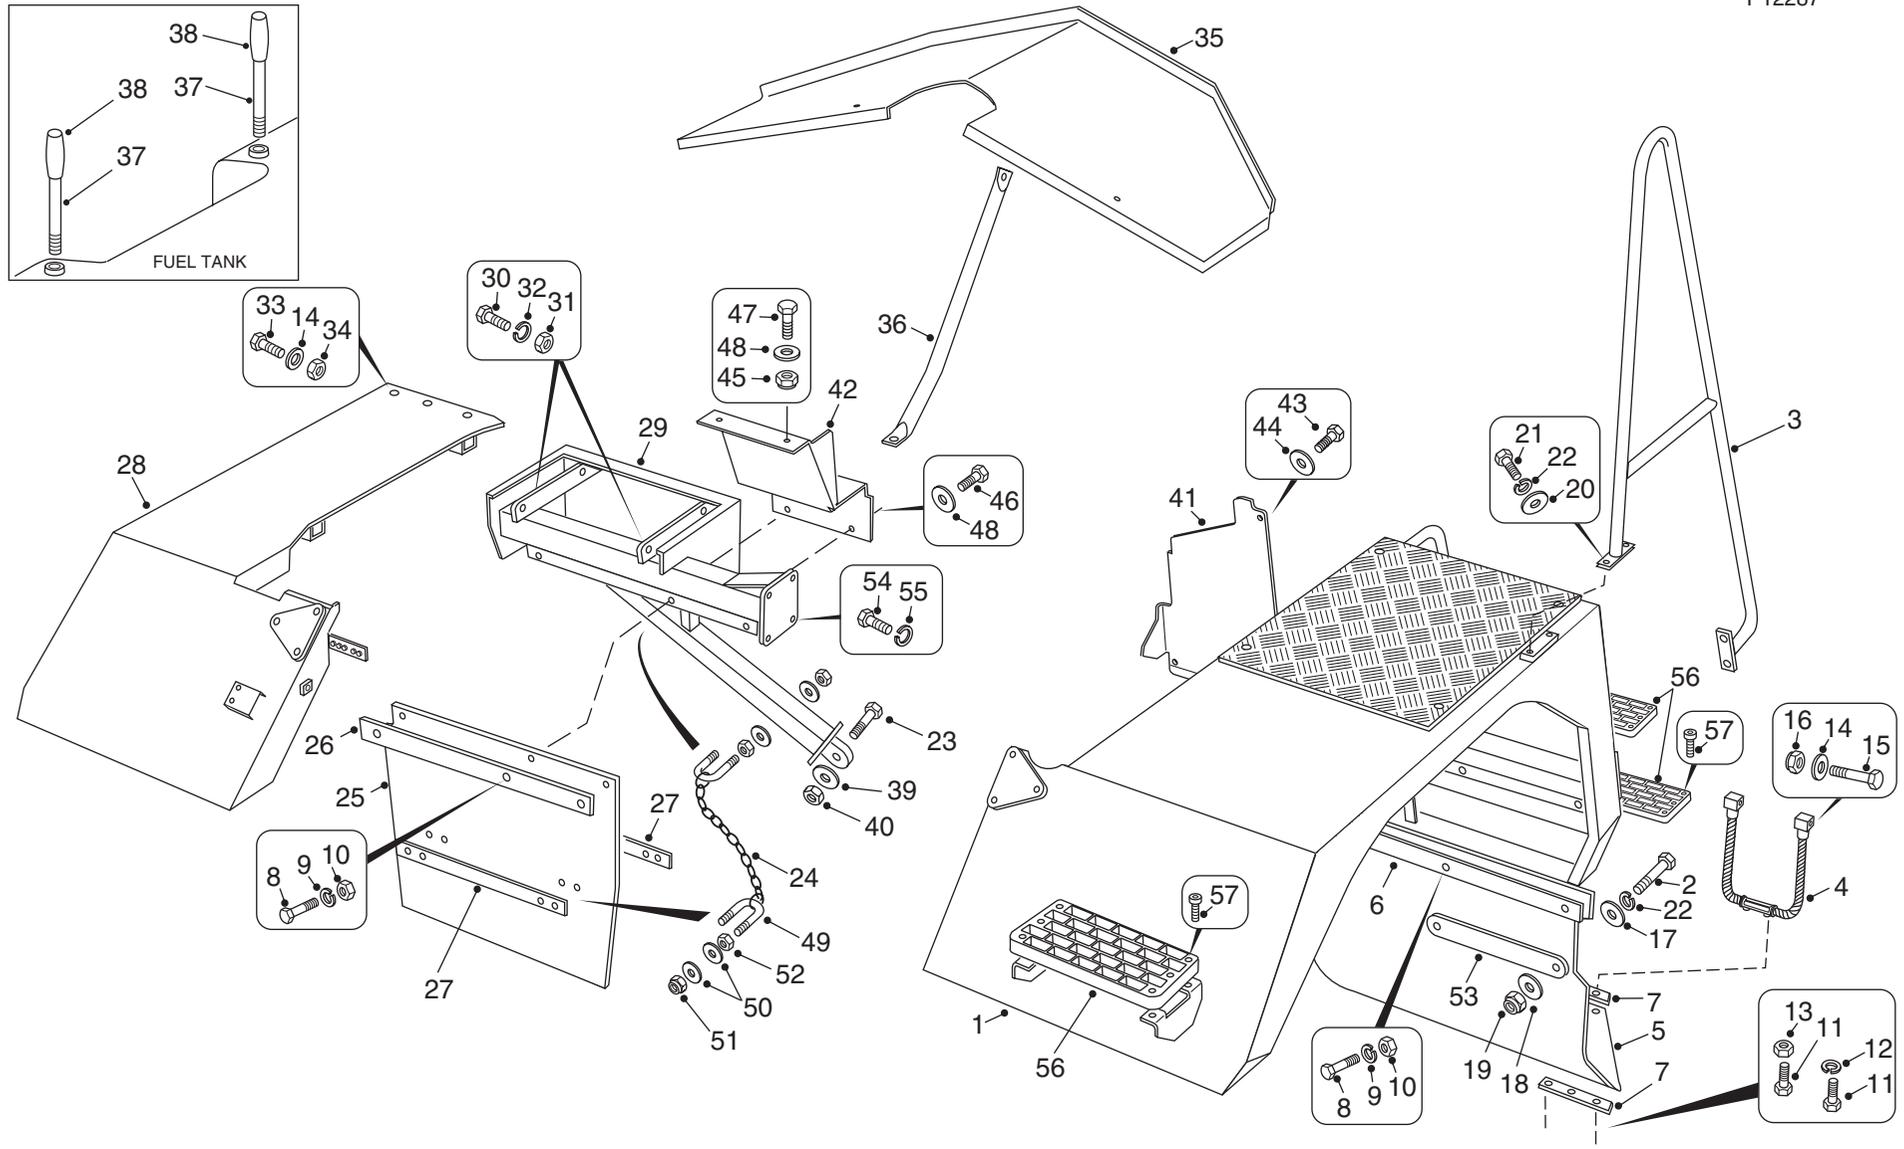


**100-0070-9211 FENDERS AND MOUNTING**  
FROM SERIAL NO. A9201034

**100-0070-9211 FENDERS AND MOUNTING**  
FROM SERIAL NO. A9201034

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15332703	LH FENDER PLATFORM			041	001		15332592	PANEL-INFILL LH		
002	002		15240002	BOLT			042	001		15332595	PANEL-INFILL RH		
003	001		15311946	HANDRAIL			043	003		00179839	BOLT		
004	002		15330653	STEP ASSY-WIRE			044	003		00106263	WASHER		
005	002		15318085	MUDFLAP-FRONT LH			045	002		00274208	LOCKNUT		
006	002		15311949	PLATE			046	002		00179837	BOLT		
007	004		15303969	STIFFENER-MUDFLAP			047	002		00179839	BOLT		
008	006		00179820	BOLT			048	004		00106263	WASHER		
009	006		00103320	LOCKWASHER			049	004		15317030	U-BOLT		
010	006		00102634	NUT			050	008		07150815	WASHER		
011	006		06350825	BOLT			051	008		06470801	NUT		
012	004		07160830	LOCKWASHER			052	008		06430801	NUT		
013	002		06470801	NUT			053	001		15318086	PLATE-MUDFLAP CLAMPING		
014	008		09267949	WASHER-HARDENED			054	004		15311176	BOLT		
015	004		00179892	BOLT			055	004		07161630	LOCKWASHER		
016	004		00274209	LOCKNUT			056	003		15320662	FOOT-TREADPLATE		
017	002		07151220	WASHER			057	012		15320295	CAPSCREW		
018	002		15234758	WASHER									
019	002		06471201	LOCKNUT									
020	004		09267660	WASHER									
021	004		06351230	BOLT									
022	002		07161230	LOCKWASHER									
023	001		06372070	BOLT									
024	002		15342569	CHAIN-MUDFLAP STAY									
025	001		15342570	MUDFLAP-FRONT RH									
026	001		15318829	PLATE									
027	002		15316708	CLAMP PLATE									
028	001		15317173	PLATFORM-RH									
029	001		15342566	SIDE STEP ASSY-RH									
030	004		06442040	SCREW SET									
031	004		06472001	NUT									
032	004		07162030	LOCKWASHER									
033	003		06351240	BOLT									
034	003		06471201	LOCKNUT									
035	001		15331048	SPILL GUARD									
036	001		15331050	BRACE-SPILL GUARD									
037	002		15228110	TUBE									
038	002		09366021	GRIP									
039	001		09270005	WASHER-HARDENED									
040	001		06432001	NUT									

P11039

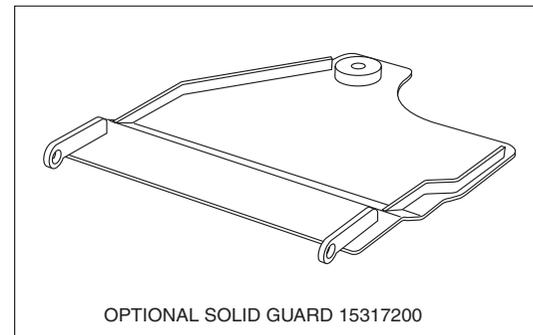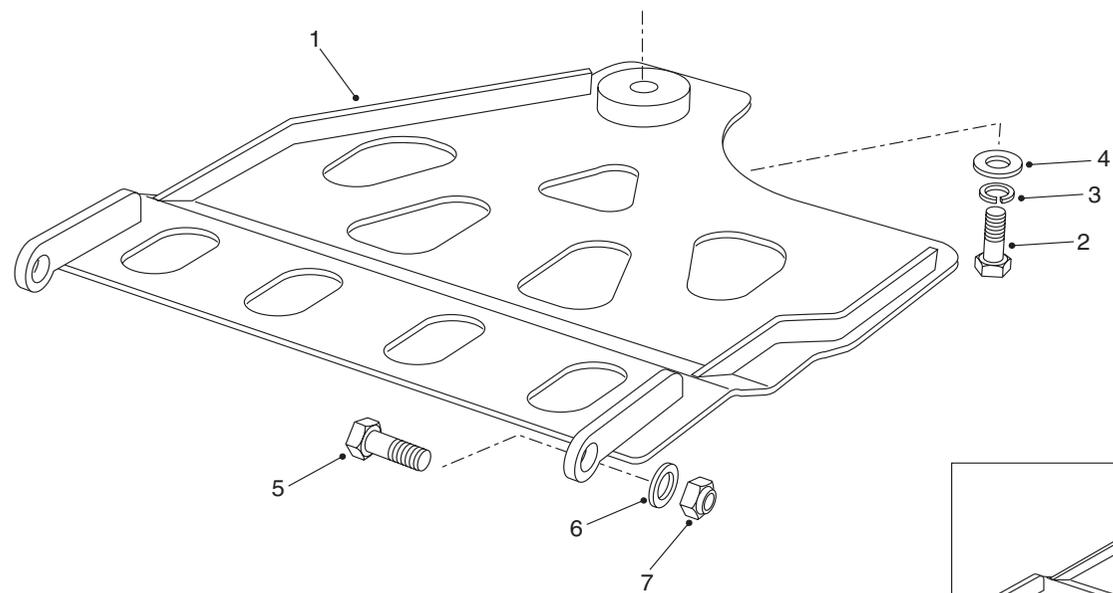

**100-0135-9211 ROCK AND SUMP GUARDS**  
FROM SERIAL NO. A9201011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15313507	GUARD-TRANS SUMP		
002	001		06351665	BOLT		
003	001		07161630	LOCKWASHER		
004	001		09191596	WASHER		
005	002		06351670	BOLT NSS		
006	002		07151630	WASHER		
007	002		06471601	LOCKNUT		

THIS PAGE IS INTENTIONALLY LEFT BLANK

## **CUMMINS ENGINE**

THIS UNIT IS EQUIPPED WITH A CUMMINS DIESEL ENGINE.

TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.

A SEPARATE CUMMINS ENGINE PARTS BOOK IS SUPPLIED WITH NEW UNITS FOR ENGINE PARTS COVERAGE.


ANY ADDITIONAL REQUESTS FOR THIS CUMMINS ENGINE PARTS BOOK OR ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

R1 11/08 (ECN 109083)


110-0030-9211 ENGINE AND MOUNTING  
FROM SERIAL NO. A9201011

DRAWING NO. P12125A

P12125

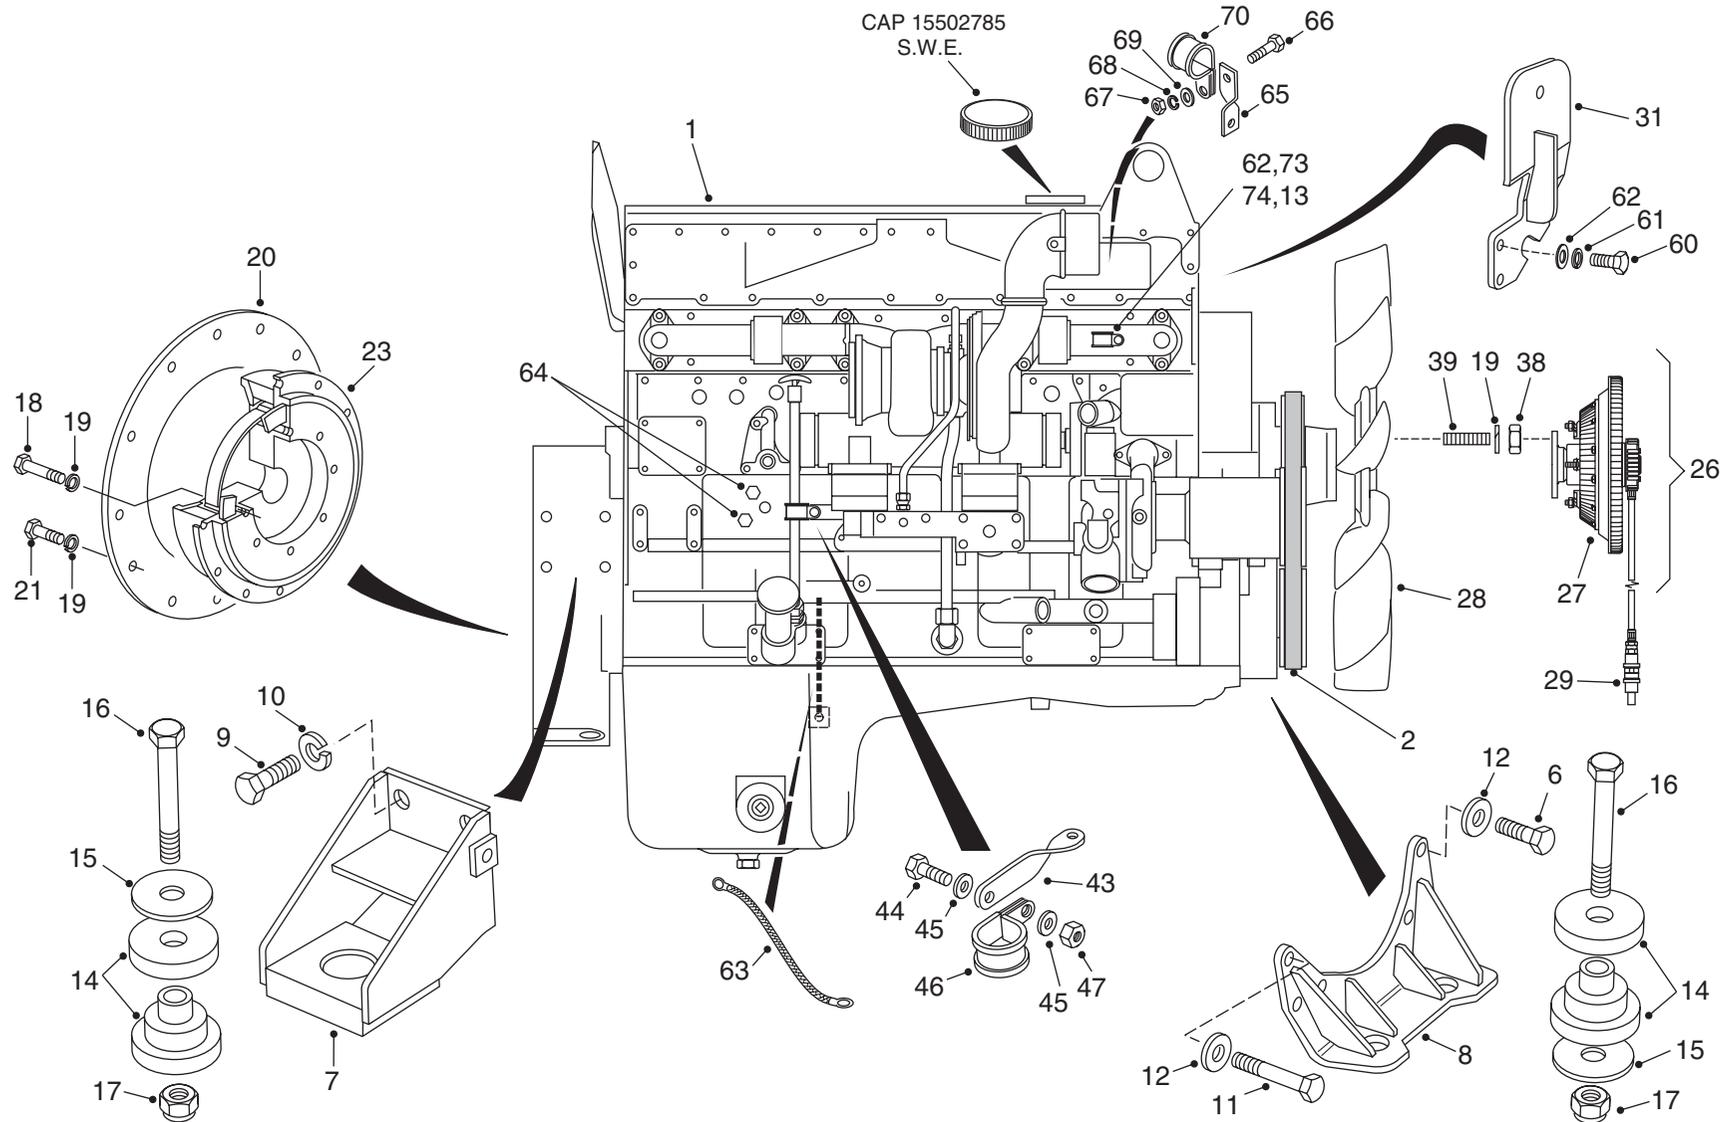

P12125

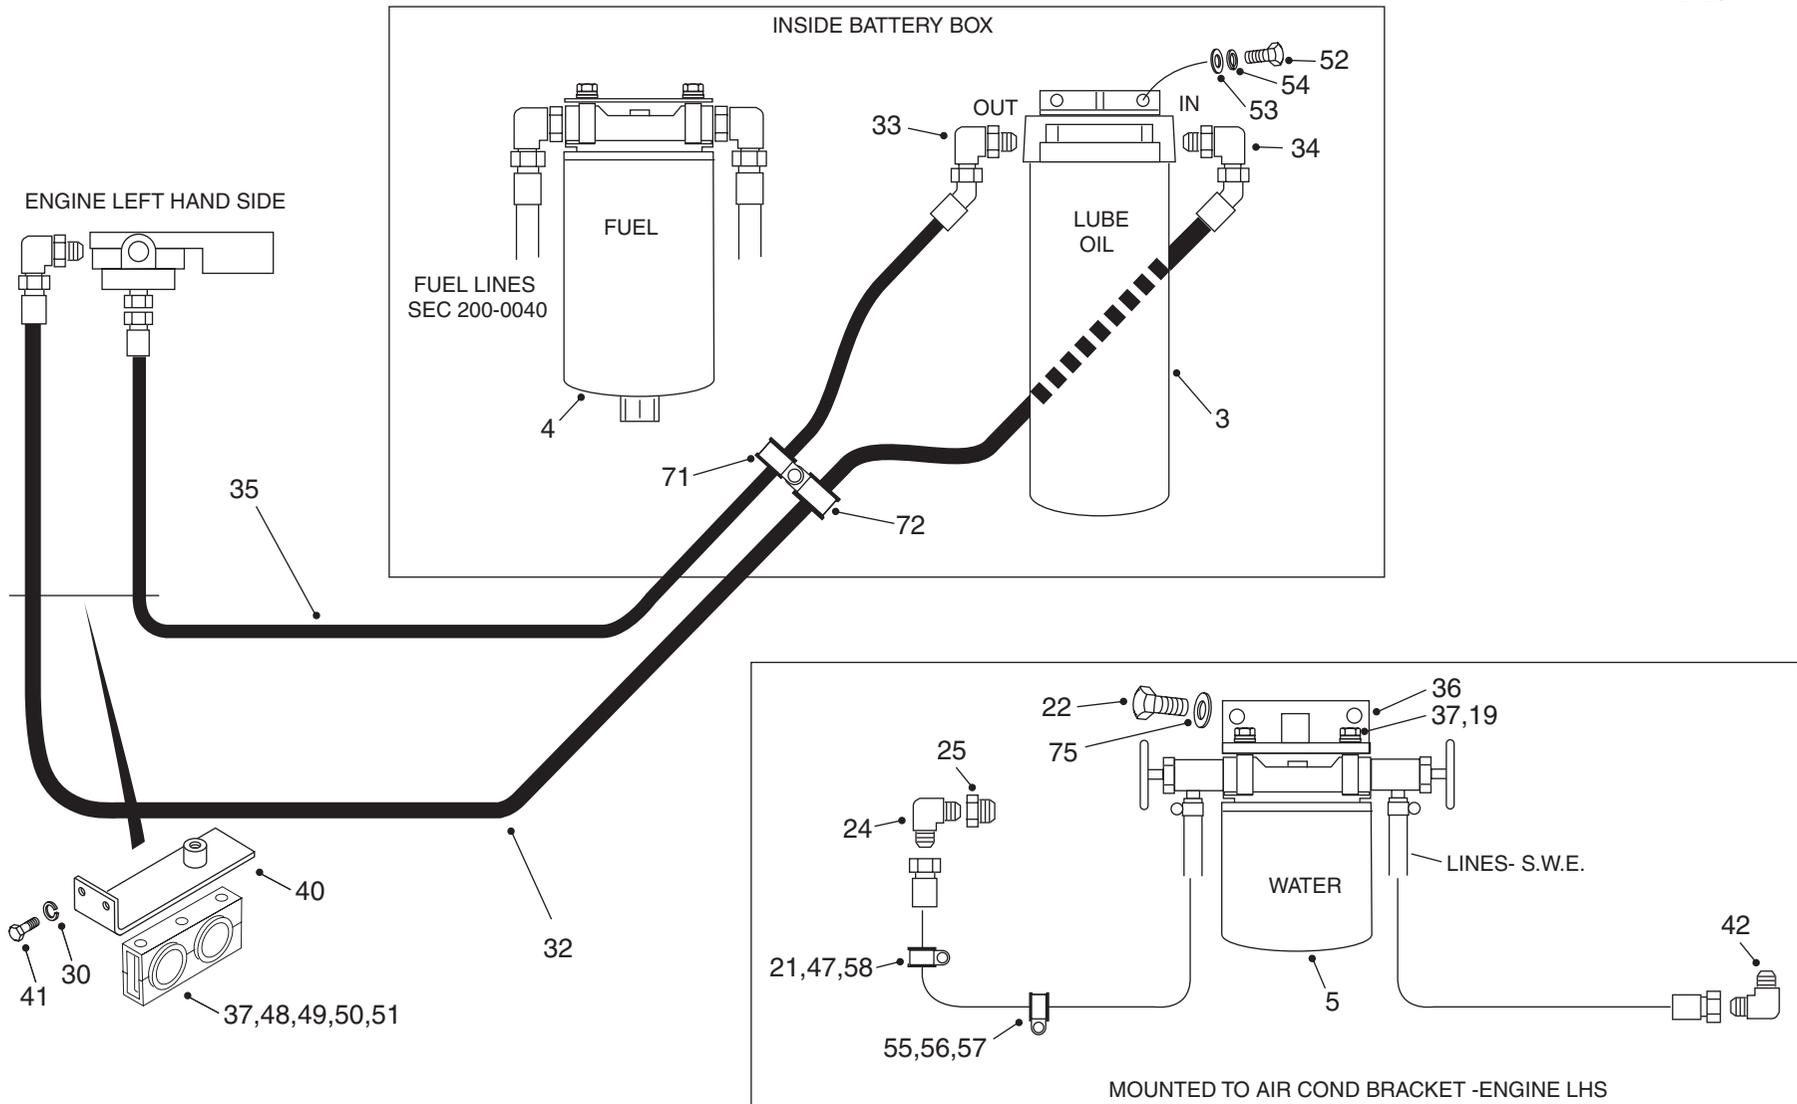



THIS PAGE IS INTENTIONALLY LEFT BLANK

Product: 2007 TEREX TA25 G7 Articulated Truck Workshop Parts Manual[PN15503473]


Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-a>

[rticulated-truck-workshop-parts-manualpn15503473/](https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-a-articulated-truck-workshop-parts-manualpn15503473/)

**110-0050-9211 AIR CLEANER**  
FROM SERIAL NO. A9201011

DRAWING NO. P11006

P11006

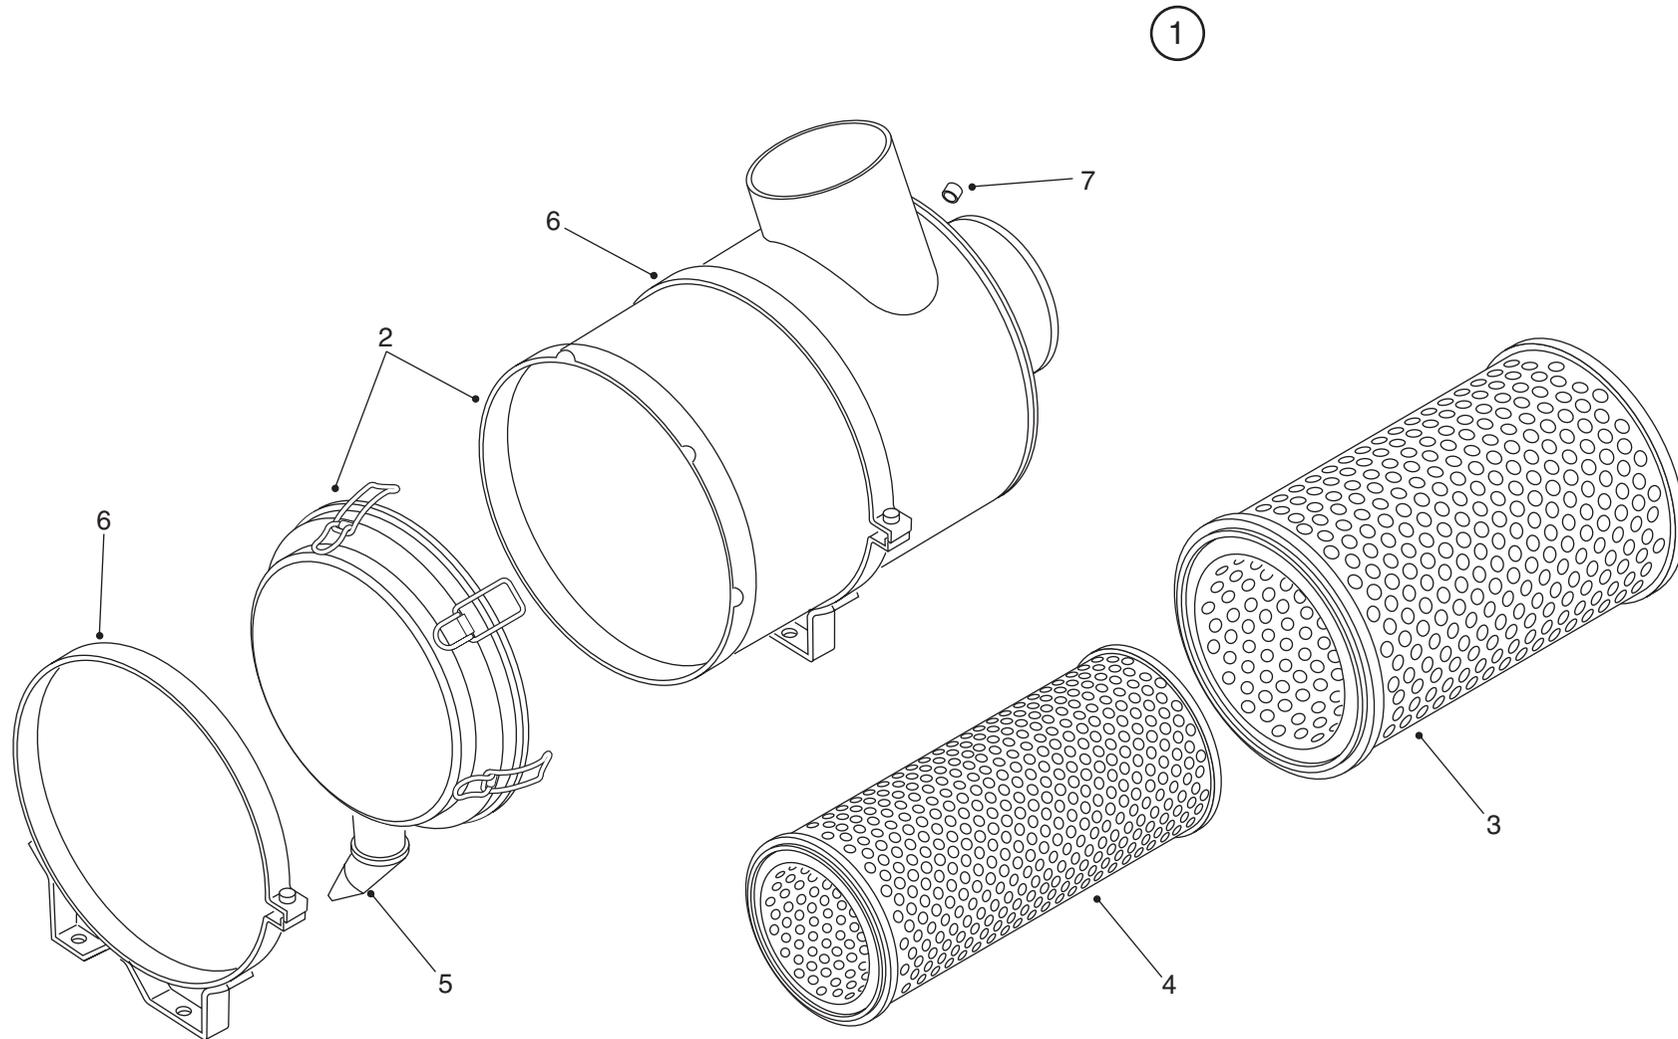

Sample of manual. Download All 484 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta25-g7-articulated-truck-workshop-parts-manualpn15503473/>