


CLICK HERE FOR TRACTOR TABLE OF CONTENTS
CLICK HERE FOR TRACTOR OPTIONAL TABLE OF CONTENTS
CLICK HERE FOR TRAILER TABLE OF CONTENTS
CLICK HERE FOR TRAILER OPTIONAL TABLE OF CONTENTS
[culated-truck-workshop-parts-manualpn15500741/](http://www.terex.com/technical-support/technical-support-manuals/ta27-articulated-truck-workshop-parts-manualpn15500741/)

P11160

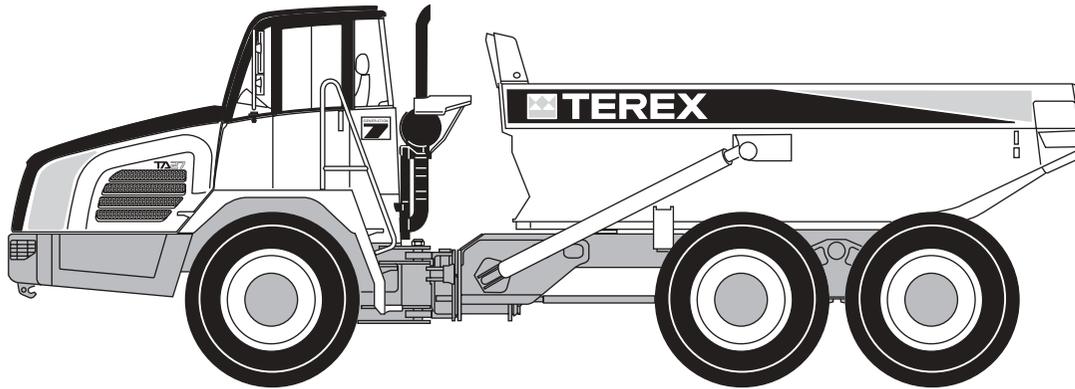

TEREX

Parts Book

CLICK HERE TO RETURN TO
MAIN LIBRARY INDEX

Part Number
15500741

TA27 Articulated Truck

Cummins QSL-330hp with ZF 6WG-260-II Trans.(non-retarder)

Serial No. A8501011 through A8501223

Sample of manual. Download All 490 pages at:

<http://www.aresairmanual.com/downloads/2006-terex-ta27-articulated-truck-workshop-parts-manualpn15500741/>

April 2003
Revised: October 2006

PUBLISHED BY:
CUSTOMER SUPPORT DEPARTMENT

TEREX EQUIPMENT LIMITED
MOTHERWELL, SCOTLAND

Product: 2006 TEREX TA27 Articulated Truck Workshop Parts Manual[PN15500741]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta27-arti>

[culated-truck-workshop-parts-manualpn15500741/](https://www.arepairmanual.com/downloads/2006-terex-ta27-arti-culated-truck-workshop-parts-manualpn15500741/)

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 490 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta27-articulated-truck-workshop-parts-manualpn15500741/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
 2 9058512 . Shaft
 3 9024169 . Ring
 4 9058132 . Control Assy.
 5 9058135 . . Spring
 6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

| | | | | | |
|----------------|----------------------------|-----------|-----------------|-------------|---------------------|
| Amps | Amperes | Hsg | Housing | N.I | Not Illustrated |
| As R | As Required | I.D | Inside Diameter | N.L.A | No Longer Available |
| Assy | Assembly | L.H | Left Hand | N.S.S | Not Sold Separately |
| Brkt | Bracket | L.W | Lockwasher | O.D | Outside Diameter |
| Cad-Pltd | Cadium Plated | Lg | Long | Pr | Pair |
| Comm | Commencement of production | Lkg | Linkage | P.T.O | Power-Take-Off |
| E.S.N | Elastic Stop Nut | Mtg | Mounting | R.H | Right Hand |
| Ftgs | Fittings | N.C | Note Code | Std | Standard |



Articulated Truck



TRACTOR SECTIONS

| | | | | | |
|--|--------------------------|------------|---|-----------------------------|------------|
|  | CHASSIS | 100 |  | MAIN HYDRAULIC VALVE | 215 |
|  | ENGINE | 110 |  | STEERING SYSTEM | 220 |
|  | TRANSMISSION | 120 |  | BODY HOIST SYSTEM | 230 |
|  | DRIVELINE | 130 |  | BRAKING SYSTEM | 250 |
|  | FRONT AXLE | 140 |  | CAB | 260 |
|  | BRAKE PARTS | 165 |  | DECALS | 290 |
|  | SUSPENSION SYSTEM | 180 |  | MISCELLANEOUS | 300 |
|  | ELECTRICAL SYSTEM | 190 |  | | |
|  | FUEL SYSTEM | 200 |  | | |
|  | COOLING SYSTEM | 210 |  | | |

NOTE: -SECTIONS SHOWN IN BOLD ITALIC ARE ADDITIONS AND/OR REVISIONS SINCE LAST UPDATE

| TABLE OF CONTENTS FOR MODEL TA27 | | FROM SERIAL NO A8501011 | REVISED 10/06 |
|----------------------------------|------------------------------|------------------------------------|------------------------|
| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
| <u>SECTION 100</u> | <u>CHASSIS</u> | | |
| 100-0010-8511 | CHASSIS | | R2 07/04 |
| 100-0030-8511 | SOUND INSULATION | | |
| 100-0040-8511 | HOOD AND MOUNTING | | R2 04/04 |
| 100-0070-8511 | FENDERS AND MOUNTING | A8501011 TO A8501154 | R3 01/04 |
| 100-0070-8511 | FENDERS AND MOUNTING | A8501155 TO A8501177 | 07/04 |
| 100-0070-8511 | FENDERS AND MOUNTING | A8501178 | 10/04 |
| 100-0135-8511 | ROCK AND SUMP GUARDS | | |
| <u>SECTION 110</u> | <u>ENGINE</u> | | |
| 110-0020-8511 | ENGINE ORDERING INSTRUCTIONS | | |
| 110-0030-8511 | ENGINE AND MOUNTING | | R4 07/04 |
| 110-0050-8511 | AIR CLEANER | | |
| 110-0060-8511 | AIR CLEANER PIPES AND HOSES | | |
| 110-0070-8511 | EXHAUST AND MOUNTING | A8501011 TO A8501100 | R3 07/04 |
| 110-0070-8511 | EXHAUST AND MOUNTING | A8501101 TO A8501198 | 07/04 |
| 110-0070-8511 | EXHAUST AND MOUNTING | A8501199 | 10/04 |
| <i>110-0080-8511</i> | <i>EXHAUST BRAKE</i> | <i>A8501011 TO A8501100</i> | <i>R5 10/06</i> |
| <i>110-0080-8511</i> | <i>EXHAUST BRAKE</i> | <i>A8501101</i> | <i>R2 10/06</i> |
| 110-0140-8511 | COUPLING | | |
| <u>SECTION 120</u> | <u>TRANSMISSION</u> | | |
| 120-0010-8511 | TRANSMISSION MOUNTING | | R2 04/04 |
| 120-0020-8511 | TRANSMISSION BREAKDOWN | | |
| 120-0070-8511 | SHIFT CONTROL | A8501011 TO A8501210 | |
| 120-0070-8511 | SHIFT CONTROL | A8501211 | 04/05 |
| 120-0100-8511 | FILTER | | |
| 120-0110-8511 | OIL LINES-TRANSMISSION | A8501011 TO A8501095 | R1 04/04 |
| 120-0110-8511 | OIL LINES-TRANSMISSION | A8501096 TO A8501217 | R1 04/04 |
| 120-0110-8511 | OIL LINES-TRANSMISSION | A8501218 | 10/04 |
| 120-0220-8511 | OIL PUMP | | |
| 120-0390-8511 | TORQUE CONVERTER | | |
| 120-0400-8511 | LUBRICATION PIPES | | |
| 120-0410-8511 | INDUCTIVE TRANSMITTER | | |
| 120-0430-8511 | ELECTRIC SHIFT CONTROL VALVE | | |
| 120-0440-8511 | GEARSHIFT | | |
| 120-0450-8511 | GEARBOX HOUSING | | |
| 120-0460-8511 | CLUTCH ASSEMBLY KV+K1 | | |
| 120-0470-8511 | CLUTCH ASSEMBLY KR+K2 | | |
| 120-0480-8511 | CLUTCH ASSEMBLY K3+K4 | | |
| 120-0500-8511 | PTO MAIN HYDRAULIC PUMP | | |

TABLE OF CONTENTS FOR MODEL TA27

FROM SERIAL NO A8501011

REVISED 10/06

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|--------------------------------------|-------------------------------|--------------------------|
| <u>SECTION 120</u> | <u>TRANSMISSION-CONTINUED</u> | | |
| 120-0515-8511 | EMERGENCY STEERING PUMP | | R1 10/04 |
| 120-0520-8511 | INPUT-DRIVE ASSEMBLY | | |
| 120-0530-8511 | LAYSHAFT GEARING | | |
| 120-0540-8511 | DIFFERENTIAL | | |
| 120-0625-8511 | TEMPERATURE SENSOR | | |
| 120-0900-8511 | LOOSE PARTS-TRANSMISSION | | R1 04/04 |
| <u>SECT 130</u> | <u>DRIVELINE</u> | | |
| 130-0010-8511 | FRONT DRIVELINE | | |
| <u>SECTION 140</u> | <u>FRONT AXLE</u> | | |
| 140-0010-8511 | AXLE COMPLETE-FRONT | | |
| 140-0020-8511 | AXLE GROUP-FRONT | | |
| 140-0030-8511 | PLANETARY GEARING-FRONT | | |
| 140-0040-8511 | WHEEL, RIM AND TYRE-FRONT | | |
| 140-0060-8511 | DIFFERENTIAL-FRONT | | R1 09/05 |
| <u>SECTION 165</u> | <u>BRAKE PARTS</u> | | |
| 165-0010-8511 | BRAKE PARTS-(ARTICS) | | |
| 165-0050-8511 | BRAKE GUARDS | | |
| <u>SECTION 180</u> | <u>SUSPENSION SYSTEM</u> | | |
| 180-0020-8511 | FRONT SUSPENSION | | R1 10/04 |
| <u>SECTION 190</u> | <u>ELECTICAL SYSTEM</u> | | |
| 190-0010-8511 | ELECTRICAL TERMINALS | | |
| 190-0011-8511 | ELECTRICAL CONNECTORS | | |
| 190-0030-8511 | CABLES/HARNESSES-CAB | | R1 10/04 |
| 190-0040-8511 | CABLES/HARNESSES-CHASS/ENG | | R2 08/03 |
| 190-0070-8511 | BATTERY AND CABLES | | R2 01/04 |
| 190-0080-8511 | BATTERY MOUNTING | A8501011 TO A8501052 | R1 07/03 |
| 190-0080-8511 | BATTERY MOUNTING | A8501053 TO A8501165 | 08/03 |
| 190-0080-8511 | BATTERY MOUNTING | A8501166 | 07/04 |
| 190-0085-8511 | ECU-HYD.SYSTEM MONITORING | | R1 05/03 |
| 190-0100-8511 | ELECTRICAL LIGHTING SYSTEM | | R1 07/04 |
| 190-0110-8511 | ALTERNATOR | | |
| 190-0120-8511 | STARTER MOTOR | | R2 04/05 |
| 190-0270-8511 | SWITCHES AND SENSORS | | R2 04/04 |
| 190-0300-8511 | RADIO CASSETTE AND SPEAKERS | | R1 07/04 |
| 190-0310-8511 | ELECTRICAL HORN | | R1 08/03 |

NOTE: -SECTIONS SHOWN IN BOLD ITALIC ARE ADDITIONS AND/OR REVISIONS SINCE LAST UPDATE

NOTE: -SECTIONS SHOWN IN BOLD ITALIC ARE ADDITIONS AND/OR REVISIONS SINCE LAST UPDATE

| TABLE OF CONTENTS FOR MODEL TA27 | | FROM SERIAL NO A8501011 | REVISED 10/06 |
|----------------------------------|------------------------------------|-------------------------|-------------------|
| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
| <u>SECTION 200</u> | <u>FUEL SYSTEM</u> | | |
| 200-0010-8511 | FUEL TANK AND MOUNTING | | |
| 200-0040-8511 | FUEL LINES | | |
| 200-0050-8511 | ACCELERATOR LINKAGE | | |
| <u>SECTION 210</u> | <u>COOLING SYSTEM</u> | | |
| 210-0010-8511 | RADIATOR ASSEMBLY | A8501011 TO A8501133 | R1 04/04 |
| 210-0010-8511 | RADIATOR ASSEMBLY | A8501134 | 04/04 |
| 210-0020-8511 | RADIATOR MOUNTING | A8501011 TO A8501133 | R1 04/04 |
| 210-0020-8511 | RADIATOR MOUNTING | A8501134 | 04/04 |
| 210-0030-8511 | RADIATOR PIPING | | |
| 210-0035-8511 | CHARGE AIR COOLER & PIPING | | R1 07/03 |
| 210-0040-8511 | RADIATOR HEADER TANK AND HOSES | A8501011 TO A8501068 | R1 07/04 |
| 210-0040-8511 | RADIATOR HEADER TANK AND HOSES | A8501069 | R1 07/04 |
| 210-0060-8511 | OIL COOLER AND PIPING-TRANS | | R1 07/03 |
| 210-0061-8511 | TRANS OIL COOLER MOUNTING | | |
| 210-0065-8511 | OIL COOLER-TRANSMISSION | A8501011 TO A8501147 | R2 11/03 |
| 210-0065-8511 | OIL COOLER-TRANSMISSION | A8501148 | R1 10/04 |
| <u>SECTION 215</u> | <u>MAIN HYDRAULIC VALVE</u> | | |
| 215-0050-8511 | MAIN HYDRAULIC VALVE ASSEMBLY | | R4 01/04 |
| <u>SECTION 220</u> | <u>STEERING SYSTEM</u> | | |
| 220-0010-8511 | STEERING LINES | | R2 10/04 |
| 220-0090-8511 | STEERING VALVE | | |
| 220-0120-8511 | STEERING CYLINDER | A8501011 TO A8501028 | R2 08/03 |
| 220-0120-8511 | STEERING CYLINDER | A8501029 TO A8501206 | 11/03 |
| 220-0120-8511 | STEERING CYLINDER | A8501207 | R1 04/05 |
| 220-0230-8511 | STEERING COLUMN MOUNTING | | R1 07/04 |
| <u>SECTION 230</u> | <u>BODY HOIST SYSTEM</u> | | |
| 230-0020-8511 | LINES AND FITTINGS-BODY HOIST | | R1 10/04 |
| 230-0040-8511 | TANK AND MOUNTING-BODY HOIST | A8501011 TO A8501020 | R1 07/03 |
| 230-0040-8511 | TANK AND MOUNTING-BODY HOIST | A8501021 TO A8501064 | 07/03 |
| 230-0040-8511 | TANK AND MOUNTING-BODY HOIST | A8501065 | R1 04/05 |
| 230-0050-8511 | PUMP-BODY HOIST | | |
| 230-0081-8511 | JOYSTICK-BODY CONTROL | | |

TABLE OF CONTENTS FOR MODEL TA27

FROM SERIAL NO A8501011

REVISED 10/06

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|-----------------------------|--------------------------------------|------------------------|---------------------|
| SECTION 250 | BRAKING SYSTEM | | |
| 250-0020-8511 | BRAKE LINES-HYDRAULIC | | R5 10/04 |
| 250-0060-8511 | BRAKE ACCUMULATOR | A8501011 TO A8501040 | |
| 250-0060-8511 | BRAKE ACCUMULATOR | A8501041 TO A8501165 | 08/03 |
| 250-0060-8511 | BRAKE ACCUMULATOR | A8501166 | 07/04 |
| 250-0070-8511 | TREADLE VALVE | | R1 11/03 |
| SECTION 260 | CAB | | |
| 260-0010-8511 | CAB ASSEMBLY | A8501011 TO A8501210 | |
| 260-0010-8511 | CAB ASSEMBLY | A8501211 | 10/04 |
| 260-0015-8511 | CAB MOUNTING & AUXILIARY PARTS | | R2 10/04 |
| 260-0018-8511 | CAB TILT MECHANISM | | R1 07/03 |
| 260-0030-8511 | CAB DOOR-LEFT HAND | | |
| 260-0080-8511 | SWITCHES AND INSTRUMENTS | A8501011 TO A8501210 | R4 04/04 |
| 260-0080-8511 | SWITCHES AND INSTRUMENTS | A8501211 | 10/04 |
| 260-0090-8511 | SEAT-DRIVER | | R2 07/04 |
| 260-0110-8511 | SEAT-PASSENGER | | R1 07/03 |
| 260-0130-8511 | AIR CONDITIONER/HEATER | A8501011 TO A8501210 | R1 11/03 |
| <i>260-0130-8511</i> | <i>AIR CONDITIONER/HEATER</i> | <i>A8501211</i> | <i>10/06</i> |
| 260-0140-8511 | HEATER LINES AND WIRING | | |
| 260-0145-8511 | AIR CONDITIONER LINES | | |
| 260-0190-8511 | WINDSCREEN WASHER | | |
| SECTION 290 | DECALS | | |
| 290-0010-8511 | DECALS-ENGLISH | | R4 07/04 |
| SECTION 300 | MISCELLANEOUS | | |
| 300-0040-8511 | MULTI-TUBE CLAMPS AND HARDWARE | | |


NOTE: -SECTIONS SHOWN IN BOLD ITALIC ARE ADDITIONS AND/OR REVISIONS SINCE LAST UPDATE

R2 07/04 (ECN 105290, SER CORR)

100-0010-8511 CHASSIS
FROM SERIAL NO. A8501011

DRAWING NO. P11004

P11004

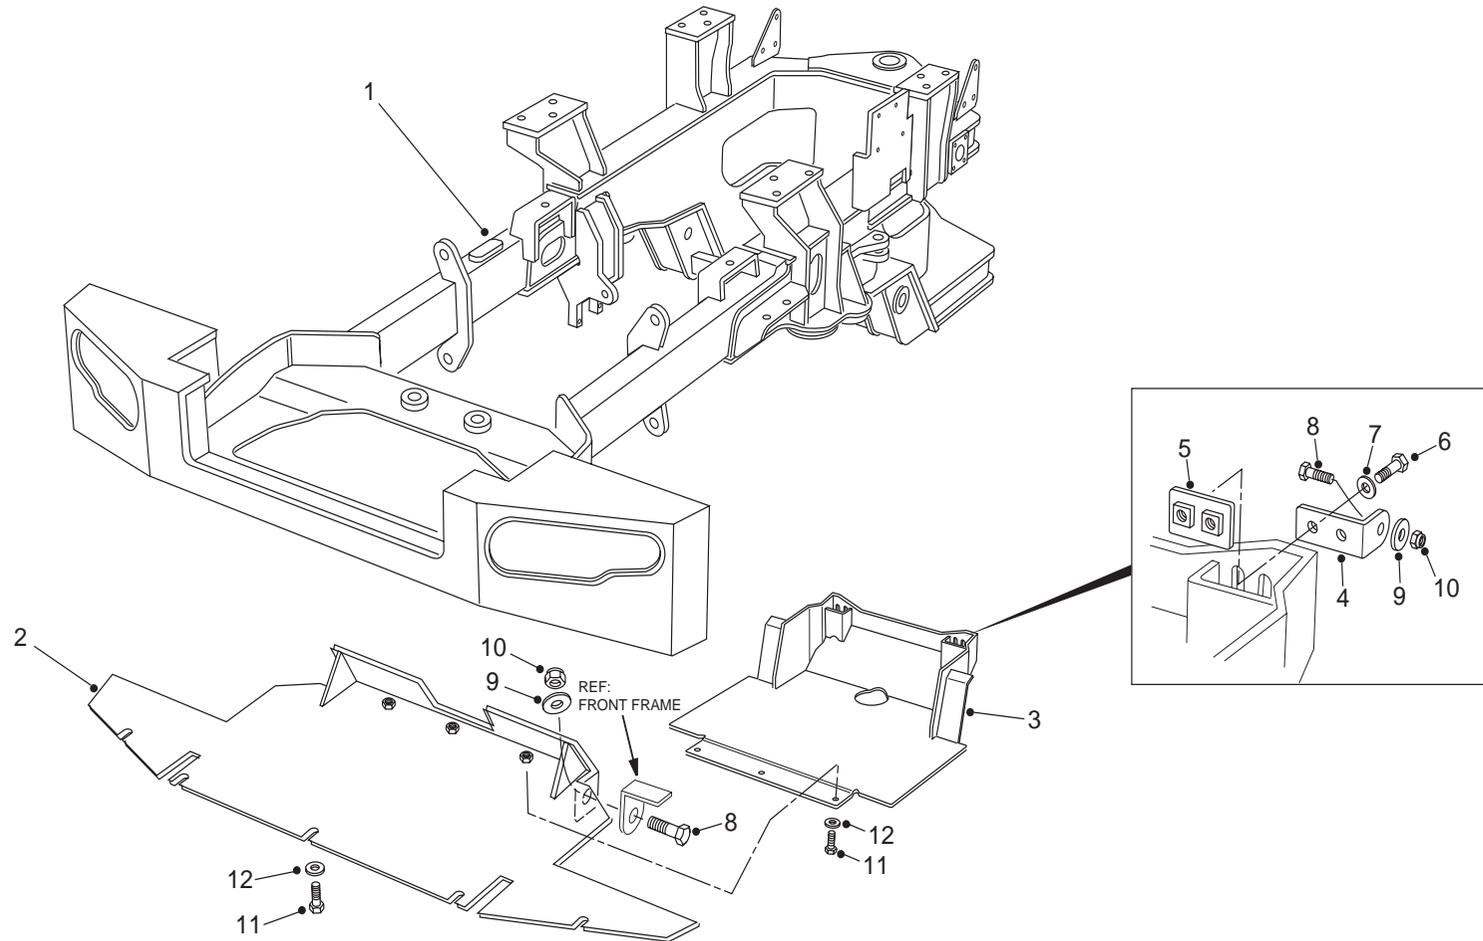


100-0010-8511 CHASSIS
FROM SERIAL NO. A8501011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------|-----------------|---------------|
| 001 | 001 | | 15315909 | FRAME ASSY-FRONT | | |
| 002 | 001 | | 15314756 | GUARD ASSY-CHASSIS | | |
| 003 | 001 | | 15314799 | GUARD ASSY-SUMP | | |
| 004 | 002 | | 15314724 | BRACKET-HINGE | | |
| 005 | 002 | | 15314726 | CLAMP PLATE | | |
| 006 | 004 | | 06351655 | BOLT | | |
| 007 | 004 | | 09191594 | WASHER | | |
| 008 | 004 | | 06351670 | BOLT | | |
| 009 | 004 | | 07151630 | WASHER | | |
| 010 | 004 | | 06471601 | LOCKNUT | | |
| 011 | 008 | | 06351230 | BOLT | | |
| 012 | 008 | | 09217321 | WASHER | | |

100-0030-8511 SOUND INSULATION
FROM SERIAL NO. A8501011

DRAWING NO. P11207

P11207

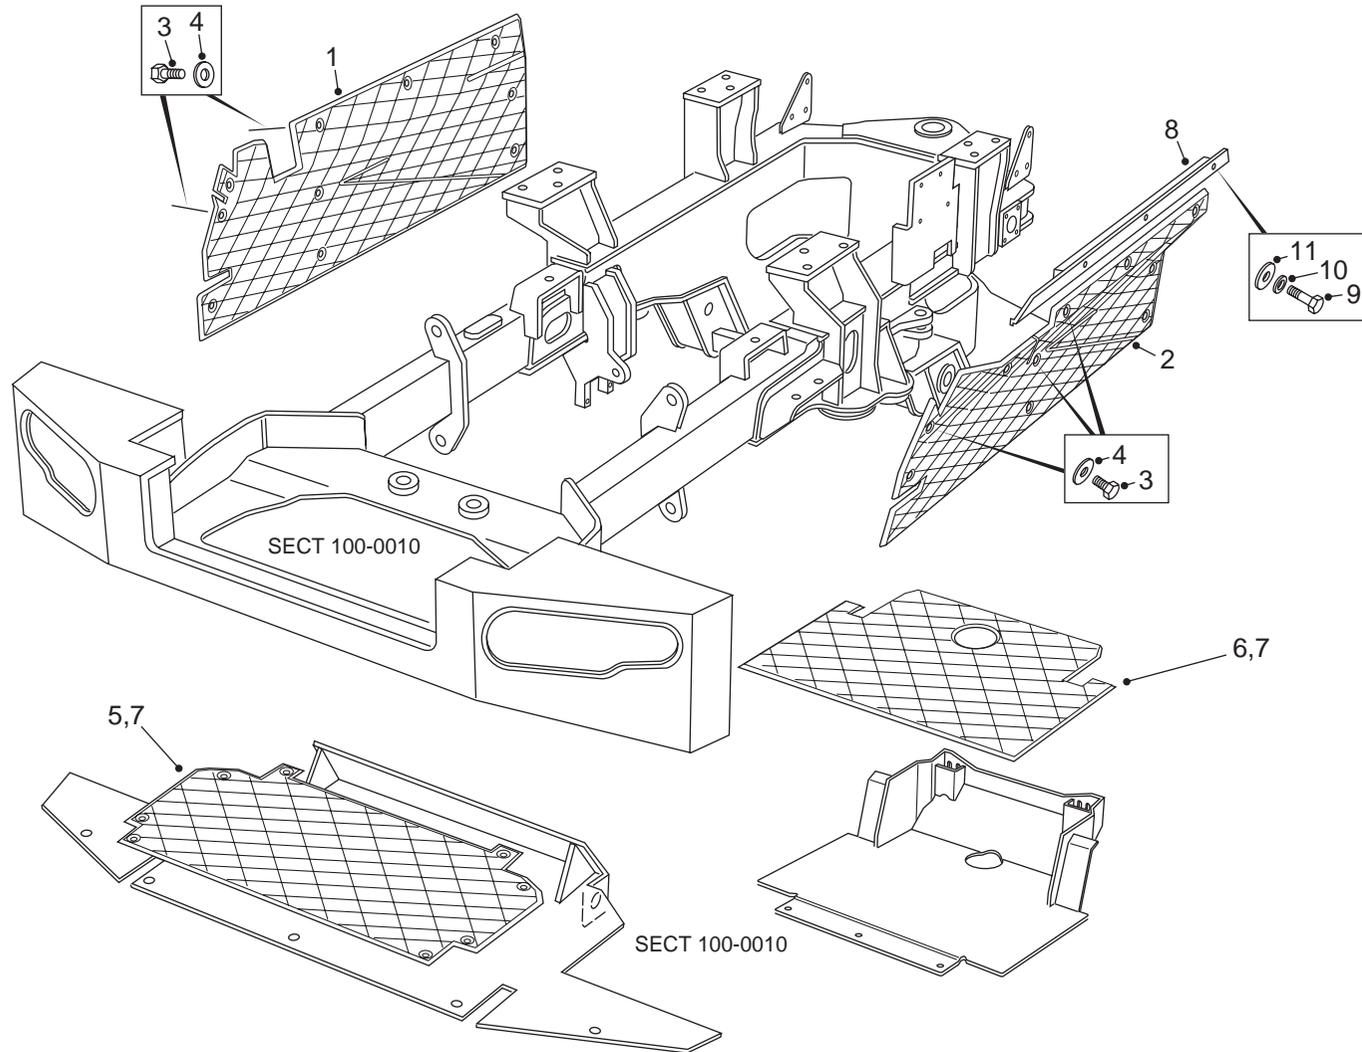

100-0030-8511 SOUND INSULATION
FROM SERIAL NO. A8501011


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|-----------------------|-----------------|---------------|
| 001 | 001 | | 15314503 | QUILT-RH WHEEL ARCH | | |
| 002 | 001 | | 15314504 | QUILT-LH WHEEL ARCH | | |
| 003 | 015 | | 06351230 | BOLT | | |
| 004 | 015 | | 15234758 | WASHER | | |
| 005 | 001 | | 15316801 | QUILT-SUMP GUARD FT | | |
| 006 | 001 | | 15316803 | QUILT-SUMP GUARD REAR | | |
| 007 | ASR | | 09079599 | ADHESIVE | | |
| 008 | 001 | | 15316672 | PLATE-QUILT MTG | | |
| 009 | 003 | | 06351225 | BOLT | | |
| 010 | 003 | | 07161230 | LOCKWASHER | | |
| 011 | 003 | | 07151220 | WASHER | | |

R2 04/04 (ECN 105861, ECN 105529)

100-0040-8511 HOOD AND MOUNTING
FROM SERIAL NO. A8501011

DRAWING NO. P11005

P11005

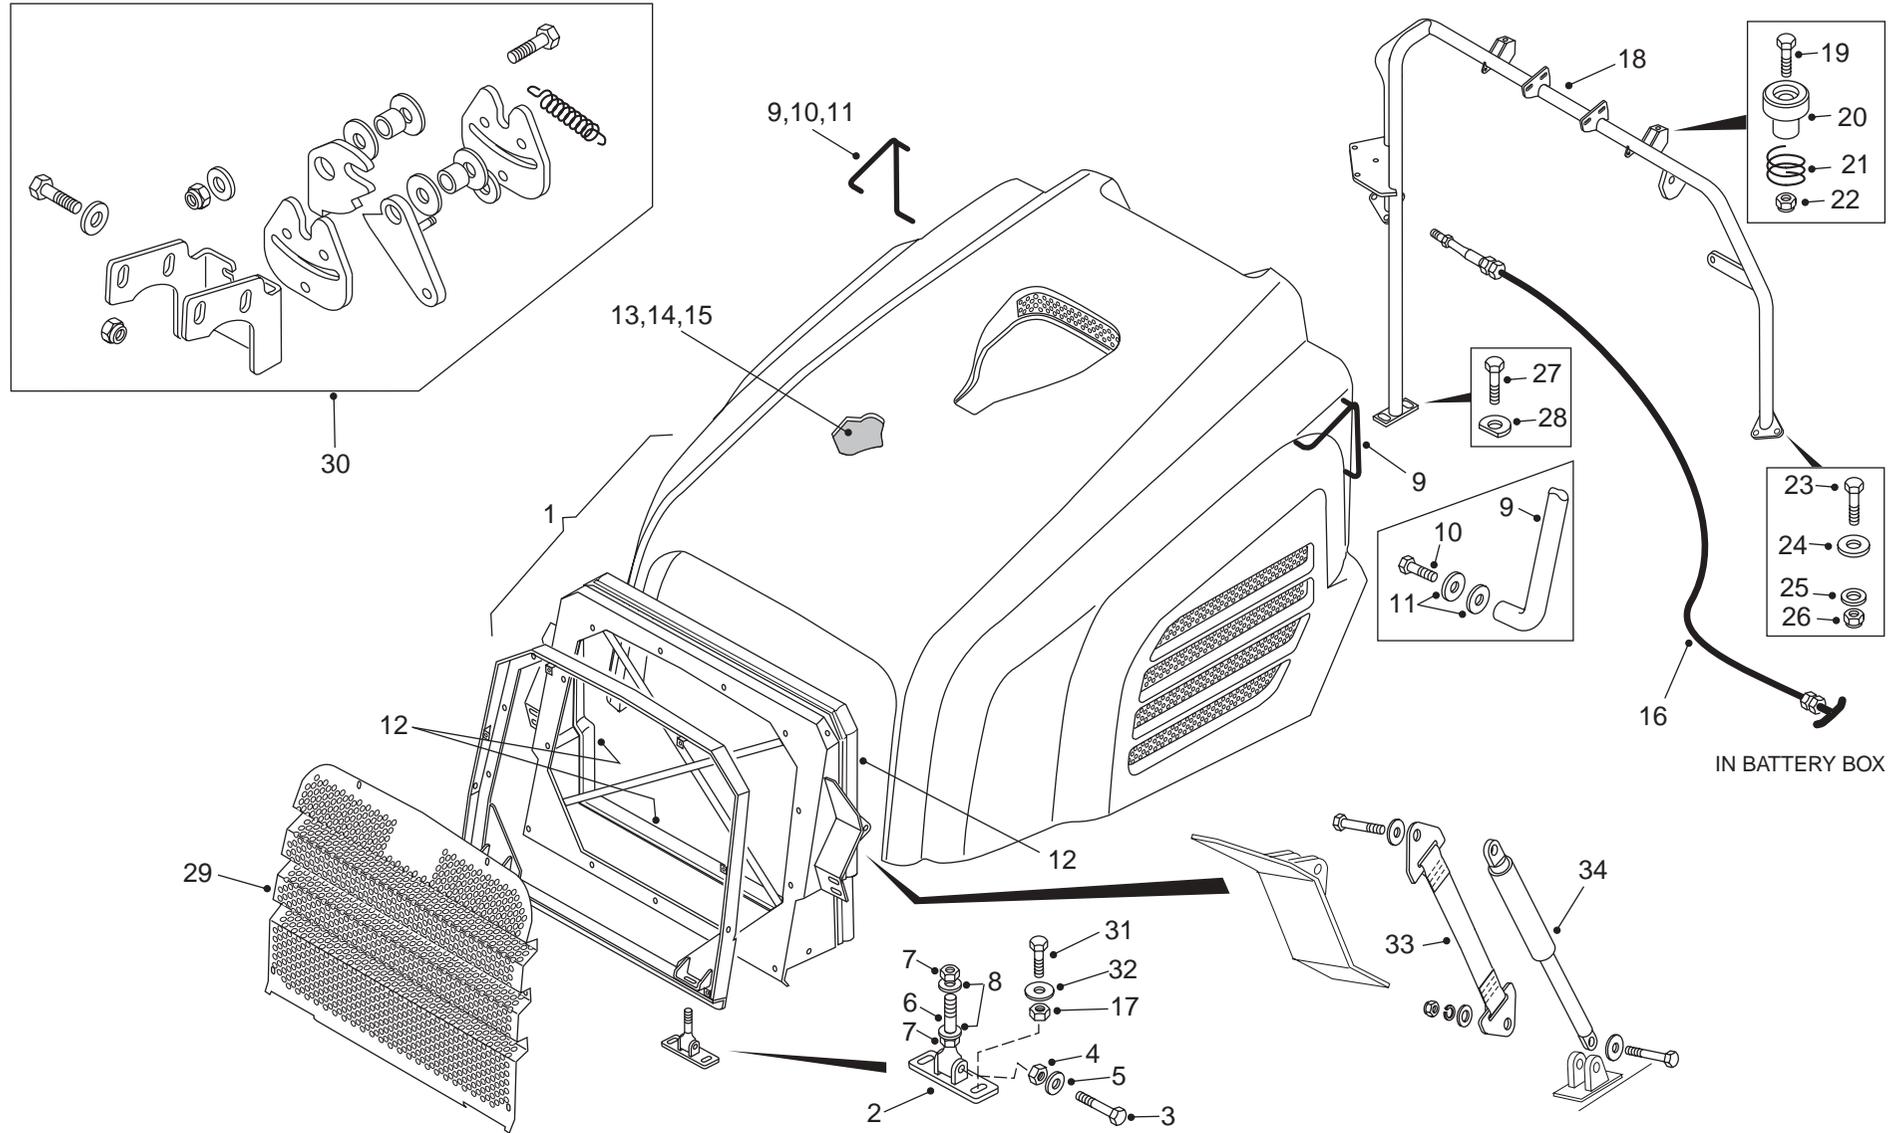

100-0040-8511 HOOD AND MOUNTING
FROM SERIAL NO. A8501011


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|------------------------|-----------------|---------------|
| 001 | 001 | | 15312808 | HOOD ASSEMBLY | | |
| 002 | 002 | | 15313176 | .HINGE ASSY | | |
| 003 | 002 | | 06351675 | .BOLT | | |
| 004 | 002 | | 15252584 | .NUT | | |
| 005 | 002 | | 07151630 | .WASHER | | |
| 006 | 002 | | 15313179 | .ROD-ADJUSTMENT | | |
| 007 | 004 | | 06432001 | .NUT | | |
| 008 | 004 | | 09250715 | .WASHER-HARDENED | | |
| 009 | 002 | | 15315116 | .HANDLE-HOOD | | |
| 010 | 006 | | 15309253 | .BOLT | | |
| 011 | 012 | | 15307237 | .WASHER | | |
| 012 | ASR | | 15244364 | .SEAL-BULK | | |
| 013 | 001 | | 15316531 | .INSULATION QUILT HOOD | | |
| 014 | 001 | | 15317432 | .INSULATION QUILT HOOD | | |
| 015 | 001 | | 15316533 | .INSULATION PANEL HOOD | | |
| 016 | 001 | | 15314415 | CABLE-HOOD CATCH | | |
| 017 | 004 | | 06471601 | LOCKNUT | | |
| 018 | 001 | | 15312309 | GOALPOST WELDMENT | A8501011 | A8501068 |
| 018 | 001 | | 15316873 | GOALPOST WELDMENT | A8501069 | |
| 019 | 002 | | 15315670 | BOLT | | |
| 020 | 002 | | 15307804 | STOP-HOOD | | |
| 021 | 002 | | 15315607 | SPRING | | |
| 022 | 002 | | 06471001 | LOCKNUT | | |
| 023 | 006 | | 06351250 | BOLT | | |
| 024 | 006 | | 09217321 | WASHER | | |
| 025 | 006 | | 09267660 | WASHER | | |
| 026 | 006 | | 06471201 | LOCKNUT | | |
| 027 | 002 | | 06351230 | BOLT | | |
| 028 | 002 | | 15309558 | WASHER D SHAPE | | |
| 029 | 001 | | 15313814 | GRILLE | | |
| 030 | 001 | | 15313317 | KIT-HOOD CATCH | | |
| 031 | 004 | | 06351655 | BOLT | | |
| 032 | 004 | | 09191596 | WASHER | | |
| 033 | 002 | | 15313472 | STRAP-HOOD RETAINING | | |
| 034 | 002 | | 15313446 | GAS STRUT | | |

R3 01/04 (ECN 105721, SER CORR, ECN 106122)

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501011 TO A8501154

DRAWING NO. P11062

P11062

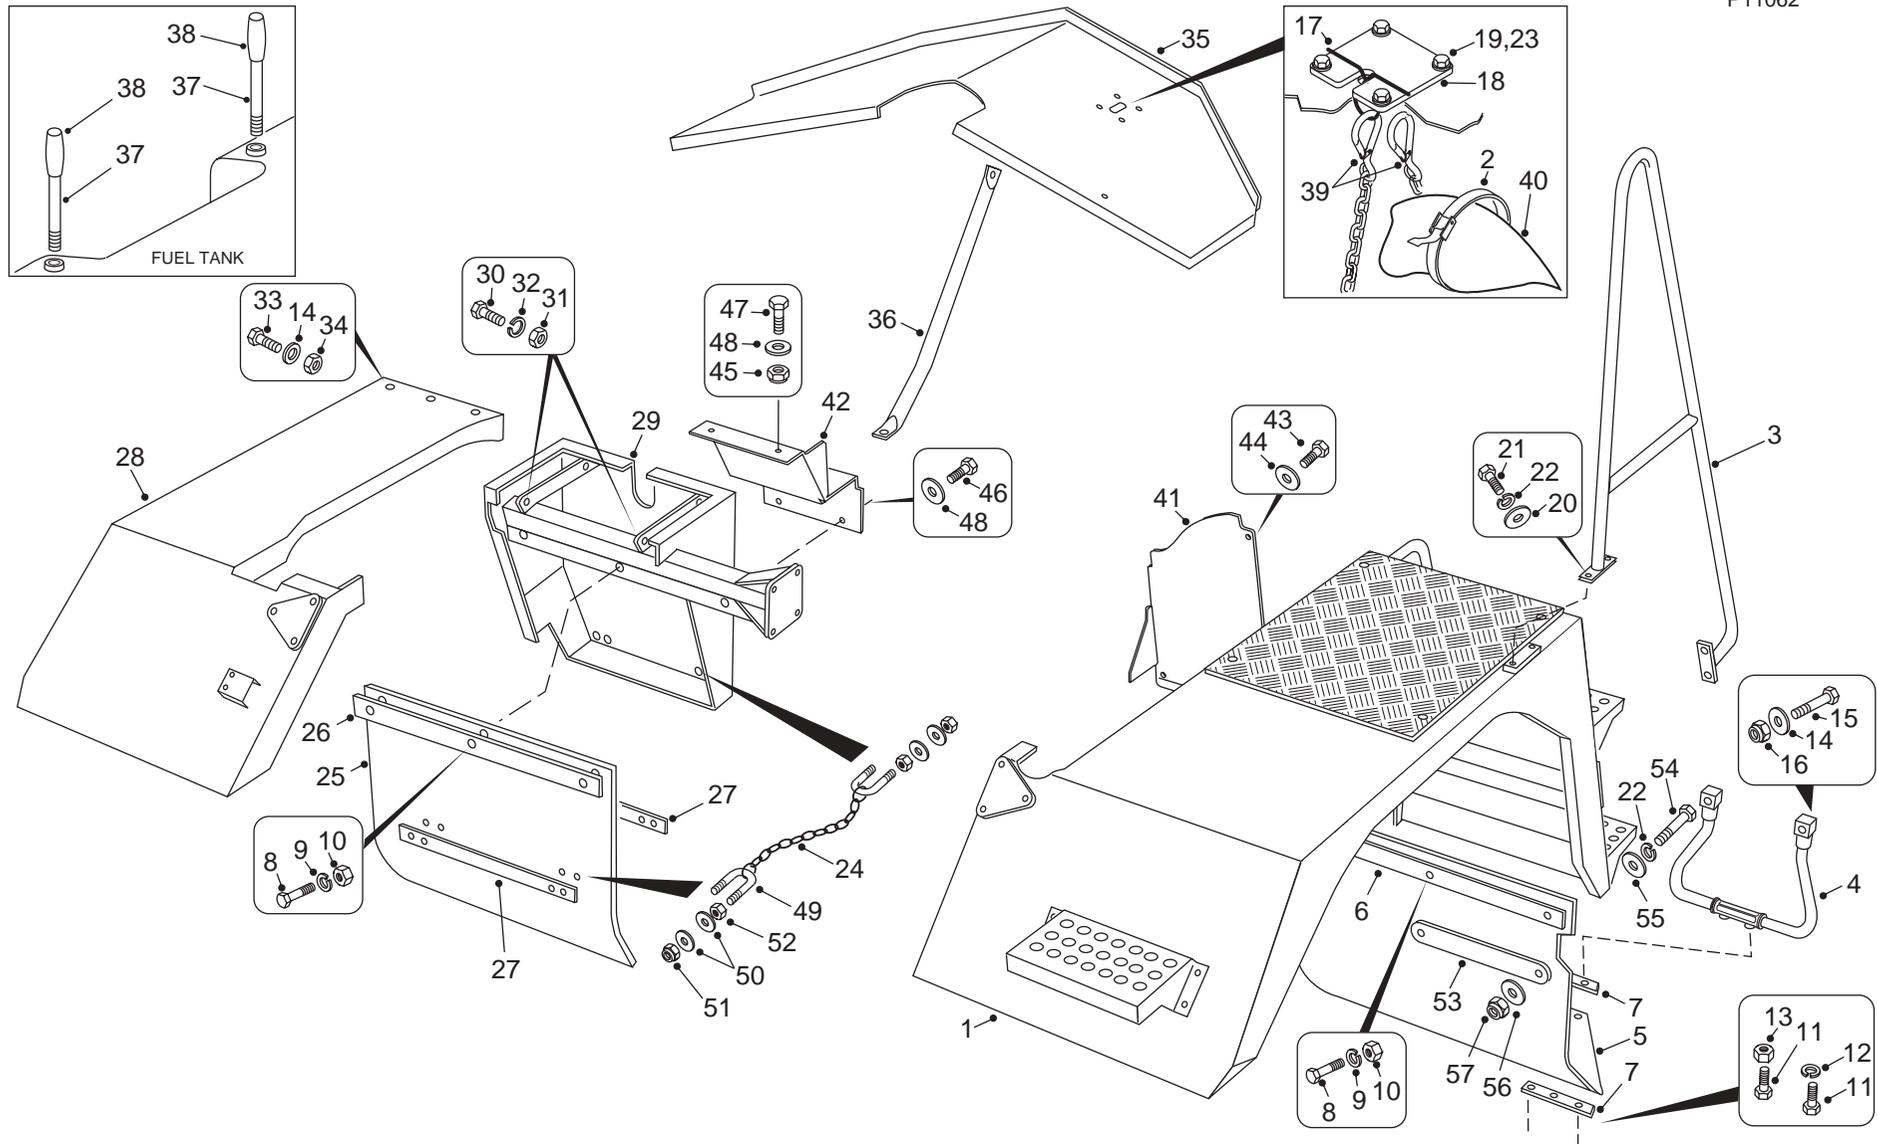

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501011 TO A8501154

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501011 TO A8501154

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO | NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------|-----------------|---------------|-----|-----|-----|----------|------------------|-----------------|---------------|
| 001 | 001 | | 15316871 | LH FENDER PLATFORM | | | 040 | 001 | | 15247425 | SLEEVE-PROTECTOR | | |
| 002 | 001 | | 15305456 | STRAP | | | 041 | 001 | | 15316479 | PANEL-INFILL LH | | |
| 003 | 001 | | 15311946 | HANDRAIL | | | 042 | 001 | | 15316656 | PANEL-INFILL RH | | |
| 004 | 001 | | 15311947 | STEP ASSY-WIRE | | | 043 | 003 | | 00179839 | BOLT | | |
| 005 | 001 | | 15318085 | MUDFLAP FRONT LH | | | 044 | 003 | | 00106263 | WASHER | | |
| 006 | 001 | | 15311949 | PLATE | | | 045 | 002 | | 00274208 | LOCKNUT | | |
| 007 | 002 | | 15303969 | STIFFENER-MUDFLAP | | | 046 | 002 | | 00179837 | BOLT | | |
| 008 | 006 | | 00179820 | BOLT | | | 047 | 002 | | 00179839 | BOLT | | |
| 009 | 006 | | 00103320 | LOCKWASHER | | | 048 | 004 | | 00106263 | WASHER | | |
| 010 | 006 | | 00102634 | NUT | | | 049 | 004 | | 15317030 | U-BOLT | | |
| 011 | 003 | | 06350825 | BOLT | | | 050 | 008 | | 07150815 | WASHER | | |
| 012 | 002 | | 07160830 | LOCKWASHER | | | 051 | 008 | | 06470801 | LOCKNUT | | |
| 013 | 001 | | 06470801 | NUT | | | 052 | 008 | | 06430801 | NUT | | |
| 014 | 008 | | 09267949 | WASHER-HARDENED | | | 053 | 001 | | 15318086 | PLATE-STIFFENER | | |
| 015 | 002 | | 00179892 | BOLT | | | 054 | 002 | | 15240002 | BOLT | | |
| 016 | 002 | | 00274209 | LOCKNUT | | | 055 | 002 | | 07151220 | WASHER | | |
| 017 | 001 | | 15305455 | CLIP | | | 056 | 002 | | 15234758 | WASHER | | |
| 018 | 001 | | 15305454 | PLATE | | | 057 | 002 | | 06471201 | LOCKNUT | | |
| 019 | 004 | | 06350625 | BOLT NSS | | | | | | | | | |
| 020 | 004 | | 09267660 | WASHER | | | | | | | | | |
| 021 | 004 | | 06351230 | BOLT | | | | | | | | | |
| 022 | 006 | | 07161230 | LOCKWASHER | | | | | | | | | |
| 023 | 004 | | 07150620 | WASHER | | | | | | | | | |
| 024 | 002 | | 15317037 | CHAIN | | | | | | | | | |
| 025 | 001 | | 15316707 | MUDFLAP | | | | | | | | | |
| 026 | 001 | | 15315908 | PLATE | | | | | | | | | |
| 027 | 002 | | 15316708 | CLAMP PLATE | | | | | | | | | |
| 028 | 001 | | 15311950 | PLATFORM-RH | A8501011 | A8501020 | | | | | | | |
| 028 | 001 | | 15317173 | PLATFORM-RH | A8501021 | | | | | | | | |
| 029 | 001 | | 15316919 | SIDE STEP ASSY-RH | | | | | | | | | |
| 030 | 004 | | 06442040 | SCREW SET | | | | | | | | | |
| 031 | 004 | | 06472001 | LOCKNUT | | | | | | | | | |
| 032 | 004 | | 07162030 | LOCKWASHER | | | | | | | | | |
| 033 | 003 | | 06351240 | BOLT | | | | | | | | | |
| 034 | 003 | | 06471201 | LOCKNUT | | | | | | | | | |
| 035 | 001 | | 15314429 | SPILL GUARD | | | | | | | | | |
| 036 | 001 | | 15314376 | BRACE-SPILL GUARD | | | | | | | | | |
| 037 | 002 | | 15228110 | TUBE | | | | | | | | | |
| 038 | 002 | | 09366021 | GRIP | | | | | | | | | |
| 039 | 002 | | 15315330 | CHAIN ASSY | | | | | | | | | |

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501155 TO A8501177

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501155 TO A8501177


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO | NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|-----------------------|-----------------|---------------|-----|-----|-----|----------|------------------------|-----------------|---------------|
| 001 | 001 | | 15316871 | LH FENDER PLATFORM | | | 041 | 001 | | 15316479 | PANEL-INFILL LH | | |
| 002 | 001 | | 15305456 | STRAP | | | 042 | 001 | | 15316656 | PANEL-INFILL RH | | |
| 003 | 001 | | 15311946 | HANDRAIL | | | 043 | 003 | | 00179839 | BOLT | | |
| 004 | 002 | | 15311947 | STEP ASSY-WIRE | | | 044 | 003 | | 00106263 | WASHER | | |
| 005 | 002 | | 15318085 | MUDFLAP-FRONT LH | | | 045 | 002 | | 00274208 | LOCKNUT | | |
| 006 | 002 | | 15311949 | PLATE | | | 046 | 002 | | 00179837 | BOLT | | |
| 007 | 004 | | 15303969 | STIFFENER-MUDFLAP | | | 047 | 002 | | 00179839 | BOLT | | |
| 008 | 006 | | 00179820 | BOLT | | | 048 | 004 | | 00106263 | WASHER | | |
| 009 | 006 | | 00103320 | LOCKWASHER | | | 049 | 004 | | 15317030 | U-BOLT | | |
| 010 | 006 | | 00102634 | NUT | | | 050 | 008 | | 07150815 | WASHER | | |
| 011 | 006 | | 06350825 | BOLT | | | 051 | 008 | | 06470801 | NUT | | |
| 012 | 004 | | 07160830 | LOCKWASHER | | | 052 | 008 | | 06430801 | NUT | | |
| 013 | 002 | | 06470801 | NUT | | | 053 | 001 | | 15318086 | PLATE-MUDFLAP CLAMPING | | |
| 014 | 008 | | 09267949 | WASHER-HARDENED | | | 054 | 002 | | 15240002 | BOLT | | |
| 015 | 004 | | 00179892 | BOLT | | | 055 | 002 | | 07151220 | WASHER | | |
| 016 | 004 | | 00274209 | LOCKNUT | | | 056 | 002 | | 15234758 | WASHER | | |
| 017 | 001 | | 15305455 | CLIP | | | 057 | 002 | | 06471201 | LOCKNUT | | |
| 018 | 001 | | 15305454 | PLATE | | | 058 | 001 | | 15301160 | RUBBER TENSIONER | | |
| 019 | 004 | | 06350625 | BOLT | | | 059 | 001 | | 06372070 | BOLT | | |
| 020 | 004 | | 09267660 | WASHER | | | 060 | 001 | | 09270005 | WASHER-HARDENED | | |
| 021 | 004 | | 06351230 | BOLT | | | 061 | 001 | | 06432001 | NUT | | |
| 022 | 002 | | 07161230 | LOCKWASHER | | | | | | | | | |
| 023 | 004 | | 07150620 | WASHER | | | | | | | | | |
| 024 | 002 | | 15317037 | CHAIN-MUDFLAP STAY | | | | | | | | | |
| 025 | 001 | | 15318836 | MUDFLAP-FRONT RH | | | | | | | | | |
| 026 | 001 | | 15318829 | PLATE | | | | | | | | | |
| 027 | 002 | | 15316708 | CLAMP PLATE | | | | | | | | | |
| 028 | 001 | | 15317173 | PLATFORM-RH | | | | | | | | | |
| 029 | 001 | | 15318825 | SIDE STEP ASSY-RH | | | | | | | | | |
| 030 | 004 | | 06442040 | SCREW | | | | | | | | | |
| 031 | 004 | | 06472001 | NUT | | | | | | | | | |
| 032 | 004 | | 07162030 | LOCKWASHER | | | | | | | | | |
| 033 | 003 | | 06351240 | BOLT | | | | | | | | | |
| 034 | 003 | | 06471201 | LOCKNUT | | | | | | | | | |
| 035 | 001 | | 15314429 | SPILL GUARD | | | | | | | | | |
| 036 | 001 | | 15314376 | BRACE-SPILL GUARD | | | | | | | | | |
| 037 | 002 | | 15228110 | TUBE | | | | | | | | | |
| 038 | 002 | | 09366021 | GRIP | | | | | | | | | |
| 039 | 002 | | 15315330 | CHAIN ASSY | | | | | | | | | |
| 040 | 001 | | 15247425 | SLEEVE-HOSE PROTECTOR | | | | | | | | | |

10/04 (ECN 106445)

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501178

DRAWING NO. P11540

P11540

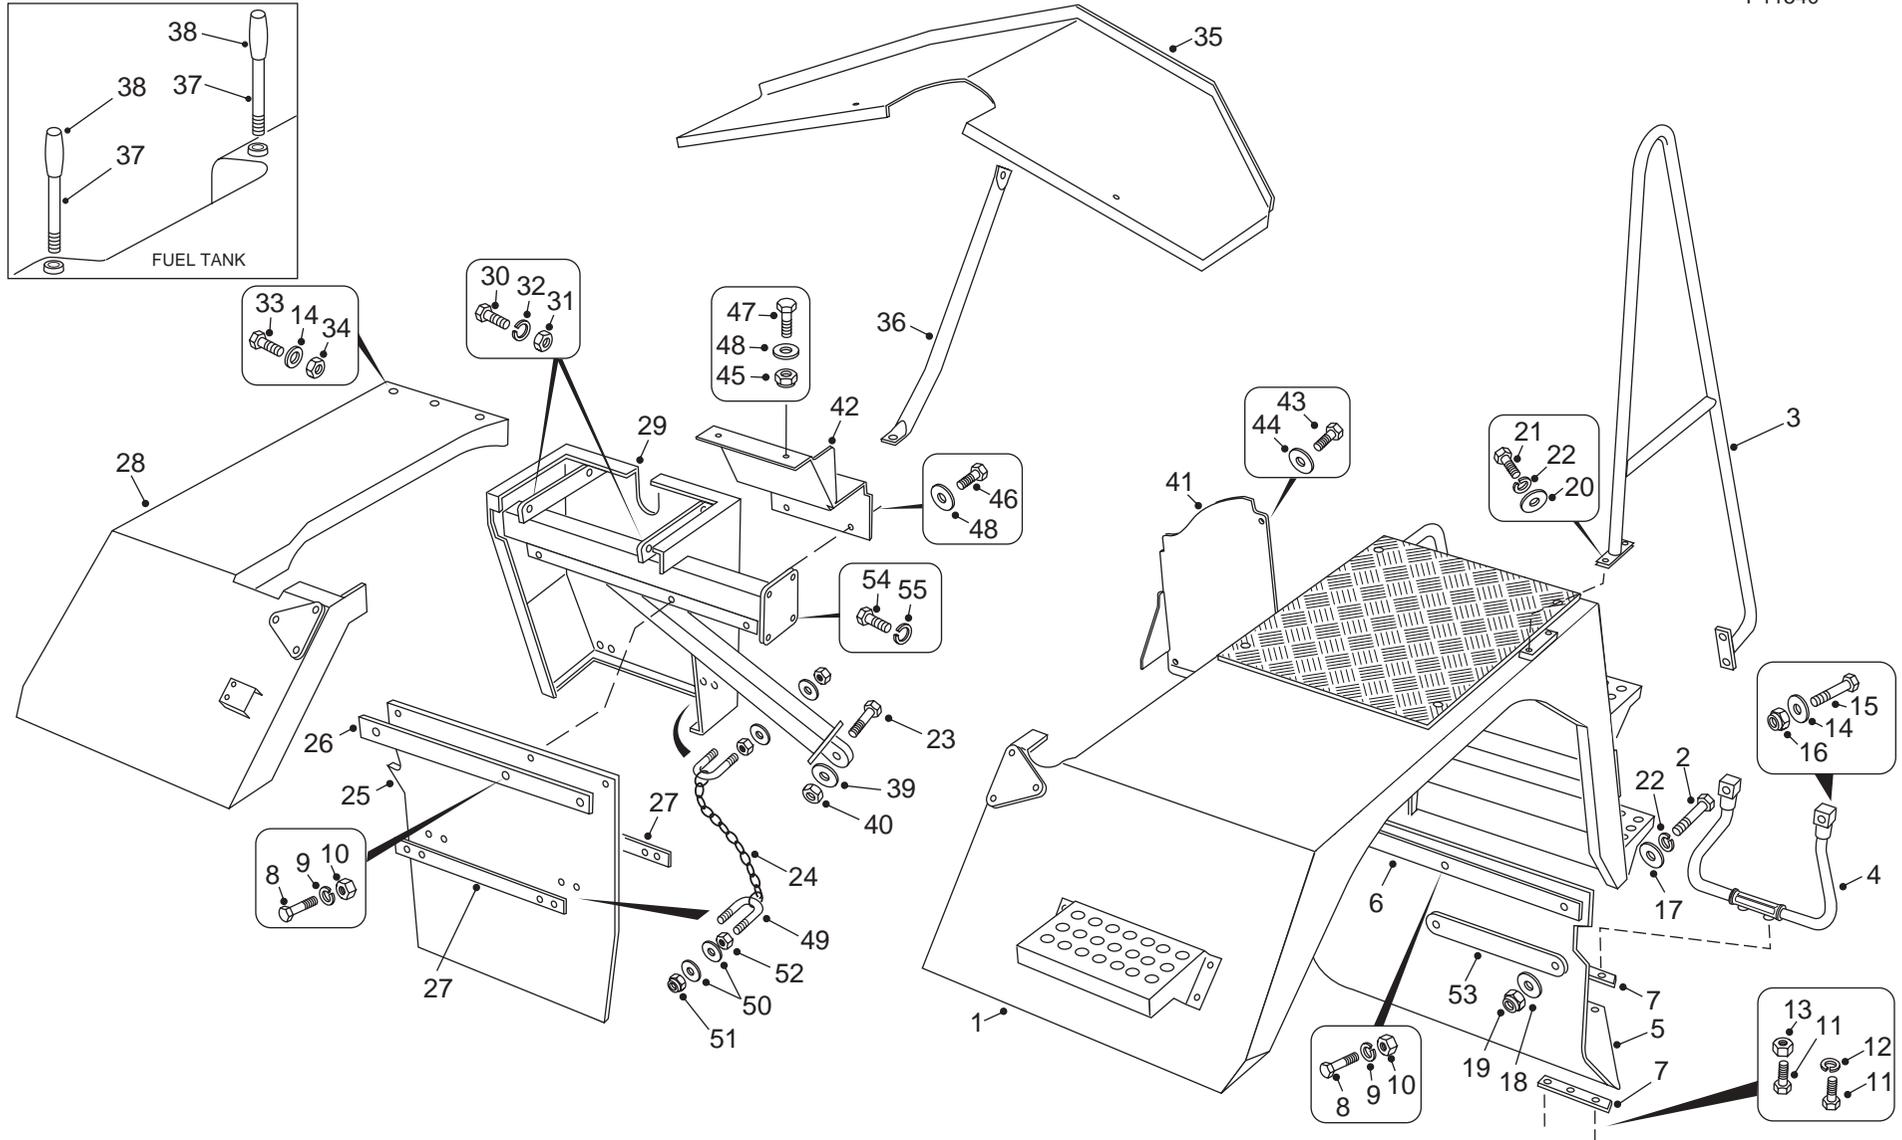

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501178

100-0070-8511 FENDERS AND MOUNTING
FROM SERIAL NO. A8501178


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------|-----------------|---------------|
| 001 | 001 | | 15316871 | LH FENDER PLATFORM | | |
| 002 | 002 | | 15240002 | BOLT | | |
| 003 | 001 | | 15311946 | HANDRAIL | | |
| 004 | 002 | | 15311947 | STEP ASSY-WIRE | | |
| 005 | 002 | | 15318085 | MUDFLAP-FRONT LH | | |
| 006 | 002 | | 15311949 | PLATE | | |
| 007 | 004 | | 15303969 | STIFFENER-MUDFLAP | | |
| 008 | 006 | | 00179820 | BOLT | | |
| 009 | 006 | | 00103320 | LOCKWASHER | | |
| 010 | 006 | | 00102634 | NUT | | |
| 011 | 006 | | 06350825 | BOLT | | |
| 012 | 004 | | 07160830 | LOCKWASHER | | |
| 013 | 002 | | 06470801 | NUT | | |
| 014 | 008 | | 09267949 | WASHER-HARDENED | | |
| 015 | 004 | | 00179892 | BOLT | | |
| 016 | 004 | | 00274209 | LOCKNUT | | |
| 017 | 002 | | 07151220 | WASHER | | |
| 018 | 002 | | 15234758 | WASHER | | |
| 019 | 002 | | 06471201 | LOCKNUT | | |
| 020 | 004 | | 09267660 | WASHER | | |
| 021 | 004 | | 06351230 | BOLT | | |
| 022 | 002 | | 07161230 | LOCKWASHER | | |
| 023 | 001 | | 06372070 | BOLT | | |
| 024 | 002 | | 15317037 | CHAIN-MUDFLAP STAY | | |
| 025 | 001 | | 15318836 | MUDFLAP-FRONT RH | | |
| 026 | 001 | | 15318829 | PLATE | | |
| 027 | 002 | | 15316708 | CLAMP PLATE | | |
| 028 | 001 | | 15317173 | PLATFORM-RH | | |
| 029 | 001 | | 15318825 | SIDE STEP ASSY-RH | | |
| 030 | 004 | | 06442040 | SCREW | | |
| 031 | 004 | | 06472001 | NUT | | |
| 032 | 004 | | 07162030 | LOCKWASHER | | |
| 033 | 003 | | 06351240 | BOLT | | |
| 034 | 003 | | 06471201 | LOCKNUT | | |
| 035 | 001 | | 15319358 | SPILL GUARD | | |
| 036 | 001 | | 15314376 | BRACE-SPILL GUARD | | |
| 037 | 002 | | 15228110 | TUBE | | |
| 038 | 002 | | 09366021 | GRIP | | |
| 039 | 001 | | 09270005 | WASHER-HARDENED | | |
| 040 | 001 | | 06432001 | NUT | | |

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|------------------------|-----------------|---------------|
| 041 | 001 | | 15316479 | PANEL-INFILL LH | | |
| 042 | 001 | | 15316656 | PANEL-INFILL RH | | |
| 043 | 003 | | 00179839 | BOLT | | |
| 044 | 003 | | 00106263 | WASHER | | |
| 045 | 002 | | 00274208 | LOCKNUT | | |
| 046 | 002 | | 00179837 | BOLT | | |
| 047 | 002 | | 00179839 | BOLT | | |
| 048 | 004 | | 00106263 | WASHER | | |
| 049 | 004 | | 15317030 | U-BOLT | | |
| 050 | 008 | | 07150815 | WASHER | | |
| 051 | 008 | | 06470801 | NUT | | |
| 052 | 008 | | 06430801 | NUT | | |
| 053 | 001 | | 15318086 | PLATE-MUDFLAP CLAMPING | | |

100-0135-8511 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8501011

DRAWING NO. P11039

P11039

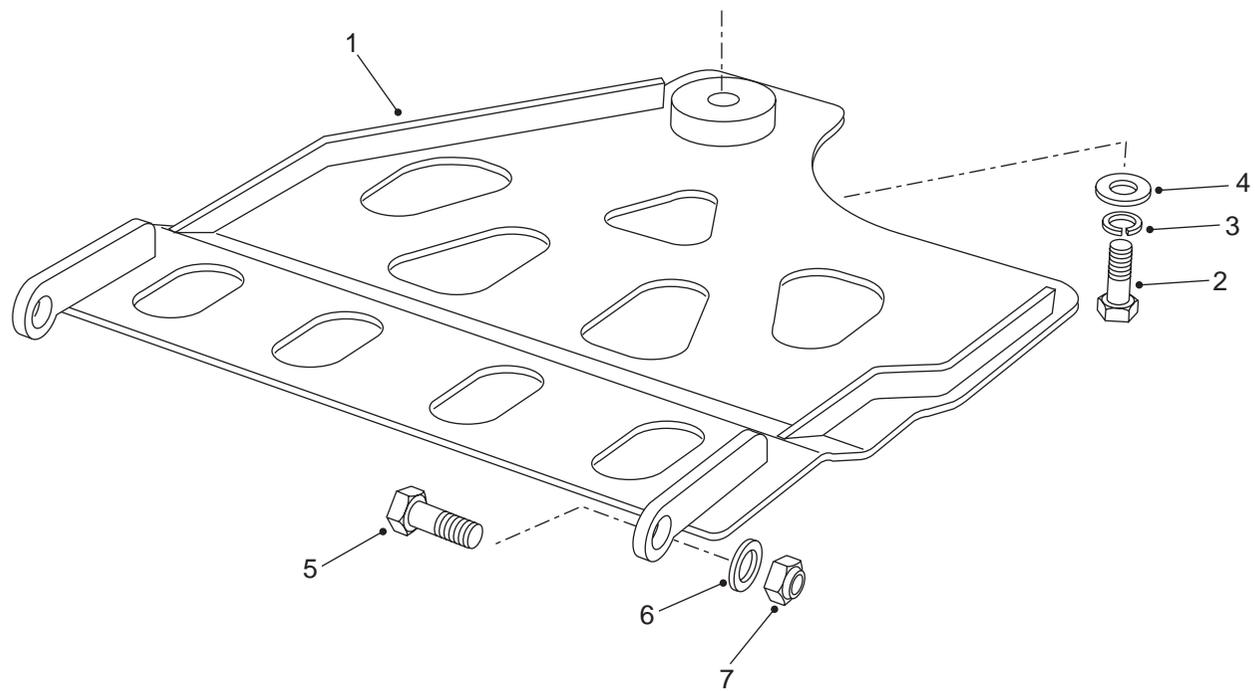

100-0135-8511 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8501011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|------------------|-----------------|---------------|
| 001 | 001 | | 15313507 | GUARD-TRANS SUMP | | |
| 002 | 001 | | 06351655 | BOLT | | |
| 003 | 001 | | 07161630 | LOCKWASHER | | |
| 004 | 001 | | 09191596 | WASHER | | |
| 005 | 002 | | 06351670 | BOLT NSS | | |
| 006 | 002 | | 07151630 | WASHER | | |
| 007 | 002 | | 06471601 | LOCKNUT | | |

THIS PAGE IS INTENTIONALLY LEFT BLANK

CUMMINS ENGINE

THIS UNIT IS EQUIPPED WITH A CUMMINS DIESEL ENGINE.

TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.


A SEPARATE CUMMINS ENGINE PARTS BOOK IS SUPPLIED WITH NEW UNITS FOR ENGINE PARTS COVERAGE.

ANY ADDITIONAL REQUESTS FOR THIS CUMMINS ENGINE PARTS BOOK OR ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

110-0030-8511 ENGINE AND MOUNTING
FROM SERIAL NO. A8501011

DRAWING NO. P11261A


P11261

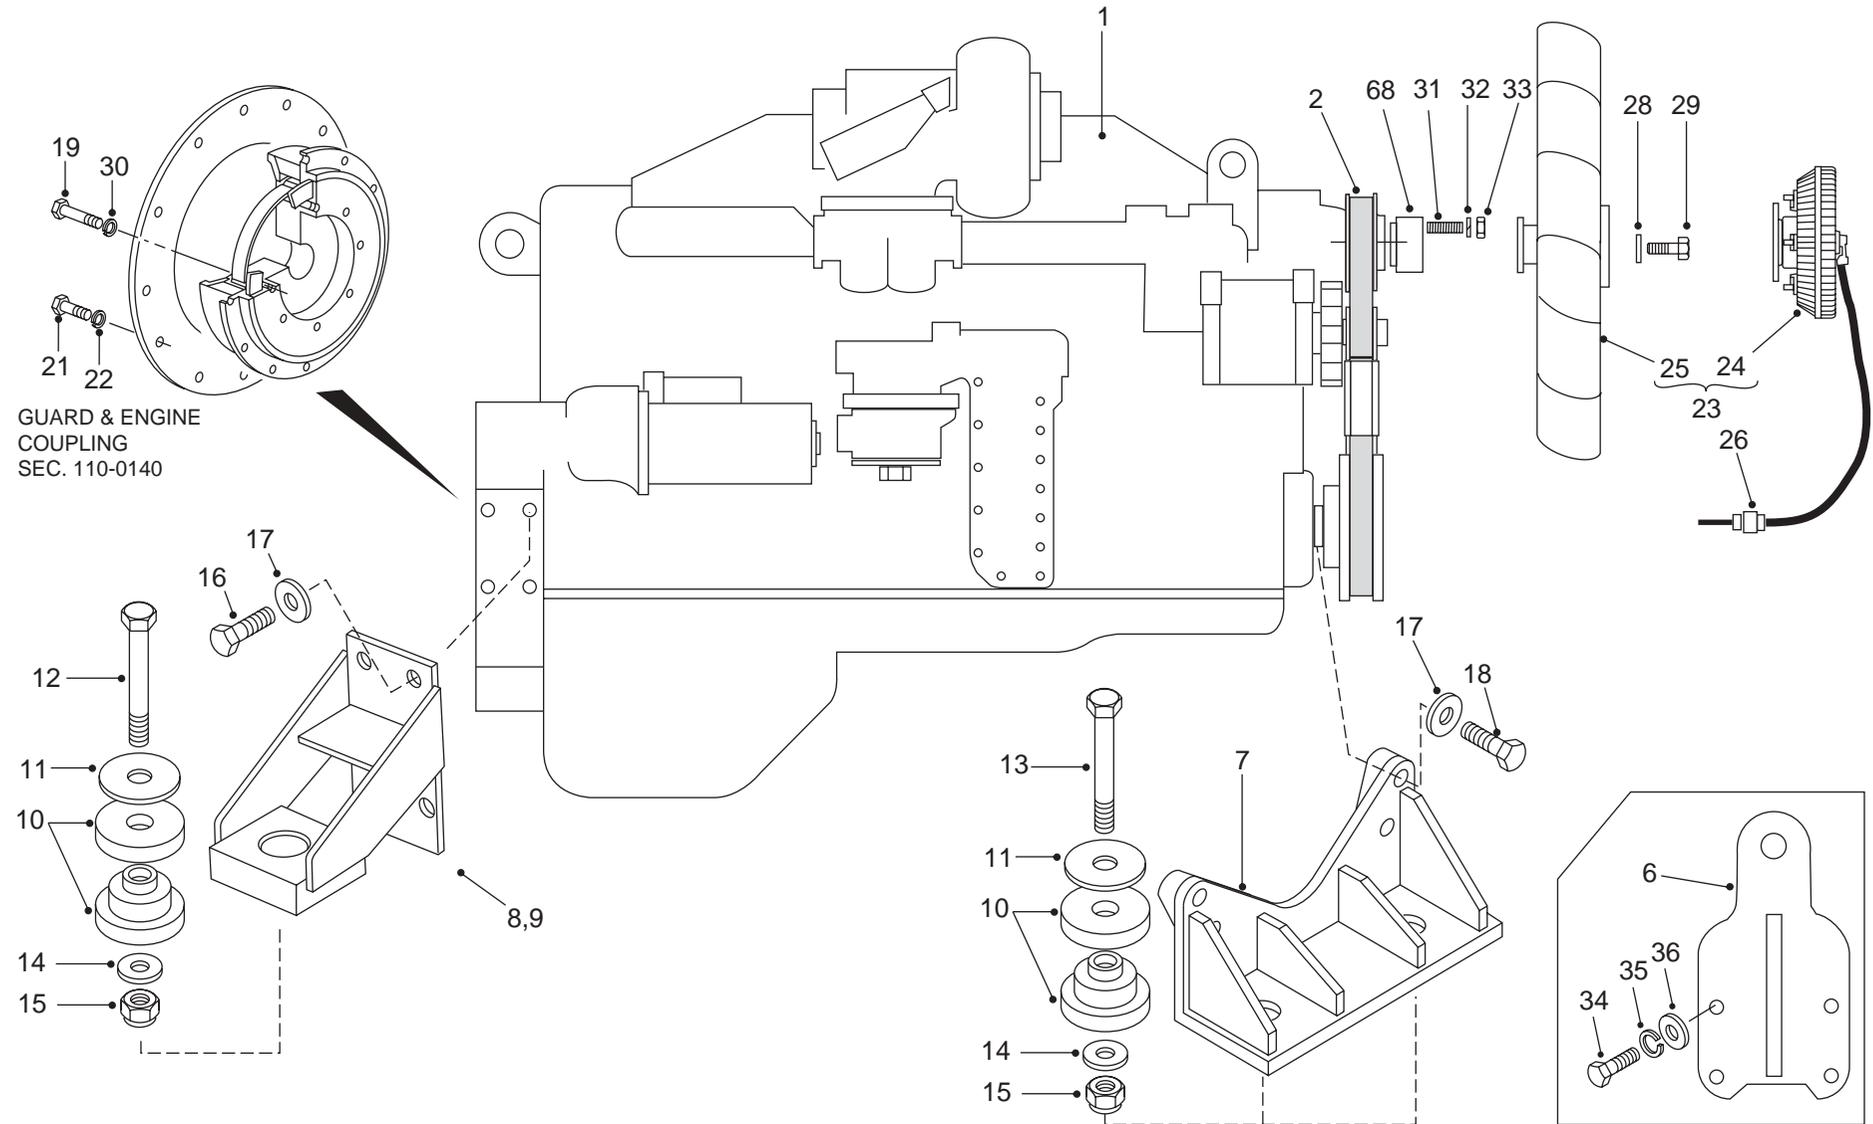

110-0030-8511 ENGINE AND MOUNTING
FROM SERIAL NO. A8501011

DRAWING NO. P11261B

P11261

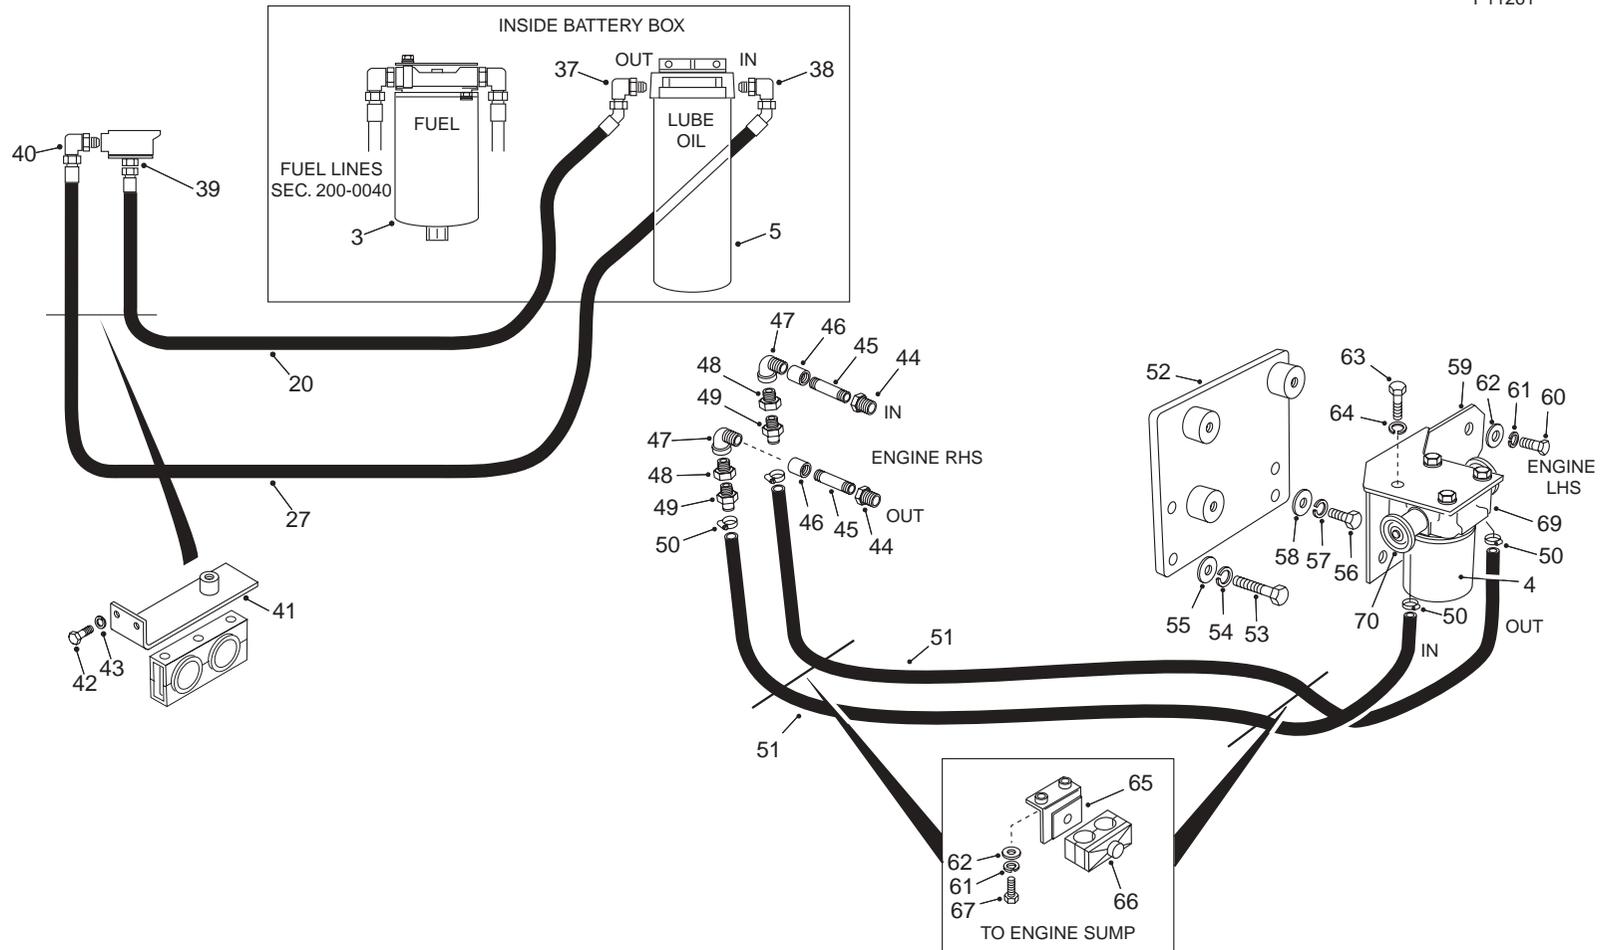

Product: 2006 TEREX TA27 Articulated Truck Workshop Parts Manual[PN15500741]

R4 07/04 (ECN 105952, ECN 105970, SER CORR, ECN 106187, ECN 106776)
[Full Download: https://www.arenairmanual.com/downloads/2006-terex-ta27-articulated-truck-workshop-parts-manualpn15500741/](https://www.arenairmanual.com/downloads/2006-terex-ta27-articulated-truck-workshop-parts-manualpn15500741/)

| 110-0030-8511 ENGINE AND MOUNTING FROM SERIAL NO. A8501011 | | | | | | 110-0030-8511 ENGINE AND MOUNTING FROM SERIAL NO. A8501011 | | | | | | | |
|---|-----|-----|----------|--------------------------|-----------------|---|-----|-----|-----|----------|----------------------|-----------------|---------------|
| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO | NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
| 001 | 001 | | 15316687 | ENGINE-QSL9 | | | 040 | 001 | | 15225224 | ELBOW | | |
| 002 | 001 | | 15500649 | .BELT-DRIVE FAN/ALT | | | 041 | 001 | | 15316963 | BRACKET ASSY | | |
| 003 | 001 | | 15500391 | .FILTER-FUEL | | | 042 | 002 | | 06351025 | BOLT | | |
| 004 | 001 | | 15317047 | .ELEMENT-WATER FILTER | | | 043 | 002 | | 07161030 | LOCKWASHER | | |
| 005 | 001 | | 15500647 | .ELEMENT-OIL FILTER | | | 044 | 002 | | 00144218 | BUSHING | | |
| 006 | 001 | | 15315432 | BRACKET-RAD MTG | | | 045 | 002 | | 00219326 | NIPPLE | | |
| 007 | 001 | | 15313296 | BRACKET-ENG MTG FRONT | A8501011 | A8501100 | 046 | 002 | | 00187396 | NIPPLE COUPLING | | |
| 007 | 001 | | 15318521 | BRACKET-ENG MTG FRONT | A8501101 | | 047 | 002 | | 00454104 | ELBOW | | |
| 008 | 001 | | 15315647 | BRACKET-ENGINE | | | 048 | 002 | | 00444029 | BUSHING | | |
| 009 | 001 | | 15315653 | BRACKET-ENGINE | | | 049 | 002 | | 07551780 | CONNECTOR | | |
| 010 | 004 | | 15254931 | ISOLATOR-ENG MOUNT | | | 050 | 004 | | 09379664 | CLAMP | | |
| 011 | 004 | | 15235607 | WASHER-SNUBBING | | | 051 | ASR | | 07551824 | HOSE | | |
| 012 | 002 | | 00271668 | BOLT | | | 052 | 001 | | 15315452 | MOUNTING BRACKET | | |
| 013 | 002 | | 00271668 | BOLT | | | 053 | 002 | | 06351220 | BOLT | | |
| 014 | 004 | | 00106269 | WASHER NSS | | | 054 | 002 | | 07161230 | WASHERLOC | | |
| 015 | 004 | | 00274098 | LOCKNUT | | | 055 | 002 | | 07151220 | WASHER | | |
| 016 | 008 | | 06621235 | BOLT | | | 056 | 002 | | 06351020 | BOLT | | |
| 017 | 012 | | 09267660 | WASHER | | | 057 | 002 | | 07161030 | WASHER SPRING M10 | | |
| 018 | 004 | | 15313327 | BOLT | | | 058 | 002 | | 07151020 | WASHER | | |
| 019 | 008 | | 00179841 | BOLT | | | 059 | 001 | | 15500819 | BRACKET-FILTER MTG | | |
| 020 | 001 | | 15315699 | HOSE ASSY | | | 060 | 003 | | 06350820 | BOLT | | |
| 021 | 011 | | 06351025 | BOLT NSS(SUPPLY KIT QTY) | | | 061 | 007 | | 07160830 | WASHER | | |
| 022 | 012 | | 07161030 | LOCKWASHER | | | 062 | 007 | | 07150815 | WASHER | | |
| 023 | 001 | | 15316839 | FAN CLUTCH ASSEMBLY | | | 063 | 004 | | 00179841 | BOLT NSS | | |
| 024 | 001 | | 15316664 | .TA25 FAN CLUTCH | | | 064 | 004 | | 00108580 | LOCKWASHER | | |
| 025 | 001 | | 15312178 | .FAN-28" | | | 065 | 002 | | 15315705 | PLATE-SUPPORT | | |
| 026 | 001 | | 15501101 | .CONNECTOR KIT | | | 066 | 002 | | 15253870 | CLAMP-PIPE 17.2MM DO | | |
| 027 | 001 | | 15315698 | HOSE ASSY | | | 067 | 004 | | 06350825 | BOLT | | |
| 028 | 008 | | 07151020 | WASHER | | | 068 | 001 | | 15314770 | FAN SPACER-(25MM) | | |
| 029 | 004 | | 06351035 | BOLT | | | 069 | 001 | | 15500820 | FILTER HEAD | | |
| 030 | 008 | | 00108580 | LOCKWASHER | | | 070 | 002 | | 15318256 | VALVE SHUT-OFF | | |
| 031 | 004 | | 15314654 | STUD | | | | | | | | | |
| 032 | 004 | | 07161030 | LOCKWASHER | | | | | | | | | |
| 033 | 004 | | 15314711 | NUT | | | | | | | | | |
| 034 | 004 | | 06351030 | BOLT | | | | | | | | | |
| 035 | 004 | | 07161030 | LOCKWASHER | | | | | | | | | |
| 036 | 004 | | 07151020 | WASHER | | | | | | | | | |
| 037 | 001 | | 15244830 | ELBOW | | | | | | | | | |
| 038 | 001 | | 15258382 | ELBOW | | | | | | | | | |
| 039 | 001 | | 09183228 | CONNECTOR | | | | | | | | | |

Sample of manual Download All 490 pages at:

<https://www.arenairmanual.com/downloads/2006-terex-ta27-articulated-truck-workshop-parts-manualpn15500741/>