

Product: 2007 TEREX TA27 G7 (IFS) Articulated Truck Workshop Parts Manual[PN15503534]

Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-ifs-articulated-truck-workshop-parts-manualpn15503534/>

fs-articulated-truck-workshop-parts-manualpn15503534/



TEREX

Publication Part Number: **15503534**

PARTS BOOK

CLICK HERE FOR
TRACTOR
TABLE OF CONTENTS


CLICK HERE FOR
TRACTOR OPTIONAL
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER OPTIONAL
TABLE OF CONTENTS



P11065

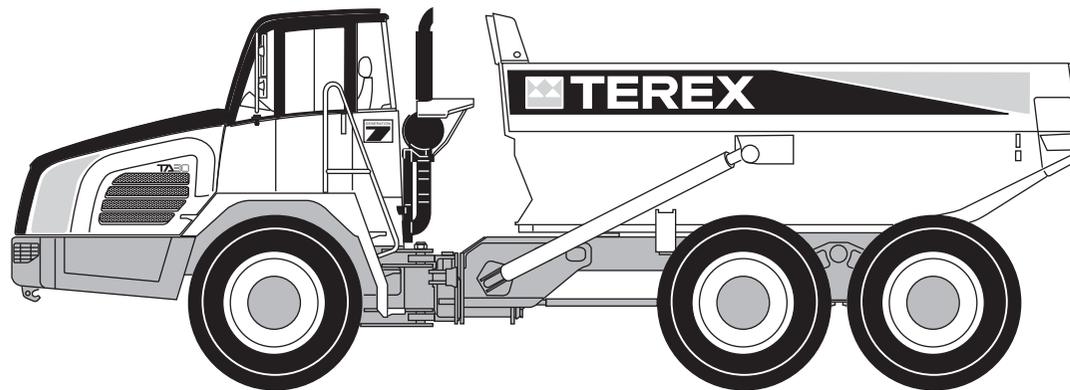

TA27 G7 (IFS) Articulated Truck

(Cum QSM11 T3-335 HP Engine, ZF 6WG-260 Trans & NAF Axles)

Serial Nos. A8921011 and above

Date: June 2007

Revised: 22nd June 2010

Sample of manual. Download All 452 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-ifs-articulated-truck-workshop-parts-manualpn15503534/>

Product: 2007 TEREX TA27 G7 (IFS) Articulated Truck Workshop Parts Manual[PN15503534]

Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-ifs-articulated-truck-workshop-parts-manualpn15503534/>

[fs-articulated-truck-workshop-parts-manualpn15503534/](https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-ifs-articulated-truck-workshop-parts-manualpn15503534/)

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 452 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-ifs-articulated-truck-workshop-parts-manualpn15503534/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
2 9058512 . Shaft
3 9024169 . Ring
4 9058132 . Control Assy.
5 9058135 . . Spring
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

Amps	Amperes	Hsg	Housing	N.I	Not Illustrated
As R	As Required	I.D	Inside Diameter	N.L.A	No Longer Available
Assy	Assembly	L.H	Left Hand	N.S.S	Not Sold Separately
Brkt	Bracket	L.W	Lockwasher	O.D	Outside Diameter
Cad-Pltd	Cadium Plated	Lg	Long	Pr	Pair
Comm	Commencement of production	Lkg	Linkage	P.T.O	Power-Take-Off
E.S.N	Elastic Stop Nut	Mtg	Mounting	R.H	Right Hand
Ftgs	Fittings	N.C	Note Code	Std	Standard



Articulated Truck



TRACTOR SECTIONS

	CHASSIS	100
	ENGINE	110
	TRANSMISSION	120
	DRIVELINE	130
	FRONT AXLE	140
	BRAKE PARTS	165
	SUSPENSION SYSTEM	180
	ELECTRICAL SYSTEM	190
	FUEL SYSTEM	200
	COOLING SYSTEM	210

	MAIN HYDRAULIC VALVE	215
	STEERING SYSTEM	220
	BODY HOIST SYSTEM	230
	BRAKING SYSTEM	250
	CAB	260
	DECALS	290
	MISCELLANEOUS	300
		
		
		

TABLE OF CONTENTS FOR MODEL TA27 T3 TRACTOR

FROM SERIAL NO A8921011

REVISED 06/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 100</u>	<u>CHASSIS</u>		
100-0010-8931	CHASSIS		
100-0030-8931	SOUND INSULATION		R1 11/08
100-0040-8931	HOOD AND MOUNTING		R2 06/08
100-0070-8931	FENDERS AND MOUNTING	A8921011 TO A892 TBA	
100-0070-8931	FENDERS AND MOUNTING	A892 TBA	08/08
100-0135-8931	ROCK AND SUMP GUARDS		R1 06/08
<u>SECTION 110</u>	<u>ENGINE</u>		
110-0020-8931	ENGINE ORDERING INSTRUCTIONS		
110-0030-8931	ENGINE AND MOUNTING		R1 11/08
110-0050-8931	AIR CLEANER		
110-0060-8931	AIR CLEANER PIPES AND HOSES		R1 06/07
110-0070-8931	EXHAUST AND MOUNTING		R2 03/09
<u>SECTION 120</u>	<u>TRANSMISSION</u>		
120-0010-8931	TRANSMISSION MOUNTING		R1 10/07
120-0020-8931	TRANSMISSION BREAKDOWN		
120-0070-8931	SHIFT CONTROL	A8921011 TO A8921012	
120-0070-8931	SHIFT CONTROL	A8921013	08/08
120-0100-8931	FILTER		
120-0110-8931	OIL LINES-TRANSMISSION		R1 06/07
120-0220-8931	OIL PUMP		
120-0390-8931	TORQUE CONVERTER		
120-0400-8931	LUBRICATION PIPES		
120-0410-8931	INDUCTIVE TRANSMITTER		
120-0430-8931	ELECTRIC SHIFT CONTROL VALVE		
120-0440-8931	GEARSHIFT		
120-0450-8931	GEARBOX HOUSING		
120-0460-8931	CLUTCH ASSEMBLY KV+K1		
120-0470-8931	CLUTCH ASSEMBLY KR+K2		
120-0480-8931	CLUTCH ASSEMBLY K3+K4		
120-0500-8931	PTO MAIN HYDRAULIC PUMP		
120-0515-8931	EMERGENCY STEERING PUMP		
120-0520-8931	INPUT-DRIVE ASSEMBLY		
120-0530-8931	LAYSHAFT GEARING		
120-0540-8931	DIFFERENTIAL		R1 12/09
120-0625-8931	TEMPERATURE SENSOR		
120-0900-8931	LOOSE PARTS-TRANSMISSION		

TABLE OF CONTENTS FOR MODEL TA27 T3 TRACTOR

FROM SERIAL NO A8921011

REVISED 06/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 210</u>			
<u>COOLING SYSTEM</u>			
210-0010-8931	RADIATOR ASSEMBLY	A8921011 TO A8921012	
210-0010-8931	RADIATOR ASSEMBLY	A8921013	08/07
210-0020-8931	RADIATOR MOUNTING		
210-0030-8931	RADIATOR PIPING		R1 09/09
210-0035-8931	CHARGE AIR COOLER & PIPING		R1 08/08
210-0040-8931	RADIATOR HEADER TANK & HOSES		R2 09/09
210-0060-8931	OIL COOLER AND PIPING-TRANS		R1 06/07
210-0061-8931	TRANS OIL COOLER MOUNTING		
210-0065-8931	OIL COOLER-TRANSMISSION		R3 09/09
<u>SECTION 215</u>			
<u>MAIN HYDRAULIC VALVE</u>			
215-0050-8931	MAIN HYDRAULIC VALVE ASSEMBLY		
<u>SECTION 220</u>			
<u>STEERING SYSTEM</u>			
220-0010-8931	STEERING LINES	A8921011 TO A8921012	R2 03/09
220-0010-8931	STEERING LINES	A8921013	R1 09/09
220-0090-8931	STEERING VALVE		
220-0120-8931	STEERING CYLINDER		
220-0230-8931	STEERING COLUMN MOUNTING		
<u>SECTION 230</u>			
<u>BODY HOIST SYSTEM</u>			
230-0020-8931	LINES AND FITTINGS-BODY HOIST		
230-0040-8931	TANK AND MOUNTING-BODY HOIST		R1 08/08
230-0050-8931	PUMP-BODY HOIST		
230-0081-8931	JOYSTICK-BODY CONTROL		
<u>SECTION 250</u>			
<u>BRAKING SYSTEM</u>			
250-0020-8931	BRAKE LINES-HYDRAULIC	A8921011 TO A8921012	R2 02/09
250-0020-8931	BRAKE LINES-HYDRAULIC	A8921013	03/09
250-0060-8931	BRAKE ACCUMULATOR		
250-0070-8931	TREADLE VALVE	A8921011 TO A8921012	R2 01/08
250-0070-8931	TREADLE VALVE	A8921013	08/08

TABLE OF CONTENTS FOR MODEL TA27 T3 TRACTOR

FROM SERIAL NO A8921011


REVISED 06/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 260</u>	<u>CAB</u>		
260-0010-8901	CAB ASSEMBLY		R2 08/08
260-0015-8901	CAB MOUNTING	A8921011 TO A8921012	R1 08/07
260-0015-8901	CAB MOUNTING	A8921013	R1 04/08
260-0018-8901	CAB TILT MECHANISM		R1 01/09
260-0030-8901	CAB DOOR-LEFT HAND		R1 09/07
260-0080-8901	SWITCHES AND INSTRUMENTS		R4 04/09
260-0090-8901	SEAT-DRIVER	A8921011 TO A8921012	R1 11/08
260-0090-8901	SEAT-DRIVER	A8921013	R1 04/09
260-0110-8901	SEAT-INSTRUCTOR		R1 06/07
260-0130-8901	AIR CONDITIONER/HEATER		
260-0140-8901	HEATER LINES AND WIRING		R1 04/09
260-0145-8901	AIR CONDITIONER LINES	A8921011 TO A8921012	
260-0145-8901	AIR CONDITIONER LINES	A8921013	08/07
260-0190-8901	WINDSCREEN WASHER		
<u>SECTION 290</u>	<u>DECALS</u>		
290-0010-8901	DECALS-ENGLISH (ISO)		R1 06/08
290-0011-8901	DECALS-ENGLISH (ANSI)		R2 06/09
290-0100-8901	WALKWAY SURFACES (ANTI-SLIP)		06/07
<u>SECTION 300</u>	<u>MISCELLANEOUS</u>		
300-0040-8901	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-8901	POLYPROPELENE CLAMPS		
300-0200-8901	FILTERS AND ELEMENT KITS		11/08

100-0010-8931 CHASSIS
FROM SERIAL NO. A8921011

DRAWING NO. P11940

P11940

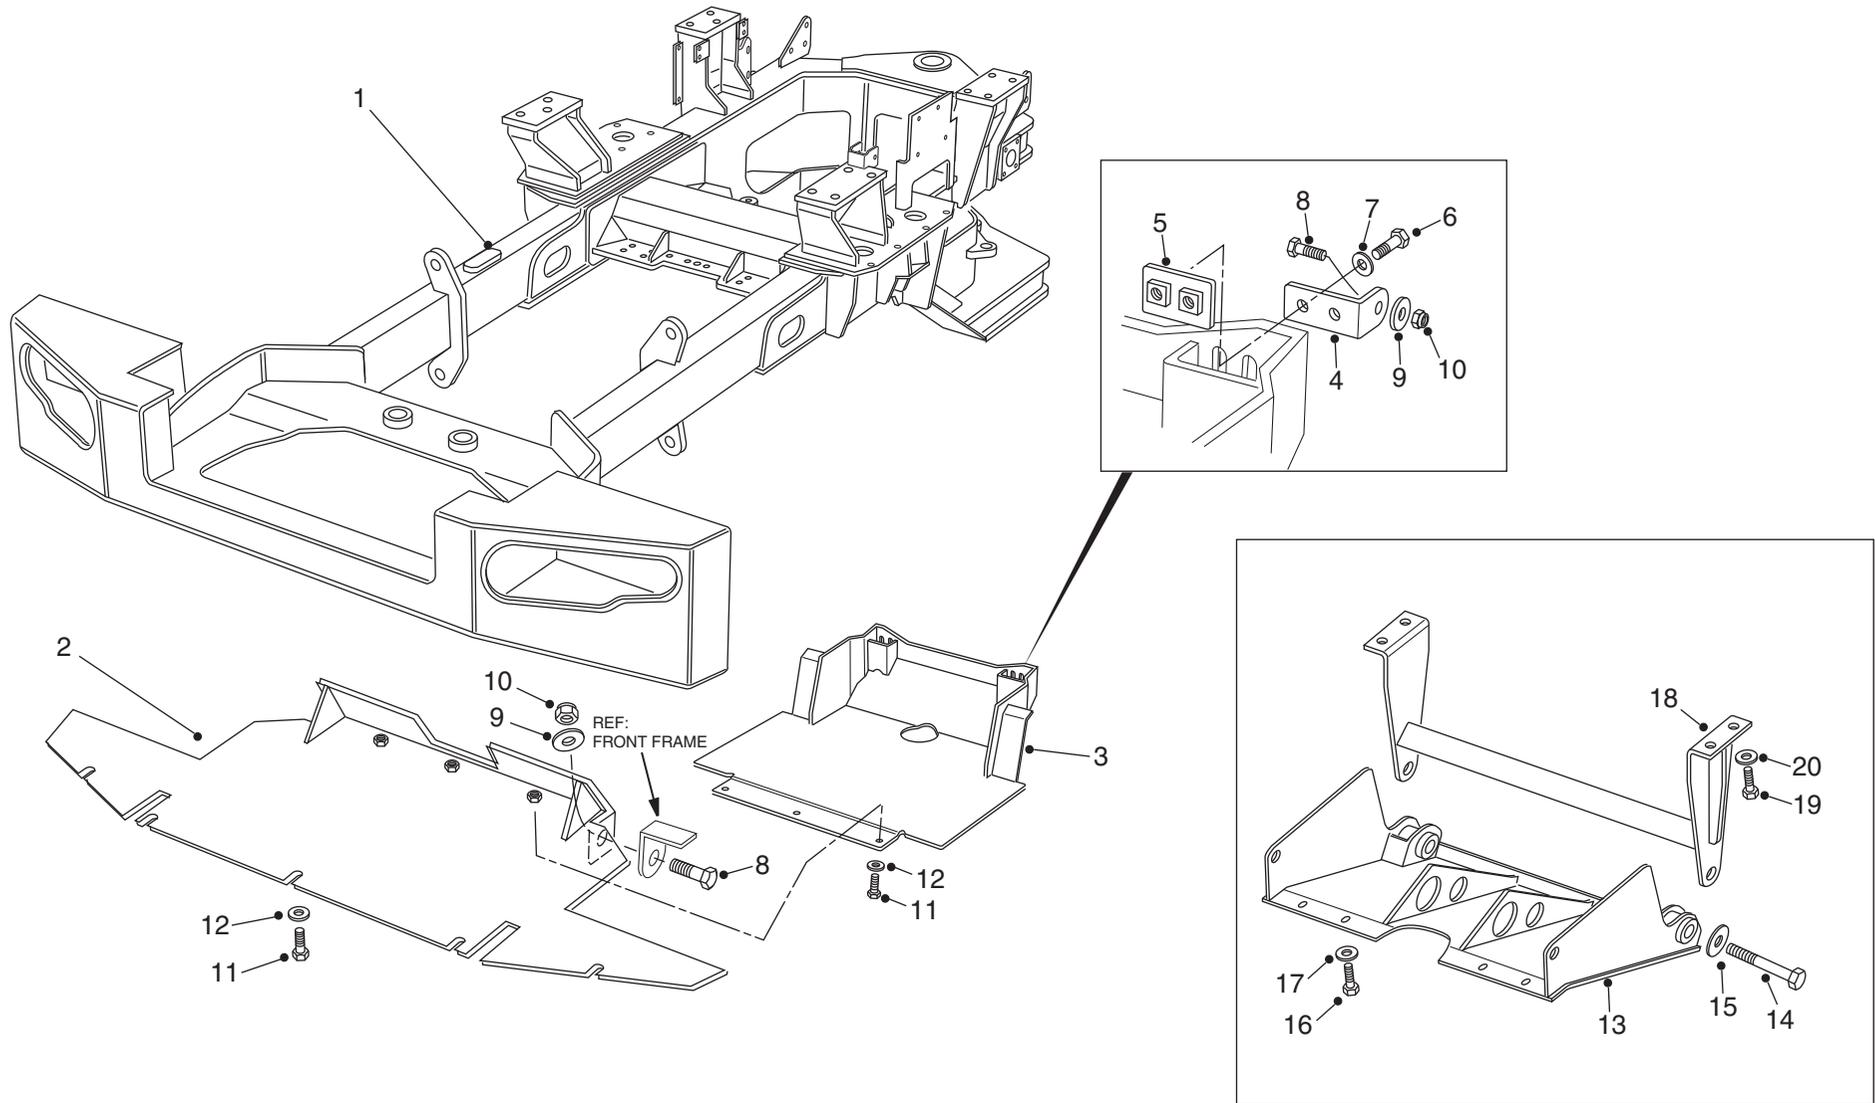

100-0010-8931 CHASSIS
 FROM SERIAL NO. A8921011



NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15332919	FRAME ASSY-COMLETE		
002	001		15314756	GUARD ASSY-CHASSIS		
003	001		15333308	GUARD ASSY-SUMP		
004	002		15314724	BRACKET-HINGE		
005	002		15314726	CLAMP PLATE		
006	004		06351655	BOLT		
007	004		09191596	WASHER		
008	004		06351670	BOLT		
009	004		07151630	WASHER		
010	004		06471601	LOCKNUT		
011	008		06351235	BOLT		
012	008		09217321	WASHER		
013	001		15335178	SUMP & AXLE GUARD		
014	002		00271710	BOLT		
015	002		09019631	WASHER		
016	006		06351230	BOLT		
017	006		15237139	WASHER		
018	001		15336197	BRACKET		
019	004		15245024	BOLT		
020	004		09191596	WASHER		

R1 11/08 (ECN 109535, ECN 109556)

100-0030-8931 SOUND INSULATION
FROM SERIAL NO. A8921011

DRAWING NO. P12179

P12179

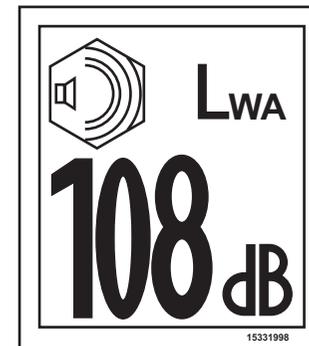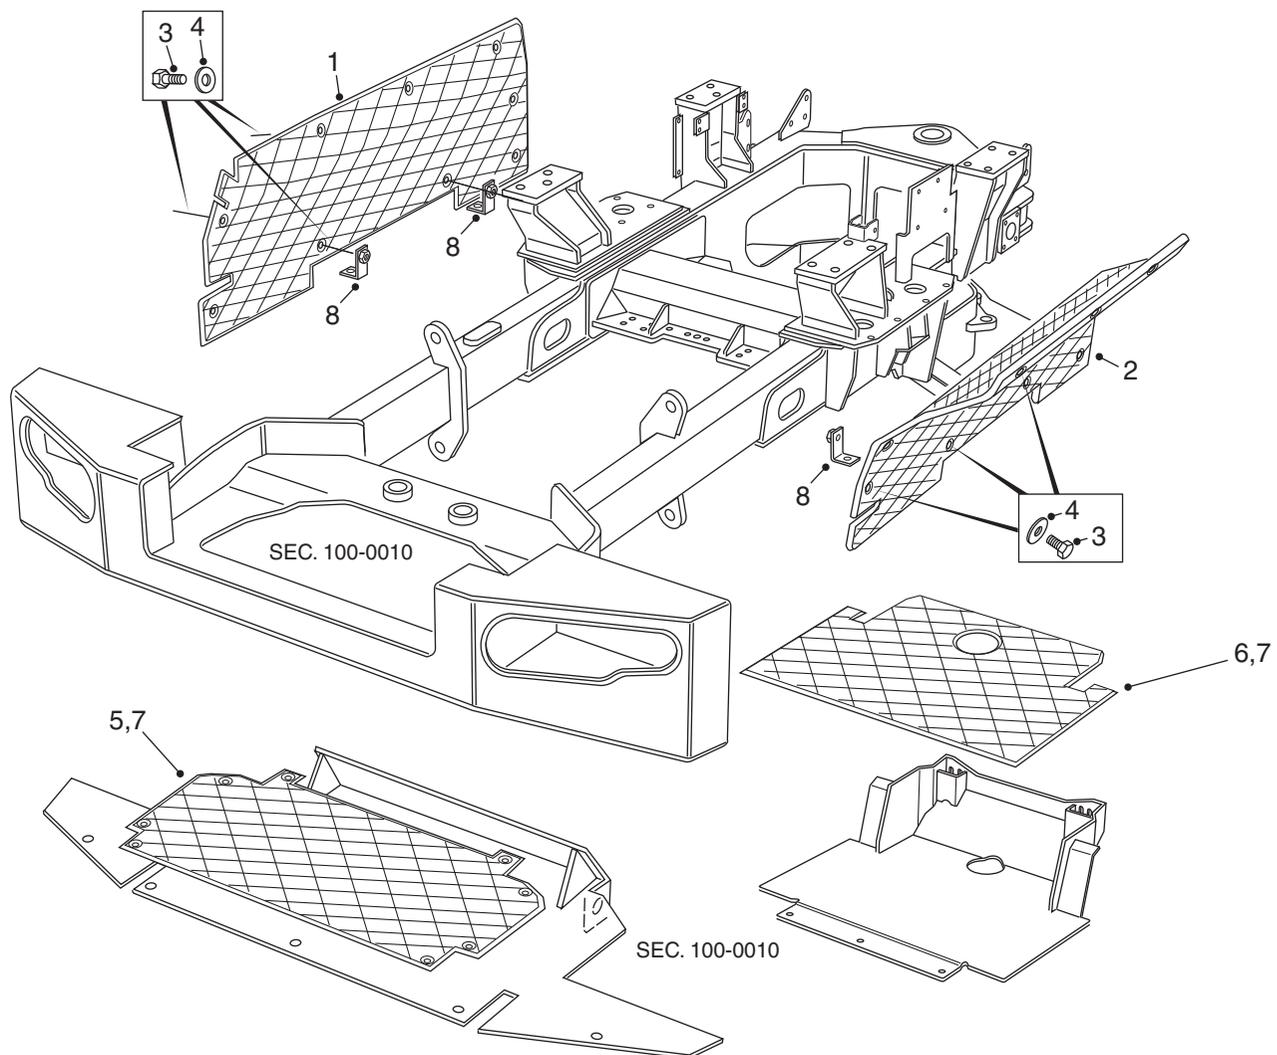

9

100-0030-8931 SOUND INSULATION
 FROM SERIAL NO. A8921011




NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15335743	QUILT-WHEEL ARCH-RH		
A	002	001	15335745	QUILT-WHEEL ARCH-LH		
	003	019	06351230	BOLT		
	004	019	15234758	WASHER		
	005	001	15316801	QUILT-SUMP GUARD FT	A8921011	A8921012
	005	001	15339901	QUILT-SUMP GUARD FT	A8921013	
	006	001	15317825	QUILT-SUMP GUARD REAR	A8921011	A8921012
	006	001	15339909	QUILT-SUMP GUARD REAR	A8921013	
	007	ASR	09079599	ADHESIVE		
	008	004	15335956	BRACKET		
	009	001	15331998	DECAL-108db		

NOTE:A FOR UNITS FITTED WITH HI-INFLATION (WIDE) TYRES,
 REFER TO OPTIONAL SECTION 100-0030

R2 06/08 (ECN 108610, ECN 109321)

100-0040-8931 HOOD AND MOUNTING
FROM SERIAL NO. A8921011

DRAWING NO. P11667

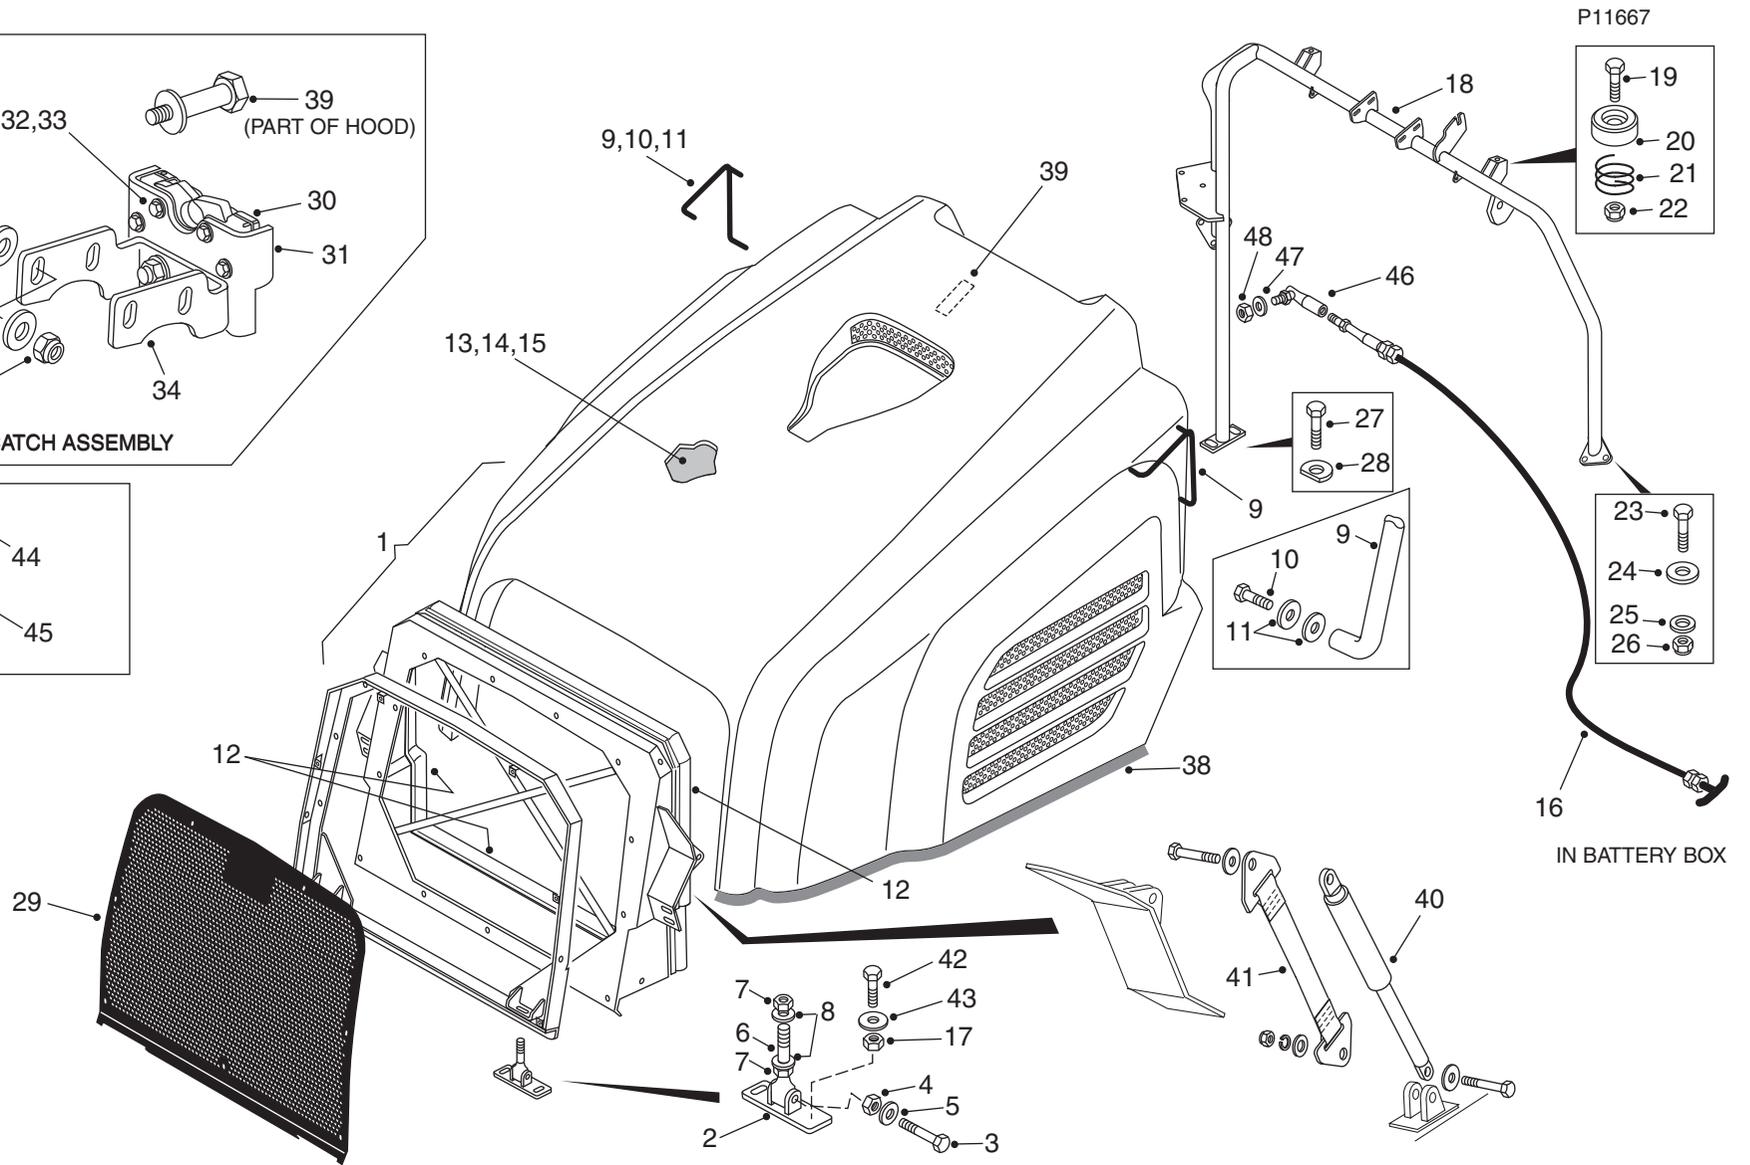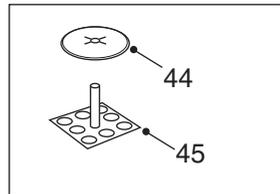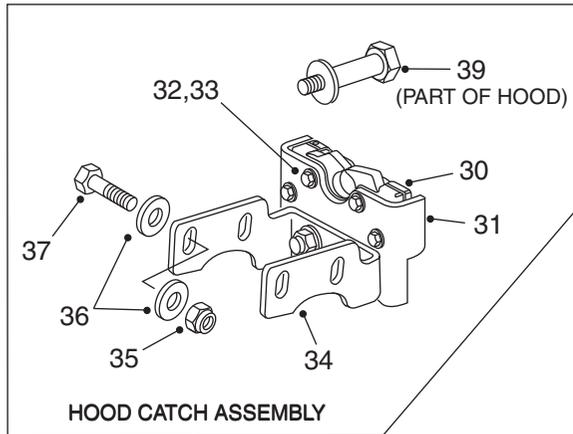

100-0040-8931 HOOD AND MOUNTING
FROM SERIAL NO. A8921011

100-0040-8931 HOOD AND MOUNTING
FROM SERIAL NO. A8921011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15331377	HOOD ASSY	A8921011	A8921012	039	001		15320831	STRIKER BOLT		
001	001		15337118	HOOD ASSY	A8921013		040	002		15313446	GAS STRUT		
002	002		15313176	.HINGE ASSY			041	002		15313472	STRAP-HOOD RETAINING		
003	002		06351675	.BOLT			042	004		06351655	BOLT		
004	002		15252584	.NUT			043	004		09191596	WASHER		
005	002		07151630	.WASHER			044	ASR		15501136	CAP		
006	002		15313179	.ROD-ADJUSTMENT			045	ASR		15503211	STUD 25MM LG		
007	004		06432001	.NUT			046	001		15256961	BALLJOINT		
008	004		09250715	.WASHER-HARDENED			047	001		00103319	LOCKWASHER		
009	002		15315116	.HANDLE-HOOD			048	001		00103024	LOCKNUT		
010	006		15309253	.BOLT									
011	012		15307237	.WASHER									
012	ASR		15244364	.SEAL-BULK									
013	001		15324159	HOOD QUILT-LHS									
014	001		15324160	HOOD QUILT-RHS									
015	001		15324161	HOOD QUILT-TOP									
016	001		15314415	CABLE-HOOD CATCH									
017	004		06471601	LOCKNUT									
018	001		15332275	GOALPOST WELDMENT									
019	002		00179828	BOLT									
020	002		15307804	STOP-HOOD									
021	002		05187308	SPRING									
022	002		09414094	LOCKNUT									
023	006		06351250	BOLT									
024	006		09217321	WASHER									
025	006		09267660	WASHER									
026	006		06471201	LOCKNUT									
027	002		06351230	BOLT									
028	002		15309558	WASHER-D SHAPE									
029	001		15313814	GRILLE	A8921011	A8921012							
029	001		15342528	GRILLE	A8921013								
030	001		15320830	HOOD CATCH									
031	001		15320980	BRACKET ASSY									
032	004		06350630	BOLT									
033	004		00147577	WASHER									
034	001		15323699	BRACKET									
035	004		06471201	LOCKNUT									
036	008		00116060	WASHER									
037	004		06351240	BOLT									
038	ASR		15319946	LIP SEAL									

100-0070-8931 FENDERS AND MOUNTING
FROM SERIAL NO. A8921011 TO A892 TBA

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15332703	LH FENDER PLATFORM		
002	002		15240002	BOLT		
003	001		15311946	HANDRAIL		
004	002		15330653	STEP ASSY-WIRE		
005	002		15318085	MUDFLAP-FRONT LH		
006	002		15311949	PLATE		
007	004		15303969	STIFFENER-MUDFLAP		
008	006		00179820	BOLT		
009	006		00103320	LOCKWASHER		
010	006		00102634	NUT		
011	006		06350825	BOLT		
012	004		07160830	LOCKWASHER		
013	002		06470801	NUT		
014	008		09267949	WASHER-HARDENED		
015	004		00179892	BOLT		
016	004		00274209	LOCKNUT		
017	002		07151220	WASHER		
018	002		15234758	WASHER		
019	002		06471201	LOCKNUT		
020	004		09267660	WASHER		
021	004		06351230	BOLT		
022	002		07161230	LOCKWASHER		
023	001		06372070	BOLT		
024	002		15317037	CHAIN-MUDFLAP STAY		
025	001		15318836	MUDFLAP-FRONT RH		
026	001		15318829	PLATE		
027	002		15316708	CLAMP PLATE		
028	001		15317173	PLATFORM-RH		
029	001		15318825	SIDE STEP ASSY-RH		
030	004		06442040	SCREW SET		
031	004		06472001	NUT		
032	004		07162030	LOCKWASHER		
033	003		06351240	BOLT		
034	003		06471201	LOCKNUT		
035	001		15331048	SPILL GUARD		
036	001		15331050	BRACE-SPILL GUARD		
037	002		15228110	TUBE		
038	002		09366021	GRIP		
039	001		09270005	WASHER-HARDENED		
040	001		06432001	NUT		

100-0070-8931 FENDERS AND MOUNTING
FROM SERIAL NO. A8921011 TO A892 TBA


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	001		15332592	PANEL-INFILL LH		
042	001		15332595	PANEL-INFILL RH		
043	003		00179839	BOLT		
044	003		00106263	WASHER		
045	002		00274208	LOCKNUT		
046	002		00179837	BOLT		
047	002		00179839	BOLT		
048	004		00106263	WASHER		
049	004		15317030	U-BOLT		
050	008		07150815	WASHER		
051	008		06470801	NUT		
052	008		06430801	NUT		
053	001		15318086	PLATE-MUDFLAP CLAMPING		
054	004		15311176	BOLT		
055	004		07161630	LOCKWASHER		
056	003		15320662	FOOT-TREADPLATE		
057	012		15320295	CAPSCREW		

08/08 (ECN 109379)

100-0070-8931 FENDERS AND MOUNTING
FROM SERIAL NO. A892 TBA

DRAWING NO. P12287

P12287

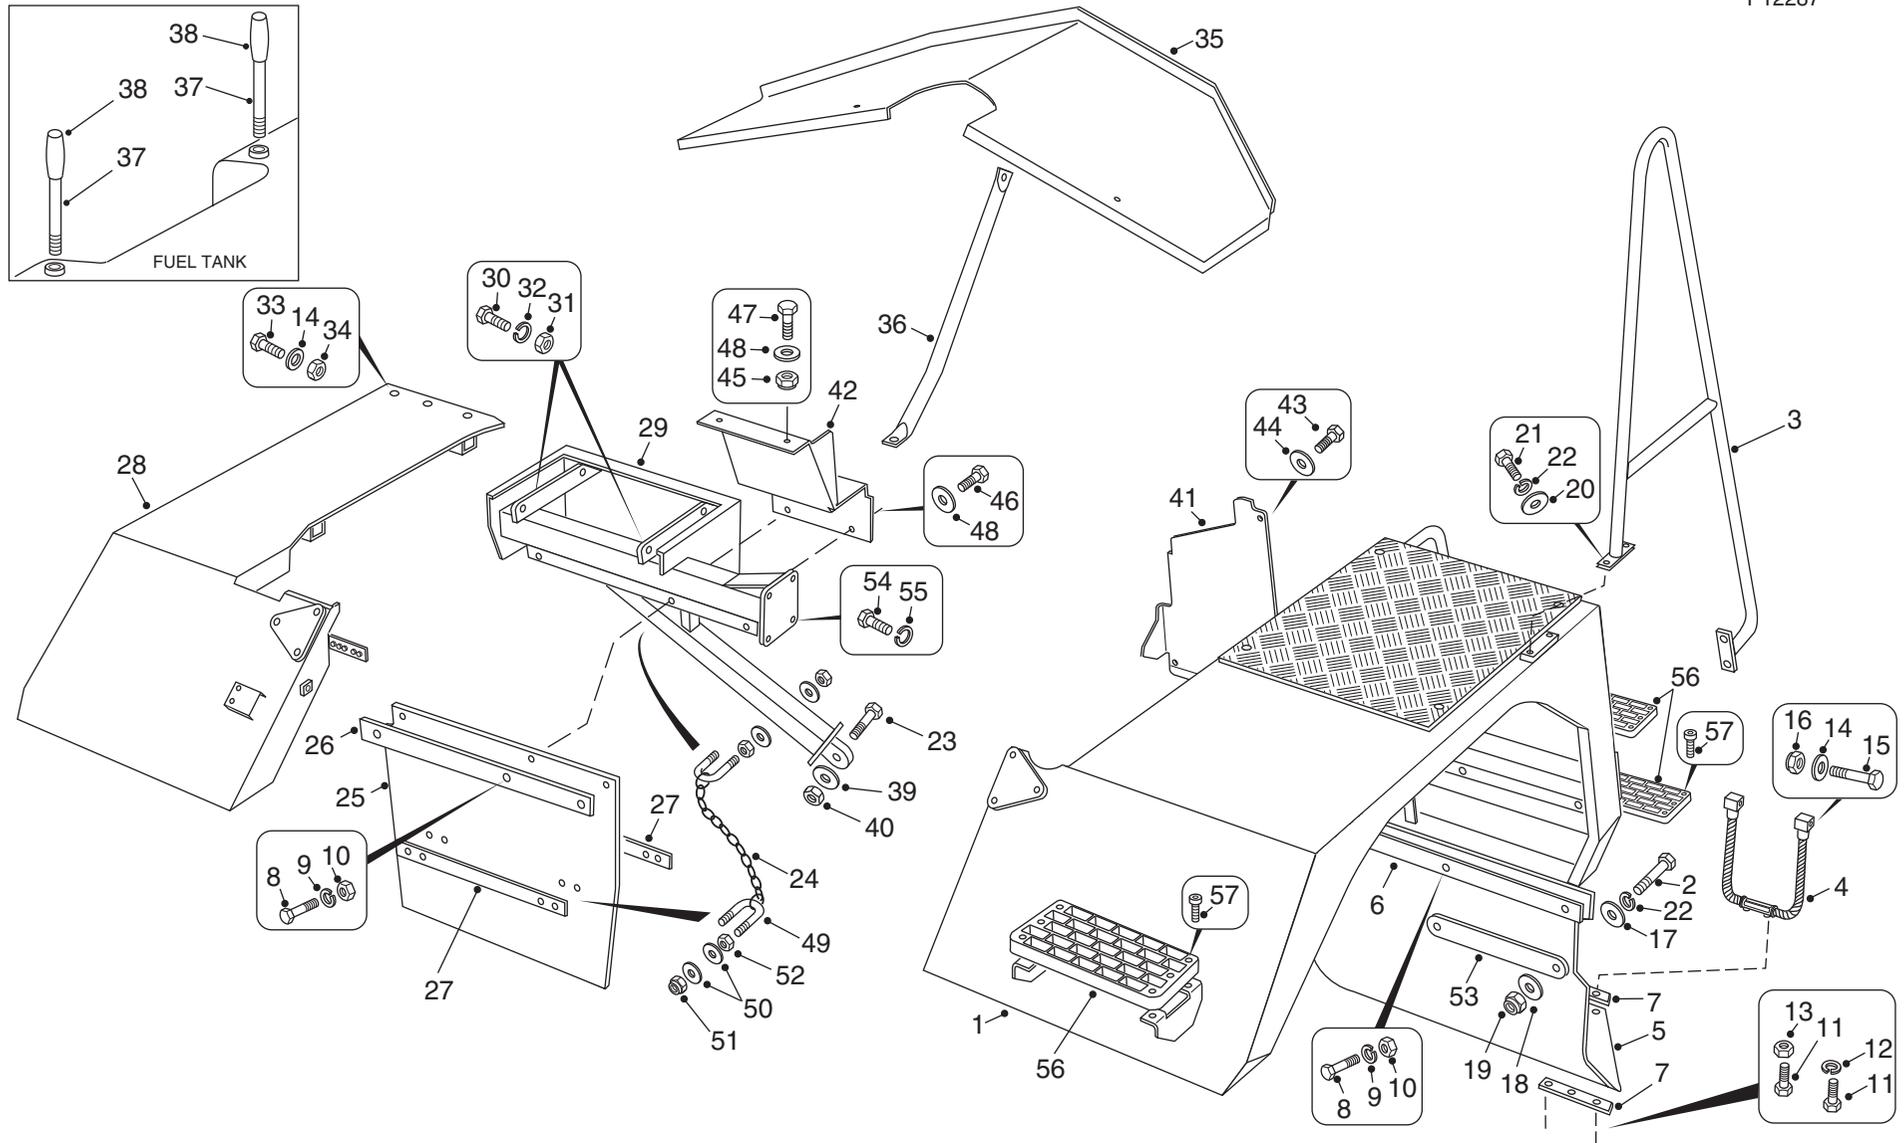

100-0070-8931 FENDERS AND MOUNTING

FROM SERIAL NO. A892 TBA

100-0070-8931 FENDERS AND MOUNTING

FROM SERIAL NO. A892 TBA


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15332703	LH FENDER PLATFORM			041	001		15332592	PANEL-INFILL LH		
002	002		15240002	BOLT			042	001		15332595	PANEL-INFILL RH		
003	001		15311946	HANDRAIL			043	003		00179839	BOLT		
004	002		15330653	STEP ASSY-WIRE			044	003		00106263	WASHER		
005	002		15318085	MUDFLAP-FRONT LH			045	002		00274208	LOCKNUT		
006	002		15311949	PLATE			046	002		00179837	BOLT		
007	004		15303969	STIFFENER-MUDFLAP			047	002		00179839	BOLT		
008	006		00179820	BOLT			048	004		00106263	WASHER		
009	006		00103320	LOCKWASHER			049	004		15317030	U-BOLT		
010	006		00102634	NUT			050	008		07150815	WASHER		
011	006		06350825	BOLT			051	008		06470801	NUT		
012	004		07160830	LOCKWASHER			052	008		06430801	NUT		
013	002		06470801	NUT			053	001		15318086	PLATE-MUDFLAP CLAMPING		
014	008		09267949	WASHER-HARDENED			054	004		15311176	BOLT		
015	004		00179892	BOLT			055	004		07161630	LOCKWASHER		
016	004		00274209	LOCKNUT			056	003		15320662	FOOT-TREADPLATE		
017	002		07151220	WASHER			057	012		15320295	CAPSCREW		
018	002		15234758	WASHER									
019	002		06471201	LOCKNUT									
020	004		09267660	WASHER									
021	004		06351230	BOLT									
022	002		07161230	LOCKWASHER									
023	001		06372070	BOLT									
024	002		15342569	CHAIN-MUDFLAP STAY									
025	001		15342570	MUDFLAP-FRONT RH									
026	001		15318829	PLATE									
027	002		15316708	CLAMP PLATE									
028	001		15317173	PLATFORM-RH									
029	001		15342566	SIDE STEP ASSY-RH									
030	004		06442040	SCREW SET									
031	004		06472001	NUT									
032	004		07162030	LOCKWASHER									
033	003		06351240	BOLT									
034	003		06471201	LOCKNUT									
035	001		15331048	SPILL GUARD									
036	001		15331050	BRACE-SPILL GUARD									
037	002		15228110	TUBE									
038	002		09366021	GRIP									
039	001		09270005	WASHER-HARDENED									
040	001		06432001	NUT									

R1 06/08 (ECN 108055)

100-0135-8931 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8921011

DRAWING NO. P12272

P12272

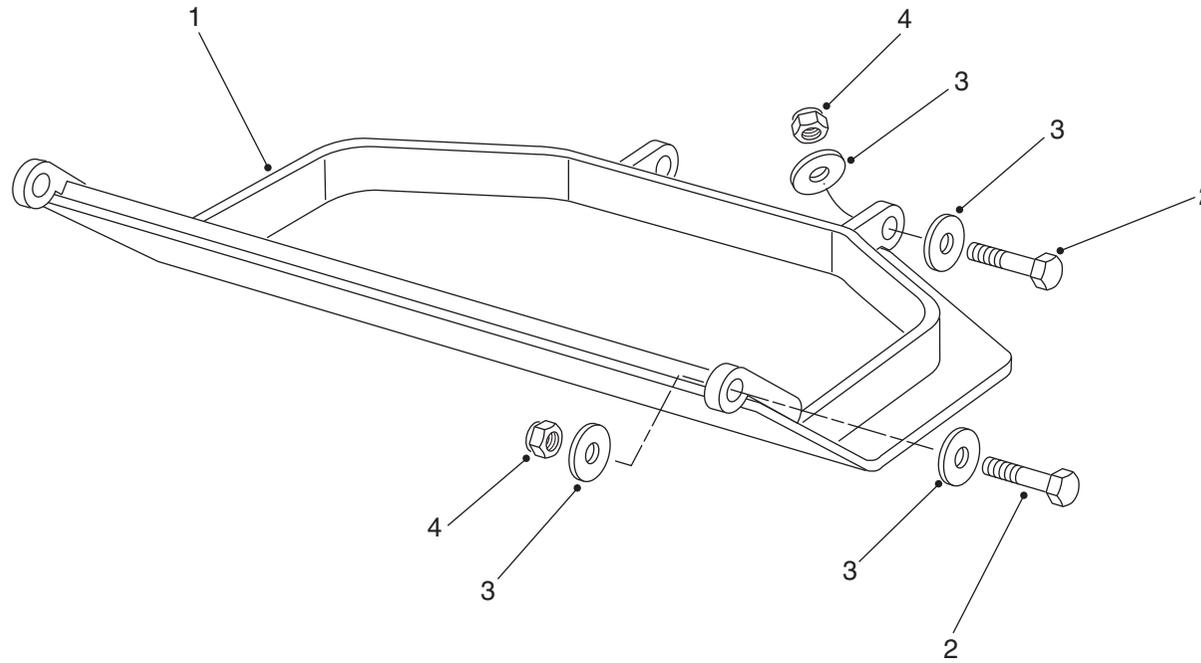

100-0135-8931 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8921011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
----	-----	-----	----------	-------------	-----------------	---------------

001	001		15333253	GUARD-TRANS SUMP		
002	004		06351670	BOLT		
003	008		09191596	WASHER		
004	004		06471601	LOCKNUT		

THIS PAGE IS INTENTIONALLY LEFT BLANK

CUMMINS ENGINE

THIS UNIT IS EQUIPPED WITH A CUMMINS DIESEL ENGINE.


TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.


A SEPARATE CUMMINS ENGINE PARTS BOOK IS SUPPLIED WITH NEW UNITS FOR ENGINE PARTS COVERAGE.

ANY ADDITIONAL REQUESTS FOR THIS CUMMINS ENGINE PARTS BOOK OR ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

110-0030-8931 ENGINE AND MOUNTING
FROM SERIAL NO. A8921011

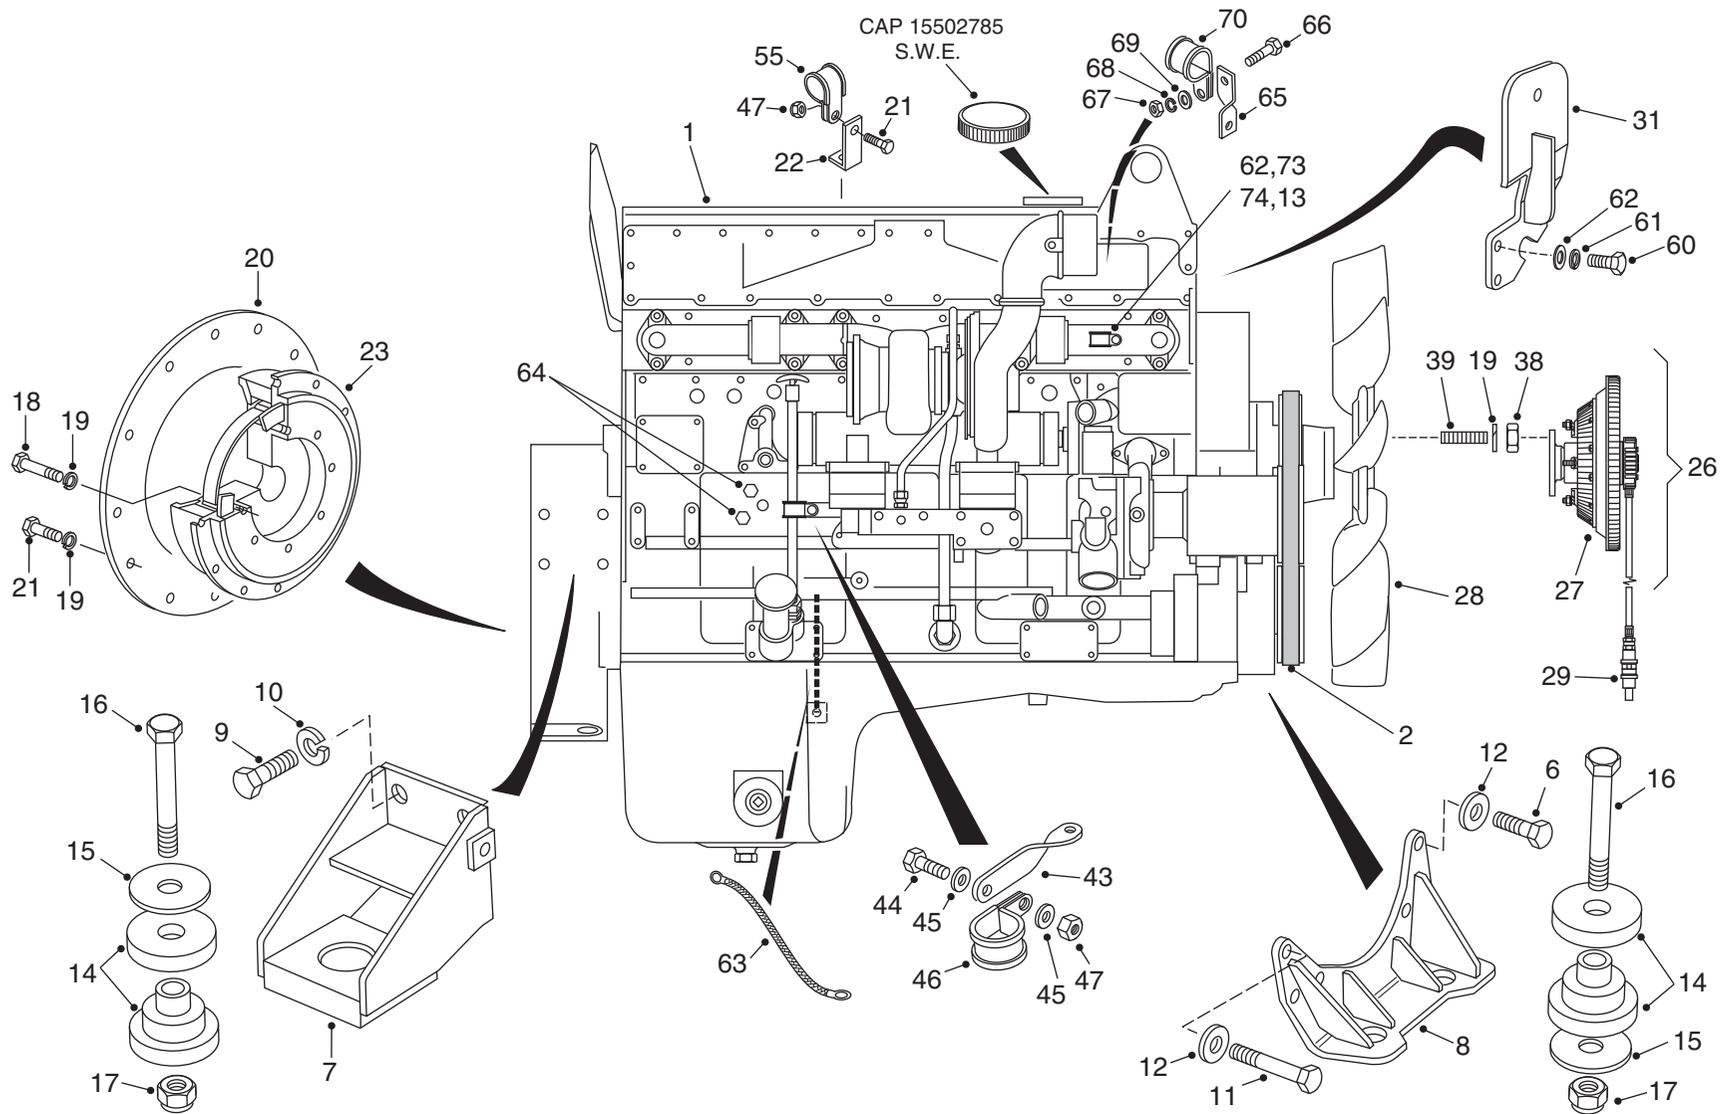

P11506

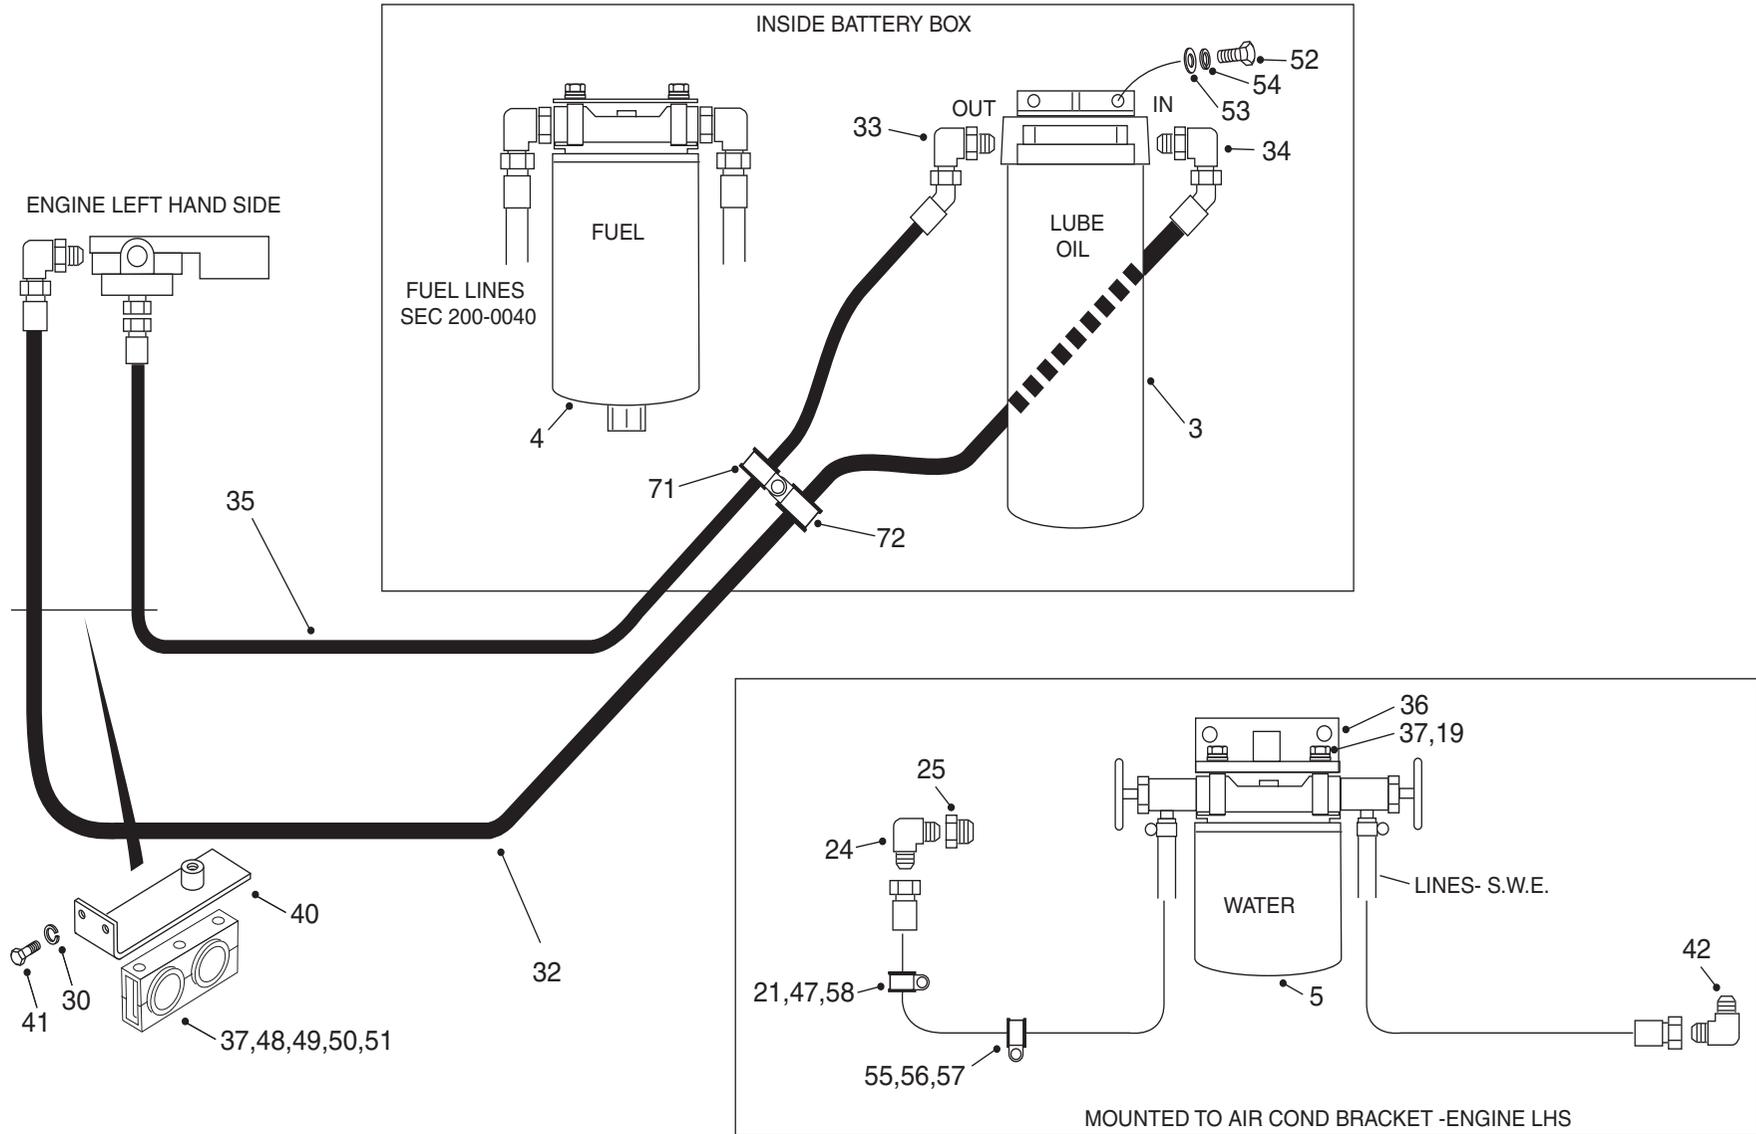

THIS PAGE IS INTENTIONALLY LEFT BLANK

Product: 2007 TEREX TA27 G7 (IFS) Articulated Truck Workshop Parts Manual[PN15503534]


Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-i>

[ifs-articulated-truck-workshop-parts-manualpn15503534/](https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-i-ifs-articulated-truck-workshop-parts-manualpn15503534/)

110-0050-8931 AIR CLEANER
FROM SERIAL NO. A8921011

DRAWING NO. P11006

P11006

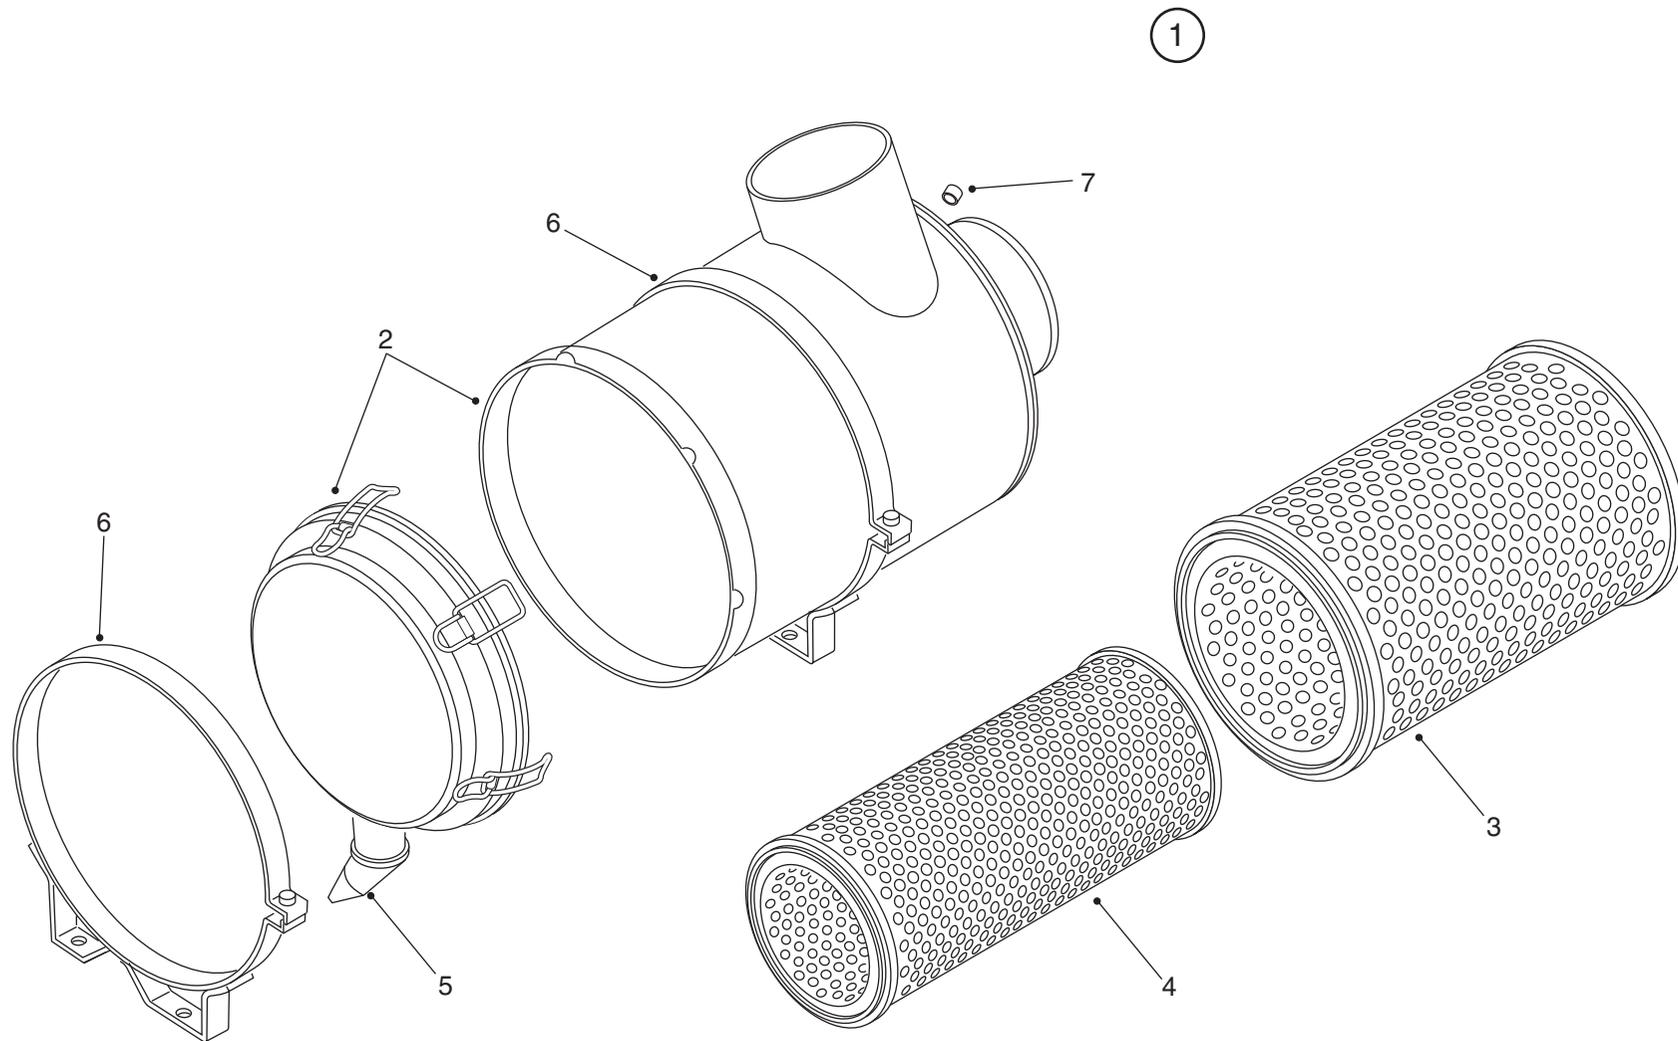

Sample of manual. Download All 452 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta27-g7-ifs-articulated-truck-workshop-parts-manualpn15503534/>