



Publication Part Number: **15503097**

Product: 2006 TEREX TA27 G7 Articulated Truck Workshop Parts Manual[PN15503097]
Full Download: <https://www.aresrepairmanual.com/downloads/2006-terex-ta27-g7-a-articulated-truck-workshop-parts-manualpn15503097/>


PARTS BOOK

CLICK HERE FOR
TRACTOR
TABLE OF CONTENTS

CLICK HERE FOR
TRACTOR OPTIONAL
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER OPTIONAL
TABLE OF CONTENTS

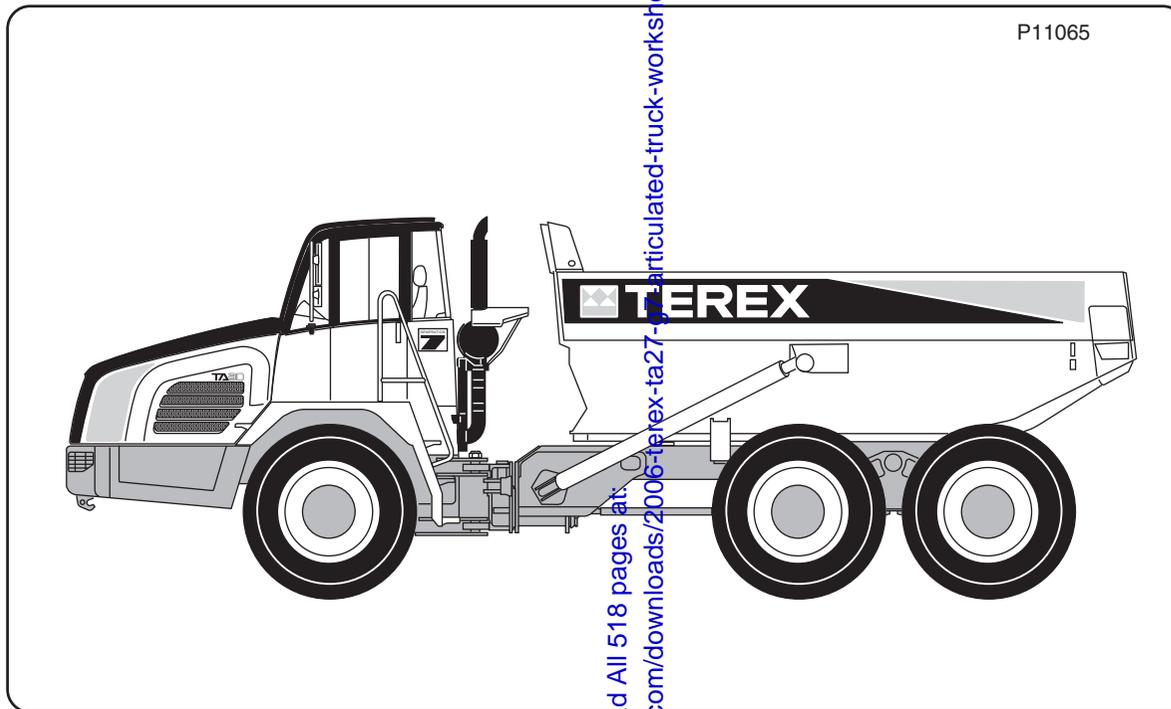

TA27 G7 Articulated Truck

(Cum QSM11 T3-335 HP Engine, ZF6WG-260 Trans & NAF Axles)

Serial No. **A8891011 through A8891235**

Date: June 2006

Revised: 22nd February 2011

Sample of manual. Download All 518 pages at:
<https://www.aresrepairmanual.com/downloads/2006-terex-ta27-g7-articulated-truck-workshop-parts-manualpn15503097/>

Product: 2006 TEREX TA27 G7 Articulated Truck Workshop Parts Manual[PN15503097]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta27-g7-a>

[articulated-truck-workshop-parts-manualpn15503097/](https://www.arepairmanual.com/downloads/2006-terex-ta27-g7-a-articulated-truck-workshop-parts-manualpn15503097/)

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 518 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta27-g7-articulated-truck-workshop-parts-manualpn15503097/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
 2 9058512 . Shaft
 3 9024169 . Ring
 4 9058132 . Control Assy.
 5 9058135 . . Spring
 6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

Amps	Amperes	Hsg	Housing	N.I	Not Illustrated
As R	As Required	I.D	Inside Diameter	N.L.A	No Longer Available
Assy	Assembly	L.H	Left Hand	N.S.S	Not Sold Separately
Brkt	Bracket	L.W	Lockwasher	O.D	Outside Diameter
Cad-Pltd	Cadium Plated	Lg	Long	Pr	Pair
Comm	Commencement of production	Lkg	Linkage	P.T.O	Power-Take-Off
E.S.N	Elastic Stop Nut	Mtg	Mounting	R.H	Right Hand
Ftgs	Fittings	N.C	Note Code	Std	Standard



Articulated Truck



TRACTOR SECTIONS



CHASSIS

100



ENGINE

110



TRANSMISSION

120



DRIVELINE

130



FRONT AXLE

140



BRAKE PARTS

165



SUSPENSION SYSTEM

180



ELECTRICAL SYSTEM

190



FUEL SYSTEM

200



COOLING SYSTEM

210



MAIN HYDRAULIC VALVE

215



STEERING SYSTEM

220



BODY HOIST SYSTEM

230



BRAKING SYSTEM

250



CAB

260



DECALS

290



MISCELLANEOUS

300



TABLE OF CONTENTS FOR MODEL TA27 T3 TRACTOR

FROM SERIAL NO A8891011

REVISED 06/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 100</u>	<u>CHASSIS</u>		
100-0010-8901	CHASSIS		
100-0030-8901	SOUND INSULATION		R1 11/08
100-0040-8901	HOOD AND MOUNTING		R4 02/10
100-0070-8901	FENDERS AND MOUNTING	A8891011 TO A8891229	
100-0070-8901	FENDERS AND MOUNTING	A8891230	R1 04/10
100-0135-8901	ROCK AND SUMP GUARDS		
<u>SECTION 110</u>	<u>ENGINE</u>		
110-0020-8901	ENGINE ORDERING INSTRUCTIONS		
110-0030-8901	ENGINE AND MOUNTING		R1 11/08
110-0050-8901	AIR CLEANER		
110-0060-8901	AIR CLEANER PIPES AND HOSES		R1 06/07
110-0070-8901	EXHAUST AND MOUNTING		R4 03/09
<u>SECTION 120</u>	<u>TRANSMISSION</u>		
120-0010-8901	TRANSMISSION MOUNTING		R1 10/07
120-0020-8901	TRANSMISSION BREAKDOWN		
120-0070-8901	SHIFT CONTROL	A8891011 TO A8891229	R1 10/06
120-0070-8901	SHIFT CONTROL	A8891230	03/10
120-0100-8901	FILTER		
120-0110-8901	OIL LINES-TRANSMISSION		R3 09/09
120-0220-8901	OIL PUMP		
120-0390-8901	TORQUE CONVERTER		
120-0400-9001	LUBRICATION PIPES		
120-0410-8901	INDUCTIVE TRANSMITTER		
120-0430-8901	ELECTRIC SHIFT CONTROL VALVE		
120-0440-8901	GEARSHIFT		
120-0450-8901	GEARBOX HOUSING		
120-0460-8901	CLUTCH ASSEMBLY KV+K1		
120-0470-8901	CLUTCH ASSEMBLY KR+K2		
120-0480-8901	CLUTCH ASSEMBLY K3+K4		
120-0500-8901	PTO MAIN HYDRAULIC PUMP		
120-0515-8901	EMERGENCY STEERING PUMP		
120-0520-8901	INPUT-DRIVE ASSEMBLY		
120-0530-8901	LAYSHAFT GEARING		
120-0540-8901	DIFFERENTIAL		R1 12/09
120-0625-8901	TEMPERATURE SENSOR		
120-0900-8901	LOOSE PARTS-TRANSMISSION		R1 10/06

TABLE OF CONTENTS FOR MODEL TA27 T3 TRACTOR

FROM SERIAL NO A8891011

REVISED 06/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 130</u>	<u>DRIVELINE</u>		
130-0010-8901	FRONT DRIVELINE		R1 01/09
<u>SECTION 140</u>	<u>FRONT AXLE</u>		
140-0010-8901	AXLE COMPLETE-FRONT	A8891011 TO A8891195	
140-0010-8901	AXLE COMPLETE-FRONT	A8891096 TO A8891206	06/08
140-0010-8901	AXLE COMPLETE-FRONT	A8891207	06/08
140-0020-8901	AXLE GROUP-FRONT	A8891011 TO A8891195	
140-0020-8901	AXLE GROUP-FRONT	A8891196 TO A8891206	06/08
140-0020-8901	AXLE GROUP-FRONT	A8891207	06/08
140-0030-8901	PLANETARY GEARING-FRONT	A8891011 TO A8891162	R1 08/07
140-0030-8901	PLANETARY GEARING-FRONT	A8891163 TO A8891195	R1 08/07
140-0030-8901	PLANETARY GEARING-FRONT	A8891196 TO A8891206	06/08
140-0030-8901	PLANETARY GEARING-FRONT	A8891207	R1 12/09
140-0040-8901	WHEEL, RIM AND TYRE-FRONT		R1 09/07
140-0060-8901	DIFFERENTIAL-FRONT	A8891011 TO A8891195	R1 02/08
140-0060-8901	DIFFERENTIAL-FRONT	A8891196 TO A8891206	06/08
140-0060-8901	DIFFERENTIAL-FRONT	A8891207	06/08
140-0100-8901	DIFF-LOCK CONTROLS-FRONT		R3 06/08
<u>SECTION 165</u>	<u>BRAKE PARTS</u>		
165-0050-8901	BRAKE GUARDS	A8891216	02/09
<u>SECTION 180</u>	<u>SUSPENSION SYSTEM</u>		
180-0020-8901	FRONT SUSPENSION		R3 01/09
<u>SECTION 190</u>	<u>ELECTRICAL SYSTEM</u>		
190-0010-8901	TERMINALS		
190-0011-8901	CONNECTORS		
190-0030-8901	CABLES/HARNESSES-CAB	A8891011 TO A8891212	
190-0030-8901	CABLES/HARNESSES-CAB	A8891213	R1 03/10
190-0040-8901	CABLES/HARNESSES-CHASS/ENG		R3 04/09
190-0070-8901	BATTERY AND CABLES		
190-0080-8901	BATTERY MOUNTING		R2 12/09
190-0085-8901	ECU-HYD.SYSTEM MONITORING		R1 10/06
190-0100-8901	ELECTRICAL LIGHTING SYSTEM		R1 10/06
190-0110-8901	ALTERNATOR		
190-0120-8901	STARTER		
190-0270-8901	SWITCHES AND SENSORS		
190-0300-8901	RADIO CASSETTE AND SPEAKERS		
190-0310-8901	ELECTRICAL HORN		
190-0330-8901	CCTV REAR VIEW SYSTEM	A8891231	R1 02/11

TABLE OF CONTENTS FOR MODEL TA27 T3 TRACTOR

FROM SERIAL NO A8891011

REVISED 06/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 200</u>			
<u>FUEL SYSTEM</u>			
200-0010-8901	FUEL TANK AND MOUNTING	A8891011 TO A8891229	
200-0010-8901	FUEL TANK AND MOUNTING	A8891230	R1 04/10
200-0040-8901	FUEL LINES		
200-0050-8901	ACCELERATOR LINKAGE		R1 06/08
<u>SECTION 210</u>			
<u>COOLING SYSTEM</u>			
210-0010-8901	RADIATOR ASSEMBLY	A8891011 TO A8891162	
210-0010-8901	RADIATOR ASSEMBLY	A8891163 TO A8891230	08/07
210-0010-8901	RADIATOR ASSEMBLY	A8891231	06/10
210-0020-8901	RADIATOR MOUNTING		
210-0030-8901	RADIATOR PIPING		R1 09/09
210-0035-8901	CHARGE AIR COOLER & PIPING		R2 04/10
210-0040-8901	RADIATOR HEADER TANK & HOSES	A8891011 TO A8891229	R2 09/09
210-0040-8901	RADIATOR HEADER TANK & HOSES	A8891230	03/10
210-0060-8901	OIL COOLER AND PIPING-TRANS		R1 06/07
210-0061-8901	TRANS OIL COOLER MOUNTING		
210-0065-8901	OIL COOLER-TRANSMISSION	A8891011 TO A8891230	R4 09/09
210-0065-8901	OIL COOLER-TRANSMISSION	A8891231	02/10
<u>SECTION 215</u>			
<u>MAIN HYDRAULIC VALVE</u>			
215-0050-8901	MAIN HYDRAULIC VALVE ASSEMBLY		
<u>SECTION 220</u>			
<u>STEERING SYSTEM</u>			
220-0010-8901	STEERING LINES	A8891011 TO A8891220	R3 03/09
220-0010-8901	STEERING LINES	A8891221	R3 06/10
220-0090-8901	STEERING VALVE		
220-0120-8901	STEERING CYLINDER	A8891011 TO A8891059	
220-0120-8901	STEERING CYLINDER	A8891060	R1 04/07
220-0230-8901	STEERING COLUMN MOUNTING		
<u>SECTION 230</u>			
<u>BODY HOIST SYSTEM</u>			
230-0020-8901	LINES AND FITTINGS-BODY HOIST		
230-0040-8901	TANK AND MOUNTING-BODY HOIST		R1 08/08
230-0050-8901	PUMP-BODY HOIST		
230-0081-8901	JOYSTICK-BODY CONTROL		
<u>SECTION 250</u>			
<u>BRAKING SYSTEM</u>			
250-0020-8901	BRAKE LINES-HYDRAULIC	A8891011 TO A8891167	R1 10/06
250-0020-8901	BRAKE LINES-HYDRAULIC	A8891168 TO A8891222	09/07
250-0020-8901	BRAKE LINES-HYDRAULIC	A8891223 TO A8891230	03/09
250-0020-8901	BRAKE LINES-HYDRAULIC	A8891231	02/10

TABLE OF CONTENTS FOR MODEL TA27 T3 TRACTOR

FROM SERIAL NO A8891011


REVISED 06/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 250</u>			
<u>BRAKING SYSTEM-CONTINUED</u>			
250-0060-8901	BRAKE ACCUMULATOR		
250-0070-8901	TREADLE VALVE	A8891011 TO A8891213	R2 01/08
250-0070-8901	TREADLE VALVE	A8891214	08/08
<u>SECTION 260</u>			
<u>CAB</u>			
260-0010-8901	CAB ASSEMBLY		R2 08/08
260-0015-8901	CAB MOUNTING	A8891011 TO A8891208	R1 08/07
260-0015-8901	CAB MOUNTING	A8891209 TO A8891230	06/08
260-0015-8901	CAB MOUNTING	A8891231	04/09
260-0018-8901	CAB TILT MECHANISM		R1 01/09
260-0030-8901	CAB DOOR-LEFT HAND		R1 09/07
260-0080-8901	SWITCHES AND INSTRUMENTS	A8891011 TO A8891229	R6 05/10
260-0080-8901	SWITCHES AND INSTRUMENTS	A8891230	R1 05/10
260-0090-8901	SEAT-DRIVER	A8891011 TO A8891162	R1 11/08
260-0090-8901	SEAT-DRIVER	A8891163	R1 04/09
260-0110-8901	SEAT-INSTRUCTOR		R2 03/10
260-0130-8901	AIR CONDITIONER/HEATER		
260-0140-8901	HEATER LINES AND WIRING		R1 04/09
260-0145-8901	AIR CONDITIONER LINES	A8891011 TO A8891162	
260-0145-8901	AIR CONDITIONER LINES	A8891163	R1 02/10
260-0190-8901	WINDSCREEN WASHER	A8891011 TO A8891230	
260-0190-8901	WINDSCREEN WASHER	A8891231	02/10
<u>SECTION 290</u>			
<u>DECALS</u>			
290-0010-8901	DECALS-ENGLISH	A8891011 TO A8891082	
290-0010-8901	DECALS-ENGLISH (ISO)	A8891083	R4 03/10
290-0011-8901	DECALS-ENGLISH (ANSI)	A8891083	R5 03/10
290-0100-8901	WALKWAY SURFACES (ANTI-SLIP)		R1 03/10
<u>SECTION 300</u>			
<u>MISCELLANEOUS</u>			
300-0040-8901	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-8901	POLYPROPELENE CLAMPS		
300-0200-8901	FILTERS AND ELEMENT KITS		11/08

100-0010-8901 CHASSIS
FROM SERIAL NO. A8891011

DRAWING NO. P11004

P11004

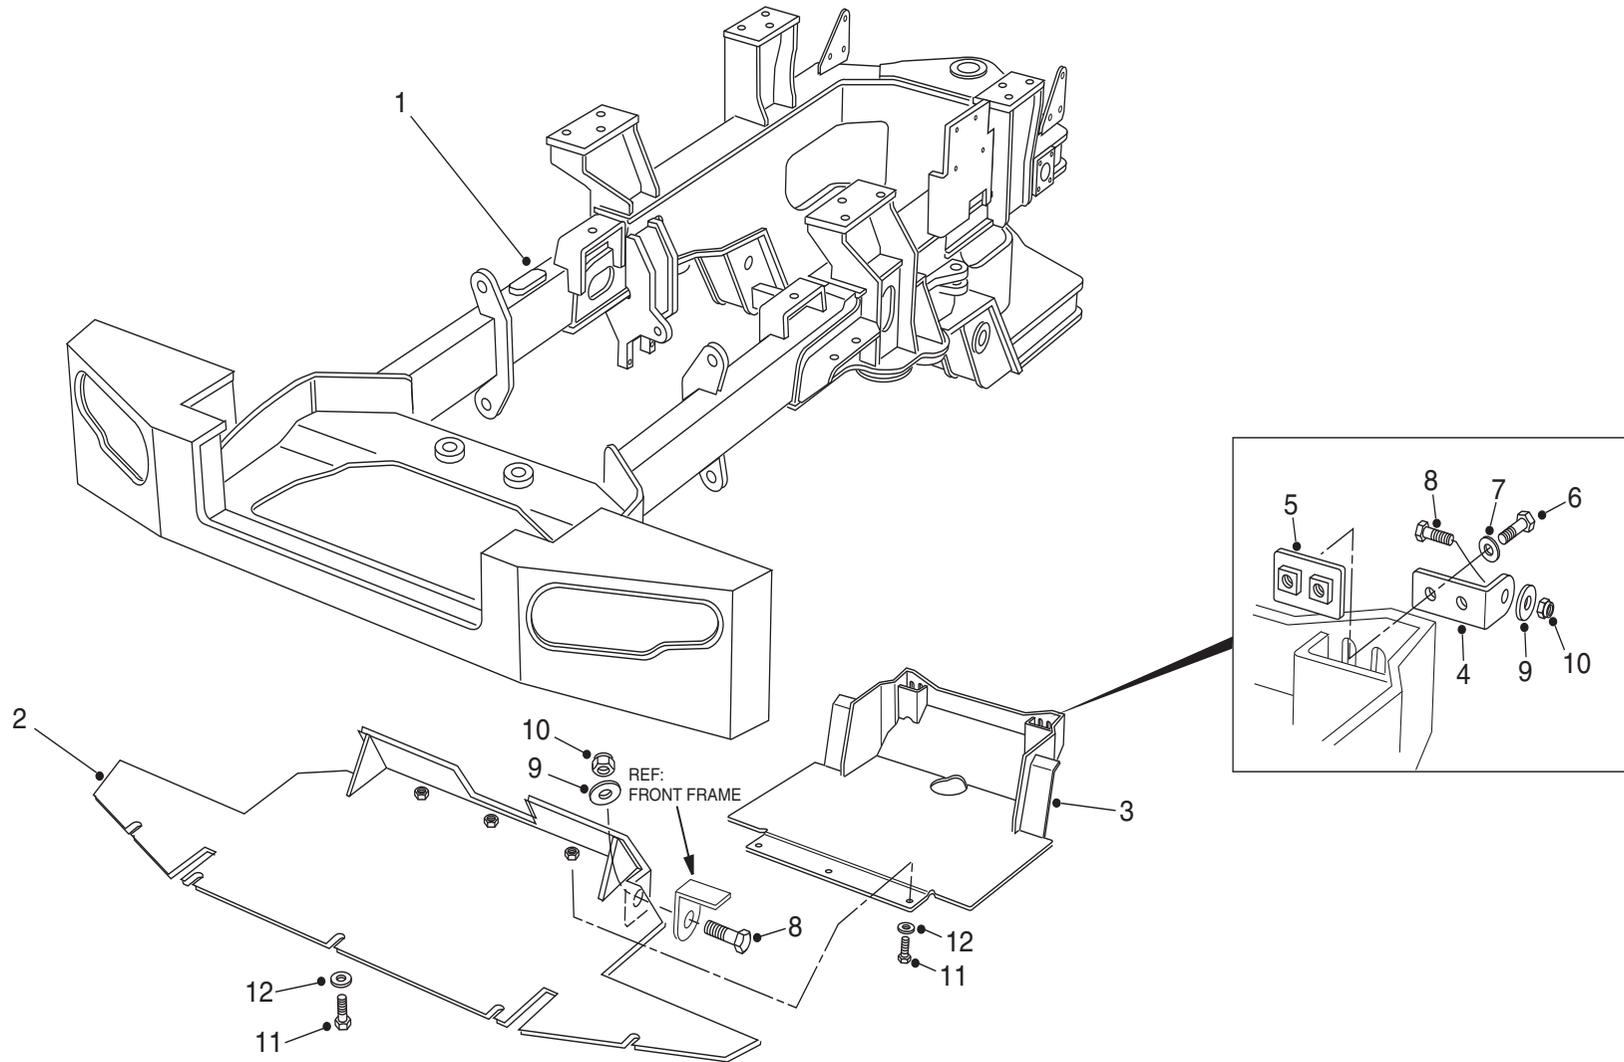

100-0010-8901 CHASSIS
FROM SERIAL NO. A8891011

NC REF QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
------------	----------	-------------	-----------------	---------------


001	001	15331825	FRAME ASSY-COMLETE	
002	001	15314756	GUARD ASSY-CHASSIS	
003	001	15317222	GUARD ASSY-SUMP	
004	002	15314724	BRACKET-HINGE	
005	002	15314726	CLAMP PLATE	
006	004	06351655	BOLT	
007	004	09191596	WASHER	
008	004	06351670	BOLT	
009	004	07151630	WASHER	
010	004	06471601	LOCKNUT	
011	008	06351235	BOLT	
012	008	09217321	WASHER	

R1 11/08 (ECN 109535)

100-0030-8901 SOUND INSULATION
FROM SERIAL NO. A8891011

DRAWING NO. P11207

P11207

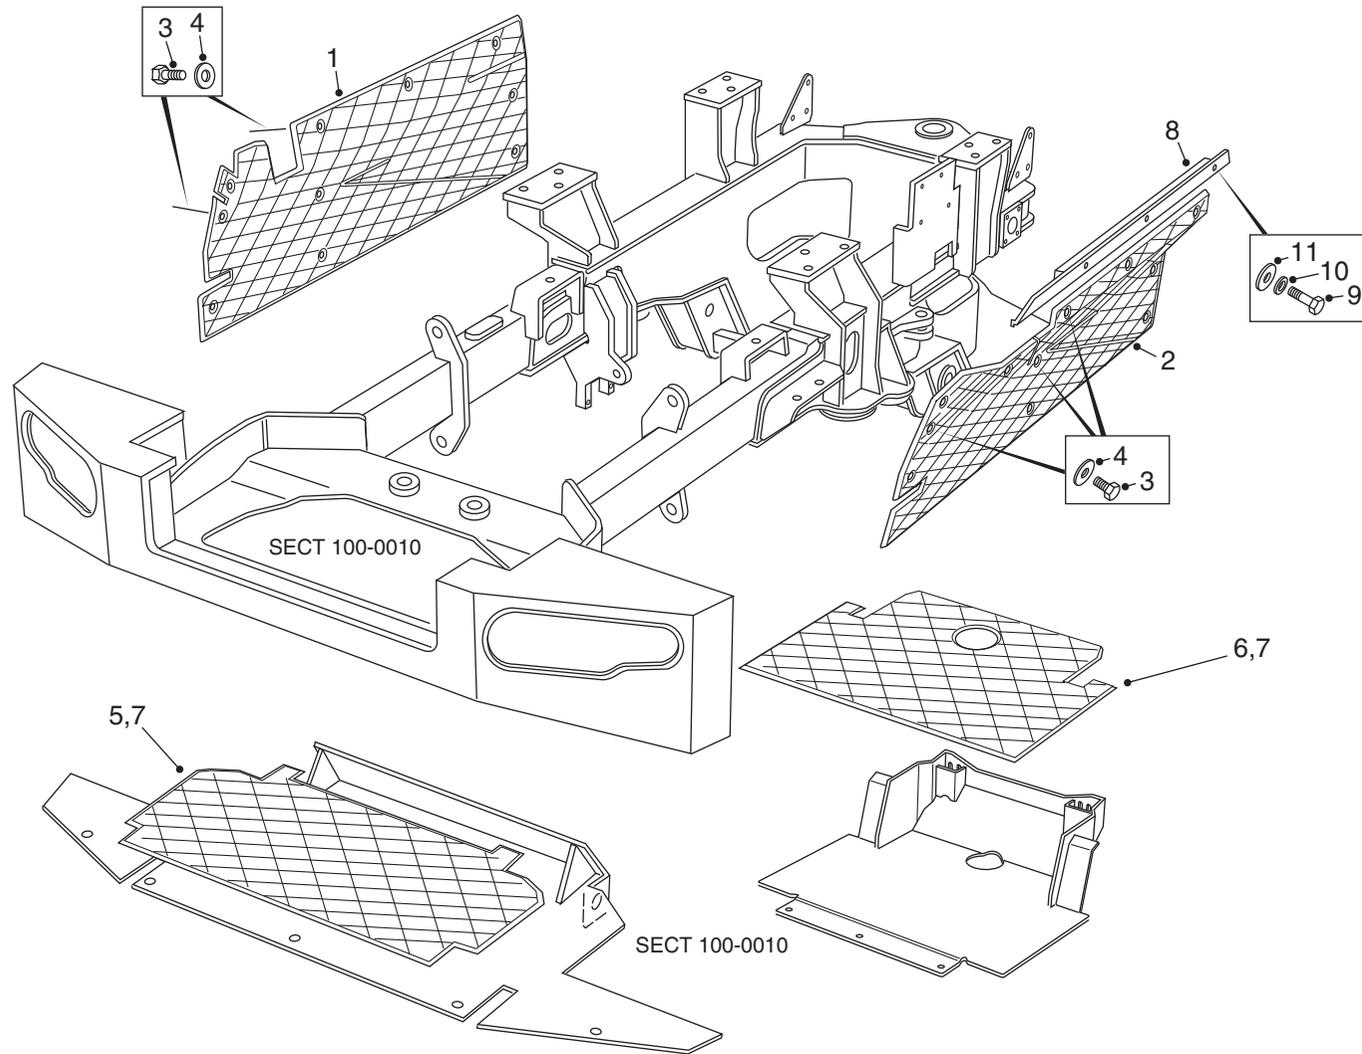

100-0030-8901 SOUND INSULATION
FROM SERIAL NO. A8891011




NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15323970	QUILT-WHEEL ARCH-RH		
	002	001	15323971	QUILT-WHEEL ARCH-LH		
	003	015	06351230	BOLT		
	004	015	15234758	WASHER		
	005	001	15316801	QUILT-SUMP GUARD FT		
	006	001	15317825	QUILT-SUMP GUARD REAR		
	007	ASR	09079599	ADHESIVE		
	008	001	15334034	PLATE-QUILT MTG		
	009	003	06351225	BOLT		
	010	003	07161230	LOCKWASHER		
	011	003	07151220	WASHER		

NOTE:A FOR UNITS FITTED WITH HI-INFLATION (WIDE) TYRES,
REFER TO OPTIONAL SECTION 100-0030

R4 02/10 (SER CORR, ECN 108610, ECN 109321, ECN 109527)

100-0040-8901 HOOD AND MOUNTING
FROM SERIAL NO. A8891011

DRAWING NO. P11667

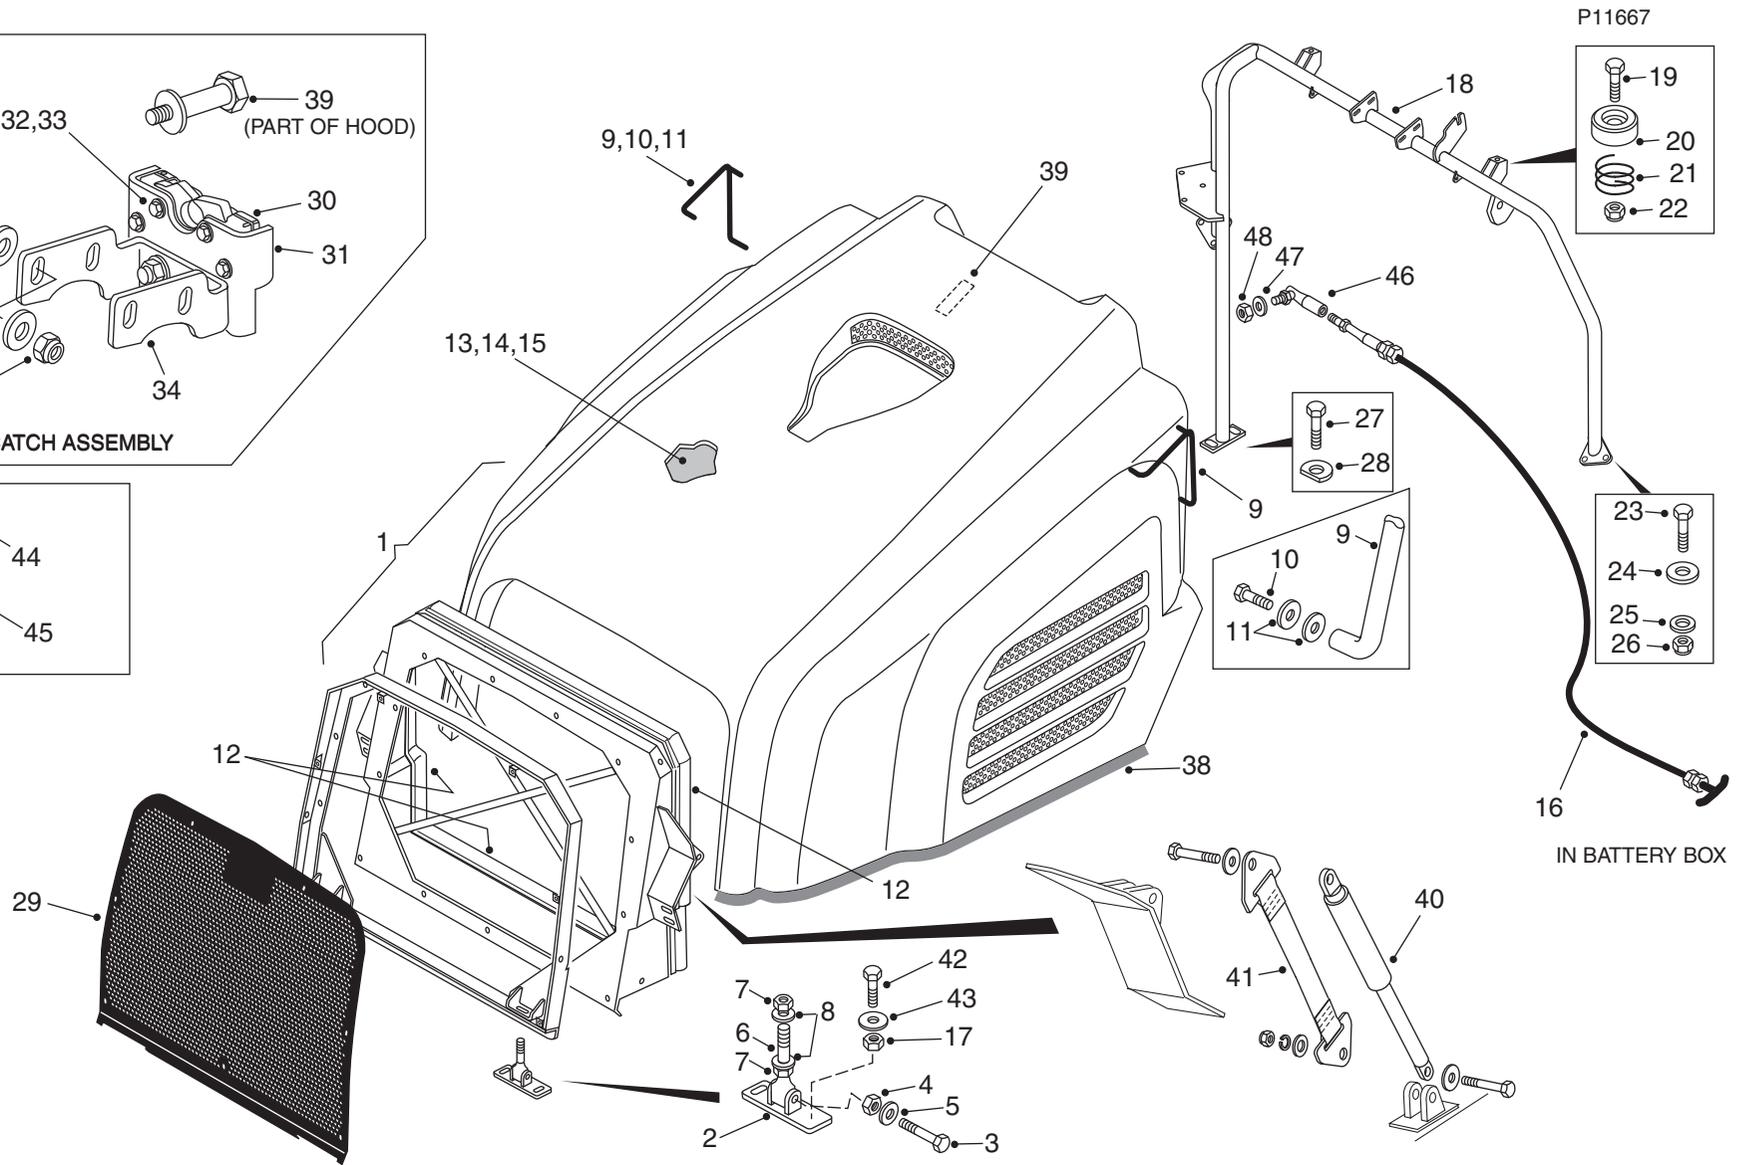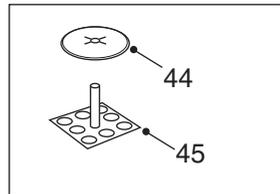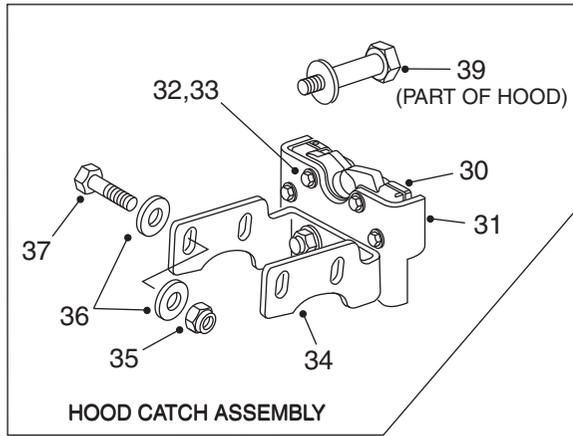

100-0040-8901 HOOD AND MOUNTING
FROM SERIAL NO. A8891011

100-0040-8901 HOOD AND MOUNTING
FROM SERIAL NO. A8891011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15331377	HOOD ASSY	A8891011	A8891162	038	ASR		15319946	LIP SEAL		
001	001		15337118	HOOD ASSY	A8891163		039	001		15320831	STRIKER BOLT		
002	002		15313176	.HINGE ASSY			040	002		15313446	GAS STRUT		
003	002		06351675	.BOLT			041	002		15313472	STRAP-HOOD RETAINING		
004	002		15252584	.NUT			042	004		06351655	BOLT		
005	002		07151630	.WASHER			043	004		09191596	WASHER		
006	002		15313179	.ROD-ADJUSTMENT			044	ASR		15501136	CAP		
007	004		06432001	.NUT			045	ASR		15503211	STUD 25MM LG		
008	004		09250715	.WASHER-HARDENED			046	001		15256961	BALLJOINT		
009	002		15315116	.HANDLE-HOOD			047	001		00103319	LOCKWASHER		
010	006		15309253	.BOLT			048	001		00103024	LOCKNUT		
011	012		15307237	.WASHER									
012	ASR		15244364	.SEAL-BULK									
013	001		15324159	HOOD QUILT-LHS									
014	001		15324160	HOOD QUILT-RHS									
015	001		15324161	HOOD QUILT-TOP									
016	001		15314415	CABLE-HOOD CATCH									
017	004		06471601	LOCKNUT									
018	001		15332275	GOALPOST WELDMENT	A8891011	A8891230							
018	001		15342515	GOALPOST WELDMENT	A8891231								
019	002		00179828	BOLT									
020	002		15307804	STOP-HOOD									
021	002		05187308	SPRING									
022	002		09414094	LOCKNUT									
023	006		06351250	BOLT									
024	006		09217321	WASHER									
025	006		09267660	WASHER									
026	006		06471201	LOCKNUT									
027	002		06351230	BOLT									
028	002		15309558	WASHER-D SHAPE									
029	001		15313814	GRILLE	A8891011	A8891211							
029	001		15342528	GRILLE	A8891212								
030	001		15320830	HOOD CATCH									
031	001		15320980	BRACKET ASSY									
032	004		06350630	BOLT									
033	004		00147577	WASHER									
034	001		15323699	BRACKET									
035	004		06471201	LOCKNUT									
036	008		00116060	WASHER									
037	004		06351240	BOLT									

100-0070-8901 FENDERS AND MOUNTING
FROM SERIAL NO. A8891011 TO A8891229

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15332703	LH FENDER PLATFORM		
002	002		15240002	BOLT		
003	001		15311946	HANDRAIL		
004	002		15330653	STEP ASSY-WIRE		
005	002		15318085	MUDFLAP-FRONT LH		
006	002		15311949	PLATE		
007	004		15303969	STIFFENER-MUDFLAP		
008	006		00179820	BOLT		
009	006		00103320	LOCKWASHER		
010	006		00102634	NUT		
011	006		06350825	BOLT		
012	004		07160830	LOCKWASHER		
013	002		06470801	NUT		
014	008		09267949	WASHER-HARDENED		
015	004		00179892	BOLT		
016	004		00274209	LOCKNUT		
017	002		07151220	WASHER		
018	002		15234758	WASHER		
019	002		06471201	LOCKNUT		
020	004		09267660	WASHER		
021	004		06351230	BOLT		
022	002		07161230	LOCKWASHER		
023	001		06372070	BOLT		
024	002		15317037	CHAIN-MUDFLAP STAY		
025	001		15318836	MUDFLAP-FRONT RH		
026	001		15318829	PLATE		
027	002		15316708	CLAMP PLATE		
028	001		15317173	PLATFORM-RH		
029	001		15318825	SIDE STEP ASSY-RH		
030	004		06442040	SCREW SET		
031	004		06472001	NUT		
032	004		07162030	LOCKWASHER		
033	003		06351240	BOLT		
034	003		06471201	LOCKNUT		
035	001		15331048	SPILL GUARD		
036	001		15331050	BRACE-SPILL GUARD		
037	002		15228110	TUBE		
038	002		09366021	GRIP		
039	001		09270005	WASHER-HARDENED		
040	001		06432001	NUT		

100-0070-8901 FENDERS AND MOUNTING
FROM SERIAL NO. A8891011 TO A8891229


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	001		15332592	PANEL-INFILL LH		
042	001		15332595	PANEL-INFILL RH		
043	003		00179839	BOLT		
044	003		00106263	WASHER		
045	002		00274208	LOCKNUT		
046	002		00179837	BOLT		
047	002		00179839	BOLT		
048	004		00106263	WASHER		
049	004		15317030	U-BOLT		
050	008		07150815	WASHER		
051	008		06470801	NUT		
052	008		06430801	NUT		
053	001		15318086	PLATE-MUDFLAP CLAMPING		
054	004		15311176	BOLT		
055	004		07161630	LOCKWASHER		
056	003		15320662	FOOT-TREADPLATE		
057	012		15320295	CAPSCREW		

R1 04/10 (ECN 110190, ECN 110253)

100-0070-8901 FENDERS AND MOUNTING
FROM SERIAL NO. A8891230

DRAWING NO. P12443

P12443

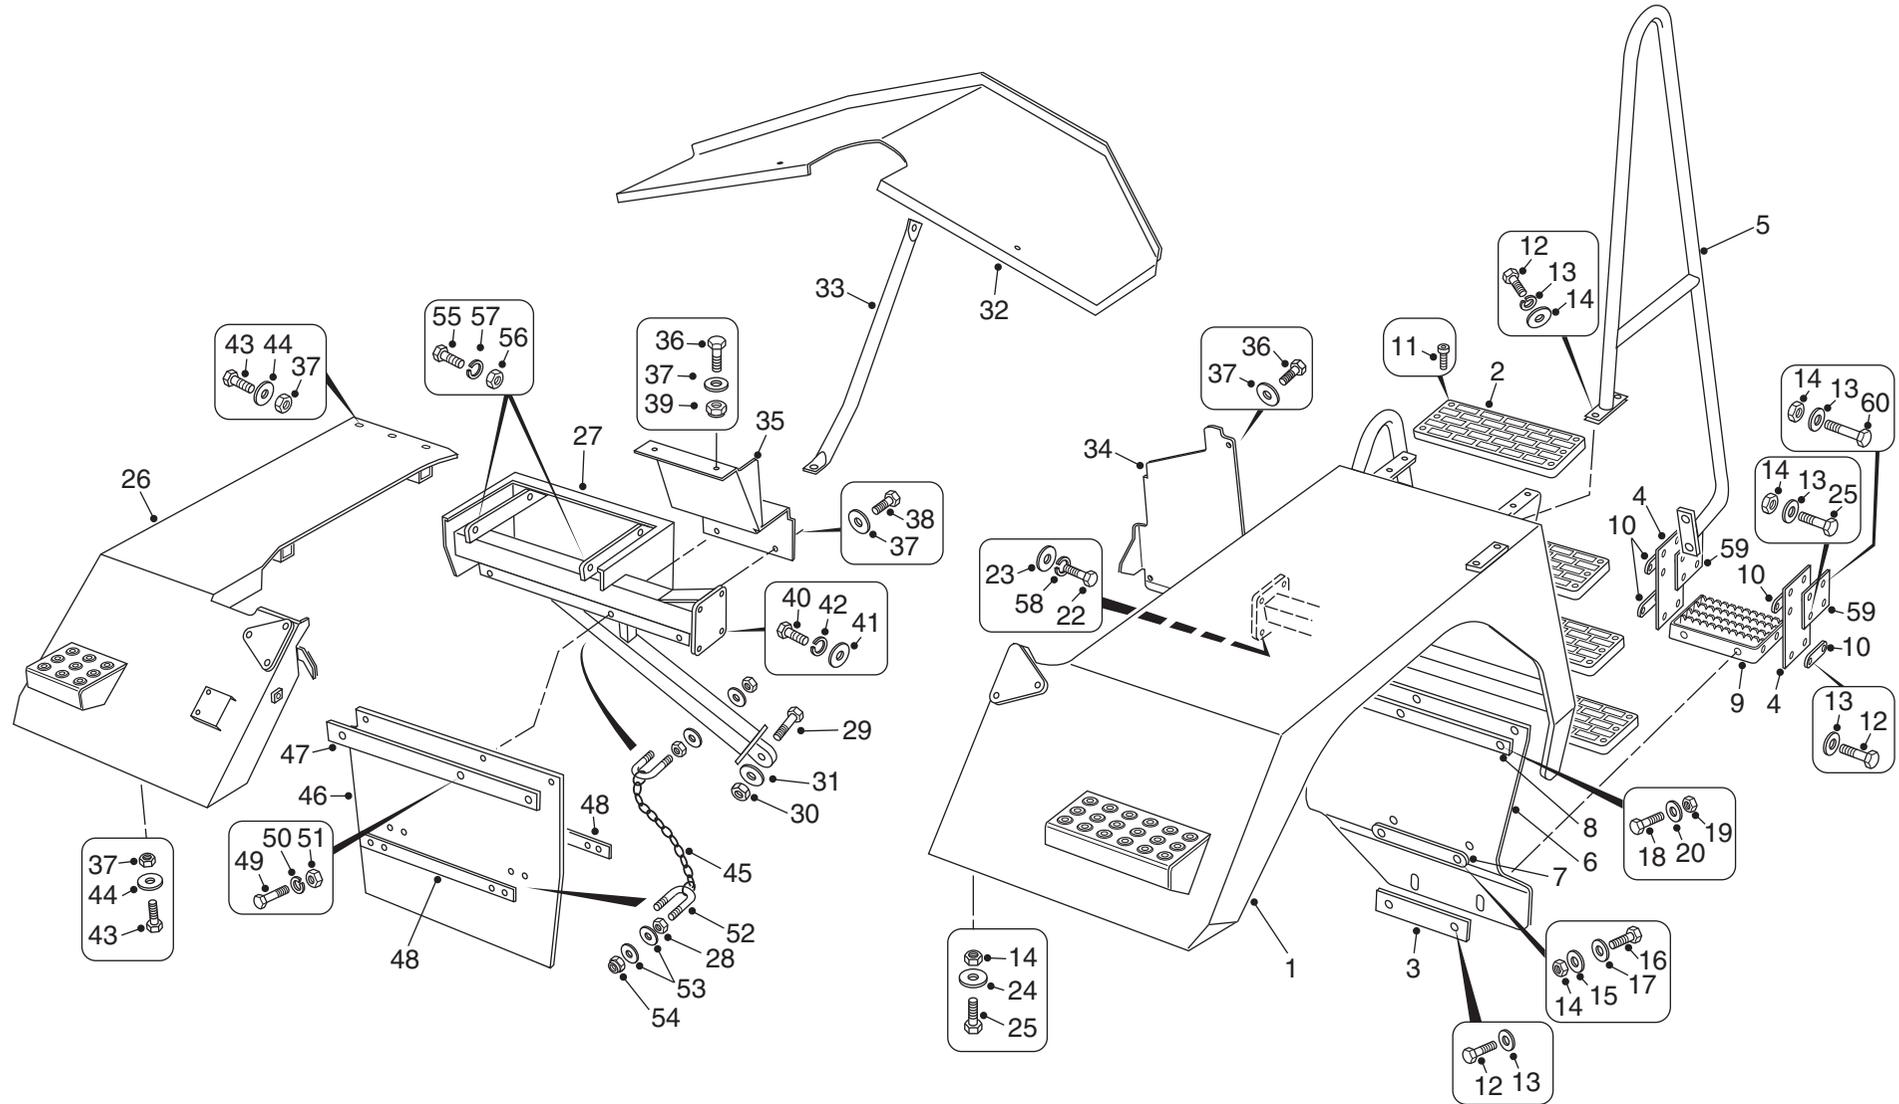

100-0070-8901 FENDERS AND MOUNTING
FROM SERIAL NO. A8891230

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15354285	FENDER ASSY-LHS		
002	004		15320662	FOOTSTEP TREADPLATE		
003	001		15353465	PLATE-WASHER		
004	002		15354286	RUBBER STRAP		
005	001		15354287	HANDRAIL-OUTER LHS		
006	001		15354288	MUDFLAP FRONT-LH		
007	001		15318086	CLAMPING PLATE		
008	001		15311949	PLATE		
009	001		15353460	STEP		
010	004		15353464	WASHER-CLAMP		
011	016		15244817	SOCKET SCREW		
012	010		06351230	BOLT		
013	022		07151220	WASHER		
014	009		06471201	LOCKNUT		
015	002		07151220	WASHER		
016	002		15240002	BOLT		
017	002		15234758	WASHER		
018	003		06350830	BOLT		
019	003		06470801	NUT		
020	003		07150815	WASHER		
021	004		07161230	LOCKWASHER		
022	004		15311176	BOLT		
023	008		07151630	WASHER		
024	003		09267949	WASHER-HARDENED		
025	007		06351235	BOLT		
026	001		15354291	PLATFORM-RH		
027	001		15342566	SUPPORT ASSY		
028	008		06430801	NUT		
029	001		06372070	BOLT		
030	001		06432001	NUT		
031	001		09270005	WASHER-HARDENED		
032	001		15331048	SPILLGUARD		
033	001		15331050	BRACE-SPILLGUARD		
034	001		15332592	INFILL PANEL LHS		
035	001		15332595	INFILL PANEL RHS		
036	005		00179839	BOLT		
037	009		00106263	WASHER		
038	002		00179837	BOLT		
039	002		00274208	LOCKNUT		
040	004		15311176	BOLT		



100-0070-8901 FENDERS AND MOUNTING
FROM SERIAL NO. A8891230

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	004		07151630	WASHER		
042	004		07161630	LOCKWASHER		
043	006		06351235	BOLT		
044	012		09267949	WASHER-HARDENED		
045	002		15342569	CHAIN-MUDFLAP STAY		
046	001		15342570	MUDFLAP FRONT RHS		
047	001		15318829	PLATE		
048	002		15316708	CLAMP PLATE		
049	003		00179820	BOLT		
050	003		00103320	LOCKWASHER		
051	003		00102634	NUT		
052	004		15317030	U-BOLT		
053	008		07150815	WASHER		
054	008		06470801	NUT		
055	004		06442040	SETSCREW		
056	004		06472001	NUT		
057	004		07162030	LOCKWASHER		
058	004		07161630	LOCKWASHER		
059	002		15358268	PLATE		
060	004		06351240	BOLT		

100-0135-8901 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8891011

DRAWING NO. P11039

P11039

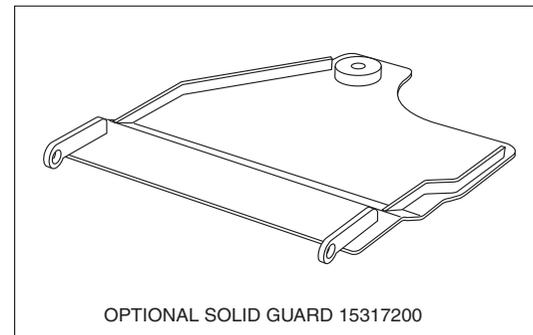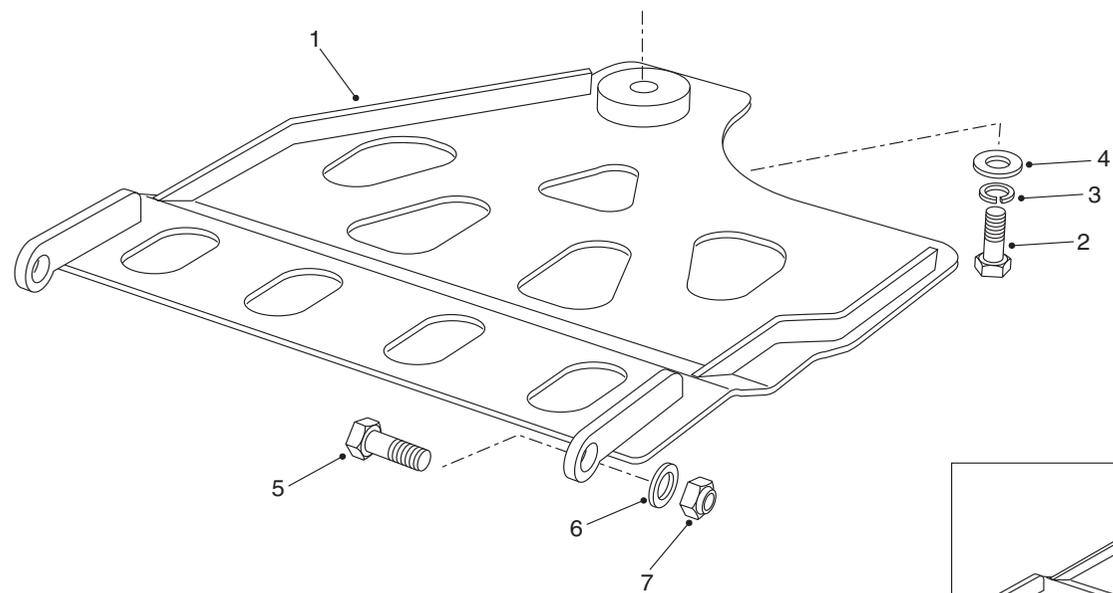

100-0135-8901 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8891011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15313507	GUARD-TRANS SUMP		
002	001		06351665	BOLT		
003	001		07161630	LOCKWASHER		
004	001		09191596	WASHER		
005	002		06351670	BOLT NSS		
006	002		07151630	WASHER		
007	002		06471601	LOCKNUT		

THIS PAGE IS INTENTIONALLY LEFT BLANK

CUMMINS ENGINE

THIS UNIT IS EQUIPPED WITH A CUMMINS DIESEL ENGINE.

TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.

A SEPARATE CUMMINS ENGINE PARTS BOOK IS SUPPLIED WITH NEW UNITS FOR ENGINE PARTS COVERAGE.


ANY ADDITIONAL REQUESTS FOR THIS CUMMINS ENGINE PARTS BOOK OR ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

R1 11/08 (ECN 109083)


110-0030-8901 ENGINE AND MOUNTING
FROM SERIAL NO. A8891011

DRAWING NO. P11506A

P11506

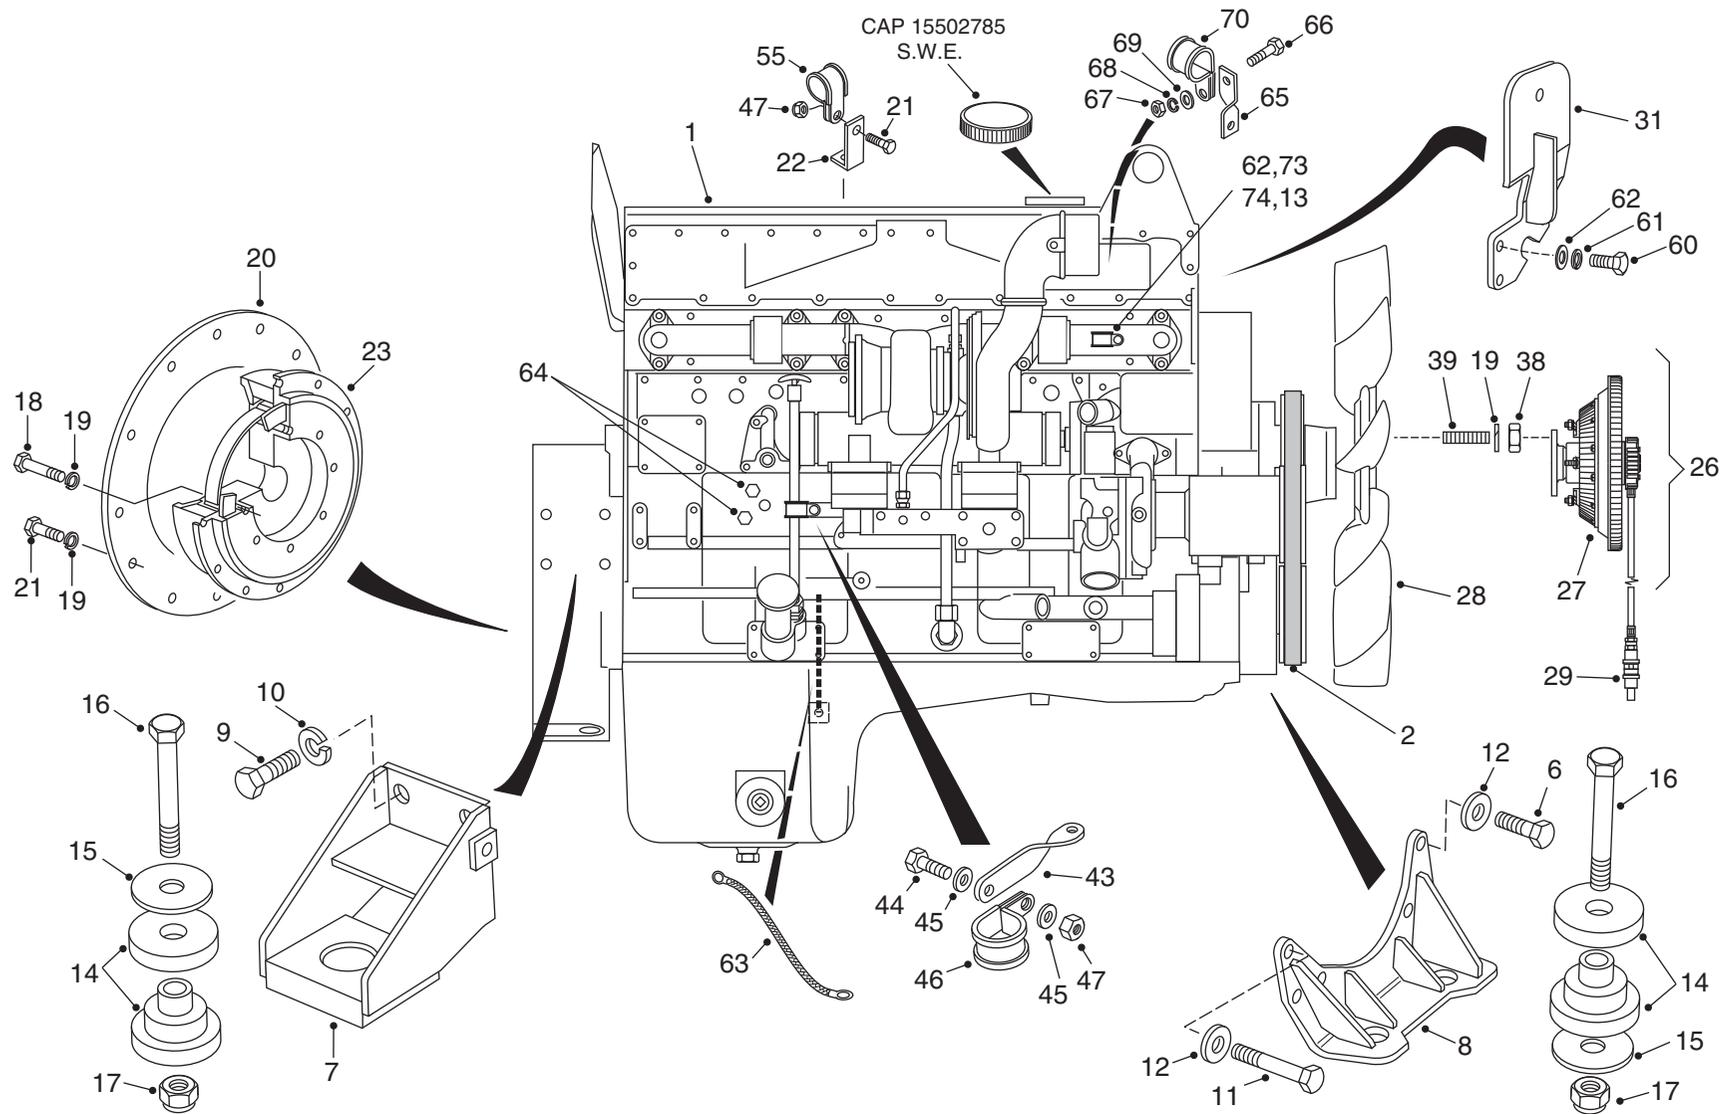

P11506

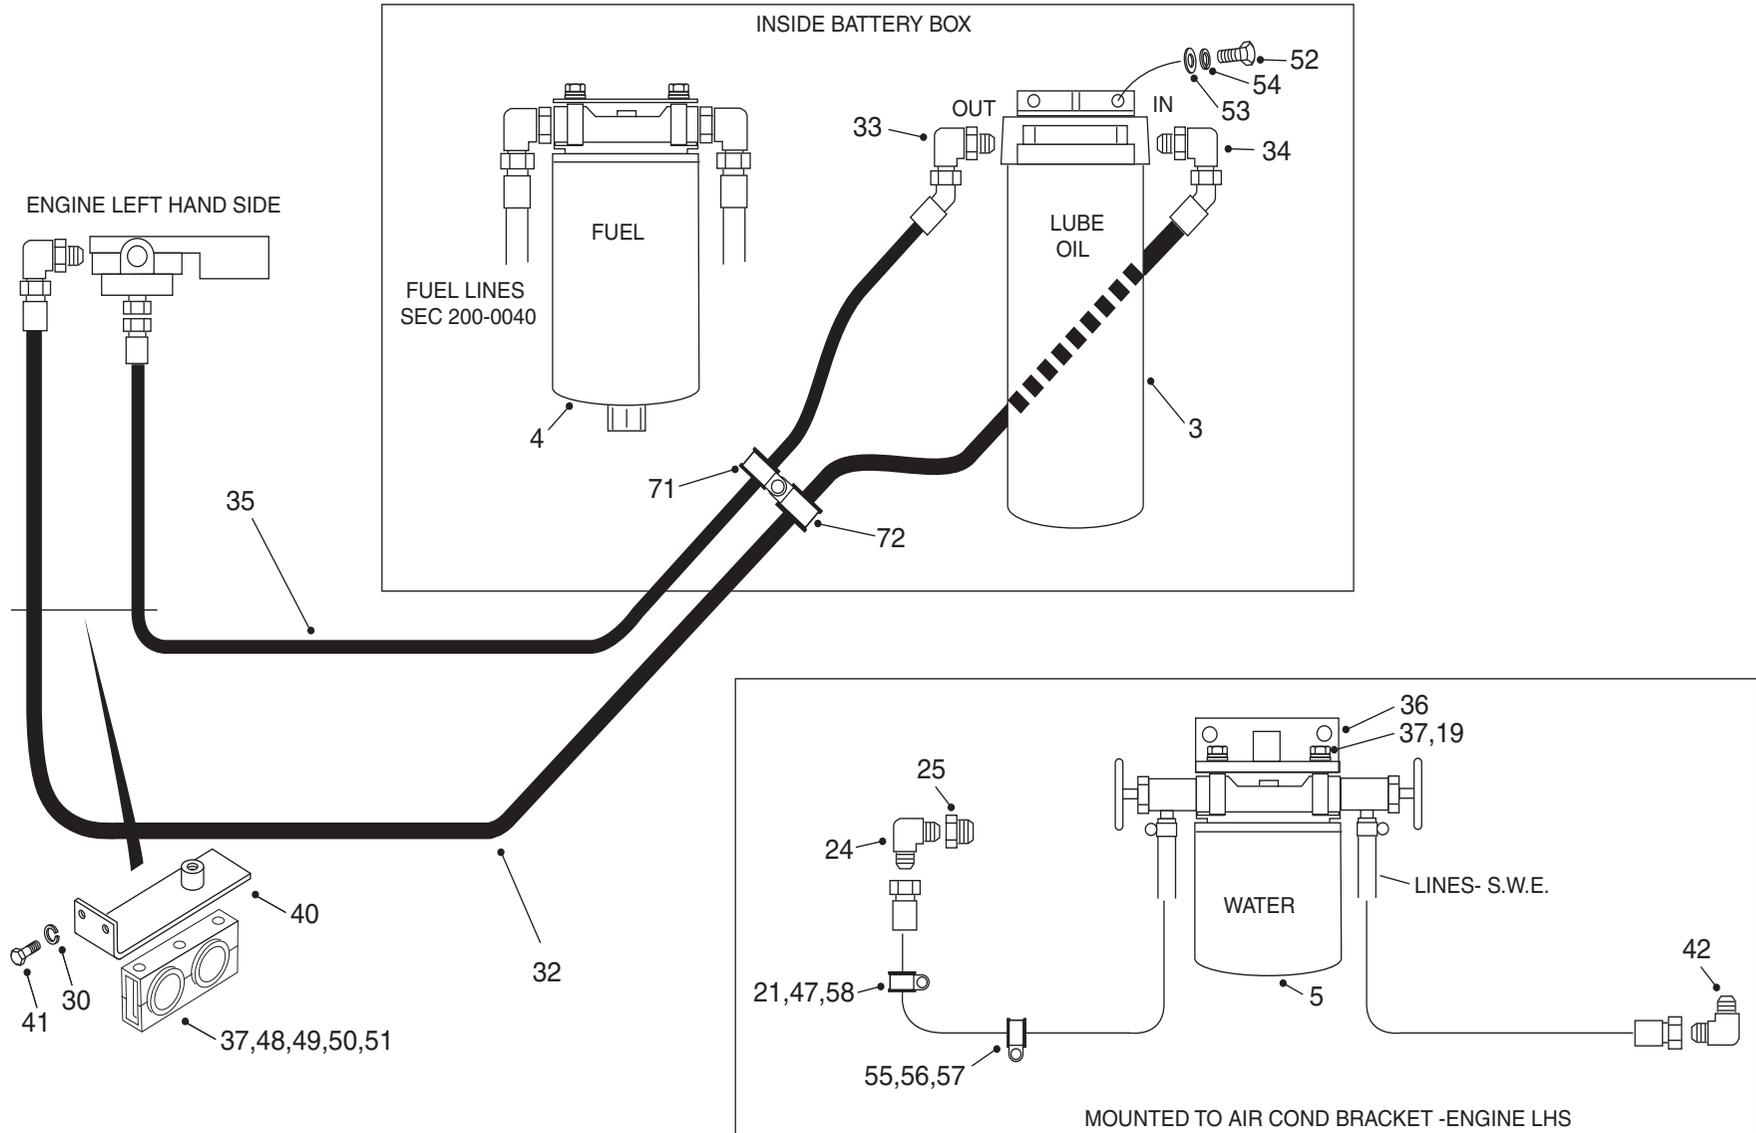

THIS PAGE IS INTENTIONALLY LEFT BLANK

Product: 2006 TEREX TA27 G7 Articulated Truck Workshop Parts Manual[PN15503097]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta27-g7-a>


[rticulated-truck-workshop-parts-manualpn15503097/](https://www.arepairmanual.com/downloads/2006-terex-ta27-g7-a-articulated-truck-workshop-parts-manualpn15503097/)

110-0050-8901 AIR CLEANER

FROM SERIAL NO. A8891011

DRAWING NO. P11006

P11006

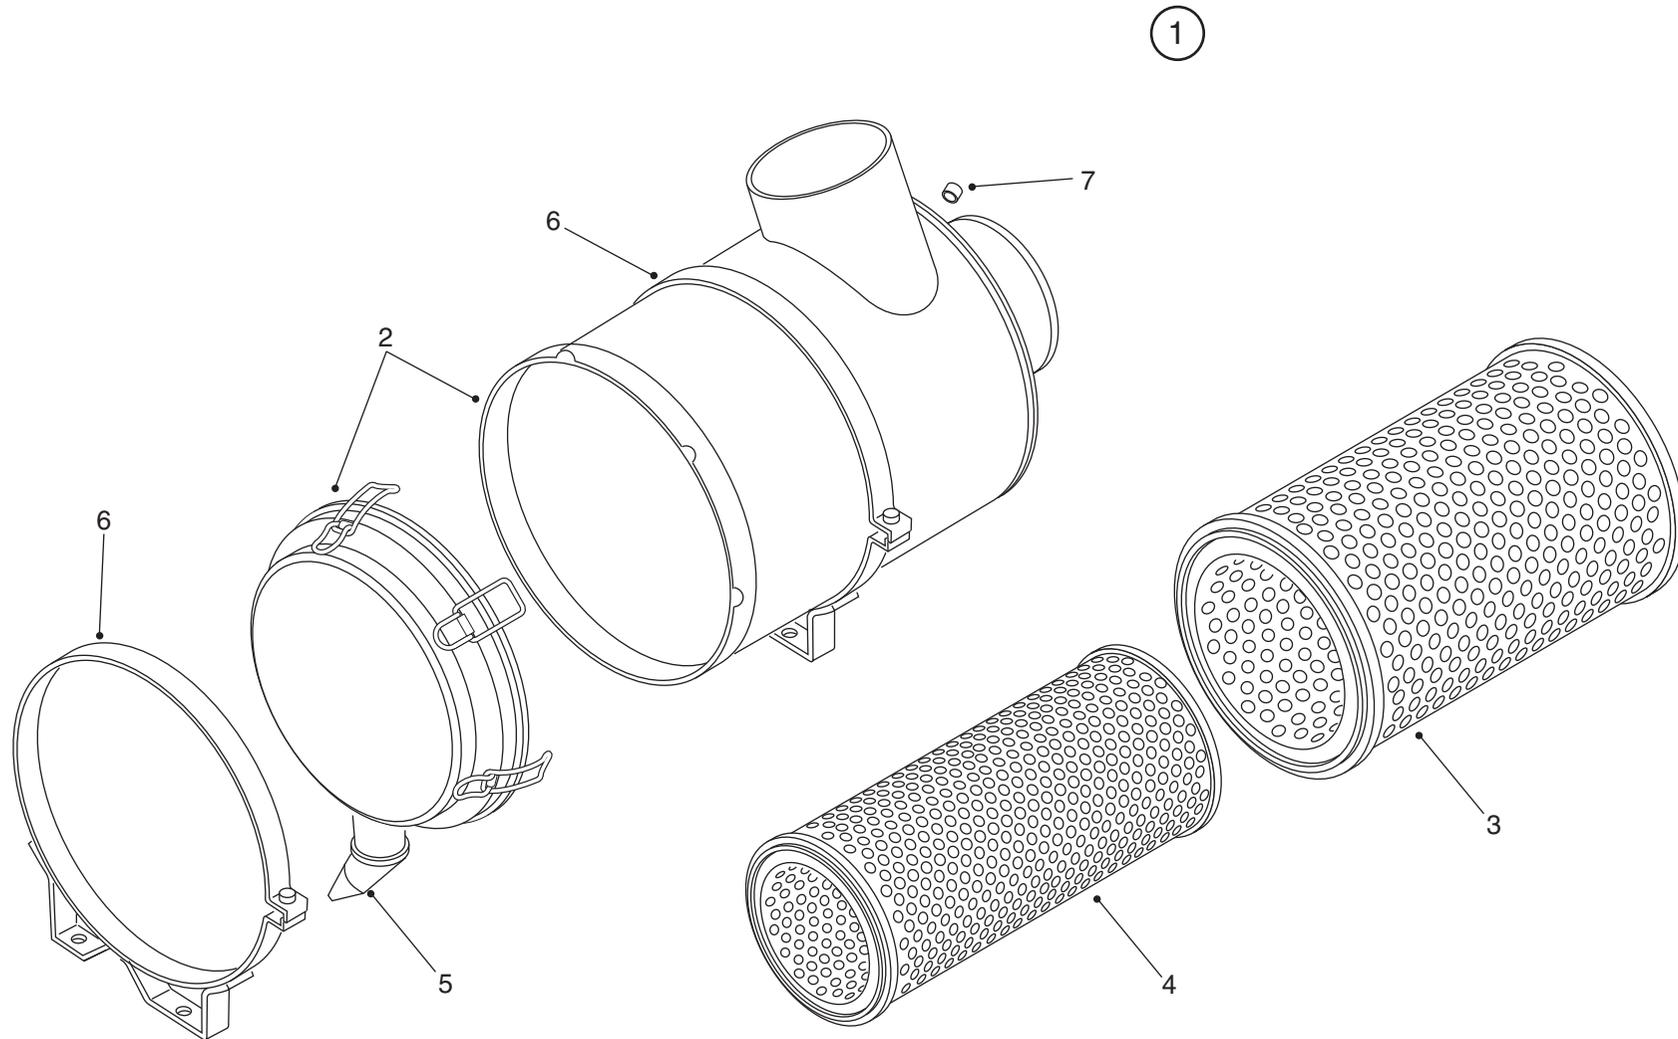

Sample of manual. Download All 518 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta27-g7-articulated-truck-workshop-parts-manualpn15503097/>