

Product: 2006 TEREX TA30 G7 Articulated Truck Workshop Parts Manual[PN15503052]

Full Download: [https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-a](https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-articulated-truck-workshop-parts-manualpn15503052/)

[rticulated-truck-workshop-parts-manualpn15503052/](https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-articulated-truck-workshop-parts-manualpn15503052/)



TEREX

Publication Part Number: **15503052**

PARTS BOOK

CLICK HERE FOR
TRACTOR
TABLE OF CONTENTS


CLICK HERE FOR
TRACTOR OPTIONAL
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER OPTIONAL
TABLE OF CONTENTS

CLICK HERE
TO RETURN TO MAIN
LIBRARY INDEX

P11065

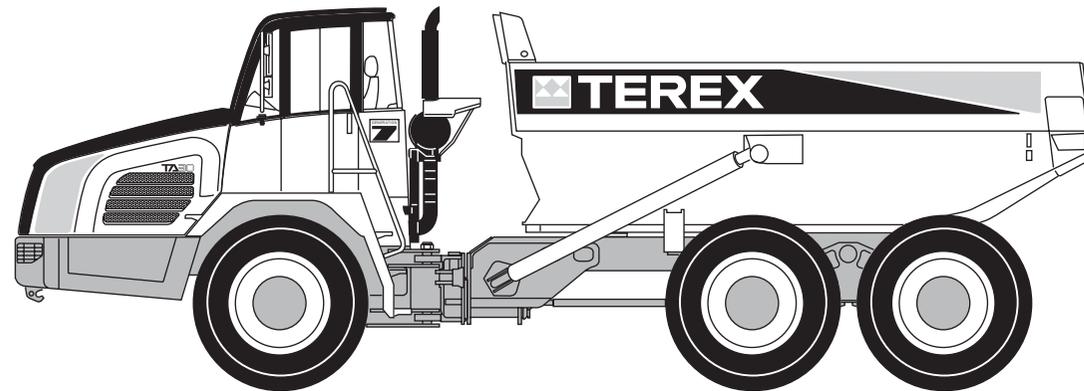

TA30 G7 Articulated Truck

(Cum QSM11 T3-350 HP Engine, ZF 6WG-310 Trans & NAF Axles)

Serial Nos. A8941011 through A8941753

Date: June 2006

Sample of manual. Download All 528 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-articulated-truck-workshop-parts-manualpn15503052/>

Revised: 1st December 2009

Product: 2006 TEREX TA30 G7 Articulated Truck Workshop Parts Manual[PN15503052]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-a>

[rticulated-truck-workshop-parts-manualpn15503052/](https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-articulated-truck-workshop-parts-manualpn15503052/)

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 528 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-articulated-truck-workshop-parts-manualpn15503052/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.



INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
2 9058512 . Shaft
3 9024169 . Ring
4 9058132 . Control Assy.
5 9058135 . . Spring
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

| | | | | | |
|----------------|----------------------------|-----------|-----------------|-------------|---------------------|
| Amps | Amperes | Hsg | Housing | N.I | Not Illustrated |
| As R | As Required | I.D | Inside Diameter | N.L.A | No Longer Available |
| Assy | Assembly | L.H | Left Hand | N.S.S | Not Sold Separately |
| Brkt | Bracket | L.W | Lockwasher | O.D | Outside Diameter |
| Cad-Pltd | Cadium Plated | Lg | Long | Pr | Pair |
| Comm | Commencement of production | Lkg | Linkage | P.T.O | Power-Take-Off |
| E.S.N | Elastic Stop Nut | Mtg | Mounting | R.H | Right Hand |
| Ftgs | Fittings | N.C | Note Code | Std | Standard |



Articulated Truck



TRACTOR SECTIONS



CHASSIS

100



ENGINE

110



TRANSMISSION

120



DRIVELINE

130



FRONT AXLE

140



SUSPENSION SYSTEM

180



ELECTRICAL SYSTEM

190



FUEL SYSTEM

200



COOLING SYSTEM

210



MAIN HYDRAULIC VALVE

215



STEERING SYSTEM

220



BODY HOIST SYSTEM

230



BRAKING SYSTEM

250



CAB

260



DECALS

290



MISCELLANEOUS

300



TABLE OF CONTENTS FOR MODEL TA30 T3 TRACTOR

FROM SERIAL NO A8941011

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|------------------------------|-------------------------------|--------------------------|
| <u>SECTION 100</u> | <u>CHASSIS</u> | | |
| 100-0010-8951 | CHASSIS | | |
| 100-0030-8951 | SOUND INSULATION | | R2 11/08 |
| 100-0040-8951 | HOOD AND MOUNTING | | R3 06/08 |
| 100-0070-8951 | FENDERS AND MOUNTING | A8941011 TO A8941037 | |
| 100-0070-8951 | FENDERS AND MOUNTING | A8941038 | R1 09/07 |
| 100-0135-8951 | ROCK AND SUMP GUARDS | | |
| <u>SECTION 110</u> | <u>ENGINE</u> | | |
| 110-0020-8951 | ENGINE ORDERING INSTRUCTIONS | | |
| 110-0030-8951 | ENGINE AND MOUNTING | | |
| 110-0050-8951 | AIR CLEANER | | |
| 110-0060-8951 | AIR CLEANER PIPES AND HOSES | | R1 06/07 |
| 110-0070-8951 | EXHAUST AND MOUNTING | | R3 06/08 |
| <u>SECTION 120</u> | <u>TRANSMISSION</u> | | |
| 120-0010-8951 | TRANSMISSION MOUNTING | | R1 10/07 |
| 120-0020-8951 | TRANSMISSION BREAKDOWN | | |
| 120-0070-8951 | SHIFT CONTROL | | R1 10/06 |
| 120-0100-8951 | FILTER | | |
| 120-0110-8951 | OIL LINES-TRANSMISSION | | R3 09/09 |
| 120-0220-8951 | OIL PUMP | | |
| 120-0390-8951 | TORQUE CONVERTER | | |
| 120-0400-8951 | LUBRICATION PIPES | | |
| 120-0410-8951 | INDUCTIVE TRANSMITTER | | |
| 120-0430-8951 | ELECTRIC SHIFT CONTROL VALVE | | |
| 120-0440-8951 | GEARSHIFT | | |
| 120-0450-8951 | GEARBOX HOUSING | | |
| 120-0460-8951 | CLUTCH ASSEMBLY KV+K1 | | |
| 120-0470-8951 | CLUTCH ASSEMBLY KR+K2 | | |
| 120-0480-8951 | CLUTCH ASSEMBLY K3+K4 | | |
| 120-0500-8951 | PTO MAIN HYDRAULIC PUMP | | |
| 120-0515-8951 | EMERGENCY STEERING PUMP | | |
| 120-0520-8951 | INPUT-DRIVE ASSEMBLY | | |
| 120-0530-8951 | LAYSHAFT GEARING | | |
| 120-0540-8951 | DIFFERENTIAL | | R1 12/09 |
| 120-0625-8951 | TEMPERATURE SENSOR | | |
| 120-0900-8951 | LOOSE PARTS-TRANSMISSION | | R1 10/06 |

TABLE OF CONTENTS FOR MODEL TA30 T3 TRACTOR

FROM SERIAL NO A8941011

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|---------------------------------|-------------------------------|--------------------------|
| <u>SECTION 130</u> | <u>DRIVELINE</u> | | |
| 130-0010-8951 | FRONT DRIVELINE | | |
| <u>SECTION 140</u> | <u>FRONT AXLE</u> | | |
| 140-0010-8951 | AXLE COMPLETE-FRONT | A8941011 TO A8941708 | |
| 140-0010-8951 | AXLE COMPLETE-FRONT | A8941709 TO A8941737 | 06/08 |
| 140-0010-8951 | AXLE COMPLETE-FRONT | A8941738 | 06/08 |
| 140-0020-8951 | AXLE GROUP-FRONT | A8941011 TO A8941708 | |
| 140-0020-8951 | AXLE GROUP-FRONT | A8941709 TO A8941737 | 06/08 |
| 140-0020-8951 | AXLE GROUP-FRONT | A8941738 | 06/08 |
| 140-0030-8951 | PLANETARY GEARING-FRONT | A8941011 TO A8941564 | R1 08/07 |
| 140-0030-8951 | PLANETARY GEARING-FRONT | A8941565 TO A8941708 | R1 08/07 |
| 140-0030-8951 | PLANETARY GEARING-FRONT | A8941709 TO A8941737 | 06/08 |
| 140-0030-8951 | PLANETARY GEARING-FRONT | A8941738 | 06/08 |
| 140-0040-8951 | WHEEL, RIM AND TYRE-FRONT | | R1 09/07 |
| 140-0060-8951 | DIFFERENTIAL-FRONT | A8941011 TO A8941708 | R1 02/08 |
| 140-0060-8951 | DIFFERENTIAL-FRONT | A8941709 TO 8941737 | 06/08 |
| 140-0060-8951 | DIFFERENTIAL-FRONT | A8941738 | 06/08 |
| 140-0100-8951 | DIFF-LOCK CONTROLS-FRONT | | R3 06/08 |
| <u>SECTION 180</u> | <u>SUSPENSION SYSTEM</u> | | |
| 180-0020-8951 | FRONT SUSPENSION | | R2 10/07 |
| <u>SECTION 190</u> | <u>ELECTRICAL SYSTEM</u> | | |
| 190-0010-8951 | TERMINALS | | |
| 190-0011-8951 | CONNECTORS | | |
| 190-0030-8951 | CABLES/HARNESSES-CAB | | |
| 190-0040-8951 | CABLES/HARNESSES-CHASS/ENG | | R2 08/08 |
| 190-0070-8951 | BATTERY AND CABLES | | |
| 190-0080-8951 | BATTERY MOUNTING | | R1 12/09 |
| 190-0085-8951 | ECU-HYD.SYSTEM MONITORING | | R1 10/06 |
| 190-0100-8951 | ELECTRICAL LIGHTING SYSTEM | | R1 10/06 |
| 190-0110-8951 | ALTERNATOR | | |
| 190-0120-8951 | STARTER | | |
| 190-0270-8951 | SWITCHES AND SENSORS | | |
| 190-0300-8951 | RADIO CASSETTE AND SPEAKERS | | |
| 190-0310-8951 | ELECTRICAL HORN | | |

TABLE OF CONTENTS FOR MODEL TA30 T3 TRACTOR

FROM SERIAL NO A8941011

REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|------------------------------------|-------------------------------|--------------------------|
| <u>SECTION 200</u> | | | |
| | <u>FUEL SYSTEM</u> | | |
| 200-0010-8951 | FUEL TANK AND MOUNTING | | |
| 200-0040-8951 | FUEL LINES | | |
| 200-0050-8951 | ACCELERATOR LINKAGE | | R1 06/08 |
| <u>SECTION 210</u> | | | |
| | <u>COOLING SYSTEM</u> | | |
| 210-0010-8951 | RADIATOR ASSEMBLY | A8941011 TO A8941602 | |
| 210-0010-8951 | RADIATOR ASSEMBLY | A8941603 | 08/07 |
| 210-0020-8951 | RADIATOR MOUNTING | | |
| 210-0030-8951 | RADIATOR PIPING | | |
| 210-0035-8951 | CHARGE AIR COOLER & PIPING | | R1 08/08 |
| 210-0040-8951 | RADIATOR HEADER TANK & HOSES | | R1 08/08 |
| 210-0060-8951 | OIL COOLER AND PIPING-TRANS | A8941011 TO A8941017 | |
| 210-0060-8951 | OIL COOLER AND PIPING-TRANS | A8941018 | R1 06/07 |
| 210-0061-8951 | TRANS OIL COOLER MOUNTING | | |
| 210-0065-8951 | OIL COOLER-TRANSMISSION | | R3 09/09 |
| <u>SECTION 215</u> | | | |
| | <u>MAIN HYDRAULIC VALVE</u> | | |
| 215-0050-8951 | MAIN HYDRAULIC VALVE ASSEMBLY | | |
| <u>SECTION 220</u> | | | |
| | <u>STEERING SYSTEM</u> | | |
| 220-0010-8951 | STEERING LINES | | R2 06/08 |
| 220-0090-8951 | STEERING VALVE | | |
| 220-0120-8951 | STEERING CYLINDER | A8941011 TO A8941167 | |
| 220-0120-8951 | STEERING CYLINDER | A8941168 | 10/06 |
| 220-0230-8951 | STEERING COLUMN MOUNTING | | |
| <u>SECTION 230</u> | | | |
| | <u>BODY HOIST SYSTEM</u> | | |
| 230-0020-8951 | LINES AND FITTINGS-BODY HOIST | | |
| 230-0040-8951 | TANK AND MOUNTING-BODY HOIST | | R1 08/08 |
| 230-0050-8951 | PUMP-BODY HOIST | | |
| 230-0081-8951 | JOYSTICK-BODY CONTROL | | |
| <u>SECTION 250</u> | | | |
| | <u>BRAKING SYSTEM</u> | | |
| 250-0020-8951 | BRAKE LINES-HYDRAULIC | A8941011 TO A8941635 | R1 10/06 |
| 250-0020-8951 | BRAKE LINES-HYDRAULIC | A8941636 | 09/07 |
| 250-0060-8951 | BRAKE ACCUMULATOR | | |
| 250-0070-8951 | TREADLE VALVE | | R2 01/08 |

TABLE OF CONTENTS FOR MODEL TA30 T3 TRACTOR

FROM SERIAL NO A8941011


REVISED 12/09

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|--------------------------------|------------------------|-------------------|
| <u>SECTION 260</u> | | | |
| | <u>CAB</u> | | |
| 260-0010-8951 | CAB ASSEMBLY | | R3 01/09 |
| 260-0015-8951 | CAB MOUNTING | A8941011 TO A8941758 | R1 08/07 |
| 260-0015-8951 | CAB MOUNTING | A8941759 | 06/08 |
| 260-0018-8951 | CAB TILT MECHANISM | | R1 01/09 |
| 260-0030-8951 | CAB DOOR-LEFT HAND | | R1 09/07 |
| 260-0080-8951 | SWITCHES AND INSTRUMENTS | | R4 04/09 |
| 260-0090-8951 | SEAT-DRIVER | A8941011 TO A8941594 | R1 11/08 |
| 260-0090-8951 | SEAT-DRIVER | A8941595 | R1 03/09 |
| 260-0110-8951 | SEAT-INSTRUCTOR | | R1 06/07 |
| 260-0130-8951 | AIR CONDITIONER/HEATER | | |
| 260-0140-8951 | HEATER LINES AND WIRING | | |
| 260-0145-8951 | AIR CONDITIONER LINES | A8941011 TO A8941602 | |
| 260-0145-8951 | AIR CONDITIONER LINES | A8941603 | 08/07 |
| 260-0190-8951 | WINDSCREEN WASHER | | |
| <u>SECTION 290</u> | | | |
| | <u>DECALS</u> | | |
| 290-0010-8951 | DECALS-ENGLISH | A8941011 TO A8941258 | |
| 290-0010-8951 | DECALS-ENGLISH (ISO) | A8941259 | R2 04/09 |
| 290-0011-8951 | DECALS-ENGLISH (ANSI) | A8941259 | R2 04/09 |
| 290-0100-8951 | WALKWAY SURFACES (ANTI-SLIP) | | 06/07 |
| <u>SECTION 300</u> | | | |
| | <u>MISCELLANEOUS</u> | | |
| 300-0040-8951 | MULTI-TUBE CLAMPS AND HARDWARE | | |
| 300-0045-8951 | POLYPROPELENE CLAMPS | | |
| 300-0200-8951 | FILTERS AND ELEMENT KITS | | 11/08 |

100-0010-8951 CHASSIS
FROM SERIAL NO. A8941011

DRAWING NO. P11004

P11004

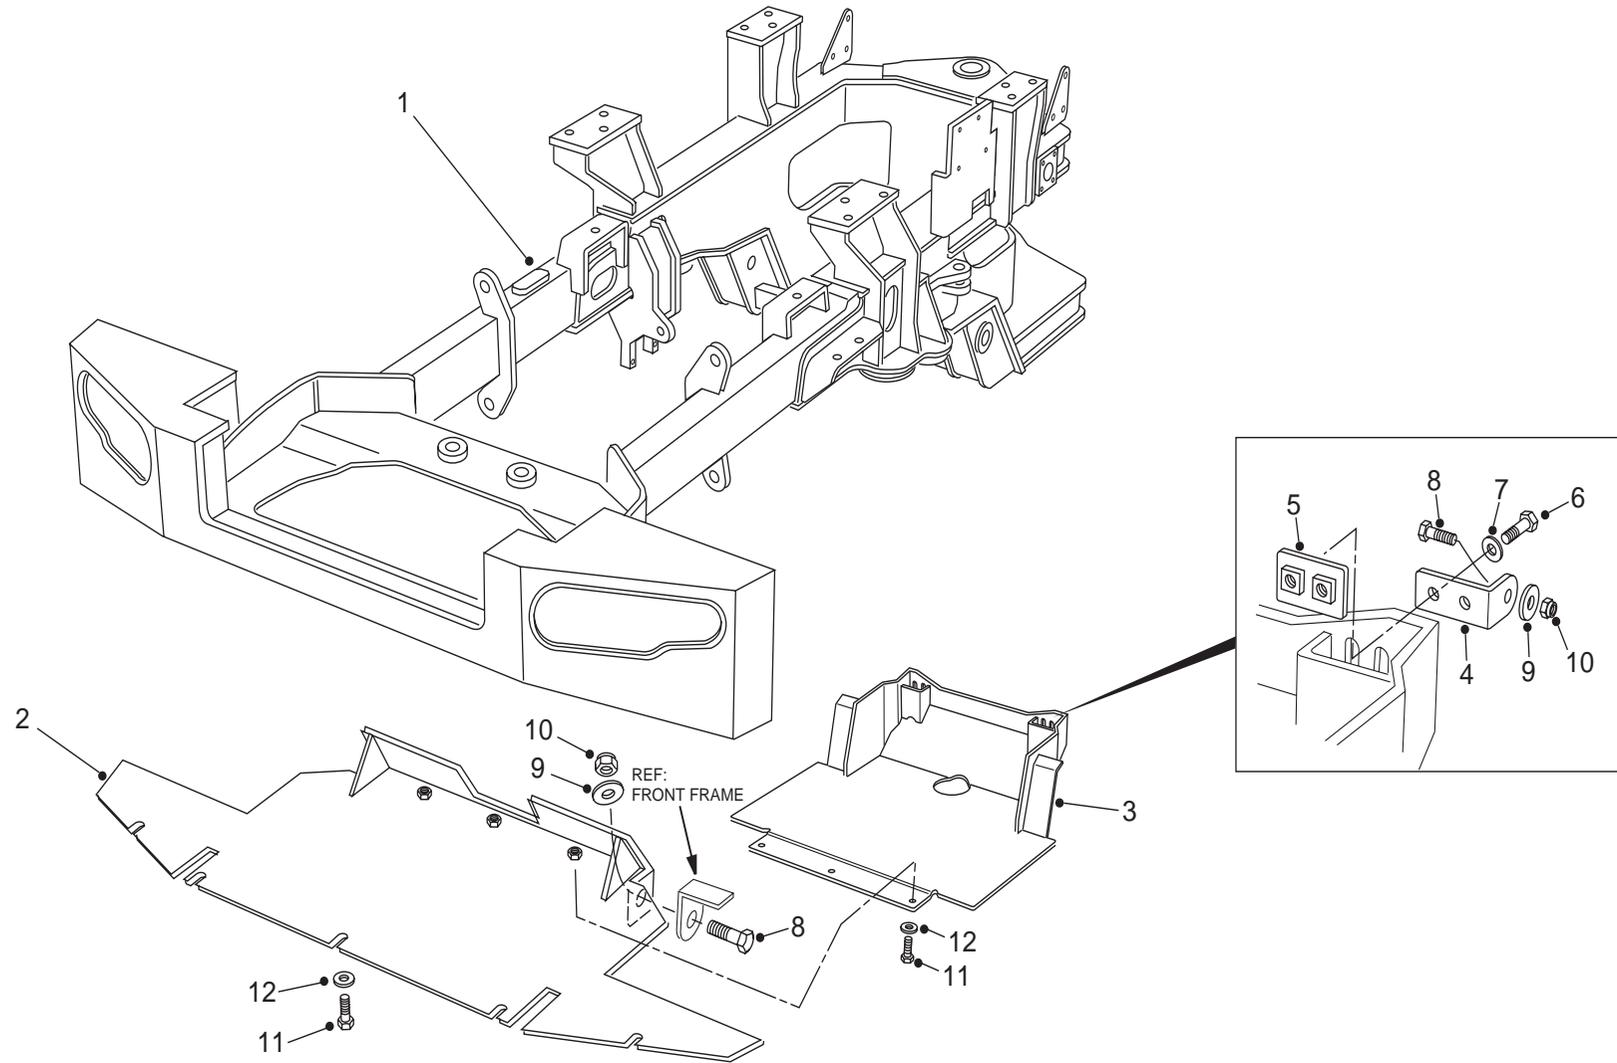

100-0010-8951 CHASSIS
FROM SERIAL NO. A8941011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------|-----------------|---------------|
| 001 | 001 | | 15331825 | FRAME ASSY-COMLETE | | |
| 002 | 001 | | 15314756 | GUARD ASSY-CHASSIS | | |
| 003 | 001 | | 15317222 | GUARD ASSY-SUMP | | |
| 004 | 002 | | 15314724 | BRACKET-HINGE | | |
| 005 | 002 | | 15314726 | CLAMP PLATE | | |
| 006 | 004 | | 06351655 | BOLT | | |
| 007 | 004 | | 09191596 | WASHER | | |
| 008 | 004 | | 06351670 | BOLT | | |
| 009 | 004 | | 07151630 | WASHER | | |
| 010 | 004 | | 06471601 | LOCKNUT | | |
| 011 | 008 | | 06351235 | BOLT | | |
| 012 | 008 | | 09217321 | WASHER | | |

100-0030-8951 SOUND INSULATION
 FROM SERIAL NO. A8941011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|----|-----|-----|----------|-------------|-----------------------|-------------------|
| | | 001 | 001 | 15323970 | QUILT-WHEEL ARCH-RH | A8941011 A8941716 |
| | | 001 | 001 | 15339245 | COVER-WHEEL ARCH-RH | A8941717 |
| A | | 002 | 001 | 15323971 | QUILT-WHEEL ARCH-LH | A8941011 A8941716 |
| A | | 002 | 001 | 15339237 | COVER-WHEEL ARCH-LH | A8941717 |
| | | 003 | 015 | 06351230 | BOLT | |
| | | 004 | 015 | 15234758 | WASHER | |
| | | 005 | 001 | 15316801 | QUILT-SUMP GUARD FT | A8941011 A8941716 |
| | | 005 | 001 | 15339901 | COVER-SUMP GUARD FT | A8941717 |
| | | 006 | 001 | 15317825 | QUILT-SUMP GUARD REAR | A8941011 A8941716 |
| | | 006 | 001 | 15339909 | COVER-SUMP GUARD REAR | A8941717 |
| | | 007 | ASR | 09079599 | ADHESIVE | |
| | | 008 | 001 | 15334034 | PLATE-QUILT MTG | |
| | | 009 | 003 | 06351225 | BOLT | |
| | | 010 | 003 | 07161230 | LOCKWASHER | |
| | | 011 | 003 | 07151220 | WASHER | |


NOTE:A FOR UNITS FITTED WITH HI-INFLATION (WIDE) TYRES,
 REFER TO OPTIONAL SECTION 100-0030

R3 06/08 (SER CORR, ECN 108610, ECN 109321)

100-0040-8951 HOOD AND MOUNTING
FROM SERIAL NO. A8941011

DRAWING NO. P11667

P11667

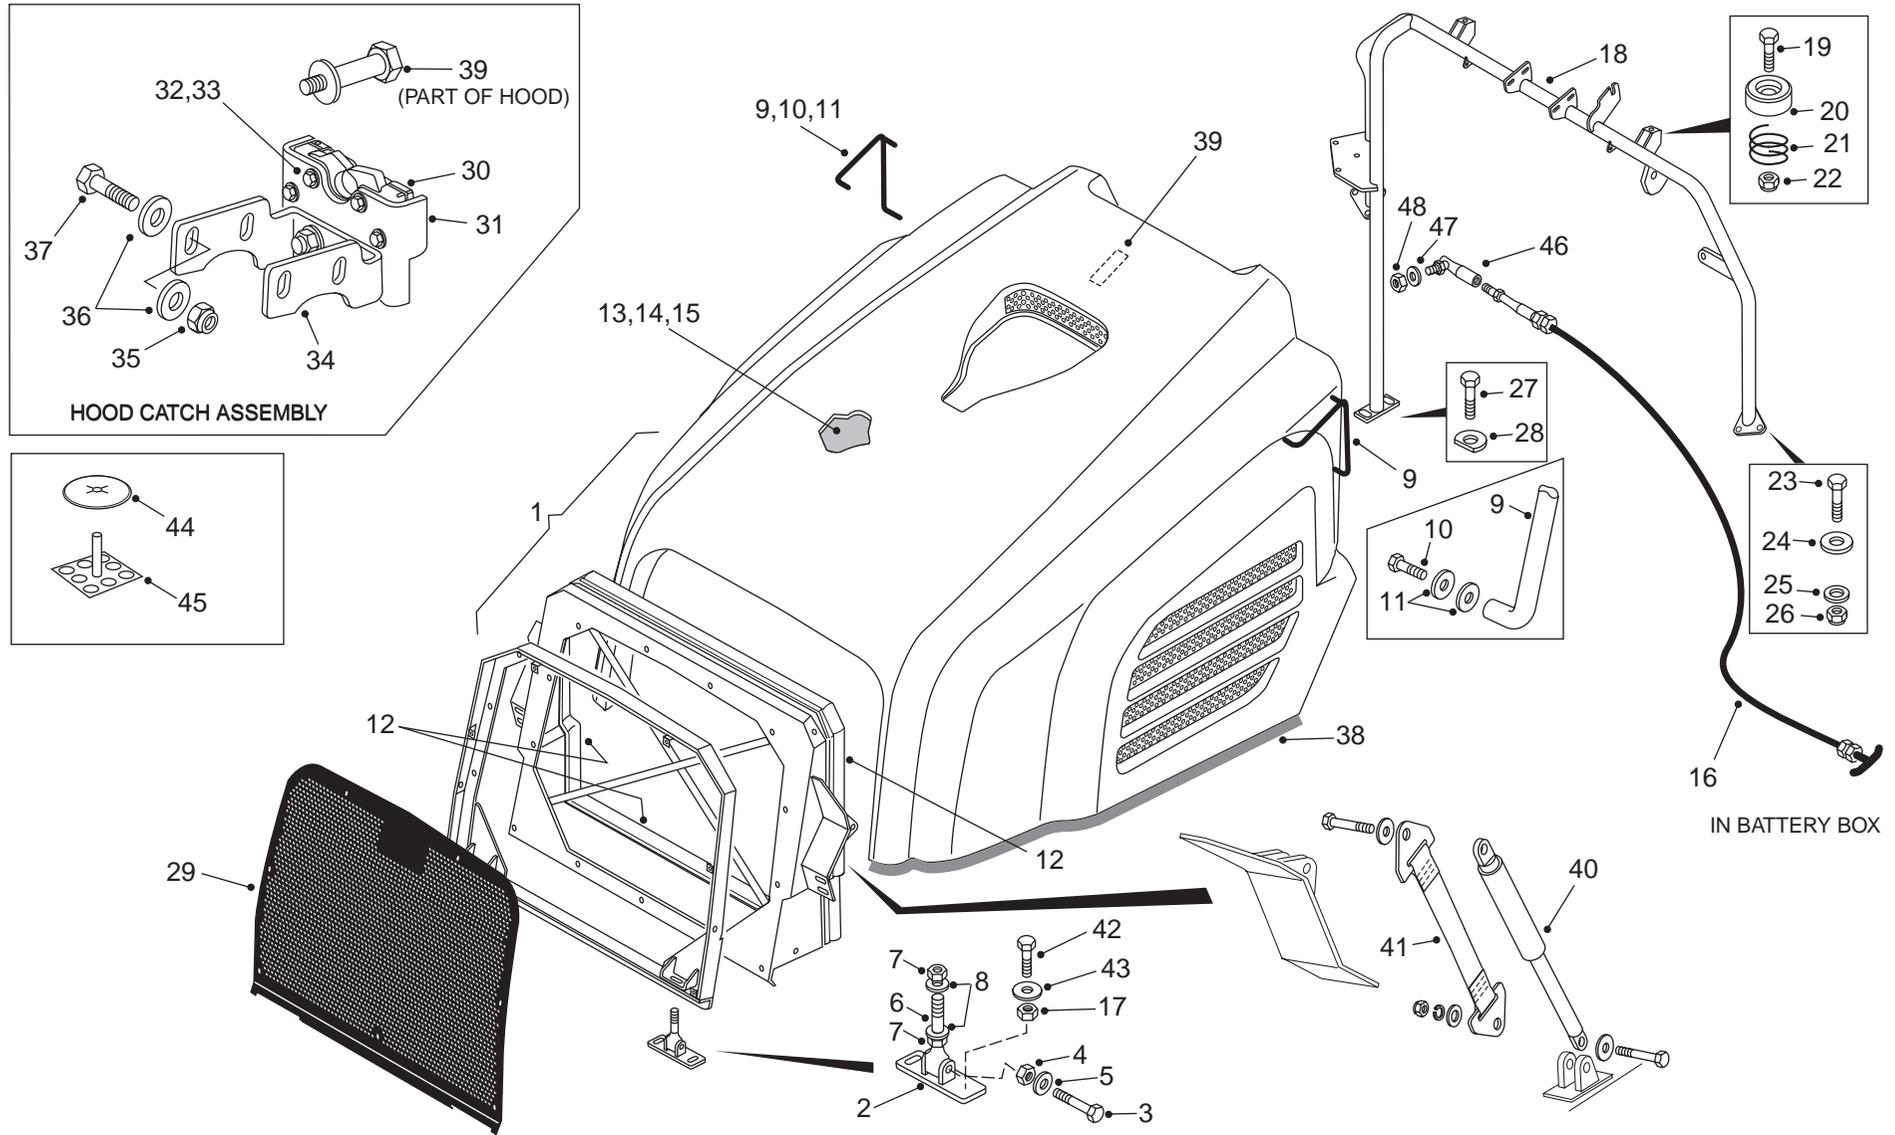

100-0040-8951 HOOD AND MOUNTING
FROM SERIAL NO. A8941011


100-0040-8951 HOOD AND MOUNTING
FROM SERIAL NO. A8941011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO | NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|-------------------|-----------------|---------------|-----|-----|-----|----------|----------------------|-----------------|---------------|
| 001 | 001 | | 15331377 | HOOD ASSY | A8941011 | A8941602 | 039 | 001 | | 15320831 | STRIKER BOLT | | |
| 001 | 001 | | 15337118 | HOOD ASSY | A8941603 | | 040 | 002 | | 15313446 | GAS STRUT | | |
| 002 | 002 | | 15313176 | .HINGE ASSY | | | 041 | 002 | | 15313472 | STRAP-HOOD RETAINING | | |
| 003 | 002 | | 06351675 | .BOLT | | | 042 | 004 | | 06351655 | BOLT | | |
| 004 | 002 | | 15252584 | .NUT | | | 043 | 004 | | 09191596 | WASHER | | |
| 005 | 002 | | 07151630 | .WASHER | | | 044 | ASR | | 15501136 | CAP | | |
| 006 | 002 | | 15313179 | .ROD-ADJUSTMENT | | | 045 | ASR | | 15503211 | STUD 25MM LG | | |
| 007 | 004 | | 06432001 | .NUT | | | 046 | 001 | | 15256961 | BALLJOINT | | |
| 008 | 004 | | 09250715 | .WASHER-HARDENED | | | 047 | 001 | | 00103319 | LOCKWASHER | | |
| 009 | 002 | | 15315116 | .HANDLE-HOOD | | | 048 | 001 | | 00103024 | LOCKNUT | | |
| 010 | 006 | | 15309253 | .BOLT | | | | | | | | | |
| 011 | 012 | | 15307237 | .WASHER | | | | | | | | | |
| 012 | ASR | | 15244364 | .SEAL-BULK | | | | | | | | | |
| 013 | 001 | | 15324159 | HOOD QUILT-LHS | | | | | | | | | |
| 014 | 001 | | 15324160 | HOOD QUILT-RHS | | | | | | | | | |
| 015 | 001 | | 15324161 | HOOD QUILT-TOP | | | | | | | | | |
| 016 | 001 | | 15314415 | CABLE-HOOD CATCH | | | | | | | | | |
| 017 | 004 | | 06471601 | LOCKNUT | | | | | | | | | |
| 018 | 001 | | 15332275 | GOALPOST WELDMENT | | | | | | | | | |
| 019 | 002 | | 00179828 | BOLT | | | | | | | | | |
| 020 | 002 | | 15307804 | STOP-HOOD | | | | | | | | | |
| 021 | 002 | | 05187308 | SPRING | | | | | | | | | |
| 022 | 002 | | 09414094 | LOCKNUT | | | | | | | | | |
| 023 | 006 | | 06351250 | BOLT | | | | | | | | | |
| 024 | 006 | | 09217321 | WASHER | | | | | | | | | |
| 025 | 006 | | 09267660 | WASHER | | | | | | | | | |
| 026 | 006 | | 06471201 | LOCKNUT | | | | | | | | | |
| 027 | 002 | | 06351230 | BOLT | | | | | | | | | |
| 028 | 002 | | 15309558 | WASHER-D SHAPE | | | | | | | | | |
| 029 | 001 | | 15313814 | GRILLE | | | | | | | | | |
| 030 | 001 | | 15320830 | HOOD CATCH | | | | | | | | | |
| 031 | 001 | | 15320980 | BRACKET ASSY | | | | | | | | | |
| 032 | 004 | | 06350630 | BOLT | | | | | | | | | |
| 033 | 004 | | 00147577 | WASHER | | | | | | | | | |
| 034 | 001 | | 15323699 | BRACKET | | | | | | | | | |
| 035 | 004 | | 06471201 | LOCKNUT | | | | | | | | | |
| 036 | 008 | | 00116060 | WASHER | | | | | | | | | |
| 037 | 004 | | 06351240 | BOLT | | | | | | | | | |
| 038 | ASR | | 15319946 | LIP SEAL | | | | | | | | | |

100-0070-8951 FENDERS AND MOUNTING
FROM SERIAL NO. A8941011 TO A8941037

DRAWING NO. P11540

P11540

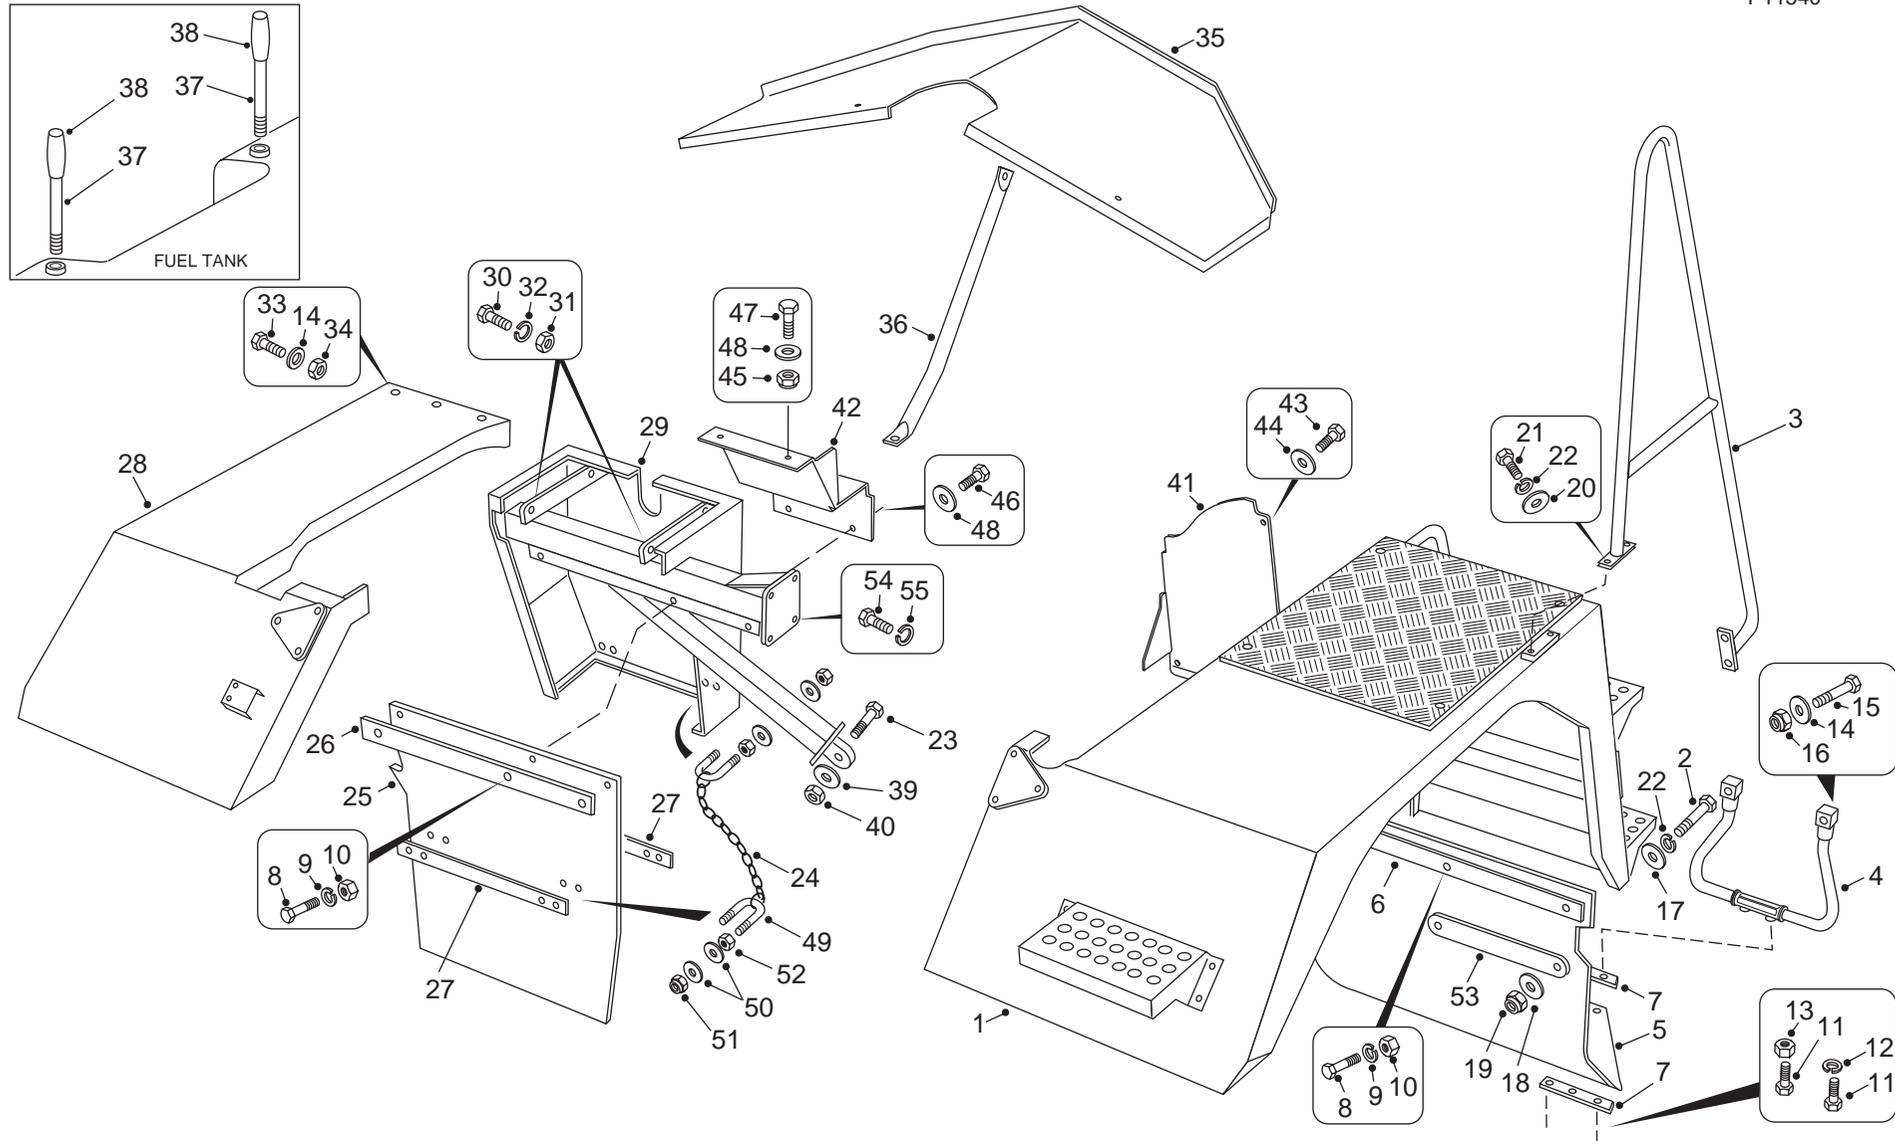

100-0070-8951 FENDERS AND MOUNTING
FROM SERIAL NO. A8941011 TO A8941037

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------|-----------------|---------------|
| 001 | 001 | | 15316871 | LH FENDER PLATFORM | | |
| 002 | 002 | | 15240002 | BOLT | | |
| 003 | 001 | | 15311946 | HANDRAIL | | |
| 004 | 002 | | 15311947 | STEP ASSY-WIRE | | |
| 005 | 002 | | 15318085 | MUDFLAP-FRONT LH | | |
| 006 | 002 | | 15311949 | PLATE | | |
| 007 | 004 | | 15303969 | STIFFENER-MUDFLAP | | |
| 008 | 006 | | 00179820 | BOLT | | |
| 009 | 006 | | 00103320 | LOCKWASHER | | |
| 010 | 006 | | 00102634 | NUT | | |
| 011 | 006 | | 06350825 | BOLT | | |
| 012 | 004 | | 07160830 | LOCKWASHER | | |
| 013 | 002 | | 06470801 | NUT | | |
| 014 | 008 | | 09267949 | WASHER-HARDENED | | |
| 015 | 004 | | 00179892 | BOLT | | |
| 016 | 004 | | 00274209 | LOCKNUT | | |
| 017 | 002 | | 07151220 | WASHER | | |
| 018 | 002 | | 15234758 | WASHER | | |
| 019 | 002 | | 06471201 | LOCKNUT | | |
| 020 | 004 | | 09267660 | WASHER | | |
| 021 | 004 | | 06351230 | BOLT | | |
| 022 | 002 | | 07161230 | LOCKWASHER | | |
| 023 | 001 | | 06372070 | BOLT | | |
| 024 | 002 | | 15317037 | CHAIN-MUDFLAP STAY | | |
| 025 | 001 | | 15318836 | MUDFLAP-FRONT RH | | |
| 026 | 001 | | 15318829 | PLATE | | |
| 027 | 002 | | 15316708 | CLAMP PLATE | | |
| 028 | 001 | | 15317173 | PLATFORM-RH | | |
| 029 | 001 | | 15318825 | SIDE STEP ASSY-RH | | |
| 030 | 004 | | 06442040 | SCREW SET | | |
| 031 | 004 | | 06472001 | NUT | | |
| 032 | 004 | | 07162030 | LOCKWASHER | | |
| 033 | 003 | | 06351240 | BOLT | | |
| 034 | 003 | | 06471201 | LOCKNUT | | |
| 035 | 001 | | 15331048 | SPILL GUARD | | |
| 036 | 001 | | 15331050 | BRACE-SPILL GUARD | | |
| 037 | 002 | | 15228110 | TUBE | | |
| 038 | 002 | | 09366021 | GRIP | | |
| 039 | 001 | | 09270005 | WASHER-HARDENED | | |
| 040 | 001 | | 06432001 | NUT | | |

100-0070-8951 FENDERS AND MOUNTING
FROM SERIAL NO. A8941011 TO A8941037


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|------------------------|-----------------|---------------|
| 041 | 001 | | 15316479 | PANEL-INFILL LH | | |
| 042 | 001 | | 15316656 | PANEL-INFILL RH | | |
| 043 | 003 | | 00179839 | BOLT | | |
| 044 | 003 | | 00106263 | WASHER | | |
| 045 | 002 | | 00274208 | LOCKNUT | | |
| 046 | 002 | | 00179837 | BOLT | | |
| 047 | 002 | | 00179839 | BOLT | | |
| 048 | 004 | | 00106263 | WASHER | | |
| 049 | 004 | | 15317030 | U-BOLT | | |
| 050 | 008 | | 07150815 | WASHER | | |
| 051 | 008 | | 06470801 | NUT | | |
| 052 | 008 | | 06430801 | NUT | | |
| 053 | 001 | | 15318086 | PLATE-MUDFLAP CLAMPING | | |
| 054 | 004 | | 15311176 | BOLT | | |
| 055 | 004 | | 07161630 | LOCKWASHER | | |

R1 09/07 (SER CORR)

100-0070-8951 FENDERS AND MOUNTING
FROM SERIAL NO. A8941038

DRAWING NO. P11921

P11921

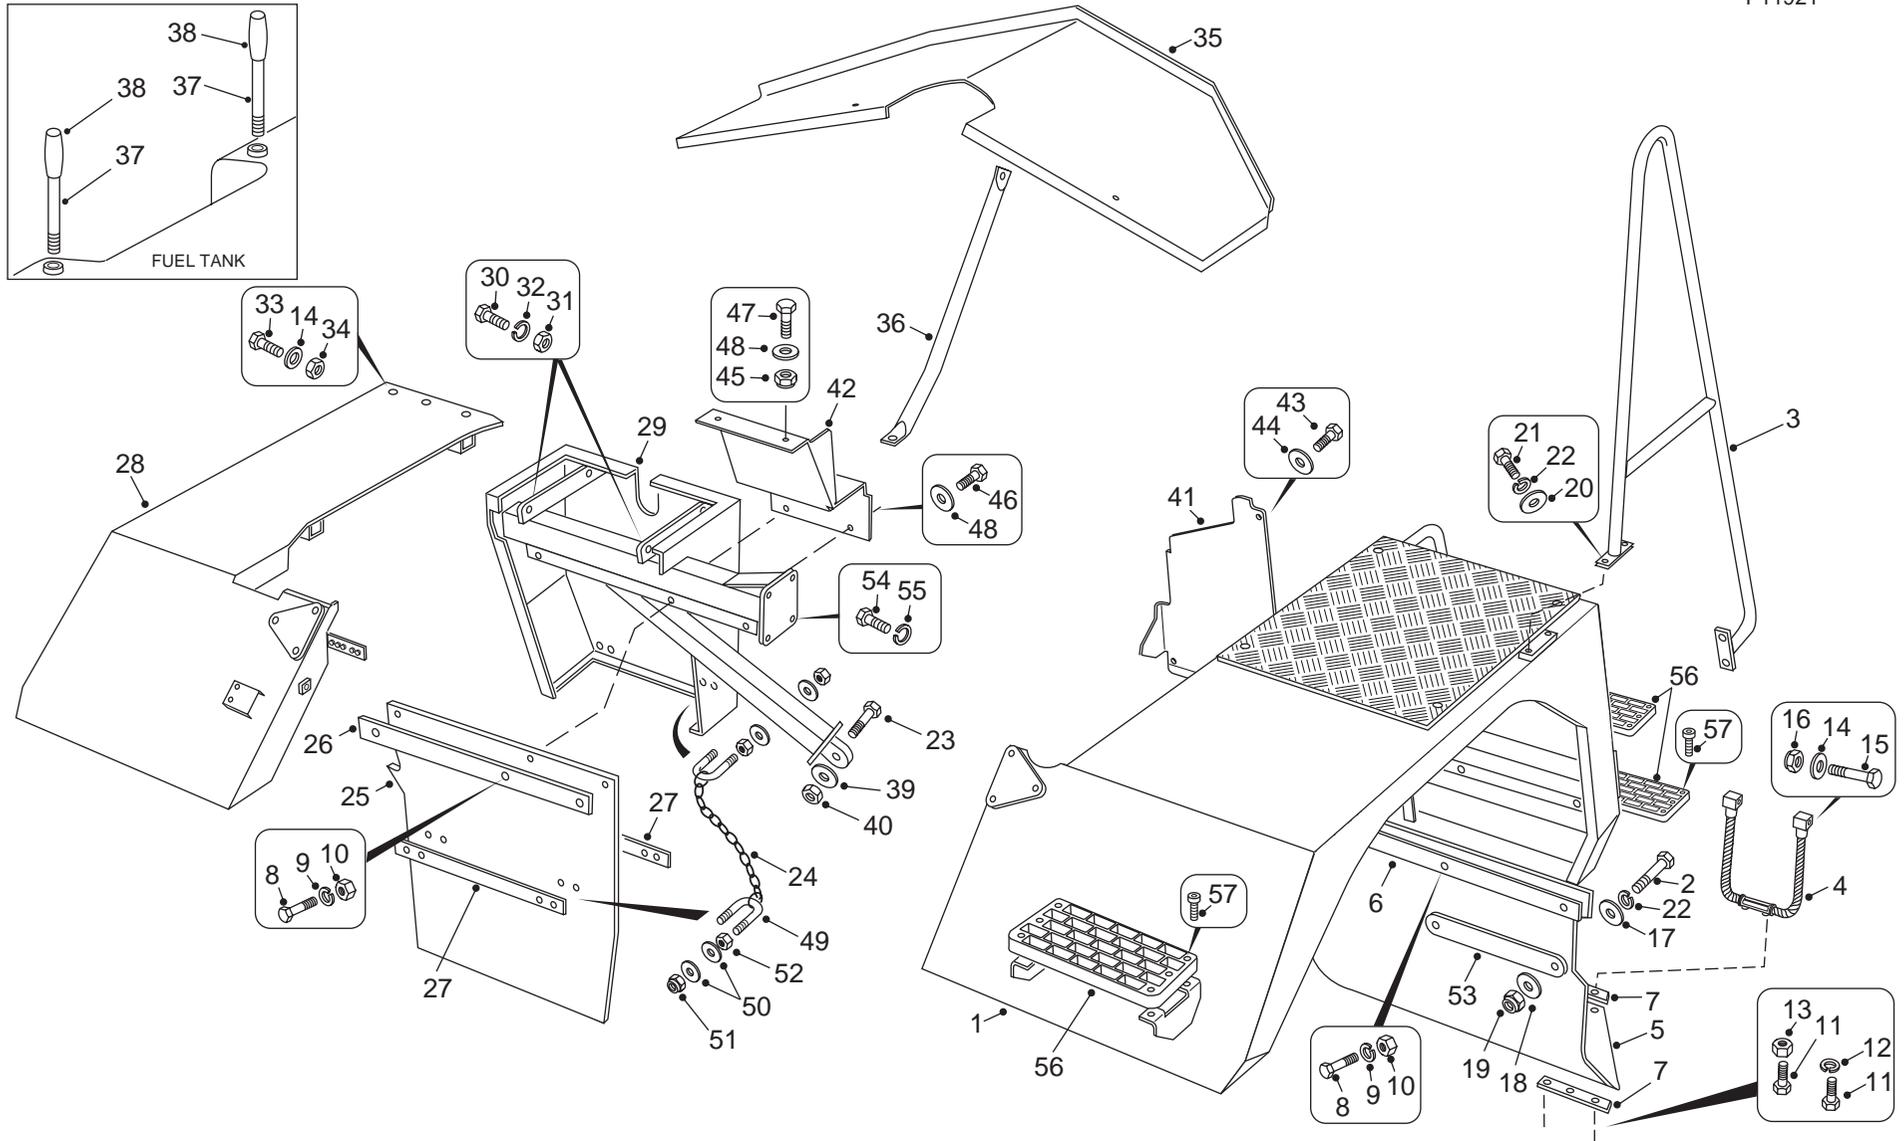

100-0070-8951 FENDERS AND MOUNTING
FROM SERIAL NO. A8941038

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------|-----------------|---------------|
| 001 | 001 | | 15332703 | LH FENDER PLATFORM | | |
| 002 | 002 | | 15240002 | BOLT | | |
| 003 | 001 | | 15311946 | HANDRAIL | | |
| 004 | 002 | | 15330653 | STEP ASSY-WIRE | | |
| 005 | 002 | | 15318085 | MUDFLAP-FRONT LH | | |
| 006 | 002 | | 15311949 | PLATE | | |
| 007 | 004 | | 15303969 | STIFFENER-MUDFLAP | | |
| 008 | 006 | | 00179820 | BOLT | | |
| 009 | 006 | | 00103320 | LOCKWASHER | | |
| 010 | 006 | | 00102634 | NUT | | |
| 011 | 006 | | 06350825 | BOLT | | |
| 012 | 004 | | 07160830 | LOCKWASHER | | |
| 013 | 002 | | 06470801 | NUT | | |
| 014 | 008 | | 09267949 | WASHER-HARDENED | | |
| 015 | 004 | | 00179892 | BOLT | | |
| 016 | 004 | | 00274209 | LOCKNUT | | |
| 017 | 002 | | 07151220 | WASHER | | |
| 018 | 002 | | 15234758 | WASHER | | |
| 019 | 002 | | 06471201 | LOCKNUT | | |
| 020 | 004 | | 09267660 | WASHER | | |
| 021 | 004 | | 06351230 | BOLT | | |
| 022 | 002 | | 07161230 | LOCKWASHER | | |
| 023 | 001 | | 06372070 | BOLT | | |
| 024 | 002 | | 15317037 | CHAIN-MUDFLAP STAY | | |
| 025 | 001 | | 15318836 | MUDFLAP-FRONT RH | | |
| 026 | 001 | | 15318829 | PLATE | | |
| 027 | 002 | | 15316708 | CLAMP PLATE | | |
| 028 | 001 | | 15317173 | PLATFORM-RH | | |
| 029 | 001 | | 15318825 | SIDE STEP ASSY-RH | | |
| 030 | 004 | | 06442040 | SCREW SET | | |
| 031 | 004 | | 06472001 | NUT | | |
| 032 | 004 | | 07162030 | LOCKWASHER | | |
| 033 | 003 | | 06351240 | BOLT | | |
| 034 | 003 | | 06471201 | LOCKNUT | | |
| 035 | 001 | | 15331048 | SPILL GUARD | | |
| 036 | 001 | | 15331050 | BRACE-SPILL GUARD | | |
| 037 | 002 | | 15228110 | TUBE | | |
| 038 | 002 | | 09366021 | GRIP | | |
| 039 | 001 | | 09270005 | WASHER-HARDENED | | |
| 040 | 001 | | 06432001 | NUT | | |

100-0070-8951 FENDERS AND MOUNTING
FROM SERIAL NO. A8941038



| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|------------------------|-----------------|---------------|
| 041 | 001 | | 15332592 | PANEL-INFILL LH | | |
| 042 | 001 | | 15332595 | PANEL-INFILL RH | | |
| 043 | 003 | | 00179839 | BOLT | | |
| 044 | 003 | | 00106263 | WASHER | | |
| 045 | 002 | | 00274208 | LOCKNUT | | |
| 046 | 002 | | 00179837 | BOLT | | |
| 047 | 002 | | 00179839 | BOLT | | |
| 048 | 004 | | 00106263 | WASHER | | |
| 049 | 004 | | 15317030 | U-BOLT | | |
| 050 | 008 | | 07150815 | WASHER | | |
| 051 | 008 | | 06470801 | NUT | | |
| 052 | 008 | | 06430801 | NUT | | |
| 053 | 001 | | 15318086 | PLATE-MUDFLAP CLAMPING | | |
| 054 | 004 | | 15311176 | BOLT | | |
| 055 | 004 | | 07161630 | LOCKWASHER | | |
| 056 | 003 | | 15320662 | FOOT-TREADPLATE | | |
| 057 | 012 | | 15320295 | CAPSCREW | | |

NOTE: THESE PARTS ALSO FITTED TO UNITS A8941028 & A8941029

100-0135-8951 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8941011

DRAWING NO. P11039

P11039

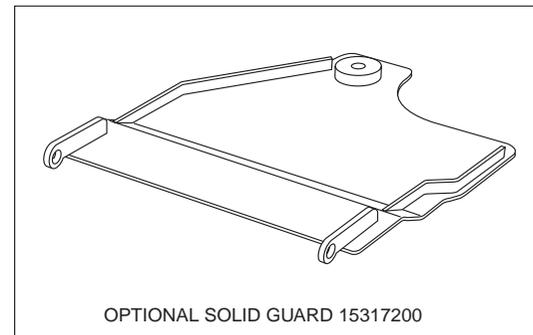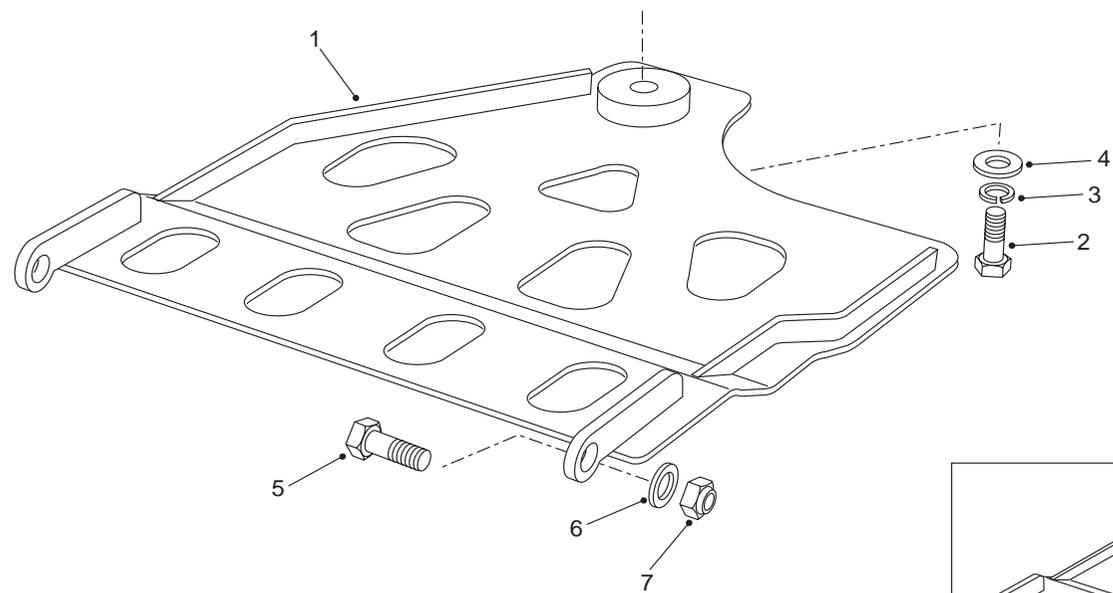

100-0135-8951 ROCK AND SUMP GUARDS
FROM SERIAL NO. A8941011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|------------------|-----------------|---------------|
| 001 | 001 | | 15313507 | GUARD-TRANS SUMP | | |
| 002 | 001 | | 06351665 | BOLT | | |
| 003 | 001 | | 07161630 | LOCKWASHER | | |
| 004 | 001 | | 09191596 | WASHER | | |
| 005 | 002 | | 06351670 | BOLT NSS | | |
| 006 | 002 | | 07151630 | WASHER | | |
| 007 | 002 | | 06471601 | LOCKNUT | | |

THIS PAGE IS INTENTIONALLY LEFT BLANK

CUMMINS ENGINE

THIS UNIT IS EQUIPPED WITH A CUMMINS DIESEL ENGINE.

TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.


A SEPARATE CUMMINS ENGINE PARTS BOOK IS SUPPLIED WITH NEW UNITS FOR ENGINE PARTS COVERAGE.

ANY ADDITIONAL REQUESTS FOR THIS CUMMINS ENGINE PARTS BOOK OR ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.


110-0030-8951 ENGINE AND MOUNTING
FROM SERIAL NO. A8941011

DRAWING NO. P11506A

P11506

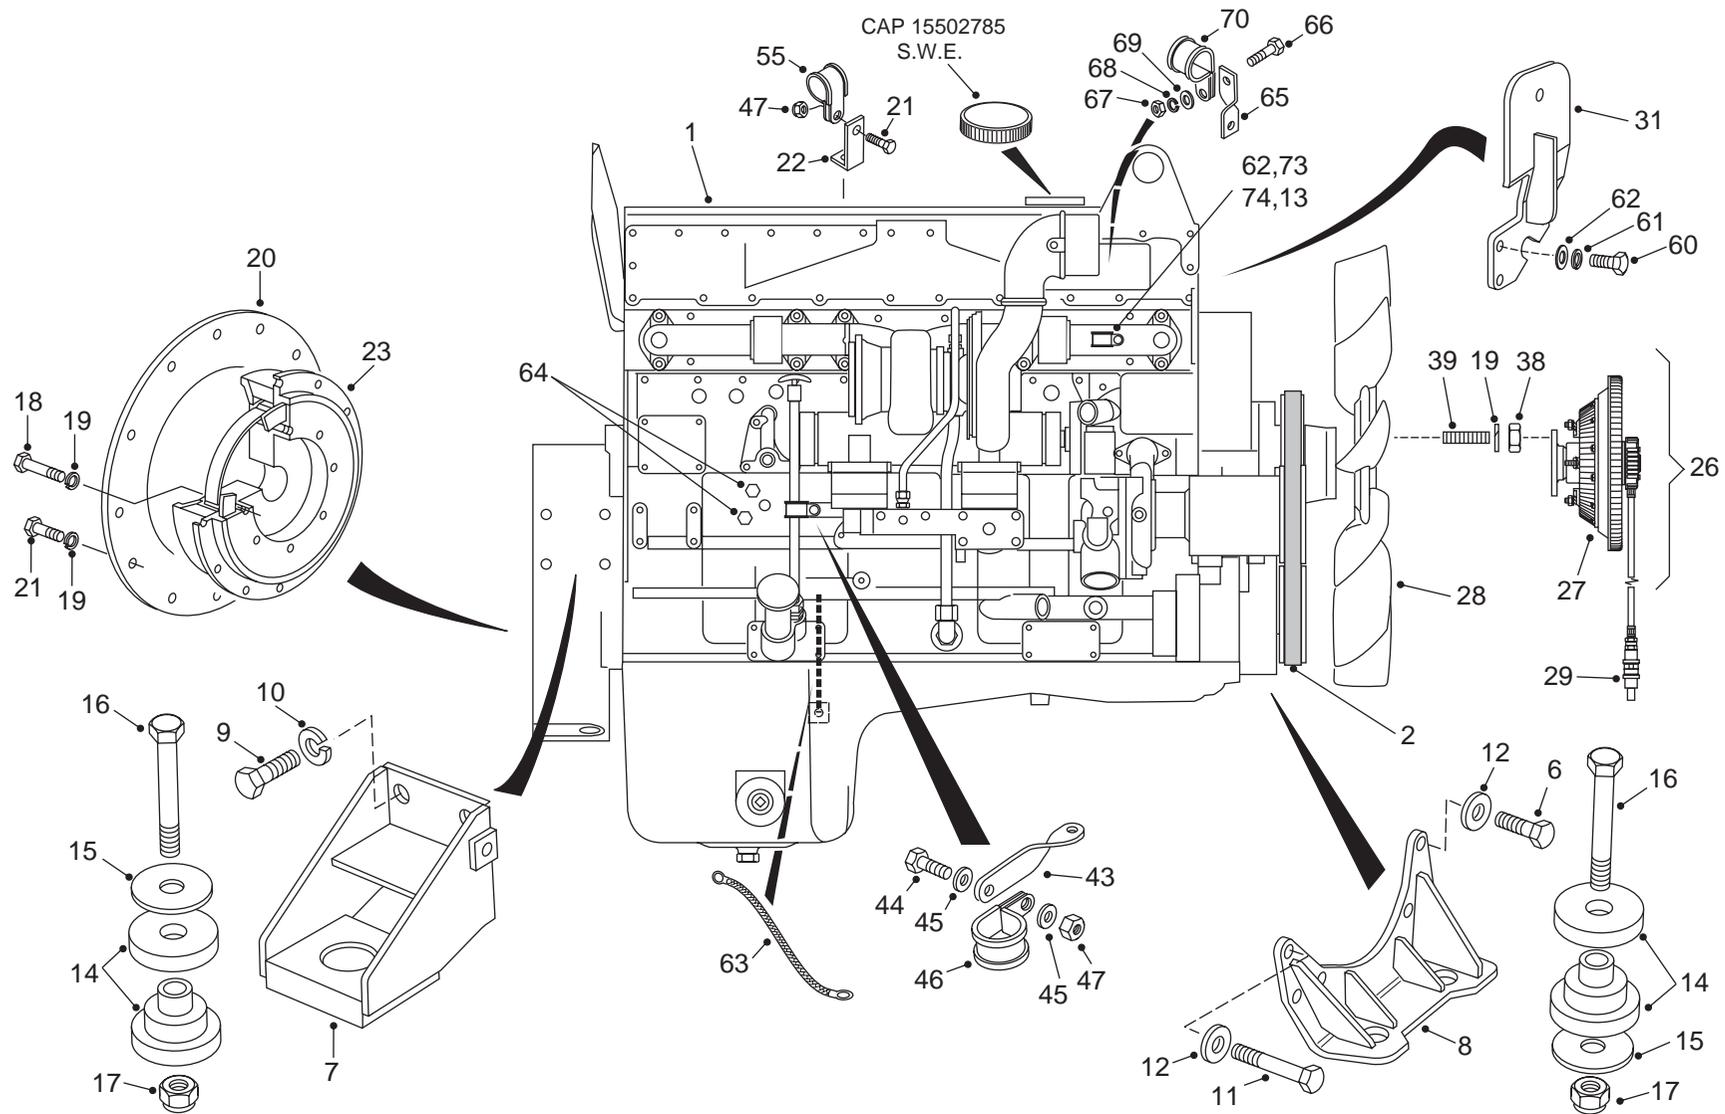

P11506

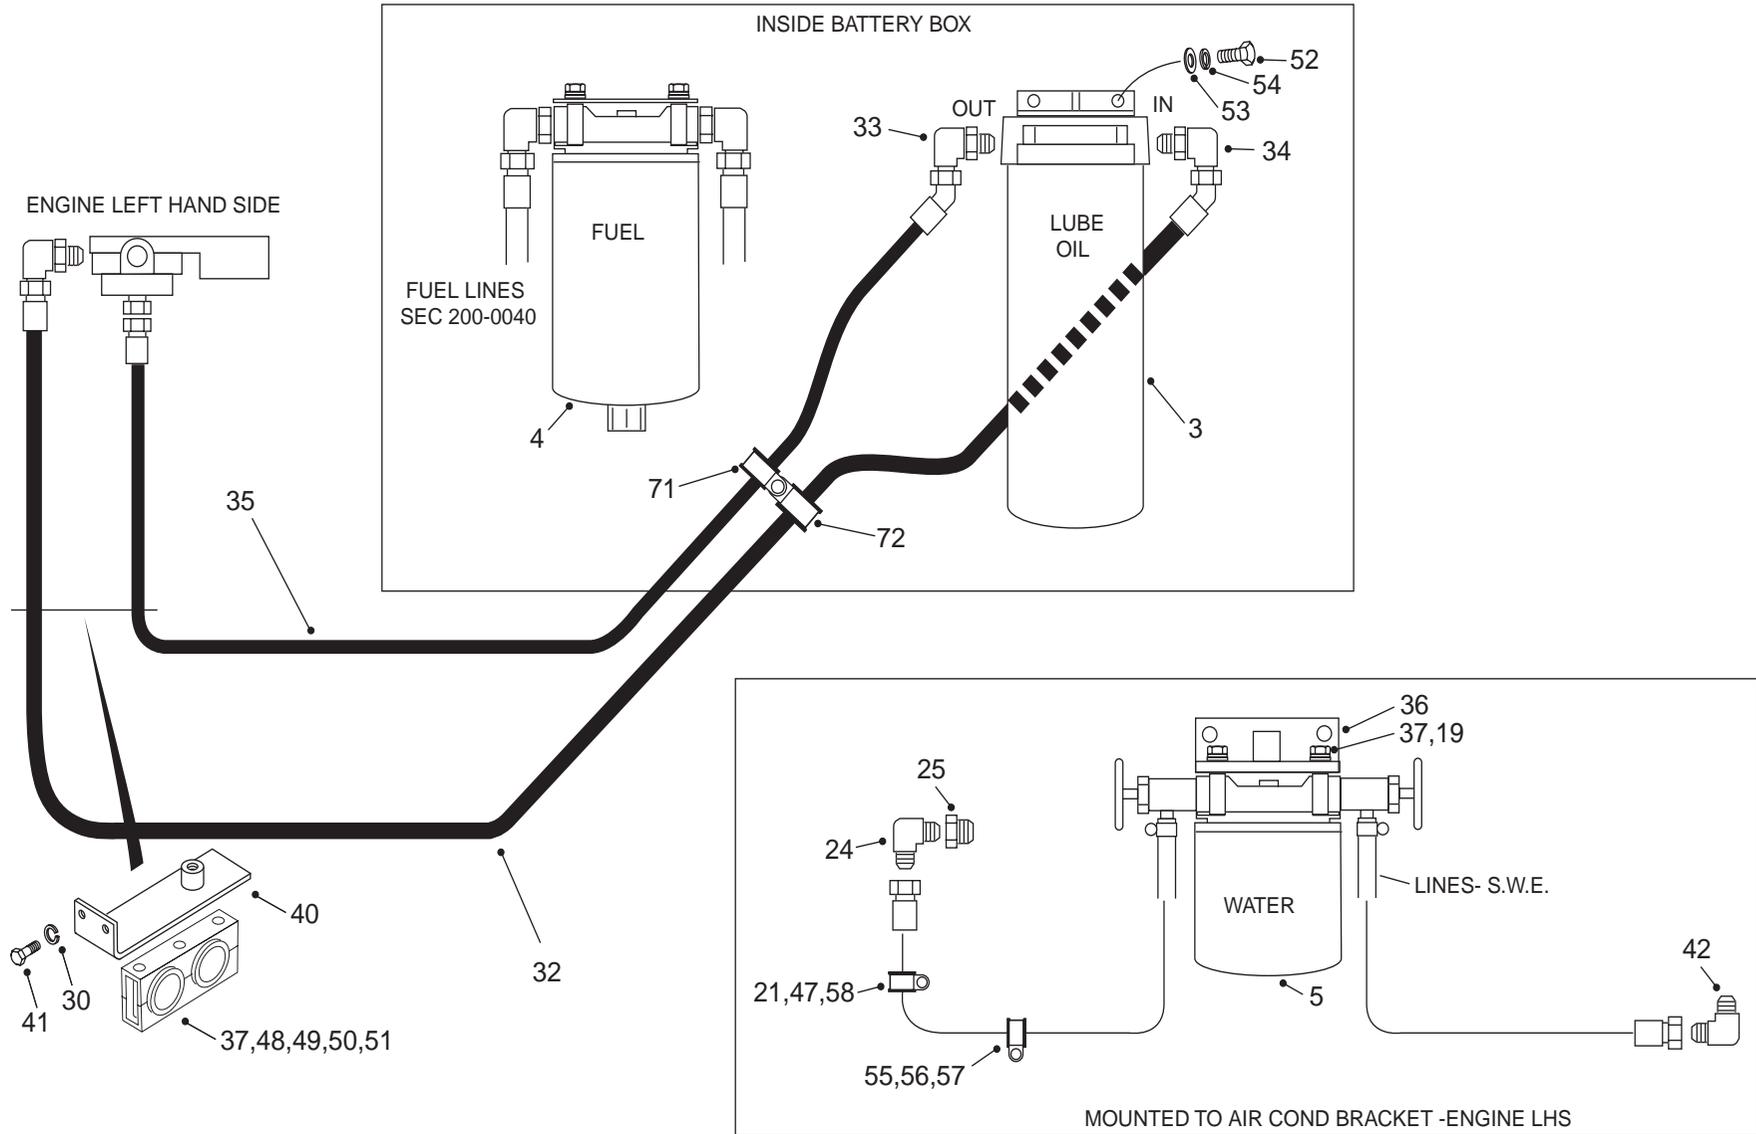

THIS PAGE IS INTENTIONALLY LEFT BLANK

Product: 2006 TEREX TA30 G7 Articulated Truck Workshop Parts Manual[PN15503052]


Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-a>

[rticulated-truck-workshop-parts-manualpn15503052/](https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-a-articulated-truck-workshop-parts-manualpn15503052/)

110-0050-8951 AIR CLEANER
FROM SERIAL NO. A8941011

DRAWING NO. P11006

P11006

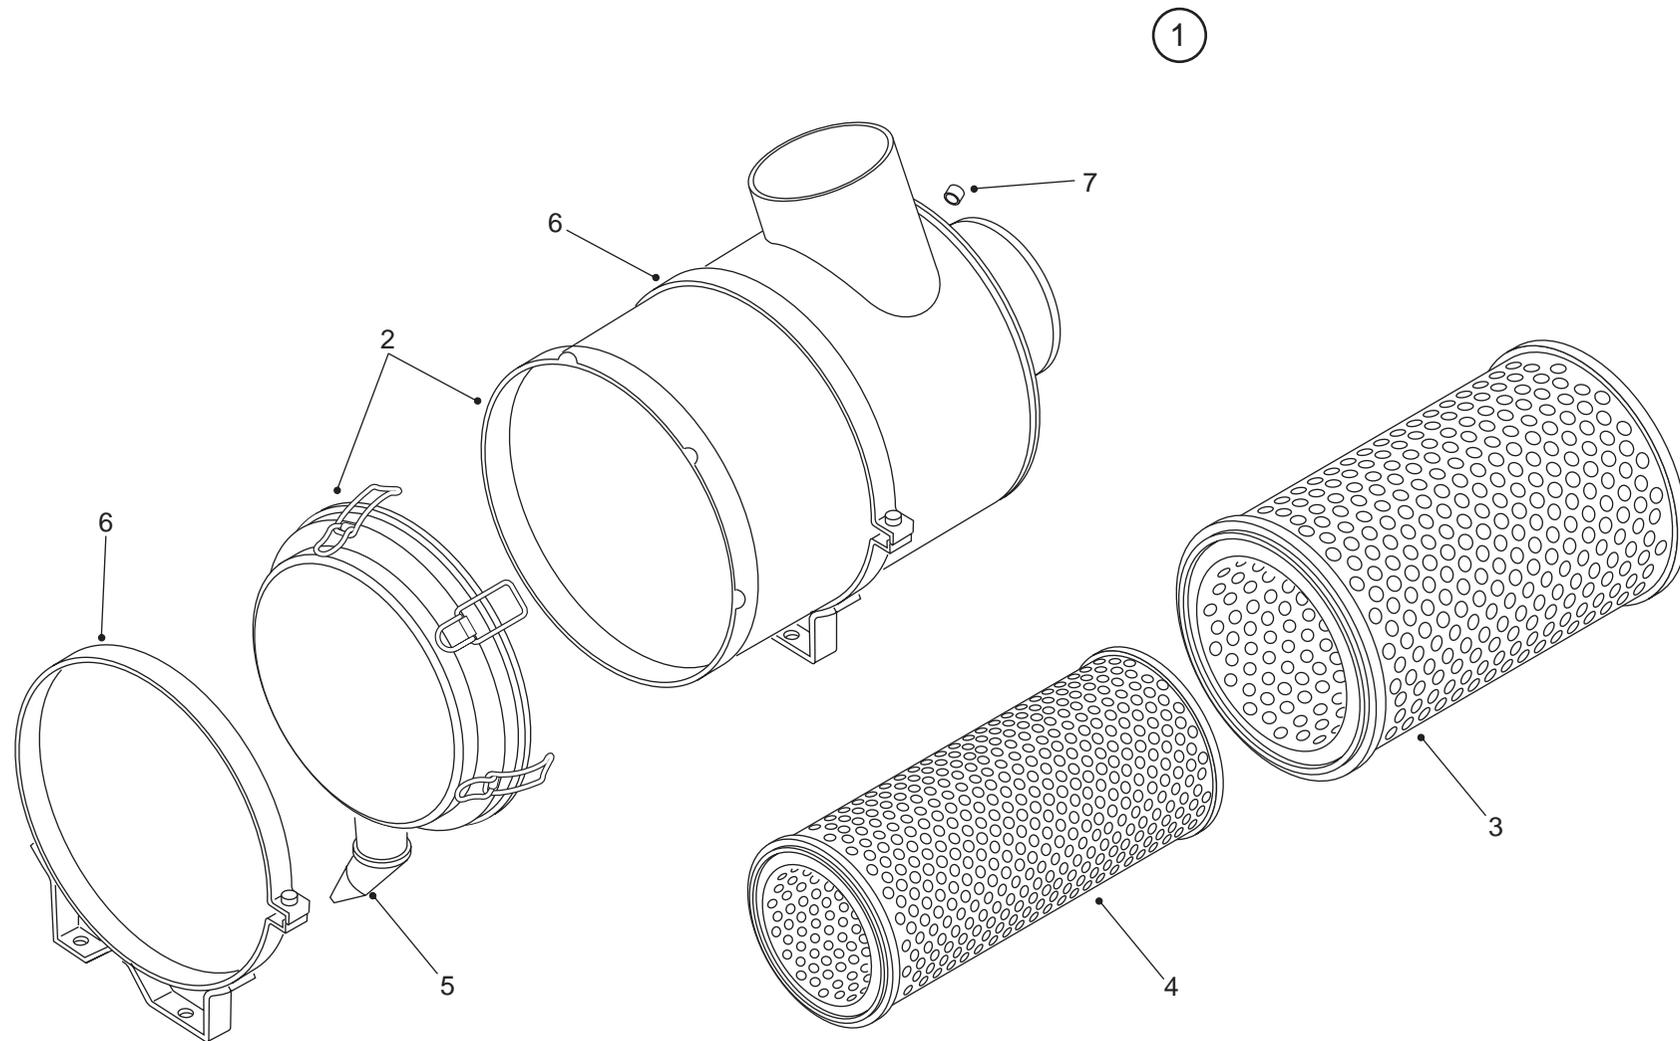

Sample of manual. Download All 528 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta30-g7-articulated-truck-workshop-parts-manualpn15503052/>