

Product: 2007 TEREX TA35 G7 (OCDB) Articulated Truck (Europe only) Workshop Parts Manual[PN15503705]

Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta35-g7-o>

[edb-articulated-truck-europe-only-workshop-parts-manualpn155](https://www.arepairmanual.com/downloads/2007-terex-ta35-g7-o)



Publication Part Number: **15503705**

Published by : Customer Support Department - TEREX Equipment Limited, Motherwell, Scotland


PARTS BOOK

CLICK HERE FOR
TRACTOR
TABLE OF CONTENTS

CLICK HERE FOR
TRACTOR OPTIONAL
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER OPTIONAL
TABLE OF CONTENTS

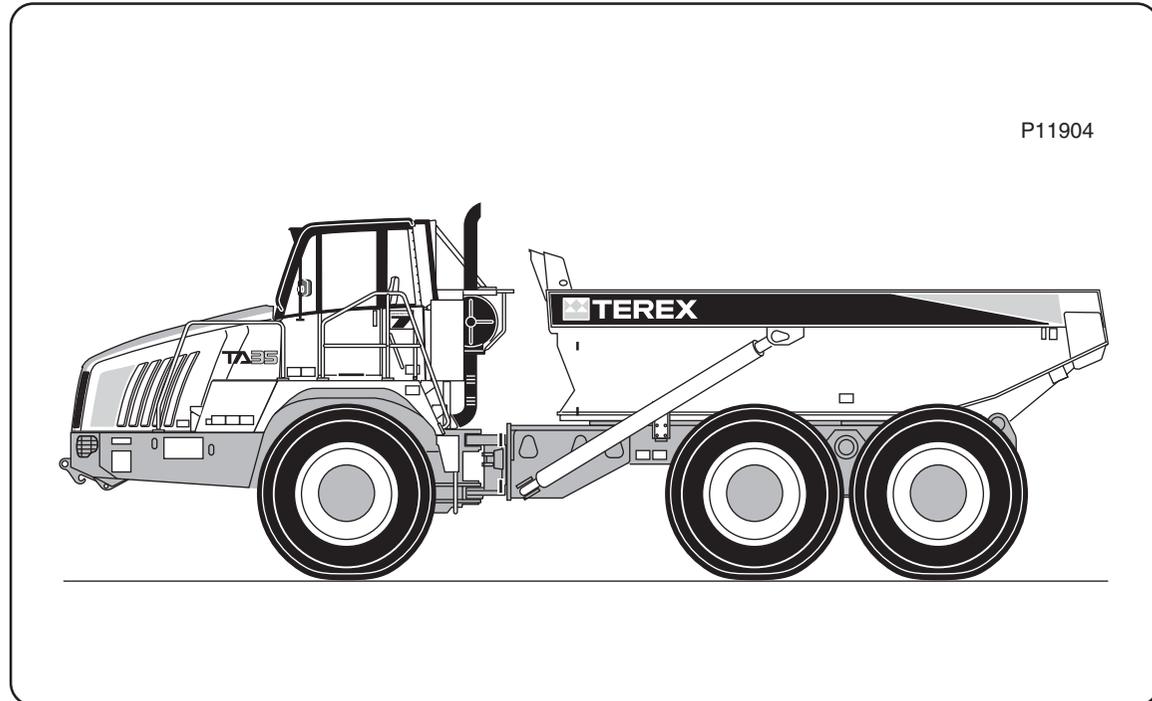

TA35 G7 (OCDB) Articulated Truck (Europe only)

(Detroit Diesel 450HP Series 60 Engine with Allison 4500 ORS_R Trans)

Serial Nos. A9461011 and above

October 2007

Sample of manual. Download All 496 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta35-g7-ocdb-articulated-truck-europe-only-workshop-parts-manualpn15503705/>

Revised: 23 June 2010

Product: 2007 TEREX TA35 G7 (OCDB) Articulated Truck (Europe only) Workshop Parts Manual[PN15503705]

Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta35-g7-ocdb-articulated-truck-europe-only-workshop-parts-manualpn15503705/>

03705/

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 496 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta35-g7-ocdb-articulated-truck-europe-only-workshop-parts-manualpn15503705/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings. For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
2 9058512 . Shaft
3 9024169 . Ring
4 9058132 . Control Assy.
5 9058135 . . Spring
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

| | | | | | |
|----------------|----------------------------|-----------|-----------------|-------------|---------------------|
| Amps | Amperes | Hsg | Housing | N.I | Not Illustrated |
| As R | As Required | I.D | Inside Diameter | N.L.A | No Longer Available |
| Assy | Assembly | L.H | Left Hand | N.S.S | Not Sold Separately |
| Brkt | Bracket | L.W | Lockwasher | O.D | Outside Diameter |
| Cad-Pltd | Cadium Plated | Lg | Long | Pr | Pair |
| Comm | Commencement of production | Lkg | Linkage | P.T.O | Power-Take-Off |
| E.S.N | Elastic Stop Nut | Mtg | Mounting | R.H | Right Hand |
| Ftgs | Fittings | N.C | Note Code | Std | Standard |



Articulated Truck



TRACTOR SECTIONS

| | | |
|--|-----------------------------|------------|
|  | CHASSIS | 100 |
|  | ENGINE | 110 |
|  | TRANSMISSION | 120 |
|  | TRANSMISSION DROPBOX | 125 |
|  | DRIVELINE | 130 |
|  | FRONT AXLE | 140 |
|  | BRAKE PARTS | 165 |
|  | SUSPENSION SYSTEM | 180 |
|  | ELECTRICAL SYSTEM | 190 |
|  | FUEL SYSTEM | 200 |

| | | |
|---|-----------------------------|------------|
|  | COOLING SYSTEM | 210 |
|  | MAIN HYDRAULIC VALVE | 215 |
|  | STEERING SYSTEM | 220 |
|  | BODY HOIST SYSTEM | 230 |
|  | BRAKING SYSTEM | 250 |
|  | CAB | 260 |
|  | DECALS | 290 |
|  | MISCELLANEOUS | 300 |
|  | | |
|  | | |

TABLE OF CONTENTS FOR MODEL TA35 G7 OCDB TRACTOR

FROM SERIAL NO A9461011

06/10

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|----------------------------|--------------------------------------|------------------------|-------------------|
| <u>SECTION 100</u> | | | |
| <u>CHASSIS</u> | | | |
| 100-0010-9471 | CHASSIS | A9461011 TO A9461016 | R1 11/07 |
| 100-0010-9471 | CHASSIS | A9461017 | 11/08 |
| 100-0030-9471 | SOUND INSULATION | | R1 01/09 |
| 100-0040-9471 | HOOD AND MOUNTING | | |
| 100-0070-9471 | FENDERS AND MOUNTING | A9461011 TO A9461016 | R1 10/07 |
| 100-0070-9471 | FENDERS AND MOUNTING | A9461017 | 11/08 |
| 100-0085-9471 | PIVOT & ACCUMULATOR GUARD | | |
| 100-0135-9471 | ROCK AND SUMP GUARDS | | |
| <u>SECTION 110</u> | | | |
| <u>ENGINE</u> | | | |
| 110-0020-9471 | ENGINE ORDERING INSTRUCTIONS | | |
| 110-0030-9471 | ENGINE AND MOUNTING | | R2 01/09 |
| 110-0050-9471 | AIR CLEANER ASSEMBLY | | |
| 110-0060-9471 | AIR CLEANER MOUNTING PIPES AND HOSES | | |
| 110-0070-9471 | EXHAUST AND MOUNTING | A9461011 TO A9461016 | R6 09/09 |
| 110-0070-9471 | EXHAUST AND MOUNTING | A9461017 | 09/09 |
| <u>SECTION 120</u> | | | |
| <u>TRANSMISSION</u> | | | |
| 120-0010-9471 | TRANSMISSION MOUNTING | | R2 10/08 |
| 120-0020-9471 | TRANSMISSION BREAKDOWN | | R1 10/08 |
| 120-0040-9471 | P1 PLANETARY GROUP | | |
| 120-0045-9471 | P2 PLANETARY GROUP | | |
| 120-0046-9471 | P3 PLANETARY & REAR COVER/RETARDER | | |
| 120-0050-9471 | CONTROL VALVE | | |
| 120-0070-9471 | SHIFT CONTROL | | |
| 120-0090-9471 | POWER TAKE-OFF MAIN PUMP | | |
| 120-0100-9471 | TRANS OIL FILTERS | | |
| 120-0125-9471 | OIL COOLER GROUP | | R1 04/09 |
| 120-0135-9471 | FRONT SUPPORT & OIL PUMP | | |
| 120-0200-9471 | FRONT COVER & CONVERTER GROUP | | |
| 120-0210-9471 | CONVERTER HOUSING GROUP | | |
| 120-0215-9471 | FLEXPLATE AND ADAPTOR | | |
| 120-0225-9471 | ROTATING CLUTCH | | |
| 120-0235-9471 | MAIN SHAFT | | |
| 120-0255-9471 | RETARDER CONTROLS | | |
| 120-0290-9471 | MAIN HOUSING GROUP | | |

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|------------------------------------|------------------------|-------------------|
| <u>SECTION 125</u> | <u>TRANSMISSION DROPBOX</u> | | |
| 125-0010-9471 | DROPBOX MOUNTING | | R1 11/08 |
| 125-0020-9471 | DROPBOX ASSEMBLY | A9461011 TO A9461016 | R2 11/08 |
| 125-0020-9471 | DROPBOX ASSEMBLY | A9461017 | R3 12/09 |
| 125-0025-9471 | CONTROL VALVE-DROPBOX | | R1 11/07 |
| 125-0026-9471 | PRESSURE RELIEF VALVE-DROPBOX | | 11/07 |
| 125-0030-9471 | EMERGENCY STEERING PUMP ASSEMBLY | | |
| 125-0035-9471 | PUMP ASSEMBLY-DROPBOX | | |
| 125-0040-9471 | DIFFERENTIAL-LOCK LINES & FTGS | A9461011 TO A9461016 | R1 10/07 |
| 125-0040-9471 | DIFFERENTIAL-LOCK LINES & FTGS | A9461017 | R1 06/09 |
| 125-0045-9471 | FILTER ASSEMBLY-DROPBOX | A9461011 TO A9461013 | R1 03/10 |
| 125-0045-9471 | FILTER ASSEMBLY-DROPBOX | A9461014 | 06/08 |
| 125-0050-9471 | SUCTION FILTER ASSY-DROPBOX | | |
| <u>SECTION 130</u> | <u>DRIVELINE</u> | | |
| 130-0010-9471 | FRONT DRIVELINE | | |
| <u>SECTION 140</u> | <u>FRONT AXLE</u> | | |
| 140-0010-9471 | AXLE COMPLETE-FRONT | | R2 06/09 |
| 140-0020-9471 | AXLE GROUP-FRONT | A9461011 TO A9461016 | R1 10/08 |
| 140-0020-9471 | AXLE GROUP-FRONT | A9461017 | 06/09 |
| 140-0030-9471 | PLANETARY GEARING-FRONT | A9461011 TO A9461016 | |
| 140-0030-9471 | PLANETARY GEARING-FRONT | A9461017 | R1 06/09 |
| 140-0040-9471 | WHEEL, RIM AND TYRE-FRONT | | R1 04/09 |
| 140-0060-9471 | DIFFERENTIAL-FRONT | | R1 10/08 |
| <u>SECTION 165</u> | <u>BRAKE PARTS</u> | | |
| 165-0015-9471 | BRAKE ASSEMBLY-OCDB(ARTICS) | A9461011 TO A9461016 | R1 06/08 |
| 165-0015-9471 | BRAKE ASSEMBLY-OCDB(ARTICS) | A9461017 | 10/08 |
| <u>SECTION 180</u> | <u>SUSPENSION SYSTEM</u> | | |
| 180-0020-9471 | FRONT SUSPENSION | | R3 04/09 |
| <u>SECTION 190</u> | <u>ELECTRICAL SYSTEM</u> | | |
| 190-0010-9471 | TERMINALS | | |
| 190-0011-9471 | CONNECTORS | | |
| 190-0030-9471 | CABLES/HARNESSES-CAB | A9461011 TO A9461013 | |
| 190-0030-9471 | CABLES/HARNESSES-CAB | A9461014 | R1 01/09 |
| 190-0040-9471 | CABLES/HARNESSES-CHASS/ENG | A9461011 TO A9461016 | R2 08/08 |
| 190-0040-9471 | CABLES/HARNESSES-CHASS/ENG | A9461017 | 11/08 |
| 190-0070-9471 | BATTERY AND CABLES | A9461011 TO A9461016 | R1 06/08 |

TABLE OF CONTENTS FOR MODEL TA35 G7 OCDB TRACTOR

FROM SERIAL NO A9461011

06/10

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|---|------------------------|-------------------|
| <u>SECTION 190</u> | <u>ELECTRICAL SYSTEM-CONTINUED</u> | | |
| 190-0070-9471 | BATTERY AND CABLES | A9461017 | 11/08 |
| 190-0080-9471 | BATTERY MOUNTING | A9461011 TO A9461016 | |
| 190-0080-9471 | BATTERY MOUNTING | A9461017 | 11/08 |
| 190-0085-9471 | ECU-HYD. SYSTEM MONITORING | | R3 01/09 |
| 190-0100-9471 | ELECTRICAL LIGHTING SYSTEM | | |
| 190-0110-9471 | ALTERNATOR AND MOUNTING | | |
| 190-0120-9471 | STARTER | | |
| 190-0270-9471 | SWITCHES AND SENSORS | A9461011 TO A9461016 | |
| 190-0270-9471 | SWITCHES AND SENSORS | A9461017 | 11/08 |
| 190-0300-9471 | RADIO CASSETTE AND SPEAKERS | | |
| 190-0310-9471 | ELECTRICAL HORN | | |
| 190-0330-9471 | CCTV REAR VIEW SYSTEM | | 04/09 |
| <u>SECTION 200</u> | <u>FUEL SYSTEM</u> | | |
| 200-0010-9471 | FUEL TANK AND MOUNTING | A9461011 TO A9461016 | R1 02/09 |
| 200-0010-9471 | FUEL TANK AND MOUNTING | A9461017 | R1 02/09 |
| 200-0040-9471 | FUEL LINES | A9461011 TO A9461012 | |
| 200-0040-9471 | FUEL LINES | A9461013 | R1 01/09 |
| 200-0050-9471 | ACCELERATOR CONTROLS | | R1 06/08 |
| <u>SECTION 210</u> | <u>COOLING SYSTEM</u> | | |
| 210-0015-9471 | COMBINATION COOLER RH | | R1 09/09 |
| 210-0016-9471 | COMBINATION COOLER LH | | |
| 210-0020-9471 | RADIATOR MOUNTING | | |
| 210-0025-9471 | RADIATOR FAN MOTOR-HYD LINES | A9461011 TO A9461016 | R5 06/08 |
| 210-0025-9471 | RADIATOR FAN MOTOR-HYD LINES | A9461017 | R2 03/10 |
| 210-0030-9471 | RADIATOR PIPING | | |
| 210-0035-9471 | CHARGE AIR COOLER & PIPING | | R3 06/09 |
| 210-0040-9471 | RADIATOR HEADER TANK & HOSES | | R2 09/09 |
| 210-0044-9471 | FAN DISCONNECT VALVE | | |
| 210-0045-9471 | LOW TEMP UNLOADER VALVE | | |
| 210-0052-9471 | OIL COOLING LINES-DISC BRAKES | A9461011 TO A9461016 | R2 02/08 |
| 210-0052-9471 | OIL COOLING LINES-DISC BRAKES | A9461017 | R1 01/09 |
| 210-0062-9471 | TRANS OIL COOLER LINES | A9461011 TO A9461014 | |
| 210-0062-9471 | TRANS OIL COOLER LINES | A9461015 | R5 09/09 |
| 210-0063-9471 | DROPBOX OIL COOLING & LUBE LINES | A9461011 TO A9461016 | R3 06/08 |
| 210-0063-9471 | DROPBOX OIL COOLING & LUBE LINES | A9461017 | R1 04/09 |
| 210-0100-9471 | OIL COOLER AND LINES-HYDRAULIC | A9461011 TO A9461012 | |
| 210-0100-9471 | OIL COOLER AND LINES-HYDRAULIC | A9461013 | R2 01/09 |

TABLE OF CONTENTS FOR MODEL TA35 G7 OCDB TRACTOR

FROM SERIAL NO A9461011

06/10

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|----------------------|----------------------------------|------------------------|-------------------|
| SECTION 215 | MAIN HYDRAULIC VALVE | | |
| 215-0050-9471 | MAIN HYDRAULIC VALVE ASSY | | R2 06/10 |
| SECTION 220 | STEERING SYSTEM | | |
| 220-0010-9471 | STEERING LINES | A9461011 TO A9461016 | R1 06/08 |
| 220-0010-9471 | STEERING LINES | A9461017 | R1 09/09 |
| 220-0090-9471 | STEERING VALVE | | |
| 220-0120-9471 | STEERING CYLINDER | | |
| 220-0140-9471 | EMERGENCY STEERING VALVE | | |
| 220-0230-9471 | STEERING COLUMN MOUNTING | | |
| SECTION 230 | BODY HOIST SYSTEM | | |
| 230-0020-9471 | LINES AND FITTINGS-BODY HOIST | | R3 10/09 |
| 230-0050-9471 | MAIN HYDRAULIC PUMP ASSEMBLY | A9461011 TO A9461013 | R1 02/08 |
| 230-0050-9471 | MAIN HYDRAULIC PUMP ASSEMBLY | A9461014 TO A9461016 | 06/08 |
| 230-0050-9471 | MAIN HYDRAULIC PUMP ASSEMBLY | A9461017 | 04/09 |
| 230-0055-9471 | PORTING BLOCK-MAIN PUMP | | R1 03/10 |
| 230-0081-9471 | JOYSTICK-BODY CONTROL | | |
| 230-0135-9471 | LOAD SENSE CONTROL VALVE | | 10/07 |
| SECTION 250 | BRAKING SYSTEM | | |
| 250-0020-9471 | BRAKE LINES-HYDRAULIC | A9461011 TO A9461016 | R3 06/08 |
| 250-0020-9471 | BRAKE LINES-HYDRAULIC | A9461017 | R1 10/09 |
| 250-0025-9471 | BRAKE COOLANT/HYDRAULIC TANK | A9461011 TO A9461012 | R4 06/09 |
| 250-0025-9471 | BRAKE COOLANT/HYDRAULIC TANK | A9461013 TO A9461016 | R4 06/09 |
| 250-0025-9471 | BRAKE COOLANT/HYDRAULIC TANK | A9461017 | R2 06/09 |
| 250-0026-9471 | HYDRAULIC TANK PRESSURISATION | A9461011 TO A9461016 | R3 11/08 |
| 250-0045-9471 | MOTOR/TRIPLE PUMP ASSEMBLY | | R1 01/09 |
| 250-0060-9471 | BRAKE ACCUMULATOR | | |
| 250-0070-9471 | TREADLE VALVE (MICO) | | R1 01/08 |
| 250-0240-9471 | FILTER ASSY-OCDB | | |
| SECTION 260 | CAB | | |
| 260-0010-9471 | CAB ASSEMBLY | | R2 08/08 |
| 260-0015-9471 | CAB MOUNTING | A9461011 TO A946 TBA | |
| 260-0015-9471 | CAB MOUNTING | A946 TBA | 04/09 |
| 260-0018-9471 | CAB TILT MECHANISM | | R1 01/09 |
| 260-0030-9471 | CAB DOOR-LEFT HAND | | |
| 260-0080-9471 | SWITCHES AND INSTRUMENTS | A9461011 TO A9461016 | R1 11/08 |
| 260-0080-9471 | SWITCHES AND INSTRUMENTS | A9461017 | R7 04/09 |

TABLE OF CONTENTS FOR MODEL TA35 G7 OCDB TRACTOR

FROM SERIAL NO A9461011

06/10

| SECT-PAGE-PLI | DESCRIPTION | SERIAL NO. EFFECTIVITY | REVISION AND DATE |
|---------------------------|--------------------------------------|-------------------------------|--------------------------|
| <u>SECTION 260</u> | <u>CAB-CONTINUED</u> | | |
| 260-0090-9471 | SEAT-DRIVER | A9461011 TO A9461011 | |
| 260-0090-9471 | SEAT-DRIVER | A9461012 | R1 04/09 |
| 260-0110-9471 | SEAT-INSTRUCTOR | | |
| 260-0130-9471 | AIR CONDITIONER/HEATER | | |
| 260-0140-9471 | HEATER LINES AND WIRING | | R2 04/09 |
| 260-0145-9471 | AIR CONDITIONER LINES | | R2 06/09 |
| 260-0190-9471 | WINDSCREEN WASHER | | |
| <u>SECTION 290</u> | <u>DECALS</u> | | |
| 290-0010-9471 | DECALS-ENGLISH (ISO) | A9461011 TO A9461016 | R2 02/08 |
| 290-0010-9471 | DECALS-ENGLISH (ISO) | A9461017 | R1 06/09 |
| 290-0100-9471 | WALKWAY SURFACES (ANTI-SLIP) | A9461011 TO A9461016 | |
| 290-0100-9471 | WALKWAY SURFACES (ANTI-SLIP) | A9461017 | 11/08 |
| <u>SECTION 300</u> | <u>MISCELLANEOUS</u> | | |
| 300-0040-9471 | MULTI-TUBE CLAMPS AND HARDWARE | | |
| 300-0045-9471 | POLYPROPELENE CLAMPS | | |
| 300-0200-9471 | UNIT FILTERS & ELEMENT KITS | | R2 04/09 |
| 300-0250-9471 | HIGH TEMPERATURE HOSE ASSY CROSS-REF | | 11/08 |

THIS PAGE IS INTENTIONALLY LEFT BLANK


R1 11/07 (ECN 109096)

100-0010-9471 CHASSIS

FROM SERIAL NO. A9461011 TO A9461016

DRAWING NO. P11828

P11828

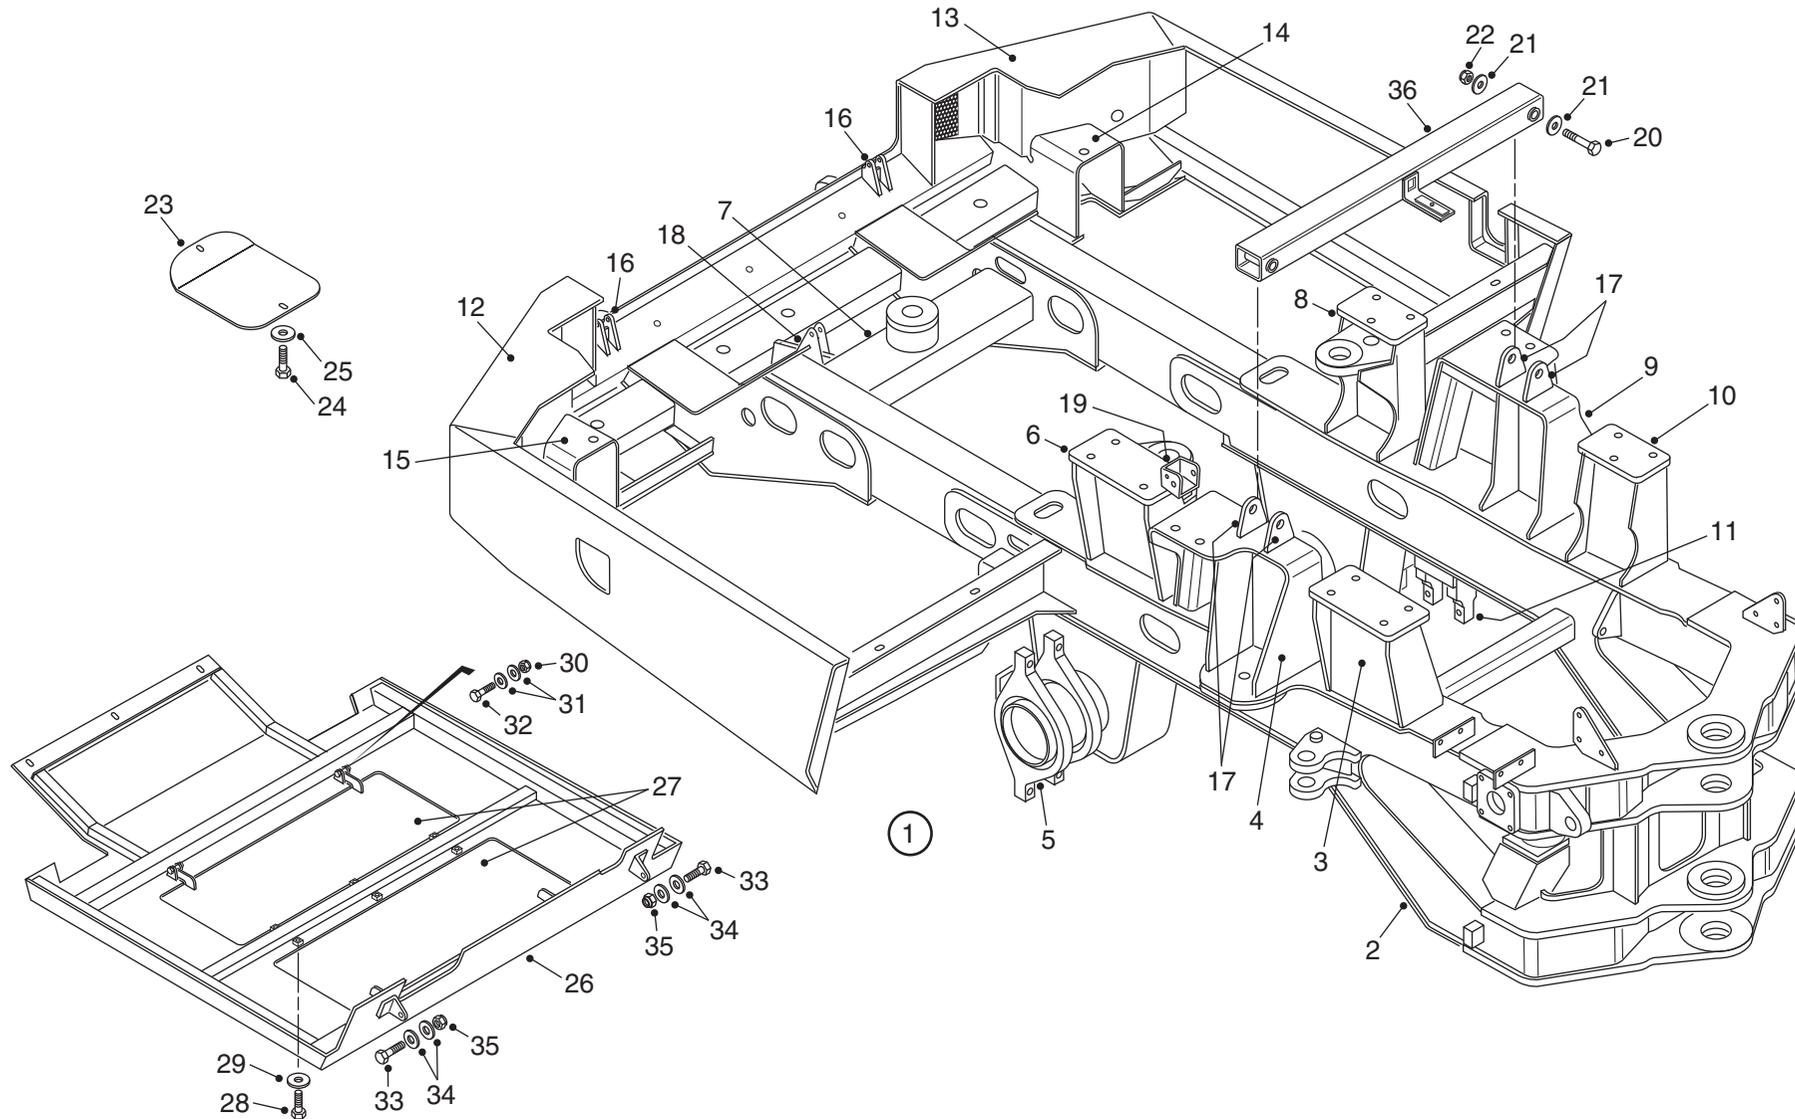

100-0010-9471 CHASSIS

FROM SERIAL NO. A9461011 TO A9461016


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------------|-----------------|---------------|
| 001 | 001 | | 15323646 | FRAME ASSY-TRACTOR | | |
| 002 | 001 | | 15319635 | .FRAME-FRONT SUB ASSY | | |
| 003 | 001 | | 15319764 | .CAB MOUNT ASSY | | |
| 004 | 001 | | 15319726 | .SUSPENSION MOUNT-LH | | |
| 005 | 001 | | 15320693 | .SUSPENSION FRAME | | |
| 006 | 001 | | 15319763 | .CAB MOUNT ASSY | | |
| 007 | 001 | | 15319684 | .CROSSMEMBER | | |
| 008 | 001 | | 15319098 | .CAB MOUNT ASSY | | |
| 009 | 001 | | 15319727 | .SUSPENSION MOUNT-RH | | |
| 010 | 001 | | 15319099 | .CAB MOUNT ASSY | | |
| 011 | 001 | | 15319712 | .BRACKET ASSY(PANHARD) | | |
| 012 | 001 | | 15322887 | .HEADLIGHT PLATE ASSY-LH | | |
| 013 | 001 | | 15322888 | .HEADLIGHT PLATE ASSY-RH | | |
| 014 | 001 | | 15322718 | .PLATE-TANK SUPPORT-RH | | |
| 015 | 001 | | 15322717 | .PLATE-TANK SUPPORT-LH | | |
| 016 | 002 | | 15322886 | .HOOD HINGE ASSY | | |
| 017 | 004 | | 15319780 | .PLATE-CROSSMEMBER | | |
| 018 | 001 | | 15321276 | .HOOD PROP FRAME ASSY | | |
| 019 | 001 | | 15323495 | .BRACKET-CAB PROP | | |
| 020 | 002 | | 15330267 | BOLT-M24 | | |
| 021 | 004 | | 15234742 | WASHER | | |
| 022 | 002 | | 06642401 | LOCKNUT | | |
| 023 | 001 | | 15322527 | PANEL-ACCESS COVER | | |
| 024 | 002 | | 06351220 | BOLT | | |
| 025 | 002 | | 07161230 | LOCKWASHER | | |
| 026 | 001 | | 15330134 | SUMP GUARD ASSY | | |
| 027 | 002 | | 15324298 | .INSPECTION COVER | | |
| 028 | 006 | | 06351230 | .BOLT | | |
| 029 | 006 | | 09217321 | .WASHER | | |
| 030 | 004 | | 06351035 | .BOLT | | |
| 031 | 008 | | 07151020 | .WASHER | | |
| 032 | 004 | | 06471001 | .LOCKNUT | | |
| 033 | 002 | | 06351655 | BOLT | | |
| 034 | 004 | | 07151630 | WASHER | | |
| 035 | 002 | | 06471601 | LOCKNUT | | |
| 036 | 001 | | 15323047 | CROSSMEMBER ASSY | | |

11/08 (ECN 109311)

100-0010-9471 CHASSIS
FROM SERIAL NO. A9461017

DRAWING NO. P11828

P11828

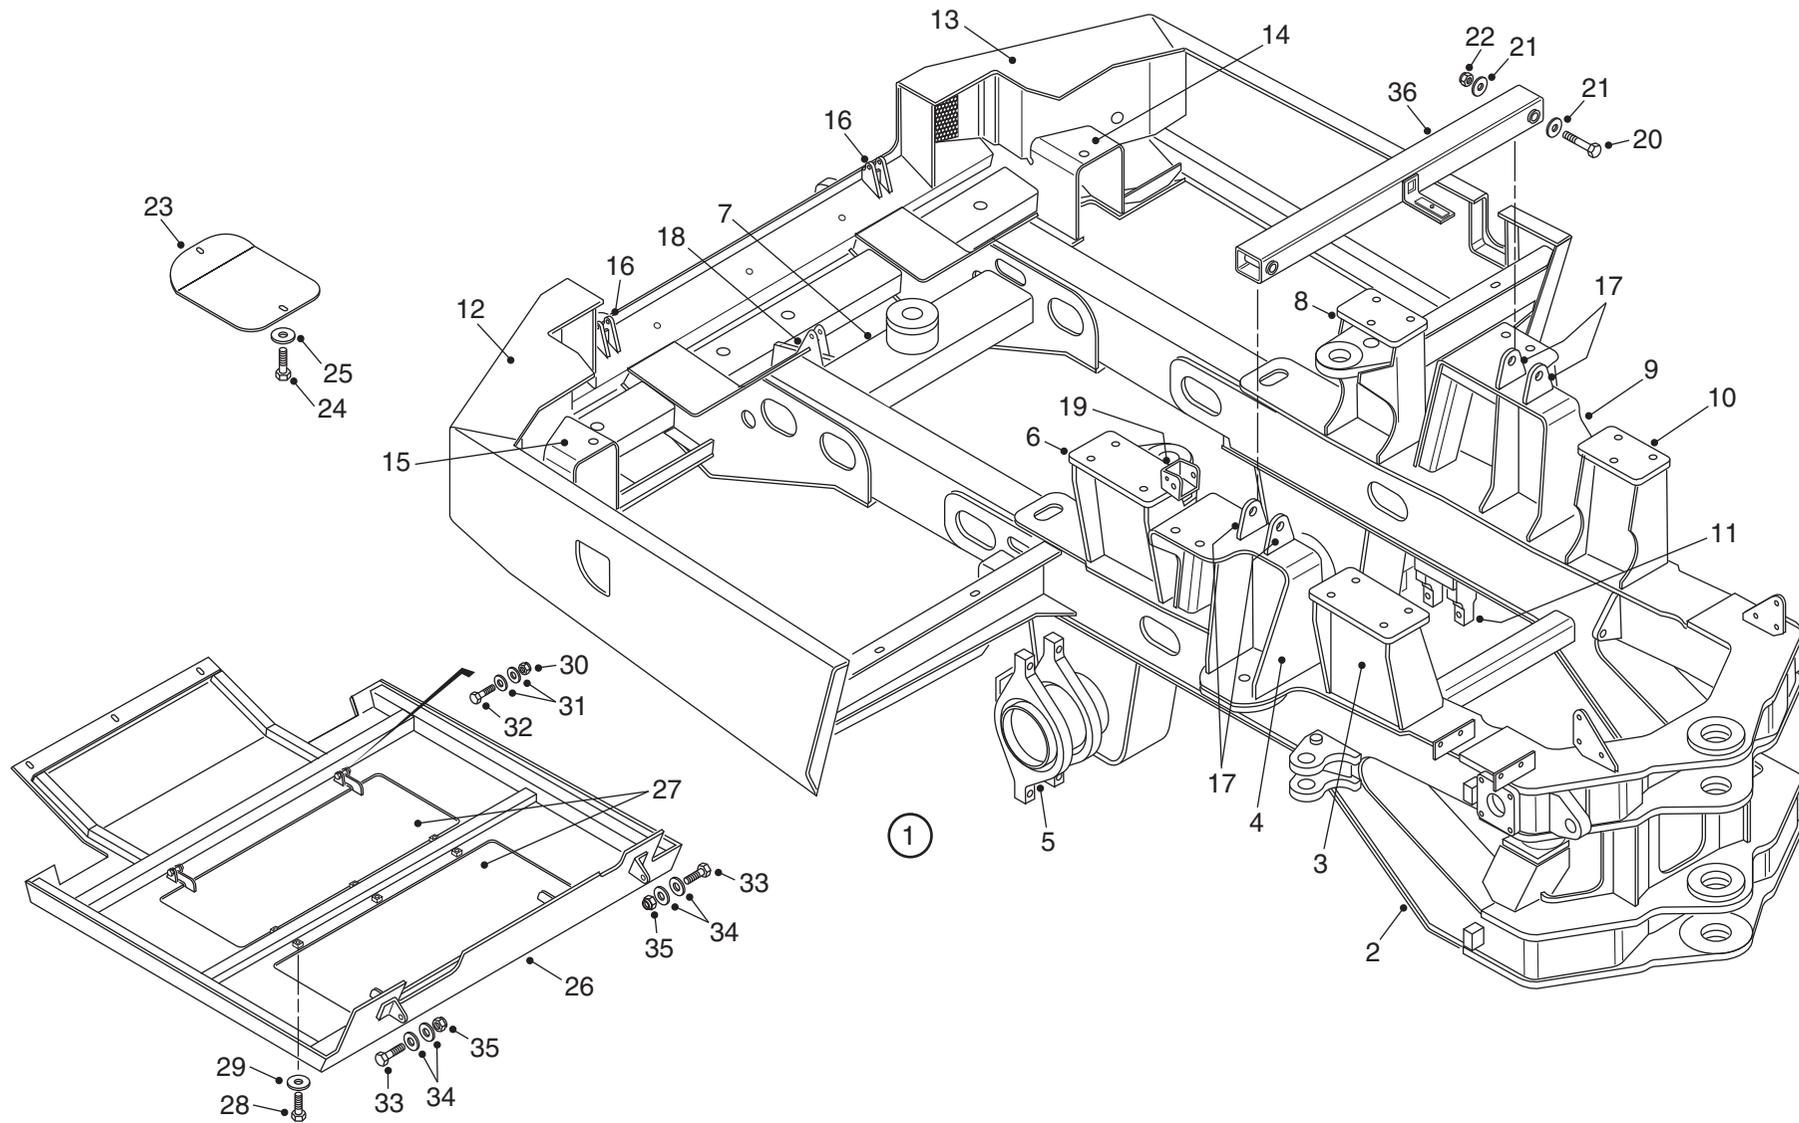

100-0010-9471 CHASSIS
FROM SERIAL NO. A9461017


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|--------------------------|-----------------|---------------|
| 001 | 001 | | 15344188 | FRAME ASSY-TRACTOR | | |
| 002 | 001 | | 15319635 | .FRAME-FRONT SUB ASSY | | |
| 003 | 001 | | 15319764 | .CAB MOUNT ASSY | | |
| 004 | 001 | | 15336646 | .SUSPENSION MOUNT-LH | | |
| 005 | 001 | | 15320693 | .SUSPENSION FRAME | | |
| 006 | 001 | | 15319763 | .CAB MOUNT ASSY | | |
| 007 | 001 | | 15319684 | .CROSSMEMBER | | |
| 008 | 001 | | 15319098 | .CAB MOUNT ASSY | | |
| 009 | 001 | | 15336647 | .SUSPENSION MOUNT-RH | | |
| 010 | 001 | | 15319099 | .CAB MOUNT ASSY | | |
| 011 | 001 | | 15319712 | .BRACKET ASSY(PANHARD) | | |
| 012 | 001 | | 15322887 | .HEADLIGHT PLATE ASSY-LH | | |
| 013 | 001 | | 15322888 | .HEADLIGHT PLATE ASSY-RH | | |
| 014 | 001 | | 15336509 | .PLATE-TANK SUPPORT-RH | | |
| 015 | 001 | | 15336508 | .PLATE-TANK SUPPORT-LH | | |
| 016 | 002 | | 15322886 | .HOOD HINGE ASSY | | |
| 017 | 004 | | 15319780 | .PLATE-CROSSMEMBER | | |
| 018 | 001 | | 15321276 | .HOOD PROP FRAME ASSY | | |
| 019 | 001 | | 15323495 | .BRACKET-CAB PROP | | |
| 020 | 002 | | 15330267 | BOLT-M24 | | |
| 021 | 004 | | 15234742 | WASHER | | |
| 022 | 002 | | 06642401 | LOCKNUT | | |
| 023 | 001 | | 15322527 | PANEL-ACCESS COVER | | |
| 024 | 002 | | 06351220 | BOLT | | |
| 025 | 002 | | 07161230 | LOCKWASHER | | |
| 026 | 001 | | 15330134 | SUMP GUARD ASSY | | |
| 027 | 002 | | 15324298 | .INSPECTION COVER | | |
| 028 | 006 | | 06351230 | .BOLT | | |
| 029 | 006 | | 09217321 | .WASHER | | |
| 030 | 004 | | 06351035 | .BOLT | | |
| 031 | 008 | | 07151020 | .WASHER | | |
| 032 | 004 | | 06471001 | .LOCKNUT | | |
| 033 | 002 | | 06351655 | BOLT | | |
| 034 | 004 | | 07151630 | WASHER | | |
| 035 | 002 | | 06471601 | LOCKNUT | | |
| 036 | 001 | | 15323047 | CROSSMEMBER ASSY | | |

R1 01/09 (ECN 109564)

100-0030-9471 SOUND INSULATION
FROM SERIAL NO. A9461011

DRAWING NO. P11922

P11922

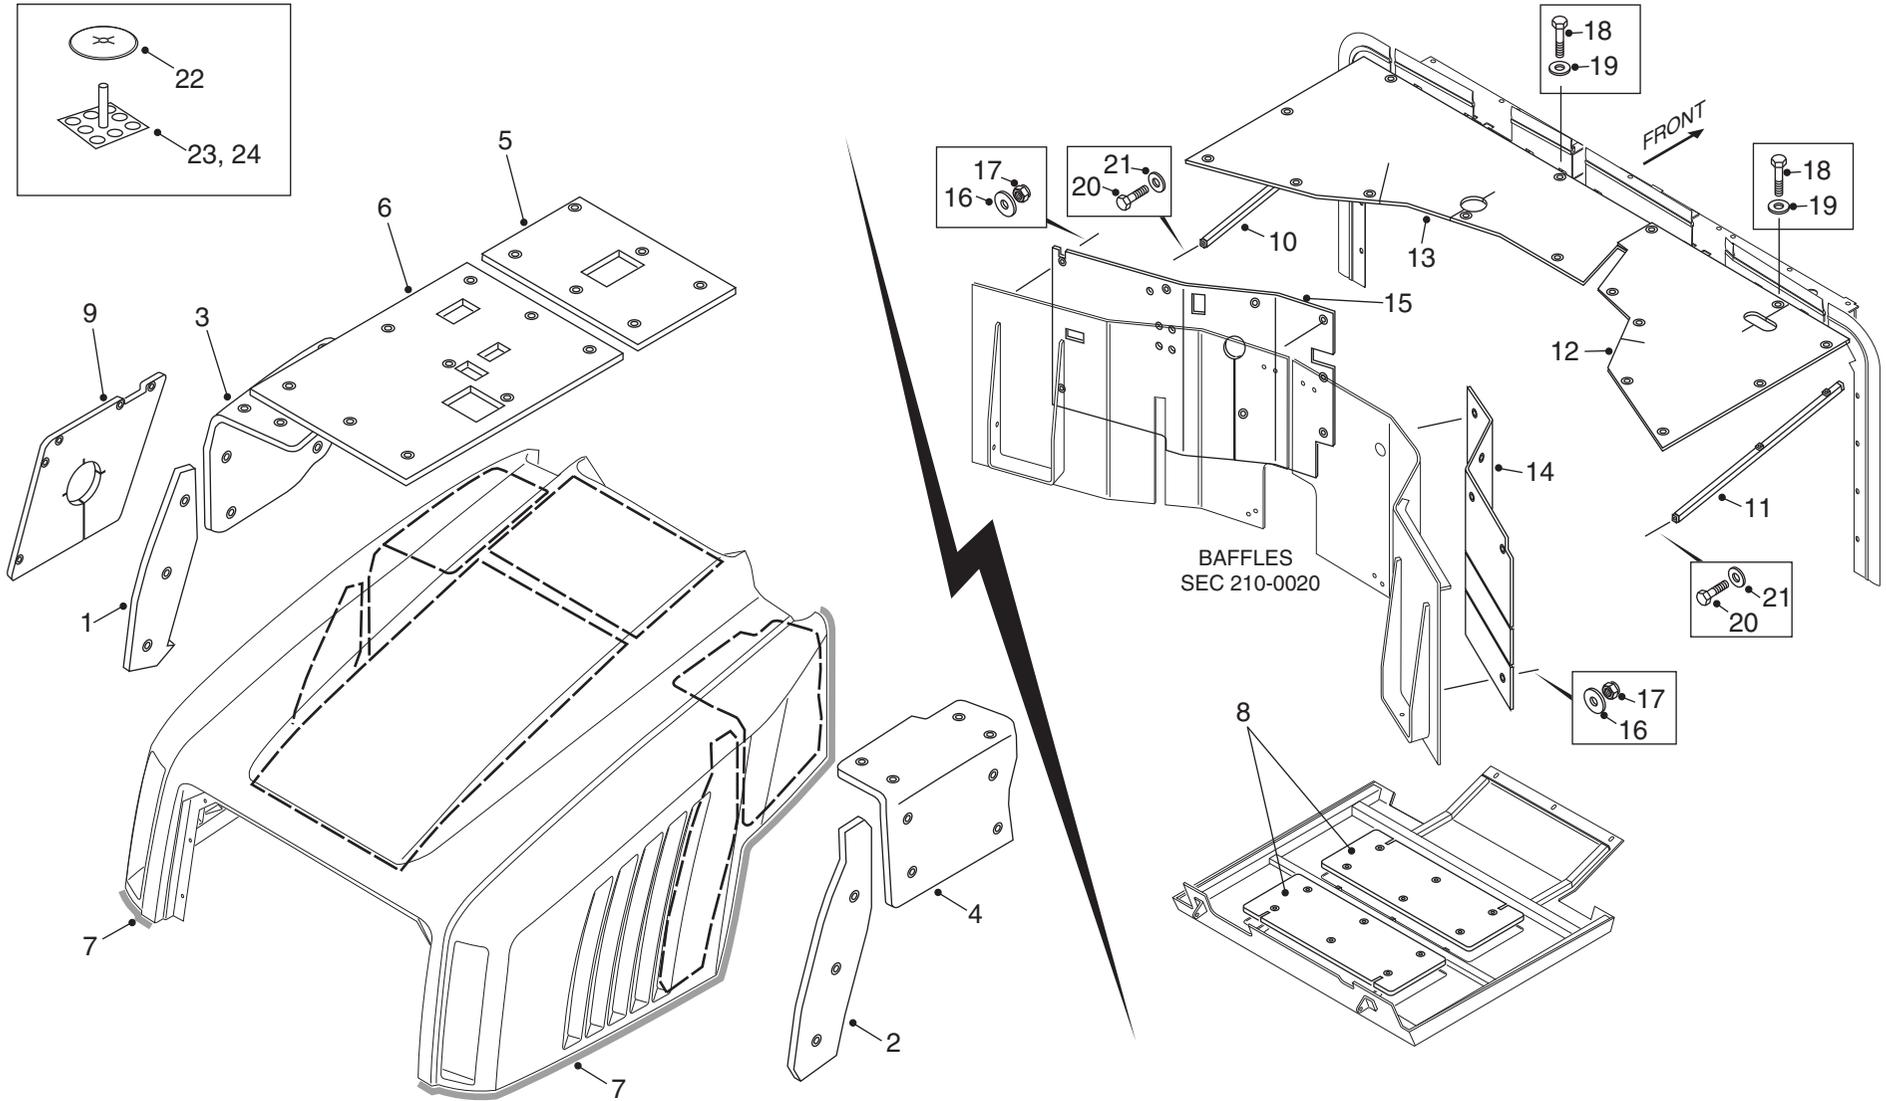




100-0030-9471 SOUND INSULATION
FROM SERIAL NO. A9461011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|-----------------------|-----------------|---------------|
| 001 | 001 | | 15333049 | QUILT-HOOD RIGHT/MID | | |
| 002 | 001 | | 15333051 | QUILT-HOOD LEFT/MID | | |
| 003 | 001 | | 15333055 | QUILT-HOOD RIGHT/MID | | |
| 004 | 001 | | 15333057 | QUILT-HOOD LEFT/REAR | | |
| 005 | 001 | | 15333059 | QUILT-HOOD TOP/REAR | A9461011 | A9461016 |
| 005 | 001 | | 15347290 | QUILT-HOOD TOP/REAR | A9461017 | |
| 006 | 001 | | 15333060 | QUILT-HOOD TOP/FRONT | A9461011 | A9461016 |
| 006 | 001 | | 15347291 | QUILT-HOOD TOP/FRONT | A9461017 | |
| 007 | ASR | | 15319946 | LIP SEAL | | |
| 008 | 002 | | 15333041 | QUILT-SUMP GUARD | | |
| 009 | 001 | | 15333063 | QUILT-AIR INTAKE | | |
| 010 | 001 | | 15334598 | TIE BAR ASSY | | |
| 011 | 001 | | 15334607 | TIE BAR ASSY | | |
| 012 | 001 | | 15334216 | QUILT-ENGINE/RADIATOR | | |
| 013 | 001 | | 15334213 | QUILT-ENGINE/RADIATOR | | |
| 014 | 001 | | 15333032 | QUILT-ENGINE/RADIATOR | | |
| 015 | 001 | | 15333037 | QUILT-ENGINE/RADIATOR | | |
| 016 | 015 | | 15316089 | WASHER | | |
| 017 | 015 | | 06470601 | LOCKNUT | | |
| 018 | 014 | | 06351030 | BOLT | | |
| 019 | 014 | | 00106264 | WASHER | | |
| 020 | 002 | | 06351025 | BOLT | | |
| 021 | 002 | | 07151020 | WASHER | | |
| 022 | ASR | | 15501136 | CAP | | |
| 023 | ASR | | 15503209 | STUD-LONG 55MM | | |
| 024 | ASR | | 15503210 | STUD-SHORT 35MM | | |

100-0040-9471 HOOD AND MOUNTING
FROM SERIAL NO. A9461011


DRAWING NO. P11882

P11882

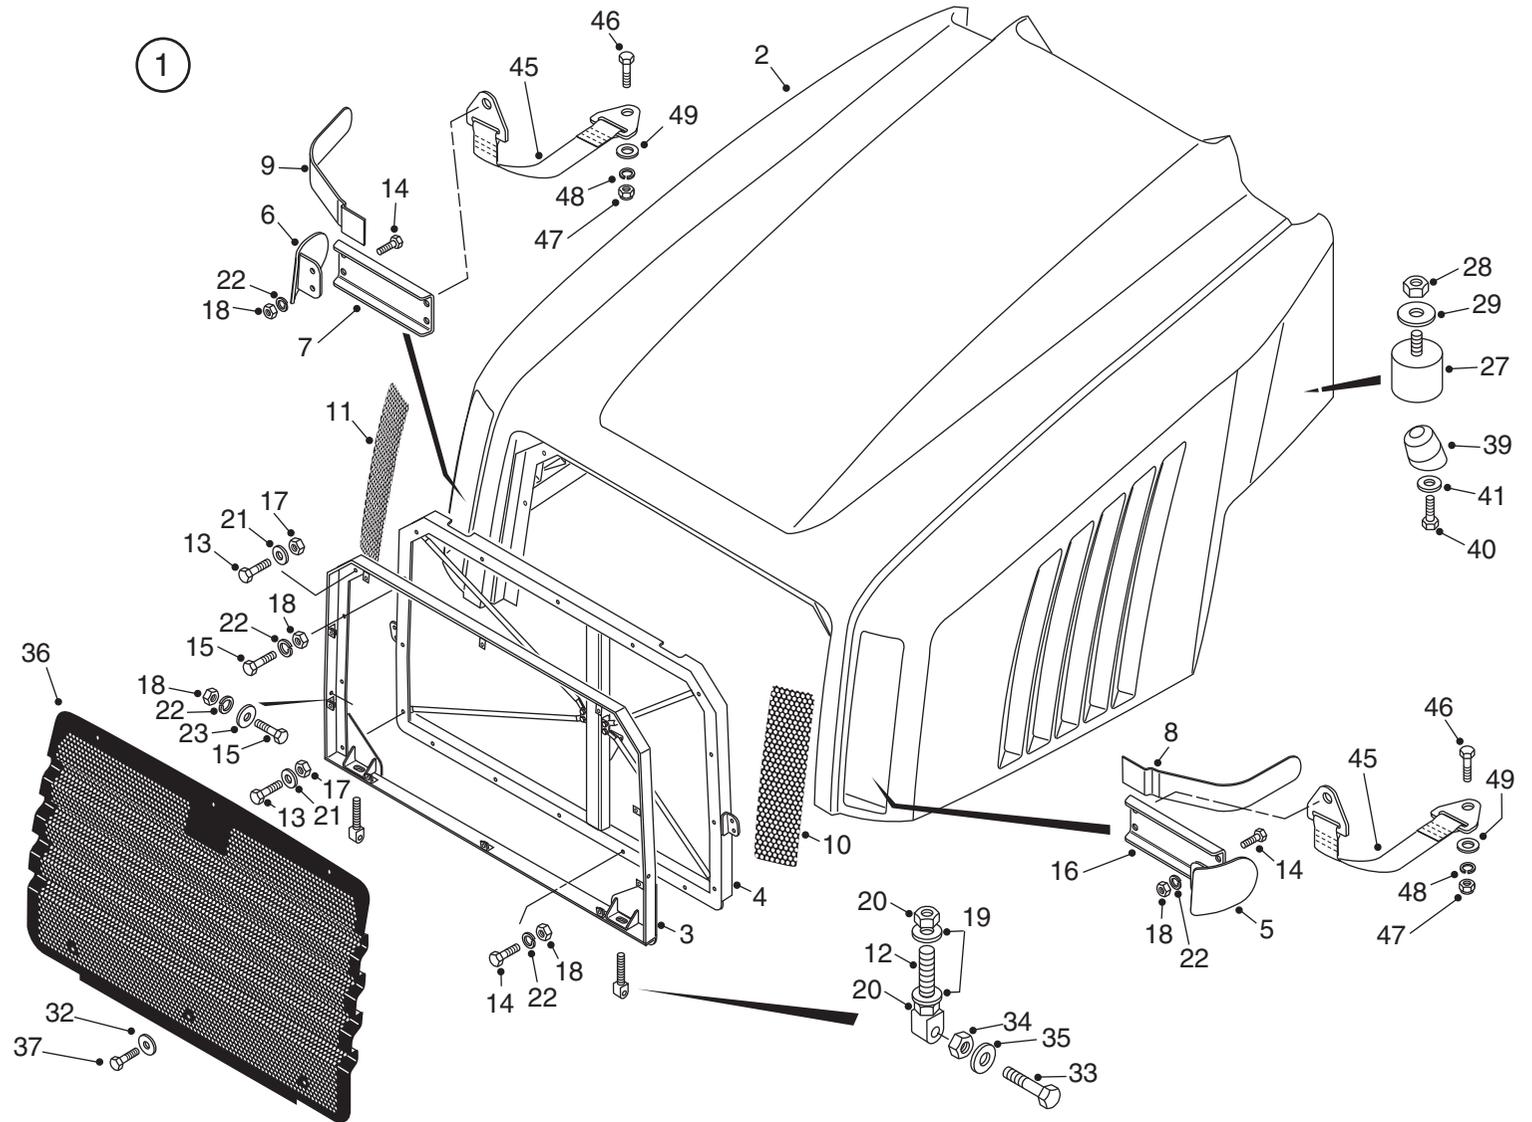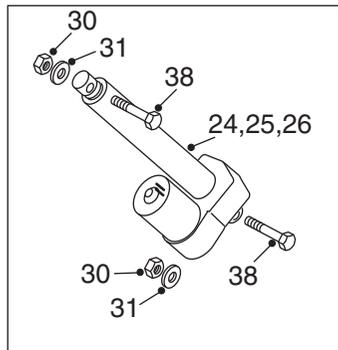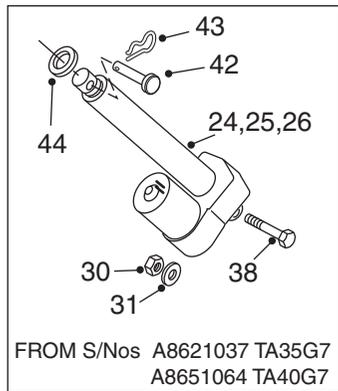

100-0070-9471 FENDERS AND MOUNTING
FROM SERIAL NO. A9461011 TO A9461016

P11885

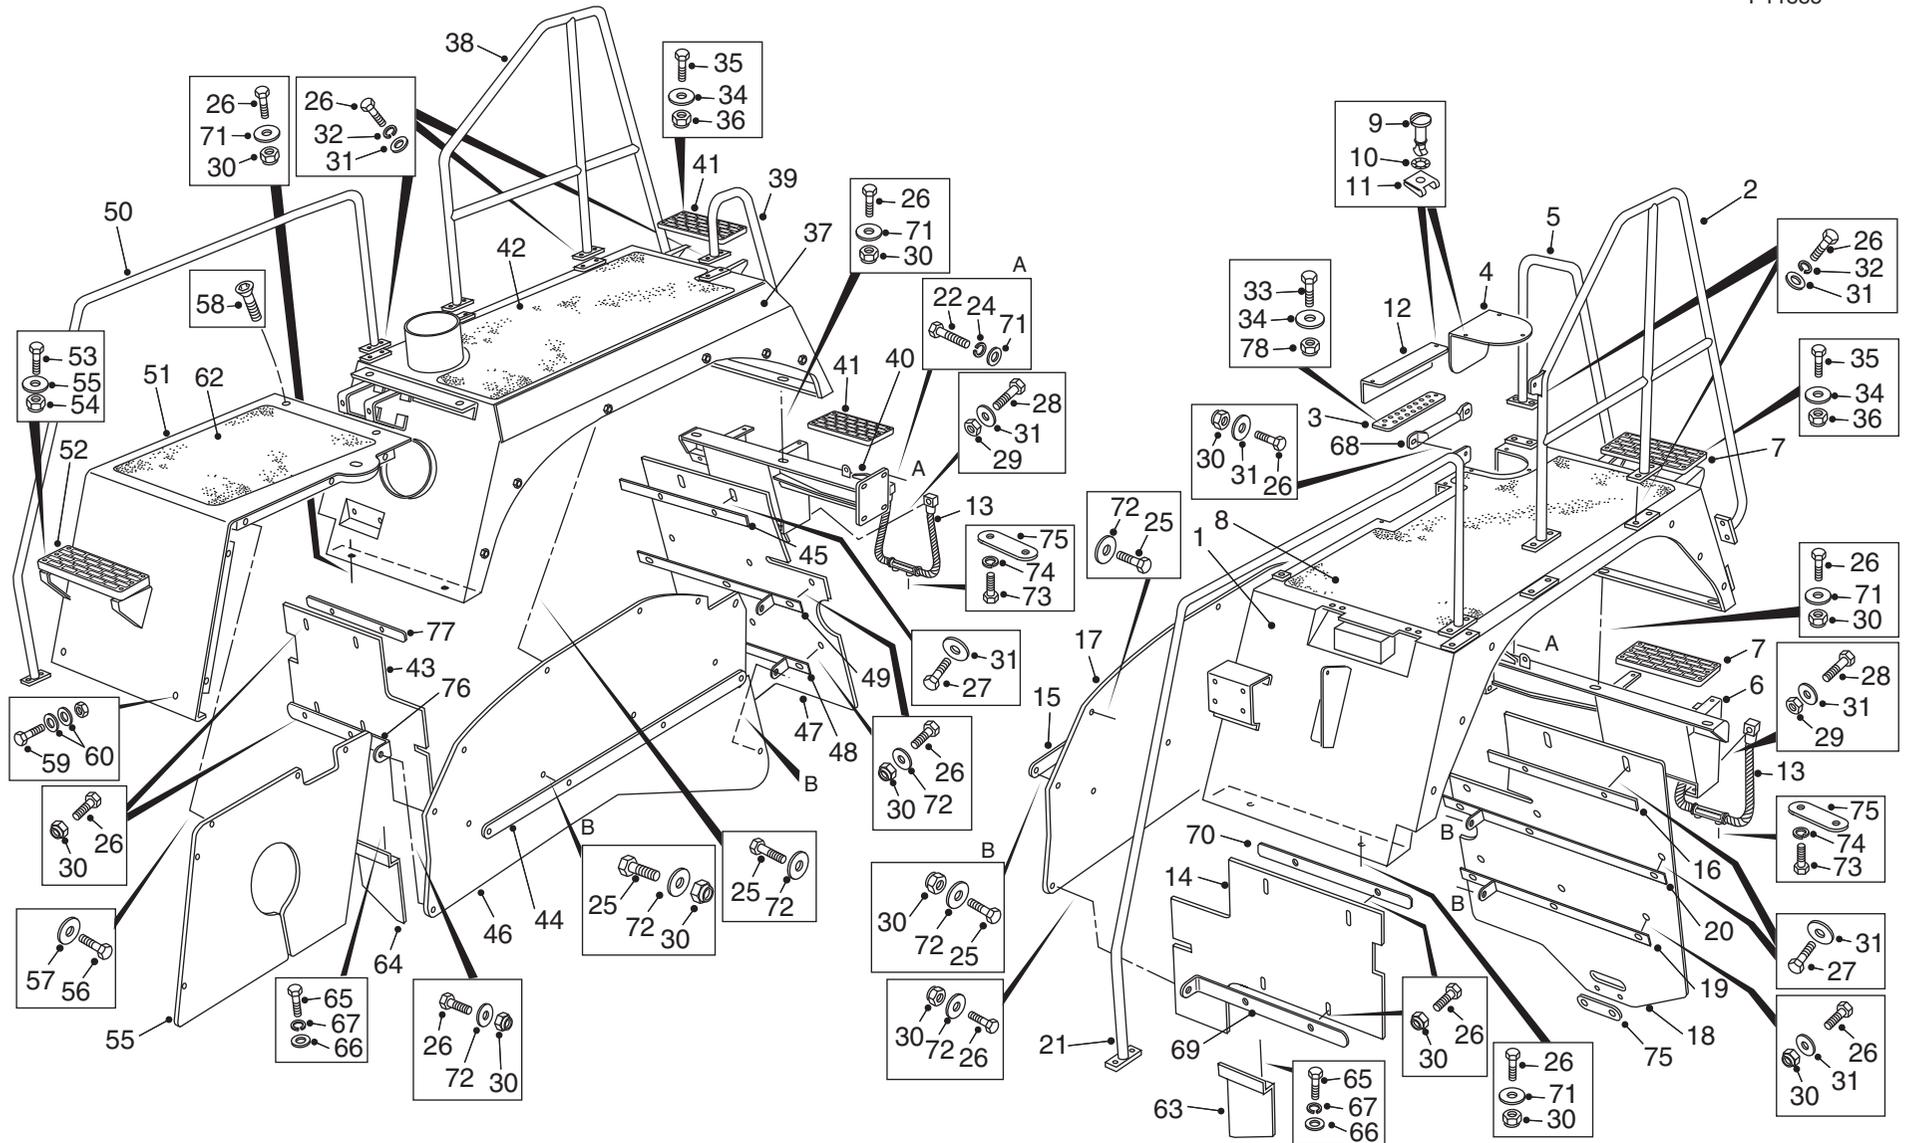

100-0070-9471 FENDERS AND MOUNTING
FROM SERIAL NO. A9461011 TO A9461016

100-0070-9471 FENDERS AND MOUNTING
FROM SERIAL NO. A9461011 TO A9461016


| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO | NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|-----------------------|-----------------|---------------|-----|-----|-----|----------|--------------------------|-----------------|---------------|
| 001 | 001 | | 15323684 | FENDER ASSY-LH | | | 040 | 001 | | 15331211 | SUPPORT ARM ASSY-RH | | |
| 002 | 002 | | 15332628 | HANDRAIL-OUTER | | | 041 | 004 | | 15320662 | TREADPLATE-STEP | | |
| 003 | 001 | | 15323203 | DIAGNOSTIC PANEL | | | 042 | 001 | | 15331159 | WALKWAY (ANTI SLIP) | | |
| 004 | 001 | | 15323239 | COVER-ACCESS PANEL | | | 043 | 001 | | 15332504 | FENDER LINER-FRONT | | |
| 005 | 001 | | 15323683 | HANDRAIL-INNER LH | | | 044 | 001 | | 15331295 | FENDER LINER REINFORCING | | |
| 006 | 001 | | 15323667 | SUPPORT ARM-LH | | | 045 | 001 | | 15331288 | FENDER MTG PLATE | | |
| 007 | 008 | | 15320662 | TREADPLATE-STEP | | | 046 | 001 | | 15331251 | RUBBER-FENDER LINER | | |
| 008 | 001 | | 15323678 | ANTI-SLIP WALKWAY | | | 047 | 001 | | 15331287 | RUBBER-FENDER LINER | | |
| 009 | 005 | | 15323231 | DZUZ FASTENER | | | 048 | 001 | | 15331228 | MOUNT-FENDER EXTN | | |
| 010 | 005 | | 15323826 | DZUZ RETAINER | | | 049 | 001 | | 15331229 | MOUNT-FENDER EXTN | | |
| 011 | 005 | | 15323232 | DZUZ RECEPTICLE | | | 050 | 001 | | 15323749 | HANDRAIL RH | | |
| 012 | 001 | | 15323229 | COVER-DIAG. PANEL | | | 051 | 001 | | 15330251 | PLATFORM ASSY | | |
| 013 | 002 | | 15303970 | WIRE STEP | | | 052 | 001 | | 15320662 | .TREADPLATE-STEP | | |
| 014 | 001 | | 15332504 | FENDER LINER-FRONT | | | 053 | 004 | | 00181400 | .BOLT | | |
| 015 | 001 | | 15331295 | FENDER LINER REINF. | | | 054 | 004 | | 09354846 | .LOCKNUT | | |
| 016 | 001 | | 15331289 | MOUNT-FENDER EXTN. | | | 055 | 004 | | 07151020 | .WASHER | | |
| 017 | 001 | | 15331251 | RUBBER FENDER LINER | | | 056 | 005 | | 06351025 | BOLT | | |
| 018 | 001 | | 15331227 | RUBBER FENDER EXTN LH | | | 057 | 005 | | 07151020 | WASHER | | |
| 019 | 001 | | 15331228 | MOUNT-FENDER EXTN | | | 058 | 002 | | 15310942 | SOCKET SCREW | | |
| 020 | 001 | | 15331229 | MOUNT-FENDER EXTN | | | 059 | 002 | | 06351250 | BOLT | | |
| 021 | 001 | | 15323748 | HANDRAIL LH | | | 060 | 004 | | 07151220 | WASHER | | |
| 022 | 008 | | 15311176 | BOLT | | | 061 | 002 | | 06471201 | NUT | | |
| 023 | 008 | | 07151630 | WASHER | | | 062 | 001 | | 15332714 | WALKWAY-ANTI SLIP | | |
| 024 | 008 | | 07161630 | LOCKWASHER | | | 063 | | | | NOT USED | | |
| 025 | 028 | | 06351225 | BOLT | | | 064 | | | | NOT USED | | |
| 026 | 056 | | 06351230 | BOLT | | | 065 | 004 | | 06350820 | BOLT | | |
| 027 | 004 | | 06351235 | BOLT | | | 066 | 004 | | 07150815 | WASHER | | |
| 028 | 006 | | 15244017 | BOLT | | | 067 | 004 | | 07160830 | WASHER | | |
| 029 | 004 | | 06431201 | NUT | | | 068 | 001 | | 15332664 | FILLER-HANDRAIL | | |
| 030 | 040 | | 06471201 | LOCKNUT | | | 069 | 001 | | 15332502 | PLATE-BENT | | |
| 031 | 118 | | 07151220 | WASHER | | | 070 | 001 | | 15332503 | PLATE | | |
| 032 | 056 | | 07161230 | LOCKWASHER | | | 071 | 016 | | 09267660 | WASHER-HDN | | |
| 033 | 002 | | 06351025 | BOLT | | | 072 | 028 | | 09024430 | WASHER | | |
| 034 | 032 | | 07151020 | WASHER | | | 073 | 004 | | 06350825 | BOLT | | |
| 035 | 032 | | 15244817 | SCREW | | | 074 | 004 | | 07160830 | LOCKWASHER | | |
| 036 | 032 | | 06471001 | LOCKNUT | | | 075 | 004 | | 15334927 | PLATE | | |
| 037 | 001 | | 15331147 | FENDER ASSY-RH | | | 076 | 001 | | 15332502 | PLATE-MOUNT LINER | | |
| 038 | 001 | | 15323682 | HANDRAIL-OUTER | | | 077 | 001 | | 15332503 | PLATE-MOUNT LINER | | |
| 039 | 001 | | 15331212 | HANDRAIL-INNER RH | | | 078 | 001 | | 15330253 | RUBBER COVER | | |

11/08 (ECN 109311)

100-0070-9471 FENDERS AND MOUNTING
FROM SERIAL NO. 9461017

DRAWING NO. P12307

P12307

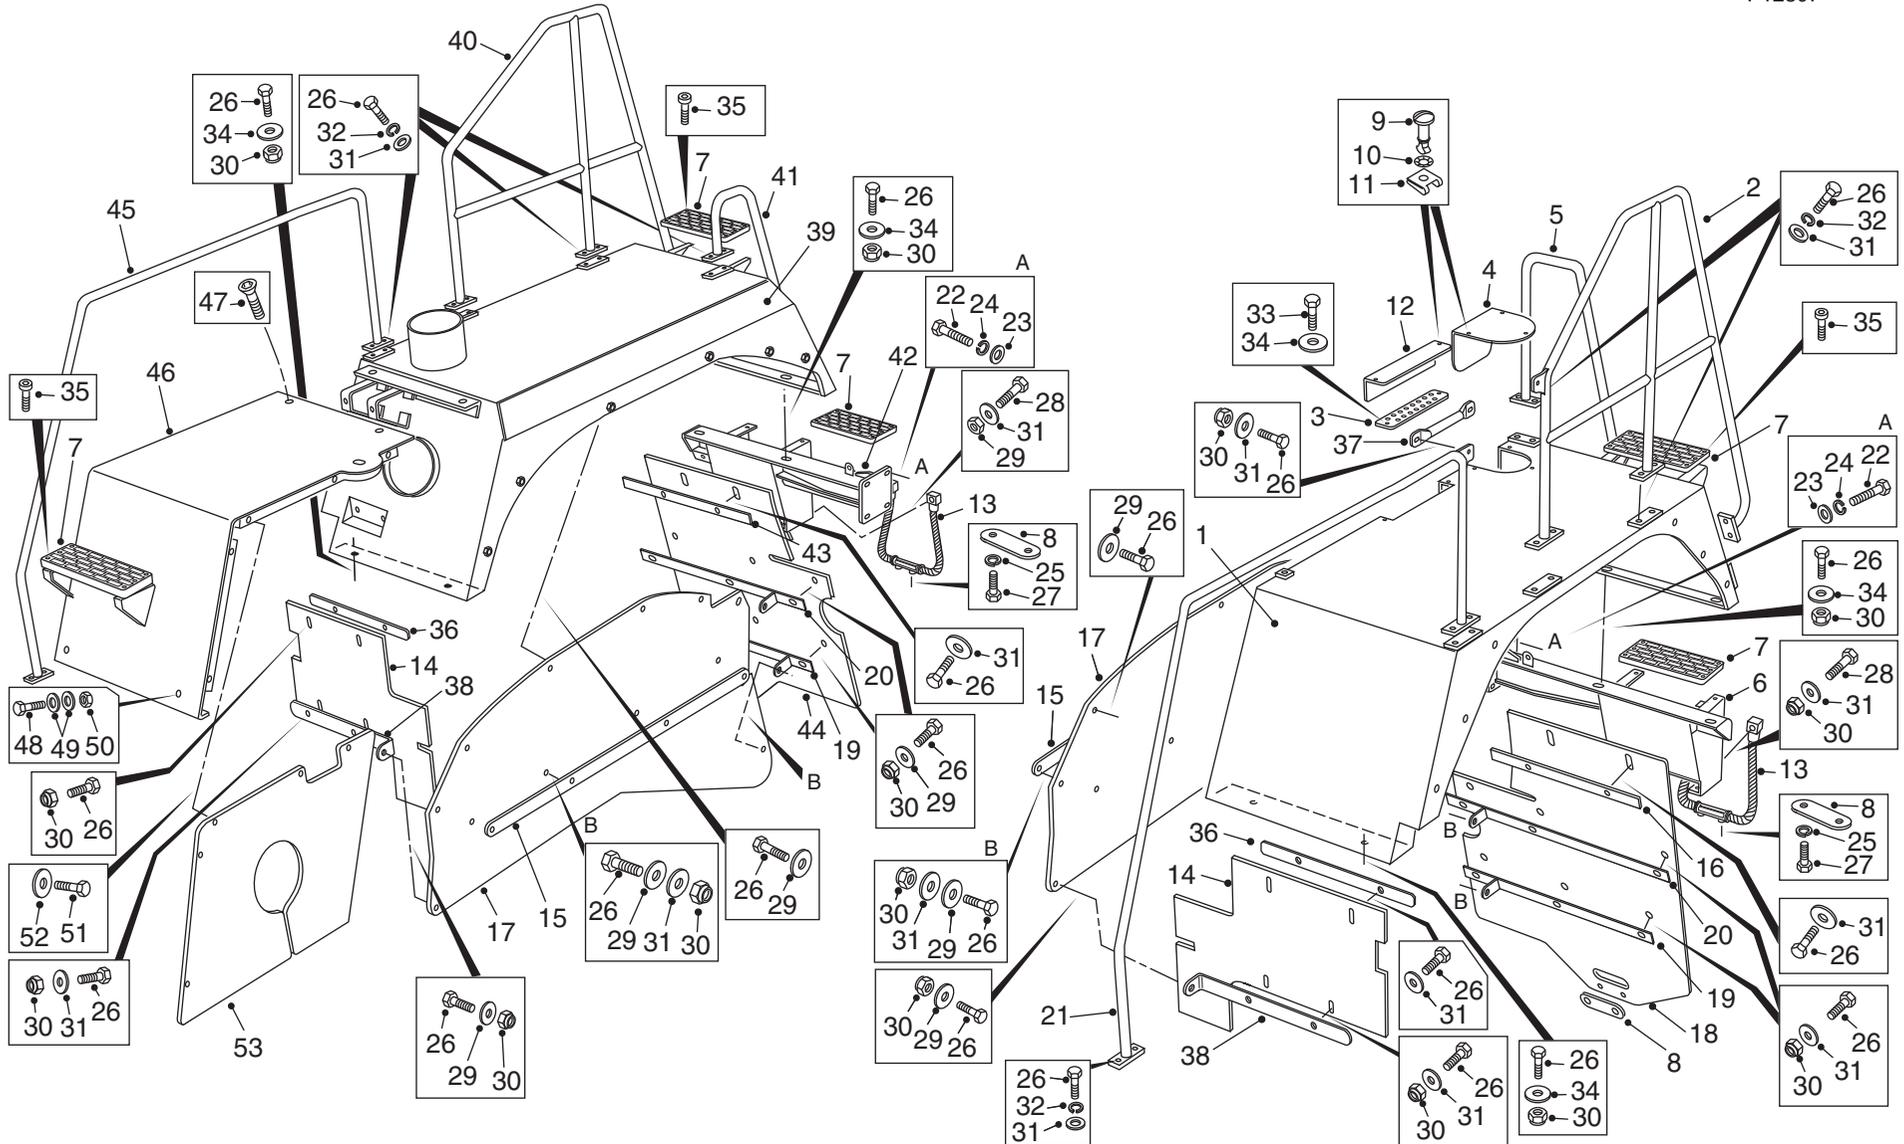

100-0070-9471 FENDERS AND MOUNTING
FROM SERIAL NO. A9461017


100-0070-9471 FENDERS AND MOUNTING
FROM SERIAL NO. A9461017

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO | NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|---------------------------|-----------------|---------------|-----|-----|-----|----------|--------------------------|-----------------|---------------|
| 001 | 001 | | 15344578 | FENDER ASSY-POS H/TANK | | | 041 | 001 | | 15331212 | HANDRAIL INNER-FENDER | | |
| 002 | 001 | | 15332628 | HANDRAIL-OUTER | | | 042 | 001 | | 15331211 | SUPPORT ARM ASSY-FENDER | | |
| 003 | 001 | | 15323203 | PLATE-DIAGNOSTIC | | | 043 | 001 | | 15331288 | PLATE-MOUNTING FENDER | | |
| 004 | 001 | | 15323239 | PLATE-ACCESS COVER | | | 044 | 001 | | 15331287 | RUBBER SHEET-FENDER EXTN | | |
| 005 | 001 | | 15323683 | HANDRAIL-INNER LH | | | 045 | 001 | | 15323749 | HANDRAIL-RH | | |
| 006 | 001 | | 15323667 | STEP ASSY-SUPPORT ARM | | | 046 | 001 | | 15330251 | PLATFORM ASSY | | |
| 007 | 009 | | 15320662 | FOOTSTEP-TREADPLATE | | | 047 | 002 | | 15310942 | SCREW-S/HEAD C/S M8X20 | | |
| 008 | 004 | | 15334927 | PLATE-MOUNTING FENDER | | | 048 | 002 | | 06351250 | BOLT | | |
| 009 | 005 | | 15323231 | SCREW | | | 049 | 008 | | 07151220 | WASHER | | |
| 010 | 005 | | 15323826 | RETAINER | | | 050 | 002 | | 06471201 | LOCKNUT | | |
| 011 | 005 | | 15323232 | RECEPTICLE | | | 051 | 005 | | 06351030 | BOLT | | |
| 012 | 001 | | 15323229 | COVER PLATE-DIAGNOSTIC | | | 052 | 005 | | 00106264 | WASHER | | |
| 013 | 002 | | 15303970 | STEP ASSY | | | 053 | 001 | | 15330253 | COVER-RUBBER | | |
| 014 | 002 | | 15332504 | RUBBER SHEET-FENDER LINER | | | | | | | | | |
| 015 | 002 | | 15331295 | PLATE-REINFORCING | | | | | | | | | |
| 016 | 001 | | 15331289 | PLATE-MOUNTING FENDER | | | | | | | | | |
| 017 | 002 | | 15331251 | RUBBER SHEET-FENDER LINER | | | | | | | | | |
| 018 | 001 | | 15331227 | RUBBER SHEET-FENDER EXTN | | | | | | | | | |
| 019 | 002 | | 15331228 | PLATE-MTG FENDER EXTN | | | | | | | | | |
| 020 | 002 | | 15331229 | PLATE-MTG FENDER EXTN | | | | | | | | | |
| 021 | 001 | | 15323748 | HANDRAIL-LH | | | | | | | | | |
| 022 | 008 | | 15311176 | BOLT | | | | | | | | | |
| 023 | 008 | | 07151630 | WASHER | | | | | | | | | |
| 024 | 008 | | 07161630 | LOCKWASHER | | | | | | | | | |
| 025 | 004 | | 07160830 | LOCKWASHER | | | | | | | | | |
| 026 | 086 | | 06351230 | BOLT | | | | | | | | | |
| 027 | 004 | | 06350825 | BOLT | | | | | | | | | |
| 028 | 004 | | 15244017 | BOLT | | | | | | | | | |
| 029 | 028 | | 09024430 | WASHER | | | | | | | | | |
| 030 | 044 | | 06471201 | LOCKNUT | | | | | | | | | |
| 031 | 084 | | 07151220 | WASHER | | | | | | | | | |
| 032 | 024 | | 07161230 | LOCKWASHER | | | | | | | | | |
| 033 | 002 | | 06351025 | BOLT | | | | | | | | | |
| 034 | 016 | | 09267660 | WASHER | | | | | | | | | |
| 035 | 036 | | 15244817 | SCREW-SOCKET HEAD | | | | | | | | | |
| 036 | 002 | | 15332503 | PLATE-RUBBER LINER | | | | | | | | | |
| 037 | 001 | | 15332664 | TUBE-HANDRAIL FILLER | | | | | | | | | |
| 038 | 002 | | 15332502 | PLATE BENT-RUBBER LINER | | | | | | | | | |
| 039 | 001 | | 15339383 | FENDER ASSY-RHS | | | | | | | | | |
| 040 | 001 | | 15323682 | HANDRAIL-OUTER | | | | | | | | | |


100-0085-9471 PIVOT AND ACCUMULATOR GUARDS
FROM SERIAL NO. A9461011

DRAWING NO. P11787

P11787

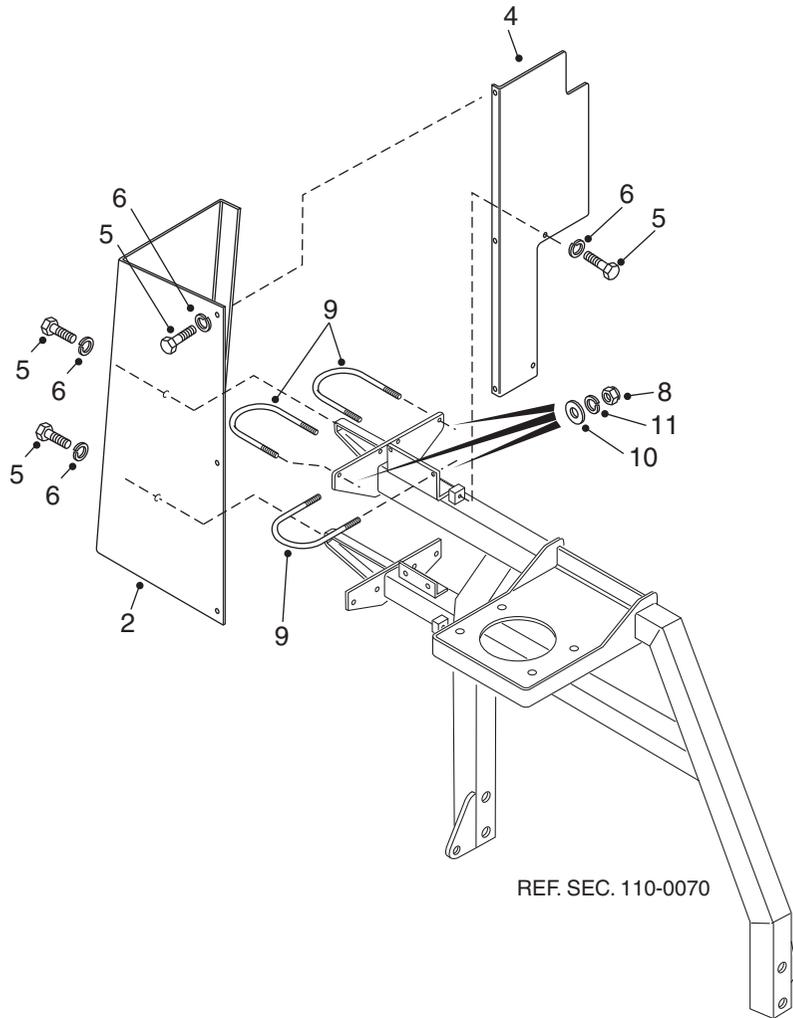


REF. SEC. 110-0070

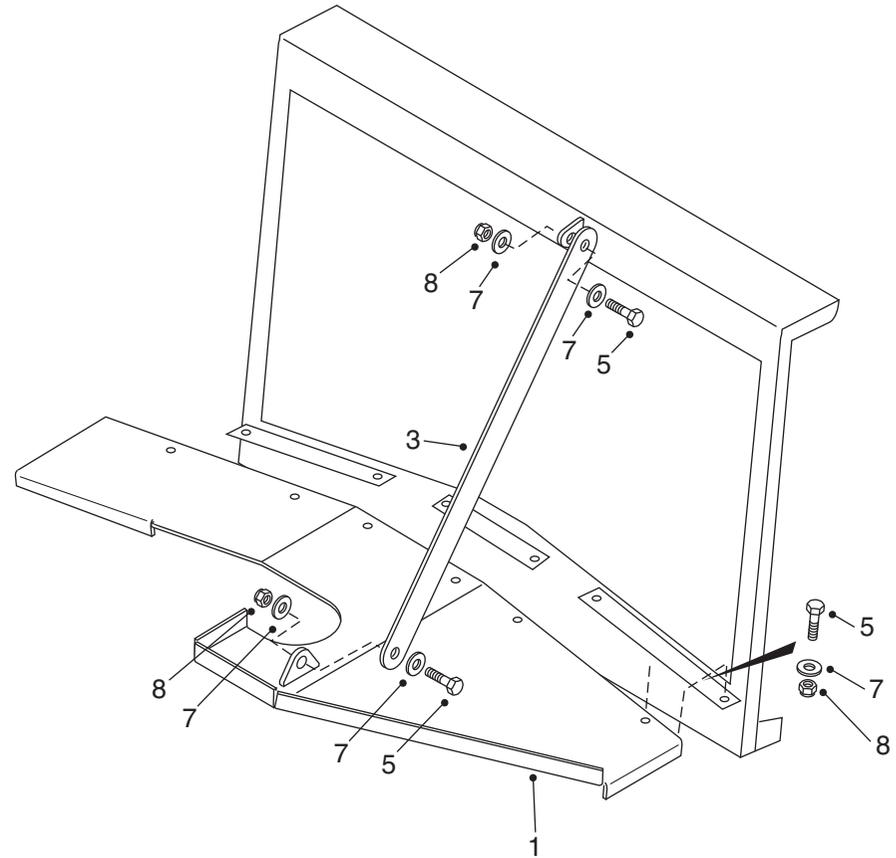

100-0085-9471 PIVOT AND ACCUMULATOR GUARDS
FROM SERIAL NO. A9461011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|-----|-----|-----|----------|-------------------|-----------------|---------------|
| 001 | 001 | | 15330402 | SPILLGUARD | | |
| 002 | 001 | | 15324044 | GUARD-ACCUMULATOR | | |
| 003 | 001 | | 15330400 | BRACE-SPILL GUARD | | |
| 004 | 001 | | 15324043 | PARTITION PLATE | | |
| 005 | 015 | | 06351025 | BOLT | | |
| 006 | 007 | | 07161030 | LOCKWASHER | | |
| 007 | 016 | | 07151220 | WASHER | | |
| 008 | 014 | | 06471001 | LOCKNUT | | |
| 009 | 009 | | 15300442 | U-BOLT | | |
| 010 | 006 | | 00103339 | WASHER | | |
| 011 | 006 | | 07181020 | WASHER | | |

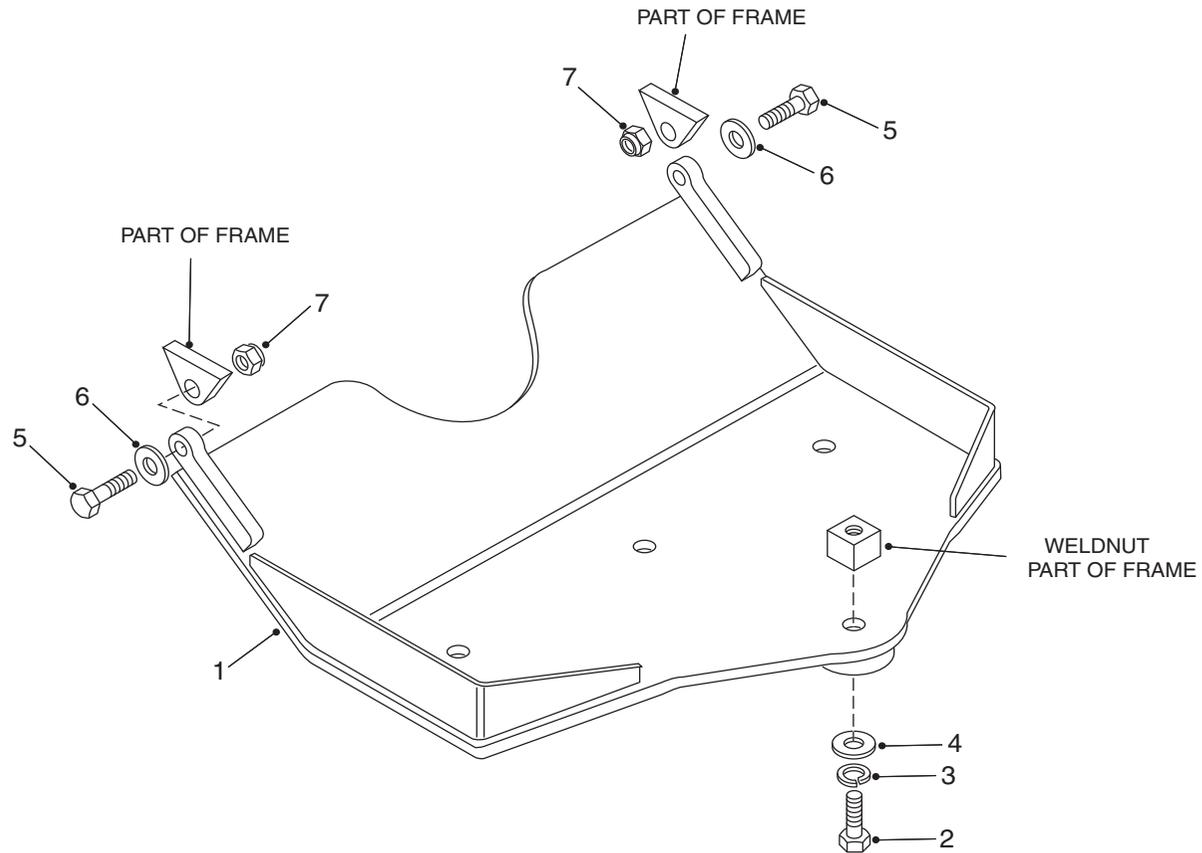

100-0135-9471 ROCK AND SUMP GUARDS
FROM SERIAL NO. A9461011

| NC | REF | QTY | PART NO. | DESCRIPTION | SER.NO. FROM | SER.NO. TO |
|----|-----|-----|----------|-------------|-----------------|---------------|
|----|-----|-----|----------|-------------|-----------------|---------------|

| | | | | | | |
|-----|-----|--|----------|--------------------|--|--|
| 001 | 001 | | 15323057 | SUMP GUARD-DROPBOX | | |
| 002 | 001 | | 15330423 | BOLT M20 | | |
| 003 | 001 | | 07162030 | LOCKWASHER | | |
| 004 | 001 | | 09176228 | WASHER | | |
| 005 | 002 | | 06351670 | BOLT M16 | | |
| 006 | 002 | | 07151630 | WASHER | | |
| 007 | 002 | | 06471601 | LOCKNUT | | |

Product: 2007 TEREX TA35 G7 (OCDB) Articulated Truck (Europe only) Workshop Parts Manual[PN15503705]

Full Download: <https://www.arepairmanual.com/downloads/2007-terex-ta35-g7-ocdb-articulated-truck-europe-only-workshop-parts-manualpn15503705/>

03705/

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 496 pages at:

<https://www.arepairmanual.com/downloads/2007-terex-ta35-g7-ocdb-articulated-truck-europe-only-workshop-parts-manualpn15503705/>