

Product: 2006 TEREX TA40 G7 Articulated Truck Workshop Parts Manual[PN15502612]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-a>

[articulated-truck-workshop-parts-manualpn15502612/](https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-articulated-truck-workshop-parts-manualpn15502612/)



Publication Part Number: **15502612**

Published by : Customer Support Department - TEREX Equipment Limited, Motherwell, Scotland


PARTS BOOK

CLICK HERE FOR  
TRACTOR  
TABLE OF CONTENTS

CLICK HERE FOR  
TRACTOR OPTIONAL  
TABLE OF CONTENTS

CLICK HERE FOR  
TRAILER  
TABLE OF CONTENTS

CLICK HERE FOR  
TRAILER OPTIONAL  
TABLE OF CONTENTS

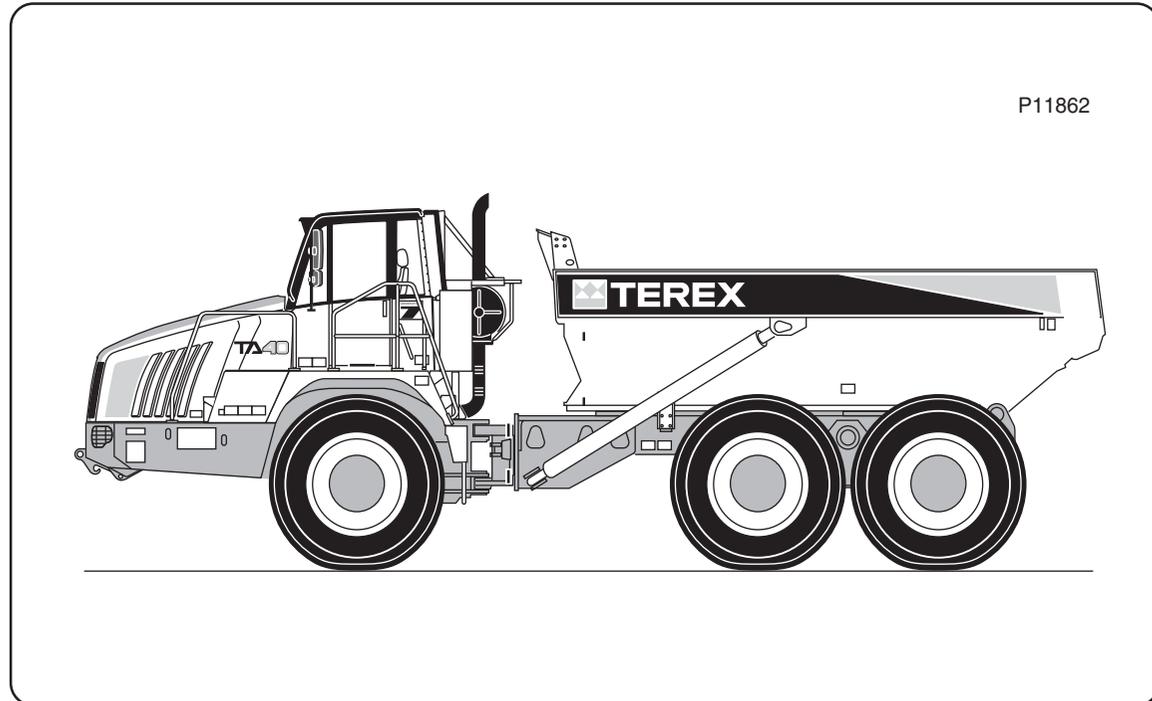

# TA40 G7 Articulated Truck

(Detroit Diesel Series 60 Engine with Allison 4500 ORS\_R Trans)

**Serial Nos. A8651010 and above**

April 2006

*Revised: 18th February 2011*

Sample of manual. Download All 580 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-articulated-truck-workshop-parts-manualpn15502612/>

Product: 2006 TEREX TA40 G7 Articulated Truck Workshop Parts Manual[PN15502612]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-a>

[rticulated-truck-workshop-parts-manualpn15502612/](https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-articulated-truck-workshop-parts-manualpn15502612/)

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 580 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-articulated-truck-workshop-parts-manualpn15502612/>



## WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

\* \* \* \* \*

### SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

## INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

**SECTION 100 - CHASSIS**

**SECTION 140 - FRONT AXLE GROUP**

**SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings.

For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.

**EXAMPLE - 220-0120.**

**SERIAL NUMBERS** - Each Parts Book covers a particular range of unit Serial Numbers.

**It is important that unit Serial Numbers are quoted on all orders for Parts.**

**PARTS LISTS** - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

**ILLUSTRATIONS** - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

---

**INDENTATIONS** - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.  
2 9058512 . Shaft  
3 9024169 . Ring  
4 9058132 . Control Assy.  
5 9058135 . . Spring  
6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

**NOTES** - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

**ABBREVIATIONS** - The abbreviations in this book have the following meanings -

Amps .....	Amperes	Hsg .....	Housing	N.I .....	Not Illustrated
As R .....	As Required	I.D .....	Inside Diameter	N.L.A .....	No Longer Available
Assy .....	Assembly	L.H .....	Left Hand	N.S.S .....	Not Sold Separately
Brkt .....	Bracket	L.W .....	Lockwasher	O.D .....	Outside Diameter
Cad-Pltd .....	Cadium Plated	Lg .....	Long	Pr .....	Pair
Comm .....	Commencement of production	Lkg .....	Linkage	P.T.O .....	Power-Take-Off
E.S.N .....	Elastic Stop Nut	Mtg .....	Mounting	R.H .....	Right Hand
Ftgs .....	Fittings	N.C .....	Note Code	Std .....	Standard



# Articulated Truck



## TRACTOR SECTIONS

	<b>CHASSIS</b>	<b>100</b>		<b>COOLING SYSTEM</b>	<b>210</b>
	<b>ENGINE</b>	<b>110</b>		<b>MAIN HYDRAULIC VALVE</b>	<b>215</b>
	<b>TRANSMISSION</b>	<b>120</b>		<b>STEERING SYSTEM</b>	<b>220</b>
	<b>TRANSMISSION DROPBOX</b>	<b>125</b>		<b>BODY HOIST SYSTEM</b>	<b>230</b>
	<b>DRIVELINE</b>	<b>130</b>		<b>BRAKING SYSTEM</b>	<b>250</b>
	<b>FRONT AXLE</b>	<b>140</b>		<b>CAB</b>	<b>260</b>
	<b>BRAKE PARTS</b>	<b>165</b>		<b>DECALS</b>	<b>290</b>
	<b>SUSPENSION SYSTEM</b>	<b>180</b>		<b>MISCELLANEOUS</b>	<b>300</b>
	<b>ELECTRICAL SYSTEM</b>	<b>190</b>			
	<b>FUEL SYSTEM</b>	<b>200</b>			

**TABLE OF CONTENTS FOR MODEL TA40 G7 TRACTOR**

**FROM SERIAL NO A8651010**

**REVISED 02/11**

<b>SECT-PAGE-PLI</b>	<b>DESCRIPTION</b>	<b>SERIAL NO. EFFECTIVITY</b>	<b>REVISION AND DATE</b>
<b><u>SECTION 100</u></b>			
<b><u>CHASSIS</u></b>			
100-0010-8661	CHASSIS	A8651010 TO A8651314	R1 11/07
100-0010-8661	CHASSIS	A8651315	11/08
100-0030-8661	SOUND INSULATION		R3 01/09
100-0040-8661	HOOD AND MOUNTING		R3 02/07
100-0070-8661	FENDERS AND MOUNTING	A8651010 TO A8651015	
100-0070-8661	FENDERS AND MOUNTING	A8651016 TO A8651314	R2 10/07
100-0070-8661	FENDERS AND MOUNTING	A8651315	11/08
100-0085-8661	PIVOT & ACCUMULATOR GUARD		
100-0135-8661	ROCK AND SUMP GUARDS		
<b><u>SECTION 110</u></b>			
<b><u>ENGINE</u></b>			
110-0020-8661	ENGINE ORDERING INSTRUCTIONS		
110-0030-8661	ENGINE AND MOUNTING		R3 01/08
110-0050-8661	AIR CLEANER ASSEMBLY		
110-0060-8661	AIR CLEANER MOUNTING PIPES AND HOSES		R1 10/06
110-0070-8661	EXHAUST AND MOUNTING	A8651010 TO A8651382	R8 06/08
110-0070-8661	EXHAUST AND MOUNTING	A86511383	09/09
<b><u>SECTION 120</u></b>			
<b><u>TRANSMISSION</u></b>			
120-0010-8661	TRANSMISSION MOUNTING		R3 10/08
120-0020-8661	TRANSMISSION BREAKDOWN		R1 10/08
120-0040-8661	P1 PLANETARY GROUP		
120-0045-8661	P2 PLANETARY GROUP		
120-0046-8661	P3 PLANETARY & REAR COVER/RETARDER		
120-0050-8661	CONTROL VALVE		
120-0070-8661	SHIFT CONTROL		R2 10/06
120-0090-8661	POWER TAKE-OFF MAIN PUMP		R1 10/06
120-0100-8661	TRANS OIL FILTERS		R1 04/09
120-0125-8661	OIL COOLER GROUP		
120-0135-8661	FRONT SUPPORT & OIL PUMP		
120-0200-8661	FRONT COVER & CONVERTER GROUP		
120-0210-8661	CONVERTER HOUSING GROUP		
120-0215-8661	FLEXPLATE AND ADAPTOR		
120-0225-8661	ROTATING CLUTCH		
120-0235-8661	MAIN SHAFT		
120-0255-8661	RETARDER CONTROLS		
120-0290-8661	MAIN HOUSING GROUP		

## TABLE OF CONTENTS FOR MODEL TA40 G7 TRACTOR

FROM SERIAL NO A8651010

REVISED 02/11

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 125</u></b>	<b><u>TRANSMISSION DROPBOX</u></b>		
125-0010-8661	DROPBOX MOUNTING	A8651010 TO A8651158	R2 10/06
125-0010-8661	DROPBOX MOUNTING	A8651159	R1 11/08
125-0020-8661	DROPBOX ASSEMBLY	A8651010 TO A8651158	R4 06/10
125-0020-8661	DROPBOX ASSEMBLY	A8651159 TO A8651293	R2 11/08
125-0020-8661	DROPBOX ASSEMBLY	A8651294 TO A8651381	R1 11/08
125-0020-8661	DROPBOX ASSEMBLY	A8651382	R1 12/09
125-0025-8661	CONTROL VALVE-DROPBOX	A8651010 TO A8651158	
125-0025-8661	CONTROL VALVE-DROPBOX	A8651159	R1 11/07
125-0026-8661	PRESSURE RELIEF VALVE-DROPBOX		11/07
125-0030-8661	EMERGENCY STEERING PUMP ASSEMBLY		R1 05/07
125-0035-8661	PUMP ASSEMBLY-DROPBOX		
125-0040-8661	DIFFERENTIAL-LOCK LINES & FTGS	A8651010 TO A8651314	R1 10/07
125-0040-8661	DIFFERENTIAL-LOCK LINES & FTGS	A8651315	R1 06/09
125-0045-8661	FILTER ASSEMBLY-DROPBOX	A8651010 TO A8651298	R3 03/10
125-0045-8661	FILTER ASSEMBLY-DROPBOX	A8651299	06/08
125-0050-8661	SUCTION FILTER ASSY-DROPBOX		06/07
<b><u>SECTION 130</u></b>	<b><u>DRIVELINE</u></b>		
130-0010-8661	FRONT DRIVELINE		
<b><u>SECTION 140</u></b>	<b><u>FRONT AXLE</u></b>		
140-0010-8661	AXLE COMPLETE-FRONT		R2 06/09
140-0020-8661	AXLE GROUP-FRONT	A8651010 TO A8651016	
140-0020-8661	AXLE GROUP-FRONT	A8651017 TO A8651375	R1 10/08
140-0020-8661	AXLE GROUP-FRONT	A8651376	06/09
140-0030-8661	PLANETARY GEARING-FRONT	A8651010 TO A8651016	
140-0030-8661	PLANETARY GEARING-FRONT	A8651017 TO A8651307	11/06
140-0030-8661	PLANETARY GEARING-FRONT	A8651308	R1 06/09
140-0040-8661	WHEEL, RIM AND TYRE-FRONT	A8651010 TO A8651021	
140-0040-8661	WHEEL, RIM AND TYRE-FRONT	A8651022	
140-0060-8661	DIFFERENTIAL-FRONT		R2 10/08
<b><u>SECTION 165</u></b>	<b><u>BRAKE PARTS</u></b>		
165-0015-8661	BRAKE ASSEMBLY-OCDB(ARTICS)	A8651010 TO A8651016	
165-0015-8661	BRAKE ASSEMBLY-OCDB(ARTICS)	A8651017 TO A8651307	R1 06/08
165-0015-8661	BRAKE ASSEMBLY-OCDB(ARTICS)	A8651308	10/08
<b><u>SECTION 180</u></b>	<b><u>SUSPENSION SYSTEM</u></b>		
180-0020-8661	FRONT SUSPENSION		R4 04/09

## TABLE OF CONTENTS FOR MODEL TA40 G7 TRACTOR

FROM SERIAL NO A8651010

REVISED 02/11

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b>SECTION 190</b>	<b>ELECTRICAL SYSTEM</b>		
190-0010-8661	TERMINALS		
190-0011-8661	CONNECTORS		
190-0030-8661	CABLES/HARNESSES-CAB	A8651010 TO A8651200	R2 05/07
190-0030-8661	CABLES/HARNESSES-CAB	A8651201 TO A8651293	06/07
190-0030-8661	CABLES/HARNESSES-CAB	A8651294	R1 01/09
190-0040-8661	CABLES/HARNESSES-CHASS/ENG	A8651010 TO A8651200	
190-0040-8661	CABLES/HARNESSES-CHASS/ENG	A8651201 TO A8651314	R2 08/08
190-0040-8661	CABLES/HARNESSES-CHASS/ENG	A8651315	11/08
190-0070-8661	BATTERY AND CABLES	A8651010 TO A8651314	R1 06/08
190-0070-8661	BATTERY AND CABLES	A8651315	11/08
190-0080-8661	BATTERY MOUNTING	A8651010 TO A8651314	R2 10/06
190-0080-8661	BATTERY MOUNTING	A8651315	11/08
190-0085-8661	ECU-HYD.SYSTEM MONITORING		R5 01/09
190-0100-8661	ELECTRICAL LIGHTING SYSTEM	A8651010 TO A8651016	
190-0100-8661	ELECTRICAL LIGHTING SYSTEM	A8651017	R1 10/06
190-0110-8661	ALTERNATOR AND MOUNTING		
190-0120-8661	STARTER		
190-0270-8661	SWITCHES AND SENSORS	A8651010 TO A8651314	R3 06/07
190-0270-8661	SWITCHES AND SENSORS	A8651315	11/08
190-0300-8661	RADIO CASSETTE AND SPEAKERS		
190-0310-8661	ELECTRICAL HORN		R2 10/06
<b>SECTION 200</b>	<b>FUEL SYSTEM</b>		
200-0010-8661	FUEL TANK AND MOUNTING	A8651010 TO A8651314	R4 02/09
200-0010-8661	FUEL TANK AND MOUNTING	A8651315	R1 02/09
200-0040-8661	FUEL LINES	A8651010 TO A8651260	R2 10/06
200-0040-8661	FUEL LINES	A8651261	R1 01/09
200-0050-8661	ACCELERATOR CONTROLS		R1 06/08
<b>SECTION 210</b>	<b>COOLING SYSTEM</b>		
210-0015-8661	COMBINATION COOLER RH		R1 09/09
210-0016-8661	COMBINATION COOLER LH		
210-0020-8661	RADIATOR MOUNTING		R3 05/07
210-0025-8661	RADIATOR FAN MOTOR-HYD LINES	A8651010 TO A8651314	R8 06/08
210-0025-8661	RADIATOR FAN MOTOR-HYD LINES	A8651315	R2 03/10
210-0030-8661	RADIATOR PIPING		R2 10/06
210-0035-8661	CHARGE AIR COOLER & PIPING		R5 06/09
210-0040-8661	RADIATOR HEADER TANK & HOSES		R3 09/09

## TABLE OF CONTENTS FOR MODEL TA40 G7 TRACTOR

FROM SERIAL NO A8651010

REVISED 02/11

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 210</u></b>	<b><u>COOLING SYSTEM-CONTINUED</u></b>		
210-0044-8661	FAN DISCONNECT VALVE		
210-0045-8661	LOW TEMP UNLOADER VALVE		
210-0052-8661	OIL COOLING LINES-DISC BRAKES	A8651010 TO A8651314	R3 02/08
210-0052-8661	OIL COOLING LINES-DISC BRAKES	A8651315	R1 01/09
210-0062-8661	TRANS OIL COOLER LINES	A8651010 TO A8651290	R2 02/07
210-0062-8661	TRANS OIL COOLER LINES	A8651291	R5 09/09
210-0063-8661	DROPBOX OIL COOLING & LUBE LINES	A8651010 TO A8651314	R6 06/08
210-0063-8661	DROPBOX OIL COOLING & LUBE LINES	A8651315 TO A8651360	11/08
210-0063-8661	DROPBOX OIL COOLING & LUBE LINES	A8651361	04/09
210-0100-8661	OIL COOLER AND LINES-HYDRAULIC	A8651010 TO A8651260	R2 08/07
210-0100-8661	OIL COOLER AND LINES-HYDRAULIC	A8651261	R2 01/09
<b><u>SECTION 215</u></b>	<b><u>MAIN HYDRAULIC VALVE</u></b>		
215-0050-8661	MAIN HYDRAULIC VALVE ASSY		R3 06/10
<b><u>SECTION 220</u></b>	<b><u>STEERING SYSTEM</u></b>		
220-0010-8661	STEERING LINES	A8651010 TO A8651314	R4 06/08
220-0010-8661	STEERING LINES	A8651315	R1 09/09
220-0090-8661	STEERING VALVE	A8651010 TO A8651023	
220-0090-8661	STEERING VALVE	A8651024	R1 10/06
220-0120-8661	STEERING CYLINDER	A8651010 TO A8651015	
220-0120-8661	STEERING CYLINDER	A8651016	
220-0140-8661	EMERGENCY STEERING VALVE		R1 11/06
220-0230-8661	STEERING COLUMN MOUNTING	A8651010 TO A8651015	
220-0230-8661	STEERING COLUMN MOUNTING	A8651016	
<b><u>SECTION 230</u></b>	<b><u>BODY HOIST SYSTEM</u></b>		
230-0020-8661	LINES AND FITTINGS-BODY HOIST		R4 10/09
230-0050-8661	MAIN HYDRAULIC PUMP ASSEMBLY	A8651010 TO A8651285	R1 02/08
230-0050-8661	MAIN HYDRAULIC PUMP ASSEMBLY	A8651286 TO A8651361	06/08
230-0050-8661	MAIN HYDRAULIC PUMP ASSEMBLY	A8651362	04/09
230-0055-8661	PORTING BLOCK-MAIN PUMP		R2 03/10
230-0081-8661	JOYSTICK-BODY CONTROL		
230-0135-8661	LOAD SENSE CONTROL VALVE		R1 06/09
<b><u>SECTION 250</u></b>	<b><u>BRAKING SYSTEM</u></b>		
250-0020-8661	BRAKE LINES-HYDRAULIC	A8651010 TO A8651314	R5 06/08
250-0020-8661	BRAKE LINES-HYDRAULIC	A8651315	R1 10/09
250-0025-8661	BRAKE COOLANT/HYDRAULIC TANK	A8651010 TO A8651239	R6 06/09

## TABLE OF CONTENTS FOR MODEL TA40 G7 TRACTOR

FROM SERIAL NO A8651010

REVISED 02/11

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<b><u>SECTION 250</u></b>	<b><u>BRAKING SYSTEM-CONTINUED</u></b>		
250-0025-8661	BRAKE COOLANT/HYDRAULIC TANK	A8651240 TO A8651314	R4 06/09
250-0025-8661	BRAKE COOLANT/HYDRAULIC TANK	A8651315	R1 06/09
250-0026-8661	HYDRAULIC TANK PRESSURISATION	A8651010 TO A8651314	R3 11/08
250-0045-8661	MOTOR/TRIPLE PUMP ASSEMBLY		R2 01/09
250-0060-8661	BRAKE ACCUMULATOR	A8651010 TO A8651018	
250-0060-8661	BRAKE ACCUMULATOR	A8651019	
250-0070-8661	TREADLE VALVE (MICO)	A8651010 TO A8651237	R2 08/07
250-0070-8661	TREADLE VALVE (MICO)	A8651238	R1 01/08
250-0240-8661	FILTER ASSY-OCDB		R1 10/06
<b><u>SECTION 260</u></b>	<b><u>CAB</u></b>		
260-0010-8661	CAB ASSEMBLY		R2 08/08
260-0015-8661	CAB MOUNTING	A8651010 TO A865 TBA	R3 08/07
260-0015-8661	CAB MOUNTING	A865 TBA	04/09
260-0018-8661	CAB TILT MECHANISM		R2 01/09
260-0030-8661	CAB DOOR-LEFT HAND		
260-0080-8661	SWITCHES AND INSTRUMENTS	A8651010 TO A8651314	R4 06/07
260-0080-8661	SWITCHES AND INSTRUMENTS	A8651315	R7 04/09
260-0090-8661	SEAT-DRIVER	A8651010 TO A8651015	
260-0090-8661	SEAT-DRIVER	A8651016 TO A8651221	
260-0090-8661	SEAT-DRIVER	A8651222	R1 04/09
260-0110-8661	SEAT-INSTRUCTOR	A8651010 TO A8651015	
260-0110-8661	SEAT-INSTRUCTOR	A8651016	R1 06/07
260-0130-8661	AIR CONDITIONER/HEATER		
260-0140-8661	HEATER LINES AND WIRING		R2 04/09
260-0145-8661	AIR CONDITIONER LINES		R6 06/09
260-0190-8661	WINDSCREEN WASHER		
<b><u>SECTION 290</u></b>	<b><u>DECALS</u></b>		
290-0010-8661	DECALS-ENGLISH	A8651010 TO A8651086	R1 10/06
290-0010-8661	DECALS-ENGLISH (ISO)	A8651087 TO A8651314	R3 02/08
290-0010-8661	DECALS-ENGLISH (ISO)	A8651315	R2 06/09
290-0011-8661	DECALS-ENGLISH (ANSI)	A8651087 TO A8651314	R3 02/08
290-0011-8661	DECALS-ENGLISH (ANSI)	A8651315	R2 06/09
290-0100-8661	WALKWAY SURFACES (ANTI-SLIP)	A8651010 TO A8651314	06/07
290-0100-8661	WALKWAY SURFACES (ANTI-SLIP)	A8651315	11/08

TABLE OF CONTENTS FOR MODEL TA40 G7 TRACTOR

FROM SERIAL NO A8651010

REVISED 02/11

SECT-PAGE-PLI

DESCRIPTION

SERIAL NO. EFFECTIVITY

REVISION AND DATE

**SECTION 300**

**MISCELLANEOUS**

300-0040-8661

MULTI-TUBE CLAMPS AND HARDWARE

300-0045-8661

POLYPROPELENE CLAMPS

300-0200-8661

UNIT FILTERS & ELEMENT KITS

R2 04/09

300-0250-8661

HIGH TEMPERATURE HOSE ASSY CROSS-REF

11/08


R1 11/07 (ECN 109096)

**100-0010-8661 CHASSIS**

FROM SERIAL NO. A8651010 TO A8651314

DRAWING NO. P11828

P11828

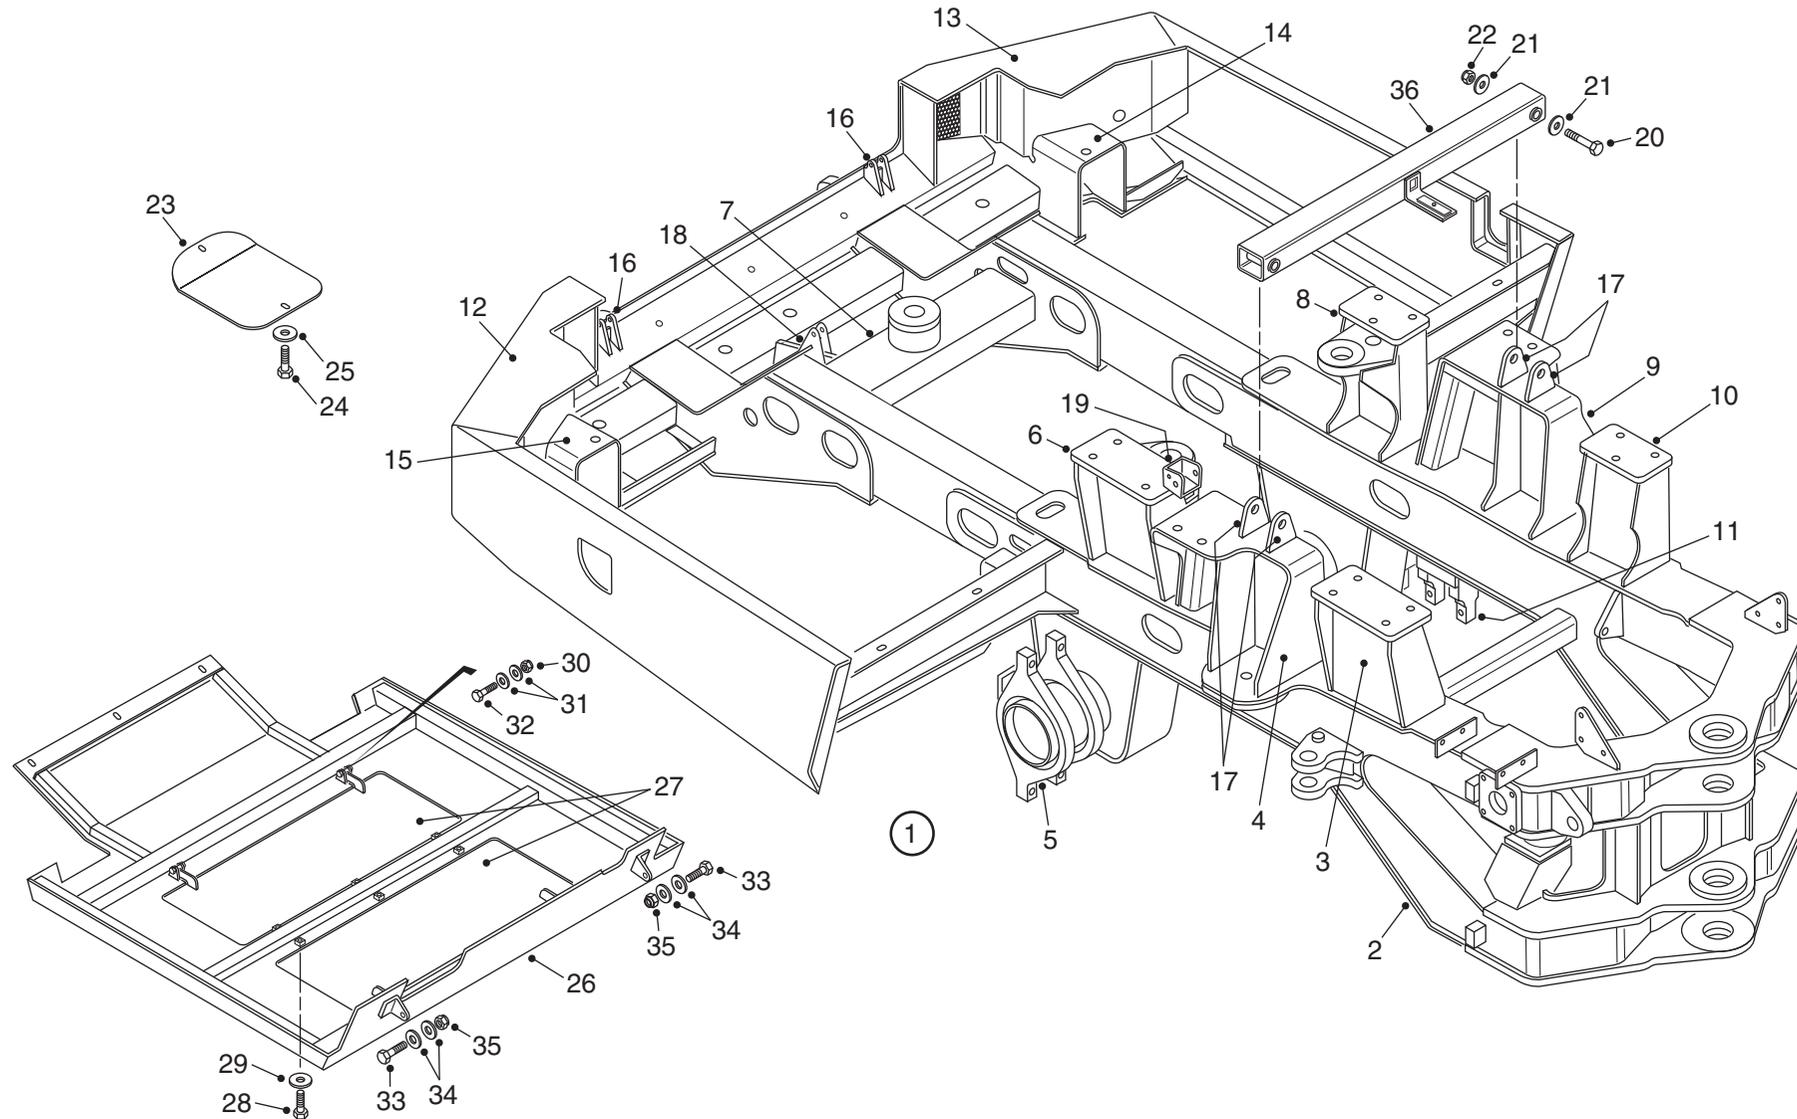

**100-0010-8661 CHASSIS**

FROM SERIAL NO. A8651010 TO A8651314


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15323646	FRAME ASSY-TRACTOR		
002	001		15319635	.FRAME-FRONT SUB ASSY		
003	001		15319764	.CAB MOUNT ASSY		
004	001		15319726	.SUSPENSION MOUNT-LH		
005	001		15320693	.SUSPENSION FRAME		
006	001		15319763	.CAB MOUNT ASSY		
007	001		15319684	.CROSSMEMBER		
008	001		15319098	.CAB MOUNT ASSY		
009	001		15319727	.SUSPENSION MOUNT-RH		
010	001		15319099	.CAB MOUNT ASSY		
011	001		15319712	.BRACKET ASSY(PANHARD)		
012	001		15322887	.HEADLIGHT PLATE ASSY-LH		
013	001		15322888	.HEADLIGHT PLATE ASSY-RH		
014	001		15322718	.PLATE-TANK SUPPORT-RH		
015	001		15322717	.PLATE-TANK SUPPORT-LH		
016	002		15322886	.HOOD HINGE ASSY		
017	004		15319780	.PLATE-CROSSMEMBER		
018	001		15321276	.HOOD PROP FRAME ASSY		
019	001		15323495	.BRACKET-CAB PROP		
020	002		15330267	BOLT-M24		
021	004		15234742	WASHER		
022	002		06642401	LOCKNUT		
023	001		15322527	PANEL-ACCESS COVER		
024	002		06351220	BOLT		
025	002		07161230	LOCKWASHER		
026	001		15330134	SUMP GUARD ASSY		
027	002		15324298	.INSPECTION COVER		
028	006		06351230	.BOLT		
029	006		09217321	.WASHER		
030	004		06351035	.BOLT		
031	008		07151020	.WASHER		
032	004		06471001	.LOCKNUT		
033	002		06351655	BOLT		
034	004		07151630	WASHER		
035	002		06471601	LOCKNUT		
036	001		15323047	CROSSMEMBER ASSY		

11/08 (ECN 109311)

100-0010-8661 CHASSIS  
FROM SERIAL NO. A8651315

DRAWING NO. P11828

P11828

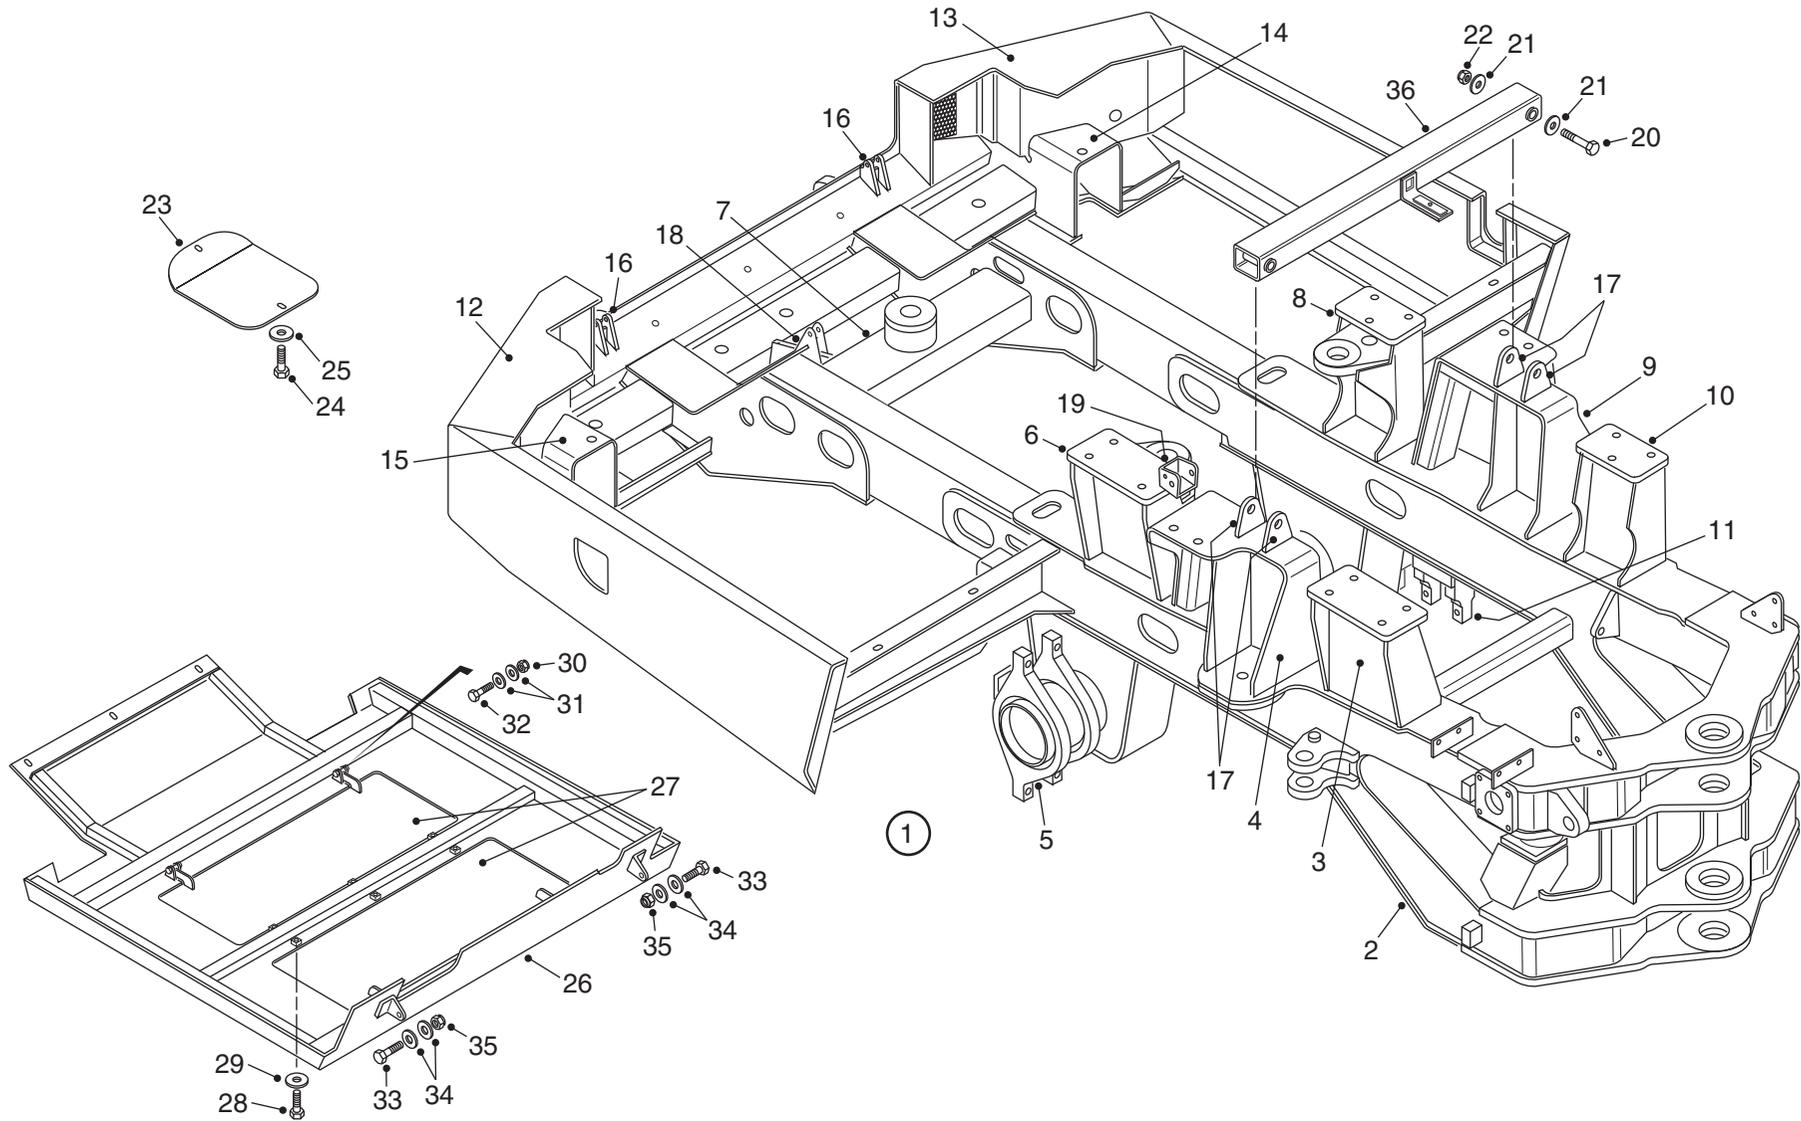

**100-0010-8661 CHASSIS**  
FROM SERIAL NO. A8651315


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15344188	FRAME ASSY-TRACTOR		
002	001		15319635	.FRAME-FRONT SUB ASSY		
003	001		15319764	.CAB MOUNT ASSY		
004	001		15336646	.SUSPENSION MOUNT-LH		
005	001		15320693	.SUSPENSION FRAME		
006	001		15319763	.CAB MOUNT ASSY		
007	001		15319684	.CROSSMEMBER		
008	001		15319098	.CAB MOUNT ASSY		
009	001		15336647	.SUSPENSION MOUNT-RH		
010	001		15319099	.CAB MOUNT ASSY		
011	001		15319712	.BRACKET ASSY(PANHARD)		
012	001		15322887	.HEADLIGHT PLATE ASSY-LH		
013	001		15322888	.HEADLIGHT PLATE ASSY-RH		
014	001		15336509	.PLATE-TANK SUPPORT-RH		
015	001		15336508	.PLATE-TANK SUPPORT-LH		
016	002		15322886	.HOOD HINGE ASSY		
017	004		15319780	.PLATE-CROSSMEMBER		
018	001		15321276	.HOOD PROP FRAME ASSY		
019	001		15323495	.BRACKET-CAB PROP		
020	002		15330267	BOLT-M24		
021	004		15234742	WASHER		
022	002		06642401	LOCKNUT		
023	001		15322527	PANEL-ACCESS COVER		
024	002		06351220	BOLT		
025	002		07161230	LOCKWASHER		
026	001		15330134	SUMP GUARD ASSY		
027	002		15324298	.INSPECTION COVER		
028	006		06351230	.BOLT		
029	006		09217321	.WASHER		
030	004		06351035	.BOLT		
031	008		07151020	.WASHER		
032	004		06471001	.LOCKNUT		
033	002		06351655	BOLT		
034	004		07151630	WASHER		
035	002		06471601	LOCKNUT		
036	001		15323047	CROSSMEMBER ASSY		

R3 01/09 (ECN 108200, ECN 108290, ECN 109564)

100-0030-8661 SOUND INSULATION  
FROM SERIAL NO. A8651010

DRAWING NO. P11922

P11922

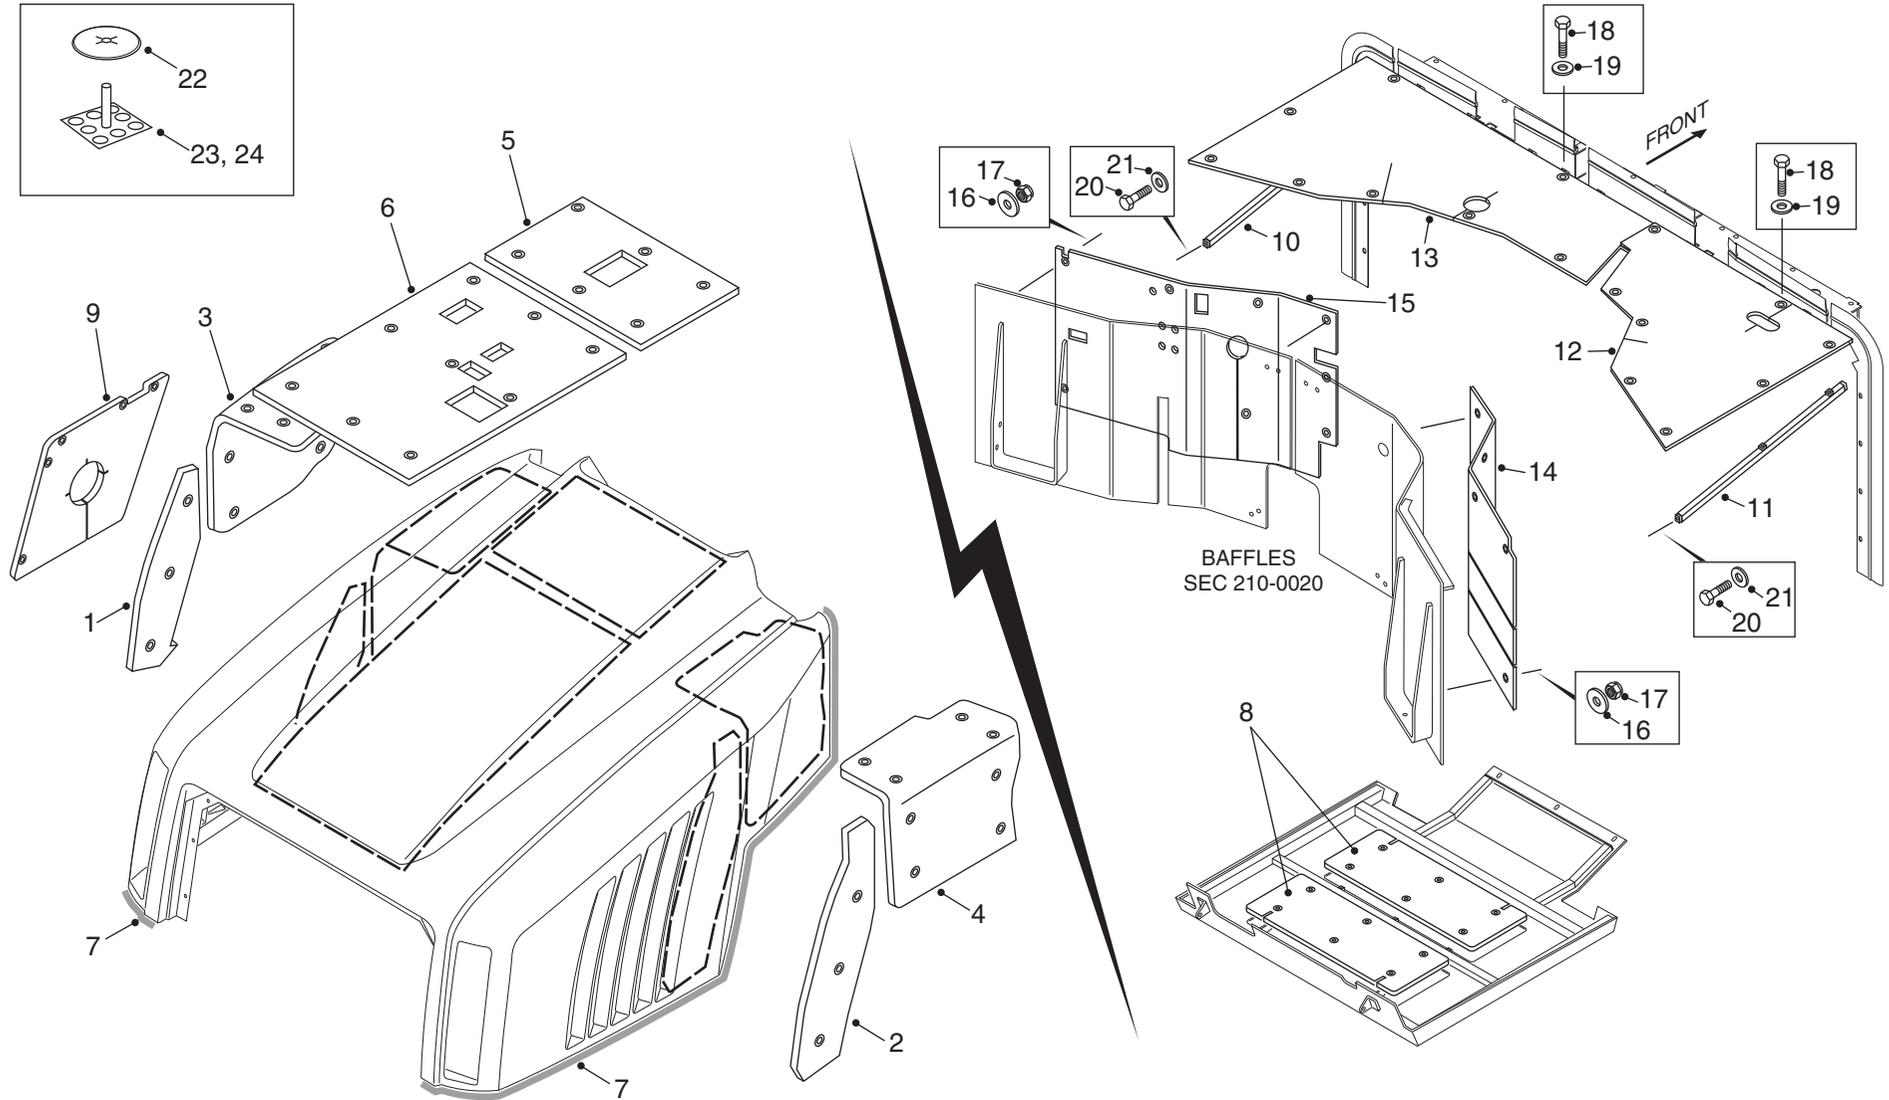




**100-0030-8661 SOUND INSULATION**  
 FROM SERIAL NO. A8651010

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15333049	QUILT-HOOD RIGHT/MID		
002	001		15333051	QUILT-HOOD LEFT/MID		
003	001		15333055	QUILT-HOOD RIGHT/MID		
004	001		15333057	QUILT-HOOD LEFT/REAR		
005	001		15333059	QUILT-HOOD TOP/REAR	A8651010	A8651328
005	001		15347290	QUILT-HOOD TOP/REAR	A8651329	
006	001		15333060	QUILT-HOOD TOP/FRONT	A8651010	A8651328
006	001		15347291	QUILT-HOOD TOP/FRONT	A8651329	
007	ASR		15319946	LIP SEAL		
008	002		15333041	QUILT-SUMP GUARD		
009	001		15333063	QUILT-AIR INTAKE		
010	001		15333020	TIE BAR ASSY	A8651010	A8651038
010	001		15334598	TIE BAR ASSY	A8651039	
011	001		15333022	TIE BAR ASSY	A8651010	A8651038
011	001		15334607	TIE BAR ASSY	A8651039	
012	001		15333028	QUILT-ENGINE/RADIATOR	A8651010	A8651025
012	001		15334216	QUILT-ENGINE/RADIATOR	A8651026	
013	001		15333029	QUILT-ENGINE/RADIATOR	A8651010	A8651025
013	001		15334213	QUILT-ENGINE/RADIATOR	A8651026	
014	001		15333032	QUILT-ENGINE/RADIATOR		
015	001		15333037	QUILT-ENGINE/RADIATOR		
016	015		15316089	WASHER		
017	015		06470601	LOCKNUT		
018	014		06351030	BOLT		
019	014		00106264	WASHER		
020	002		06351025	BOLT		
021	002		07151020	WASHER		
022	ASR		15501136	CAP		
023	ASR		15503209	STUD-LONG 55MM		
024	ASR		15503210	STUD-SHORT 35MM		

100-0040-8661 HOOD AND MOUNTING  
FROM SERIAL NO. A8651010

DRAWING NO. P11882

P11882

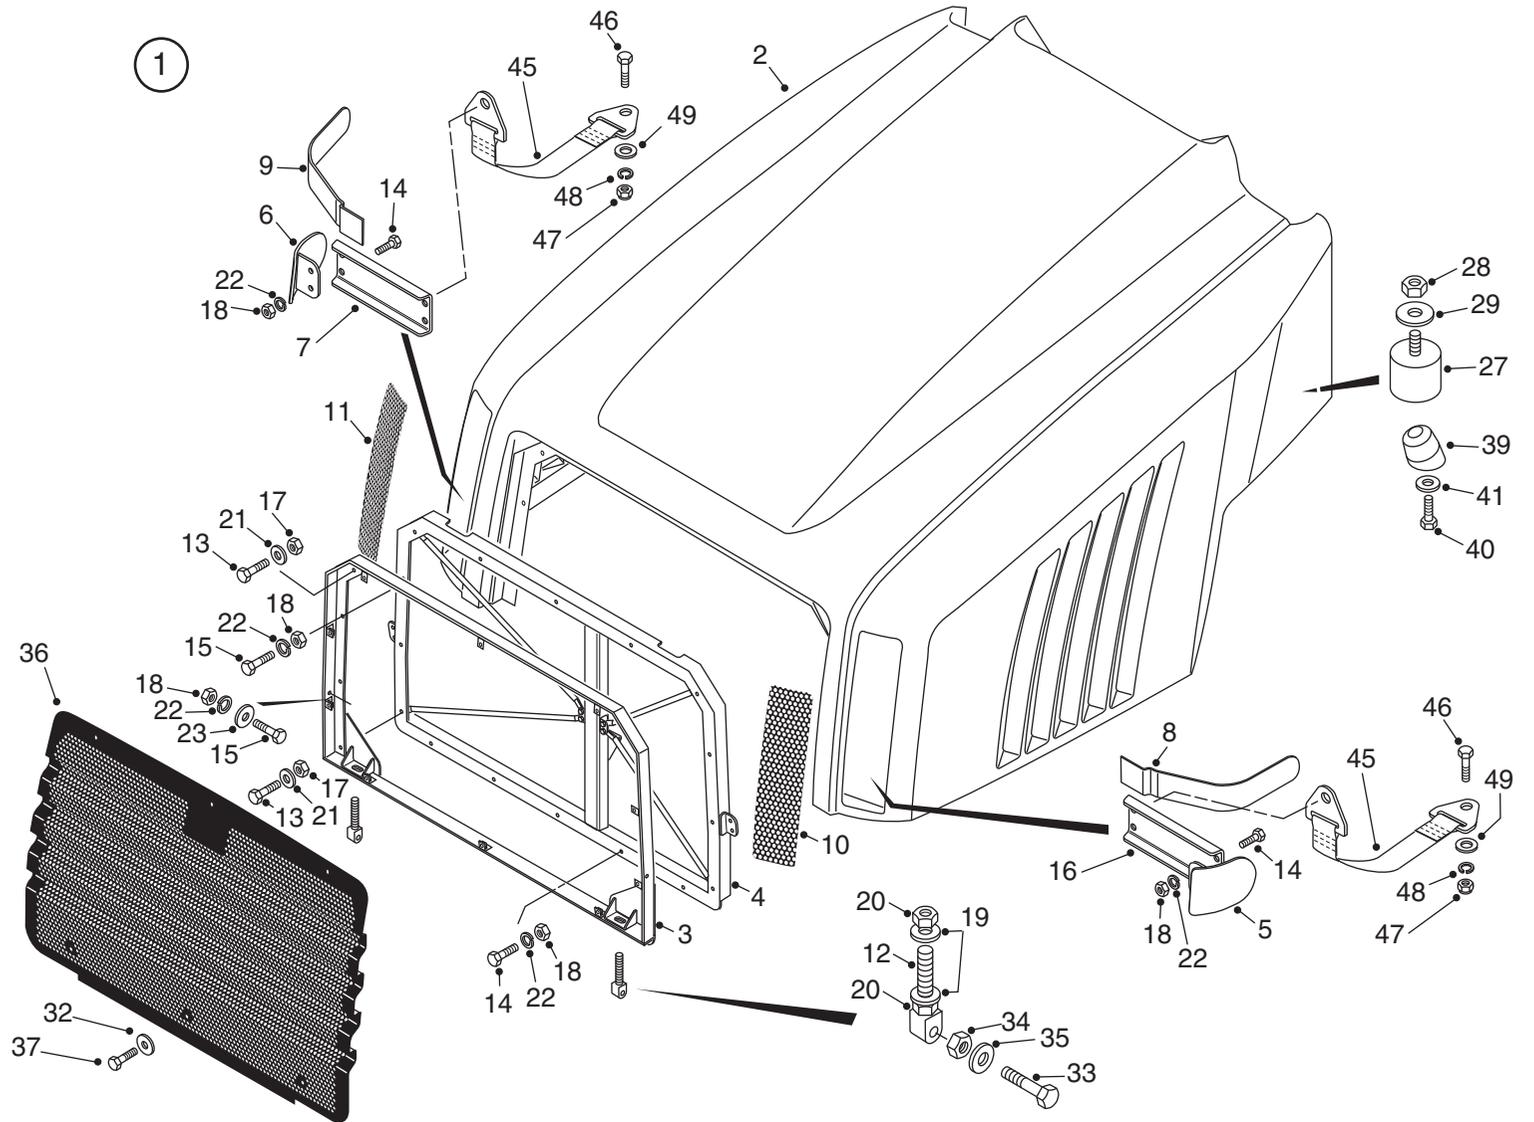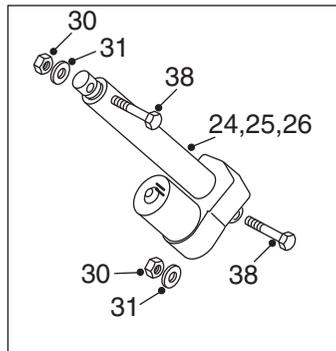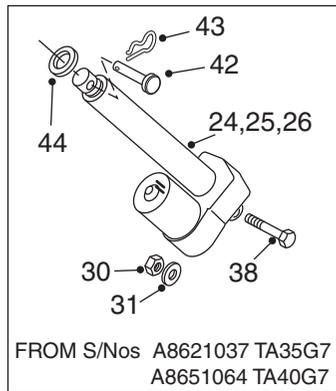

**100-0040-8661 HOOD AND MOUNTING**  
FROM SERIAL NO. A8651010


**100-0040-8661 HOOD AND MOUNTING**  
FROM SERIAL NO. A8651010

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15321271	HOOD ASSY			040	002		06351220	BOLT		
002	001		15321272	.HOOD-BASIC			041	002		09267949	WASHER-HARDENED		
003	001		15321273	.REINFORCEMENT ASSY-FT			042	001		15335434	CLEVIS PIN	A8651064	
004	001		15321274	.REINFORCEMENT ASSY-REAR			043	001		15335435	R-CLIP	A8651064	
005	001		15321296	.BRACKET ASSY-LHS			044	ASR		15335446	SPACER 5MM	A8651064	
006	001		15321297	.BRACKET ASSY-RHS			044	ASR		15335445	SPACER 15MM	A8651064	
007	001		15321298	.PLATE-JOINING-RHS			044	ASR		15335310	SPACER 33MM	A8651064	
008	001		15321714	.PLATE BENT-LHS			045	002		15335906	STRAP-HOOD RETAINING	A8651124	
009	001		15321715	.PLATE BENT-RHS			046	002		06351025	BOLT	A8651124	
010	001		15321940	.GRILLE FRONT-LHS			047	002		06431001	NUT	A8651124	
011	001		15321941	.GRILLE FRONT-RHS			048	002		07161030	LOCKWASHER	A8651124	
012	002		15313179	.ROD-ADJUSTMENT			049	002		07151020	WASHER	A8651124	
013	004		06350830	.BOLT									
014	013		06351025	.BOLT									
015	009		06351030	.BOLT									
016	001		15332661	.PLATE JOINING-LHS									
017	004		06430801	.NUT									
018	022		06431001	.NUT									
019	004		09250715	.WASHER-HARDENED									
020	004		06432001	.NUT									
021	008		00103340	.WASHER									
022	022		07161030	.LOCKWASHER									
023	002		15244714	.WASHER-HARDENED									
024	001		15321275	ACTUATOR ASSY									
025	001		15502078	.KIT-MOTOR REPLACEMENT									
026	001		15502079	.KIT-SEALING									
027	002		15322231	CUP-RUBBER									
028	002		06431201	NUT									
029	002		09267949	WASHER-HARDENED									
030	002		06431201	NUT									
031	002		07151220	WASHER									
032	010		00106263	WASHER									
033	002		06351675	BOLT									
034	002		15252584	NUT									
035	002		07151630	WASHER									
036	001		15321282	GRILLE									
037	010		06351030	BOLT									
038	002		06351260	BOLT	A8651010	A8651063							
039	002		15322232	CONE	A8651010	A8651038							
039	002		15332584	CONE	A8651039								

**100-0070-8661 FENDERS AND MOUNTING**  
FROM SERIAL NO. A8651010 TO A8651015

DRAWING NO. P11831

P11831

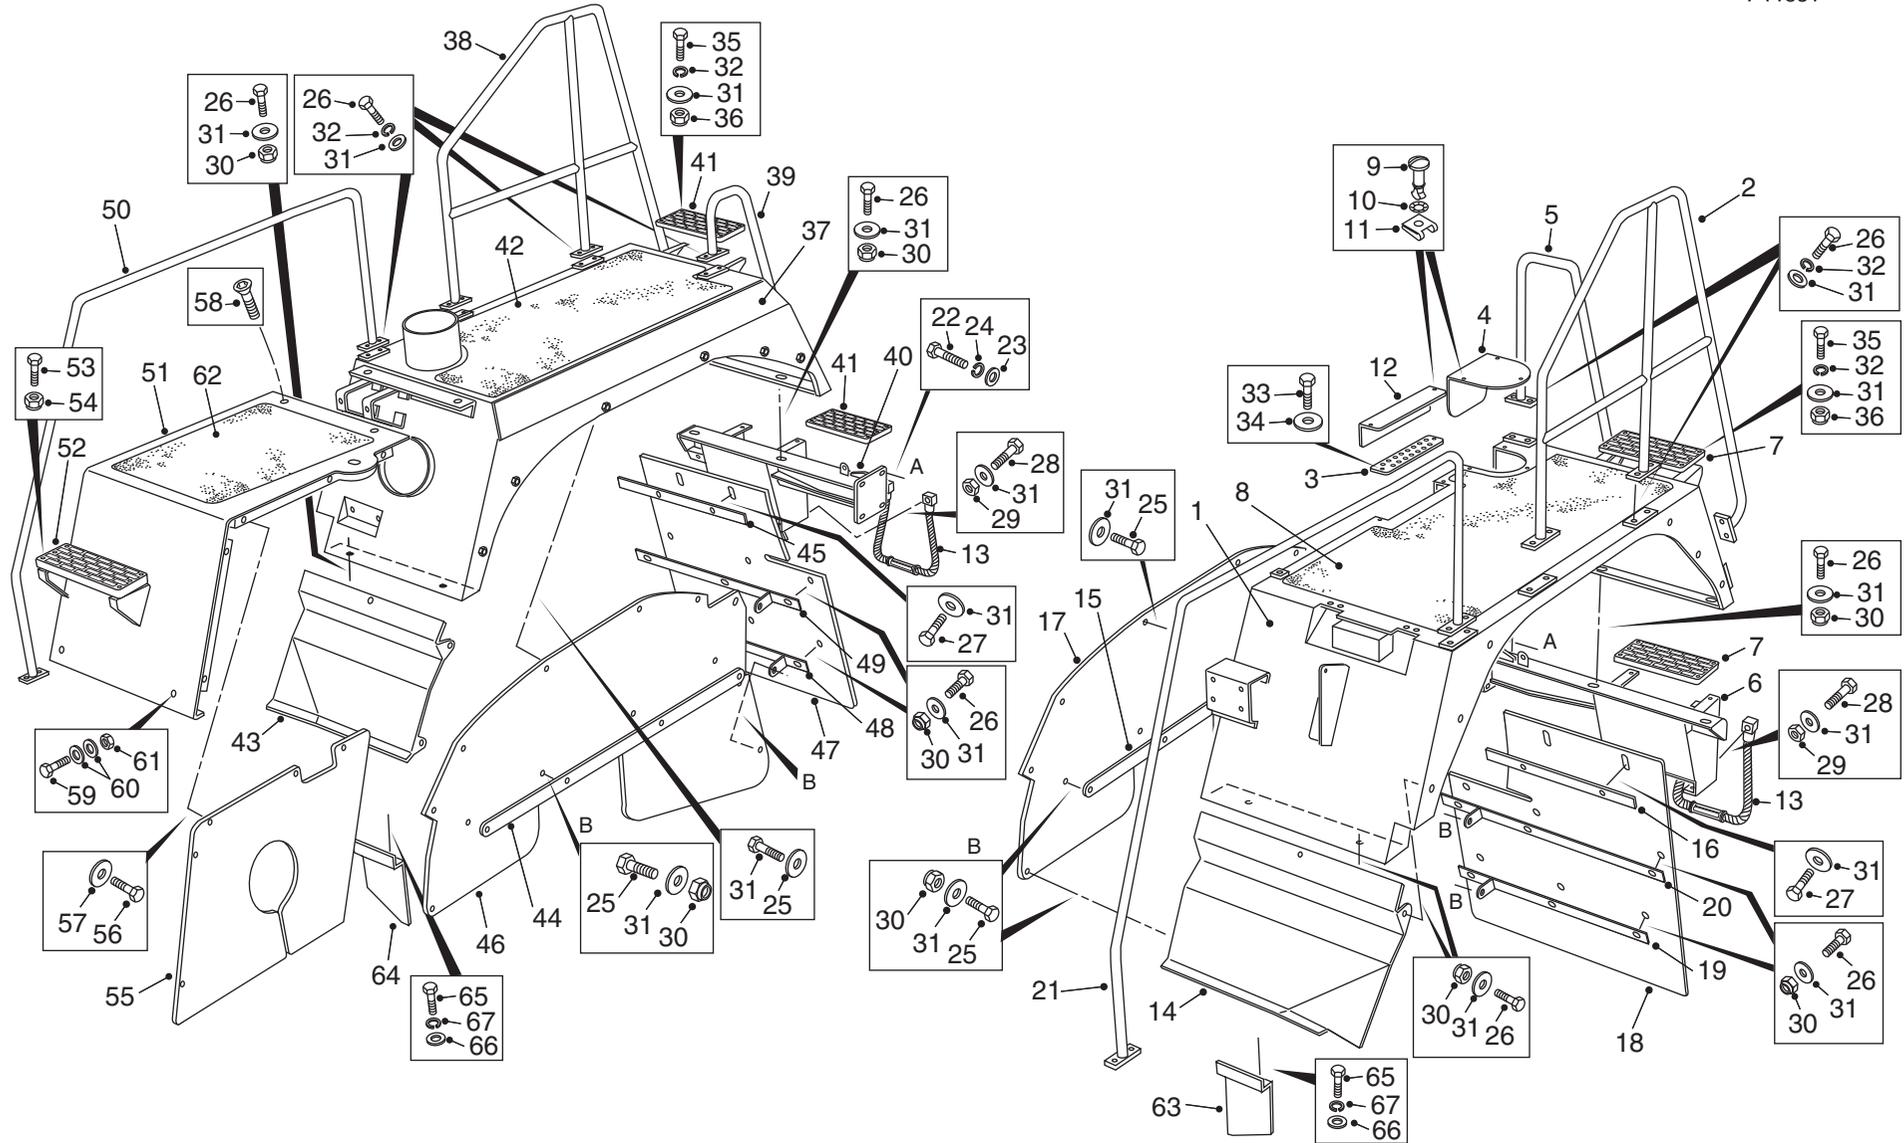


**100-0070-8661 FENDERS AND MOUNTING**  
FROM SERIAL NO. A8651010 TO A8651015

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15323684	FENDER ASSY-LH		
002	002		15323682	HANDRAIL-OUTER		
003	001		15323203	DIAGNOSTIC PANEL		
004	001		15323239	COVER-ACCESS PANEL		
005	001		15323683	HANDRAIL-INNER LH		
006	001		15323667	SUPPORT ARM-LH		
007	008		15320662	TREADPLATE-STEP		
008	001		15323678	ANTI-SLIP WALKWAY		
009	005		15323231	DZUZ FASTENER		
010	005		15323826	DZUZ RETAINER		
011	005		15323232	DZUZ RECEPTICLE		
012	001		15323229	COVER-DIAG. PANEL		
013	002		15304359	WIRE STEP		
014	001		15330455	FENDER LINER-FRONT LH		
015	001		15331295	FENDER LINER REINF.		
016	001		15331289	MOUNT-FENDER EXTN.		
017	001		15331251	RUBBER FENDER LINER		
018	001		15331227	RUBBER FENDER EXTN LH		
019	001		15331228	MOUNT-FENDER EXTN		
020	001		15331229	MOUNT-FENDER EXTN		
021	001		15323748	HANDRAIL LH		
022	008		15311176	BOLT		
023	008		07151630	WASHER		
024	008		07161630	LOCKWASHER		
025	026		06351225	BOLT		
026	054		06351230	BOLT		
027	004		06351235	BOLT		
028	004		06351250	BOLT		
029	004		06431201	NUT		
030	038		06471201	LOCKNUT		
031	148		07151220	WASHER		
032	056		07161230	LOCKWASHER		
033	002		06351025	BOLT		
034	002		07151020	WASHER		
035	028		00181400	BOLT		
036	028		09354846	LOCKNUT		
037	001		15331147	FENDER ASSY-RH		
038	001		15323682	HANDRAIL-OUTER		
039	001		15331212	HANDRAIL-INNER RH		
040	001		15331211	SUPPORT ARM ASSY-RH		

**100-0070-8661 FENDERS AND MOUNTING**  
FROM SERIAL NO. A8651010 TO A8651015

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	004		15320662	TREADPLATE-STEP		
042	001		15331159	WALKWAY (ANTI SLIP)		
043	001		15330587	FENDER LINER RH FRONT		
044	001		15331295	FENDER LINER REINFORCING		
045	001		15331288	FENDER MTG PLATE		
046	001		15331251	RUBBER-FENDER LINER		
047	001		15331287	RUBBER-FENDER LINER		
048	001		15331228	MOUNT-FENDER EXTN		
049	001		15331229	MOUNT-FENDER EXTN		
050	001		15323749	HANDRAIL RH		
051	001		15330251	PLATFORM ASSY		
052	001		15320662	.TREADPLATE-STEP		
053	004		00181400	.BOLT		
054	004		09354846	.LOCKNUT		
055	001		15330253	RUBBER COVER		
056	005		06351025	BOLT		
057	005		07151020	WASHER		
058	002		15310942	SOCKET SCREW		
059	002		06351250	BOLT		
060	004		07151220	WASHER		
061	002		06471201	NUT		
062	001		15323146	WALKWAY-ANTI SLIP		
063	001		15330648	SPLASH GUARD-LOWER LH		
064	001		15331065	SPLASH GUARD-LOWER RH		
065	004		06350820	BOLT		
066	004		07150815	WASHER		
067	004		07160830	WASHER		

100-0070-866 FENDERS AND MOUNTING  
FROM SERIAL NO. A8651016 TO A8651314

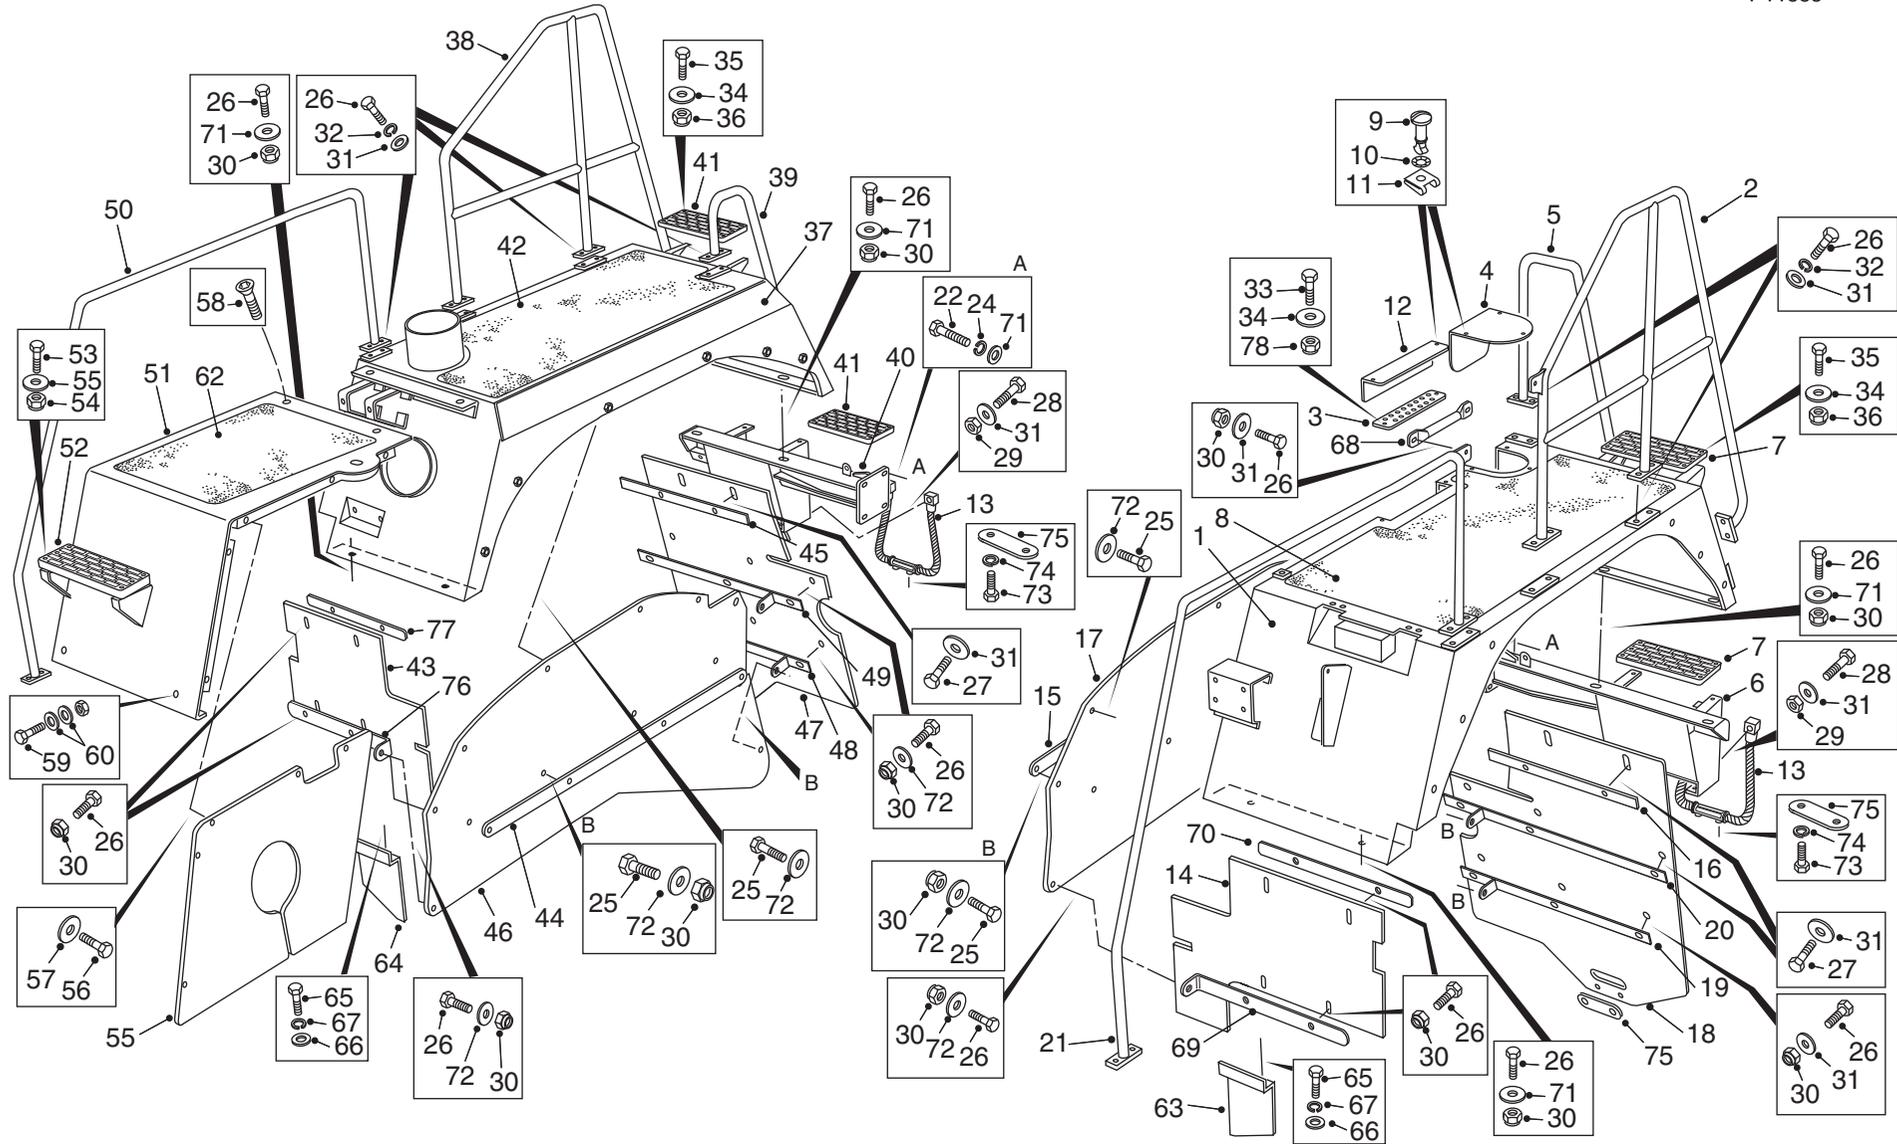

**100-0070-866 FENDERS AND MOUNTING**  
FROM SERIAL NO. A8651016 TO A8651314

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15323684	FENDER ASSY-LH		
002	002		15332628	HANDRAIL-OUTER		
003	001		15323203	DIAGNOSTIC PANEL		
004	001		15323239	COVER-ACCESS PANEL		
005	001		15323683	HANDRAIL-INNER LH		
006	001		15323667	SUPPORT ARM-LH		
007	008		15320662	TREADPLATE-STEP		
008	001		15323678	ANTI-SLIP WALKWAY		
009	005		15323231	DZUZ FASTENER		
010	005		15323826	DZUZ RETAINER		
011	005		15323232	DZUZ RECEPTICLE		
012	001		15323229	COVER-DIAG. PANEL		
013	002		15303970	WIRE STEP		
014	001		15332504	FENDER LINER-FRONT		
015	001		15331295	FENDER LINER REINF.		
016	001		15331289	MOUNT-FENDER EXTN.		
017	001		15331251	RUBBER FENDER LINER		
018	001		15331227	RUBBER FENDER EXTN LH		
019	001		15331228	MOUNT-FENDER EXTN		
020	001		15331229	MOUNT-FENDER EXTN		
021	001		15323748	HANDRAIL LH		
022	008		15311176	BOLT		
023	008		07151630	WASHER		
024	008		07161630	LOCKWASHER		
025	028		06351225	BOLT		
026	056		06351230	BOLT		
027	004		06351235	BOLT		
028	006		15244017	BOLT		
029	004		06431201	NUT		
030	040		06471201	LOCKNUT		
031	118		07151220	WASHER		
032	056		07161230	LOCKWASHER		
033	002		06351025	BOLT		
034	032		07151020	WASHER		
035	032		15244817	SCREW		
036	032		06471001	LOCKNUT		
037	001		15331147	FENDER ASSY-RH		
038	001		15323682	HANDRAIL-OUTER		
039	001		15331212	HANDRAIL-INNER RH		

**100-0070-8661 FENDERS AND MOUNTING**  
FROM SERIAL NO. A8651016 TO A8651314


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
040	001		15331211	SUPPORT ARM ASSY-RH		
041	004		15320662	TREADPLATE-STEP		
042	001		15331159	WALKWAY (ANTI SLIP)		
043	001		15332504	FENDER LINER-FRONT		
044	001		15331295	FENDER LINER REINFORCING		
045	001		15331288	FENDER MTG PLATE		
046	001		15331251	RUBBER-FENDER LINER		
047	001		15331287	RUBBER-FENDER LINER		
048	001		15331228	MOUNT-FENDER EXTN		
049	001		15331229	MOUNT-FENDER EXTN		
050	001		15323749	HANDRAIL RH		
051	001		15330251	PLATFORM ASSY		
052	001		15320662	.TREADPLATE-STEP		
053	004		00181400	.BOLT		
054	004		09354846	.LOCKNUT		
055	004		07151020	.WASHER		
056	005		06351025	BOLT		
057	005		07151020	WASHER		
058	002		15310942	SOCKET SCREW		
059	002		06351250	BOLT		
060	004		07151220	WASHER		
061	002		06471201	NUT		
062	001		15332714	WALKWAY-ANTI SLIP		
063	001		15330648	SPLASH GUARD-LOWER LH	A8651016	A8651050
064	001		15331065	SPLASH GUARD-LOWER RH	A8651016	A8651050
065	004		06350820	BOLT		
066	004		07150815	WASHER		
067	004		07160830	WASHER		
068	001		15332664	FILLER-HANDRAIL		
069	001		15332502	PLATE-BENT		
070	001		15332503	PLATE		
071	016		09267660	WASHER-HDN		
072	028		09024430	WASHER		
073	004		06350825	BOLT		
074	004		07160830	LOCKWASHER		
075	004		15334927	PLATE		A8651051
076	001		15332502	PLATE-MOUNT LINER		
077	001		15332503	PLATE-MOUNT LINER		
078	001		15330253	RUBBER COVER		

11/08 (ECN 109311)

100-0070-8661 FENDERS AND MOUNTING  
FROM SERIAL NO. A8651315

DRAWING NO. P12307

P12307

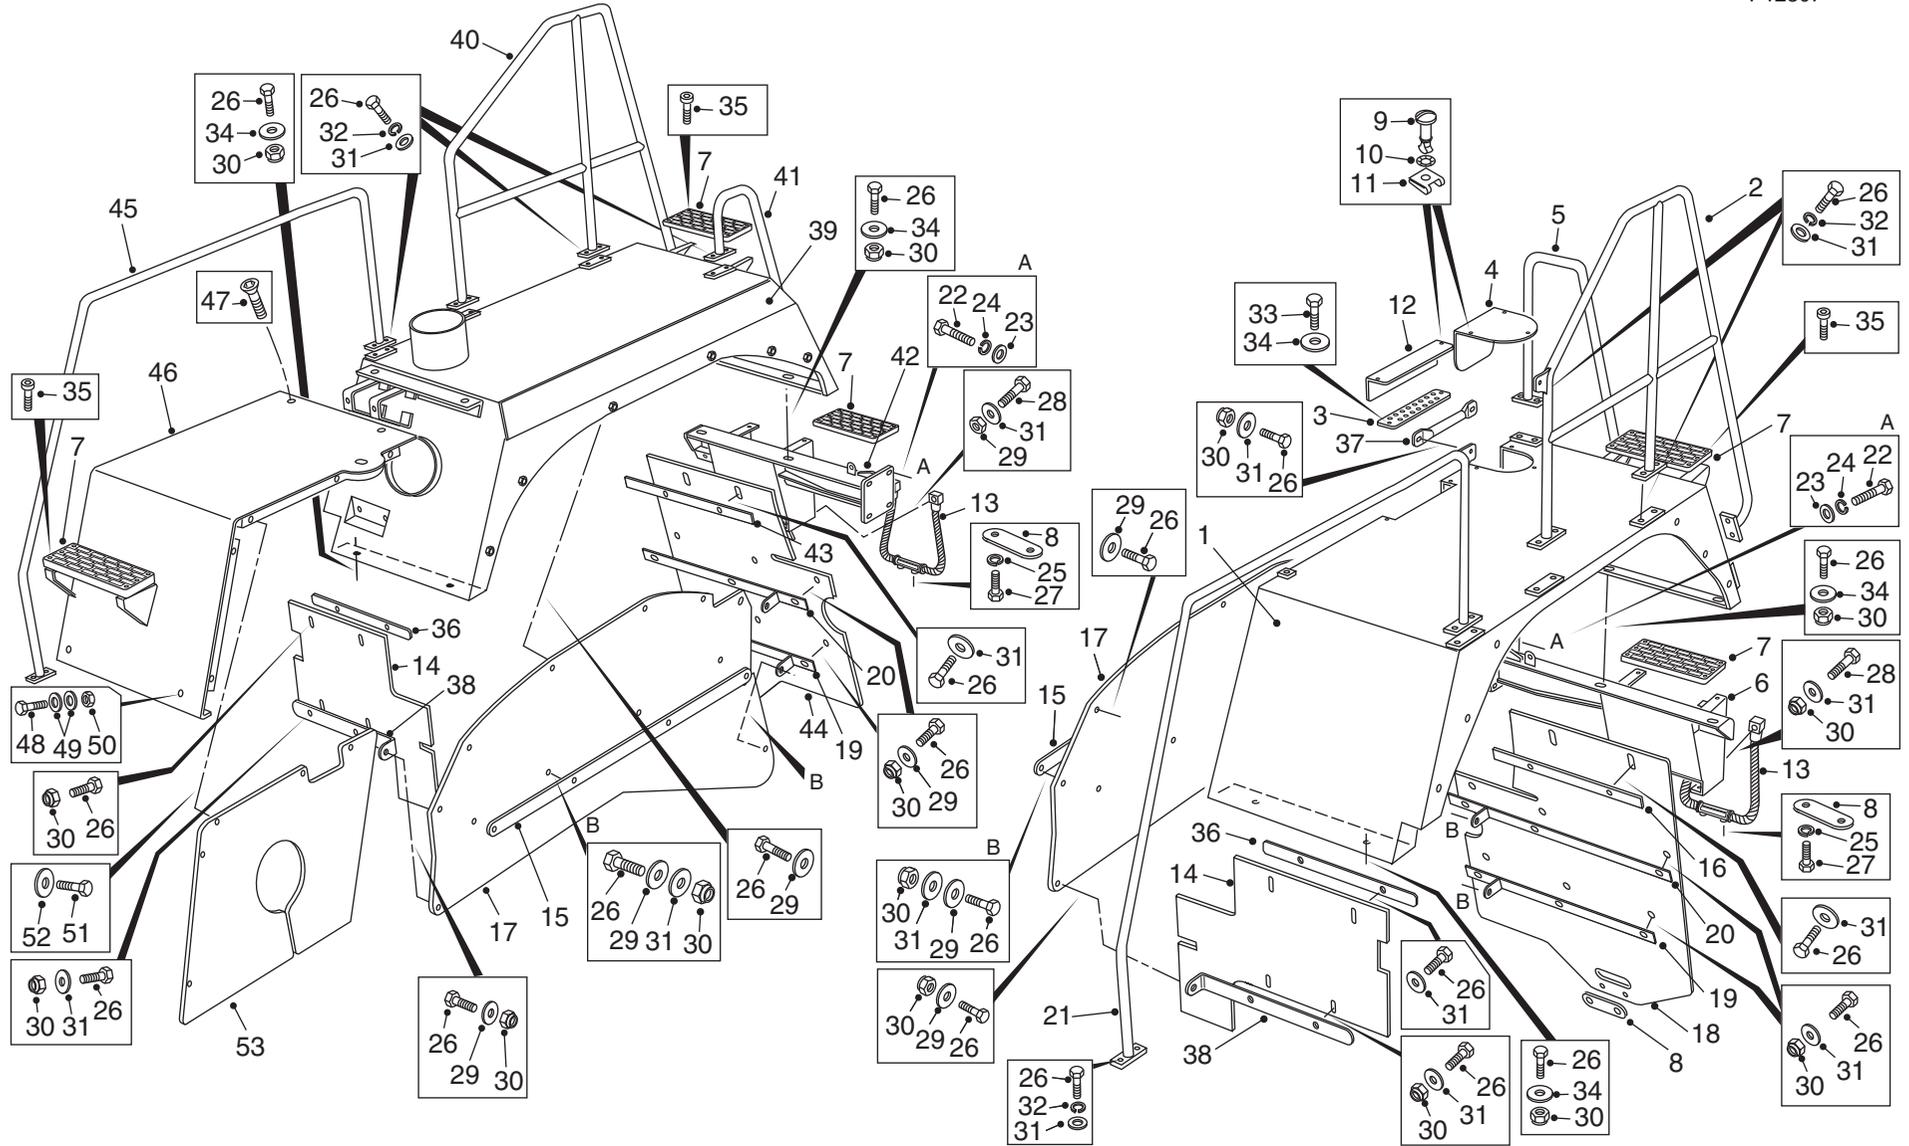

**100-0070-8661 FENDERS AND MOUNTING**  
FROM SERIAL NO. A8651315


**100-0070-8661 FENDERS AND MOUNTING**  
FROM SERIAL NO. A8651315

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15344578	FENDER ASSY-POS H/TANK			041	001		15331212	HANDRAIL INNER-FENDER		
002	001		15332628	HANDRAIL-OUTER			042	001		15331211	SUPPORT ARM ASSY-FENDER		
003	001		15323203	PLATE-DIAGNOSTIC			043	001		15331288	PLATE-MOUNTING FENDER		
004	001		15323239	PLATE-ACCESS COVER			044	001		15331287	RUBBER SHEET-FENDER EXTN		
005	001		15323683	HANDRAIL-INNER LH			045	001		15323749	HANDRAIL-RH		
006	001		15323667	STEP ASSY-SUPPORT ARM			046	001		15330251	PLATFORM ASSY		
007	009		15320662	FOOTSTEP-TREADPLATE			047	002		15310942	SCREW-S/HEAD C/S M8X20		
008	004		15334927	PLATE-MOUNTING FENDER			048	002		06351250	BOLT		
009	005		15323231	SCREW			049	008		07151220	WASHER		
010	005		15323826	RETAINER			050	002		06471201	LOCKNUT		
011	005		15323232	RECEPTICLE			051	005		06351030	BOLT		
012	001		15323229	COVER PLATE-DIAGNOSTIC			052	005		00106264	WASHER		
013	002		15303970	STEP ASSY			053	001		15330253	COVER-RUBBER		
014	002		15332504	RUBBER SHEET-FENDER LINER									
015	002		15331295	PLATE-REINFORCING									
016	001		15331289	PLATE-MOUNTING FENDER									
017	002		15331251	RUBBER SHEET-FENDER LINER									
018	001		15331227	RUBBER SHEET-FENDER EXTN									
019	002		15331228	PLATE-MTG FENDER EXTN									
020	002		15331229	PLATE-MTG FENDER EXTN									
021	001		15323748	HANDRAIL-LH									
022	008		15311176	BOLT									
023	008		07151630	WASHER									
024	008		07161630	LOCKWASHER									
025	004		07160830	LOCKWASHER									
026	086		06351230	BOLT									
027	004		06350825	BOLT									
028	004		15244017	BOLT									
029	028		09024430	WASHER									
030	044		06471201	LOCKNUT									
031	084		07151220	WASHER									
032	024		07161230	LOCKWASHER									
033	002		06351025	BOLT									
034	016		09267660	WASHER									
035	036		15244817	SCREW-SOCKET HEAD									
036	002		15332503	PLATE-RUBBER LINER									
037	001		15332664	TUBE-HANDRAIL FILLER									
038	002		15332502	PLATE BENT-RUBBER LINER									
039	001		15339383	FENDER ASSY-RHS									
040	001		15323682	HANDRAIL-OUTER									


**100-0085-8661 PIVOT AND ACCUMULATOR GUARDS**  
FROM SERIAL NO. A8651010

DRAWING NO. P11787

P11787

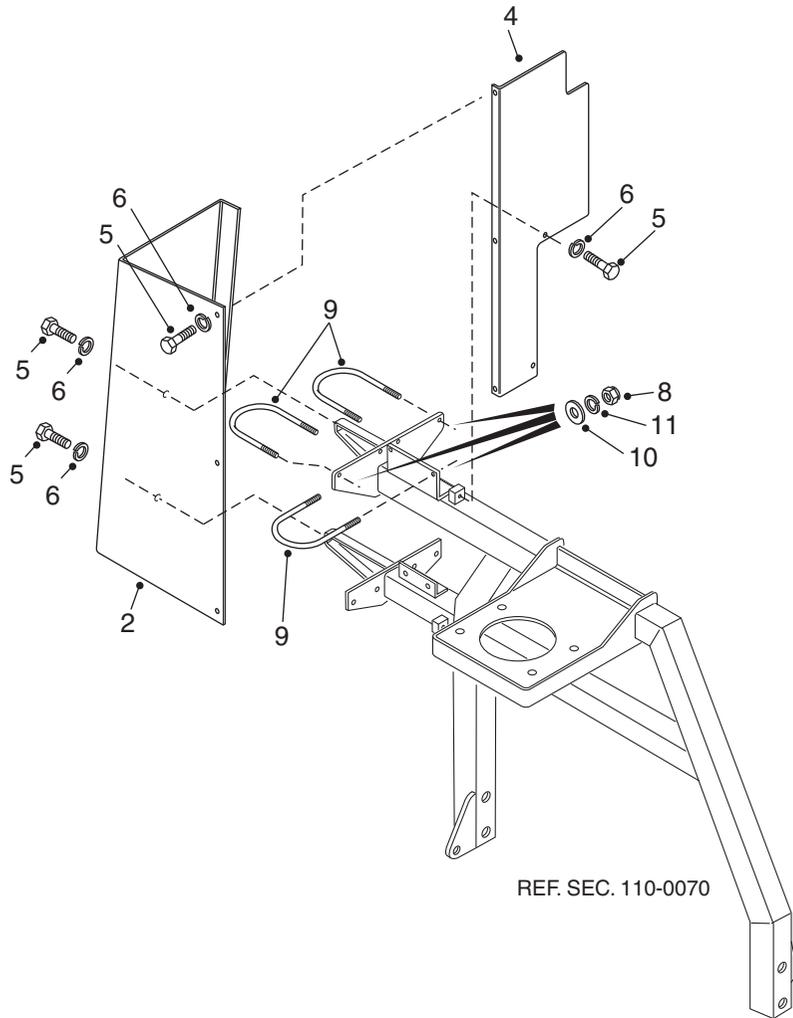

REF. SEC. 110-0070

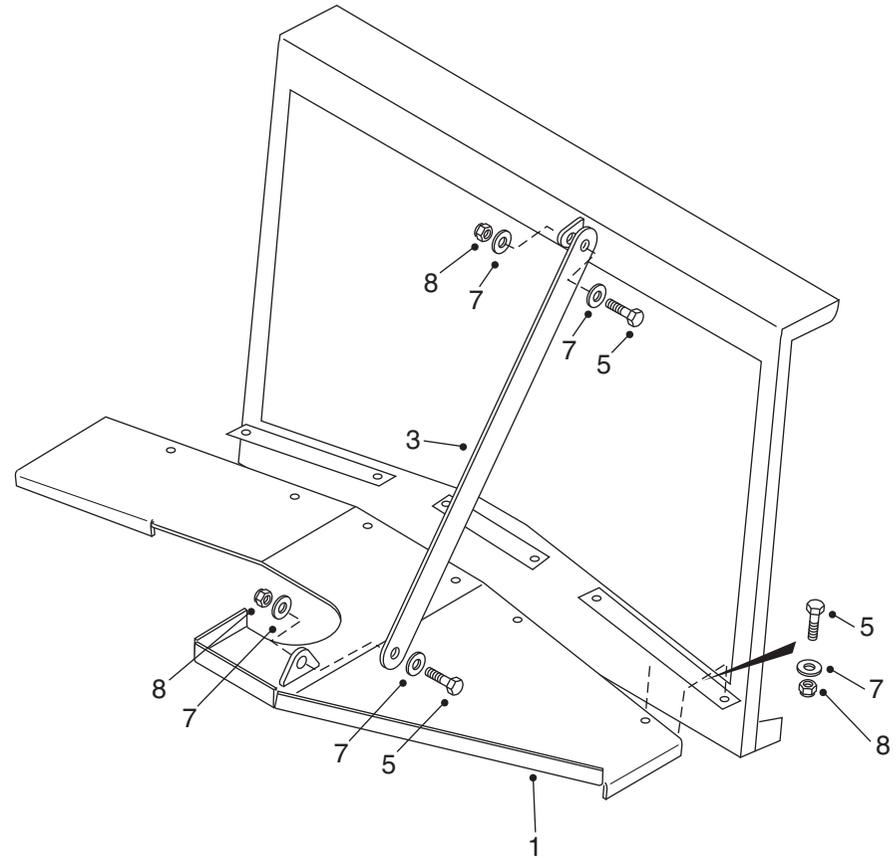

**100-0085-8661 PIVOT AND ACCUMULATOR GUARDS**  
FROM SERIAL NO. A8651010

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15330402	SPILLGUARD		
002	001		15324044	GUARD-ACCUMULATOR		
003	001		15330400	BRACE-SPILL GUARD		
004	001		15324043	PARTITION PLATE		
005	015		06351025	BOLT		
006	007		07161030	LOCKWASHER		
007	016		07151220	WASHER		
008	014		06471001	LOCKNUT		
009	009		15300442	U-BOLT		
010	006		00103339	WASHER		
011	006		07181020	WASHER		

Product: 2006 TEREX TA40 G7 Articulated Truck Workshop Parts Manual[PN15502612]


Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-a>

[rticulated-truck-workshop-parts-manualpn15502612/](https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-a-articulated-truck-workshop-parts-manualpn15502612/)

**100-0135-8661 ROCK AND SUMP GUARDS**  
FROM SERIAL NO. A8651010

DRAWING NO. P11639

P11639

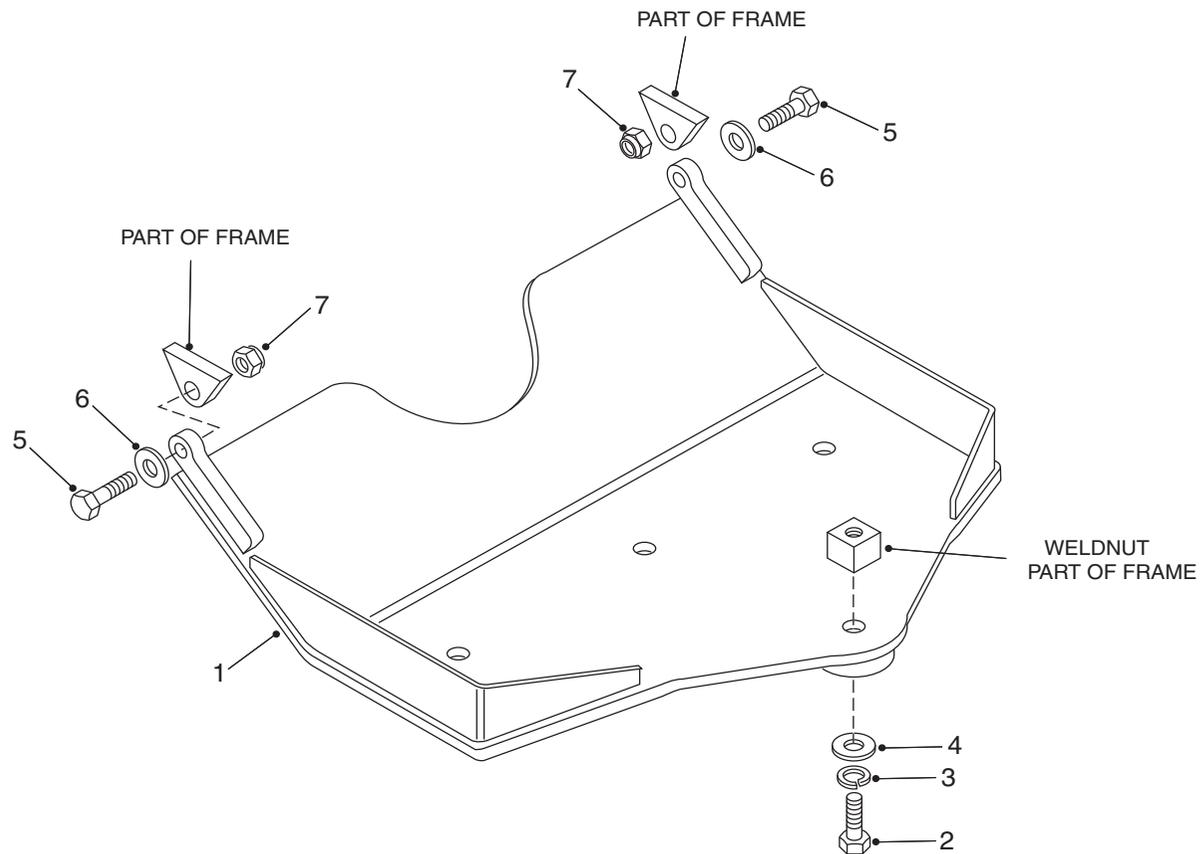

Sample of manual. Download All 580 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta40-g7-articulated-truck-workshop-parts-manualpn15502612/>