


# Electrical Schematic ( Type : Chopper )

Product: Caterpillar EP16K, EP18K, EP20K Chassis & Mast Forklifts Service Repair Workshop Manual  
 Full Download: <https://www.arepairmanual.com/downloads/caterpillar-ep16k-ep18k-ep20k-chassis-mast-forklifts-service-repair-workshop-manual/>

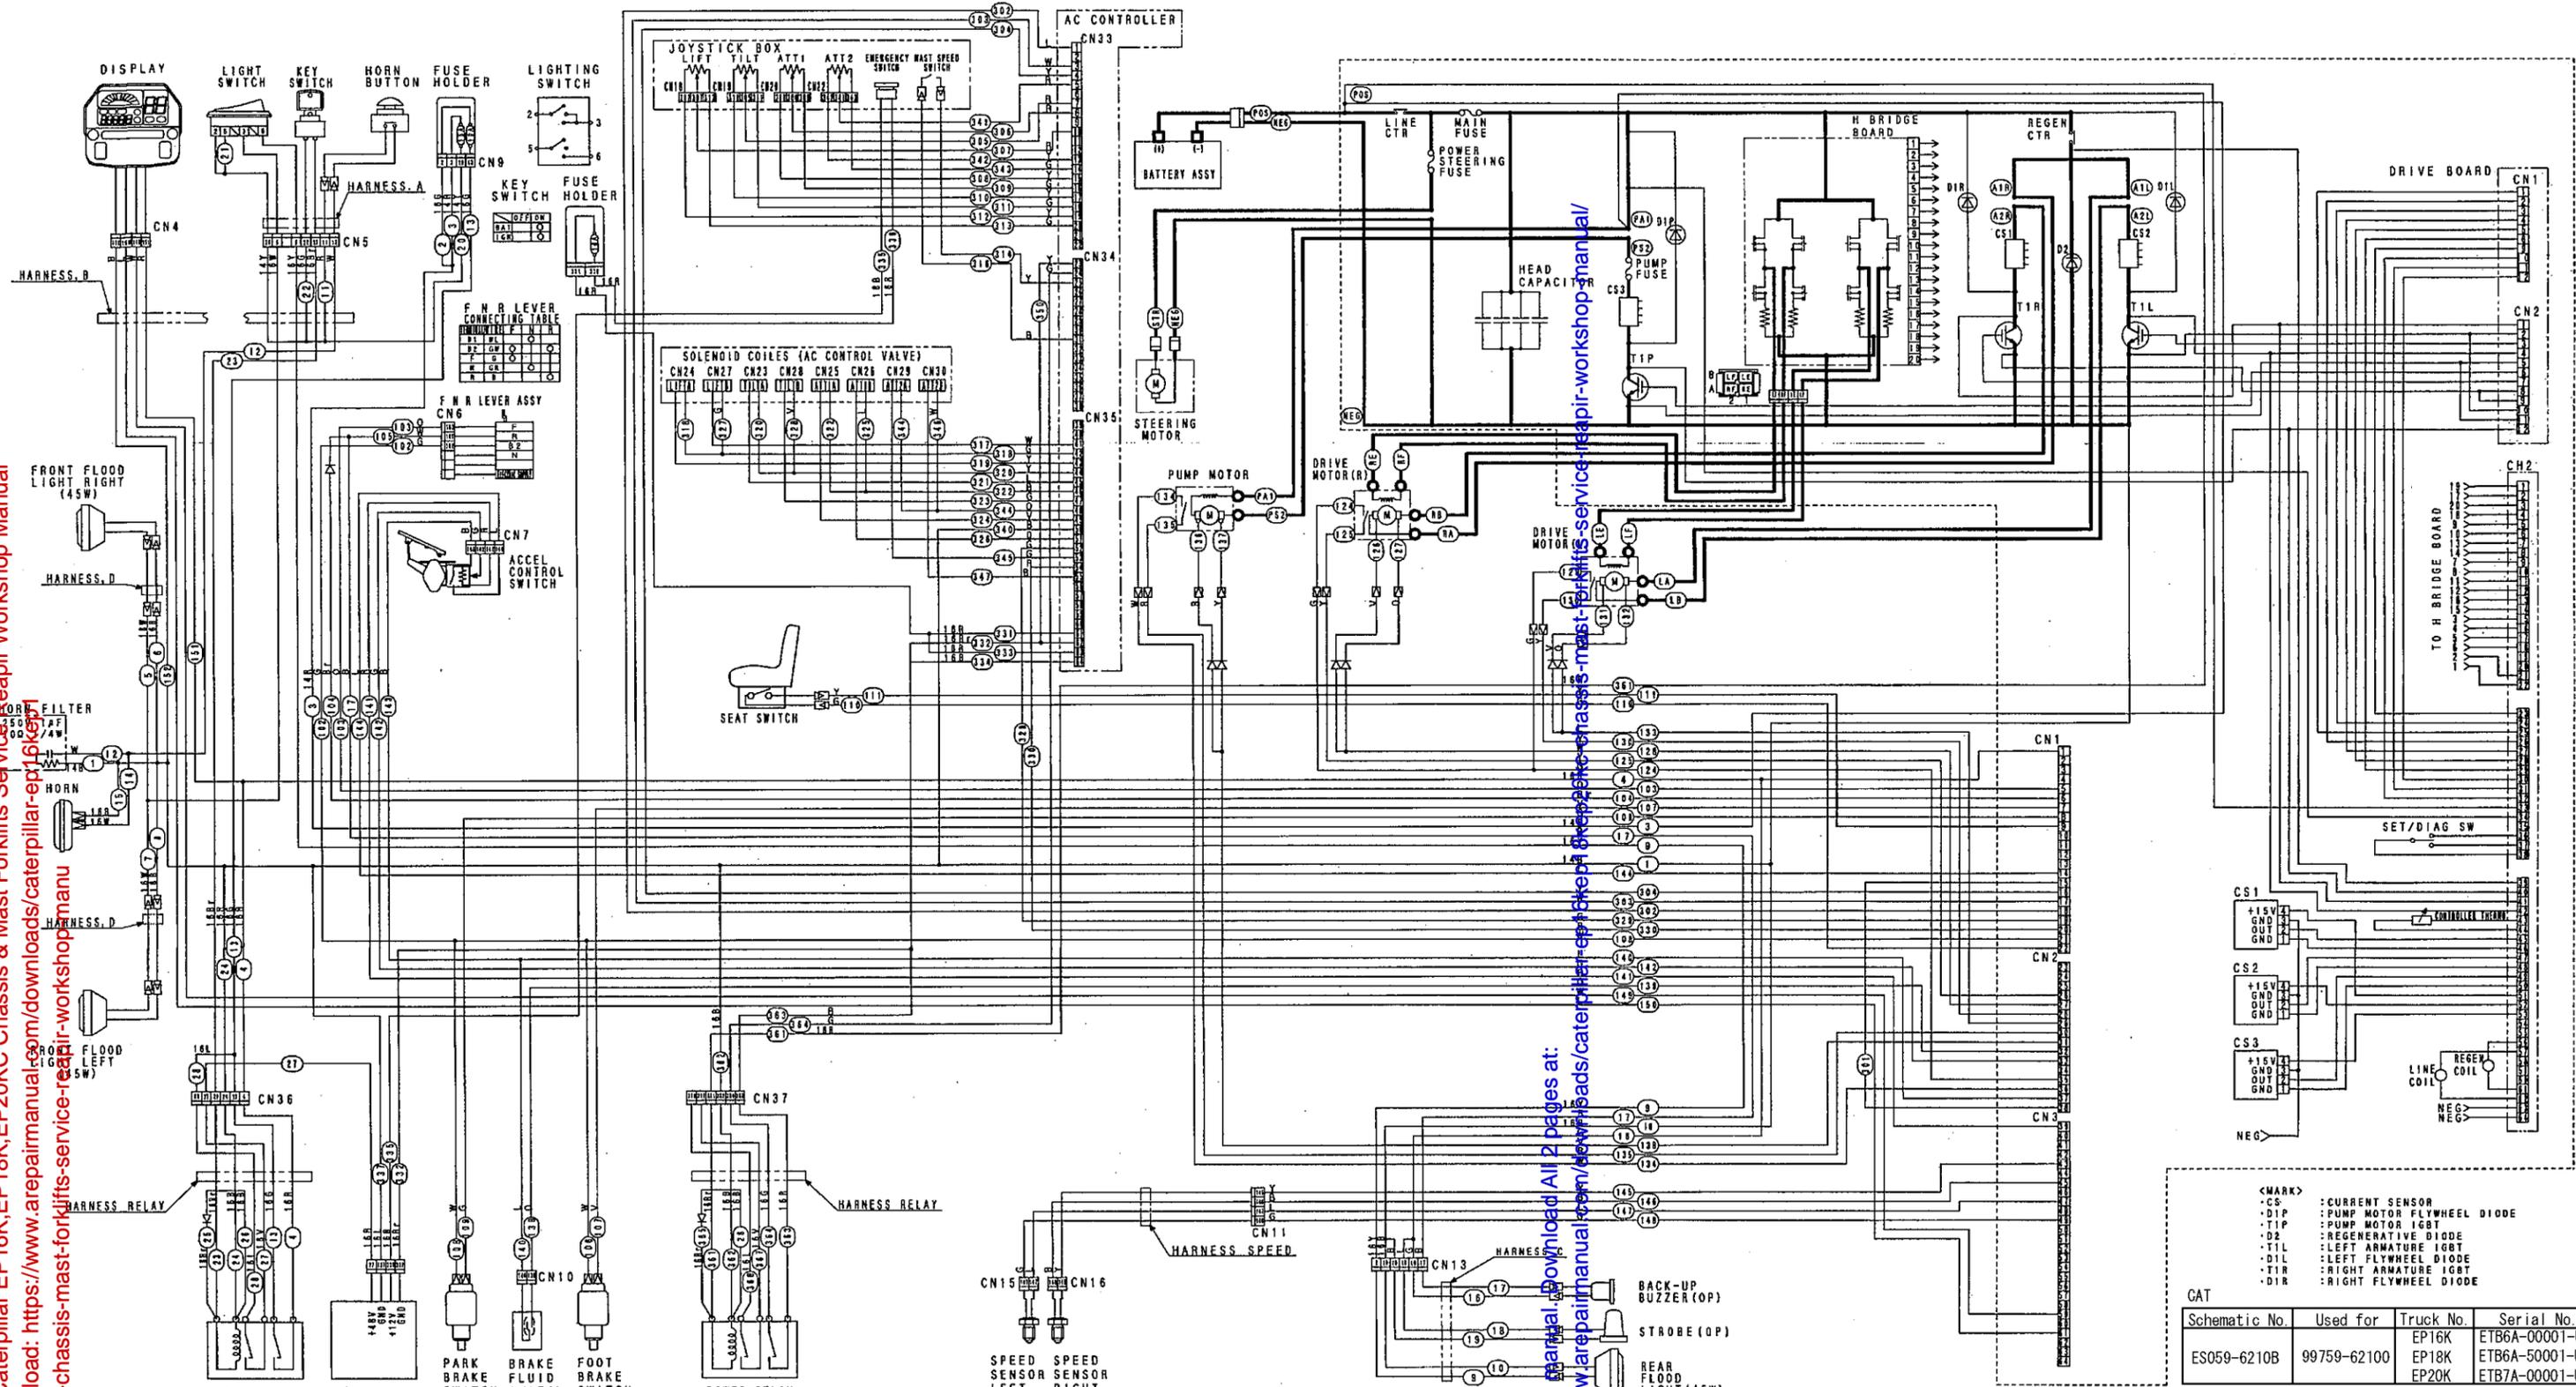

Sample of manual. Download All 2 pages at: <https://www.arepairmanual.com/downloads/caterpillar-ep16k-ep18k-ep20k-chassis-mast-forklifts-service-repair-workshop-manual/>

**MARKS**

- CS : CURRENT SENSOR
- CS1 : PUMP MOTOR FLYWHEEL DIODE
- CS2 : PUMP MOTOR IGBT
- CS3 : REGENERATIVE DIODE
- D1 : LEFT ARMATURE IGBT
- D2 : LEFT FLYWHEEL DIODE
- D3 : RIGHT ARMATURE IGBT
- D4 : RIGHT FLYWHEEL DIODE

**GAT**

Schematic No.	Used for	Truck No.	Serial No.
ES059-6210B	99759-62100	EP16K EP18K EP20K	ETB6A-00001-UP ETB6A-50001-UP ETB7A-00001-UP