

Product: Kubota WSM RTV900 Utility Vehicle Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/kubota-wsm-rtv900-utility-vehicle-service-repair-workshop-manual/>

# WSM

---

## WORKSHOP MANUAL UTILITY VEHICLE

# RTV900

---

# Kubota

Sample of manual. Download All 553 pages at:  
<https://www.arepairmanual.com/downloads/kubota-wsm-rtv900-utility-vehicle-service-repair-workshop-manual/>

## TO THE READER

This Workshop Manual has been prepared to provide servicing personnel with information on the mechanism, service and maintenance of RTV900. It is divided into three parts, "General", "Mechanism" and "Servicing".

### ■ General

Information on the product identification, the general precautions, maintenance check list, check and maintenance and special tools are described.

### ■ Mechanism

Information on the construction and function are included. This part should be understood before proceeding with troubleshooting, disassembling and servicing.

Refer to Diesel Engine Workshop Manual (Code No. 9Y021-01872) for the one which has not been described to this workshop manual.

### ■ Servicing

Information on the troubleshooting, servicing specification lists, tightening torque, checking and adjusting, disassembling and assembling, and servicing which cover procedures, precautions, factory specifications and allowable limits.

All information illustrations and specifications contained in this manual are based on the latest product information available at the time of publication.

The right is reserved to make changes in all information at any time without notice.

Due to covering many models of this manual, information or picture being used have not been specified as one model.

January 2004

© KUBOTA Corporation 2004



## SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully.

It is essential that you read the instructions and safety regulations before you attempt to repair or use this unit.



**DANGER** : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING** : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.




**CAUTION** : Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



**IMPORTANT** : Indicates that equipment or property damage could result if instructions are not followed.




**NOTE** : Gives helpful information.

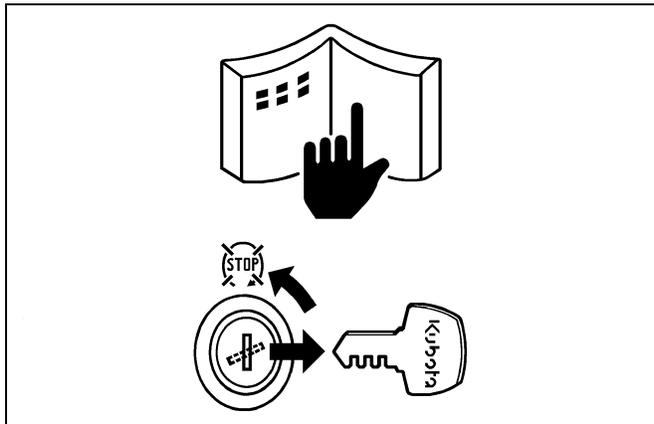


### BEFORE SERVICING AND REPAIRING

- Read all instructions and safety instructions in this manual and on your machine safety decals.
- Clean the work area and machine.
- Park the machine on a firm and level ground, and set the parking brake.
- Lower the implement to the ground.
- Stop the engine, and remove the key.
- Disconnect the battery negative cable.
- Hang a "**DO NOT OPERATE**" tag in operator station.

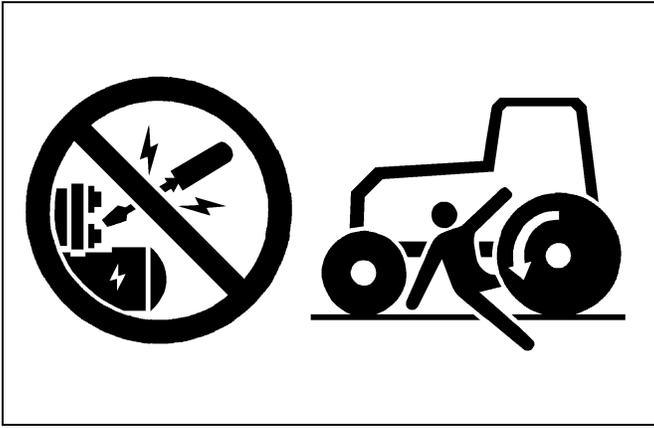


### SAFETY STARTING


- Do not start the engine by shorting across starter terminals or bypassing the safety start switch.
- Do not alter or remove any part of machine safety system.
- Before starting the engine, make sure that all shift levers are in neutral positions or in disengaged positions.
- Never start the engine while standing on ground. Start the engine only from operator's seat.

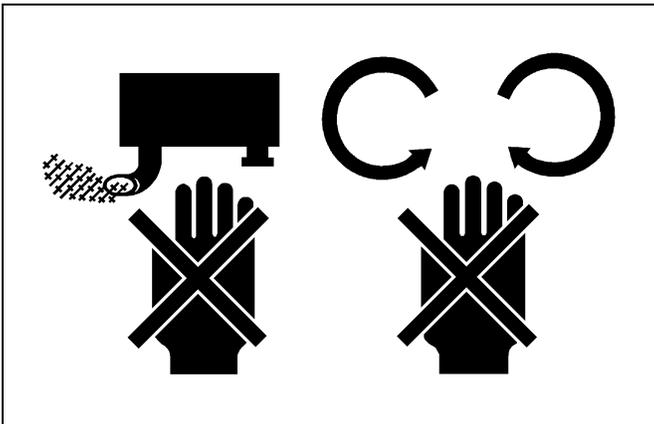

### SAFETY WORKING

- Do not work on the machine while under the influence of alcohol, medication, or other substances or while fatigued.
- Wear close fitting clothing and safety equipment appropriate to the job.
- Use tools appropriate to the work. Makeshift tools, parts, and procedures are not recommended.
- When servicing is performed together by two or more persons, take care to perform all work safely.
- Do not work under the machine that is supported solely by a jack. Always support the machine by safety stands.
- Do not touch the rotating or hot parts while the engine is running.
- Never remove the radiator cap while the engine is running, or immediately after stopping. Otherwise, hot water will spout out from radiator. Only remove radiator cap when cool enough to touch with bare hands. Slowly loosen the cap to first stop to relieve pressure before removing completely.
- Escaping fluid (fuel or hydraulic oil) under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or fuel lines. Tighten all connections before applying pressure.
- Do not open high-pressure fuel system. High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair fuel lines, sensors, or any other components between the high-pressure fuel pump and injectors on engines with high pressure common rail fuel system.
- High voltage exceeding 100 V is generated in the ECU, and is applied to the injector. Pay sufficient caution to electric shock when performing work activities.

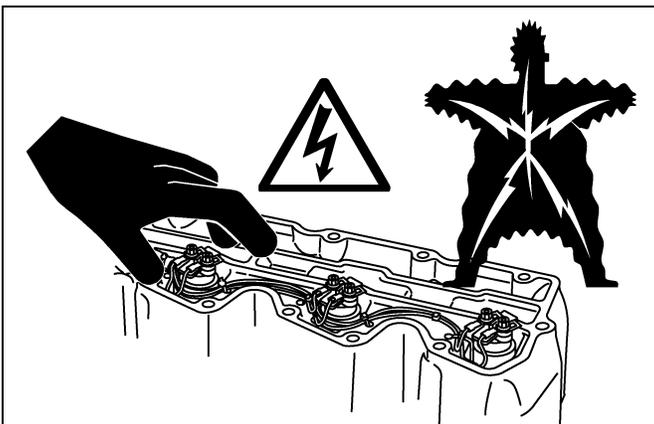

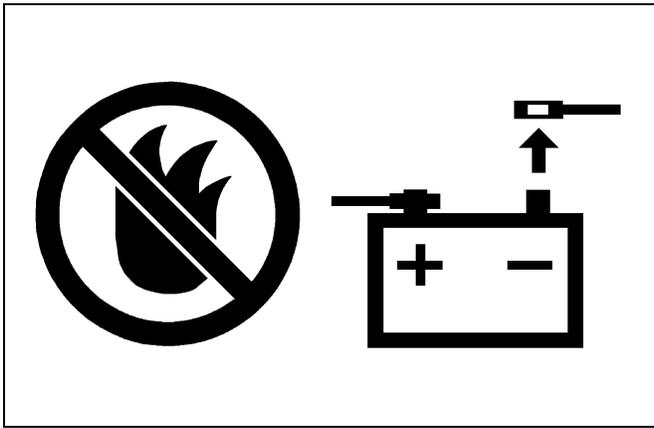


### AVOID FIRES

- Fuel is extremely flammable and explosive under certain conditions. Do not smoke or allow flames or sparks in your working area.
- To avoid sparks from an accidental short circuit, always disconnect the battery negative cable first and connect it last.
- Battery gas can explode. Keep sparks and open flame away from the top of battery, especially when charging the battery.
- Make sure that no fuel has been spilled on the engine.



### VENTILATE WORK AREA

- If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in a closed area. The exhaust gas contains poisonous carbon monoxide.

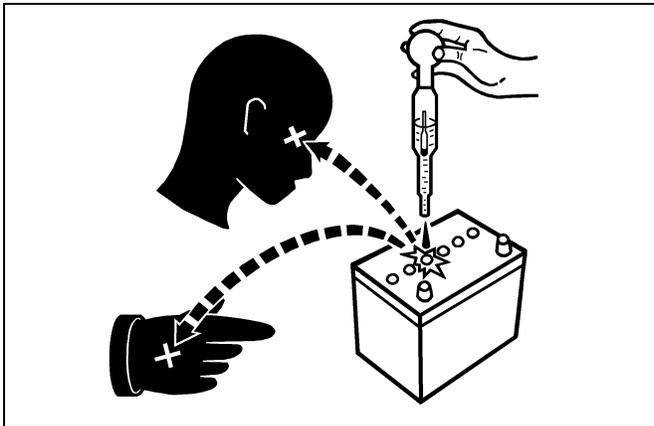


### PREVENT ACID BURNS

- Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, clothing and cause blindness if splashed into eyes. Keep electrolyte away from eyes, hands and clothing. If you spill electrolyte on yourself, flush with water, and get medical attention immediately.



### DISPOSE OF FLUIDS PROPERLY

- Do not pour fluids into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, electrolyte and other harmful waste.

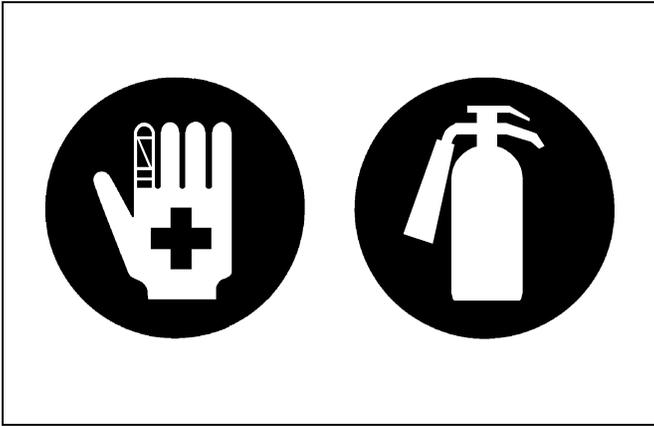**PREPARE FOR EMERGENCIES**

- Keep a first aid kit and fire extinguisher handy at all times.
- Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

# SAFETY DECALS

The following safety decals are installed on the machine.

If a decal becomes damaged, illegible or is not on the machine, replace it. The decal parts number is listed in the parts list.

(1) Part No. K7561-6524-1



## ⚠ DANGER

**TO AVOID POSSIBLE INJURY OR DEATH FROM A MACHINE RUNAWAY:**

1. Do not start engine by shorting across starter terminals or bypassing the safety start switch. The vehicle may start in gear and move if normal starting circuitry is bypassed.
2. Start engine only from operator's seat with range shift lever in neutral position and hydraulic outlet off (if equipped).

1AYAAAAAP104A

(2) Part No. K7561-6526-1

## ⚠ WARNING

**TO AVOID PERSONAL INJURY:**

1. Do not carry passengers in cargo bed.
2. Do not travel with the cargo bed in the raised position.

1AYAAAAAP105A

(4) Part No. K7561-6530-2

## ⚠ CAUTION


**TO AVOID PERSONAL INJURY:**

Do not operate the vehicle with the front hood open. Impaired visibility of the operator may cause loss of vehicle control. Latch the hood securely before operating the vehicle.

1AYAAAAAP106A

(3) Part No. K7561-6541-2

## ⚠ WARNING

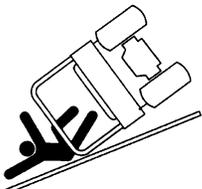

**TO AVOID PERSONAL INJURY OR DEATH:**

1. Do not remove Roll-Over Protective Structures (ROPS) for any application.
2. Do not modify or repair a ROPS because welding, grinding, drilling or cutting any portion may weaken the structure.

1AYAAAAAP109A

(5) Part No. K7561-6565-2

## ⚠ WARNING



**TO AVOID PERSONAL INJURY:**

Always fasten your seat belt.

1AYAAAAAP117A


(6) Part No. K7561-6533-1

## ⚠ WARNING

**TO AVOID PERSONAL INJURY DUE TO LOSS OF STEERING CONTROL:**

Do not depress the differential lock pedal at high speed.

1AYAAAAAP107A

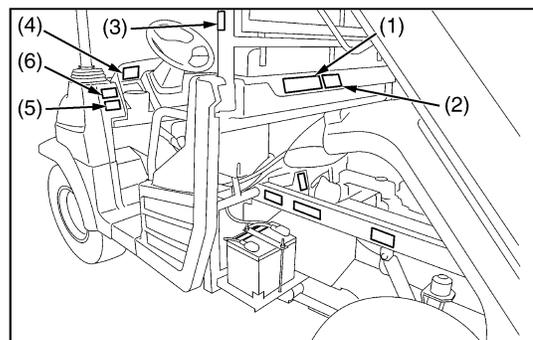

3XVAAABCP001A

(1) Part No. K1211-6115-1



1BDABARAP108A

(2) Part No. K1211-6116-1




1BDABARAP109A

(4) Part No. K7561-6550-1




1AYAAAAAP112A

(3) Part No. K7561-6544-1

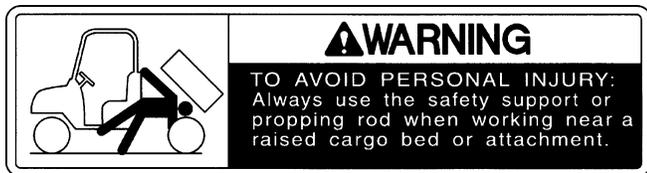


1AYAAAAAP110A

(5) Part No. K7561-6551-1

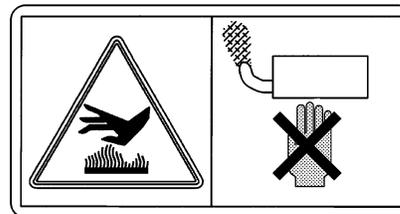

1AYAAAAAP113A

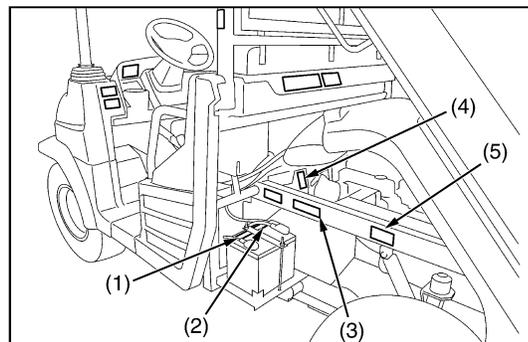

3XVAAABCP002A

(1) Part No. K7561-6522-2

**CAUTION**

<p><b>TO AVOID PERSONAL INJURY:</b></p> <ol style="list-style-type: none"> <li>1. Read and understand the operator's manual before operation.</li> <li>2. Never allow anyone without a valid driver's license to operate this vehicle.</li> <li>3. Before allowing other people to use the vehicle, have them read the operator's manual.</li> <li>4. This vehicle is for off road use only. Never operate on a public road.</li> <li>5. Wear safety gear, including helmet and eye protection, as appropriate.</li> <li>6. Check the tightness of all nuts and bolts regularly.</li> </ol>	<ol style="list-style-type: none"> <li>7. In addition to the driver, only one passenger can be carried. Minimum age for passenger is five years old.</li> <li>8. Before starting the engine, make sure that everyone is at a safe distance from the vehicle and the hydraulic outlet is off (if equipped).</li> <li>9. Do not operate the vehicle under the influence of drugs or alcohol.</li> <li>10. Keep all shields in place and stay away from all moving parts.</li> <li>11. Slow down for turns, or rough terrain.</li> <li>12. Before getting off from the vehicle, apply the parking brake, stop the engine and remove the key.</li> </ol>
---	--

1AYAAAAAP103A

(2) Part No. K7561-6565-2

**WARNING**

	<p><b>TO AVOID PERSONAL INJURY:</b></p> <p>Always fasten your seat belt.</p>
---	--

1AYAAAAAP117A


(3) Part No. K7561-6544-1

**WARNING**

	<p><b>TO AVOID PERSONAL INJURY:</b></p> <p>Always use the safety support or propping rod when working near a raised cargo bed or attachment.</p>
---	--

1AYAAAAAP110A

(4) Part No. K7561-6551-1

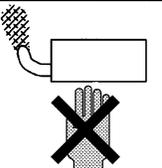	
---	---

1AYAAAAAP113A

(5) Part No. K7561-6537-1


	
<b>DIESEL ONLY</b>	

1AYAAAAAP108A


3XVAAABCP003A

(6) Part No. K7561-6550-1



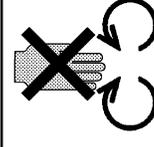

1AYAAAAAP112A

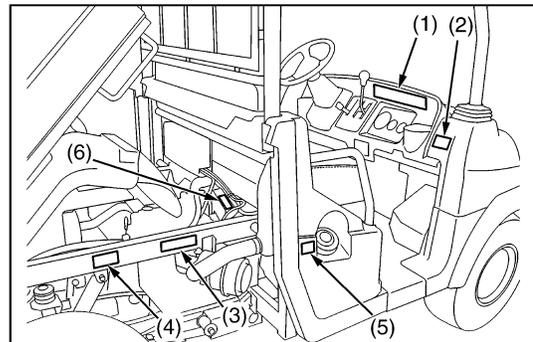


(1) Part No. K7561-6546-2

**WARNING**

TO AVOID PERSONAL INJURY:

1. Use brake fluid (DOT-3) only. Other oil types will ruin synthetic resin or rubber installed in brake system components, and cause brake failure.
2. If brake fluid is spilled on power steering hose, wash off with water immediately. Brake fluid quickly ruins synthetic resin or rubber hoses.

1AYAAAAAP111A

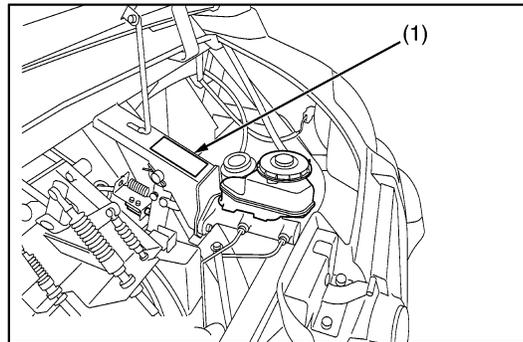


(2) Part No. K7561-6564-1

**CAUTION**



TO AVOID INJURY FROM CRUSHING:

1. Do not utilize the lever lock for machine maintenance or repair.
2. The lever lock is to prevent accidental actuation.

1AYAAAAAP116A

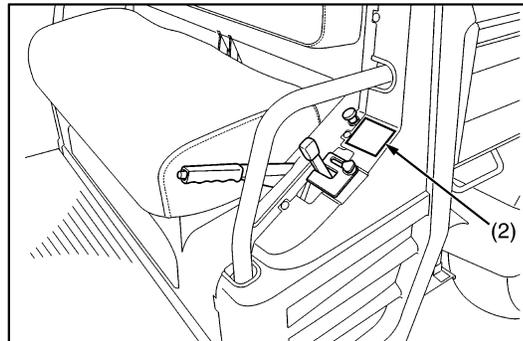

(3) Part No. K7561-6553-1 (for steel tank)  
Part No. K7561-6563-1 (for resinous tank)

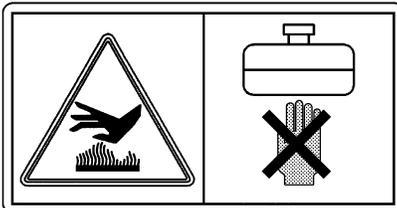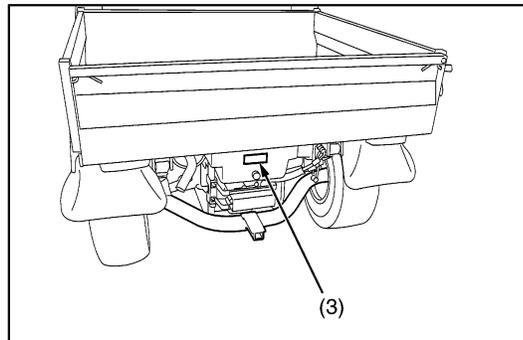

1AYAAAAAP114A

**CARE OF DANGER, WARNING AND CAUTION LABELS**

1. Keep danger, warning and caution labels clean and free from obstructing material.
2. Clean danger, warning and caution labels with soap and water, dry with a soft cloth.
3. Replace damaged or missing danger, warning and caution labels with new labels.
4. If a component with danger, warning and caution label(s) affixed is replaced with new part, make sure new label(s) is(are) attached in the same location(s) as the replaced component.
5. Mount new danger, warning and caution labels by applying on a clean dry surface and pressing any bubbles to outside edge.

3XVAAABCP004A

# SPECIFICATIONS

Model		General Purpose	Worksite	Turf	Recreational	
Engine	Maker	KUBOTA				
	Model	D902-E-UV / D902-E2-UV				
	Type	Indirect Injection. Vertical, water-cooled, 4-cycle diesel				
	Number of cylinders	3				
	Bore and stroke	72 × 73.6 mm (2.83 × 2.90 in.)				
	Total displacement	898 cm <sup>3</sup> (54.8 cu.in.)				
	Engine gross power (DIN)	16.1 kW (21.6 HP)				
	Rated revolution	53.3 r/s [3200 min <sup>-1</sup> (rpm)]				
	Maximum torque	54.7 N·m (5.6 kgf·m, 40.5 lbf·ft) / 30.0 to 36.7 r/s [1800 to 2200 min <sup>-1</sup> (rpm)]				
	Battery	12 V, CCA : 535 A, RC : 80 min.				
	Starting system	Electric starting with cell starter, 12 V, 1.2 kW				
	Lubrication system	Forced lubrication by trochoidal pump				
	Cooling system	Pressurized radiator, forced circulation with water pump				
	Fuel	Diesel fuel No. 2-D [above -10 °C (14 °F)], Diesel fuel No. 1 [below -10 °C (14 °F)]				
Capacities	Fuel tank	28 L (7.4 U.S.gals, 6.2 Imp.gals)				
	Engine crankcase (with filter)	3.1 L (3.3 U.S.qts, 2.7 Imp.qts)				
	Engine coolant (with recovery tank)	4.0 L (4.2 U.S.qts, 3.5 Imp.qts)				
	Transmission case	10.0 L (2.6 U.S.gals, 2.2 Imp.gals)				
	Front axle case	0.6 L (0.63 U.S.qts, 0.52 Imp.qts)				
	Knuckle case	Ref. 0.1 L (0.10 U.S.qts, 0.09 Imp.qts)				
	Brake fluid (reservoir and lines)	0.4 L (0.42 U.S.qts, 0.35 Imp.qts)				
	Hydraulic lift oil (Hydraulic dumping system model)	8.0 L (2.1 U.S.gals, 1.8 Imp.gals)				
	Hydraulic lift oil (Hydraulic PTO model)	7.0 L (1.8 U.S.gals, 1.5 Imp.gals)				
	Power steering oil	5.9 L (1.6 U.S.gals, 1.3 Imp.gals)				
Travelling system	Tires	Front	25 × 10 – 12 Knobby, 6PLY	25 × 10 – 12 HDWS, 6PLY	23 × 10.5 – 12 Turf, 4PLY	25 × 10 – 12 ATV, 6PLY
		Rear	25 × 10 – 12 Knobby, 6PLY	25 × 10 – 12 HKDWS, 6PLY	23 × 10.5 – 12 Turf, 4PLY	25 × 11 – 12 ATV, 6PLY
	Steering	Hydrostatic power				
	Transmission	Continuously variable hydro transmission (VHT)				
	Wheels and drive	4 wheels, rear 2WD or 4WD				
	Gear selection	Hi-Med-Lo range, forward, neutral, reverse				
	Differential lock	Standard; foot operated with mechanical holder				
	Brake	Front / Rear	Wet disc type			
		Parking brake	Rear wheel, hand lever			
Turning diameter	7.5 m (24.6 feet)					
Suspension	Front	Independent, MacPherson strut-type				
	Rear	Semi-independent, DeDion axle with leaf springs and shock absorber				

NOTE: \* Manufacture's estimate

The company reserves the right to change the specifications without notice.

W1028103

Model		General Purpose	Worksite	Recreational	Recreational
Dimensions	Overall length	2990 mm (117.7 in.)	3030 mm (119.3 in.)		
	Overall width	1520 mm (59.8 in.)			
	Overall height	2015 mm (79.3 in.)	1989 mm (78.3 in.)	2015 mm (79.3 in.)	
	Front tread center	1150 mm (45.3 in.)			
	Rear tread center	1180 mm (46.5 in.)			
	Wheel base	1965 mm (77.4 in.)			
	Ground clearance	Front axle	215 mm (8.5 in.)	180 mm (7.5 in.)	215 mm (8.5 in.)
Rear axle		210 mm (8.3 in.)	185 mm (7.3 in.)	210 mm (8.3 in.)	
Weight		805 kg (1775 lbs)	830 kg (1830 lbs)	850 kg (1874 lbs)	820 kg (1808 lbs)
Max. rolling weight (Towing capacity)		590 kg (1300 lbs)			
Payload capacity		740 kg (1630 lbs)			
Cargo bed	Width	1320 mm (52.0 in.)			
	Length	1180 mm (46.7 in.)			
	Depth	290 mm (11.4 in.)			
	Volume	0.455 m <sup>3</sup> (16 cu.ft.)			
	Bed height (unload)	800 mm (31.5 in.)			
	Cargo bed load	500 kg (1102 lbs)			
Sound level (operator ear)		87 db (A)			
Front deluxe guard		–	Standard		
Body color		Orange			Camo
Bed lift		–	Standard		–
Auxiliary control valve		–	Standard		–
Speedometer		–			Standard

NOTE: \* Manufacture's estimate  
The company reserves the right to change the specifications without notice.

W1030858


## TRAVELLING SPEEDS

Model	General Purpose			Worksite	Turf	Recreational
Tire size (Rear)	25 × 10 – 12 Knobby	25 × 10 – 12 HDWS	25 × 10.5 – 12 Turf	25 × 10 – 12 HDWS	23 × 10.5 – 12 Turf	25 × 11 – 12 ATV
Range gear shift lever	km/h (mph)			km/h (mph)	km/h (mph)	km/h (mph)
Low	16 (10)	16 (10)	14 (8)	16 (10)	14 (8)	15 (9)
Medium	29 (18)	29 (18)	26 (16)	29 (18)	26 (16)	29 (18)
High	40 (25)	40 (25)	36 (22)	40 (25)	36 (22)	40 (25)
Reverse	24 (15)	24 (15)	21 (13)	24 (15)	21 (13)	22 (14)

The company reserves the right to change the specifications without notice.

W1035065

# DIMENSIONS

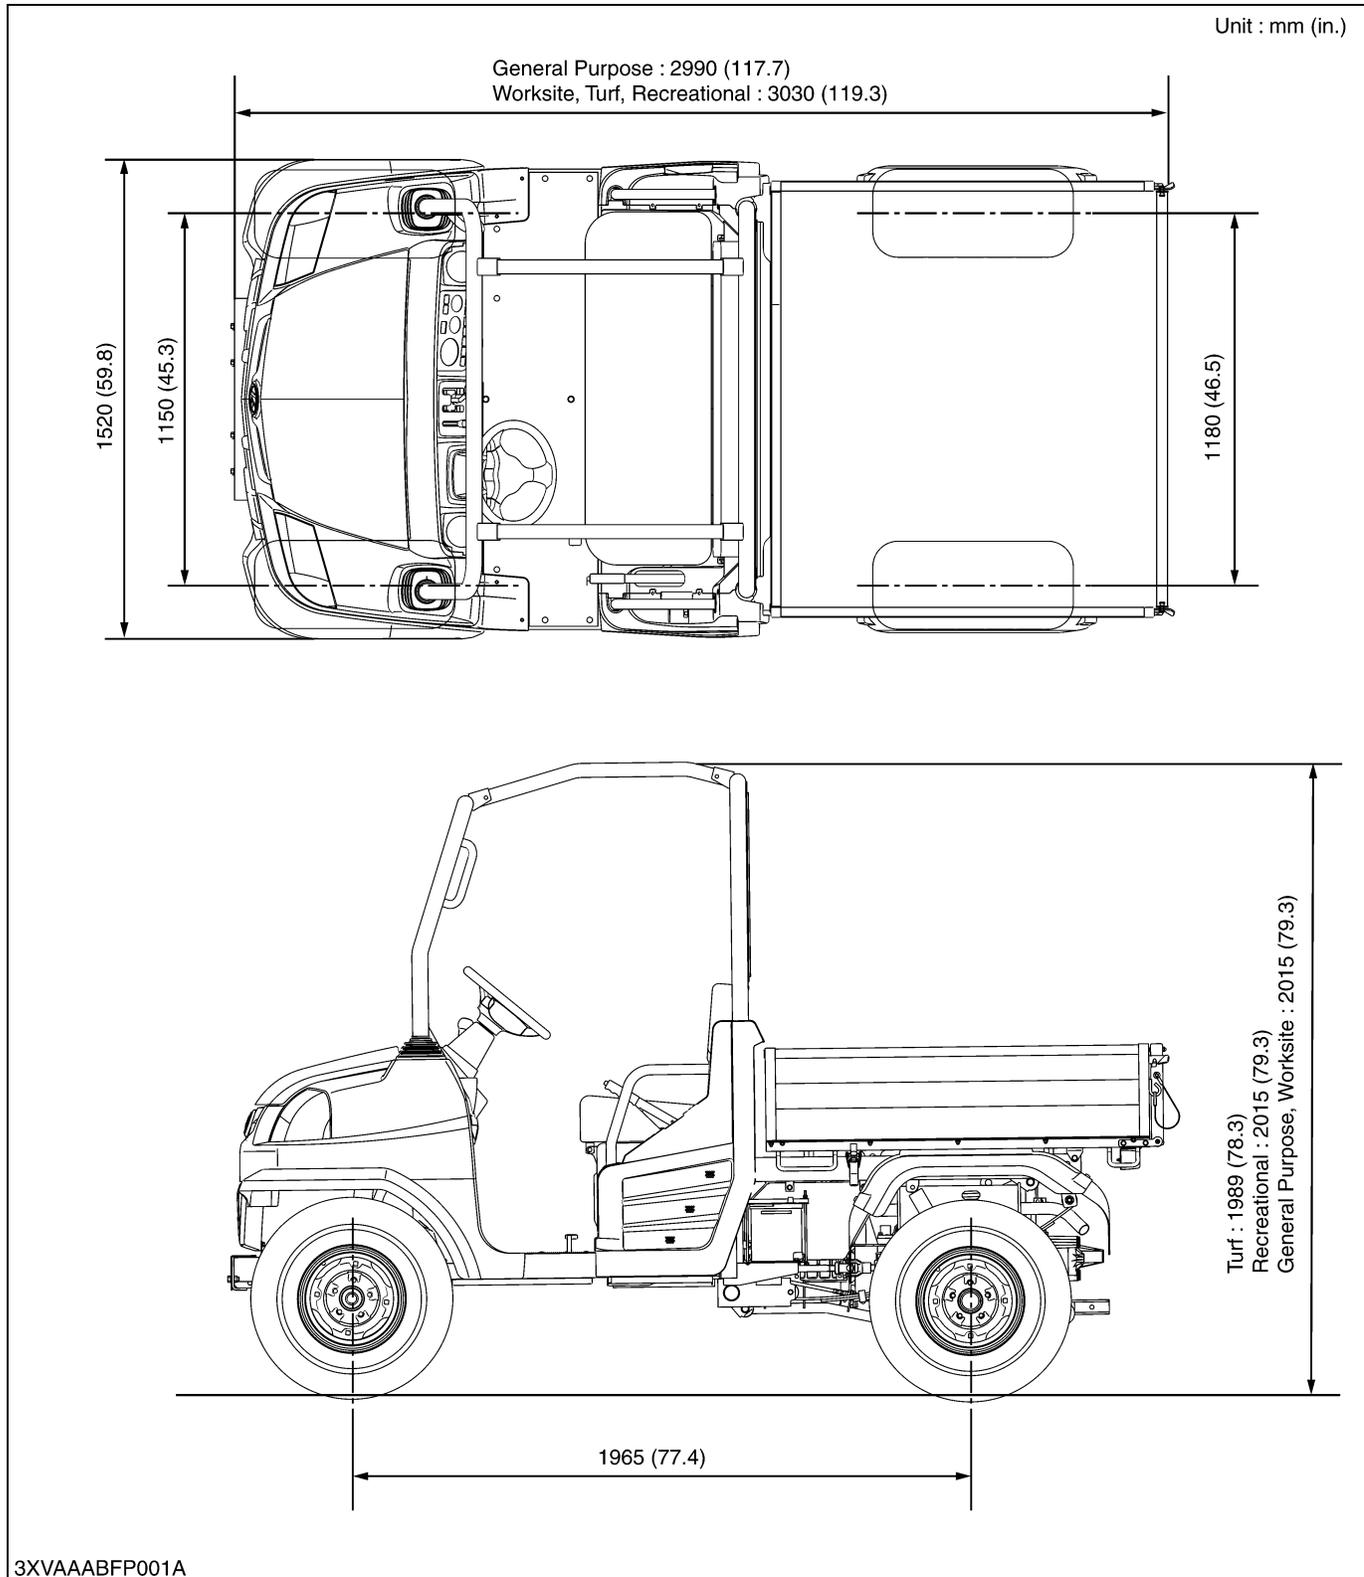

3XVAAABFP001A

# **G GENERAL**

# GENERAL

## CONTENTS



1. PRODUCT IDENTIFICATION.....	G-1
2. GENERAL PRECAUTIONS.....	G-2
3. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING..	G-3
[1] WIRING .....	G-3
[2] BATTERY.....	G-5
[3] FUSE.....	G-5
[4] CONNECTOR.....	G-5
[5] HANDLING OF CIRCUIT TESTER.....	G-7
4. LUBRICANTS, FUEL AND COOLANT .....	G-8
5. TIGHTENING TORQUES .....	G-11
[1] GENERAL USE SCREWS, BOLTS AND NUTS.....	G-11
[2] STUD BOLTS.....	G-11
[3] METRIC SCREWS, BOLTS AND NUTS .....	G-12
[4] AMERICAN STANDARD SCREWS, BOLTS AND NUTS WITH UNC OR UNF THREADS .....	G-12
[5] PLUGS.....	G-12
6. MAINTENANCE CHECK LIST.....	G-13
[1] FROM FIRST 50 HOURS TO EVERY 550 HOURS.....	G-13
[2] FROM EVERY 600 HOURS TO EVERY 4 YEARS.....	G-15
7. CHECK AND MAINTENANCE.....	G-17
[1] DAILY CHECK .....	G-17
[2] CHECK POINTS OF INITIAL 50 HOURS.....	G-23
[3] CHECK POINTS OF EVERY 50 HOURS.....	G-30
[4] CHECK POINTS OF EVERY 100 HOURS.....	G-32
[5] CHECK POINTS OF EVERY 200 HOURS.....	G-38
[6] CHECK POINT OF EVERY 300 HOURS .....	G-41
[7] CHECK POINTS OF EVERY 400 HOURS.....	G-42
[8] CHECK POINT OF EVERY 500 HOURS .....	G-42
[9] CHECK POINT OF EVERY 800 HOURS .....	G-42
[10]CHECK POINT OF EVERY 1500 HOURS .....	G-42
[11]CHECK POINT OF EVERY 3000 HOURS .....	G-43
[12]CHECK POINT OF EVERY 1 YEAR.....	G-43
[13]CHECK POINTS OF EVERY 2 YEARS.....	G-43
[14]CHECK POINT OF EVERY 4 YEARS .....	G-46
[15]OTHERS .....	G-46
8. SPECIAL TOOLS.....	G-49
[1] SPECIAL TOOLS FOR ENGINE .....	G-49
[2] SPECIAL TOOLS FOR TRACTOR.....	G-53
9. TIRES.....	G-59
[1] TYPE OF TIRE.....	G-60
[2] TYPE PRESSURE.....	G-61
[3] VEHICLE LIMITATIONS .....	G-61
[4] CARGO BED.....	G-62

# 1. PRODUCT IDENTIFICATION


When contacting your local KUBOTA distributor, always specify engine serial number, product serial number and hour meter reading.

- (1) Vehicle Identification Plate
- (2) Product Identification Number
- (3) Engine Serial Number  
D902-E-UV : up to 4Z9999  
D902-E2-UV : from 5A0001
- (4) Transmission Assembly Serial Number

W1011386

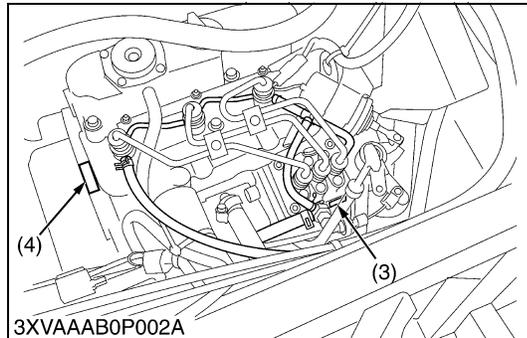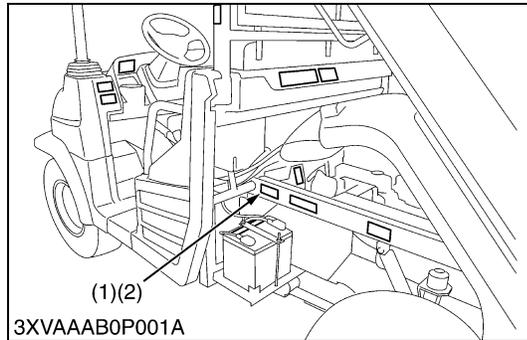

## 2. GENERAL PRECAUTIONS

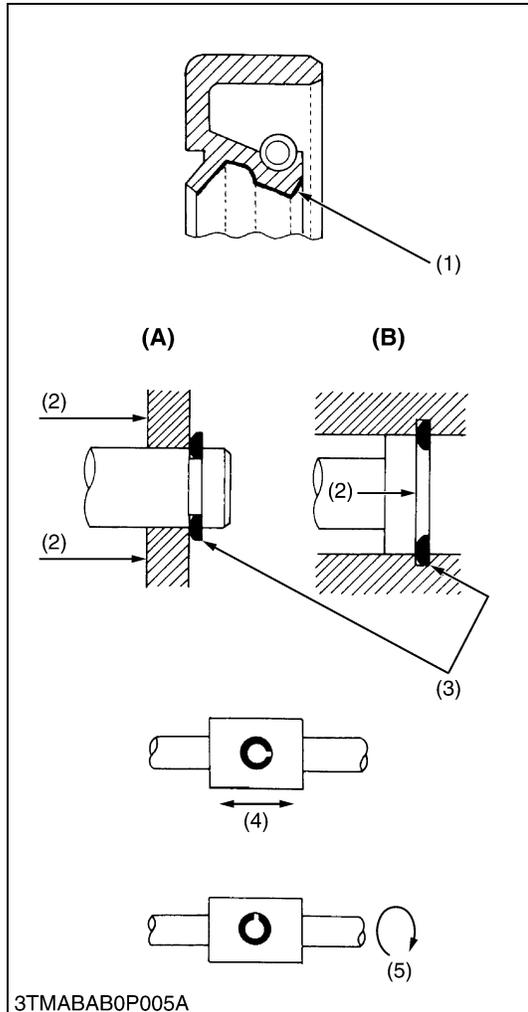


- During disassembly, carefully arrange removed parts in a clean area to prevent confusion later. Screws, bolts and nuts should be installed in their original position to prevent reassembly errors.
- When special tools are required, use KUBOTA genuine special tools. Special tools which are not frequently used should be made according to the drawings provided.
- Before disassembling or servicing electrical wires, always disconnect the ground cable from the battery first.
- Remove oil and dirt from parts before measuring.
- Use only KUBOTA genuine parts for parts replacement to maintain machine performance and to assure safety.
- Gaskets and O-rings must be replaced during reassembly. Apply grease to new O-rings or oil seals before assembling. See the figure left side.
- When reassembling external snap rings or internal snap rings, they must be positioned so that sharp edge faces against the direction from which a force is applied. See the figure left side.
- When inserting spring pins, their splits must face the direction from which a force is applied. See the figure left side.
- To prevent damage to the hydraulic system, use only specified fluid or equivalent.

- (1) Grease  
 (2) Force  
 (3) Sharp Edge  
 (4) Axial Force  
 (5) Rotating Movement

- (A) External Snap Ring  
 (B) Internal Snap Ring

W1010794

### 3. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING

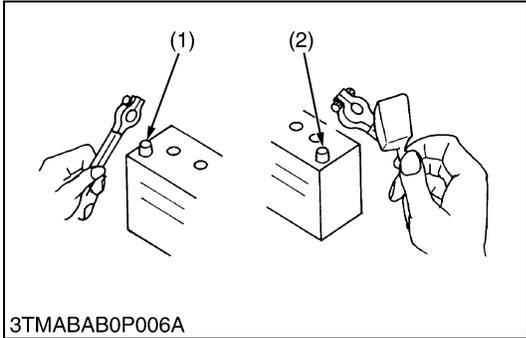

3TMABAB0P006A

To ensure safety and prevent damage to the machine and surrounding equipment, heed the following precautions in handling electrical parts and wiring.


**■ IMPORTANT**

- Check electrical wiring for damage and loosened connection every year. To this end, educate the customer to do his or her own check and at the same time recommend the dealer to perform periodic check for a fee.
- Do not attempt to modify or remodel any electrical parts and wiring.
- When removing the battery cables, disconnect the negative cable first. When installing the battery cables, connect the positive cable first.

- (1) Negative Terminal (2) Positive Terminal

W10111140

#### [1] WIRING

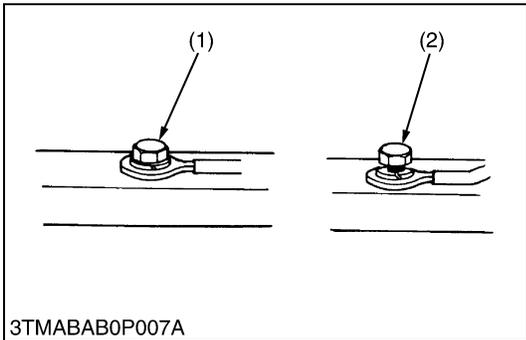


3TMABAB0P007A

- Securely tighten wiring terminals.

- (1) Correct (Securely Tighten) (2) Incorrect (Loosening Leads to Faulty Contact)

W10112160

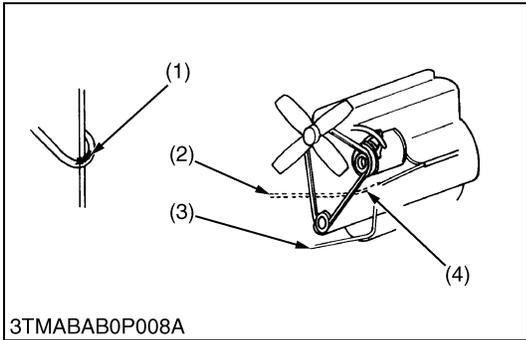


3TMABAB0P008A

- Do not let wiring contact dangerous part.

- (1) Dangerous Part (2) Wiring (Incorrect) (3) Wiring (Correct) (4) Dangerous Part

W10113130

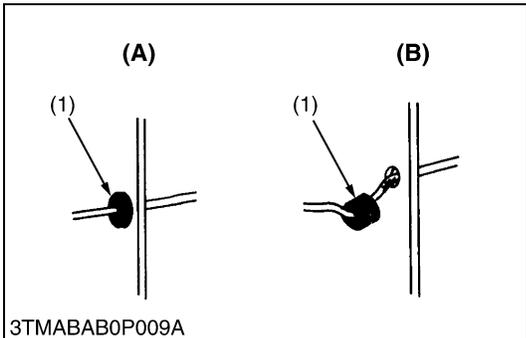


3TMABAB0P009A

- Securely insert grommet.

- (1) Grommet (A) Correct (B) Incorrect


W10113880

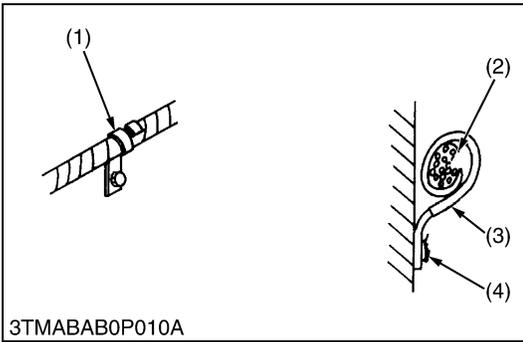

- Securely clamp, being careful not to damage wiring.

- (1) Clamp
  - Wind Clamp Spirally
- (2) Wire Harness
- (3) Clamp
- (4) Welding Dent


W10114580

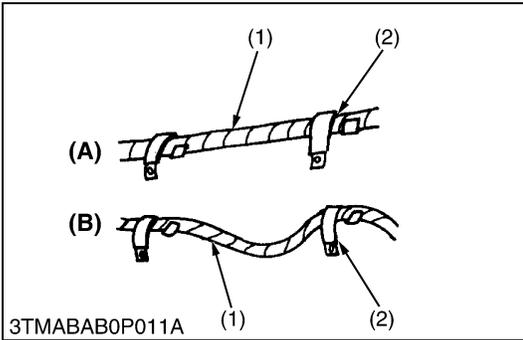

- Clamp wiring so that there is no twist, unnecessary sag, or excessive tension, except for movable part, where sag be required.

- (1) Wiring
- (2) Clamp
- (A) Correct
- (B) Incorrect


W10115870

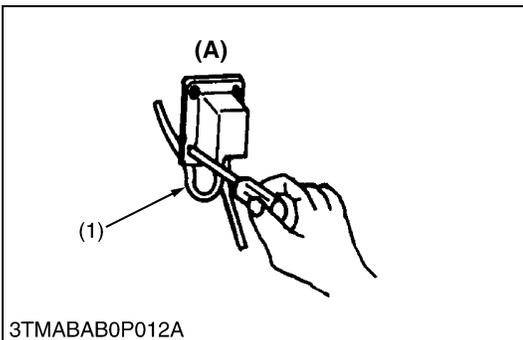

- In installing a part, take care not to get wiring caught by it.

- (1) Wiring
- (A) Incorrect

W10116700

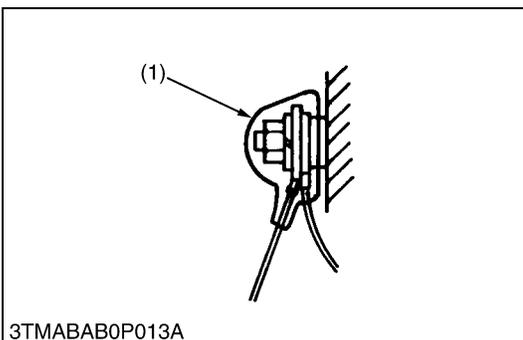


- After installing wiring, check protection of terminals and clamped condition of wiring, only connect battery.

- (1) Cover
  - Securely Install Cover

W10117350

## [2] BATTERY

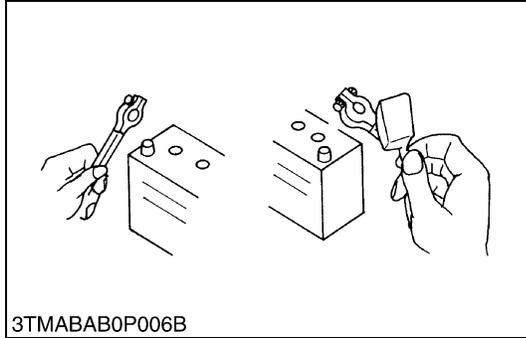


- Take care not to confuse positive and negative terminal posts.
- When removing battery cables, disconnect negative cable first. When installing battery cables, check for polarity and connect positive cable first.
- Do not install any battery with capacity other than is specified (Ah).
- After connecting cables to battery terminal posts, apply high temperature grease to them and securely install terminal covers on them.
- Do not allow dirt and dust to collect on battery.

### ⚠ CAUTION

- **Take care not to let battery liquid spill on your skin and clothes. If contaminated, wash it off with water immediately.**
- **Before recharging the battery, remove it from the machine.**
- **Before recharging, remove cell caps.**
- **Do recharging in a well-ventilated place where there is no open flame nearby, as hydrogen gas and oxygen are formed.**

W10118160

## [3] FUSE

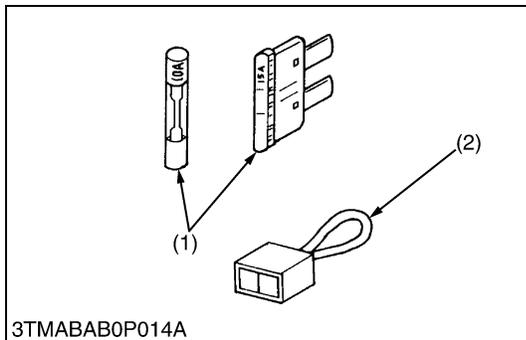


- Use fuses with specified capacity. Neither too large or small capacity fuse is acceptable.
- Never use steel or copper wire in place of fuse.
- Do not install working light, radio set, etc. on machine which is not provided with reserve power supply.
- Do not install accessories if fuse capacity of reserve power supply is exceeded.

(1) Fuse

(2) Fusible Link

W10120920


## [4] CONNECTOR

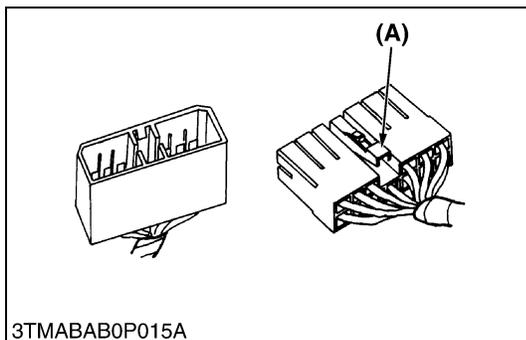

- For connector with lock, push lock to separate.

(A) Push

W10122110

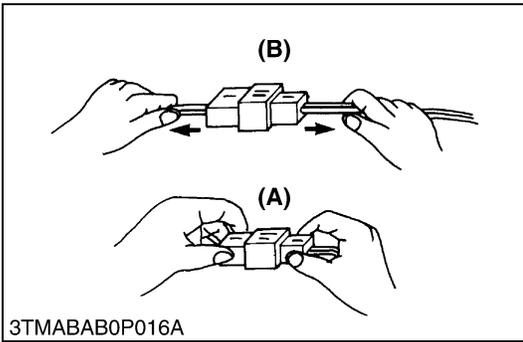


- In separating connectors, do not pull wire harnesses.
- Hold connector bodies to separate.

(A) Correct

(B) Incorrect

W10122720

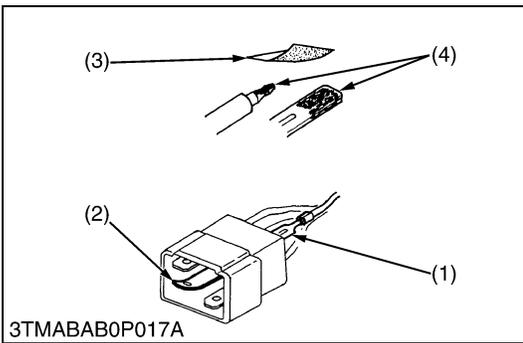


- Use sandpaper to remove rust from terminals.
- Repair deformed terminal. Make certain there is no terminal being exposed or displaced.

(1) Exposed Terminal  
(2) Deformed Terminal

(3) Sandpaper  
(4) Rust

W1012346

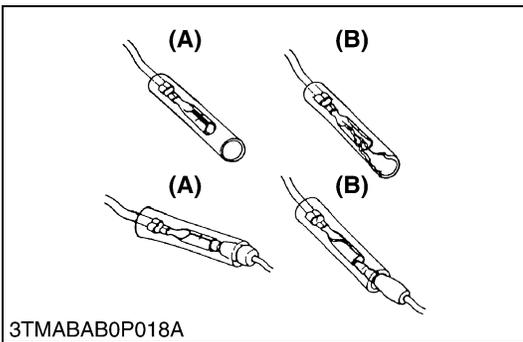


- Make certain that there is no female connector being too open.

(A) Correct

(B) Incorrect

W1012430

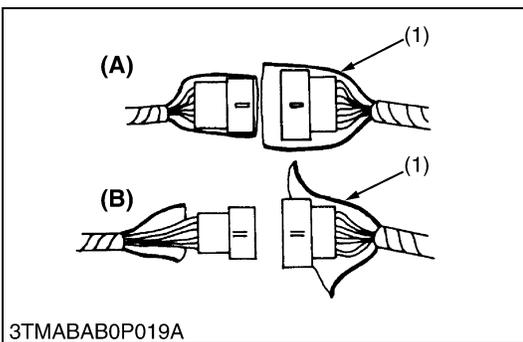


- Make certain plastic cover is large enough to cover whole connector.

(1) Cover

(A) Correct  
(B) Incorrect

W1012519

## [5] HANDLING OF CIRCUIT TESTER

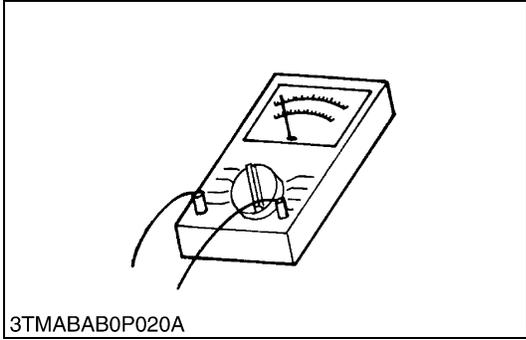

- Use tester correctly following manual provided with tester.
- Check for polarity and range.

W1012684

## 4. LUBRICANTS, FUEL AND COOLANT

No.	Place	Capacity	Lubricants, fuel and coolant
1	Fuel tank	28.0 L 7.4 U.S.gals 6.2 Imp.gals	No. 2-D diesel fuel No. 1-D diesel fuel if temperature is below -10 °C (14 °F)
2	Cooling system with recovery tank	4.0 L 4.2 U.S.qts 3.5 Imp.qts	Fresh clean water with anti-freeze
3	Engine crankcase with oil filter	(Oil filter exchanged) 3.1 L 3.3 U.S.qts 2.7 Imp.qts (Oil filter non-exchanged) 2.7 L 2.9 U.S.qts 2.4 Imp.qts	Engine oil : API Service CD, CE or CF Below 0 °C (32 °F) : SAE10W, 10W-30 0 to 25 °C (32 to 77 °F): SAE20, 10W-30 or 15W-40 Above 25 °C (77 °F): SAE30, 10W-30 or 15W-40
4	Transmission case	10.0 L 2.6 U.S.gals 2.2 Imp.gals	KUBOTA UDT or SUPER UDT fluid*
5	Front axle case	0.6 L 0.63 U.S.qts 0.52 Imp.qts	KUBOTA UDT or SUPER UDT fluid*
6	Knuckle case	Ref. 0.15 L Ref. 0.16 U.S.qts Ref. 0.13 Imp.qts	KUBOTA UDT or SUPER UDT fluid*
7	Brake fluid (reservoir and lines)	0.4 L 0.42 U.S.qts 0.35 Imp.qts	KUBOTA DOT3 GENUINE BRAKE FLUID
8	Hydraulic lift oil (Hydraulic dumping system model)	8.0 L 2.1 U.S.gals 1.8 Imp.gals	KUBOTA UDT or SUPER UDT fluid*
	Hydraulic lift oil (Hydraulic PTO model)	7.0 L 1.8 U.S.gals 1.5 Imp.gals	
9	Power steering oil	5.9 L 1.6 U.S.gals 1.3 Imp.gals	

\* KUBOTA original transmission hydraulic fluid.

Greasing				
	Place	No. of greasing point	Capacity	Type of grease
10	VHT link	2	Until grease overflows	Multipurpose type grease NLGI-2 or NLGI-1 (GC-LB)
11	Battery terminal	2	Moderate amount	
12	Cargo lift cylinder pivot	2		
13	Cargo bed pivot	2		
14	Parking brake linkage	4		
15	Range gear shift lever pivot	1		
16	4WD lever pivot	1		
17	Accelerator wire	–		Engine oil

■ **NOTE**

- **Engine Oil :**  
Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures as shown above.
- **Transmission oil :**  
The oil used to lubricate the transmission is also used as hydraulic fluid. To insure proper operation of the hydraulic system and complete lubrication of the transmission, it is important that a multi-grade transmission fluid be used in this system. We recommend the use of KUBOTA SUPER UDT fluid for optimum protection and performance.  
Do not mix different brands or grades.
- **Brake fluid :**  
Always use KUBOTA DOT3 GENUINE BRAKE FLUID from a sealed container. If it is not available, you should use only DOT3 fluid as a temporary replacement from a sealed container.  
However, the use of any non-KUBOTA brake fluid can cause corrosion and decrease the lift of the system. Have the brake system flushed and refilled with KUBOTA DOT3 GENUINE BRAKE FLUID as soon as possible.
- Indicated capacity of water and oil are manufacturer's estimate.

**(Continued)**

- **Lubricating Oil**

With the emission control now in effect, the CF-4 and CG-4 lubricating oils have been developed for use of a low-sulfur fuel on-road vehicle engines. When an off-road vehicle engine runs on a high-sulfur fuel, it is advisable to employ the CF, CD or CE lubricating oil with a high total base number. If the CF-4 or CG-4 lubricating oil is used with a high-sulfur fuel, change the lubricating oil at shorter intervals.

- Lubricating oil recommended when a low-sulfur or high-sulfur fuel is employed.

Lubricating oil class	Fuel		Remarks
	Low sulfur (0.5 % $\geq$ )	High sulfur	
CF	○	○	TBN $\geq$ 10
CF-4	○	X	
CG-4	○	X	

○ : Recommendable X : Not recommendable

## 5. TIGHTENING TORQUES

### [1] GENERAL USE SCREWS, BOLTS AND NUTS

Screws, bolts and nuts whose tightening torques are not specified in this Workshop Manual should be tightened according to the table below.

Indication on top of bolt	4 No-grade or 4T						7 7T						9 9T		
Material of bolt	SS400, S20C						S43C, S48C						SCr435, SCM435		
Material of opponent part	Ordinariness			Aluminum			Ordinariness			Aluminum			Ordinariness		
Unit															
Diameter	N·m	kgf·m	lbf·ft												
M6 (6 mm, 0.24 in.)	7.85 to 9.31	0.80 to 0.95	5.79 to 6.87	7.85 to 8.82	0.80 to 0.90	5.79 to 6.50	9.81 to 11.2	1.00 to 1.15	7.24 to 8.31	7.85 to 8.82	0.80 to 0.90	5.79 to 6.50	12.3 to 14.2	1.25 to 1.45	9.05 to 10.5
M8 (8 mm, 0.31 in.)	17.7 to 20.5	1.8 to 2.1	13.1 to 15.1	16.7 to 19.6	1.7 to 2.0	12.3 to 14.4	23.6 to 27.4	2.4 to 2.8	17.4 to 20.2	17.7 to 20.5	1.8 to 2.1	13.1 to 15.1	29.5 to 34.3	3.0 to 3.5	21.7 to 25.3
M10 (10 mm, 0.39 in.)	39.3 to 45.1	4.0 to 4.6	29.0 to 33.2	31.4 to 34.3	3.2 to 3.5	23.2 to 25.3	48.1 to 55.8	4.9 to 5.7	35.5 to 41.2	39.3 to 44.1	4.0 to 4.5	29.0 to 32.5	60.9 to 70.6	6.2 to 7.2	44.9 to 52.0
M12 (12 mm, 0.47 in.)	62.8 to 72.5	6.4 to 7.4	46.3 to 53.5	-	-	-	77.5 to 90.2	7.9 to 9.2	57.2 to 66.5	62.8 to 72.5	6.4 to 7.4	46.3 to 53.5	103 to 117	10.5 to 12.0	76.0 to 86.7
M14 (14 mm, 0.55 in.)	108 to 125	11.0 to 12.8	79.6 to 92.5	-	-	-	124 to 147	12.6 to 15.0	91.2 to 108	-	-	-	167 to 196	17.0 to 20.0	123 to 144
M16 (16 mm, 0.63 in.)	167 to 191	17.0 to 19.5	123 to 141	-	-	-	197 to 225	20.0 to 23.0	145 to 166	-	-	-	260 to 304	26.5 to 31.0	192 to 224
M18 (18 mm, 0.71 in.)	246 to 284	25.0 to 29.0	181 to 209	-	-	-	275 to 318	28.0 to 32.5	203 to 235	-	-	-	344 to 402	35.0 to 41.0	254 to 296
M20 (20 mm, 0.79 in.)	334 to 392	34.0 to 40.0	246 to 289	-	-	-	368 to 431	37.5 to 44.0	272 to 318	-	-	-	491 to 568	50.0 to 58.0	362 to 419

W1034542

### [2] STUD BOLTS

Material of opponent part	Ordinariness			Aluminum		
Unit						
Diameter	N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft
M8 (8 mm, 0.31 in.)	11.8 to 15.6	1.2 to 1.6	8.68 to 11.5	8.82 to 11.8	0.90 to 1.2	6.51 to 8.67
M10 (10 mm, 0.39 in.)	24.6 to 31.3	2.5 to 3.2	18.1 to 23.1	19.7 to 25.4	2.0 to 2.6	14.5 to 18.8
M12 (12 mm, 0.47 in.)	29.5 to 49.0	3.0 to 5.0	21.7 to 36.1	31.4	3.2	23.1

W1048139

**[3] METRIC SCREWS, BOLTS AND NUTS**

Grade	Property class 8.8 			Property class 10.9 			
	Unit	N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft
<b>M 8</b>		23.6 to 27.4	2.4 to 2.8	17.4 to 20.2	29.4 to 34.3	3.0 to 3.5	21.7 to 25.3
<b>M 10</b>		48.1 to 55.8	4.9 to 5.7	35.5 to 41.2	60.8 to 70.5	6.2 to 7.2	44.9 to 52.1
<b>M 12</b>		77.5 to 90.1	7.9 to 9.2	57.2 to 66.5	103.0 to 117.0	10.5 to 12.0	76.0 to 86.8
<b>M 14</b>		124.0 to 147.0	12.6 to 15.0	91.2 to 108.0	167.0 to 196.0	17.0 to 20.0	123.0 to 144.0
<b>M 16</b>		196.0 to 225.0	20.0 to 23.0	145.0 to 166.0	260.0 to 303.0	26.5 to 31.0	192.0 to 224.0

W1016172

**[4] AMERICAN STANDARD SCREWS, BOLTS AND NUTS WITH UNC OR UNF THREADS**

Grade	SAE GR.5 			SAE GR.8 			
	Unit	N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft
<b>5/16</b>		23.1 to 27.8	2.35 to 2.84	17.0 to 20.5	32.5 to 39.3	3.31 to 4.01	24.0 to 29.0
<b>3/8</b>		47.5 to 57.0	4.84 to 5.82	35.0 to 42.0	61.0 to 73.2	6.22 to 7.47	45.0 to 54.0
<b>1/2</b>		108.5 to 130.2	11.07 to 13.29	80.0 to 96.0	149.2 to 179.0	15.22 to 18.27	110.0 to 132.0
<b>9/16</b>		149.2 to 179.0	15.22 to 18.27	110.0 to 132.0	217.0 to 260.4	22.14 to 26.57	160.0 to 192.0
<b>5/8</b>		203.4 to 244.1	20.75 to 24.91	150.0 to 180.0	298.3 to 358.0	30.44 to 36.53	220.0 to 264.0

W1022485

**[5] PLUGS**

Shape	Size	Material of opponent part					
		Ordinariness			Aluminum		
		N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft
	<b>R1/8</b>	12.7 to 21.6	1.3 to 2.2	9.4 to 15.9	12.7 to 19.6	1.3 to 2.0	9.4 to 15.4
	<b>R1/4</b>	24.5 to 44.1	2.5 to 4.5	18.1 to 32.5	24.5 to 34.3	2.5 to 3.5	18.1 to 25.4
	<b>R3/8</b>	49.0 to 88.3	5.0 to 9.0	36.2 to 65.1	49.0 to 58.8	5.0 to 6.0	36.2 to 43.4
	<b>R1/2</b>	58.8 to 107.9	6.0 to 11.0	43.4 to 79.6	58.8 to 78.5	6.0 to 8.0	43.4 to 57.9
	<b>G1/4</b>	24.5 to 34.3	2.5 to 3.5	18.1 to 25.3	–	–	–
	<b>G3/8</b>	61.8 to 82.4	6.3 to 8.4	45.1 to 60.8	–	–	–
	<b>G1/2</b>	49.0 to 88.3	5.0 to 9.0	36.2 to 65.1	–	–	–

000001666E

## 6. MAINTENANCE CHECK LIST

### [1] FROM FIRST 50 HOURS TO EVERY 550 HOURS

#### ■ IMPORTANT

- The jobs indicated by ★ must be done after the first 50 hours of operation.

(To be continued)

No.	Item	Period	Indication on hour meter											Important	Reference page	
			50	100	150	200	250	300	350	400	450	500	550			
1	Engine start system	Check	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆			G-30
2	Greasing	Apply	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆			G-31
3	Engine oil	Change	★			☆				☆						G-23
4	Muffler	Clean	★	☆		☆		☆		☆		☆				G-25
5	Wheel screw torque	Check	★	☆		☆		☆		☆		☆				G-25
6	Spark arrester	Clean		☆		☆		☆		☆		☆				G-33
7	Battery condition	Check		☆		☆		☆		☆		☆				G-35
8	Fan belt	Adjust		☆		☆		☆		☆		☆				G-36
9	VHT neutral spring	Check		☆		☆		☆		☆		☆				G-32
10	Toe-in	Adjust		☆		☆		☆		☆		☆				G-38
11	Fuel filter element	Check		☆		☆		☆		☆		☆				G-37
		Replace														–
12	Air cleaner element	Clean		☆		☆		☆		☆		☆				G-34
		Replace														–
13	Fuel line	Check		☆		☆		☆		☆		☆				G-37
		Replace														–
14	Engine oil filter	Replace	★			☆				☆						G-24
15	Transmission oil filter (HST) (Yellow color)	Replace	★			☆				☆						G-27
16	Transmission oil filter (Suction) (Orange color)	Replace	★			☆				☆						G-27
17	Transmission oil	Change								☆						G-26
18	Brake pedal	Adjust	★			☆				☆						G-28
19	Parking brake lever	Adjust	★			☆				☆						G-28
20	Brake light switch	Check	★			☆				☆						G-28
21	Front brake case	Check	★			☆				☆						G-29
22	Power steering oil	Change				☆				☆						G-41
23	Hydraulic lift oil	Change				☆				☆						G-40
24	Radiator hose and clamp	Check				☆				☆						G-39
		Replace														–
25	Power steering oil line	Check				☆				☆						G-40
		Replace														–
26	Intake air line	Check				☆				☆						G-41
		Replace														–
27	Brake hose and pipe	Check	★			☆				☆						G-29
		Replace														–

W10214620

Product: Kubota WSM RTV900 Utility Vehicle Service Repair Workshop Manual

(Continued) Full Download: [https://www.arepairmanual.com/downloads/kubota-wsm-rtv900-ut](https://www.arepairmanual.com/downloads/kubota-wsm-rtv900-utility-vehicle-service-repair-workshop-manual/)[ility-vehicle-service-repair-workshop-manual/](https://www.arepairmanual.com/downloads/kubota-wsm-rtv900-utility-vehicle-service-repair-workshop-manual/)

No.	Item	Period	Indication on hour meter											Important	Reference page		
			50	100	150	200	250	300	350	400	450	500	550				
28	Tire wear	Check	★			☆					☆						G-30
29	Front axle case oil	Change				☆					☆						G-42
30	Knuckle axle case oil	Change									☆						G-42
31	Engine valve clearance	Adjust															—
32	Fuel injection nozzle injection pressure	Check															—
33	Injection pump	Check															—
34	Brake master cylinder inner parts	Replace															—
35	Brake fluid	Change															—
36	Remote hydraulic hose (if equipped)	Replace															—
37	Rear brake cylinder seal	Replace															—
38	Front brake seal	Replace															—
39	Cooling system	Flash															—
40	Coolant	Change															—
41	Fuel system	Bleed															—
42	Fuse	Replace															—
43	Light bulb	Replace															—

W10368570

Sample of manual. Download All 553 pages at:

<https://www.arepairmanual.com/downloads/kubota-wsm-rtv900-utility-vehicle-service-repair-workshop-manual/>