

Product: Takeuchi TL10 Skid Steer Loader Workshop Part Manual(Book No BU6Z003-0-0)  
Full Download: <https://www.aresairmanual.com/downloads/takeuchi-tl10-skid-steer-loader-workshop-part-manualbook-no-bu6z003-0-0/>

# PARTS MANUAL TL10 BU6Z003-0-0 S/N 201000002-UP

PARTS MANUAL

Sample of manual. Download All 694 pages at:

<https://www.aresairmanual.com/downloads/takeuchi-tl10-skid-steer-loader-workshop-part-manualbook-no-bu6z003-0-0/>

**UNDERCARRIAGE**

TRACK ROLLER A	1
TRACK ROLLER B	3
FRONT IDLER	5
TRACK ADJUSTER	7
TRAVEL DEVICE	9
CRAWLER BELT	11

**MAIN FRAME & CONTROL LEVER**

FRAME	13
ARM STOPPER	15
HOOK	17
OPERATION LEVER & STAND	19
PIPING; OPERATION LEVER	25
PIPING; OPERATION LEVER (ISO-H pattern) (add-on type) 1	27
PIPING; OPERATION LEVER (ISO-H pattern) (add-on type) 2	29

**ENGINE & ELECTRICAL SYSTEM**

ENGINE & ACCESSORIES (1/4) 1	33
ENGINE & ACCESSORIES (1/4) 2	37
ENGINE & ACCESSORIES (1/4) 3	41
ENGINE & ACCESSORIES (1/4) (with CCV heater) 1	45
ENGINE & ACCESSORIES (1/4) (with CCV heater) 2	47
ENGINE & ACCESSORIES (1/4) (with CCV heater) 3	51
ENGINE & ACCESSORIES (2/4)	55
ENGINE & ACCESSORIES (3/4)	57
ENGINE & ACCESSORIES (4/4)	59
DRAIN PLUG	61
CONTROL BOX; R.H.	63
CONTROL BOX; R.H. (with CCV heater)	67
CONTROL BOX; L.H.	71
CONTROL BOX; L.H. (hydraulic quick hitch type)	73
ENGINE CONTROL	75
FOOT ACCELERATOR	77
ELECTRICAL (1/2) (201000002-201001716) 1	79
ELECTRICAL (1/2) (201000002-201001716) 2	83
ELECTRICAL (1/2) (201000002-201001716) 3	87
ELECTRICAL (1/2) (201000002-201001716) 4	91
ELECTRICAL (1/2) (201000002-201001716) 5	93
ELECTRICAL (1/2) (201001717-) 1	95
ELECTRICAL (1/2) (201001717-) 2	99
ELECTRICAL (1/2) (201001717-) 3	101
ELECTRICAL (2/2) (201000002-201001716)	103
ELECTRICAL (2/2) (201001717-)	105
ELECTRICAL (CAB)	107
ELECTRICAL (CANOPY)	109
BATTERY	111
REAR LAMP	113
MAINTENANCE LIGHT SOCKET	115
WINDOW WASHER	117
RADIO	119

**HYDRAULIC PIPING & TANK**

VALVE & ACCESSORIES (1/3)	121
VALVE & ACCESSORIES (1/3) (high flow) 1	125
VALVE & ACCESSORIES (1/3) (high flow) 2	129
VALVE & ACCESSORIES (2/3)	133
VALVE & ACCESSORIES (3/3)	135

PIPING 1	137
PIPING 2	141
PIPING (high flow) 1	145
PIPING (high flow) 2	149
RIDE CONTROL	153
PUMP DRIVE	155
GEAR PUMP DRIVE (HIGH FLOW)	159
HYDRAULIC TANK	161
FUEL TANK & FUEL PIPING (1/2) 1	165
FUEL TANK & FUEL PIPING (1/2) 2	167
FUEL TANK & FUEL PIPING (2/2)	171
<b>COVER &amp; CAB</b>	
COVER (1/3)	173
COVER (2/3) (rear door)	177
COVER (3/3) (engine hood)	179
FLOOR FRAME	181
SEAT (1/2)	185
SEAT (2/2)	187
SEAT (1/2) (with air suspension)	189
SEAT BELT (THREE POINT SEAT BELT)	191
SEAT SWITCH	193
SAFETY BAR	195
CANOPY MOUNT	197
CANOPY 1	201
CANOPY 2	205
CANOPY 3	207
CAB MOUNT	209
CAB (1/2) 1	213
CAB (1/2) 2	215
CAB (1/2) 3	219
CAB (1/2) 4	223
CAB (1/2) 5	225
CAB (2/2) (front door)	227
CAB FRONT DOOR POLYCARBONATE TYPE (2/2) (2/2)	229
CAB KIT (1/2) 1	231
CAB KIT (1/2) 2	233
CAB KIT (1/2) 3	235
CAB KIT (1/2) 4	237
CAB KIT (2/2) (front door)	239
DOOR KIT (1/2) POLYCARBONATE TYPE	241
DOOR KIT (2/2) POLYCARBONATE TYPE	243
REAR MIRROR	245
AIR CONDITIONER (1/5) (compressor)	247
AIR CONDITIONER (2/5) (condenser)	251
AIR CONDITIONER (3/5) (air conditioner unit)	255
AIR CONDITIONER (4/5)	257
AIR CONDITIONER (5/5)	259
<b>ATTACHMENT</b>	
ARM	261
QUICK HITCH	265
QUICK HITCH (hydraulic type) 1	267
QUICK HITCH (hydraulic type) 2	271
QUICK HITCH (hydraulic type, with 3/4 coupler) 1	273
QUICK HITCH (hydraulic type, with 3/4 coupler) 2	277
PIPING; ARM 1	279
PIPING; ARM 2	283
PIPING; ARM (with coupler) 1	287
PIPING; ARM (with coupler) 2	289

PIPING; ARM (high flow) 1	293
PIPING; ARM (high flow) 2	297
PIPING; ARM (high flow, with 3/4 coupler) 1	299
PIPING; ARM (high flow, with 3/4 coupler) 2	303
PIPING; ARM (high flow, with coupler, hydraulic quick hitch type) 1	307
PIPING; ARM (high flow, with coupler, hydraulic quick hitch type) 2	311
2ND AUXILIARY LINE	315
2ND AUXILIARY LINE (except for main aux. type)	317

#### DECAL & TOOL

DECAL (canopy) 1	319
DECAL (canopy) 2	325
DECAL (canopy) 3	331
DECAL (cab) 1	337
DECAL (cab) 2	343
DECAL (cab) 3	349
DECAL (high flow)	355
TOOL & ACCESSORIES	357
PAINTED COLOR	359

#### HYDRAULIC DEVICE

SERVICE TOOL	361
CONTROL VALVE	363
CONTROL VALVE (HIGH FLOW)	367
BLOCK ASSY NO. 1	369
BLOCK ASSY NO. 2	371
BLOCK ASSY NO. 3	373
RH PILOT VALVE	375
LH PILOT VALVE	377
HANDLE (WITH SLIDE SWITCH)	379
HANDLE (WITH 5 SWITCH)	381
SUB VALVE	383
SOLENOID VALVE; 1 BLOCK (201000002-201001488)	385
SOLENOID VALVE; 1 BLOCK (201001489-)	387
SOLENOID VALVE; 1 BLOCK	389
SOLENOID VALVE; 1 BLOCK	391
ELECTRICAL PROPORTION VALVE	393
SELECTOR VALVE (ISO-H PATTERN)	395
SHUTTLE VALVE (ISO-H PATTERN)	397
LIFT ARM CYLINDER	399
BUCKET CYLINDER	401
QUICK HITCH CYLINDER	403
TRAVEL MOTOR (1/3) (reduction sec.)	405
TRAVEL MOTOR (2/3) (motor sec.)	407
TRAVEL MOTOR (3/3) (valve sec. )	409
HYDRAULIC PUMP (1/5)	413
HYDRAULIC PUMP (2/5)	415
HYDRAULIC PUMP (3/5)	419
HYDRAULIC PUMP (4/5)	421
HYDRAULIC PUMP (5/5)	427
GEAR PUMP (2 blocks)	429
GEAR PUMP (high flow)	431

#### ENGINE V3800-CR-TE4B-TLTU1 (HIGH FLOW) EBC

##### CRANK CASE (HIGH FLOW)

CRANK CASE (HIGH FLOW)	433
------------------------	-----

##### OIL PAN

OIL PAN	435
---------	-----

<b>DIPSTICK AND GUIDE</b>	
DIPSTICK AND GUIDE .....	437
<b>CYLINDER HEAD</b>	
CYLINDER HEAD .....	439
<b>INLET VALVE AND EXHAUST VALVE</b>	
INLET VALVE AND EXHAUST VALVE .....	441
<b>ROCKER ARM SHAFT</b>	
ROCKER ARM SHAFT .....	443
<b>HEAD COVER</b>	
HEAD COVER .....	445
<b>GEAR CASE</b>	
GEAR CASE .....	447
<b>PISTON AND CRANKSHAFT</b>	
PISTON AND CRANKSHAFT .....	449
<b>CAMSHAFT AND IDLE GEAR SHAFT</b>	
CAMSHAFT AND IDLE GEAR SHAFT .....	451
<b>BEARING CASE COVER</b>	
BEARING CASE COVER .....	453
<b>FLYWHEEL</b>	
FLYWHEEL .....	455
<b>SUPPLY PUMP</b>	
SUPPLY PUMP .....	457
<b>FUEL FILTER</b>	
FUEL FILTER .....	459
<b>FUEL FILTER</b>	
FUEL FILTER .....	461
<b>FUEL PIPE</b>	
FUEL PIPE .....	463
<b>SEPERATOR</b>	
SEPERATOR .....	465
<b>INJECTION PIPE</b>	
INJECTION PIPE .....	467
<b>COMMON RAIL</b>	
COMMON RAIL .....	469
<b>ALTERNATOR AND PULLEY</b>	
ALTERNATOR AND PULLEY .....	471
<b>ALTERNATOR (COMPONENT PARTS)</b>	
ALTERNATOR (COMPONENT PARTS) .....	473
<b>STARTER</b>	
STARTER .....	475

<b>STARTER (COMPONENT PARTS)</b>	
STARTER (COMPONENT PARTS) .....	477
<b>SWITCH/SENSOR</b>	
SWITCH/SENSOR .....	479
<b>INJECTOR HARNESS</b>	
INJECTOR HARNESS .....	481
<b>WATER FLANGE AND THERMOSTAT</b>	
WATER FLANGE AND THERMOSTAT .....	483
<b>WATER PUMP</b>	
WATER PUMP .....	485
<b>RESERVE TANK</b>	
RESERVE TANK .....	487
<b>FAN AND PULLEY</b>	
FAN AND PULLEY .....	489
<b>INLET MANIFOLD</b>	
<b>AIR CLEANER FLANGE AND THROTTLE VALVE</b>	
AIR CLEANER FLANGE AND THROTTLE VALVE .....	491
<b>INLET PIPE (AIR CLEANER)</b>	
INLET PIPE (AIR CLEANER) .....	493
<b>EXHAUST MANIFOLD</b>	
EXHAUST MANIFOLD .....	495
<b>EGR VALVE</b>	
EGR VALVE .....	497
<b>EGR COOLER</b>	
EGR COOLER .....	499
<b>TURBO CHARGER</b>	
TURBO CHARGER .....	501
<b>DIESEL PARTICULATE FILTER MUFFLER</b>	
DIESEL PARTICULATE FILTER MUFFLER .....	503
<b>DPF MUFFLER COMPONENT PARTS</b>	
DPF MUFFLER COMPONENT PARTS .....	505
<b>DPF RECONDITIONED PROGRAM</b>	
DPF Reconditioned Core Exchange Program .....	507
<b>DPF CLEANING PROGRAM</b>	
DPF CLEANING PROGRAM .....	509
<b>DPF MUFFLER SENSOR</b>	
DPF MUFFLER SENSOR .....	512
<b>DIFFERENTIAL PRESSURE PIPE</b>	
DIFFERENTIAL PRESSURE PIPE .....	515


<b>BREATHER PIPE/SEPARATOR PIPE</b>	
BREATHER PIPE/SEPARATOR PIPE .....	517
<b>BREATHER PIPE/SEPARATOR PIPE (FOR CCV HEATER)</b>	
BREATHER PIPE/SEPARATOR PIPE (FOR CCV HEATER) .....	519
<b>OIL SEPERATOR</b>	
OIL SEPARATOR .....	521
<b>OIL SEPARATOR (FOR CCV HEATER)</b>	
OIL SEPARATOR (FOR CCV HEATER) .....	523
<b>PIL PIPE (TURBO CHARGER)</b>	
OIL PIPE(TURBO CHARGER) .....	525
<b>OIL COOLER</b>	
OIL COOLER .....	527
<b>OIL FILTER</b>	
OIL FILTER .....	529
<b>HYDRAULIC PUMP</b>	
HYDRAULIC PUMP .....	531
<b>ECU</b>	
ECU .....	533
<b>ACCESSORIES AND SERVICE PARTS (1/2)</b>	
ACCESSORIES AND SERVICE PARTS .....	535
<b>ACCESSORIES AND SERVICE PARTS (2/2)</b>	
ACCESSORIES AND SERVICE PARTS .....	537
<b>LABEL AND OPERATOR'S MANUAL</b>	
LABEL AND OPERATOR'S MANUAL .....	539
<b>PISTON KIT (OPTION)</b>	
PISTON KIT [OPTION] .....	541
<b>DIAGMASTER (OPTION)</b>	
DIAGMASTER [OPTION] .....	543
<b>ENGINE V3800-CR-TE4B-TLTU2 EAC</b>	
<b>0-1</b>	
0-1 .....	545
<b>CRANK CASE (HIGH FLOW)</b>	
CRANK CASE (HIGH FLOW) .....	547
<b>OIL PAN</b>	
OIL PAN .....	549
<b>DIPSTICK AND GUIDE</b>	
DIPSTICK AND GUIDE .....	551
<b>CYLINDER HEAD</b>	
CYLINDER HEAD .....	553

<b>INLET VALVE AND EXHAUST VALVE</b>	
INLET VALVE AND EXHAUST VALVE .....	555
<b>ROCKER ARM SHAFT</b>	
ROCKER ARM SHAFT .....	557
<b>HEAD COVER</b>	
HEAD COVER .....	559
<b>GEAR CASE</b>	
GEAR CASE .....	561
<b>PISTON AND CRANKSHAFT</b>	
PISTON AND CRANKSHAFT .....	563
<b>CAMSHAFT AND IDLE GEAR SHAFT</b>	
CAMSHAFT AND IDLE GEAR SHAFT .....	565
<b>BEARING CASE COVER</b>	
BEARING CASE COVER .....	567
<b>FLYWHEEL</b>	
FLYWHEEL .....	569
<b>SUPPLY PUMP</b>	
SUPPLY PUMP .....	571
<b>FUEL FILTER</b>	
FUEL FILTER .....	573
<b>FUEL FILTER</b>	
FUEL FILTER .....	575
<b>FUEL PIPE</b>	
FUEL PIPE .....	577
<b>SEPERATOR</b>	
SEPERATOR .....	579
<b>INJECTION PIPE</b>	
INJECTION PIPE .....	581
<b>COMMON RAIL</b>	
COMMON RAIL .....	583
<b>ALTERNATOR AND PULLEY</b>	
ALTERNATOR AND PULLEY .....	585
<b>ALTERNATOR (COMPONENT PARTS)</b>	
ALTERNATOR (COMPONENT PARTS) .....	587
<b>STARTER</b>	
STARTER .....	589
<b>STARTER (COMPONENT PARTS)</b>	
STARTER (COMPONENT PARTS) .....	591
<b>SWITCH/SENSOR</b>	
SWITCH/SENSOR .....	593

<b>INJECTOR HARNESS</b>	
INJECTOR HARNESS .....	595
<b>WATER FLANGE AND THERMOSTAT</b>	
WATER FLANGE AND THERMOSTAT .....	597
<b>WATER PUMP</b>	
WATER PUMP .....	599
<b>RESERVE TANK</b>	
RESERVE TANK .....	601
<b>FAN AND PULLEY</b>	
FAN AND PULLEY .....	603
<b>INLAID MANIFOLD</b>	
INLAID MANIFOLD .....	605
<b>AIR CLEANER FLANGE AND THROTTLE VALVE</b>	
AIR CLEANER FLANGE AND THROTTLE VALVE .....	607
<b>INLET PIPE (AIR CLEANER)</b>	
INLET PIPE (AIR CLEANER) .....	609
<b>EXHAUST MANIFOLD</b>	
EXHAUST MANIFOLD .....	611
<b>EGR VALVE</b>	
EGR VALVE .....	613
<b>EGR COOLER</b>	
EGR COOLER .....	615
<b>TURBO CHARGER</b>	
TURBO CHARGER .....	617
<b>DIESEL PARTICULATE FILTER MUFFLER</b>	
DIESEL PARTICULATE FILTER MUFFLER .....	619
<b>DPF MUFFLER COMPONENT PARTS</b>	
DPF MUFFLER COMPONENT PARTS .....	621
<b>DPF RECONDITIONED PROGRAM</b>	
DPF RECONDITIONED PROGRAM .....	623
<b>DPF CLEANING PROGRAM</b>	
DPF CLEANING PROGRAM .....	626
<b>DPF MUFFLER SENSOR</b>	
DPF MUFFLER SENSOR .....	629
<b>DIFFERENTIAL PRESSURE PIPE</b>	
DIFFERENTIAL PRESSURE PIPE .....	631
<b>BREATHING PIPE/SEPARATOR PIPE</b>	
BREATHING PIPE/SEPARATOR PIPE .....	633
<b>BREATHING PIPE/SEPARATOR PIPE (FOR CCV HEATER)</b>	
BREATHING PIPE/SEPARATOR PIPE (FOR CCV HEATER) .....	635


<b>OIL SEPERATOR</b>	
OIL SEPARATOR .....	637
<b>OIL SEPARATOR (FOR CVW HEATER)</b>	
OIL SEPARATOR (FOR CCV HEATER) .....	639
<b>OIL PIPE (TURBO CHARGER)</b>	
OIL PIPE(TURBO CHARGER) .....	641
<b>OIL COOLER</b>	
OIL COOLER .....	643
<b>OIL FILTER</b>	
OIL FILTER .....	645
<b>ECU</b>	
ECU .....	647
<b>ACCESSORIES AND SERVICE PARTS (1/2)</b>	
ACCESSORIES AND SERVICE PARTS .....	649
<b>ACCESSORIES AND SERVICE PARTS (2/2)</b>	
ACCESSORIES AND SERVICE PARTS .....	651
<b>LABEL AND OPERATOR'S MANUAL</b>	
LABEL AND OPERATOR'S MANUAL .....	653
<b>PISTON KIT (OPTION)</b>	
PISTON KIT [OPTION] .....	655
<b>DIAGMASTER (OPTION)</b>	
DIAGMASTER [OPTION] .....	657
<b>KITS, ATTACHEMENTS &amp; QUICK REFERENCE</b>	
BUCKETS .....	659
Appendix B:Parts Index .....	661
Appendix A:Pages Index .....	683

# UNDERCARRIAGE TRACK ROLLER A

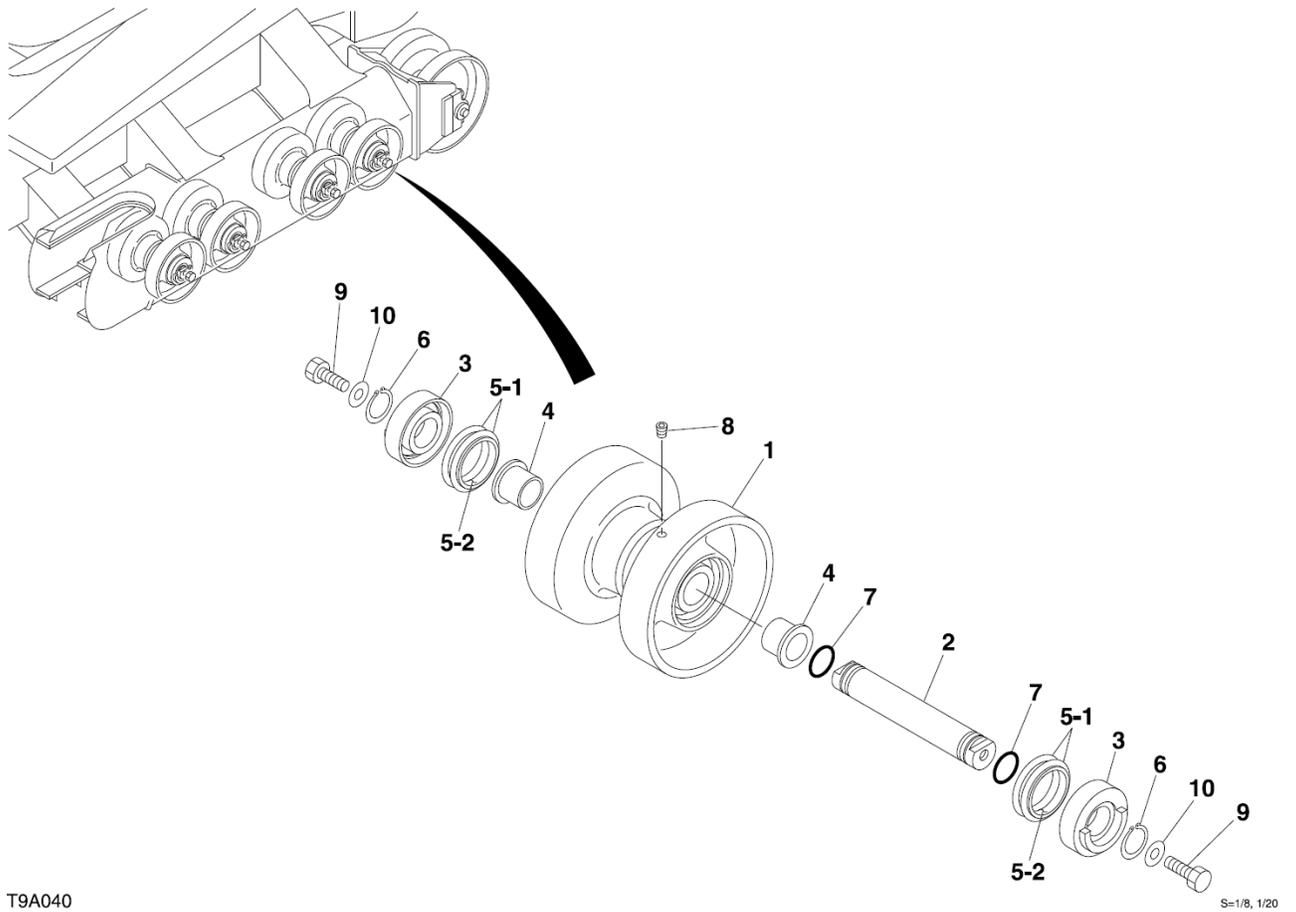

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
Not Shown	PNNA	ROLLER ASSY, track		EA		
0-1	AU0881130500	ROLLER ASSY TRACK TL140-150-240-250 AFTERMARKET	8	EA		
0-1	0881130500	ROLLER ASSY TRACK TL140-150-240-250	8	EA		
1	0881130500	ROLLER ASSY TRACK TL140-150-240-250	1	EA		
2	0881130520	SHAFT	1	EA		
3	0881130530	COVER	2	EA		
4	1333064039	BUSHING	2	EA		
5	1432500640	SEAL, FLOATING 2 PIECES EQUALS 1 SEAL	2	EA		
5-1	*****	O-RING	2	EA	NOT SERVICE	
5-2	*****	RING, seal	2	EA	NOT SERVICE	
6	1220000040	RING, snap	2	EA		
7	1420100350	O-RING	2	EA		
8	1501820001	PLUG	1	EA		
9	1100051645	BOLT 10TM16 X 45 P/2.0	16	EA		
10	1141550016	WASHER HEAT M16	16	EA		

# UNDERCARRIAGE TRACK ROLLER B

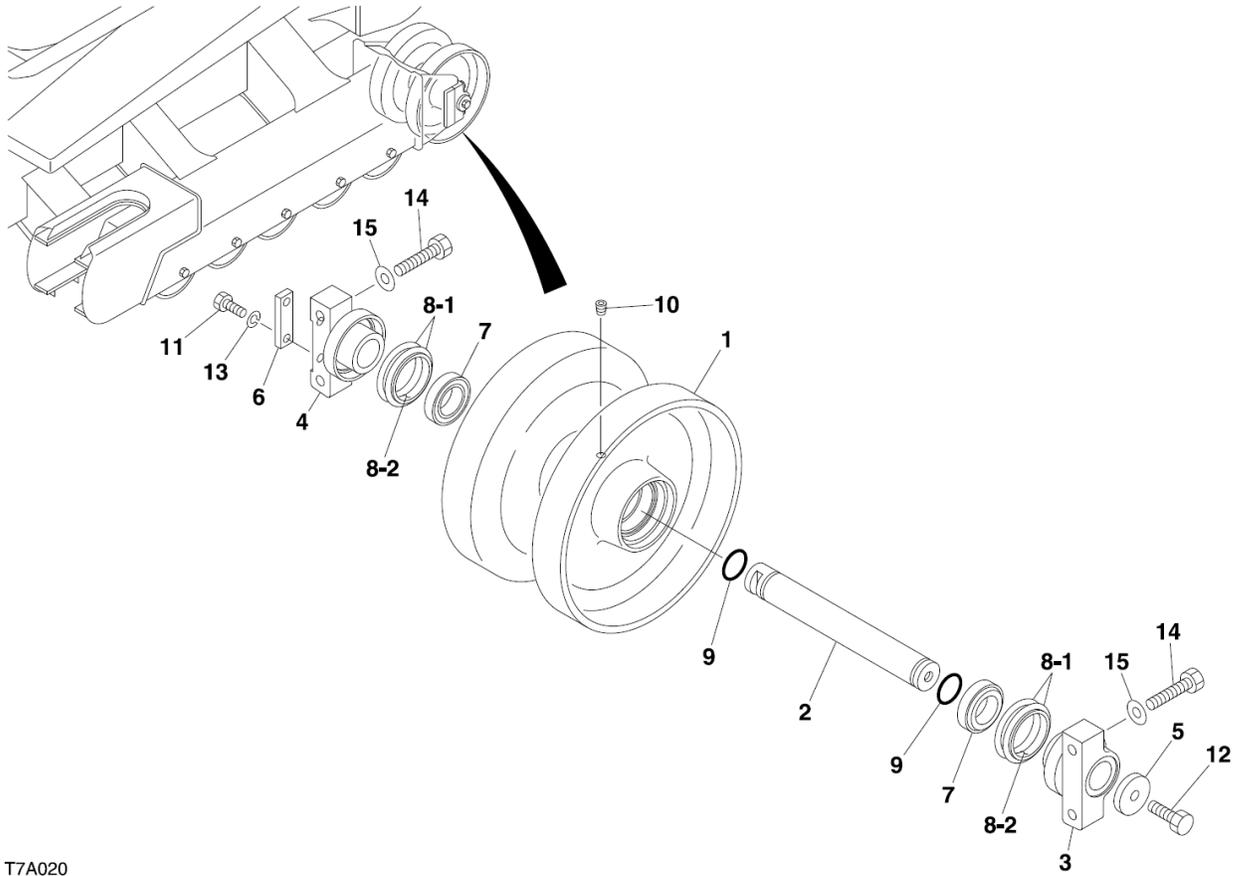


T7A020

S=1/8, 1/20

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
0	PNNA	ROLLER ASSY, track		EA		
0-1	AU0881131300	ROLLER REAR TL140-150-240-250 AFTERMARKET	2	EA		
0-1	0881131300	ROLLER TRACK REAR TL140-150-240-250	2	EA		
1	0881131300	ROLLER TRACK REAR TL140-150-240-250	1	EA		
2	0881131320	SHAFT	1	EA		
3	0881131330	COVER	1	EA		
4	0881131340	COVER	1	EA		
5	0881131350	PLATE	1	EA		
6	0881131360	PLATE	1	EA		
7	1305000004	BEARING	2	EA		
8	1432500640	SEAL, FLOATING 2 PIECES EQUALS 1 SEAL	2	EA		
8-1	XXXXXX	O-RING	2	EA	NOT SERVICE	
8-2	XXXXXX	RING, seal	2	EA	NOT SERVICE	
9	1420100350	O-RING	2	EA		
10	1501820001	PLUG	1	EA		
11	1100051030	BOLT	2	EA		
12	1106241440	BOLT	1	EA		
13	1140020010	WASHER, SPRING	2	EA		
14	1100041460	BOLT	8	EA		
15	1141550014	WASHER	8	EA		

# UNDERCARRIAGE FRONT IDLER

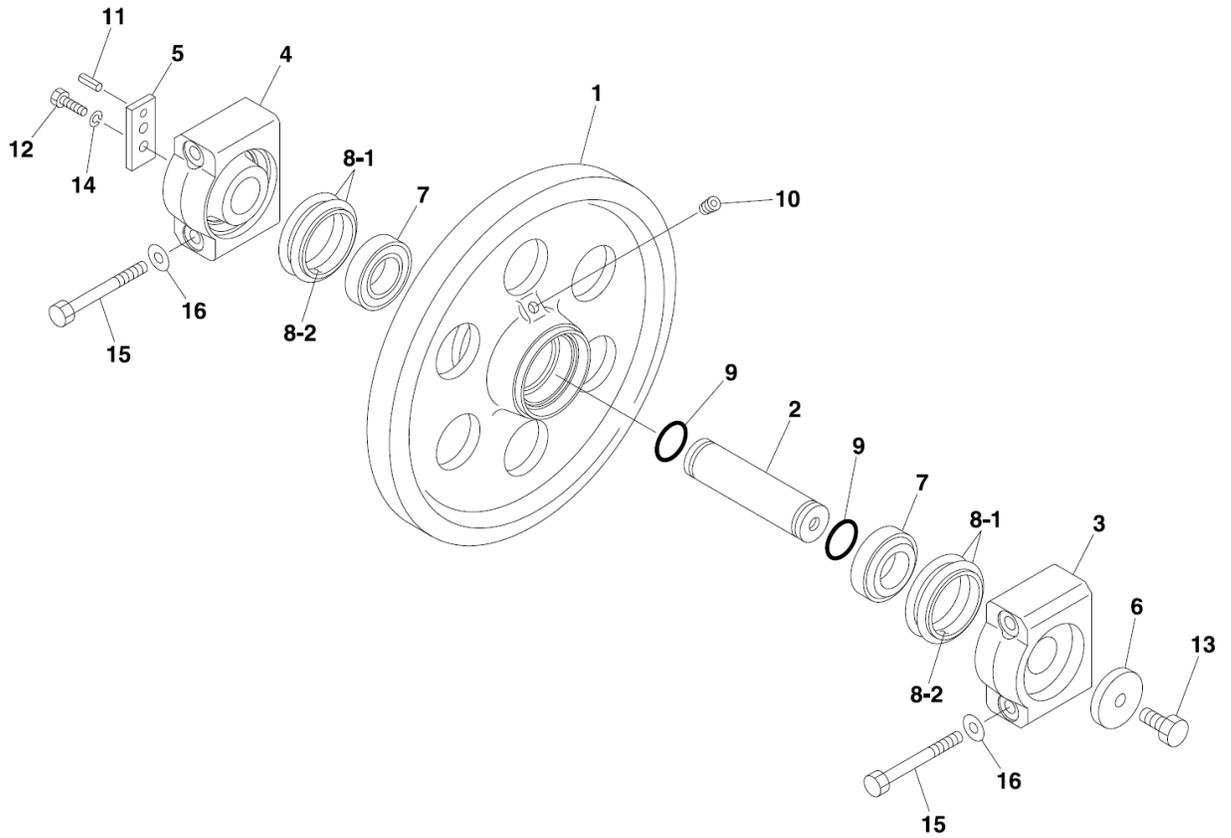


T7A030

S=1/7

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
0	PNNA	IDLER ASSY, front		EA		
0-1	AU0881140300	IDLER FRONT TL140-150-240-250 AFTERMARKET	2	EA		
0-1	0881140300	IDLER FRONT TL140-150-240-250	2	EA		
1	0881140310	IDLER	1	EA		
2	0881140320	SHAFT	1	EA		
3	0881140330	COVER	1	EA		
4	0881140340	COVER	1	EA		
5	0881140350	PLATE	1	EA		
6	0881140360	PLATE	1	EA		
7	1305000005	BEARING	2	EA		
8	1432500800	SEAL, FLOATING 2 PIECES = 1 PART	2	EA		
8-1	XXXXXX	O-RING	2	EA	NOT SERVICE	
8-2	XXXXXX	RING, seal	2	EA	NOT SERVICE	
9	1420110400	O-RING 40/45 T/3.1 (+0.1)	2	EA		
10	1501820001	PLUG	1	EA		
11	1213001026	SPRING PIN	1	EA		
12	1100051030	BOLT	2	EA		
13	1106041635	BOLT	1	EA		
14	1140020010	WASHER, SPRING	2	EA		
15	1101141420	BOLT	8	EA		
16	1141550014	WASHER	8	EA		


# UNDERCARRIAGE TRACK ADJUSTER

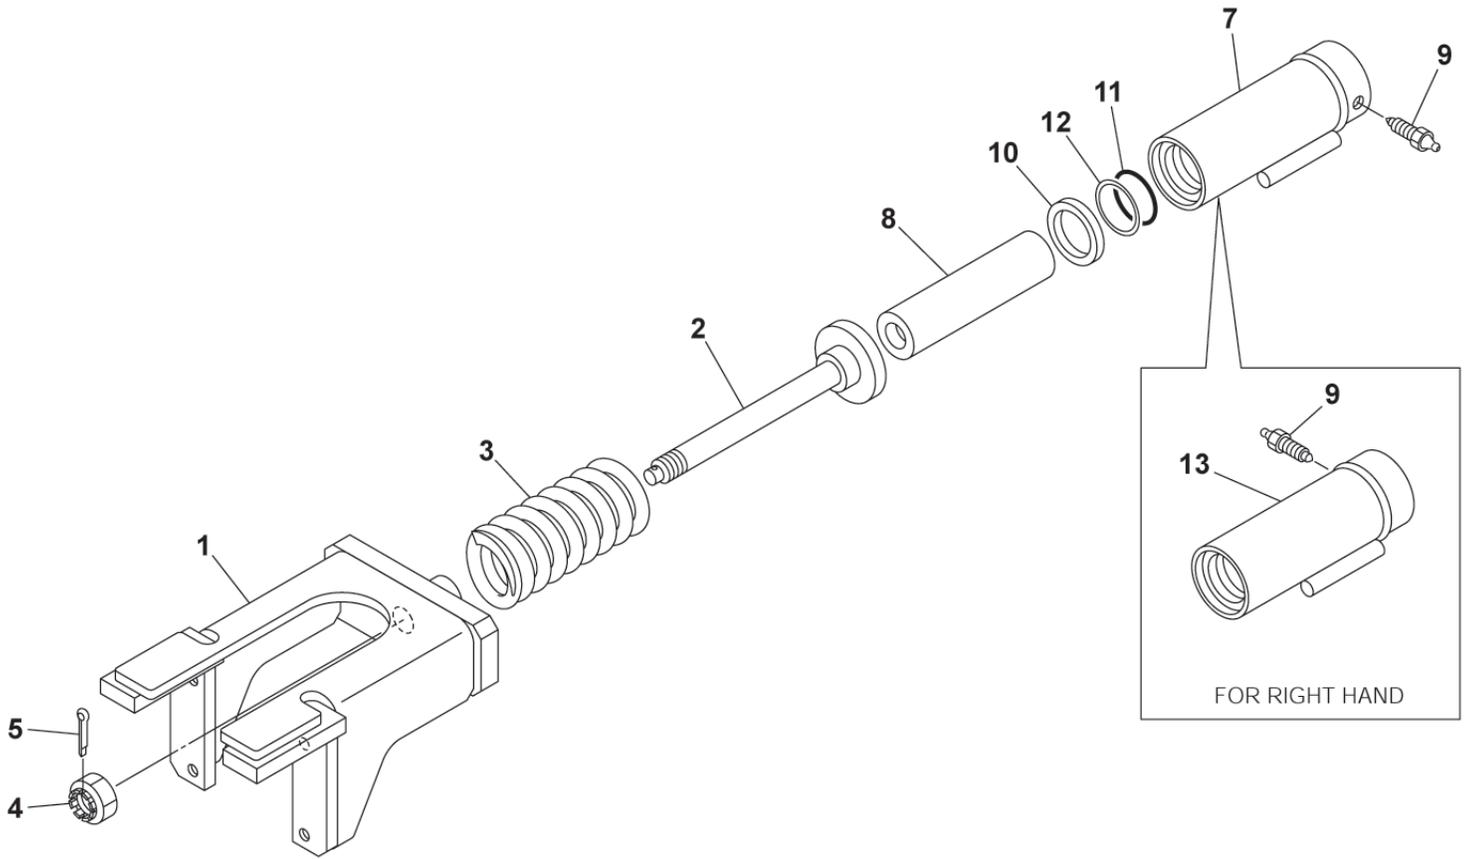

T9A010

S=1/8

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
0	0882150000	SPRING ASSY (LH)	1	EA		
0	0882150100	SPRING ASSY (RH)	1	EA		
1	0882150210	YOKE	1	EA		
2	0881151200	ROD	1	EA		
3	0007000002	SPRING	1	EA		
4	1132530027	NUT	1	EA		
5	1210000545	PIN, split	1	EA		
0-1	0881152400	LH GREASE ASSY TL	1	EA		
0-1	0881152600	RH GREASE ASSY TL	1	EA		
7	0881152100	CYLINDER, grease (L.H.)	1	EA		
8	0881152200	PISTON	1	EA		
9	1541300501	VALVE ASSY.	1	EA		
10	1400403203	SEAL, oil	1	EA		
11	1422010600	O-RING	1	EA		
12	1421020600	RING, back-up	1	EA		
13	0881152300	CYLINDER, grease (R.H.)	1	EA		

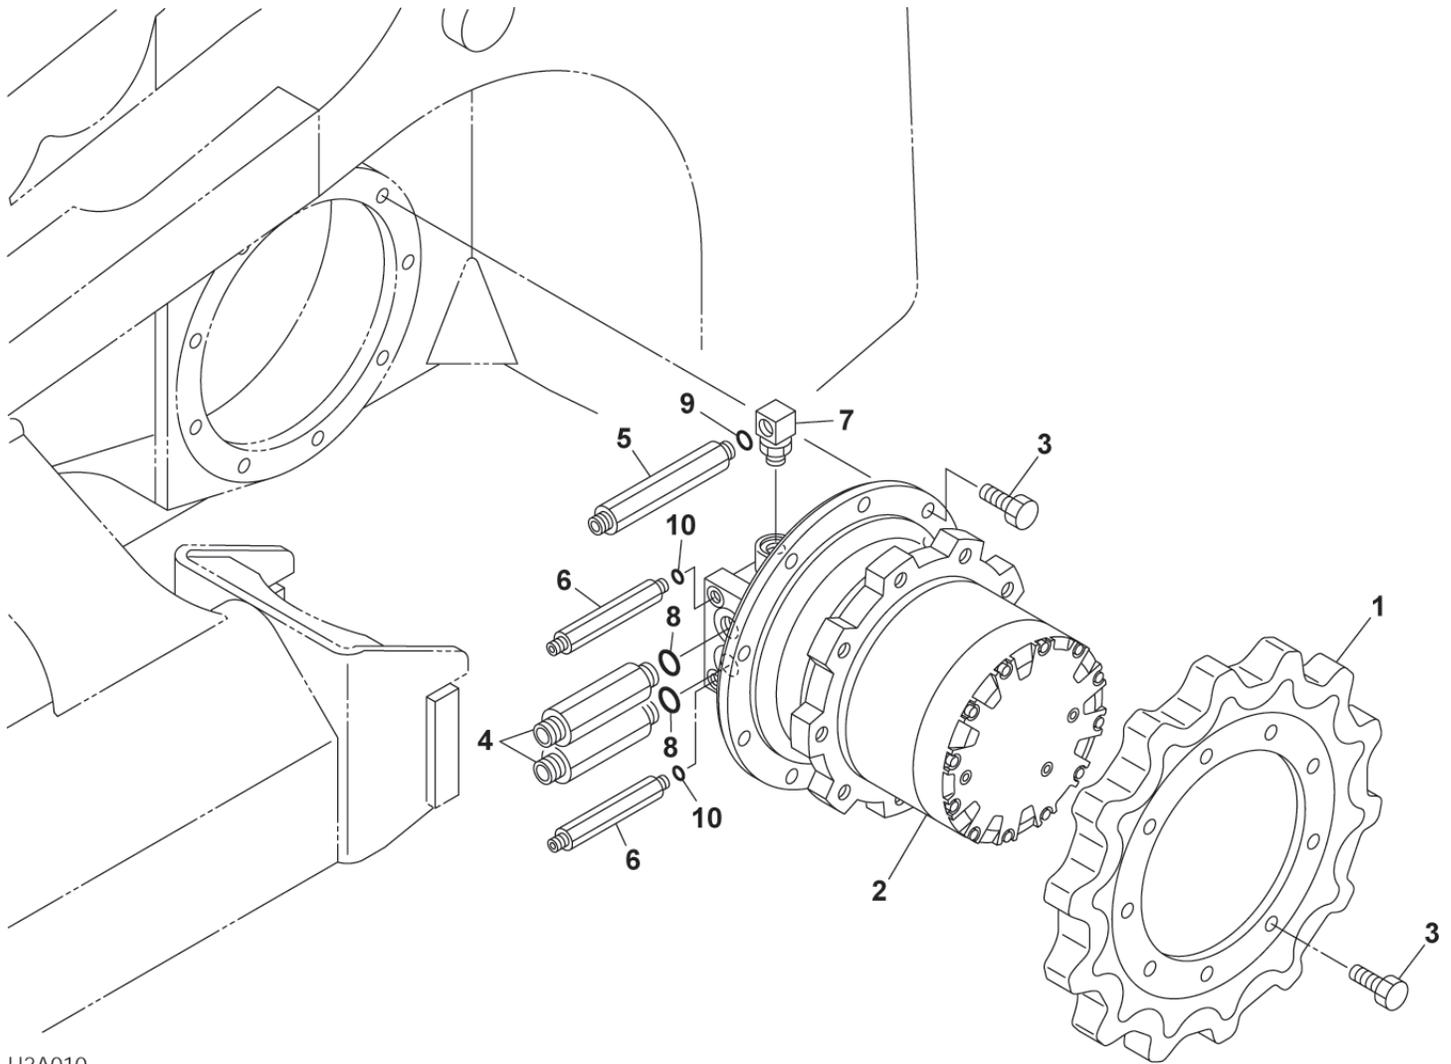


U2A010

S=1/8

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
0	PNNA	MOTOR ASSY, travel		EA		
1	0881160110	SPROCKET TL140 21402001- UP TL150-240-250	2	EA		
1	AU0881160110	SPROCKET TL140 2142001- UP TL150-240-250 AFT MRKT	2	EA		
2	1903126500	MOTOR ASSY, travel	2	EA		
3	1100051635	HEX BOLT 16X35	36	EA		
4	0882160210	ADAPTOR	4	EA		
5	0007203081	ADAPTOR	2	EA		
6	0007203069	ADAPTOR	4	EA		
7	1513300020	ELBOW	2	EA		
Not Shown	1420010240	O-RING	1	EA		
8	1420010240	O-RING	4	EA		
9	1420010180	O-RING	2	EA		
10	1420010110	O-RING	4	EA		

**UNDERCARRIAGE** CRAWLER BELT

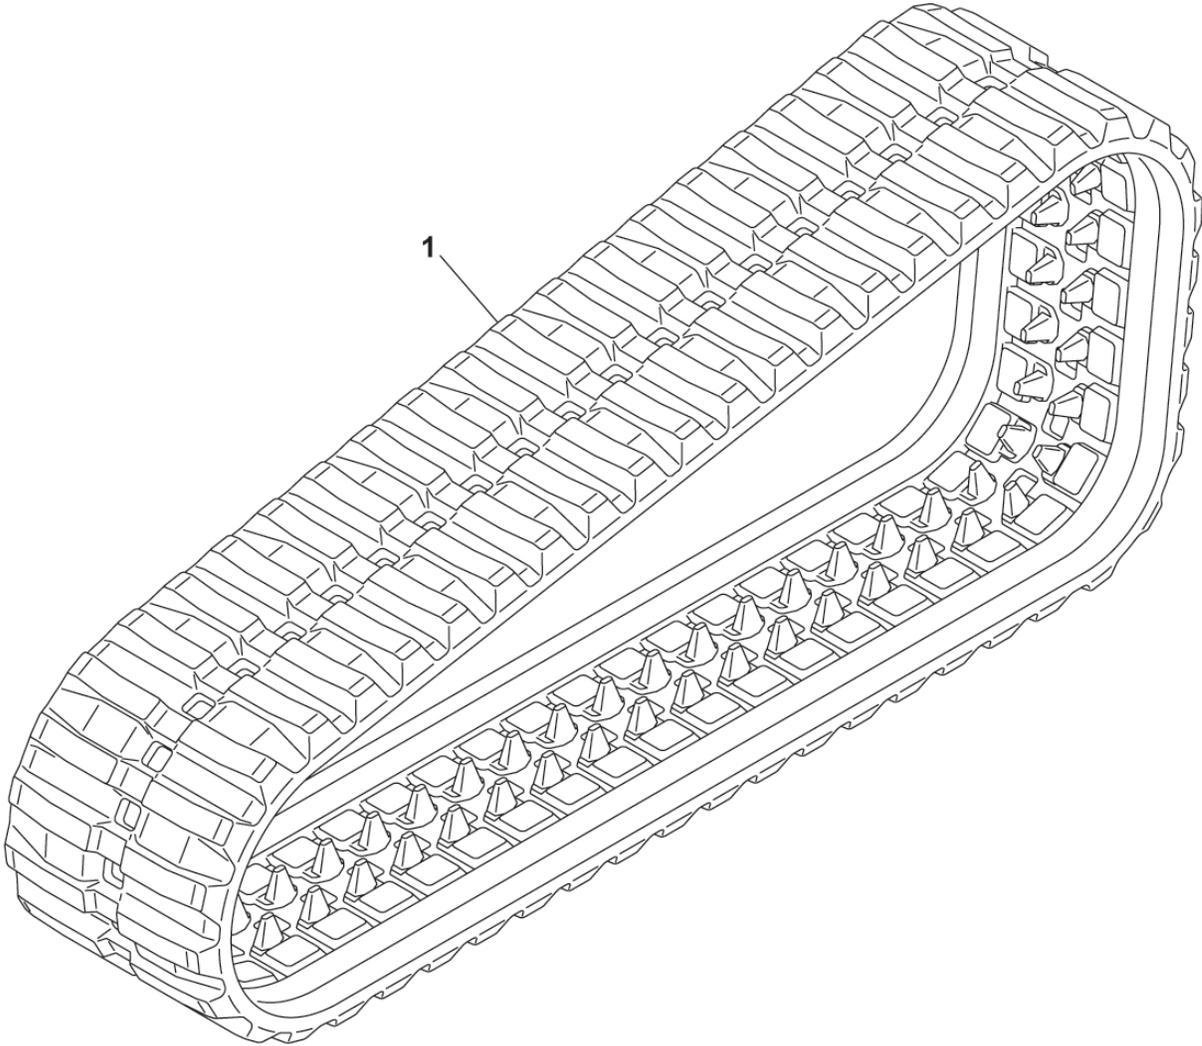


T7A060

S=1/12

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
1	1914099520	TRACK RUBBER TL140-TL240 FLAT BLOCK TREAD	2	EA		
Not Shown	1914099540	TRACK RUBBER TL140-TL240 AGGRESSIVE BAR	2	EA		
Not Shown	1914099610	TRACK RUBBER TL140-TL240 SNOW	2	EA		
Not Shown	ATTL140	TRACK RUBBER TL140/240 AFTERMARKET	2	EA		
Not Shown	ATTL140MB	TRACK RUBBER TL240 AFT MULTI-BAR	2	EA		
Not Shown	ATTL140SB	TRACK RUBBER TL240 AFT STRT BAR	2	EA		
Not Shown	ATTL140SW	TRACK RUBBER TL140/240 AFTERMARKET S-WAVE	2	EA		

# MAIN FRAME & CONTROL LEVER FRAME

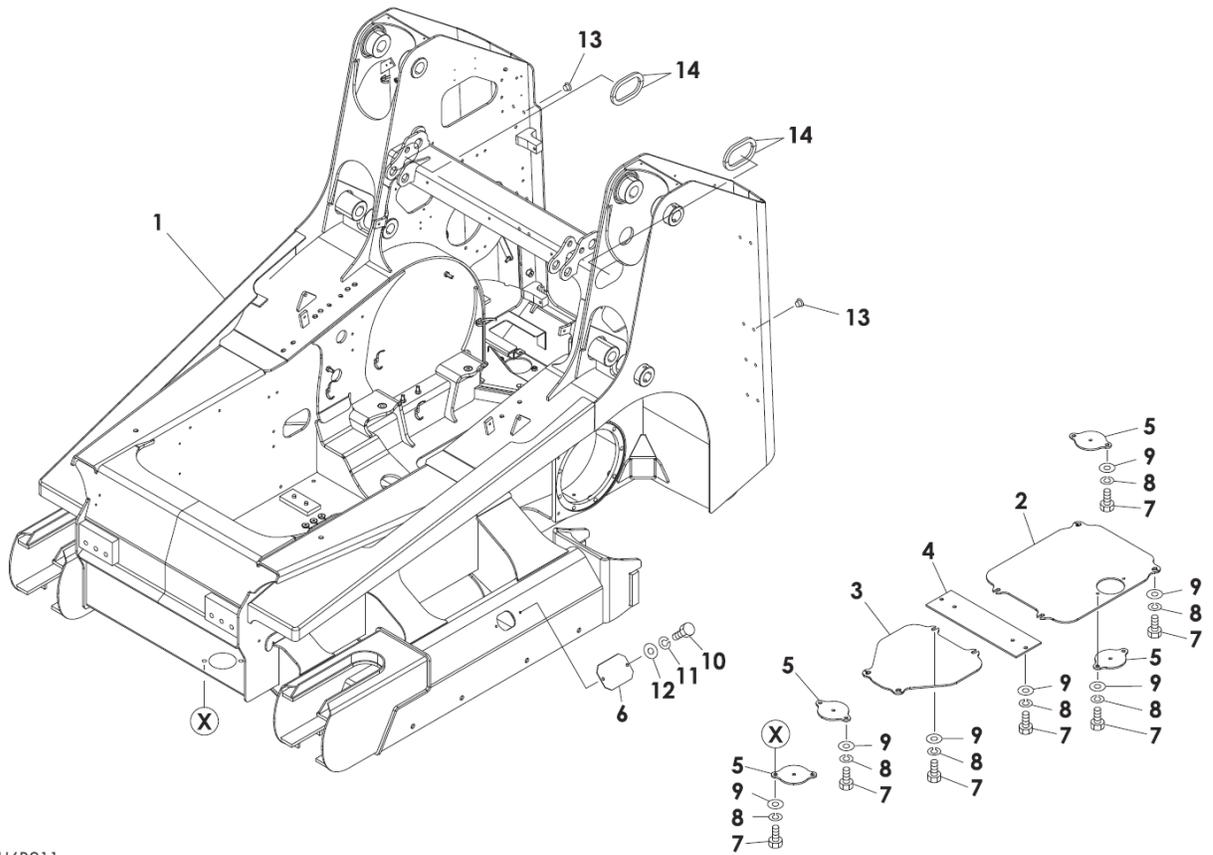


U6B011

S=1/23

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
0	PNNA	FRAME ASSY		EA		
1	*****	FRAME	1	EA		
2	0683011020	COVER	1	EA		
3	0882300020	COVER	1	EA		
4	0880305080	COVER	1	EA		
5	0881302095	COVER	4	EA		
6	0331018600	COVER	2	EA		
7	1100041025	BOLT	18	EA		
8	1140020010	WASHER, SPRING	18	EA		
9	1141110010	WASHER	16	EA		
10	1100090816	BOLT	4	EA		
11	1140020008	WASHER, SPRING	4	EA		
12	1141110008	WASHER	4	EA		
13	1652533021	CAP	16	EA		
14	1654629013	TRIM	1	EA	SOLD BY THE METER	

# MAIN FRAME & CONTROL LEVER ARM STOPPER

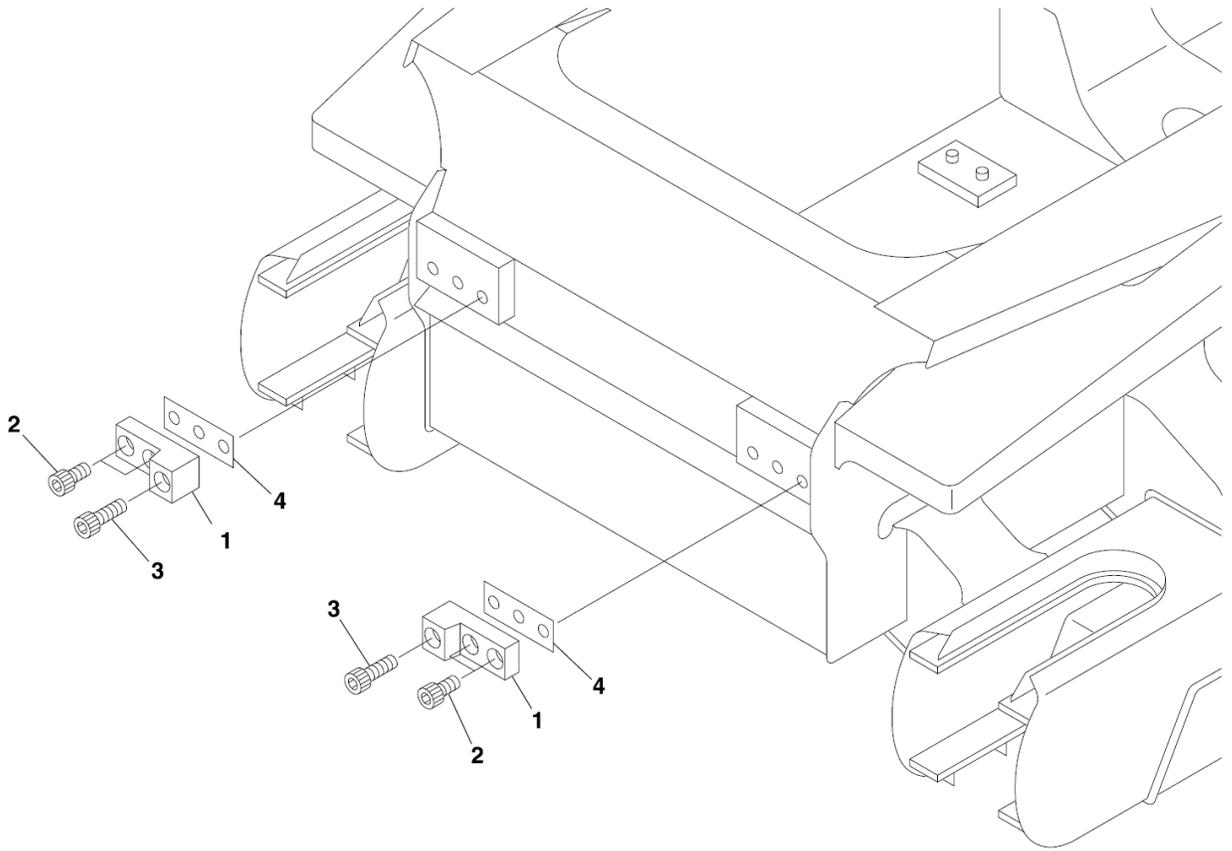


T9B020

S=1/9

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
0	PNNA	STOPPER ASSY, arm		EA		
1	0881602910	STOPPER, arm	2	EA		
2	1110042035	SCREW, cap	4	EA		
3	1110042060	SCREW, cap	2	EA		
4	0881602950	SHIM	AR	EA	t=0.5mm	
4	0881600950	SHIM	AR	EA	t=1.0mm	
4	0881602960	SHIM	AR	EA	t=3.2mm	

# MAIN FRAME & CONTROL LEVER HOOK

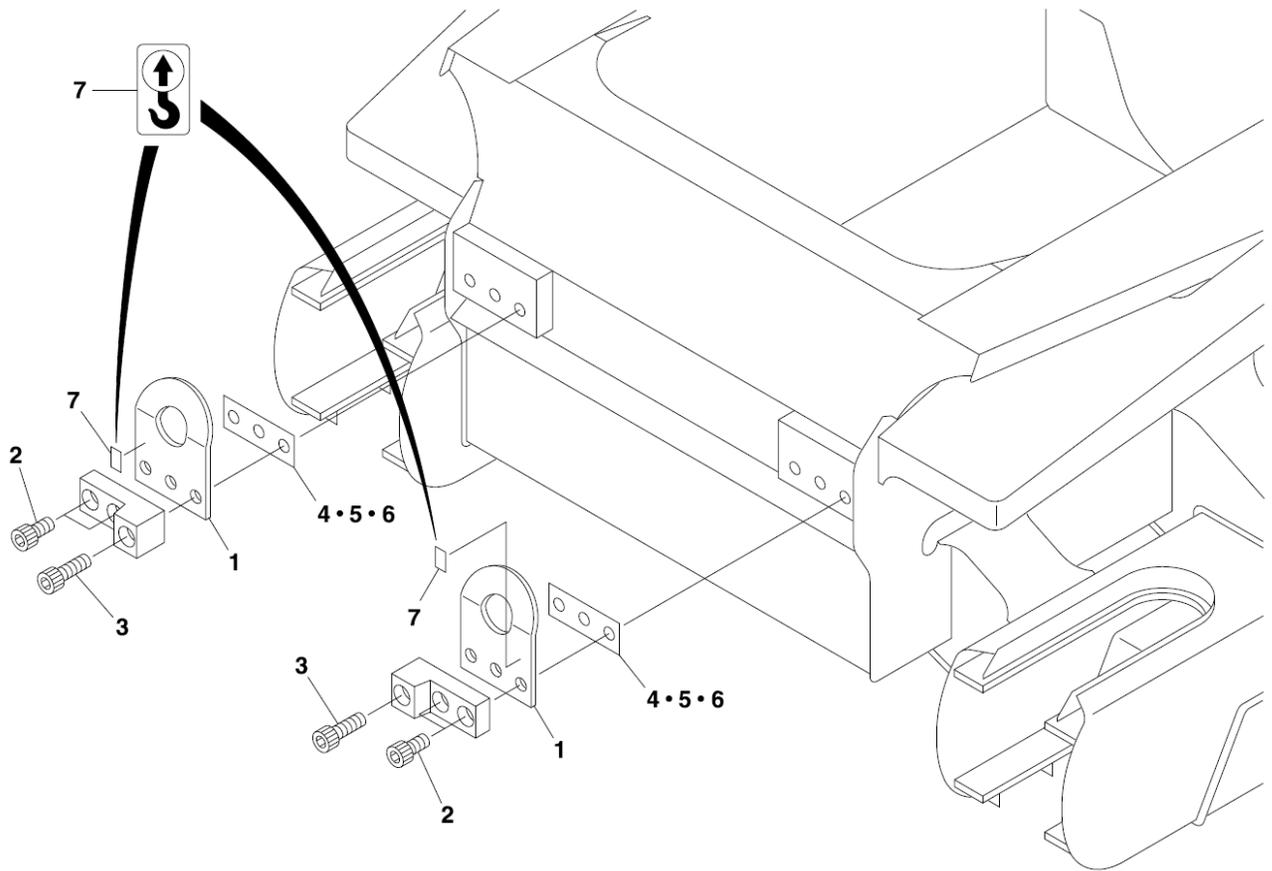


T9B051

S-1/9

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
0	PNNA	HOOK ASSY		EA		
1	0881304520	HOOK	2	EA		
2	1110042040	SCREW, cap	4	EA		
3	1110042070	SCREW, cap	2	EA		
4	0881602950	SHIM	AR	EA	t=0.5mm	
5	0881602950	SHIM	AR	EA	t=0.5mm	
6	0881602960	SHIM	AR	EA	T=3.2MM	
7	0399300500	DECAL	2	EA		

# MAIN FRAME & CONTROL LEVER OPERATION LEVER & STAND

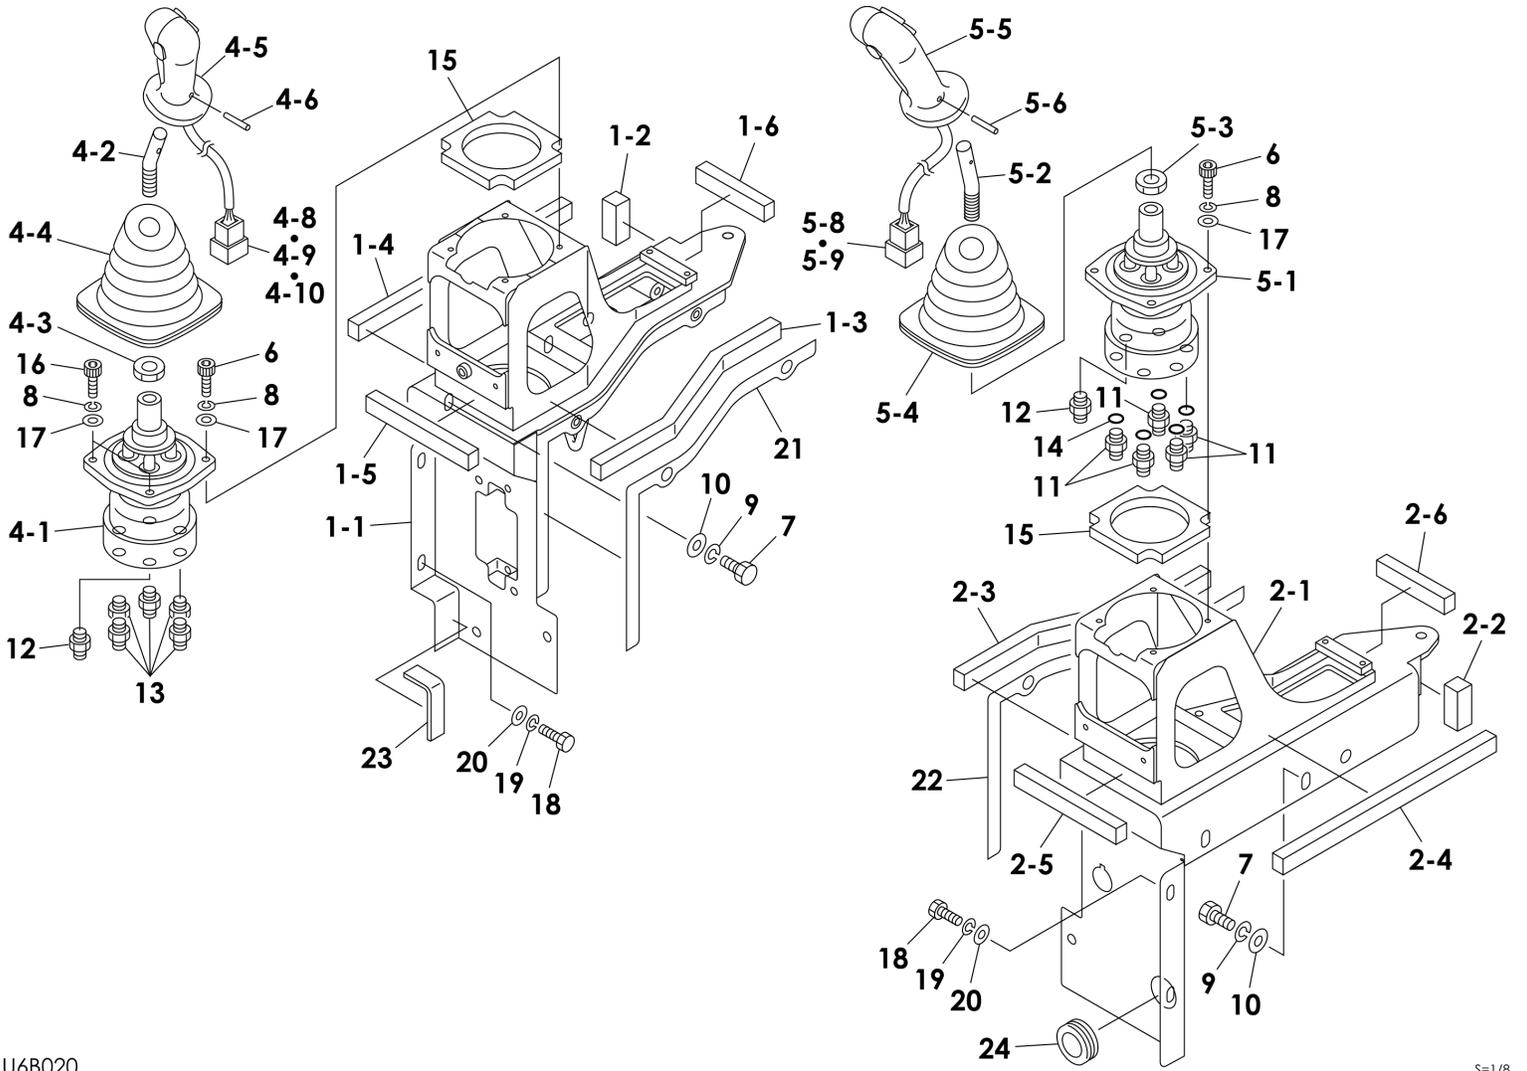

U6B020

S=1/8

Item	Part No.	Name	Qty	Uom	Remarks	Serial Number
Product: Takeuchi TL10 Skid Steer Loader Workshop Part Manual(Book No.BU62003-0-0)						
Full Download Manual: <a href="https://www.aresparts.com/downloads/takeuchi-tl10-skid-steer-loader-workshop-part-manual-book-no-bu62003-0-0/">https://www.aresparts.com/downloads/takeuchi-tl10-skid-steer-loader-workshop-part-manual-book-no-bu62003-0-0/</a>						
1	*****	BRACKET ASSY (R.H.)	1	EA		
1-1	0685102510	BRACKET (R.H.)	1	EA		
1-2	1654349005	SPONGE	1	EA	sold by the meter	
1-3	1654304032	SPONGE	1	EA	sold by the meter	
1-4	1654304031	SPONGE	1	EA	sold by the meter	
1-5	1654304015	SPONGE	1	EA	sold by the meter	
1-6	1654304010	SPONGE	1	EA	sold by the meter	
2	*****	BRACKET ASSY (L.H.) (for US)	1	EA		
2-1	0685102830	BRACKET (L.H.) (for US)	1	EA		
2-1	0685102610	BRACKET (L.H.) (for EU)	1	EA		
2-2	1654349005	SPONGE	1	EA	sold by the meter	
2-2	1654349005	SPONGE	1	EA	sold by the meter	
2-3	1654304032	SPONGE	1	EA	sold by the meter	
2-3	1654304032	SPONGE	1	EA	sold by the meter	
2-4	1654304031	SPONGE	1	EA	sold by the meter	
2-4	1654304031	SPONGE	1	EA	sold by the meter	
2-5	1654304015	SPONGE	1	EA	sold by the meter	
2-5	1654304015	SPONGE	1	EA	sold by the meter	
2-6	1654304010	SPONGE	1	EA	sold by the meter	
2-6	1654304010	SPONGE	1	EA	sold by the meter	
4	*****	VALVE ASSY (R.H.)	1	EA		
4-1	1901754000	VALVE, pilot (R.H.)	1	EA		
4-1	1901754000	VALVE, pilot (R.H.)	1	EA		
4-2	0665102120	LEVER	1	EA		
4-2	0665102120	LEVER	1	EA		
4-3	0665101203	NUT	1	EA		
4-3	0665101203	NUT	1	EA		
4-4	0375109110	BOOT	1	EA		
4-4	0375109110	BOOT	1	EA		
4-5	1650205600	GRIP	1	EA	5 switch	
4-5	1650205600	GRIP	1	EA	5 switch	
4-6	1213000540	PIN, spring	1	EA		
4-6	1213000540	PIN, spring	1	EA		
4-8	0665101208	RECEPTACLE	1	EA		
4-8	0665101208	RECEPTACLE	1	EA		
4-9	0665101209	WEDGE	1	EA		
4-10	0665101210	PLUG	3	EA		
4-9	*****	*****	1	EA		
Sample of manual. Download All 694 pages at: <a href="https://www.aresparts.com/downloads/takeuchi-tl10-skid-steer-loader-workshop-part-manual-book-no-bu62003-0-0/">https://www.aresparts.com/downloads/takeuchi-tl10-skid-steer-loader-workshop-part-manual-book-no-bu62003-0-0/</a>						