


Product: Takeuchi TB1200AL Mini Compact Excavator Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/takeuchi-tb1200al-mini-compact-excavator-parts-manual/>

Takeuchi Job TB1200 AL

Compact Excavator with Dozer Blade

PARTS CATALOG New

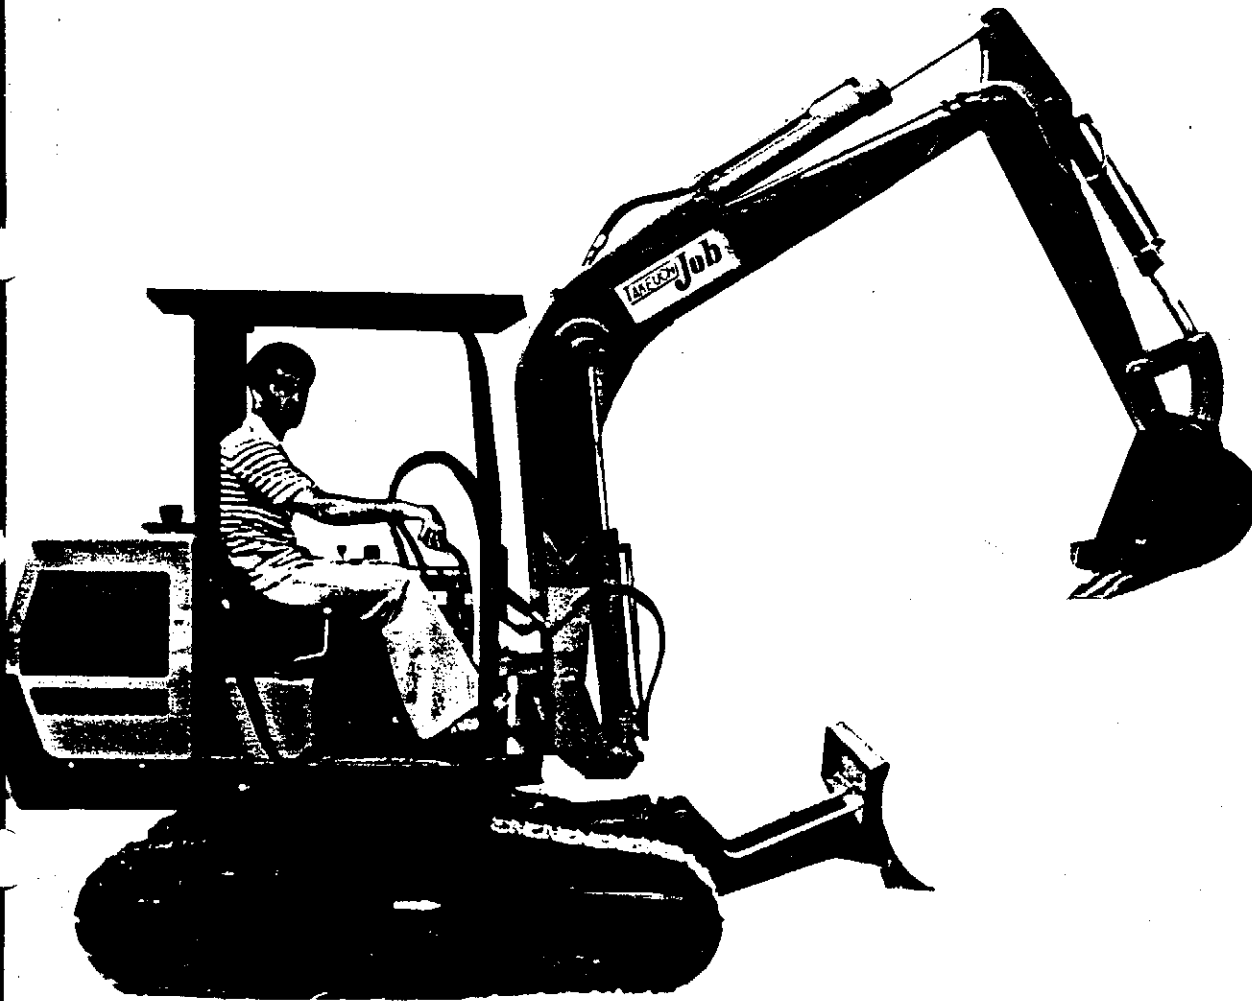

ni Mfg. (U.S.), Ltd.
East Atlanta Industrial Park
E Bankers Circle
a, GA. 30360
(404) 447-6670

Sample of manual. Download All 83 pages at:
<https://www.arepairmanual.com/downloads/takeuchi-tb1200al-mini-compact-excavator-parts-manual/>

Fig.No.	DESCRIPTION	IL	LI	REMARKS
Lower Machine				
01	①Lower Frame	○	×	
02	Track Shoe	○	○	
03	Carrier Roller	○	○	
04	Track Roller	○	○	
05	Front Idler	○	○	
06	Track Tension	○	○	
07	①Track Gearbox	○	△	#150 ~
08	Blade	○	○	
09	Piping, Lower	○	○	
Upper Machine, 1				
10	Slew Gearbox	○	○	
11	①Turntable	○	×	#253 ~
12-1	①Control Lever, Traction	△	×	For France & U.S.A.
12-2	①Control Lever, Traction	△	×	For China
13-1	①Control Lever, Operation	△	△	For France & U.S.A.
13-2	①Control Lever, Operation	△	△	For China
14-1	①Control Lever, Blade	○	○	For France #253 ~ #376, For U.S.A. #382 ~
14-2	①Control Lever, Blade	○	○	For France #377 ~
Upper Machine, 2				
15	①Engine & Accessories	○	×	
16	①Control Box	○	△	
17	①Engine Control	○	△	
18	①Electricals	△	△	
Upper Machine, 3				
19	Grease Piping	○	○	
20	Valve Mounting	○	○	
21	Piping, Upper 1	○	○	
22	Piping, Upper 2	○	○	

Sample of manual, Download All 83 pages at:

<https://www.arepairmanual.com/downloads/takeuchi-tb1200al-mini-compact-excavator-parts-manual/>

IL=Illustration LI=List

○=Appropriated to

△=Somewhat retouched

×=Newly drawn up

Rev. ①

Fig.No.	DESCRIPTION	IL	LI	REMARKS
23	Pump Drive, Main	○	○	
24	Pump Drive, Blade	○	○	
25	①Hydraulic Tank	○	△	
26-1	①Fuel Tank	○	△	#27~#366
26-2	①Fuel Tank	○	△	#367 ~
U p p e r M a c h i n e , 4				
27	Covers	○	○	
28	Seat	○	○	
29	Canopy	○	○	
H o e A t t a c h m e n t				
30	Hoe	○	○	
31	Bucket	○	○	
32-1	①Piping, Hoe 1	○	×	#184 ~#252 For France
32-2	①Piping, Hoe 1	△	×	#253 ~ For France
33-1	①Piping, Hoe 2	△	○	
33-2	①Piping, Hoe 2	△	△	
33-3	①Piping, Hoe 2	△	△	
33-4	①Piping, Hoe 2	△	△	

34-1	①Stickers	△	△	For France
34-2	①Stickers	△	△	For U.S.A.
34-3	Stickers	○	○	For China
35	Tools	○	○	
H y d r a u l i c D e v i c e s				
36	①Swivel Joint	×	×	#392 ~
37	Control Valve, Main	○	△	
38-1	Control Valve, Sub	○	○	For China
38-2	①Control Valve, Sub	△	△	For France & U.S.A.
39	①Brake & D.S. Valve	△	△	#408 ~

IL=Illustration LI=List

○=Appropriated to

△=Somewhat retouched

×=Newly drawn up

Rev.①

Fig.No.	DESCRIPTION	IL	LI	REMARKS
40-1	①Boom Cylinder	○	×	
40-2	①Boom Cylinder	○	△	
41-1	①Arm Cylinder	○	△	
41-2	Arm Cylinder	○	○	
42	Bucket Cylinder	○	○	
43	Blade Cylinder	○	○	
44	Swing Cylinder	○	○	
45	Traction Motor	○	○	
46	Hydraulic Pump, Main	○	○	
47	Hydraulic Pump, Sub	○	○	
O p t i o n				
48	Triangular Shoe	○	○	
49	Bucket	○	○	260W.30W.350W.400W.500W.600W.
50	Ejector Bucket	○	○	29W.370W.460W.
51	①Cabin	△	△	
52	Heater	○	○	

IL=Illustration LI=List

○=Appropriated to

△=Somewhat retouched

×=Newly drawn up

Rev.①

INDEX

LOWER MACHINE

FIG. 01	LOWER FRAME
FIG. 02	TRACK SHOE
FIG. 03	CARRIER ROLLER
FIG. 04	TRACK ROLLER
FIG. 05	FRONT IDLER
FIG. 06	TRACK TENSION
FIG. 07	TRACK GEARBOX
FIG. 08	BLADE
FIG. 09	PIPING, LOWER

UPPER MACHINE, 1

FIG. 10	SLEW GEARBOX
FIG. 11	TURNTABLE
FIG. 12	CONTROL LEVER, TRACTION
FIG. 13	CONTROL LEVER, OPERATION
FIG. 14	CONTROL LEVER, BLADE

UPPER MACHINE, 2

FIG. 15	ENGINE & ACCESSORIES
FIG. 16	CONTROL BOX
FIG. 17	ENGINE CONTROL
FIG. 18	ELECTRICALS

INDEX

LOWER MACHINE

FIG. 01	LOWER FRAME
FIG. 02	TRACK SHOE
FIG. 03	CARRIER ROLLER
FIG. 04	TRACK ROLLER
FIG. 05	FRONT IDLER
FIG. 06	TRACK TENSION
FIG. 07	TRACK GEARBOX
FIG. 08	BLADE
FIG. 09	PIPING, LOWER

UPPER MACHINE, 1

FIG. 10	SLEW GEARBOX
FIG. 11	TURNTABLE
FIG. 12	CONTROL LEVER, TRACTION
FIG. 13	CONTROL LEVER, OPERATION
FIG. 14	CONTROL LEVER, BLADE

UPPER MACHINE, 2

FIG. 15	ENGINE & ACCESSORIES
FIG. 16	CONTROL BOX
FIG. 17	ENGINE CONTROL
FIG. 18	ELECTRICALS

INDEX

UPPER MACHINE, 3

FIG. 19	GREASE PIPING
FIG. 20	VALVE MOUNTING
FIG. 21	PIPING, UPPER 1
FIG. 22	PIPING, UPPER 2
FIG. 23	PUMP DRIVE, MAIN
FIG. 24	PUMP DRIVE, BLADE
FIG. 25	HYDRAULIC TANK
FIG. 26	FUEL TANK

UPPER MACHINE, 4

FIG. 27	COVERS
FIG. 28	SEAT
FIG. 29	CANOPY

HOE ATTACHMENT

FIG. 30	HOE
FIG. 31	BUCKET
FIG. 32	PIPING, HOE 1
FIG. 33	PIPING, HOE 2

INDEX

FIG. 34 STICKERS
FIG. 35 TOOLS


HYDRAULIC DEVICES

FIG. 36 SWIVEL JOINT
FIG. 37 CONTROL VALVE, MAIN
FIG. 38 CONTROL VALVE, SUB
FIG. 39 BRAKE & D. S. VALVE
FIG. 40 BOOM CYLINDER
FIG. 41 ARM CYLINDER
FIG. 42 BUCKET CYLINDER
FIG. 43 BLADE CYLINDER
FIG. 44 SWING CYLINDER
FIG. 45 TRACTION MOTOR
FIG. 46 HYDRAULIC PUMP, MAIN
FIG. 47 HYDRAULIC PUMP, SUB

OPTION


FIG. 48 TRIANGULAR SHOE
FIG. 49 BUCKET
FIG. 50 EJECTOR BUCKET
FIG. 51 CABIN
FIG. 52 HEATER

FIG. 01 LOWER FRAME

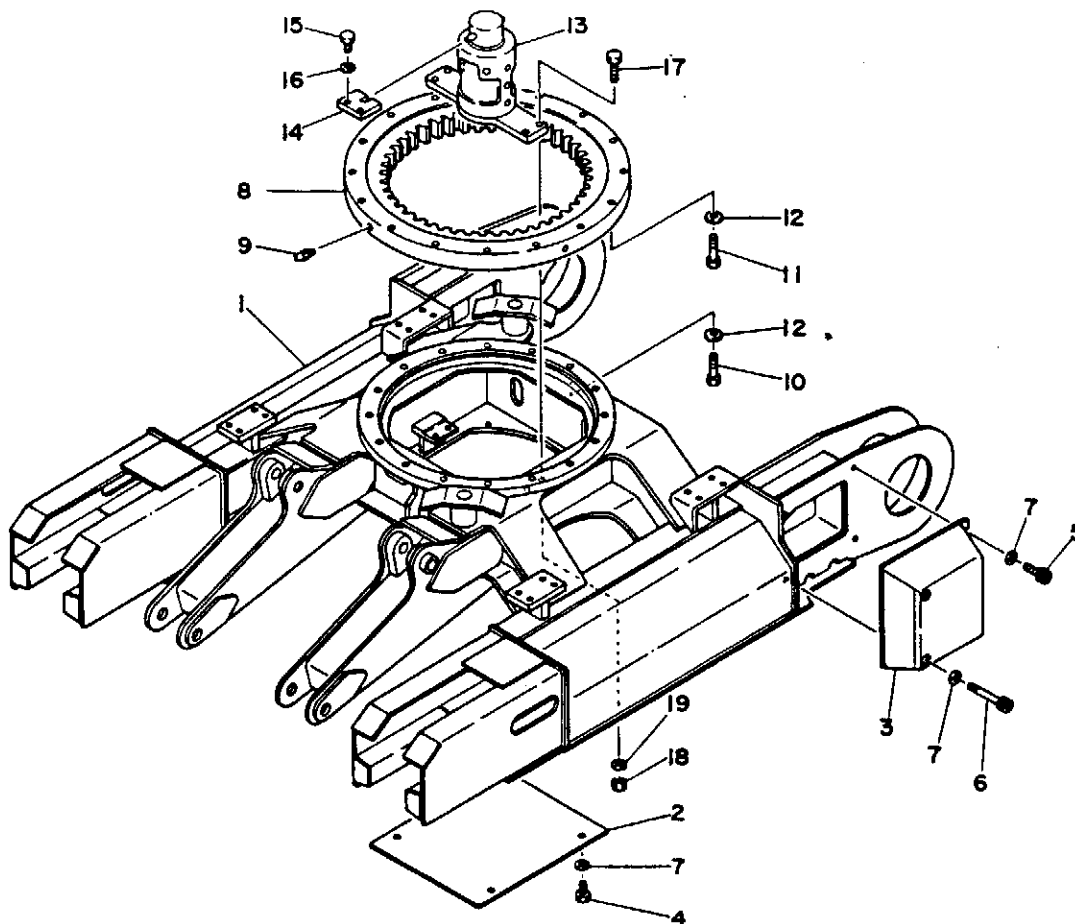


Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01510-10100	FRAME	1	
2	01310-01100	COVER	1	
3	01410-51100	COVER	2	
4	11000-51020	BOLT	4	
5	11000-51015	BOLT	4	
6	11101-51000	BOLT, Socket	4	
7	11400-10010	WASHER, Spring	12	
8	19130-00500	BEARING, Slew	1	
9	15600-11006	*NIPPLE, Grease	4	
10	11000-51260	BOLT	16	
11	11010-51260	BOLT	16	
12	11415-40012	WASHER	32	
13	19040-00100	JOINT, Swivel	1	#27~#391
	19040-01800	JOINT, Swivel	1	#392~
14	01321-00100	STOPPER	1	#27~#391
	01321-04100	STOPPER	1	#392~
15	11010-51430	BOLT	2	
16	11415-40014	WASHER	2	
17	11010-51240	BOLT	4	
18	11305-50012	NUT	4	
19	11400-10012	WASHER, Spring	4	

FIG. 02 TRACK SHOE

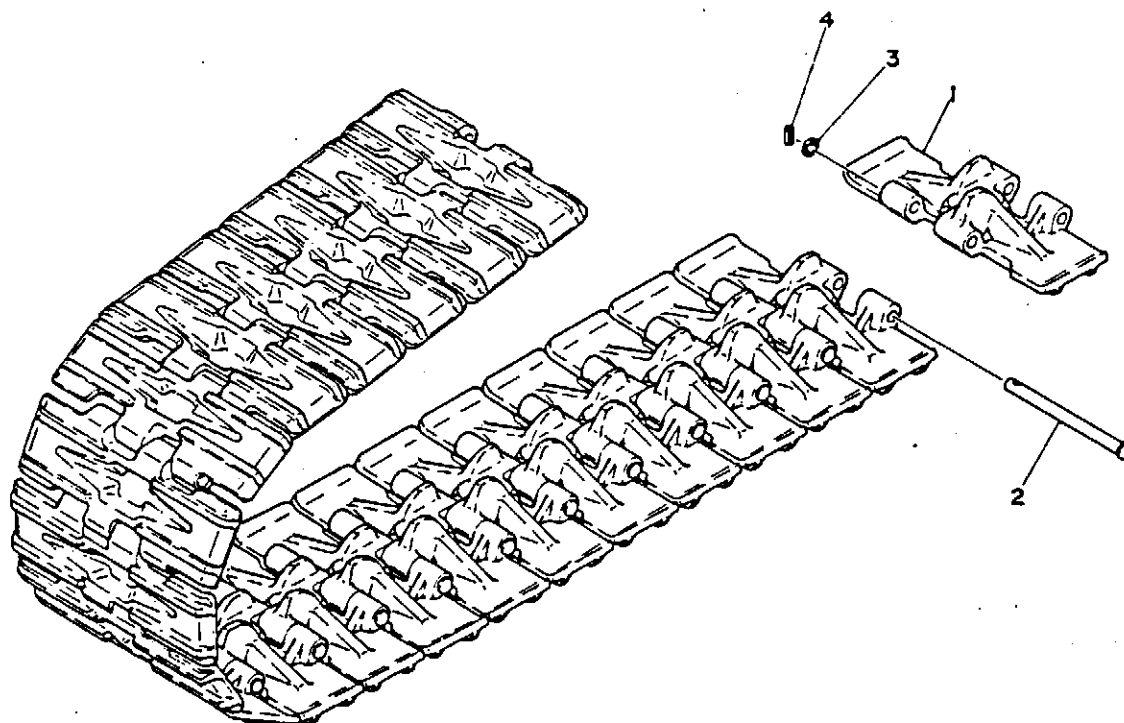


QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
01	19140-01400	SHOE ASSY. Track	2	
1	19140-01101	*SHOE	2	
2	19140-00102	*PIN. Track ✓	2	
3	19140-00103	*WASHER	2	
4	12130-00620	*PIN. Spring	2	

FIG. 03 CARRIER ROLLER

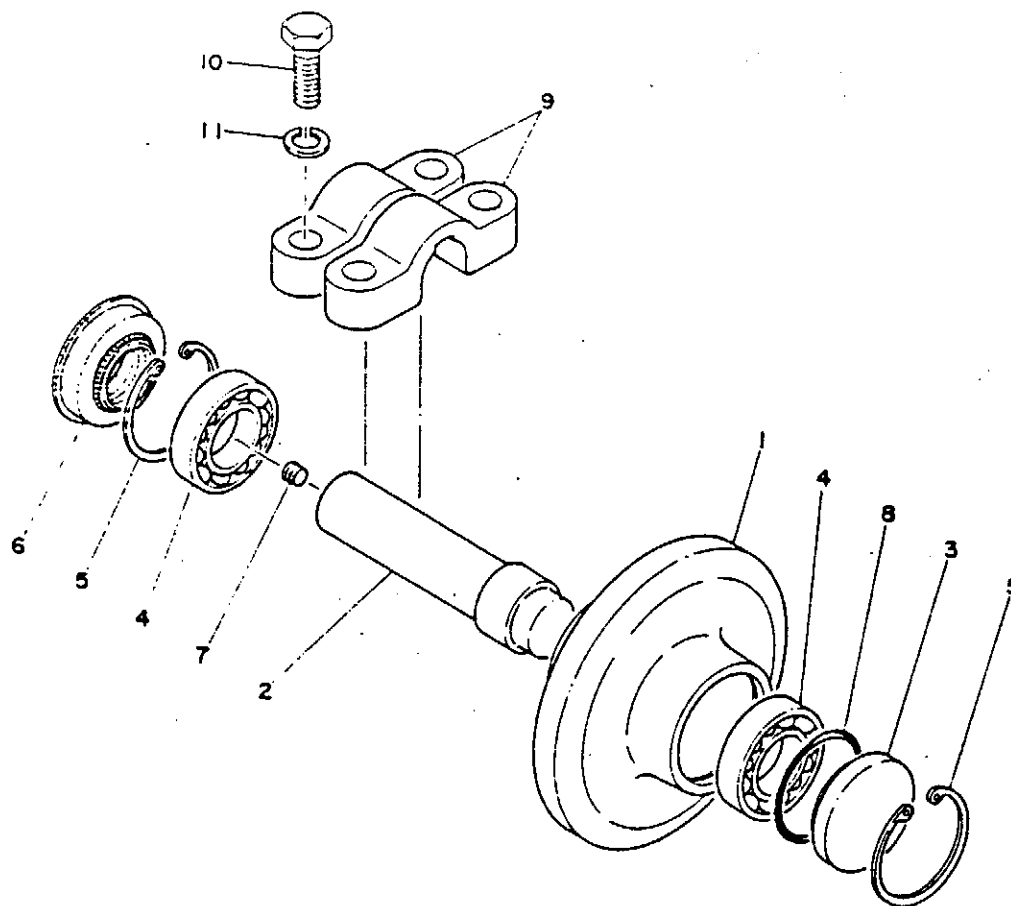


QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
01	01612-90000	ROLLER ASSY. Carrier	4	
1	01612-09100	*ROLLER	1	
2	01612-09290	*SHAFT	1	
3	01612-09300	*COVER	1	
4	13000-06306	*BEARING	2	
5	12210-00055	*RING, Snap	2	
6	14310-03053	*SEAL, Oil	1	
7	15018-20001	*PLUG	1	
8	14330-10450	*O-RING	1	
9	01613-08300	BRACKET	4	
10	11010-51235	BOLT	8	
11	11400-10012	WASHER, Spring	8	

FIG. 04 TRACK ROLLER

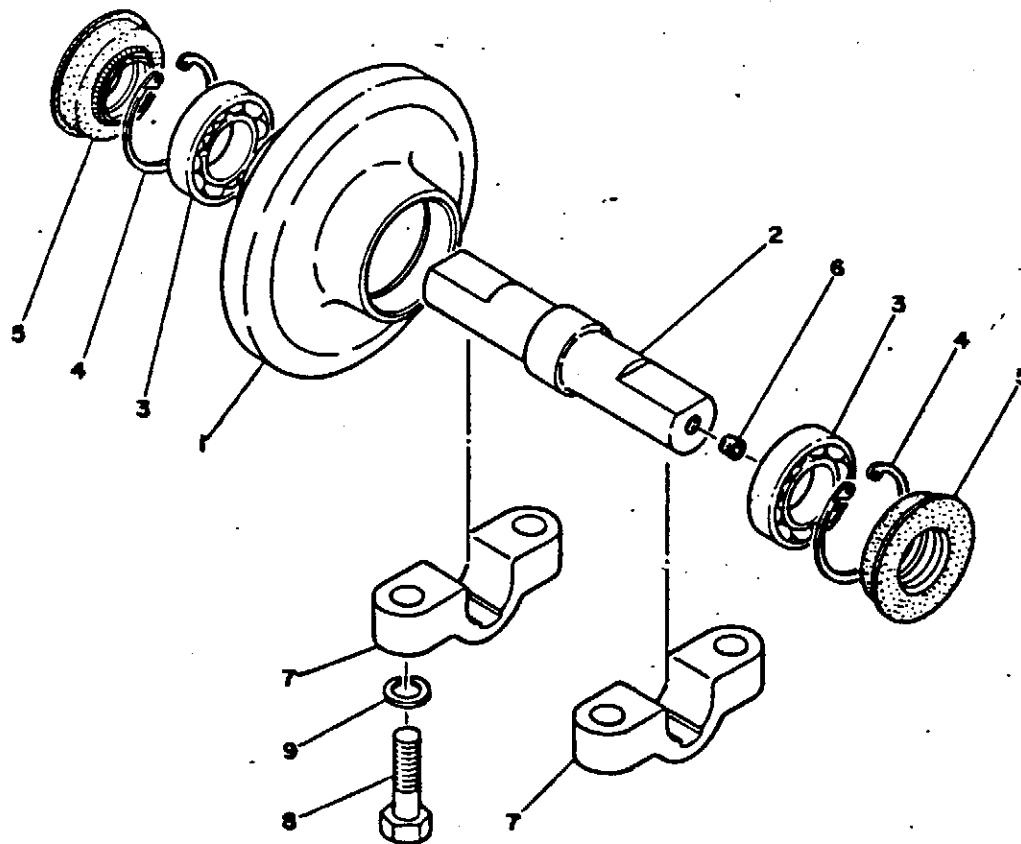


QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
0-1	01613-98900	ROLLER ASSY. Track	10	#21~
1	01613-00100	*ROLLER	1	
2	01613-00200	*SHAFT	1	
3	13000-00000	*BEARING	2	
4	12210-00055	*RING Snap	2	
5	14310-03055	*SEAL Oil	2	
6	15010-20001	*PLUG	1	
7	01613-00300	BRACKET	20	
8	11010-51235	BOLT	40	
9	11400-10012	WASHER Spring	40	

FIG. 05 FRONT IDLER

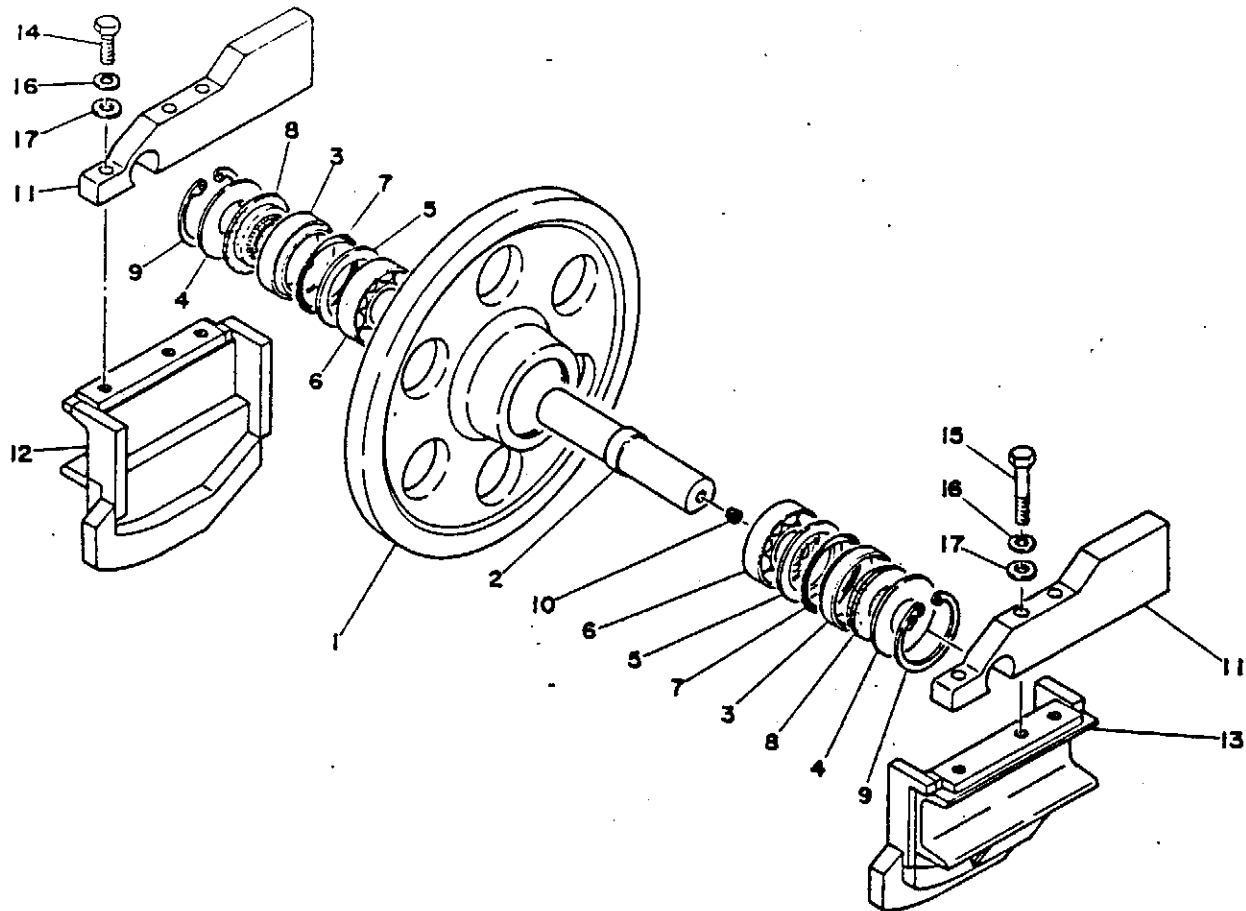

Qty	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
01	01314-90000	IDLER ASSY. Front	2	
1	01614-05100	*IDLER	1	
2	01614-05200	*SHAFT	1	
3	01614-15600	*COLLAR	2	
4	00036-36002	*WASHER	2	
5	01614-16300	*WASHER	2	
6	13000-06307	*BEARING	2	
7	14200-10700	*O-RING	2	
8	14310-03562	*SEAL, Oil	2	
9	12210-00080	*RING, Seal	2	
10	15018-20001	*PLUG	1	
11	01614-05300	BRACKET	4	
12	01314-10400	SLIDE (RH)	2	
13	01314-10500	SLIDE (LH)	2	
14	11010-51235	BOLT	4	
15	11010-51265	BOLT	8	
16	11400-10012	WASHER, Spring	12	
17	11415-40012	WASHER	12	


FIG. 06 TRACK TENSION

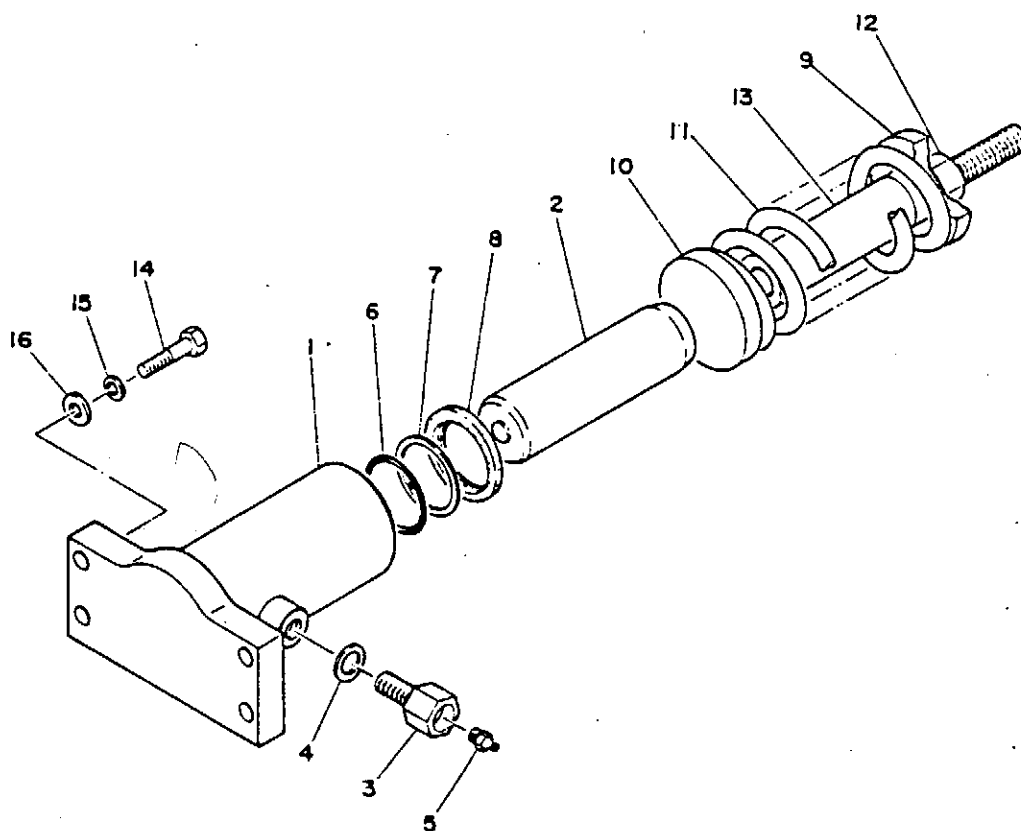

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01715-10100	CYLINDER (RH) . Grease	1	
1-1	01715-10200	CYLINDER (LH) . Grease	1	
2	02215-20300	PISTON	2	
3	15413-01601	VALVE ASSY. Check	2	
4	15412-01616	PACKING	2	
5	15500-01000	NIPPLE. Grease	2	
6	14200-10500	O-RING	2	
7	14210-20500	RING. Back-up	2	
8	14004-02835	SEAL. Oil	2	
0-1	01715-90000	CUSHION ASSY	2	
9	01715-00500	*SEAT. Spring	1	
10	01715-10600	*ROD ASSY	1	
11	00070-00004	*SPRING	1	
12	11300-20020	*NUT	1	
13	01715-11700	*PIPE	1	
14	11000-51045	BOLT	8	
15	11400-10010	WASHER. Spring	8	
16	11415-40010	WASHER	8	


FIG. 07

TRACK GEARBOX

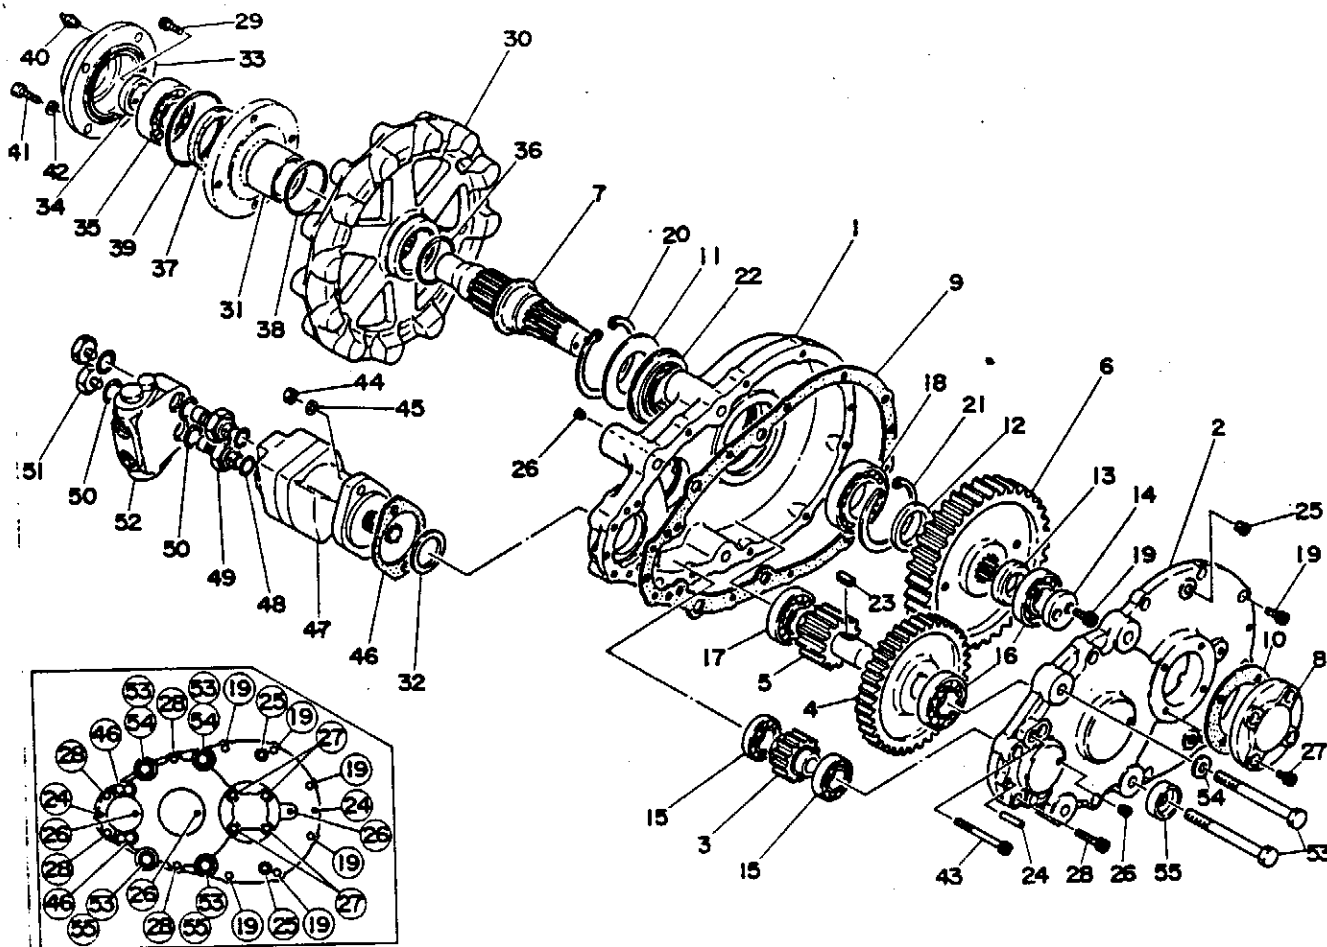

Q'ty	PARTS NUMBER	DESCRIPTION	REMARKS	Q'ty	PARTS NUMBER	DESCRIPTION	REMARKS
2	00916-90100	GEAR BOX ASSY		2	15018-20003	*PLUG	
1	00916-20100	*CASE		4	15018-20001	*PLUG	
2	00916-10200	*COVER		4	11100-51016	*BOLT, Socket	
3	01316-00300	*GEAR		4	11100-51045	*BOLT, Socket	
4	01716-10400	*GEAR		2	11100-51020	BOLT, Socket	
1	01316-00500	*GEAR					
1	01316-00600	*GEAR		30	00916-22800	SPROCKET	
1	00916-20700	*SHAFT		31	00916-21400	COLLAR	
1	00916-00900	*COVER		22	00030-00017	WASHER	
1	00916-11100	*GASKET		33	01716-02400	COVER	
				34	00916-22000	PLATE	
1	00916-01200	*GASKET					
1	00030-00010	*WASHER		35	13000-01308	BEARING	
1	00030-51570	*COLLAR		36	14201-00600	O-RING	
1	00039-00008	*COLLAR		37	14016-07088	SEAL, Oil	
1	00916-22000	*PLATE		38	14201-00700	O-RING	
2	13000-06007	*BEARING		39	14201-01000	O-RING	
2	13000-06208	*BEARING					
1	13000-99208	*BEARING		40	15500-01000	NIPPLE, Grease	
1	13000-99211	*BEARING		41	11010-51230	BOLT	
6	11100-51020	*BOLT, Socket		42	11400-10012	WASHER, Spring	
				43	11110-51290	BOLT, Socket	
1	12210-00110	*RING, Snap		44	11305-53012	NUT	
1	12210-00100	*RING, Snap					
1	14312-06510	*SEAL, Oil		45	11415-40012	WASHER	
1	12010-51025	*KEY		46	01716-01200	GASKET	
2	12010-01036	*PIN, Dowel		47	19030-00900	MOTOR ASSY	
				48	14203-10910	O-RING	
				49	00072-00011	FITTING	

FIG. 07 TRACK GEARBOX

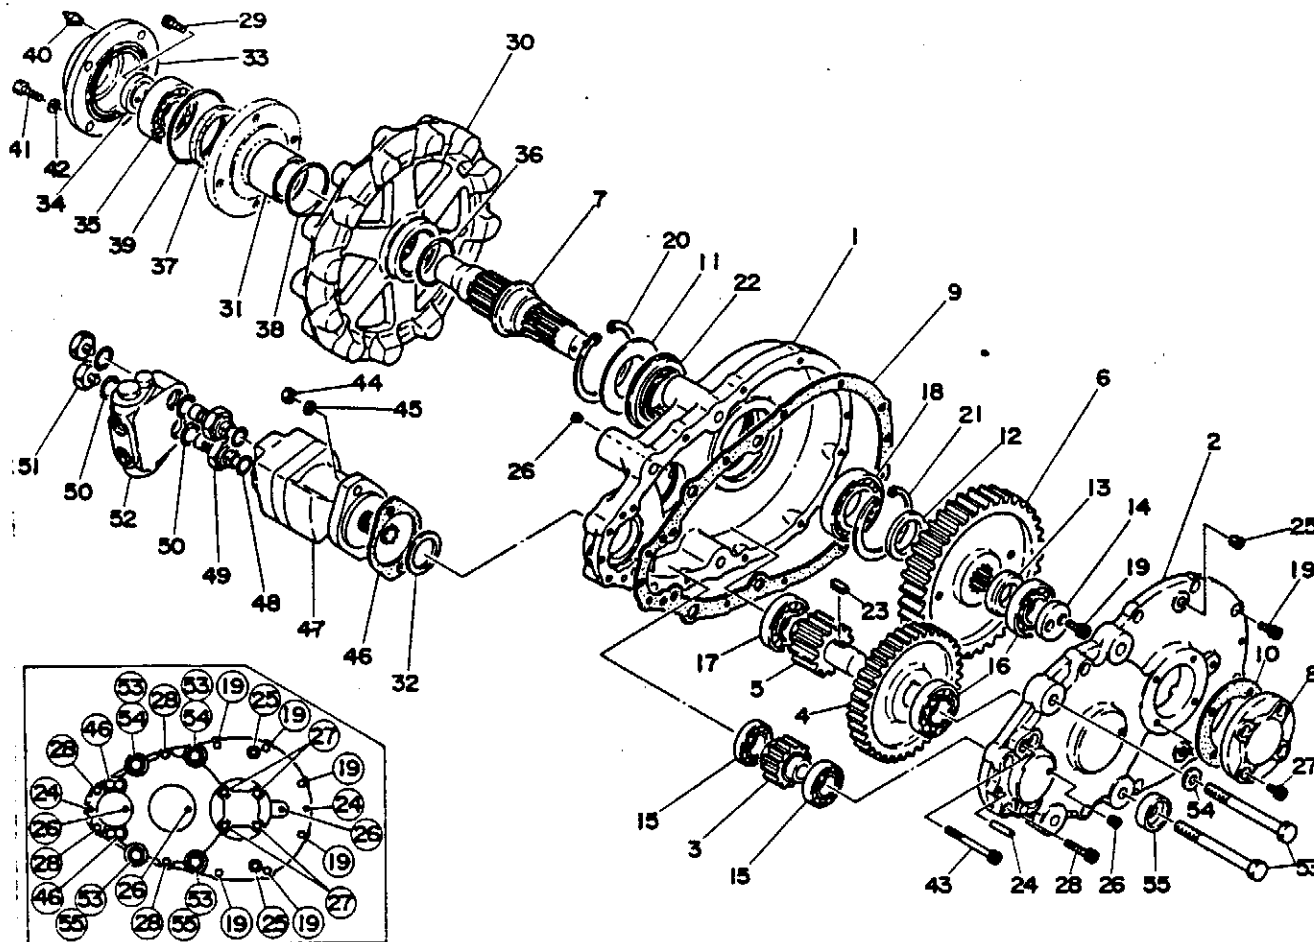


Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
50	14200-10250	O-RING	4	
51	00072-00009	PLUG	2	
52	19015-00400	VALVE	1	#27~#407
	19015-00500	VALVE	1	#408 ~
53	11011-51640	BOLT	4	
54	11415-40016	WASHER	2	
55	02116-22400	WASHER	2	

NOTE

Item 30 → Old Part. 00916-20800... Interchangeable
 #150 ~

FIG. 08 BLADE

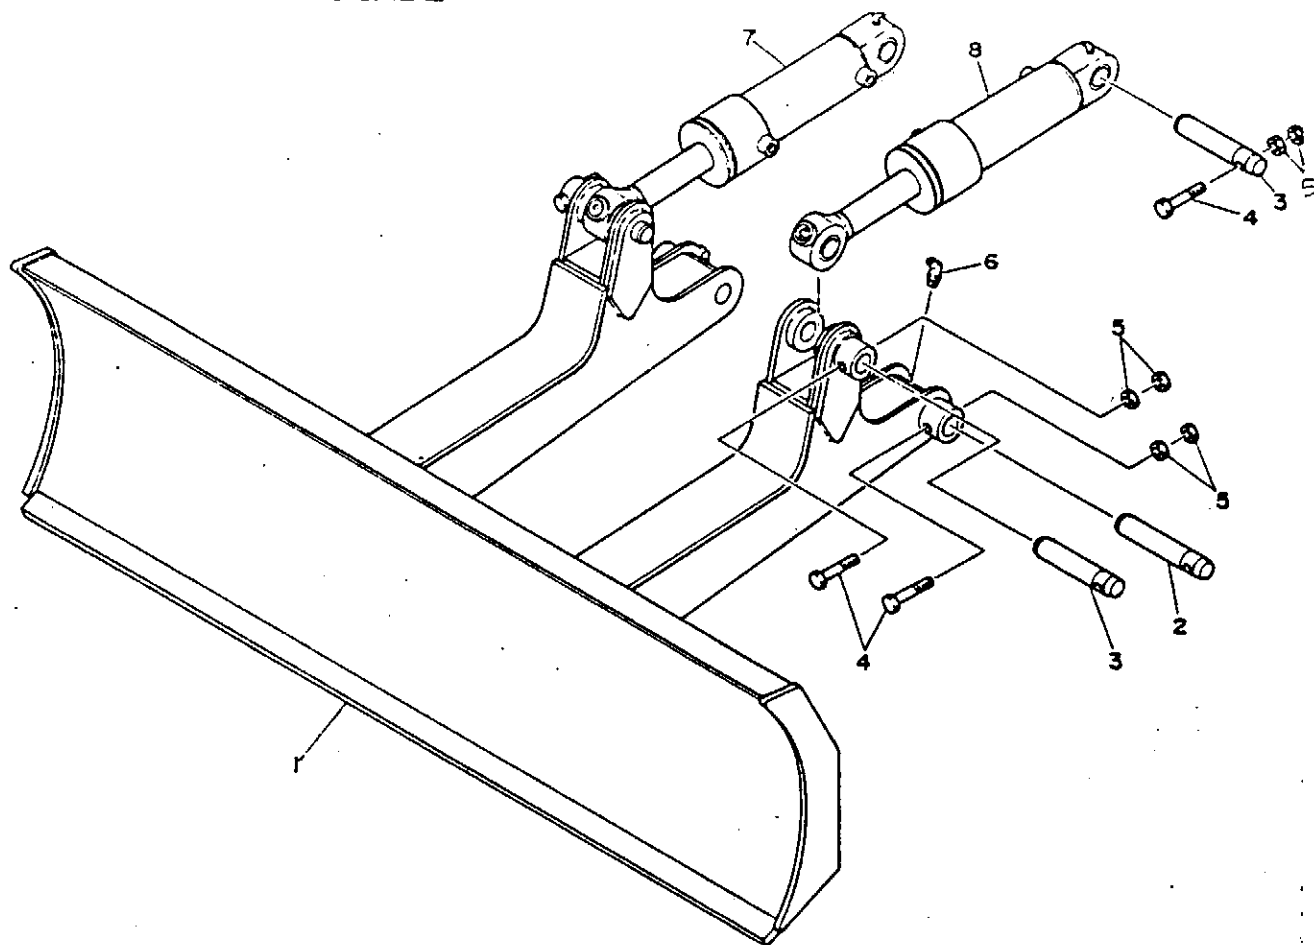

PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1 01563-20100	BLADE	1	
2 01363-00200	PIN	2	
3 01363-00300	PIN	4	
4 11000-51070	BOLT	6	
5 11300-50010	NUT	12	
6 15600-01675	NIPPLE Grease	2	
7 19000-00700	CYLINDER ASSY (RH)	1A #27 ~#136	
19000-07100	CYLINDER ASSY (RH)	1T #137 ~	
8 19000-00800	CYLINDER ASSY (LH)	1A #27 ~#136	
19000-07200	CYLINDER ASSY (LH)	1T #137 ~	

UPPER MACHINE 1

FIG. 13 CONTROL LEVER, OPERATION

FIG. 14 CONTROL LEVER, BLADE


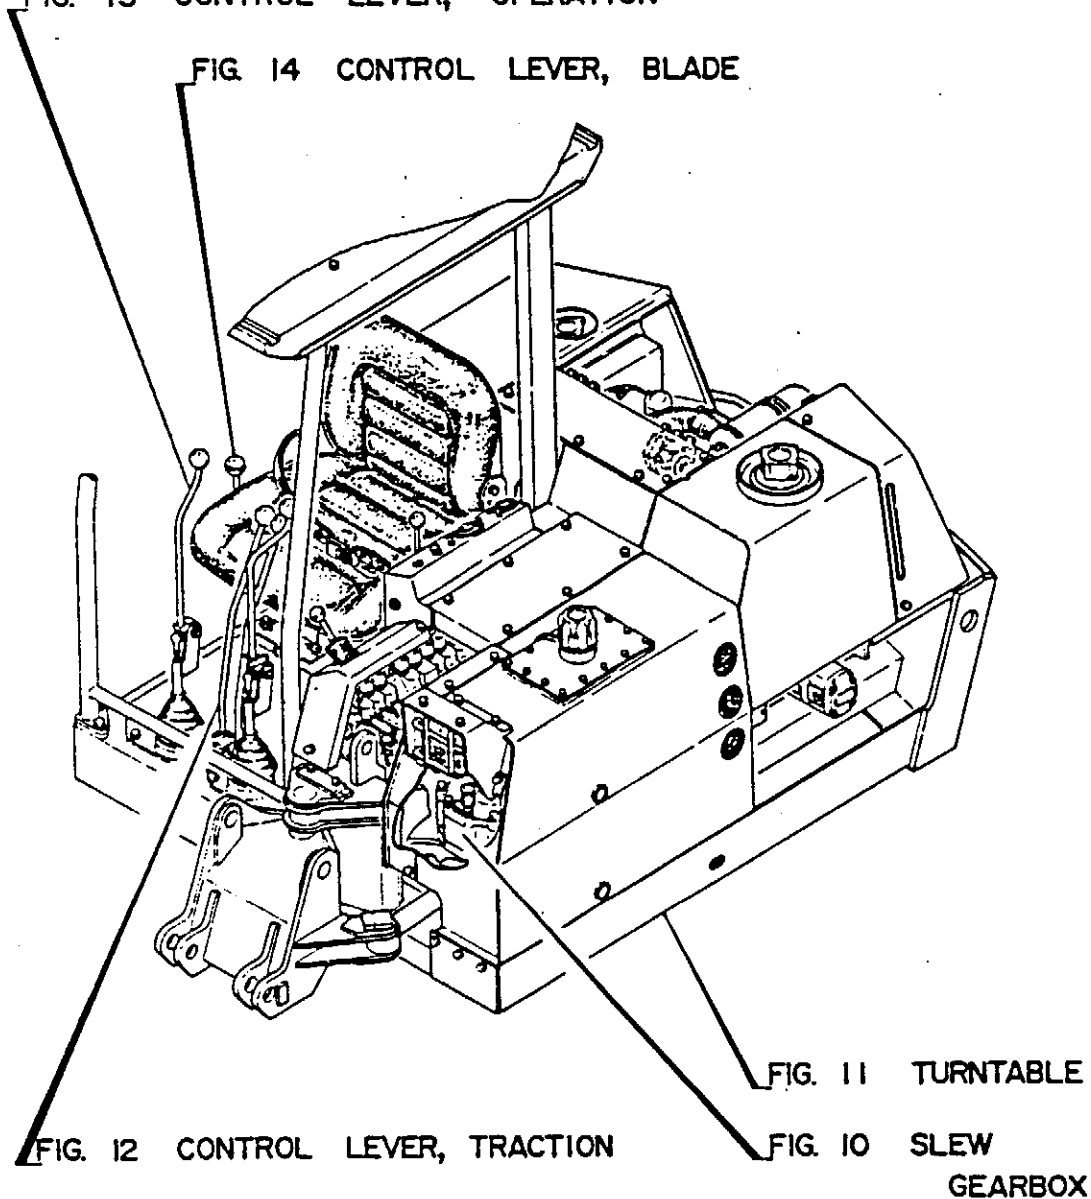


FIG. 11 TURNTABLE

FIG. 10 SLEW
GEARBOX


FIG. 12 CONTROL LEVER, TRACTION

FIG. 09 PIPING, LOWER

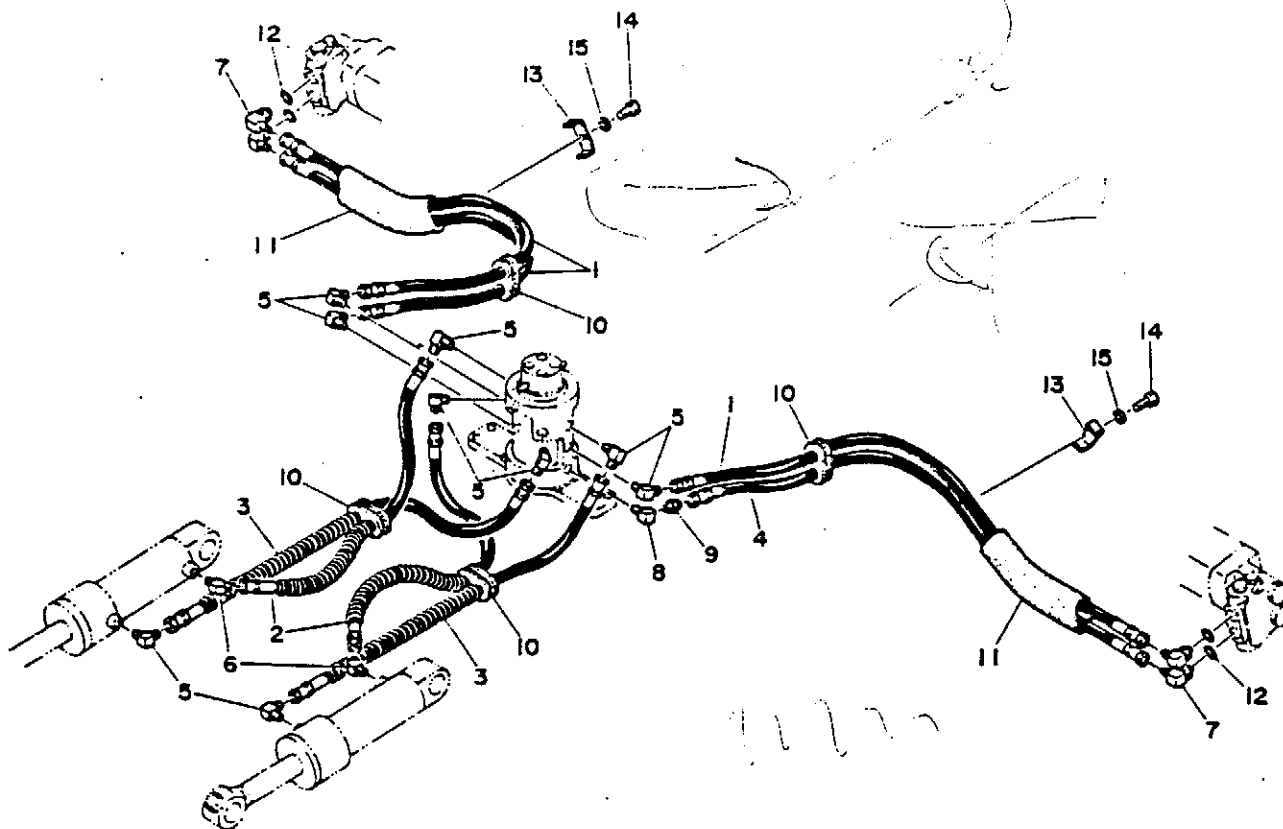

Qty	PARTS NUMBER	DESCRIPTION	REMARKS
3	19082-09085	HOSE ASSY	
2	19086-09060	HOSE ASSY	
2	19086-09080	HOSE ASSY	
1	19082-09080	HOSE ASSY	
3	15111-00003	ELBOW, 90°	
2	15112-00003	ELBOW, 45°	
4	15152-00333	ELBOW, 90°	
1	15019-86526	ELBOW, 90°	
1	15110-00003	ADAPTOR	
4	00972-10300	GUARD	
2	15313-50450	GUARD	
4	14203-10908	O-RING	
2	01310 01200	CLAMP	
2	11000-50830	BOLT	
2	11400-10008	WASHER, Spring	


FIG. 10 SLEW GEARBOX

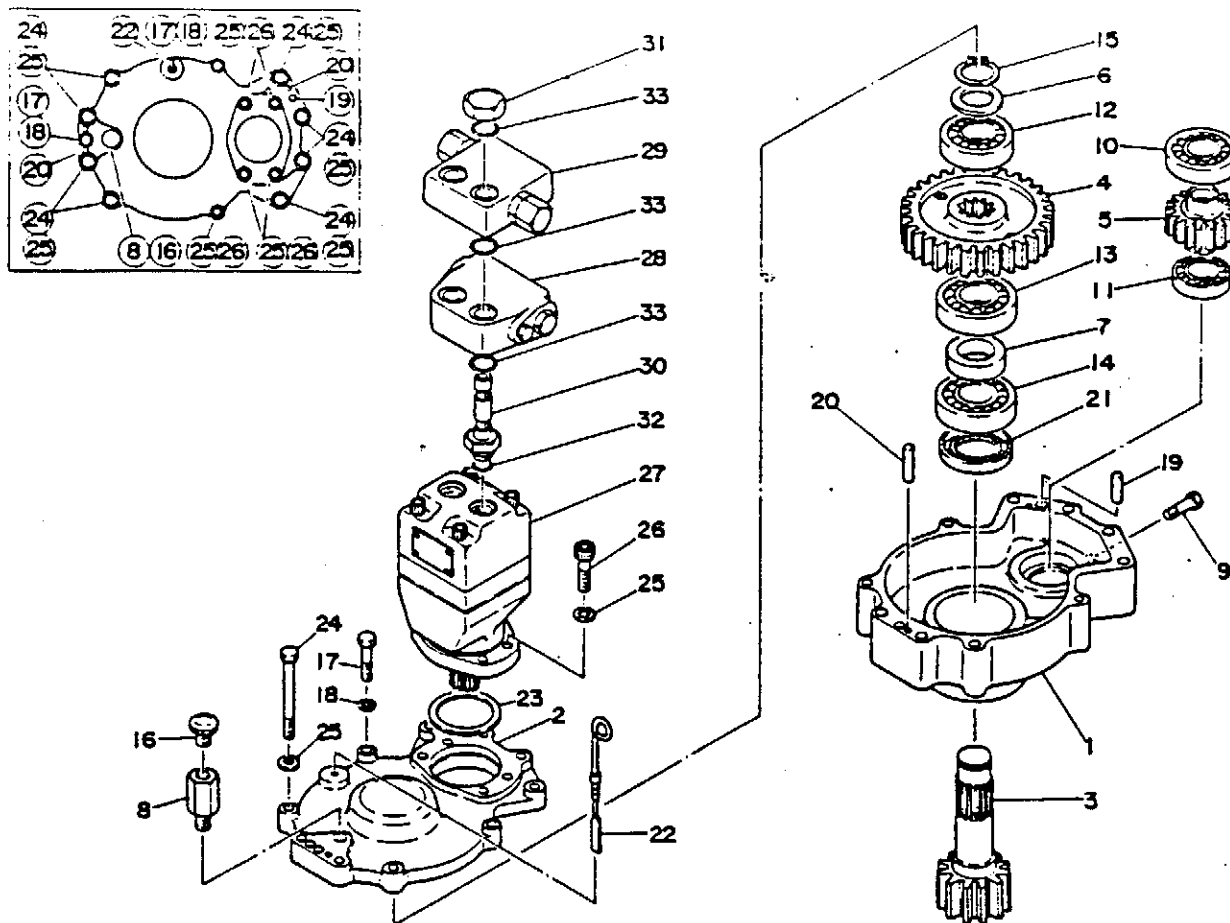

Q'ty	PARTS NUMBER	DESCRIPTION	REMARKS
1	01123-90000	GEAR BOX ASSY	
1	01123-00100	*CASE	
1	01423-00200	*COVER	
1	01123-20300	*PINION	
1	01423-00500	*GEAR	
1	01423-10600	*GEAR	
1	00036-35505	*WASHER	
1	00030-41020	*COLLAR	
1	00072-00012	*BUSHING	
1	01380-10700	*PLUG	
1	13000-06208	*BEARING	
1	13000-06008	*BEARING	
1	13001-06307	*BEARING	
1	13000-06308	*BEARING	
1	13000-99308	*BEARING	
1	12200-00035	*RING, Snap	
1	15540-00004	*CAP, Oil	
3	11000-51050	*BOLT	
3	11400-10010	*WASHER, Spring	
1	12120-01036	*PIN, Dowel	
2	12120-00845	*PIN, Dowel	
1	14002-02887	*SEAL, Oil	
1	15531-12403	*GAUGE	
1	00036-00007	WASHER	
8	11011-51210	BOLT	

Q'ty	PARTS NUMBER	DESCRIPTION	REMARKS
12	11415-40012	WASHER	
4	11110-51245	BOLT, Socket	
1	19030-01400	MOTOR ASSY	
1	19015-00400	VALVE	
1	19016-10700	VALVE	
2	00072-00010	FITTING	
2	00072-00009	PLUG	
2	14203-10910	O-RING	
6	14200-10250	O-RING	

FIG. 11 TURNTABLE

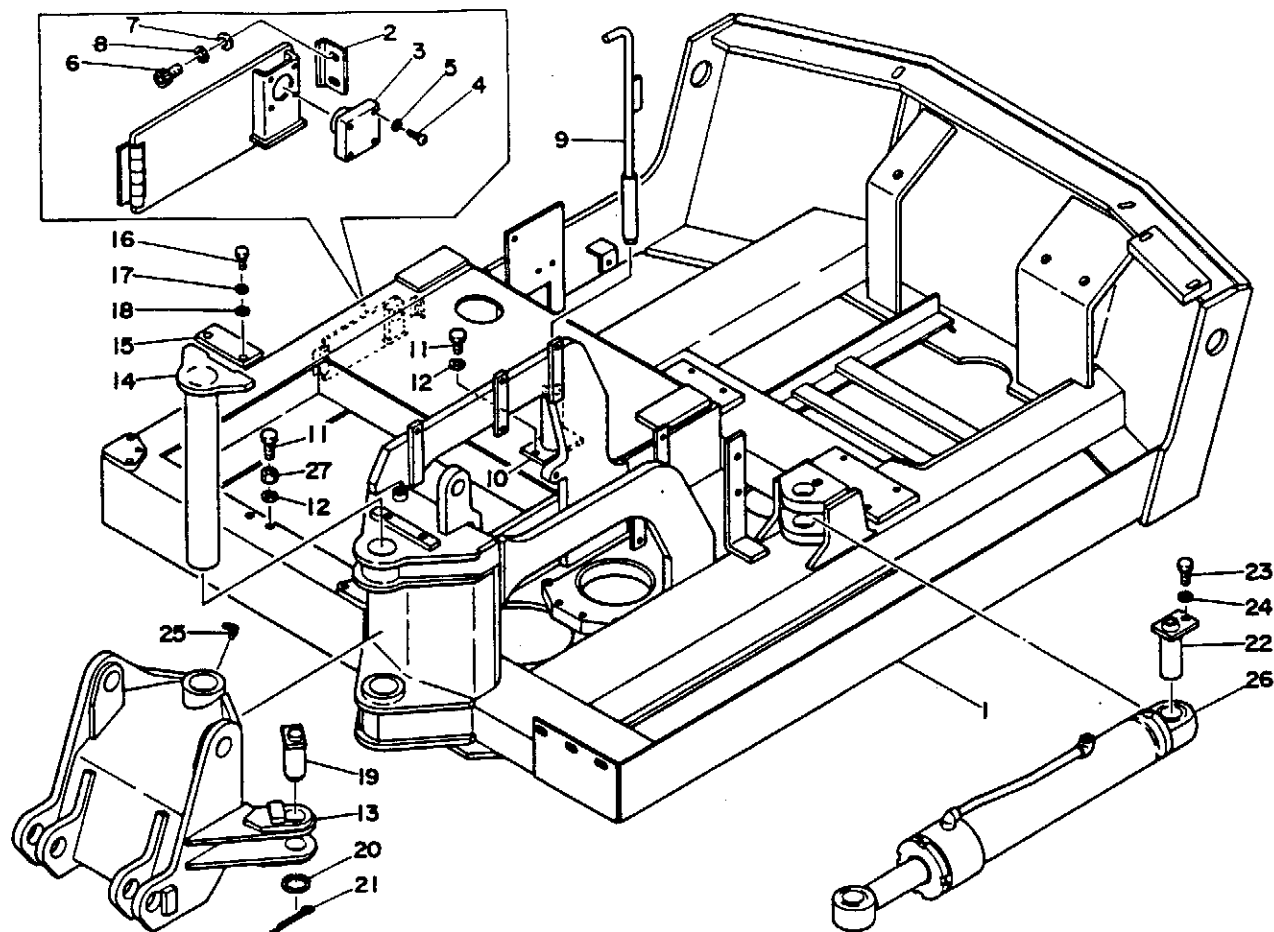

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01530-20000	TURNTABLE	1	
2	01530-20800	*PLATE	1	
3	16570-03200	*LOCK	1	#27~#190
3-1	16533-13400	*LOCK	1	#200 ~
4	11205-30315	*SCREW. Pan head	4	
5	11400-20003	*WASHER. Spring	4	
6	11100-50815	*BOLT. Socket	2	
7	11415-40008	*WASHER	2	
8	11400-20008	*WASHER. Spring	2	
9	01522-10300	PIN. Lock	1	
10	01522-10200	BRACKET	1	
11	11000-51025	BOLT	4	
12	11400-10010	WASHER. Spring	4	
13	01331-10100	BRACKET. Boom	1	
14	00019-00013	SHAFT	1	
15	01331-10200	PLATE	1	
16	11010-51225	BOLT	2	
17	11400-10012	WASHER. Spring	2	
18	11411-00012	WASHER. Plain	2	
19	00010-40111	PIN	1	
20	00030-40005	COLLAR	1	
21	12100-00860	PIN. Split	1	
22	00019-00003	PIN	1	
23	11000-51030	BOLT	1	
24	11400-10010	WASHER. Spring	1	

NOTE #253 ~

Rev. ①


Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
25	15600-01900	NIPPLE. Grease	2	
26	19000-00100	CYLINDER. Swing	1	
27	11300-50010	NUT	2	

NOTE

Item 1 has both old type with serial number #27~#252 and new type with serial number #253 ~

Rev. ①

FIG. 12-1 CONTROL LEVER, TRACTION

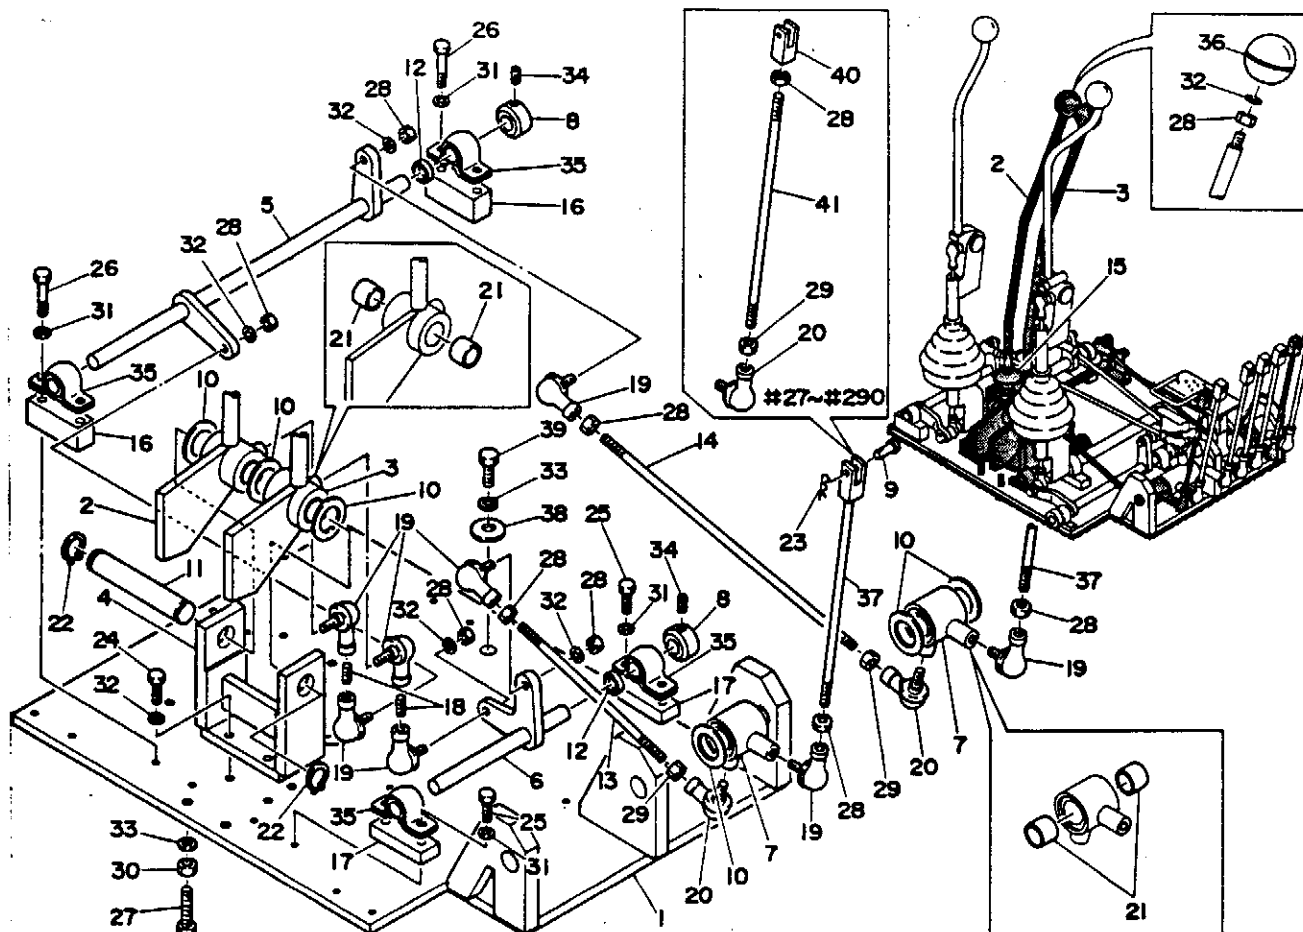

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01532-00100	PLATE, Lever	1	
2	01532-00600	LEVER (R. H.), Traction	1	
3	01532-00700	LEVER (L. H.), Traction	1	
4	01332-00800	BRACKET	1	
5	01332-11100	LEVER	1	
6	01332-11200	LEVER	1	
7	01332-11800	LEVER	2	
8	01632-08200	STOPPER	2	
9	00040-05117	PIN	2	
10	01632-16200	WASHER	6	
11	00042-20110	SHAFT	1	
12	00030-15005	COLLAR	2	
13	00050-08195	ROD	1	
14	00050-08330	ROD	1	
15	01632-09900	BOOT	2	
16	01332-14500	SPACER	2	
17	00062-00001	SPACER	2	
18	11210-50828	SET. Screw	2	
19	13400-00080	ROD, End	8	
20	13400-00085	ROD, End	2	
21	13330-02015	BUSHING	8	
22	12200-00020	RING, Snap	2	
23	12140-00005	PIN, Snap	2	
24	11000-50820	BOLT	4	
25	11000-50625	BOLT	4	

NOTE For France & U.S.A.

Rev. ①

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
26	11000-50635	BOLT	4	
27	11002-51040	BOLT	2	
28	11300-50008	NUT	10	
29	11315-50008	NUT	4	#27~#290
	11315-50008	NUT	2	#291 ~
30	11300-50010	NUT	2	
31	11400-10006	WASHER, Spring	8	
32	11400-10008	WASHER, Spring	10	
33	11400-10010	WASHER, Spring	6	
34	11210-50808	SET. Screw	2	
35	13320-01518	MINI-PILLOW	4	
36	16500-03508	GRIP	2	
37	00053-05275	ROD, Yoke	2	#291 ~
38	00036-00006	WASHER	4	
39	11000-51025	BOLT	4	
40	00055-05032	YOKE	2	#27~#290
41	00050-08250	ROD	2	#27~#290


NOTE

Item 37 → Item 40 → Item 41 ... Interchangeable

For U.S.A. For France

Rev. ①

FIG. 12-2 CONTROL LEVER, TRACTION

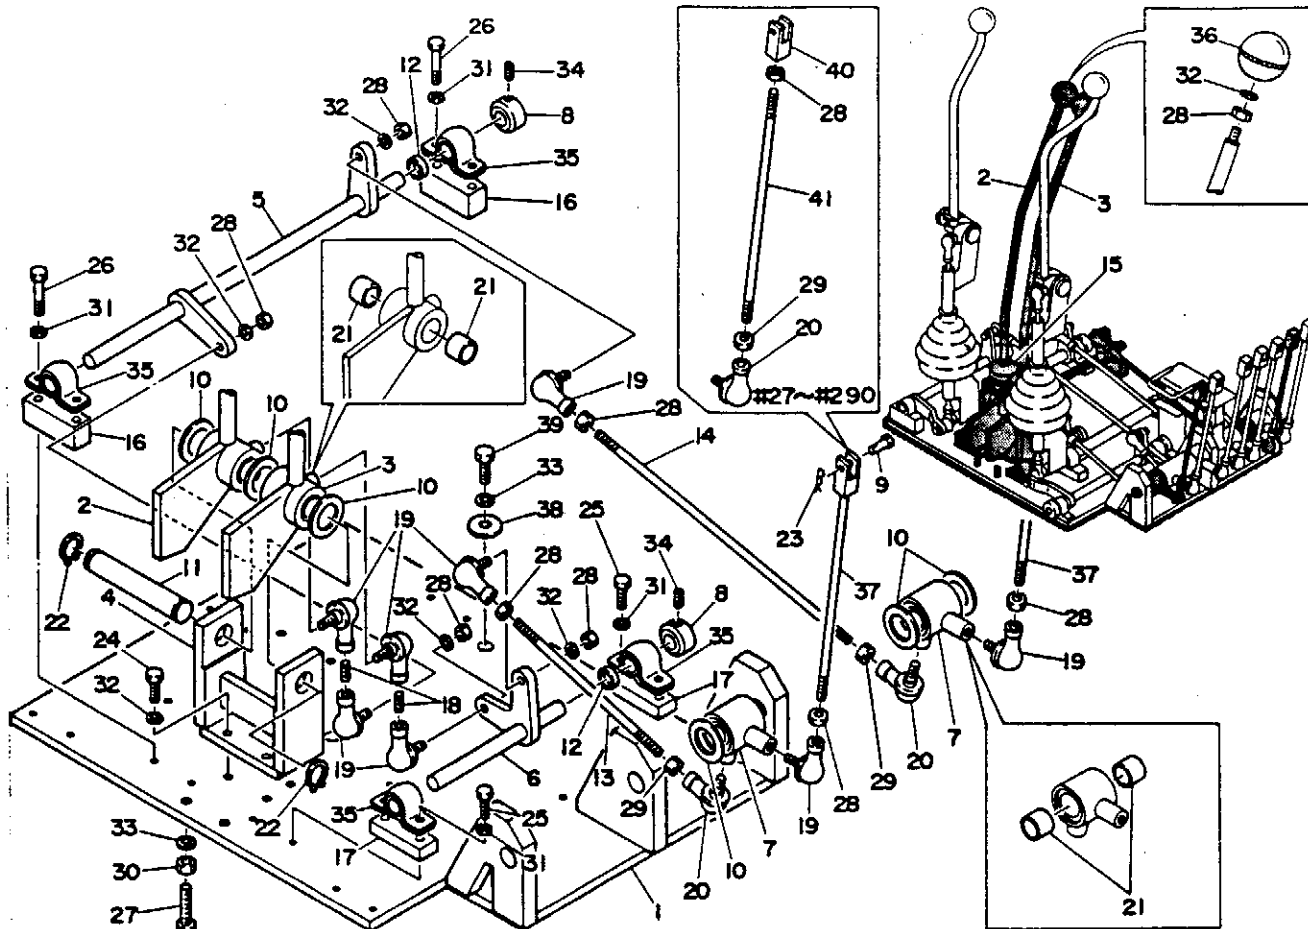

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01532-00100	PLATE, Lever	1	
2	01532-00600	LEVER (R. H.), Traction	1	
3	01532-00700	LEVER (L. H.), Traction	1	
4	01332-00800	BRACKET	1	
5	01332-11100	LEVER	1	
6	01332-11200	LEVER	1	
7	01332-11800	LEVER	2	
8	01632-08200	STOPPER	2	
9	00040-05117	PIN	2	
10	01632-16200	WASHER	6	
11	00042-20110	SHAFT	1	
12	00030-15005	COLLAR	2	
13	00050-08195	ROD	1	
14	00050-08330	ROD	1	
15	01632-09900	BOOT	2	
16	01332-14500	SPACER	2	
17	00062-00001	SPACER	2	
18	11210-50828	SET. Screw	2	
19	13400-00080	ROD, End	8	
20	13400-00085	ROD, End	2	
21	13330-02015	BUSHING	8	
22	12200-00020	RING, Snap	2	
23	12140-00005	PIN, Snap	2	
24	11000-50820	BOLT	4	
25	11000-50625	BOLT	4	


Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
26	11000-50635	BOLT	4	
27	11002-51040	BOLT	2	
28	11300-50008	NUT	10	
29	11315-50008	NUT	4	#27~#290
	11315-50008	NUT	2	#291 ~
30	11300-50010	NUT	2	
31	11400-10006	WASHER, Spring	8	
32	11400-10008	WASHER, Spring	10	
33	11400-10010	WASHER, Spring	6	
34	11210-50808	SET. Screw	2	
35	13320-01518	MINI-PILLOW	4	
36	16500-03508	GRIP	2	
37	00053-05275	ROD, Yoke	2	#291 ~
38	00036-00006	WASHER	4	
39	11000-51025	BOLT	4	
40	00055-05032	YUKE	2	#27~#290
41	00050-08250	ROD	2	#27~#290

NOTE

Item 37 → Item 40 + Item 41 ... Interchangeable

For China

FIG. 13-1 CONTROL LEVER, OPERATION

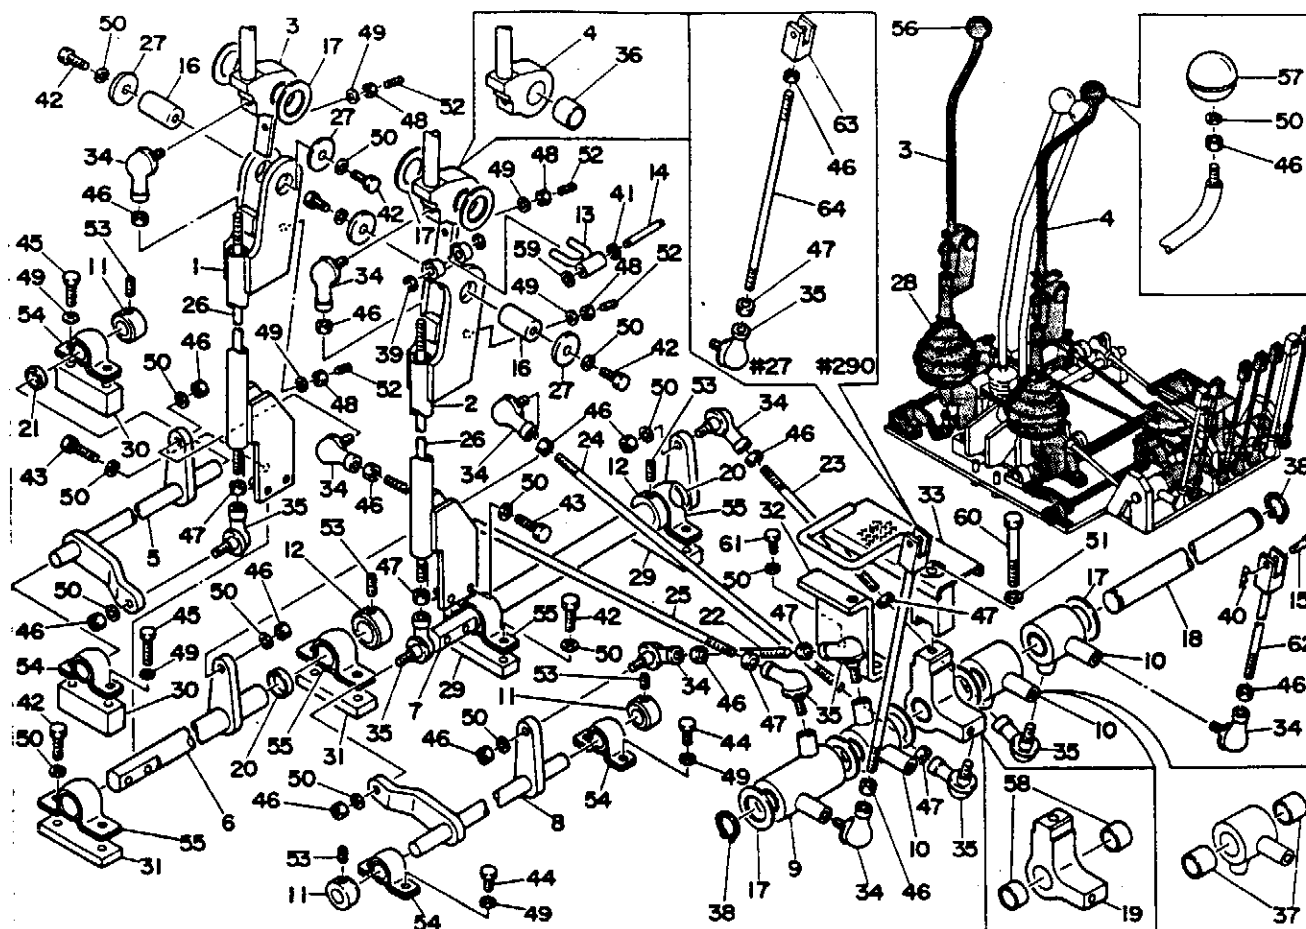

1	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
---	--------------	-------------	------	---------

1	01932-10200	LEVER (R. H.)	1	
2	01532-10300	LEVER (L. H.)	1	
3	01532-00400	LEVER (R. H.), Operation	1	
4	01532-00500	LEVER (L. H.), Operation	1	
5	01332-10900	LEVER	1	
6	01332-11000	LEVER	1	
7	01332-11300	LEVER	1	
8	01332-11400	LEVER	1	
9	01532-11700	LEVER	1	
10	01532-01800	LEVER	3	
11	01632-08200	STOPPER	3	
12	01632-09400	STOPPER	2	
13	01632-10300	LEVER, Lock	1	
14	00042-00646	PIN	1	
15	00040-05117	PIN	5	
16	01632-16100	PIN	2	
17	01632-16200	WASHER	9	
18	00042-20343	SHAFT, Lever	1	
19	01532-03000	LEVER	1	
20	00030-20005	COLLAR	2	
21	00030-15005	COLLAR	1	
22	00050-08075	ROD	1	
23	00050-08155	ROD	1	
24	00050-08380	ROD	1	
25	00050-08460	ROD	1	

NOTE For U.S.A. and France

Rev. 00


1	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
---	--------------	-------------	------	---------

26	00050-08350	ROD	2	
27	00036-09003	WASHER	4	
28	01632-09800	BOOT	2	
29	01332-14400	SPACER	2	
30	01332-14500	SPACER	2	
31	00062-00001	SPACER	2	
32	01532-04700	BRACKET	1	
33	01532-04800	PEDAL	1	
34	13400-00080	ROD, End	6	#27~#290
35	13400-00080	ROD, End	11	#291 ~
36	13330-02020	BUSHING	2	
37	13330-02015	BUSHING	8	
38	12200-00020	RING, Snap	2	
39	12240-00004	E-RING	2	
40	12140-00005	PIN, Snap	5	
41	12250-00006	WASHER, Wave	1	
42	11000-50822	BOLT	12	
43	11000-50830	BOLT	4	
44	11000-50612	BOLT	4	
45	11000-50635	BOLT	4	
46	11300-50008	NUT	19	
47	11315-50008	NUT	11	#27~#290
48	11315-50008	NUT	6	#291 ~

NOTE For U.S.A. and France

Rev. 00

FIG. 13-1 CONTROL LEVER, OPERATION

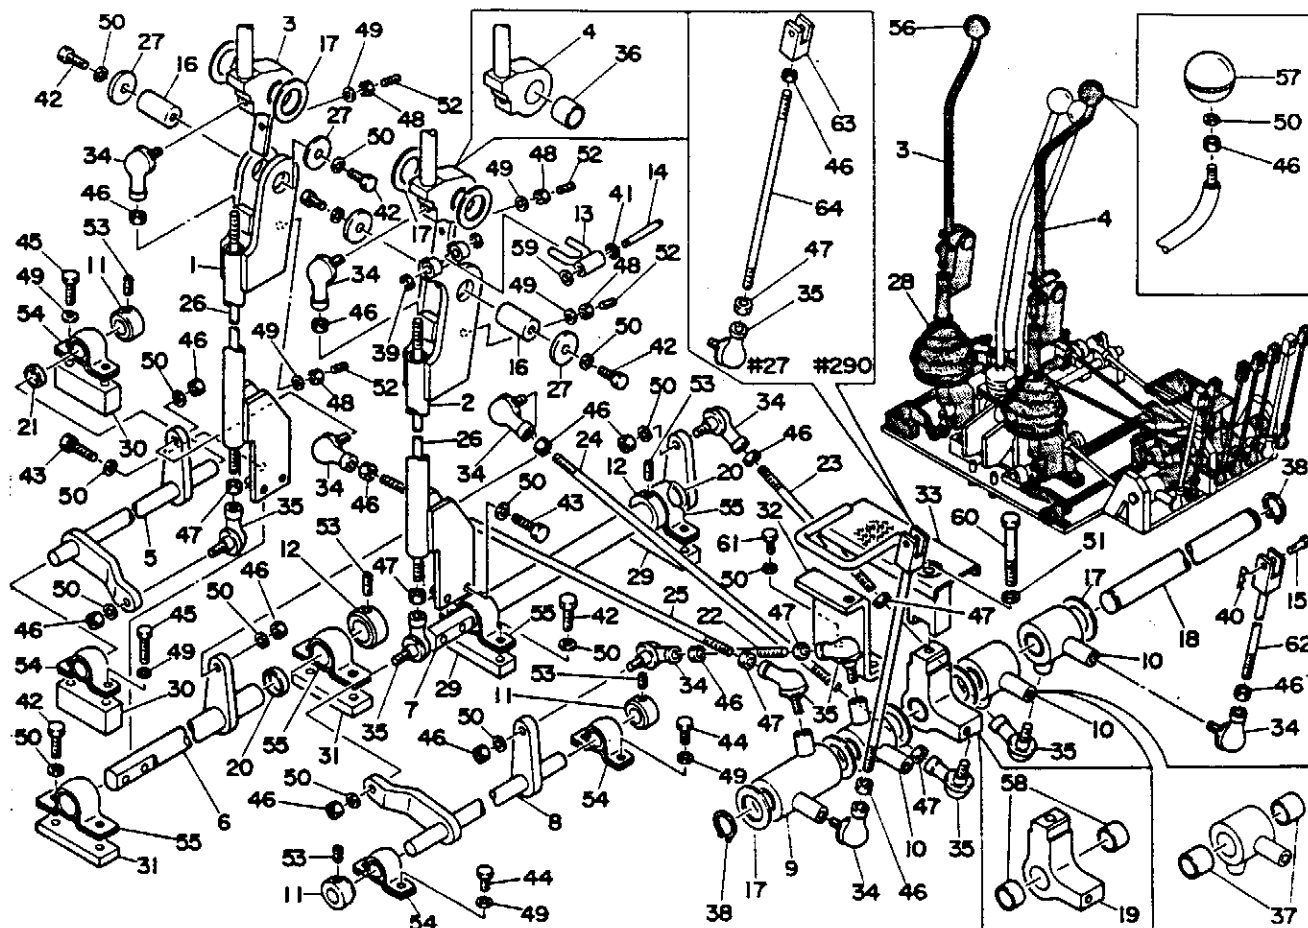


Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
48	11300-50006	NUT	4	
49	11400-10006	WASHER, Spring	12	
50	11400-10008	WASHER, Spring	26	
51	11400-10010	WASHER, Spring	1	
52	11210-50620	SET, Screw	4	
53	11210-50808	SET, Screw	5	
54	13320-01518	MINI-PILLOW	4	
55	13320-02022	MINI-PILLOW	4	
56	16500-03508	GRIP	1	
57	16500-53508	GRIP	1	
58	13330-02012	BUSHING	2	
59	11411-10006	WASHER, Plain	1	
60	11000-51065	BOLT	1	
61	11000-50815	BOLT	2	
62	00053-05275	ROD, Yoke	5	#291 ~
63	00055-05032	YOKER	5	#27~#230
64	00050-08250	ROD	5	#27~#290

NOTE

Item 62 → Item 63 + Item 64 interchangeable

For U.S.A. and France

FIG. 13-2 CONTROL LEVER, OPERATION

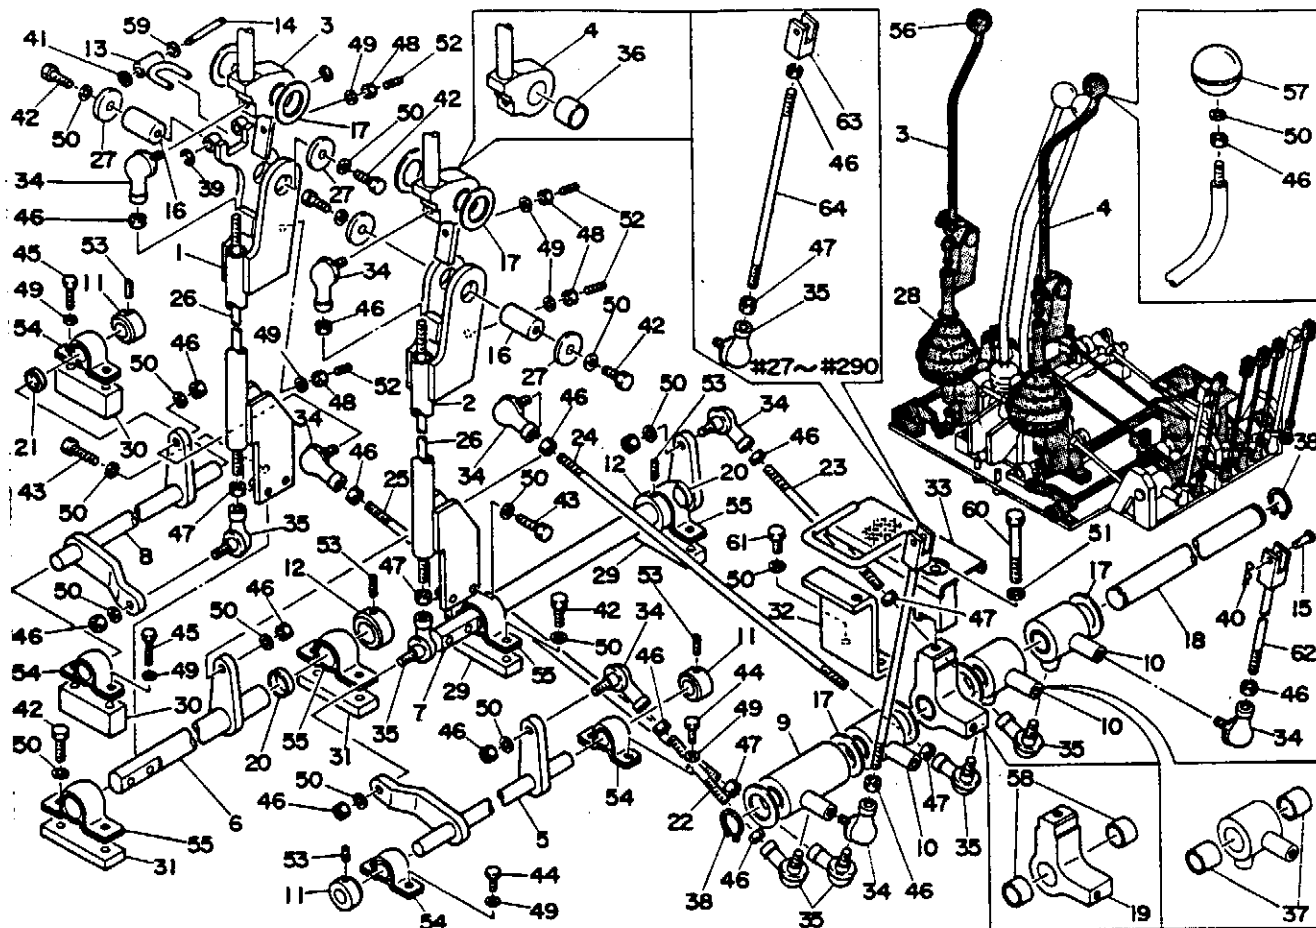

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01532-00200	LEVER (R. H.)	1	
2	01532-10300	LEVER (L. H.)	1	
3	01532-00400	LEVER (R. H.), Operation	1	
4	01532-00500	LEVER (L. H.), Operation	1	
5	01332-10900	LEVER	1	
6	01332-11000	LEVER	1	
7	01332-11300	LEVER	1	
8	01332-11400	LEVER	1	
9	01532-01900	LEVER	1	
10	01532-01800	LEVER	3	
11	01632-08200	STOPPER	3	
12	01632-09400	STOPPER	2	
13	01632-10300	LEVER, Lock	1	
14	00042-00646	PIN	1	
15	00040-05117	PIN	5	
16	01632-16100	PIN	2	
17	01632-16200	WASHER	9	
18	00042-20343	SHAFT, Lever	1	
19	01532-03000	LEVER	1	
20	00030-20005	COLLAR	2	
21	00030-15005	COLLAR	1	
22	00050-08075	ROD	1	
23	00050-08155	ROD	1	
24	00050-08380	ROD	1	
25	00050-08460	ROD	1	

NOTE For China


Rev. 10

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
26	00050-08350	ROD	2	
27	00036-09003	WASHER	4	
28	01632-09800	BOOT	2	
29	01332-14400	SPACER	2	
30	01332-14500	SPACER	2	
31	00062-00001	SPACER	2	
32	01532-04700	BRACKET	1	
33	01532-04800	PEDAL	1	
34	13400-00080	ROD, End	6	#27~#290
35	13400-00080	ROD, End	11	#291 ~
36	13330-02020	BUSHING	2	
37	13330-02015	BUSHING	8	
38	12200-00020	RING, Soap	2	
39	12240-00004	E-RING	2	
40	12140-00005	PIN, Soap	5	
41	12250-00006	WASHER, Wave	1	
42	11000-50822	BOLT	12	
43	11000-50830	BOLT	4	
44	11000-50612	BOLT	4	
45	11000-50635	BOLT	4	
46	11300-50008	NUT	19	
47	11315-50008	NUT	11	#27~#290
48	11315-50008	NUT	6	#291 ~

NOTE For China

Rev. 10

FIG. 13-2 CONTROL LEVER, OPERATION

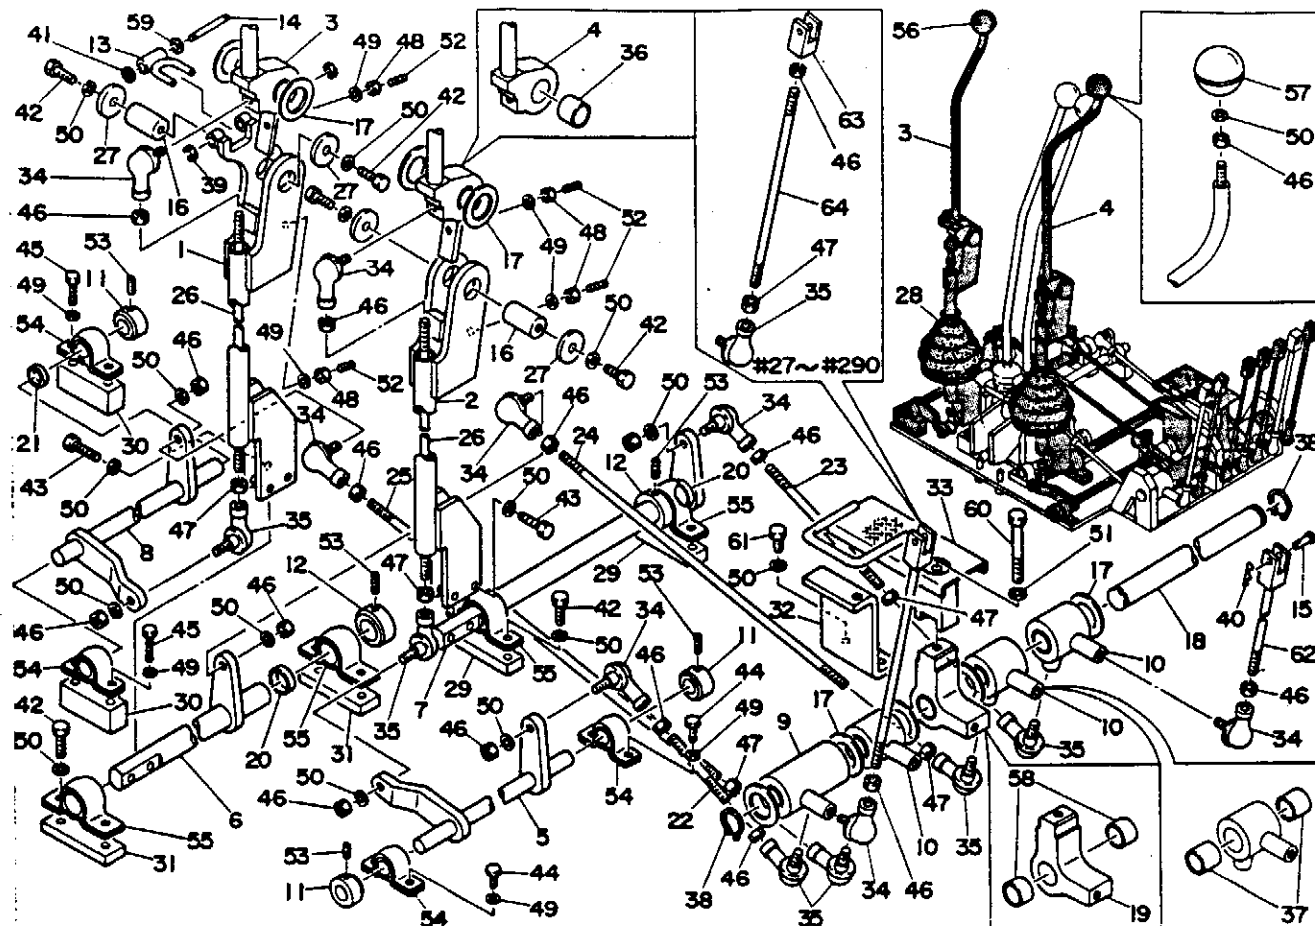


Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
48	11300-50006	NUT	4	
49	11400-10006	WASHER, Spring	12	
50	11400-10008	WASHER, Spring	26	
51	11400-10010	WASHER, Spring	1	
52	11210-50620	SET, Screw	4	
53	11210-50808	SET, Screw	5	
54	13320-01518	MINI-PILLOW	4	
55	13320-02022	MINI-PILLOW	4	
56	16500-03508	GRIP	1	
57	16500-53508	GRIP	1	
58	13330-02012	BUSHING	2	
59	11411-10006	WASHER, Plain	1	
60	11000-51065	BOLT	1	
61	11000-50815	BOLT	2	
62	00053-05275	ROD, Yoke	5	#291 ~
63	00055-05032	YOKE	5	#27~#290
64	00050-08250	ROD	5	#27~#290

NOTE

Item 62 → Item 63+Item 64 ... interchangeable

For China

FIG. 14-1 CONTROL LEVER, BLADE

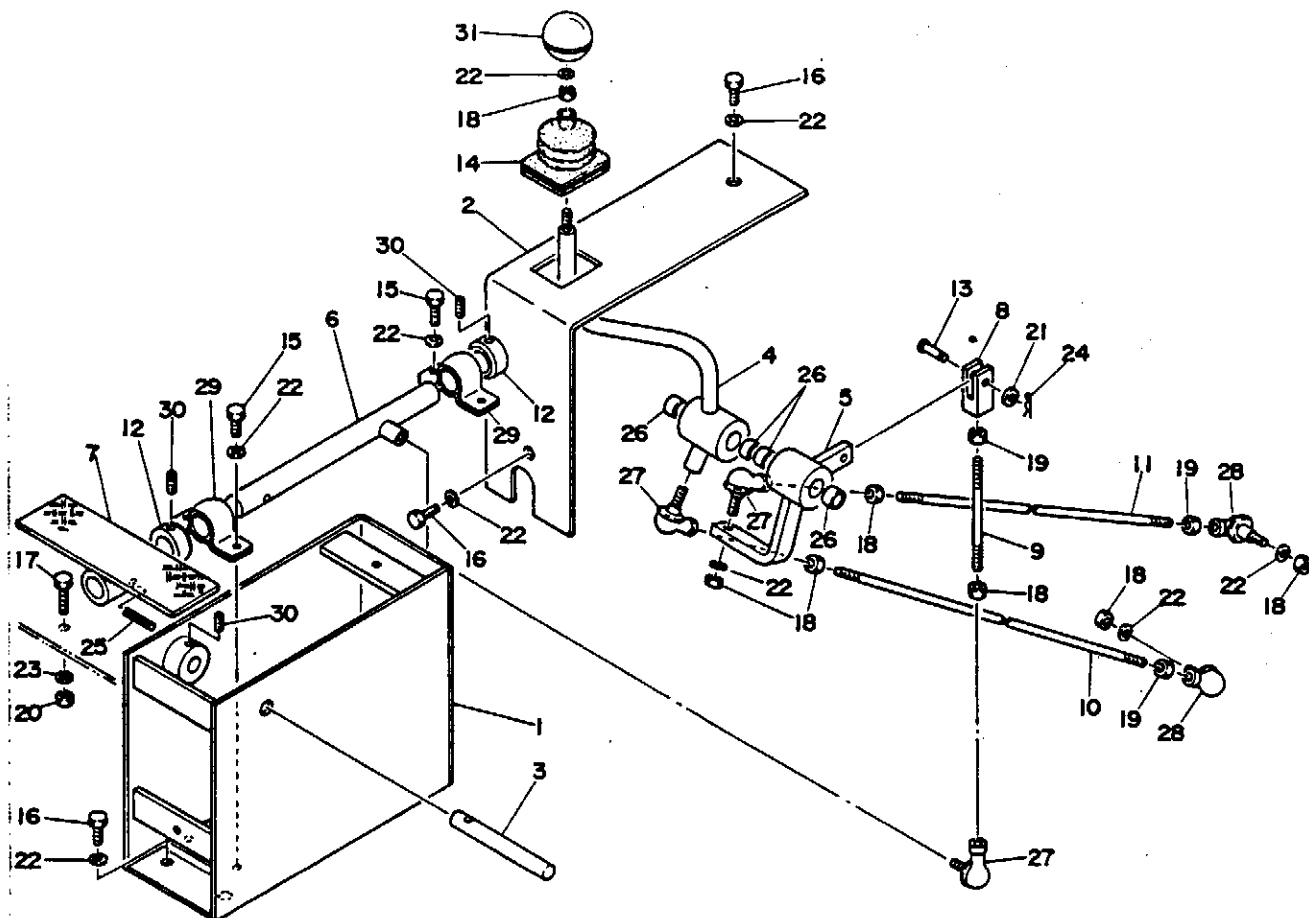


Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	01533-12100	BRACKET	1	
2	01533-12200	COVER	1	
3	01633-00600	SHAFT	1	
4	01533-11600	LEVER	1	
5	01533-11700	LEVER	1	
6	01533-11800	LEVER	1	
7	01533-11500	PEDAL	1	
8	00056-08035	YOKE	1	
9	00050-08120	ROD	1	
10	00050-08410	ROD	1	
11	00050-08440	ROD	1	
12	01632-09400	STOPPER	2	
13	00040-08021	PIN	1	
14	01632-09900	BOOT	1	
15	11000-50812	BOLT	4	
16	11000-50815	BOLT	6	
17	11000-51040	BOLT	2	
18	11300-50008	NUT	7	
19	11315-50008	NUT	3	
20	11300-50010	NUT	2	
21	11411-00008	WASHER, Plain	1	
22	11400-10008	WASHER, Spring	14	
23	11400-10010	WASHER, Spring	2	
24	12140-00008	PIN, Soap	1	
25	12130-00840	PIN, Spring	1	

NOTE For U.S.A #382 ~. For France#253 ~#376.

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
26	13330-01515	BUSHING	4	
27	13400-00080	ROD, End	3	
28	13400-00085	ROD, End	2	
29	13320-02022	MINI-PILLOW	2	
30	11210-50830	SET. Screw	3	
31	16500-53508	GRIP	1	

NOTE For U.S.A #382 ~. For France#253 ~#376.

FIG. 14-2 CONTROL LEVER, BLADE

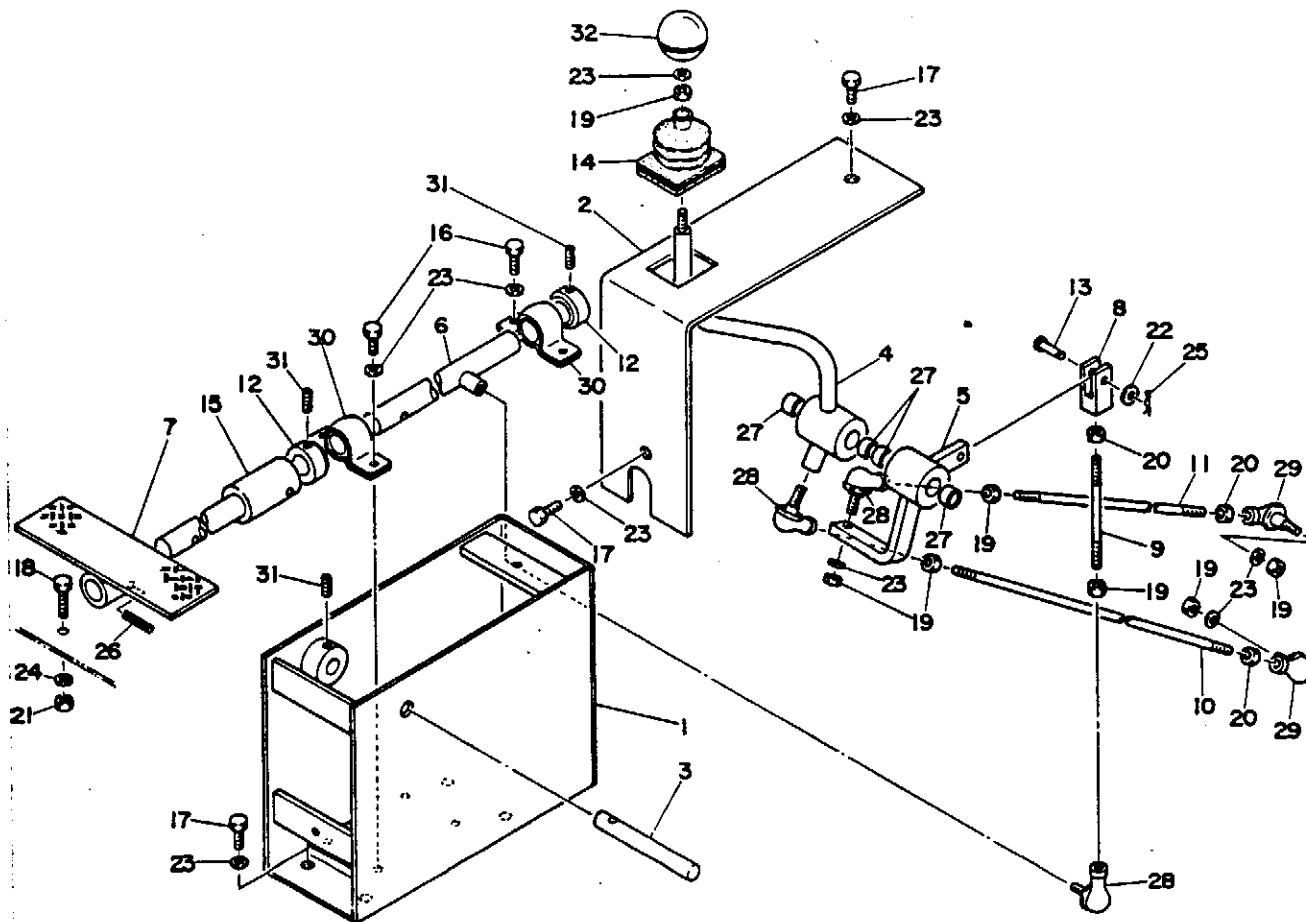

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	01533-12100	BRACKET	1	
2	01533-12200	COVER	1	
3	01533-00600	SHAFT	1	
4	01533-11600	LEVER	1	
5	01533-11700	LEVER	1	
6	01533-11800	LEVER	1	
7	01533-11500	PEDAL	1	
8	00056-08035	YOKE	1	
9	00050-08120	ROD	1	
10	00050-08410	ROD	1	
11	00050-08440	ROD	1	
12	01632-09400	STOPPER	2	
13	00040-08021	PIN	1	
14	01632-09900	BOOT	1	
15	01533-12300	SHAFT, Pedal	1	
16	11000-50812	BOLT	4	
17	11000-50815	BOLT	6	
18	11000-51040	BOLT	2	
19	11300-50008	NUT	7	
20	11315-50008	NUT	3	
21	11300-50010	NUT	2	
22	11411-10008	WASHER, Plain	1	
23	11400-10008	WASHER, Spring	14	
24	11400-10010	WASHER, Spring	2	
25	12140-00008	PIN, Snap	1	

NOTE For France#371 ~.


Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
26	12130-00840	PIN, Spring	2	
27	13330-01515	BUSHING	4	
28	13400-00080	ROD, End	3	
29	13400-00085	ROD, End	2	
30	13320-02022	MINI-PILLOW	2	
31	11210-50830	SET, Screw	3	
32	16500-53508	GRIP	1	

NOTE For France#371 ~.

FIG. 15

ENGINE & ACCESSORIES

Product: Takeuchi TB1200AL Mini Compact Excavator Parts Manual

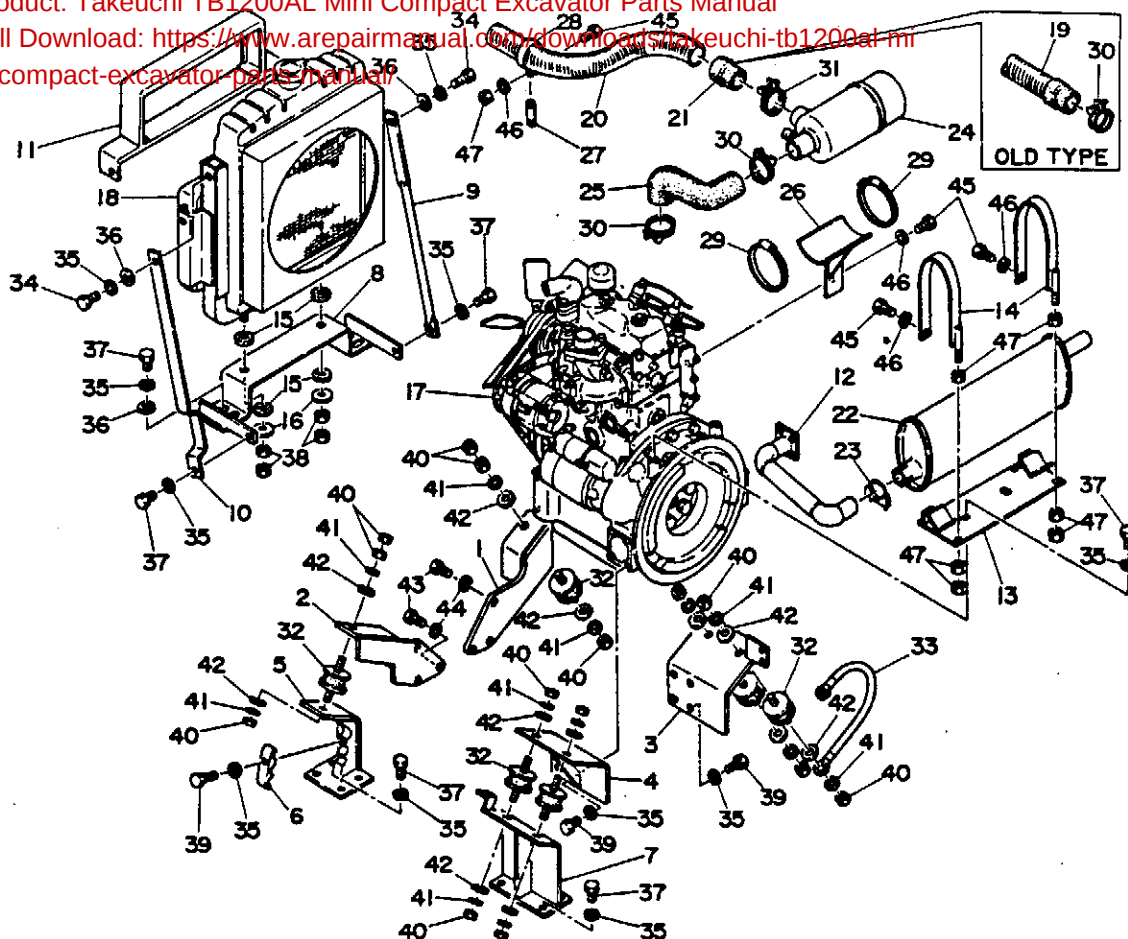Full Download: <https://www.arepairmanual.com/downloads/takeuchi-tb1200al-mini-compact-excavator-parts-manual/>

Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS	Item	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01640-00100	FOOT, Engine	1		24	19100-10006	AIR CLEANER	1	
2	01640-05100	FOOT, Engine	1		25	19100-10007	HOSE	1	
3	01940-00200	FOOT, Engine	1		26	01540-22100	BRACKET	1	
4	01940-00300	FOOT, Engine	1		27	02240-21900	LINK	1	
5	01540-20500	BRACKET	1		28	02240-22000	BRACKET	1	
6	01540-20600	CLAMP	1		29	15337-00127	CLAMP	2	
7	01540-20700	BRACKET	1		30	15330-01055	CLAMP	3	Old Type
8	01540-30800	BRACKET	1			15330-01055	CLAMP	2	New Type
9	01540-21100	STAY	1		31	15330-01058	CLAMP	1	New Type
10	01540-21800	STAY	1		32	16510-10009	RUBBER, Cushion	6	
11	01540-21200	DUCT	1		33	17024-01180	CABLE, Earth	1	
12	01940-00600	JOINT	1		34	11010-41020	BOLT	2	
13	01540-21400	BRACKET	1		35	11400-20010	WASHER, Spring	27	
14	01640-07700	BAND, Mounting	2		36	11415-40010	WASHER	6	
15	01540-21600	RUBBER	4		37	11000-41025	BOLT	16	
16	01540-21700	WASHER	2		38	11305-40010	NUT	4	
17	19100-10000	ENGINE	1		39	11000-41030	BOLT	9	
18	19100-10004	RADIATOR ASSY	1		40	11300-40012	NUT	14	
19	01540-22000	HOSE	1	Old Type	41	11400-20012	WASHER, Spring	12	
20	15670-05065	HOSE ASSY	1	New Type	42	11411-10012	WASHER, Plain	12	
21	15670-15065	*HOSE	1	New Type	43	11000-41435	BOLT	6	
22	19110-00100	MUFFLER	1	New Type	44	11400-20014	WASHER, Spring	6	
23	15333-00045	U-BOLT ASSY	1		45	11000-40815	BOLT	5	
					46	11400-20008	WASHER, Spring	5	
					47	11300-40008	NUT	7	