

**TB-35S**

Product: Takeuchi TB35S Mini Compact Excavator Parts Manual  
Full Download: <https://www.arepairmanual.com/downloads/takeuchi-tb35s-mini-compact-excavator-parts-manual/>

228-21

Sample of manual. Download All 190 pages at:  
<https://www.arepairmanual.com/downloads/takeuchi-tb35s-mini-compact-excavator-parts-manual/>


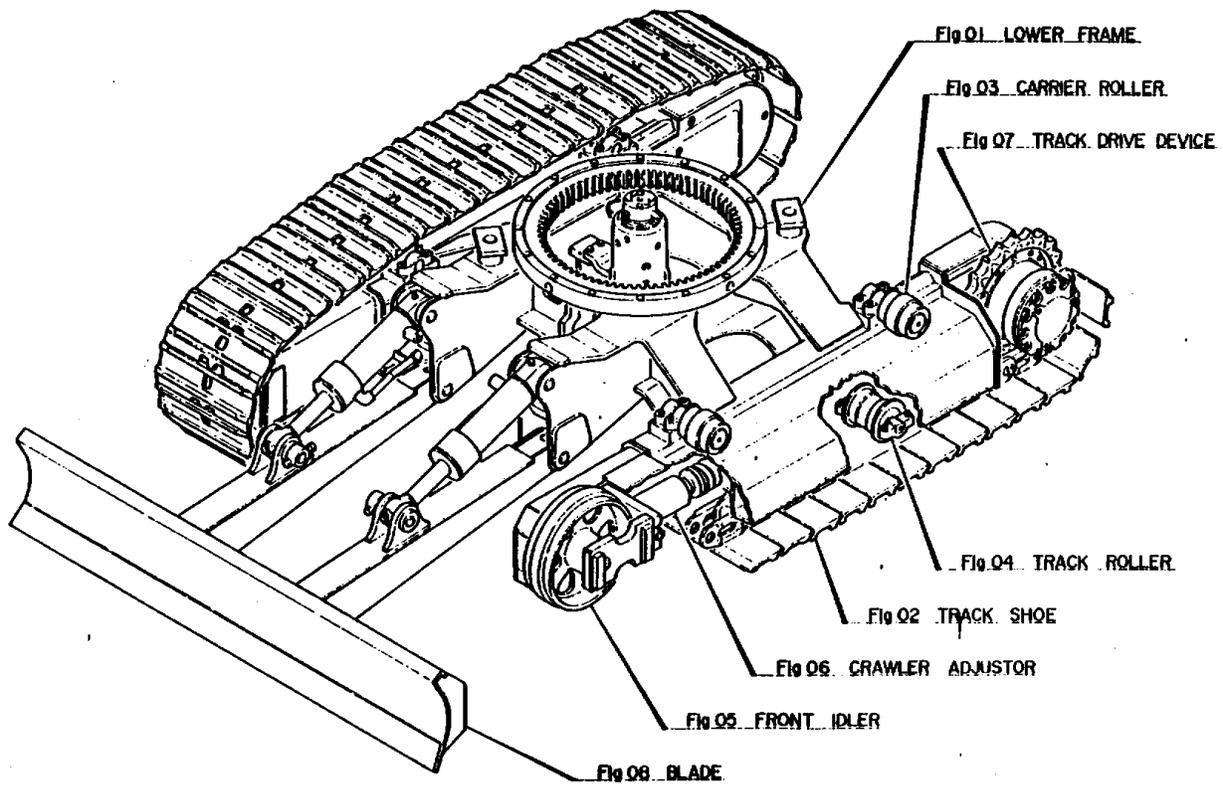


FIG.01 LOWER FRAME

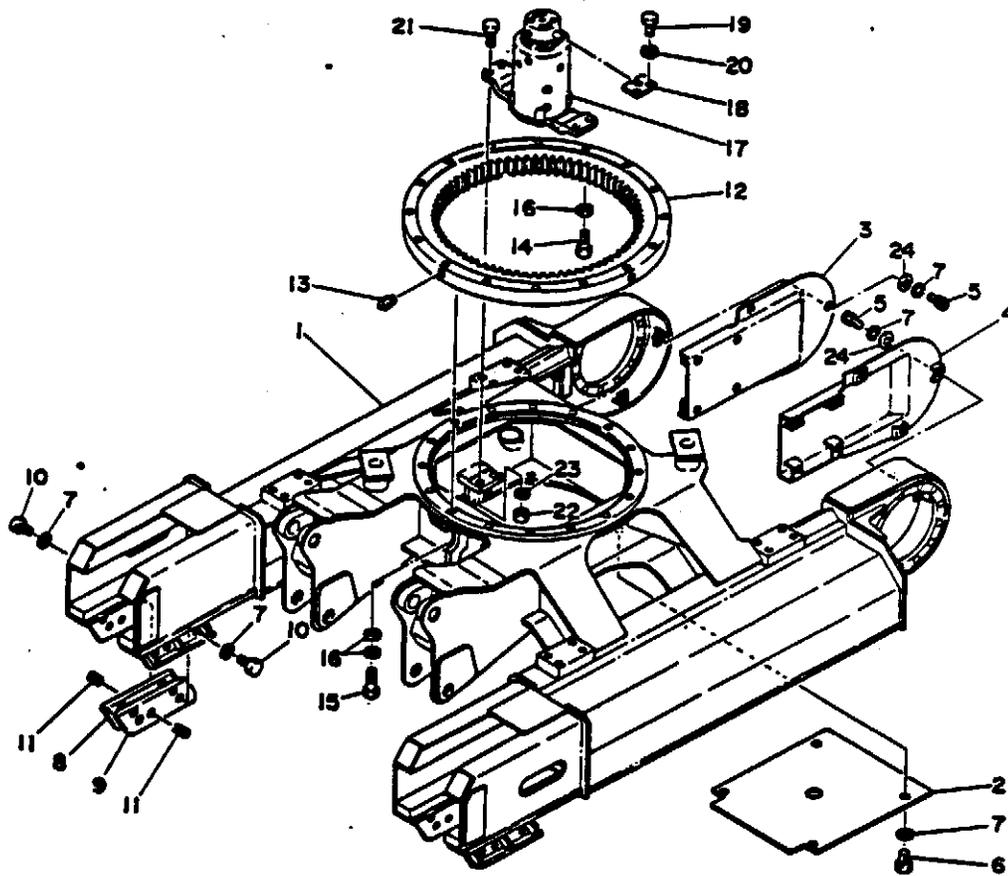

QTY	PARTS NUMBER	DESCRIPTION	REMARKS	QTY	PARTS NUMBER	DESCRIPTION	REMARKS
1	01410-56100	FRAME		2	11415-40016	WASHER	
2	01210-01100	COVER					
3	01410-54900	COVER (R. ID)					
4	01410-55000	COVER (L. ID)					
5	11100-51016	BOLT, Socket					
6	11000-51020	BOLT					
7	11400-10010	WASHER, Spring					
8	01410-53400	GUIDE (R. ID)					
9	01410-53600	GUIDE (L. ID)					
10	11000-51025	BOLT					
11	12130-01025	PIN, Spring					
12	19130-23000	BEARING, Slow					
13	15600-11000	SHIMPLE, Grease					
14	11010-51260	BOLT					
15	11000-51260	BOLT					
16	11415-40012	WASHER					
17	19040-02400	JOINT, Swivel	570-512				
	19040-03300	JOINT, Swivel	512-520				
	19040-04100	JOINT, Swivel	520-				
18	11321-00100	STOPPER					
19	11010-51430	BOLT					
20	11415-40014	WASHER					
21	11010-51240	BOLT					
22	11305-50012	NUT					
23	11400-10012	WASHER, Spring					


NOTE  
512 -

NOTE 512 -

512 -

512 -

FIG.02 TRACK SHOE

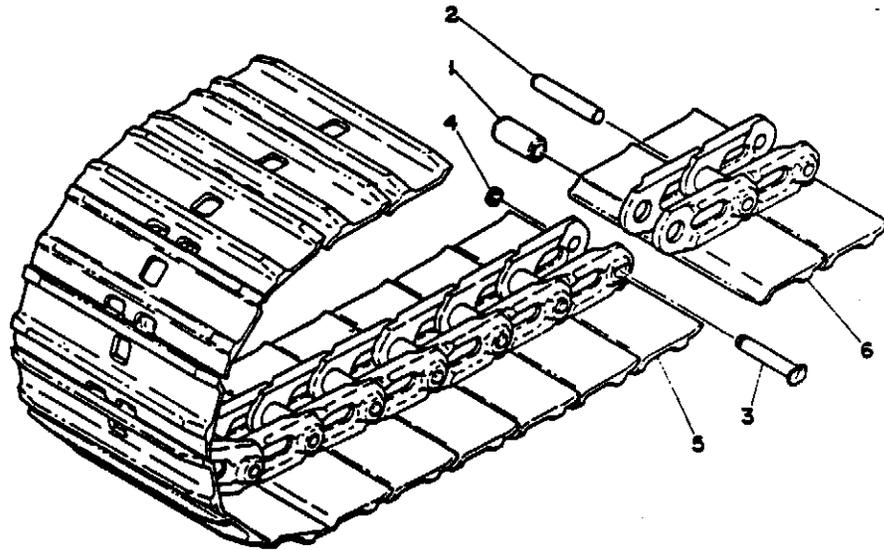


QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
	15700			
01	19140-15100	SHOE ASSY. Track	1	0190-0200
02	19140-15200	SHOE ASSY. Track	1	0220-
1	19140-00203	*BUSHING	4	
2	19140-00209	*PIN. Track	4	
3	19140-14000	*PIN. Master	1	
4	12255-28019	*SPRO-LOX	1	
5	19140-15114	*PLATE ASSY. Master	1	0190-0200
	19140-15214	*PLATE ASSY. Master	1	0220-
6	19140-15013	*PLATE ASSY	4	0190-0200
	19140-15213	*PLATE ASSY	4	0220-

NOTE

0190 -


FIG.03 CARRIER ROLLER

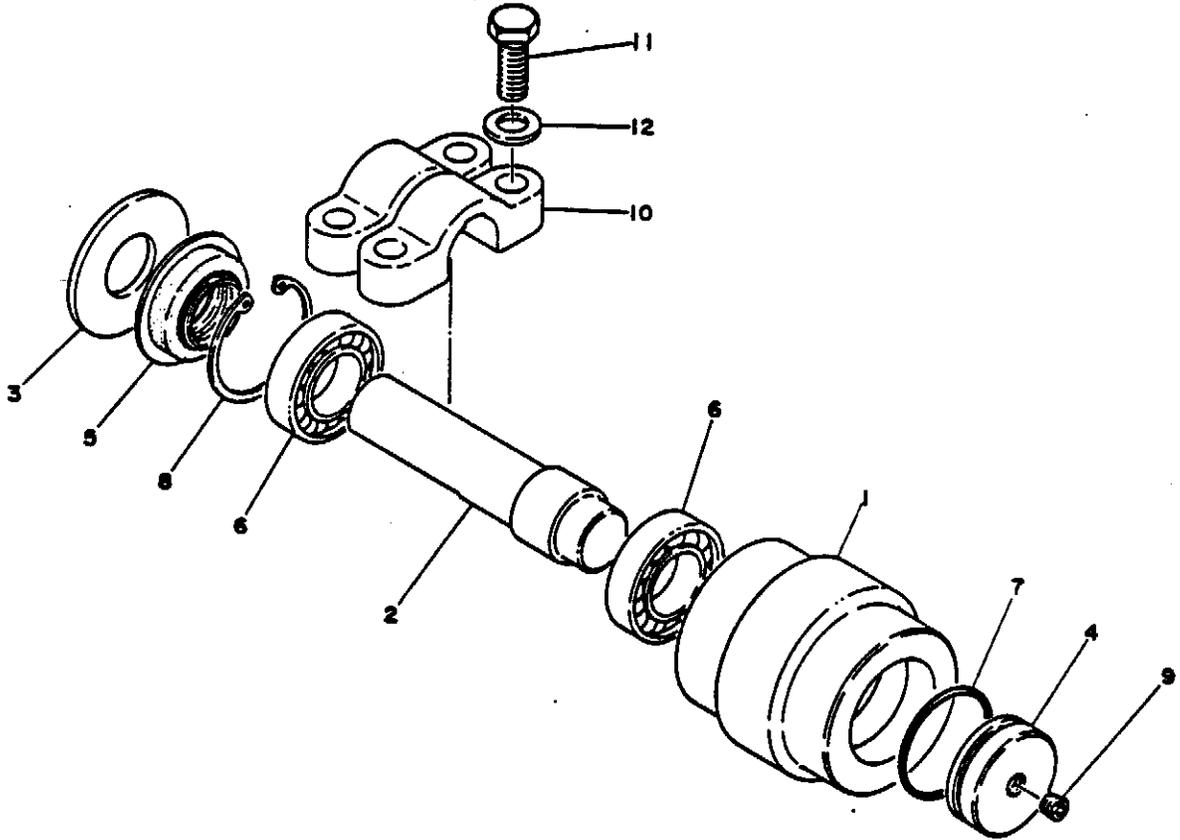

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
01	01412-00000	ROLLER ASSY. Carrier	4	
1	01412-01100	ROLLER	1	
2	01412-01200	SHAFT	1	
3	01412-01300	COVER	1	
4	01712-00400	COVER	1	
5	14312-03002	SEAL Oil	1	
6	13000-05205	BEARING	2	
7	14201-00500	O-RING	1	
8	12210-00002	RING Snap	1	
9	15010-20001	PLUG	1	
10	01613-00300	BRACKET	8	
11	11010-51225	BOLT	8	
12	11415-40012	WASHER	8	


NOTE  
87-

FIG.04 TRACK ROLLER

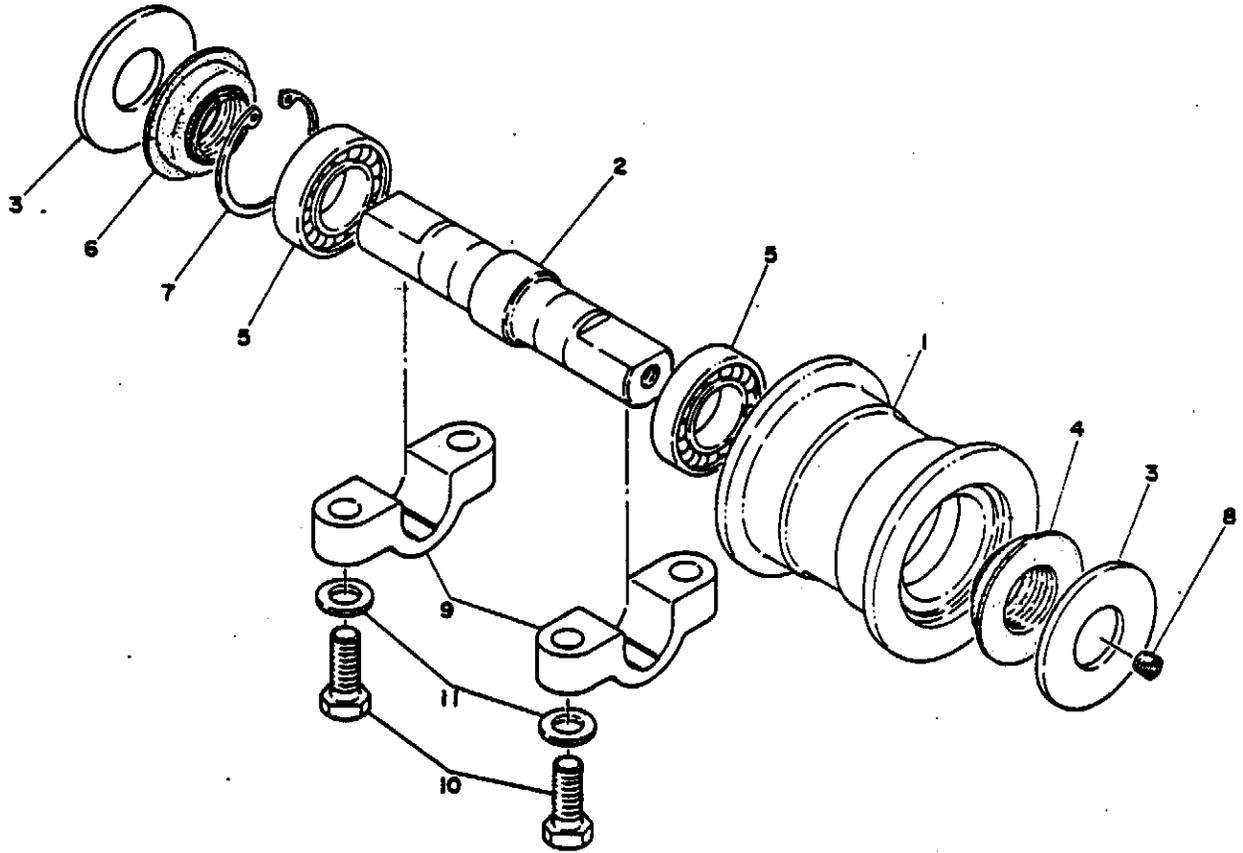


QTY	PARTS NUMBER	DESCRIPTION	REMARKS
01	01413-90000	ROLLER ASSY. Track	0
1	01413-01100	ROLLER	1
2	01413-01200	SHAFT	1
3	01412-01300	COVER	2
4	14312-02055	SEAL OIL	1
5	13000-06200	BEARING	2
6	14312-03062	SEAL OIL	1
7	12210-00002	RING Snap	1
8	15010-20001	PLUG	1
9	01013-00300	BRACKET	2
10	11010-51235	BOLT	0
11	11415-40012	WASHER	0

FIG.05 FRONT IDLER

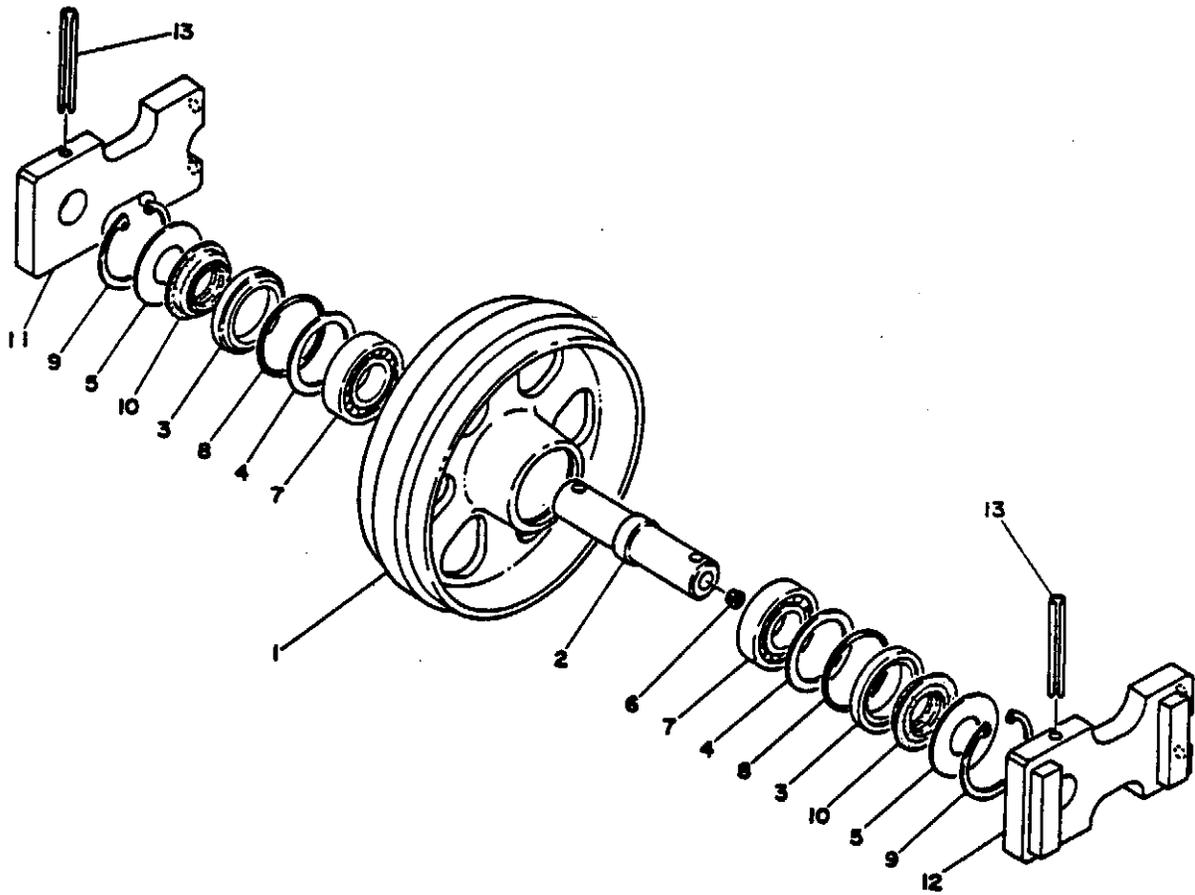


QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
01	01414-90000	IDLER ASSY. Front	2	
1	01414-00100	IDLER	1	
2	01414-00200	SHAFT	1	
3	01614-15000	COLLAR	2	
4	01614-16300	WASHER	2	
5	00036-26002	WASHER	2	
6	15010-20001	PLUG	1	
7	13000-00307	BEARING	2	
8	14200-10700	O-RING	2	
9	12210-00000	WRING Snap	2	
10	14312-03502	SEAL OIL	2	
11	01414-00300	BLOCK (R. H)	2	
12	01414-00400	BLOCK (L. H)	2	
13	12131-01010	PIN Spring	4	

FIG.06 TRACK TENSION

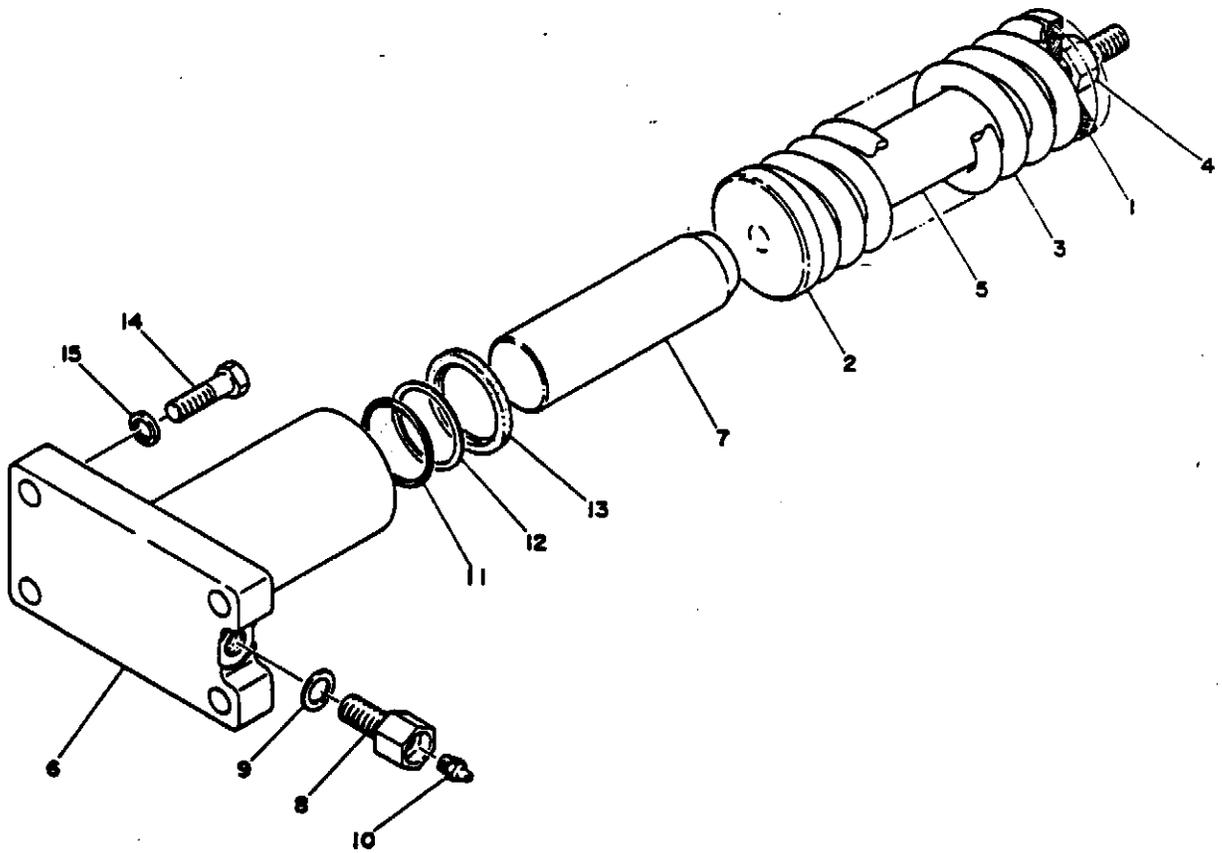


Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
0-1	01315-90200	CUSHION ASSY	2	
1	01715-00500	WSEAT. Spring	1	
2	01715-10600	WROD ASSY	1	
3	00070-00004	WSPRING	1	
4	11300-20020	WNUT	1	
5	01315-01700	WPIPE	1	
6	02615-00100	CYLINDER. Grease	2	
7	02215-20300	PISTON	2	
8	15413-01601	VALVE ASSY. Check	2	
9	15412-01616	PACKING	2	
10	15600-01000	NIPPLE. Grease	2	
11	14200-10500	O-RING	2	
12	14210-20500	RING. Back-up	2	
13	14004-02035	SEAL. OIL	2	
14	11010-51245	BOLT	8	
15	11400-00012	WASHER. Spring	8	

FIG.07 TRACK GEARBOX

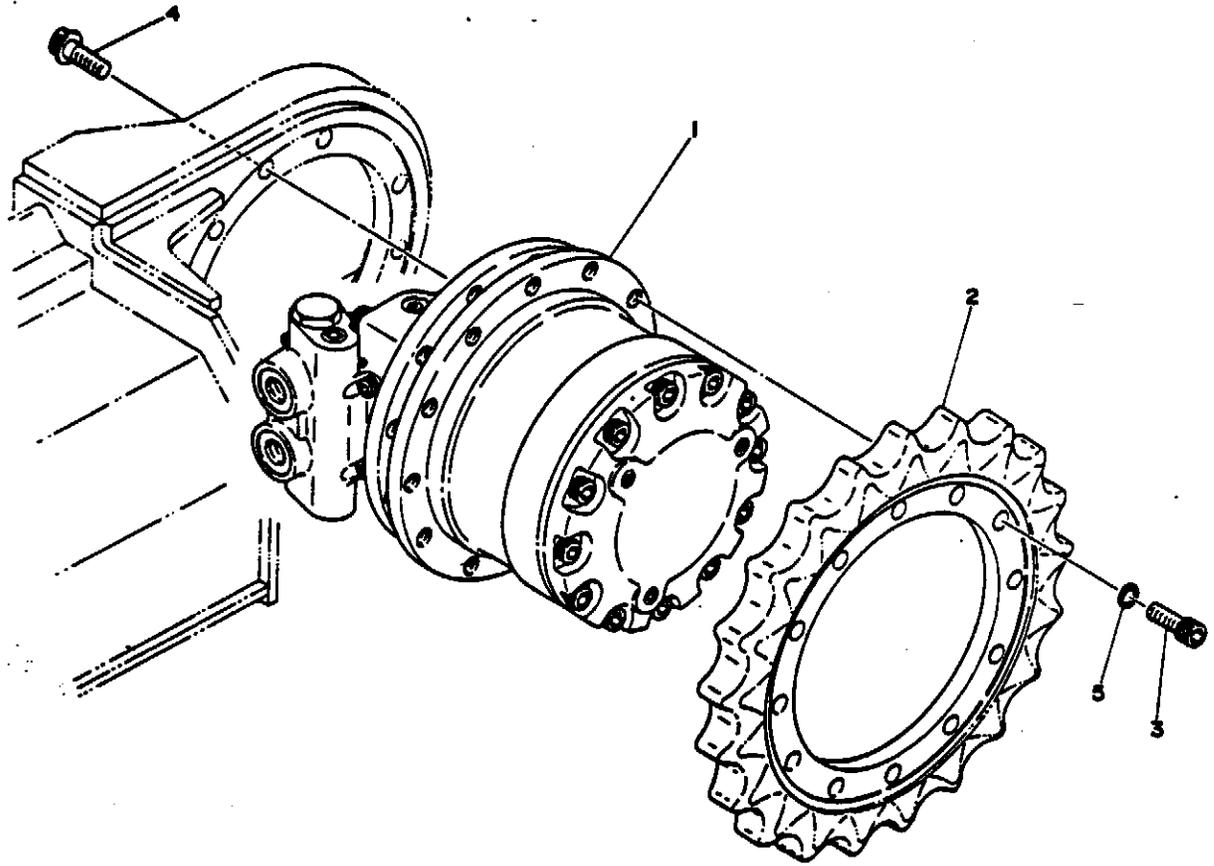


PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	19838-02988 MOTOR ASSY. Traction	1	
2	81416-54100 SPROCKET	1	
3	11100-81230 BOLT. Socket	2	
4	11115-51235 BOLT. Socket	2	SIZE -
5	11400-10012 WASHER. Spring	2	

FIG.08 BLADE

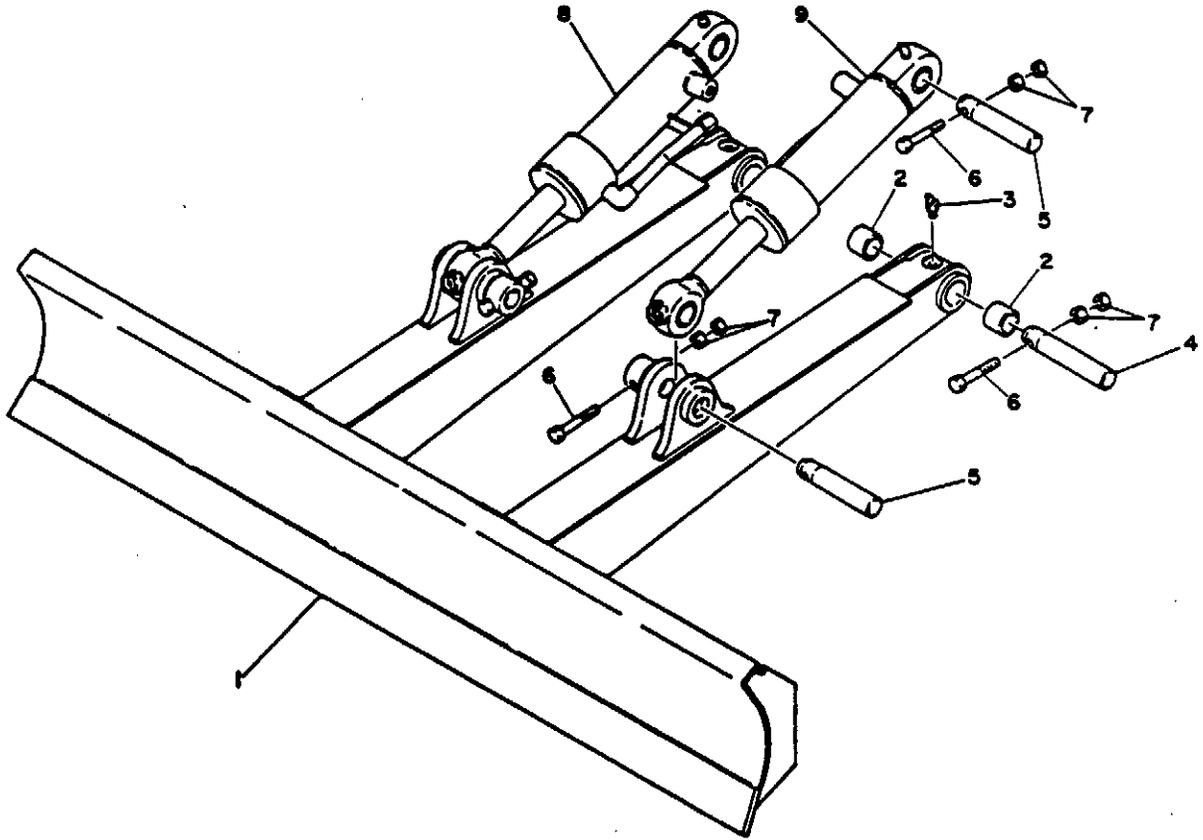


QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
01	01463-90000	BLADE ASSY	1	
1	01463-31200	BLADE	1	
2	00020-30030	BUSHING	4	
3	15000-01075	NIPPLE Grease	2	
4	01363-00200	PIN	2	
5	01363-00300	PIN	4	
6	11000-51070	BOLT	6	
7	11300-50010	NUT	12	
8	19000-12400	CYLINDER ASSY (RM)	1	
9	19000-12500	CYLINDER ASSY (LD)	1	

FIG.09-1 PIPING, LOWER

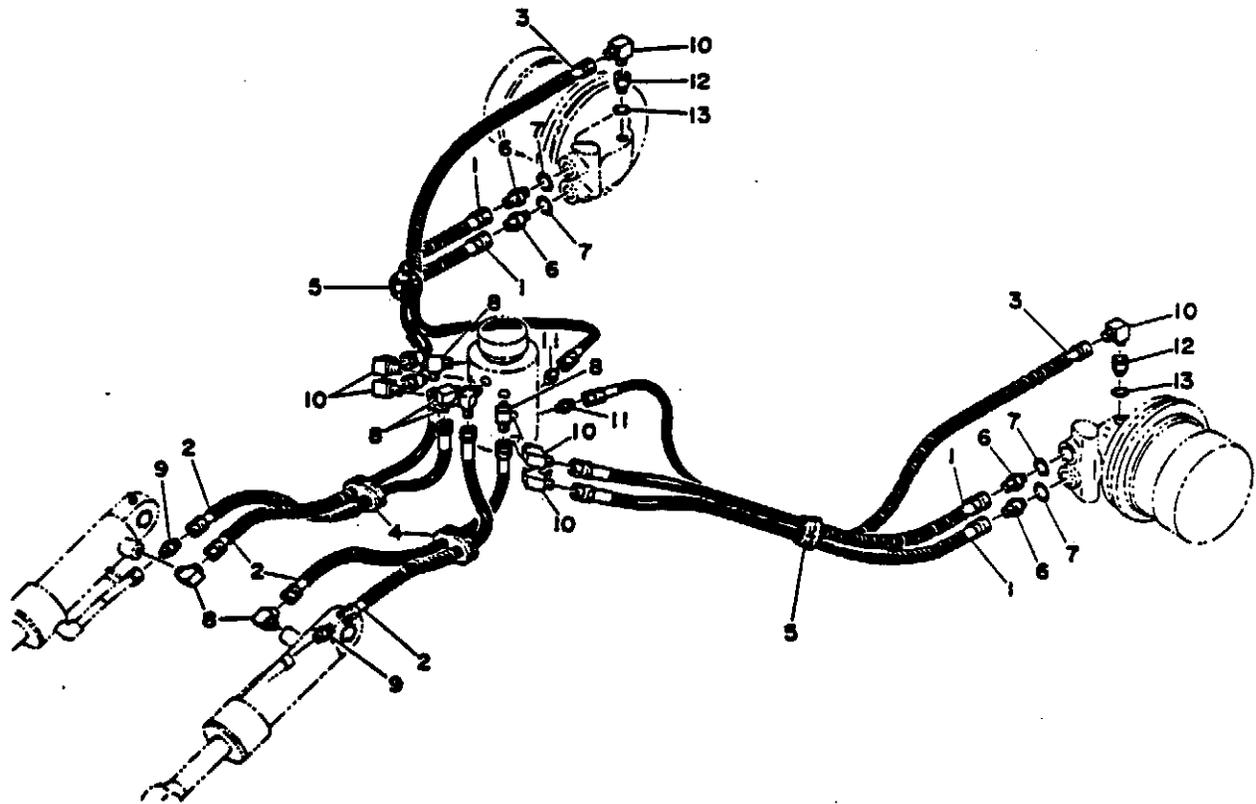

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
	1	19086-12085 HOSE ASSY	4	
	2	19086-09070 HOSE ASSY	4	
	3	19095-06092 HOSE ASSY	2	
	4	00972-10300 GUARD	2	
	5	01772-25100 GUARD	2	
	6	15131-00016 ADAPTOR	4	
	7	14203-10908 O-RING	4	
	8	15111-00002 ELBOW, 90°	6	
	9	15110-00002 ADAPTOR	2	
	10	15111-00004 ELBOW, 90°	6	
	11	15110-00002 ADAPTOR	2	
	12	15134-00001 ADAPTOR	2	
	13	14200-10140 O-RING	2	

FIG.09-2 PIPING, LOWER

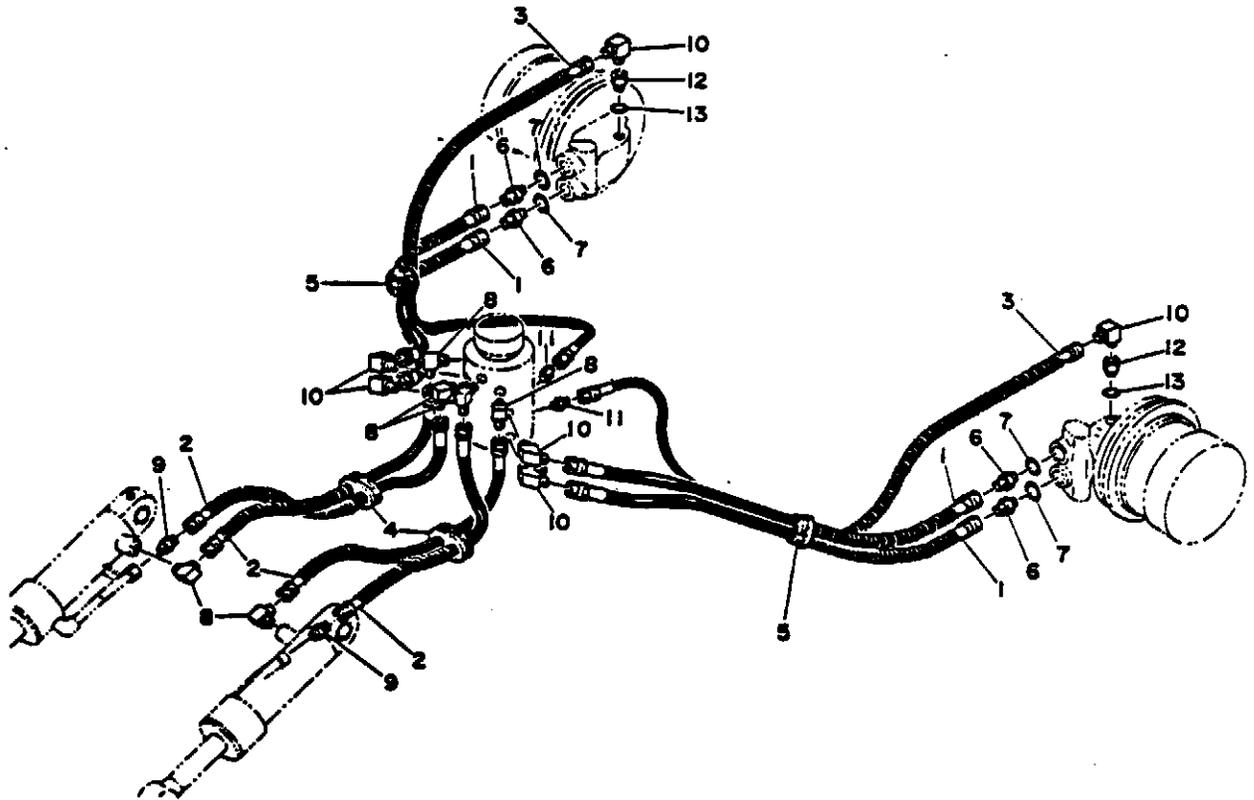


Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
	1	19086-12005 NOSE ASSY	4	
	2	19088-03070 NOSE ASSY	4	
	3	19095-06000 NOSE ASSY	2	
	4	01472-56100 GUARD	2	
	5	01772-25100 GUARD	2	
	6	15131-00016 ADAPTOR	4	
	7	14203-10900 O-RING	4	
	8	15111-00003 ELBOW, 90°	6	
	9	15110-00003 ADAPTOR	2	
	10	15111-00004 ELBOW, 90°	6	
	11	15110-00002 ADAPTOR	2	
	12	15114-00001 ADAPTOR	2	
	13	14200-10140 O-RING	2	

NOTE

SEE - for Details

FIG. 2


FIG.10-1 SLEW GEARBOX

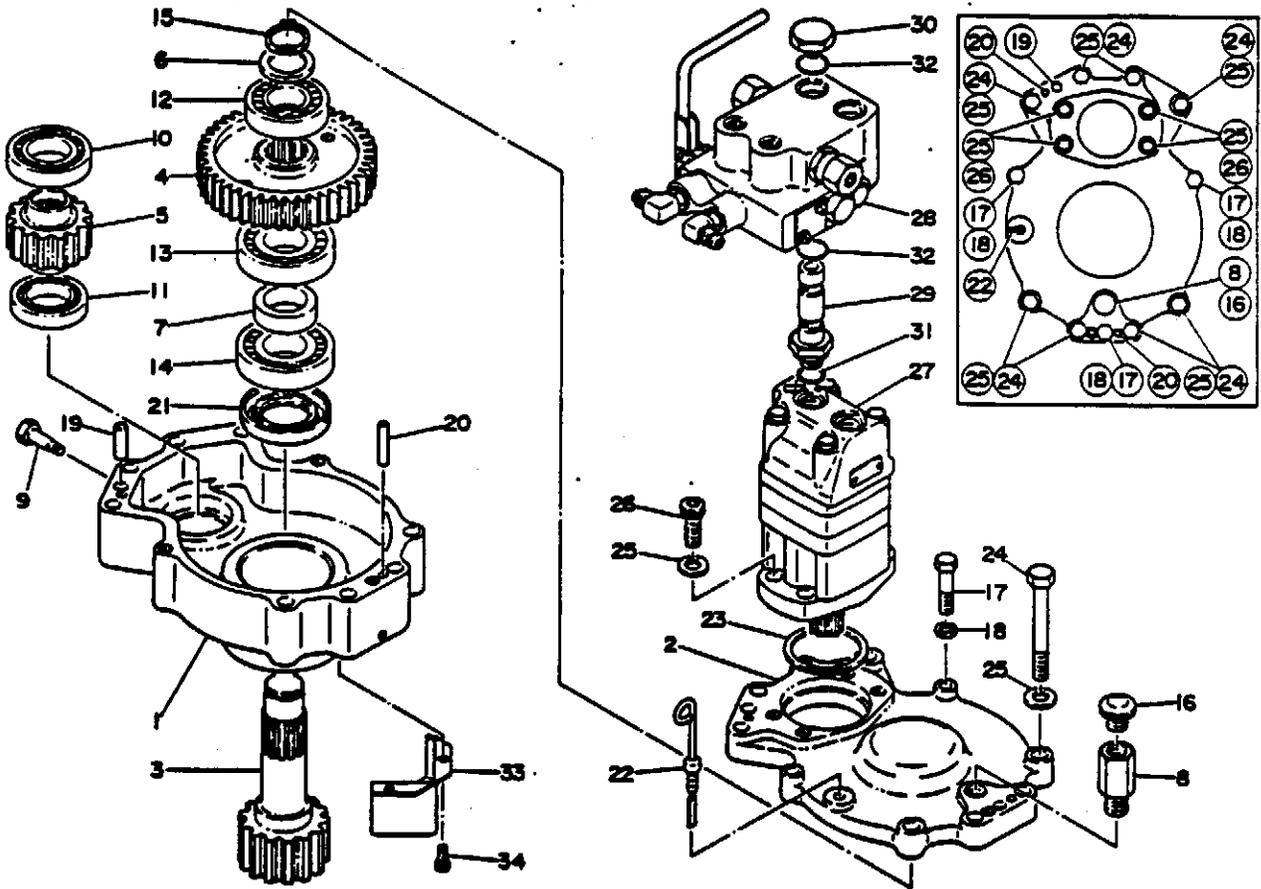

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	01123-00100	GEARBOX ASSY	1	
1	01423-10100	*CASE	1	
2	01423-00200	*COVER	1	
3	01123-20300	*PINION	1	
4	01423-00500	*GEAR	1	
5	01423-10000	*GEAR	1	
6	00030-35500	*WASHER	1	
7	00030-41000	*COLLAR	1	
8	00072-00012	*BUSHING	1	
9	01300-10700	*PLUG	1	
10	13000-00200	*BEARING	1	
11	13000-00000	*BEARING	1	
12	13001-00307	*BEARING	1	
13	13000-00300	*BEARING	1	
14	13000-00300	*BEARING	1	
15	12200-00033	*RING, Snap	1	
16	15540-00004	*CAP. OIL	1	
17	11000-51050	*BOLT	3	
18	11400-10010	*WASHER, Spring	3	
19	12120-01030	*PIN, Dowel	1	
20	12120-00045	*PIN, Dowel	2	
21	14002-02007	*SEAL, OIL	1	
22	15531-10403	*GAUGE	1	
23	00030-00007	*WASHER	1	
24	11011-51210	*BOLT	2	

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
25	11415-00012	WASHER	2	
26	11110-51235	BOLT, Socket	4	
27	19030-04100	MOTOR ASSY	1	
28	19017-02500	VALVE	1	
29	00072-00010	FITTING	2	
30	00072-00009	PLUG	2	
31	14203-10910	O-RING	2	
32	14200-10250	O-RING	4	
33	01423-17100	COVER	1	30-
34	11100-50614	BOLT, Socket	2	


FIG.10-2 SLEW GEARBOX

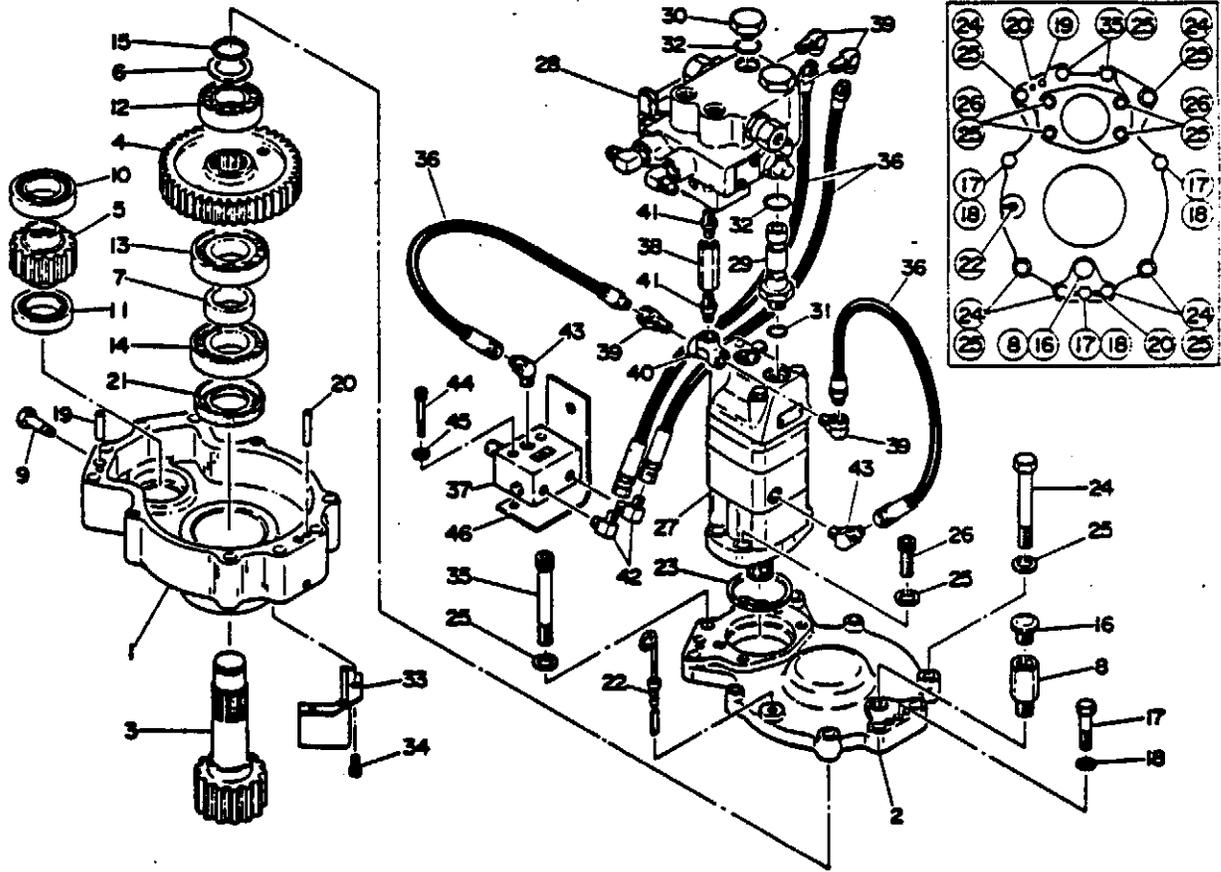

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS	QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
01	01123-00100	GEARBOX ASSY	1		25	11415-40012	WASHER	12	
1	01423-10100	*CASE	1		26	11110-51235	BOLT, Socket	4	
2	01423-00200	*COVER	1		27	19030-06000	MOTOR ASSY	1	
3	01123-20300	*PINION	1		28	19017-05000	VALVE	1	
4	01423-00500	*GEAR	1		29	00072-00010	FITTING	2	
5	01423-10600	*GEAR	1		30	00072-00000	PLUG	2	
6	00036-35505	*WASHER	1		31	14203-10910	O-RING	2	
7	00030-41020	*COLLAR	1		32	14200-10250	O-RING	4	
8	00072-00012	*BUSHING	1		33	01423-17100	COVER	1	
9	01300-10700	*PLUG	1		34	11100-50614	BOLT, Socket	2	
10	13000-00200	*BEARING	1		35	11111-51210	BOLT, Socket	2	
11	13000-00000	*BEARING	1		36	19000-02040	NOSE ASSY	4	
12	13001-00307	*BEARING	1		37	19017-05300	VALVE, Shuttle & Relief	1	
13	13000-00200	*BEARING	1		38	15401-00050	VALVE, Check	1	
14	13000-99300	*BEARING	1		39	15013-00002	ELBOW, 90°	4	
15	12200-00035	*RING, Snap	1		40	15012-00002	TEE	1	
16	15540-00004	*CAP, Oil	1		41	15015-00002	CONNECTOR	2	
17	11000-51050	*BOLT	3		42	15111-00002	ELBOW, 90°	2	
18	11400-10010	*WASHER, Spring	3		43	15112-00002	ELBOW, 45°	2	
19	12120-01030	*PIN, Dowel	1		44	11000-40055	BOLT	2	
20	12120-00045	*PIN, Dowel	2		45	11400-10000	WASHER, Spring	2	
21	14002-02007	*SEAL, Oil	1		46	01423-20600	BRACKET	1	
22	15531-12403	*GAUGE	1						
23	00036-00007	*WASHER	1						
24	11011-51210	*BOLT	6						

NOTE 017 - for Slew


FIG.10-3 SLEW GEARBOX

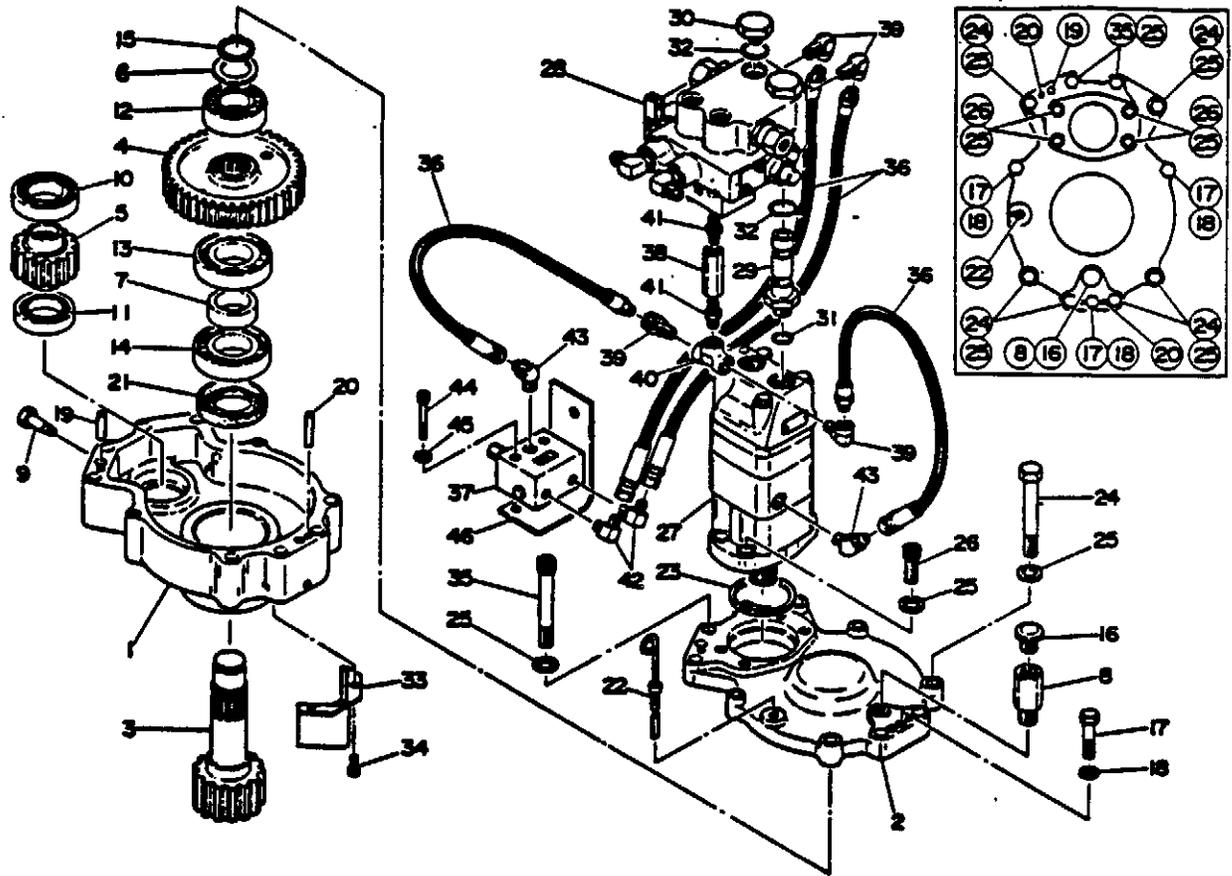

Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS	Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01123-90100	GEARBOX ASSY	1		25	11415-40012	WASHER	25	
1	01423-16100	*CASE	1		26	11110-51235	BOLT, Socket	4	
2	01423-00300	*COVER	1		27	19030-00000	MOTOR ASSY	1	
3	01123-20300	*PINION	1		28	19017-00000	VALVE	1	
4	01423-00500	*GEAR	1		29	00072-00010	FITTING	2	
5	01423-10000	*GEAR	1		30	00072-00009	PLUG	2	
6	00036-35505	*WASHER	1		31	14203-10910	O-RING	2	
7	00030-41020	*COLLAR	1		32	14200-10250	O-RING	4	
8	00073-00012	*BUSHING	1		33	01423-17100	COVER	1	
9	01320-10700	*PLUG	1		34	11100-50014	BOLT, Socket	2	
10	13000-00200	*BEARING	1		35	11111-51210	BOLT, Socket	2	
11	13000-00000	*BEARING	1		36	19000-00040	NOSE ASSY	4	
12	13001-00307	*BEARING	1		37	19017-05300	VALVE, Shuttle & Relief	1	
13	13000-00300	*BEARING	1		38	15401-00059	VALVE, Check	1	
14	13000-00300	*BEARING	1		39	15013-00002	ELBOW, 90°	4	
15	12200-00035	*RING, Snap	1		40	15012-00002	TEE	1	
16	15540-00004	*CAP, Oil	1		41	15015-00002	CONNECTOR	2	
17	11000-51050	*BOLT	3		42	15111-00002	ELBOW, 90°	2	
18	11400-10010	*WASHER, Spring	2		43	15112-00002	ELBOW, 45°	2	
19	12120-01030	*PIN, Dowel	1		44	11000-40035	BOLT	2	
20	12120-00045	*PIN, Dowel	2		45	11400-10000	WASHER, Spring	2	
21	14002-02007	*SEAL, Oil	1		46	01423-20000	BRACKET	1	
22	15531-12403	*GAUGE	1						
23	00036-00007	*WASHER	1						
24	11011-51210	*BOLT	6						


NOTE 015 ~ For Motor

FIG.11-1 TURNTABLE

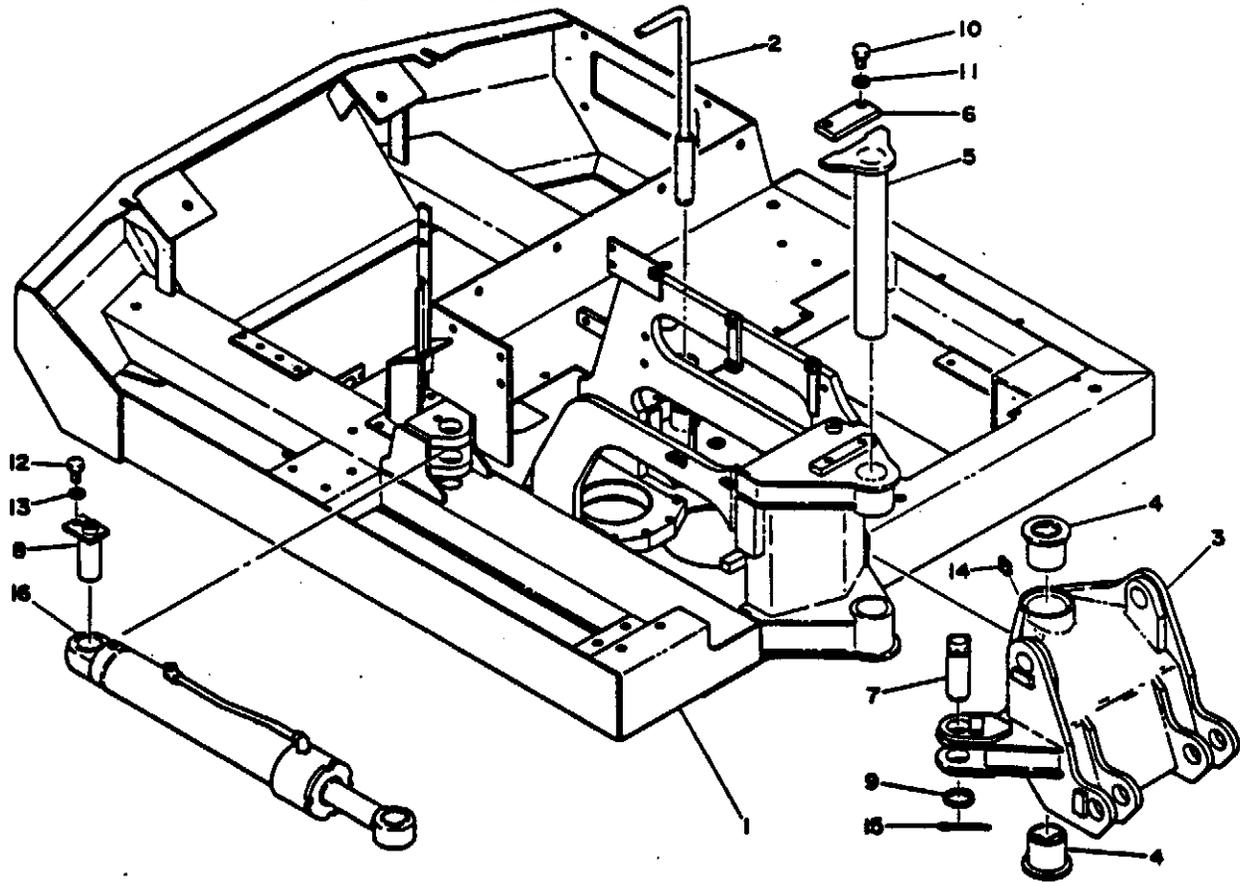

Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01430-50000	TURNTABLE	1	
2	01432-00100	PIN, Lock	1	
01	01331-00000	BRACKET ASSY, Boom	1	
3	01331-40100	BRACKET, Boom	1	
4	00026-55070	BUSHING	2	
5	00015-00015	SHAFT	1	
6	01331-10200	PLATE	1	
7	00010-40111	PIN	1	
8	00015-00005	PIN	1	
9	00030-40005	COLLAR	2	
10	11010-41225	BOLT	2	
11	11400-10012	WASHER, Spring	2	
12	11000-41030	BOLT	1	
13	11400-10010	WASHER, Spring	1	
14	15000-01000	NIPPLE, Grease	1	
15	12100-00000	PIN, Split	1	
16	19000-00100	CYLINDER, Swing	1	

FIG.11-2 TURNTABLE

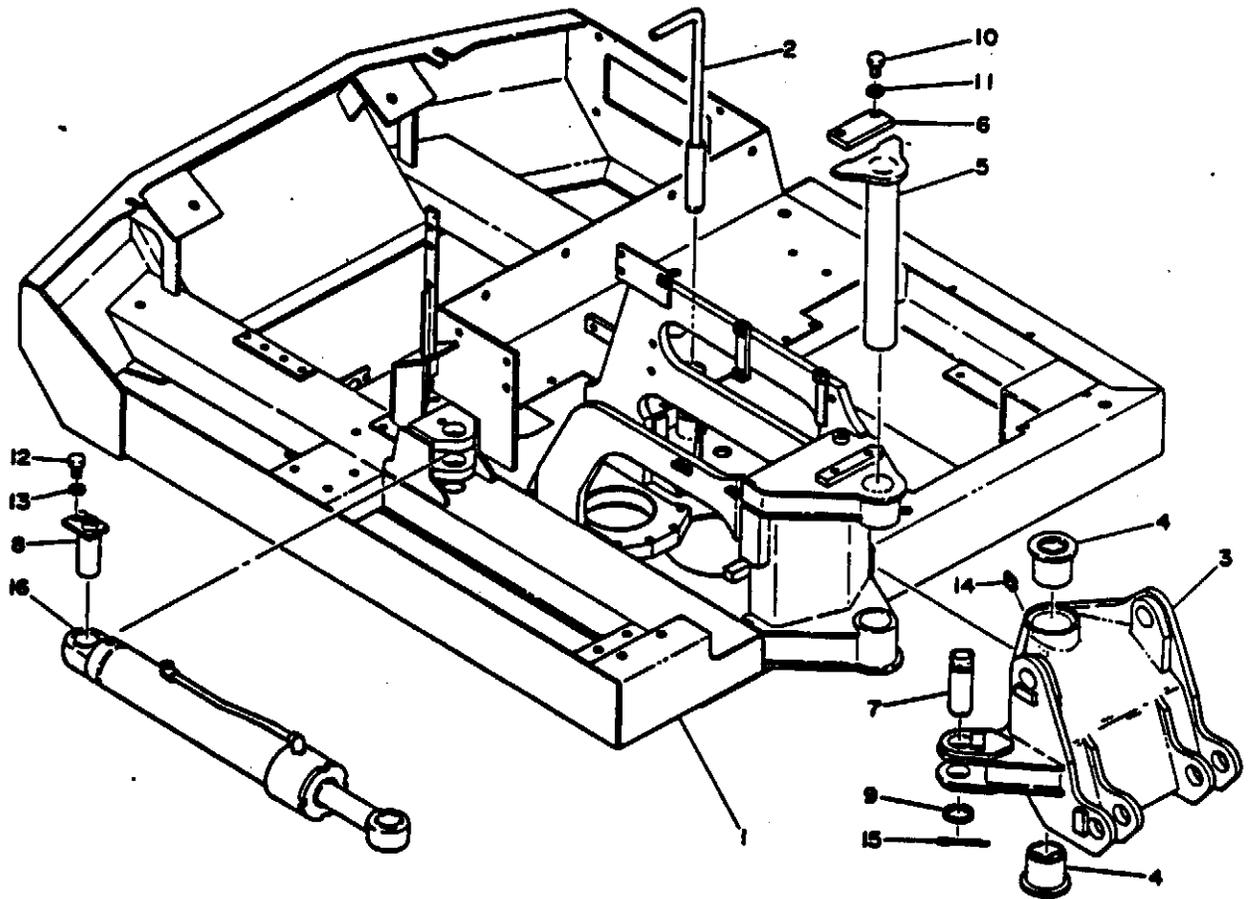


NO	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	01430-57000	TURNTABLE	1	
2	01422-00100	PIN, Lock	1	
01	01331-00000	BRACKET ASSY. Boom	1	
3	01331-40100	BRACKET, Boom	1	
4	00020-55070	BUSHING	2	
5	00010-00010	SHAFT	1	
6	01331-10200	PLATE	1	
7	00010-40111	PIN	1	
8	00010-00003	PIN	1	
9	00020-40003	COLLAR	2	
10	11010-41225	BOLT	2	
11	11400-10012	WASHER, Spring	2	
12	11000-41020	BOLT	1	
13	11400-10010	WASHER, Spring	1	
14	15000-01000	NIPPLE, Grease	1	
15	12100-00000	PIN, Split	1	
16	19000-00100	CYLINDER, Spring	1	

NOTE

For Parts & Solds 012-025

FIG.11-3 TURNTABLE

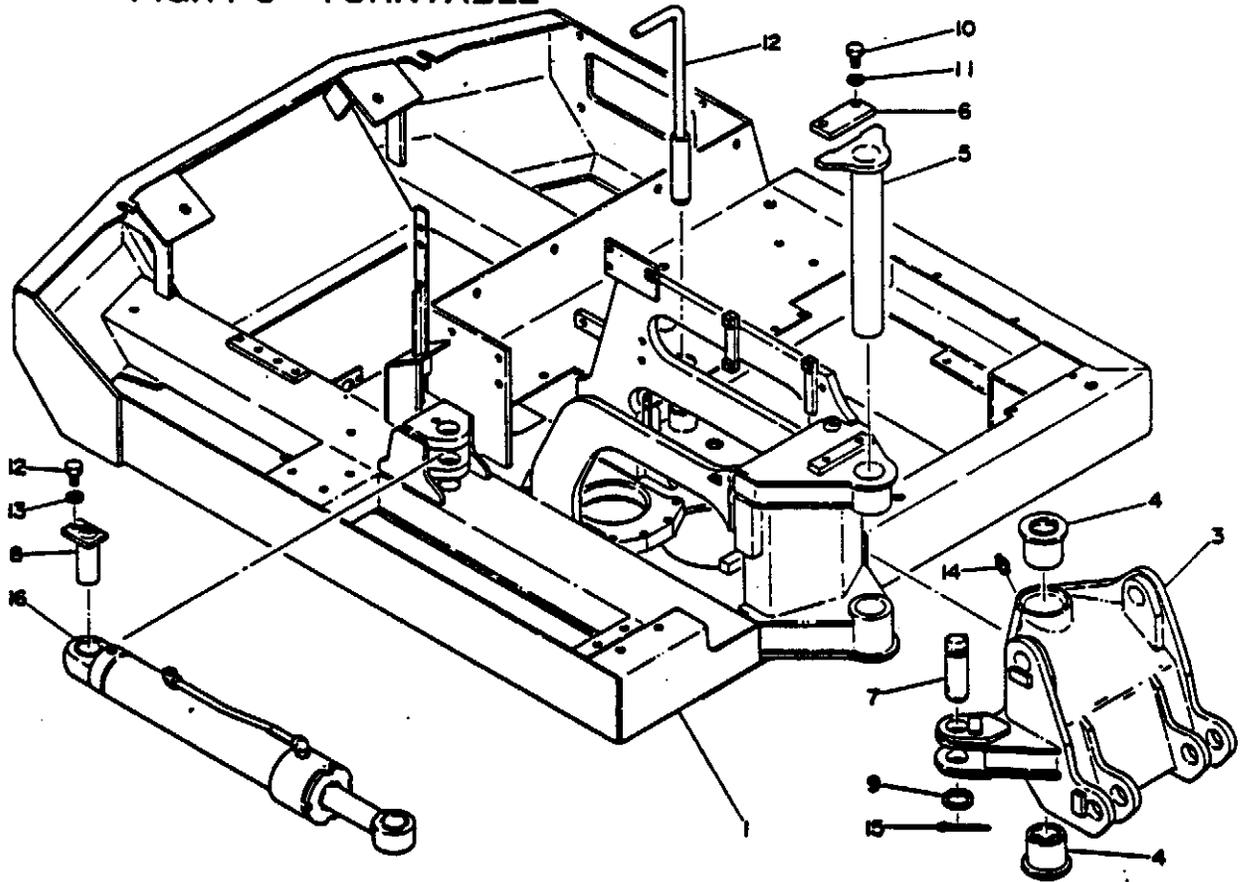


1	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	01430-01000	TURNTABLE	1	
2	01422-00100	PIN Lock	1	
01	01231-00000	BRACKET ASSY. Beam	1	
3	01231-40100	BRACKET. Beam	1	
4	00026-55070	BUSHING	2	
5	00019-00013	SHAFT	1	
6	01231-10200	PLATE	1	
7	00010-40111	PIN	1	
8	00019-00003	PIN	1	
9	00030-40005	COLLAR	1	
10	11010-41225	BOLT	2	
11	11400-10012	WASHER Spring	2	
12	11000-41230	BOLT	1	
13	11400-10010	WASHER Spring	1	
14	15000-01000	NIPPLE Grease	1	
15	12100-00000	PIN Split	1	
16	19000-00100	CYLINDER Swing	1	

NOTE

SEE -  
for Photos & Scales

FIG.12-1 CONTROL LEVER, TRACTION

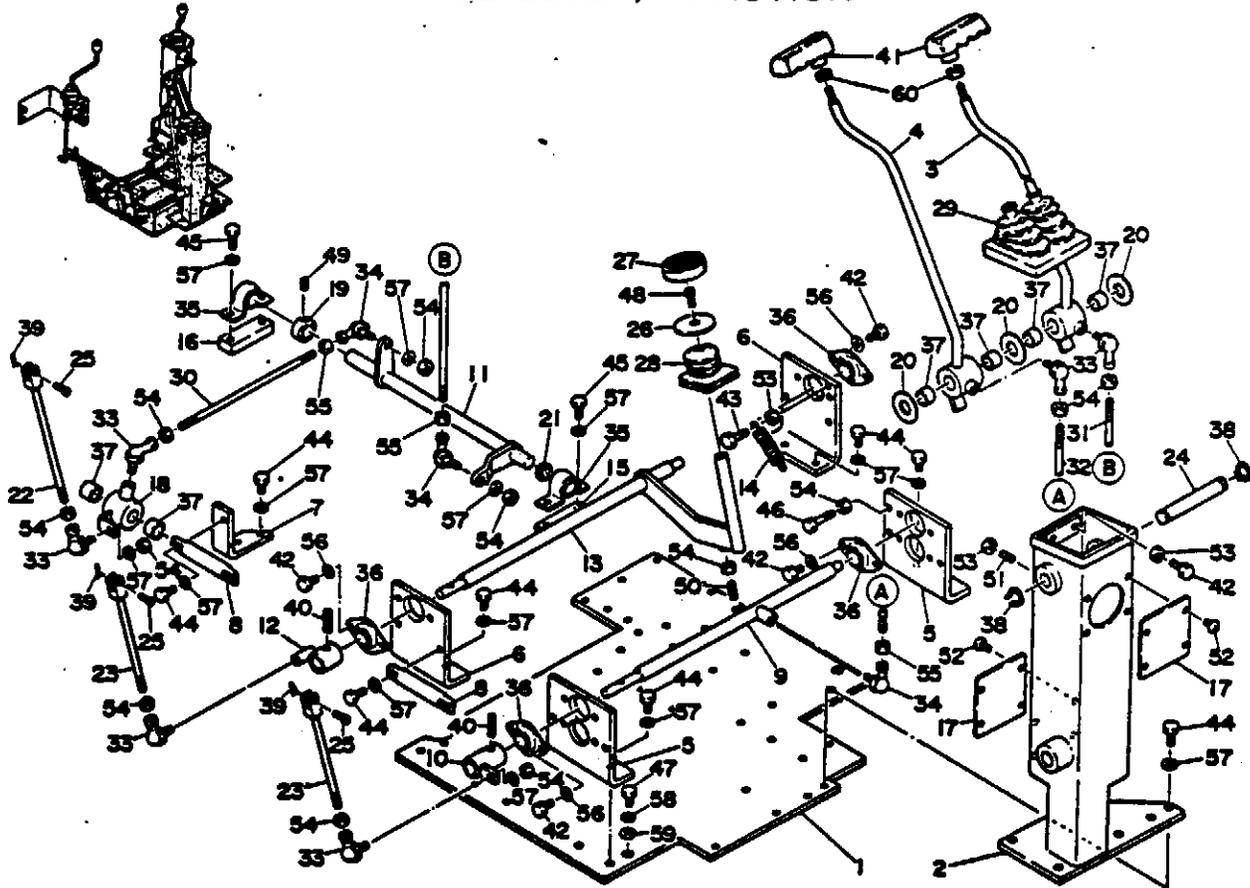


Qty	PARTS NUMBER	DESCRIPTION	REMARKS
1	01432-00100	PLATE, Lever	1
2	01432-00400	STAND, Lever	1
3	05632-11000	LEVER, Traction	1
4	05632-11700	LEVER, Traction	1
5	01432-01200	BRACKET	2
6	01432-01300	BRACKET	2
7	01432-71200	ANGLE	1
8	01432-71300	SHAFT	2
9	01432-01900	LEVER	1
10	01432-02000	LEVER	1
11	01432-02500	LEVER	1
12	01432-03000	LEVER	1
13	01432-03100	PEDAL	1
14	01432-03400	SPRING	1
15	00062-00001	SPACER	1
16	00062-00003	SPACER	1
17	01432-72100	COVER	2
18	02232-43000	LEVER	1
19	01632-09400	STOPPER	1
20	01632-10200	WASHER	3
21	00070-20003	COLLAR	1
22	00053-05200	ROD, Yoke	1
23	00053-05335	ROD, Yoke	2
24	00042-00121	SHAFT, Lever	1
25	00040-05117	PIN	3

NOTE: SEE - for England, Singapore, U.S.A., & Korea No. 0

Qty	PARTS NUMBER	DESCRIPTION	REMARKS
26	01432-04400	WASHER	1
27	01432-04000	COVER	1
28	01432-04500	BOOT	1
29	00032-02000	BOOT	1
30	00050-00370	ROD	1
31	00050-00390	ROD	1
32	00050-00320	ROD	1
33	13400-00000	ROD, End	6
34	13400-00003	ROD, End	3
35	13320-02022	MINI-PILLOW	2
36	13320-01518	MINI-PILLOW	4
37	13330-02015	BUSHING	6
38	12200-00020	RING, Soap	2
39	12140-00006	PIN, Soap	3
40	12130-00030	PIN, Spring	2
41	10536-14350	GRIP	2
42	11000-40020	BOLT	10
43	11000-40040	BOLT	1
44	11000-40020	BOLT	16
45	11000-40030	BOLT	4
46	11000-40050	BOLT	1
47	11000-41035	BOLT	4
48	11100-40020	BOLT, Socket	1
49	11210-50016	SET, Screw	1
50	11210-50040	SET, Screw	1

NOTE: SEE - for England, Singapore, U.S.A., & Korea No. 1

FIG.12-1 CONTROL LEVER, TRACTION

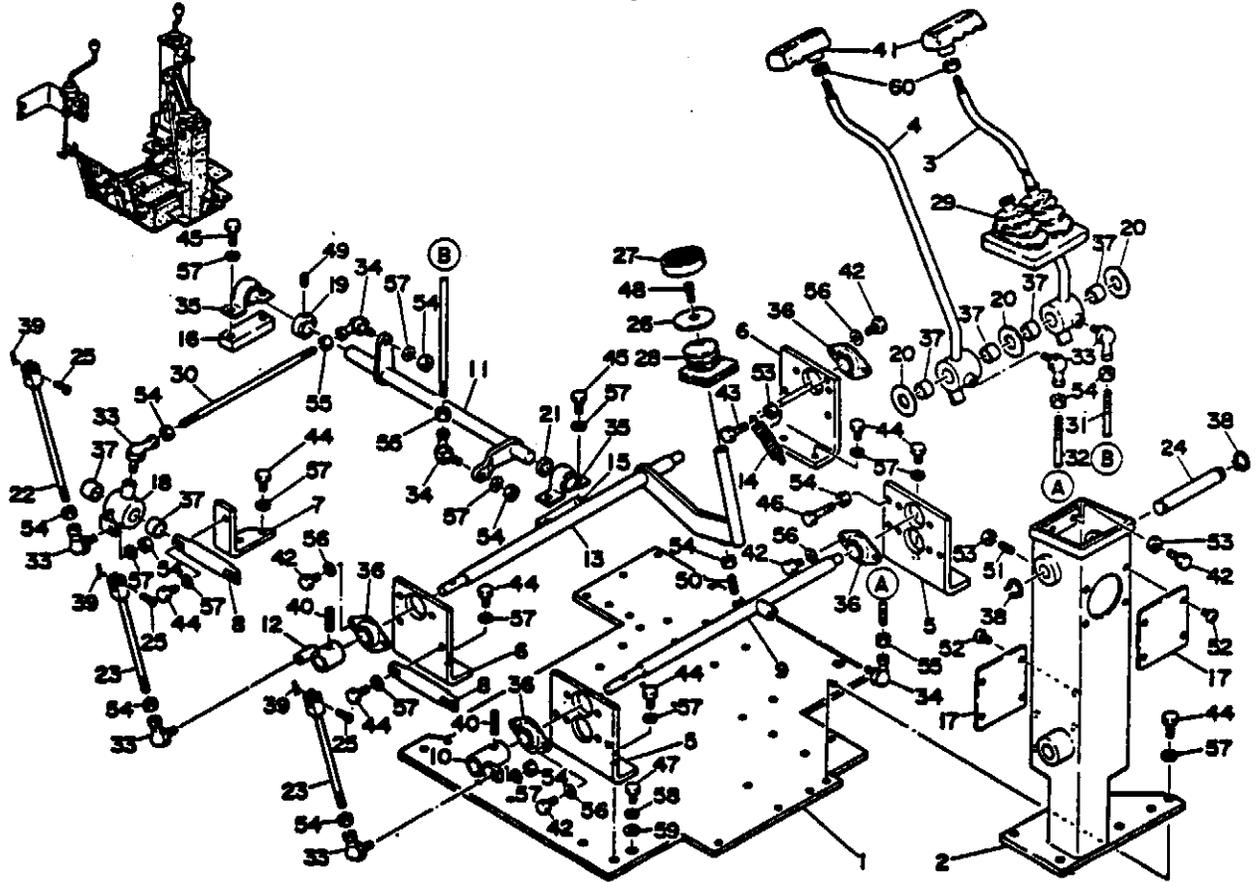


Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
7	11210-50025	SET. Screw	7	
8	11205-30510	SCREW, Pan Head	8	
5	11300-40000	NUT	5	
12	11300-40000	NUT	12	
3	11315-40000	NUT	3	
8	11400-20000	WASHER, Spring	8	
28	11400-20000	WASHER, Spring	28	
4	11400-20010	WASHER, Spring	4	
4	00035-00000	WASHER	4	
2	11300-40010	NUT	2	

NOTE

SEE - for England, Singapore, U.S.A. & Korea

Rev. 0

FIG.12-2 CONTROL LEVER, TRACTION

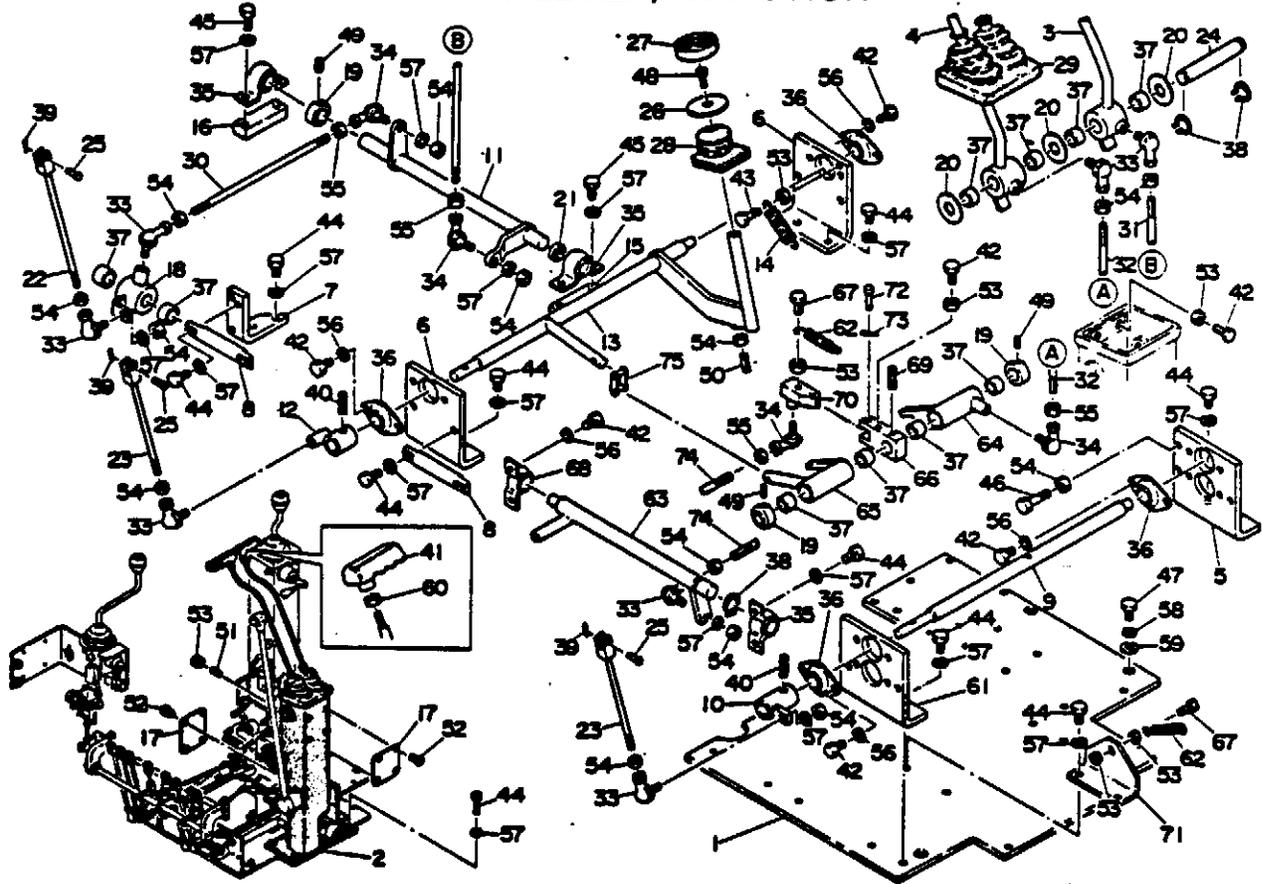

IN	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	01432-00100	PLATE Lever	1	
2	01432-00400	STAND Lever	1	
3	03632-11800	LEVER Traction	1	
4	05632-11700	LEVER Traction	1	
5	01432-01200	BRACKET	1	
6	01432-01300	BRACKET	2	
7	01432-00200	ANGLE	1	
8	01432-71300	SHAFT	2	
9	01432-00400	LEVER	1	
10	01432-02000	LEVER	1	
11	01432-02300	LEVER	1	
12	01432-03000	LEVER	1	
13	01432-01300	PEDAL	1	
14	01432-03400	SPRING	1	
15	00062-00001	SPACER	1	
16	00062-00003	SPACER	1	
17	01432-72100	COVER	2	
18	02232-43000	LEVER	1	
19	01632-09400	STOPPER	3	
20	01632-16200	WASHER	3	
21	00030-20003	COLLAR	1	
22	00053-05220	ROD, Yoke	1	
23	00053-05233	ROD, Yoke	2	
24	00040-20121	SHAFT, Lever	1	
25	00040-05117	PIN	1	

NOTE 025 - for Frame


Dr. 3

IN	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
26	01432-64400	WASHER	1	
27	01432-64800	COVER	1	
28	01432-64500	BOOT	1	
29	00632-02000	BOOT	1	
30	00050-00270	ROD	1	
31	00050-00390	ROD	1	
32	00050-00320	ROD	1	
33	13400-00000	ROD, End	7	
34	13400-00005	ROD, End	4	
35	13320-02022	MINI-PILLOW	3	
36	13320-51510	MINI-PILLOW	4	
37	13330-02015	BUSHING	10	
38	12200-00020	RING, Snap	3	
39	12140-00006	PIN, Snap	3	
40	12130-00030	PIN, Spring	2	
41	16536-14359	GRIP	2	
42	11000-40620	BOLT	13	
43	11000-40640	BOLT	1	
44	11000-40820	BOLT	2	
45	11000-40830	BOLT	4	
46	11000-40850	BOLT	1	
47	11000-41035	BOLT	4	
48	11100-40620	ROLT, Socket	1	
49	11210-50816	SET, Screw	3	
50	11210-50840	SET, Screw	1	

NOTE 025 - for Frame

Dr. 3


FIG.12-2 CONTROL LEVER, TRACTION

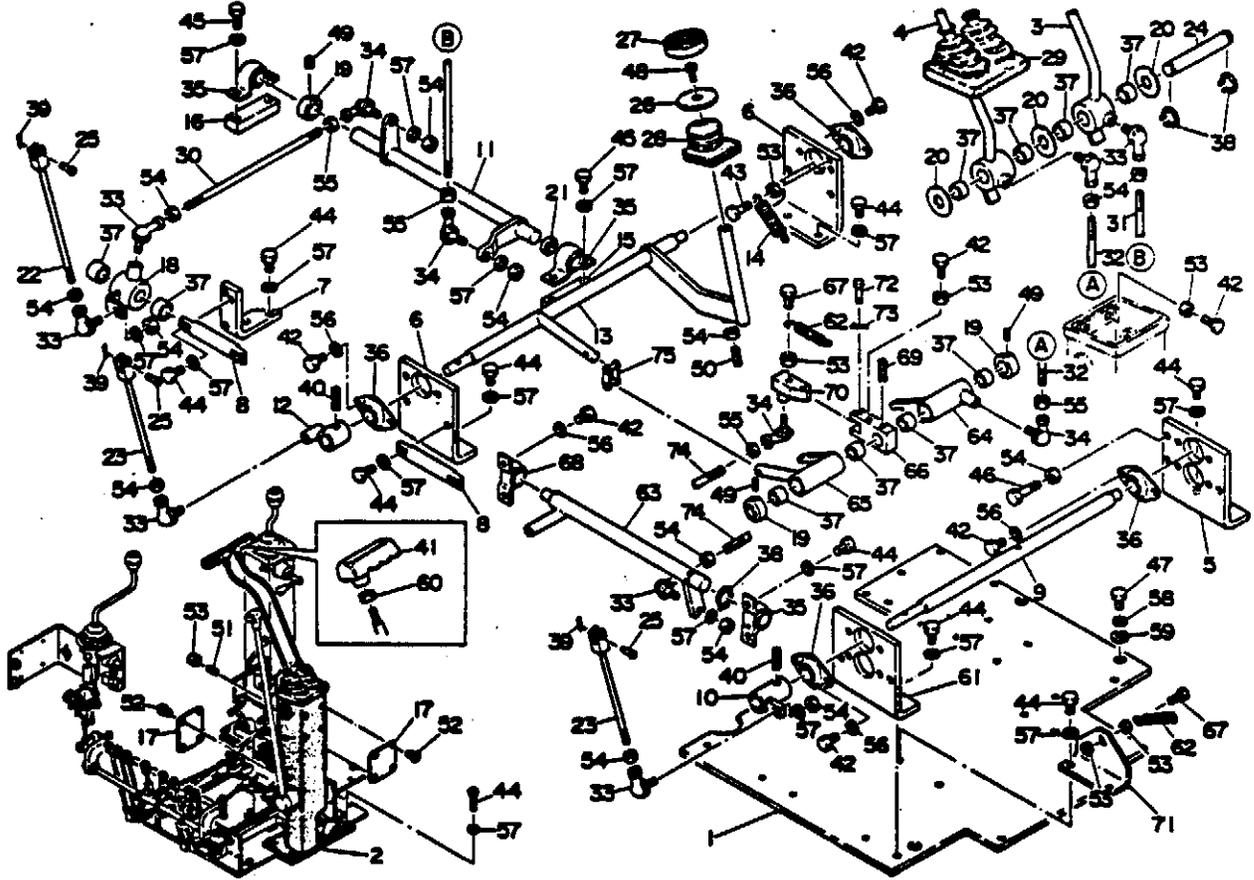

Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
2	11210-50025	SET. Screw	2	
8	11205-30510	SCREW Pan Head	8	
9	11300-40000	NUT	9	
14	11300-40000	NUT	14	
4	11315-40000	NUT	4	
10	11400-20000	WASHER. Spring	10	
3	11400-20000	WASHER. Spring	3	
4	11400-20010	WASHER. Spring	4	
4	00036-00000	WASHER	4	
2	11300-40010	NUT	2	
1	01432-01200	BRACKET	1	
2	01432-03500	SPRING	2	
1	01432-00000	LEVER	1	
1	01432-01400	LEVER	1	
1	01432-01500	LEVER	1	
1	01432-01800	LEVER	1	
2	11000-40030	BOLT	2	
1	13320-01510	MINI-PILLOW	1	
1	12130-00035	PIN. Spring	1	
1	01432-01600	LEVER	1	
1	01432-01700	BRACKET	1	
1	00040-10032	PIN	1	
1	12140-00000	PIN. Snap	1	
1	00050-00035	ROD	1	
1	16200-00000	JOINT ASSY. Link	1	

NOTE SEE - for frame Rev. C


FIG.12-3 CONTROL LEVER, TRACTION

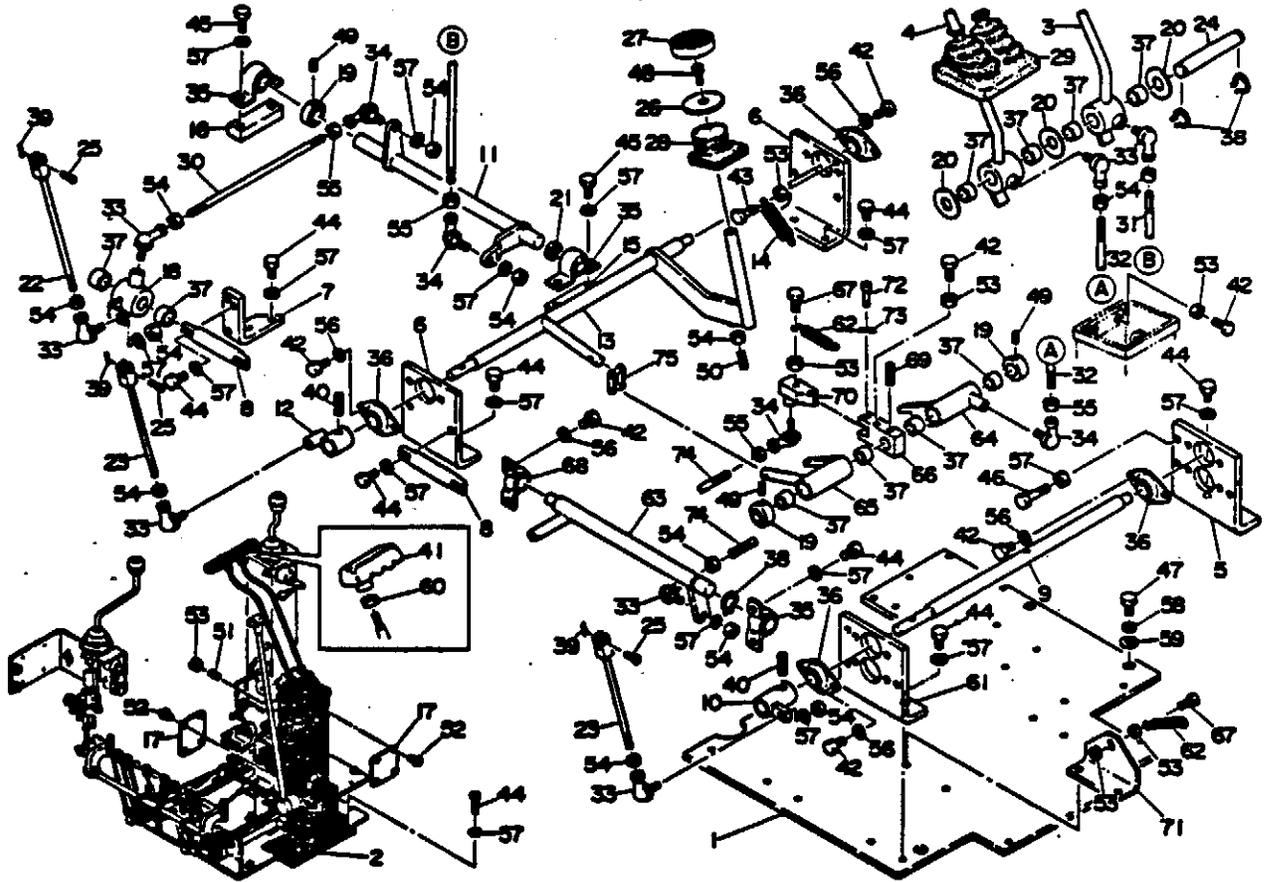

Qty	PARTS NUMBER	DESCRIPTION	REMARKS
1	01432-00100	PLATE Lever	1
2	01432-00400	STAND Lever	1
3	00032-11000	LEVER Traction	1
4	00032-11700	LEVER Traction	1
5	01432-01200	BRACKET	1
6	01432-01300	BRACKET	2
7	01432-00200	ANGLE	1
8	01432-71300	SHAFT	2
9	01432-00400	LEVER	1
10	01432-02000	LEVER	1
11	01432-02500	LEVER	1
12	01432-03000	LEVER	1
13	01432-01300	PEDAL	1
14	01432-03400	SPRING	1
15	00002-00001	SPACER	1
16	00002-00003	SPACER	1
17	01432-72100	COVER	2
18	02232-43000	LEVER	1
19	01632-00400	STOPPER	3
20	01632-10200	WASHER	3
21	00030-20005	COLLAR	1
22	00053-05200	ROD, Yoke	1
23	00053-05235	ROD, Yoke	2
24	00042-20121	SHAFT, Lever	1
25	00040-05117	PIN	3
NOTE 025 - For Scales			

Qty	PARTS NUMBER	DESCRIPTION	REMARKS
26	01432-04400	WASHER	1
27	01432-04000	COVER	1
28	01432-04500	BOOT	1
29	00032-02000	BOOT	1
30	00050-00270	ROD	1
31	00050-00390	ROD	1
32	00050-00320	ROD	1
33	13400-00000	ROD, Set	7
34	13400-00005	ROD, Set	4
35	13320-02022	MINI-PILLOW	3
36	13320-51510	MINI-PILLOW	4
37	13320-02015	BUSHING	10
38	12200-00020	RING, Snap	3
39	12140-00000	PIN, Snap	3
40	12130-00030	PIN, Spring	2
41	10530-14350	GRIP	2
42	11000-40020	BOLT	13
43	11000-40040	BOLT	1
44	11000-40020	BOLT	20
45	11000-40030	BOLT	4
46	11000-40050	BOLT	1
47	11000-41035	BOLT	4
48	11100-40020	BOLT, Socket	1
49	11210-50016	SET, Screw	3
50	11210-50040	SET, Screw	1
NOTE 025 - For Scales			


FIG.12-3 CONTROL LEVER, TRACTION

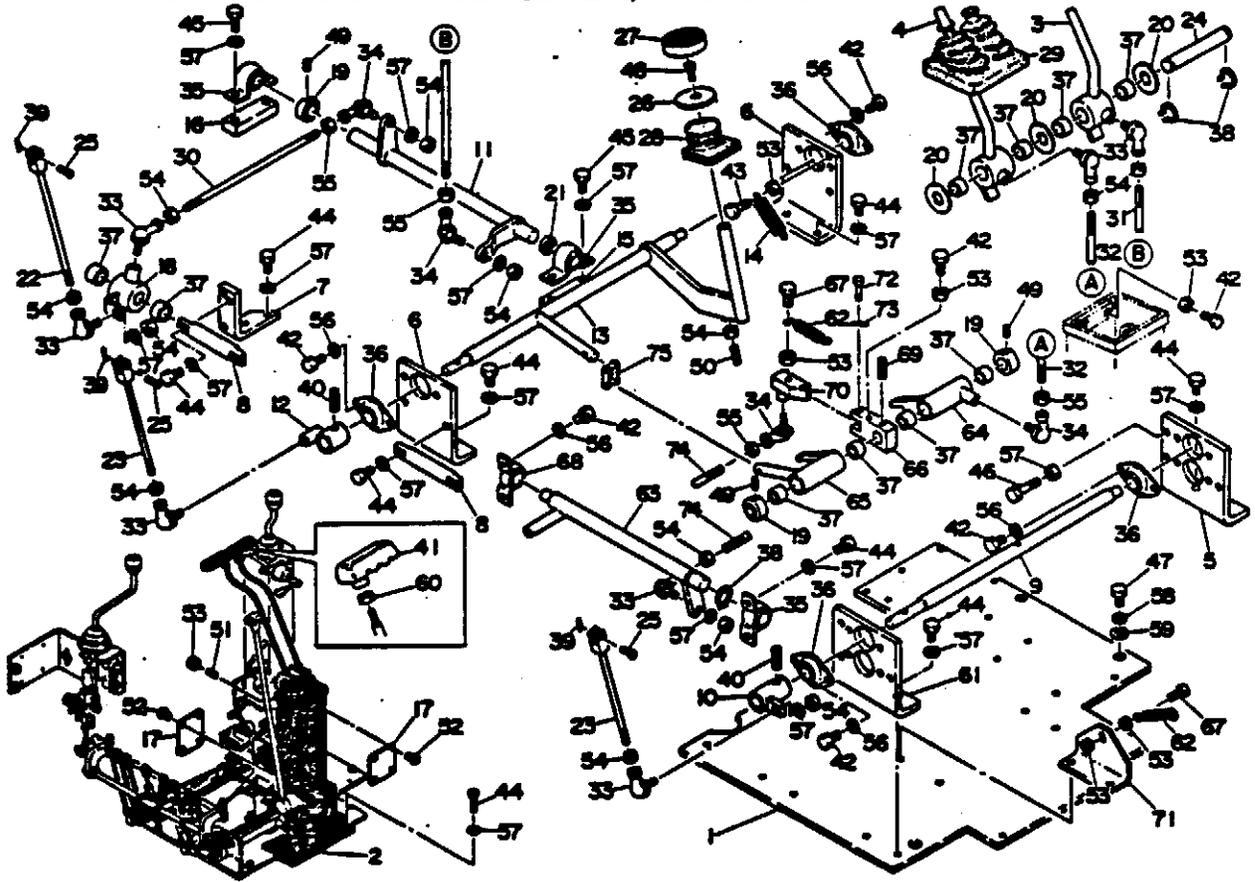

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	11210-50025	SET. Screw	1	
1	11205-30510	SCREW Pan Head	1	
1	11300-40000	NUT	1	
1	11300-40000	NUT	1	
1	11315-40000	NUT	1	
10	11400-20000	WASHER, Spring	10	
20	11400-20000	WASHER, spring	20	
4	11400-20010	WASHER, Spring	4	
4	00036-00000	WASHER	4	
2	11300-40010	NUT	2	
1	01432-01200	BRACKET	1	
2	01432-03500	SPRING	2	
1	01432-00000	LEVER	1	
1	01432-01400	LEVER	1	
1	01432-01500	LEVER	1	
1	01432-01000	LEVER	1	
2	11000-40030	BOLT	2	
1	13320-01310	MINI-PILLOW	1	
1	12130-00035	PIN, Spring	1	
1	01432-01600	LEVER	1	
1	01432-01700	BRACKET	1	
1	00040-10032	PIN	1	
1	12140-00000	PIN, Snap	1	
1	00000-00005	ROD	1	
1	10200-00000	JOINT ASSY. Link	1	

NOTE SEE - for Detail

FIG.13-1 CONTROL LEVER, OPERATION

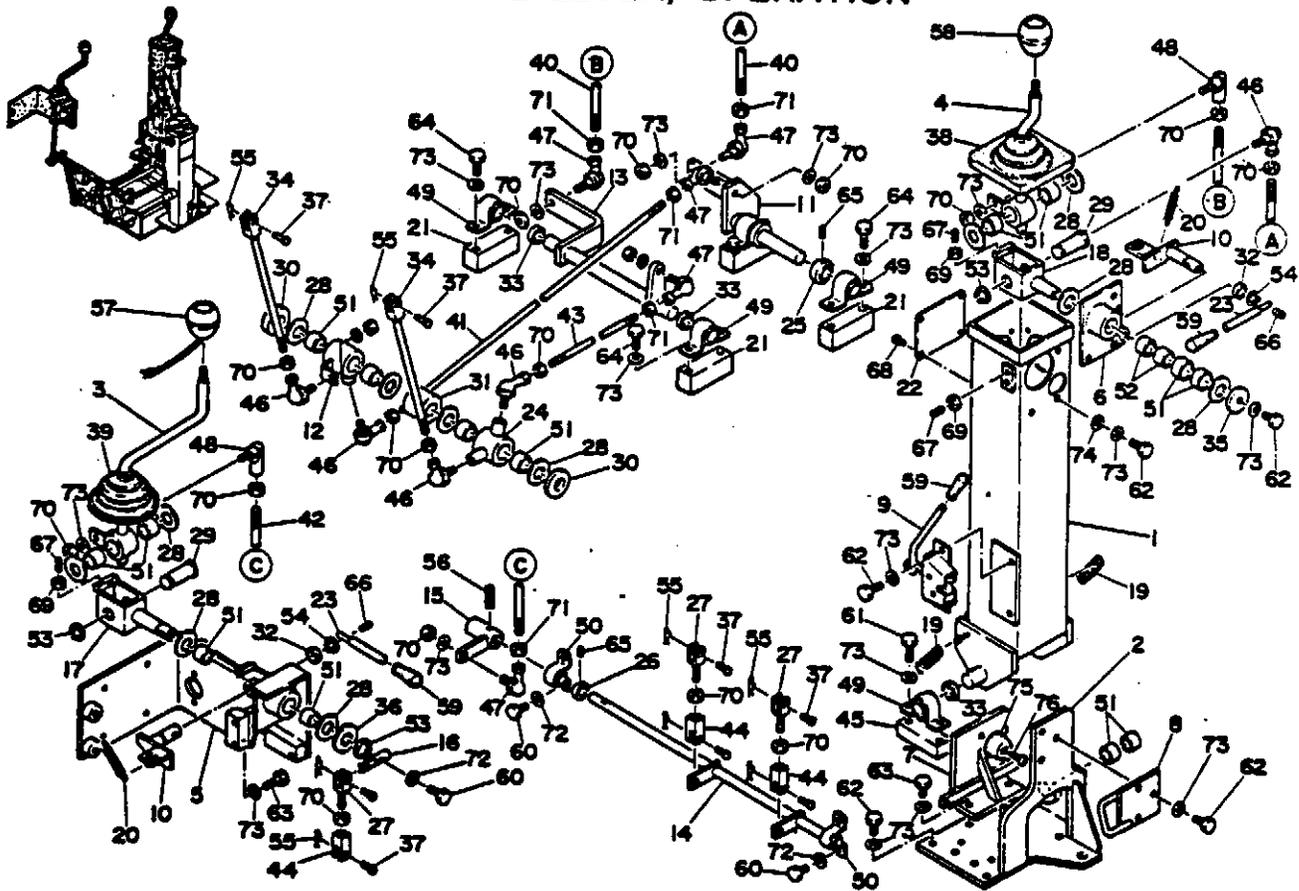


Qty	PARTS NUMBER	DESCRIPTION	REMARKS
1	01432-00200	STAND, Lever	1
2	01432-00300	BRACKET, Stand	1
3	01432-04100	LEVER, (R. H)	1
4	01432-04200	LEVER, (L. H)	1
5	01432-01000	BRACKET, (R. H)	1
6	01432-01100	BRACKET, (L. H)	1
7	01432-01500	STOPPER, Stand	1
8	01432-01600	STRIKER	1
9	01432-01700	LOCK, Stand	1
10	01432-01800	LEVER, Lock	2
11	01432-02400	LEVER	1
12	01432-73100	LEVER	1
13	01432-02600	LEVER	1
14	01432-02700	LEVER	1
15	01432-02800	LEVER	1
16	01432-72600	LEVER	1
17	01432-03200	LEVER, Yoke	1
18	01432-03300	LEVER, Yoke	1
19	01432-03400	SPRING	2
20	01432-03500	SPRING	2
21	01432-03600	SPACER	4
22	01432-72100	COVER	3
23	01432-73000	LEVER	2
24	01332-11500	LEVER	1
25	01632-09400	STOPPER	2

NOTE for France, England, Singapore, Spain, & U.S.A. 013 - Rev. 0

Qty	PARTS NUMBER	DESCRIPTION	REMARKS
26	01632-00200	STOPPER	1
27	00032-70000	ROD, Yoke	3
28	01632-16200	WASHER	12
29	02232-24700	PIN	2
30	00030-20010	COLLAR	2
31	00030-00031	COLLAR	1
32	00030-15005	COLLAR	2
33	00030-20005	COLLAR	3
34	00053-05200	ROD, Yoke	2
35	00030-09425	WASHER	1
36	00030-00030	WASHER	1
37	00040-05117	PIN	8
38	02132-12000	BOOT, (L. H)	1
39	00932-21100	BOOT, (R. H)	1
40	00050-00400	ROD	2
41	00050-00400	ROD	1
42	00050-00270	ROD	1
43	00050-00410	ROD	1
44	00053-05032	YOKE	3
45	01432-03700	SPACER	1
46	13400-00080	ROD, End	5
47	13400-00085	ROD, End	2
48	13405-00080	ROD, End	2
49	13220-02000	MINI-PILLOW	5
50	13220-01516	MINI-PILLOW	2

NOTE for France, England, Singapore, Spain, & U.S.A. 013 - Rev. 1

FIG.13-1 CONTROL LEVER, OPERATION

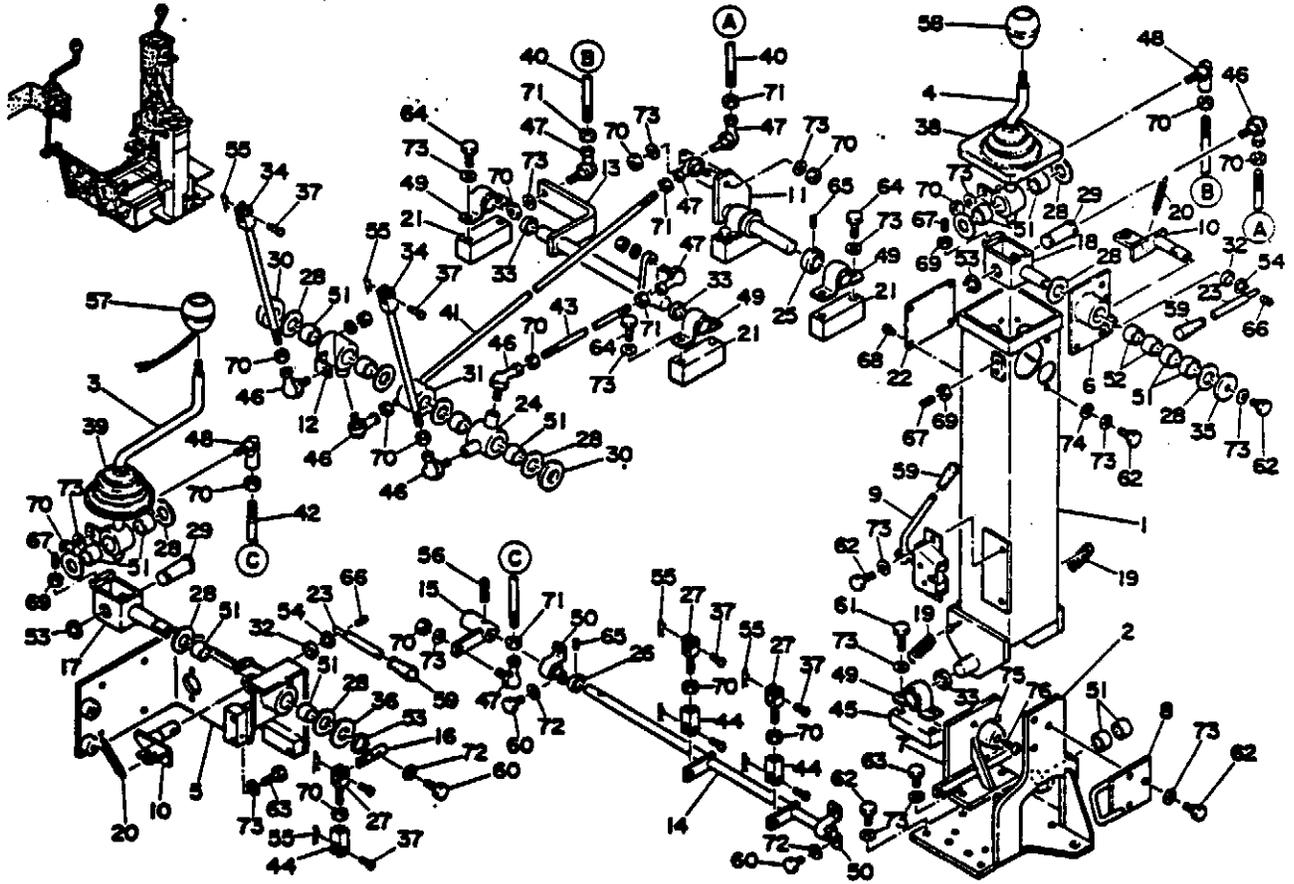


QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
14	13330-02015	BUSHING	14	
2	13140-01720	SLEEVE	2	
3	12200-00020	RING, Snap	3	
2	12200-00015	RING, Snap	2	
2	12140-00000	PIN, Snap	2	
1	12130-00020	PIN, Spring	1	
1	10502-01000	GRIP, OL, M	1	
1	10502-01100	GRIP, (L, M)	1	
3	10501-22050	GRIP	3	
7	11000-40020	BOLT	7	
2	11000-40040	BOLT	2	
12	11000-40020	BOLT	12	
4	11000-40030	BOLT	4	
8	11000-40050	BOLT	8	
3	11210-50010	SET. Screw	3	
2	11210-50010	SET. Screw	2	
3	11210-50025	SET. Screw	3	
12	11205-30510	SCREW, Pan Head	12	
5	11300-40000	NUT	5	
20	11300-40000	NUT	20	
5	11315-40000	NUT	5	
5	11400-20000	WASHER, Spring	5	
30	11400-20000	WASHER, Spring	30	
3	11411-10000	WASHER, Plain	3	
1	10521-04527	FOOT, Rubber	1	

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	11205-30520	SCREW, Pan Head	1	

NOTE  
for France, England, Singapore, Spain, & U.S.A.  
B.L.F. ~

FIG.13-2 CONTROL LEVER, OPERATION

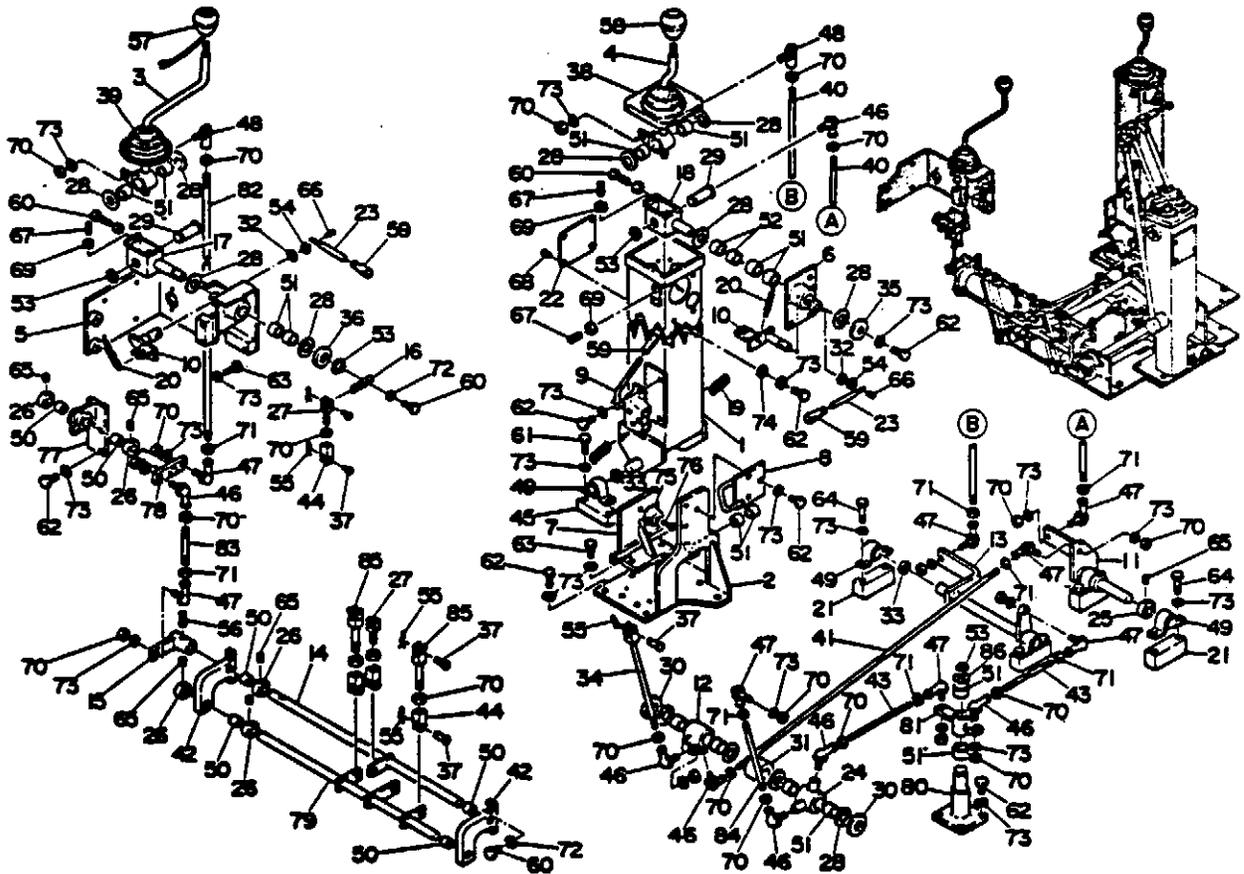

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	01432-00200	STAND, Lever	1	
2	01432-00300	BRACKET, Stand	1	
3	01432-04100	LEVER, (R. H)	1	
4	01432-04200	LEVER, (L. H)	1	
5	01432-01000	BRACKET, LEVER (R. H)	1	
6	01432-01100	BRACKET, LEVER (L. H)	1	
7	01432-01500	STOPPER, Stand	1	
8	01432-01600	STRIKER	1	
9	01432-01700	LOCK, Stand	1	
10	01432-01800	LEVER	2	
11	01432-02400	LEVER	1	
12	01432-73100	LEVER	1	
13	01432-02600	LEVER	1	
14	01432-09300	LEVER	1	
15	01432-09400	LEVER	1	
16	01432-72600	LEVER	1	
17	01432-03200	LEVER, Yoke (R. H)	1	
18	01432-03300	LEVER, Yoke (L. H)	1	
19	01432-03400	SPRING	2	
20	01432-03500	SPRING	2	
21	01432-03600	SPACER	4	
22	01432-72100	COVER	3	
23	01432-73000	LEVER	2	
24	01332-11500	LEVER	1	
25	01632-09400	STOPPER	2	

NOTE for Assembly


825 ~ No. G

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
26	01632-06200	STOPPER	5	
27	00932-70900	ROD, Yoke	2	
28	01632-16200	WASHER	12	
29	02232-24700	PIN	2	
30	00030-20010	COLLAR	2	
31	00030-00031	COLLAR	1	
32	00030-15005	COLLAR	2	
33	00030-20005	COLLAR	3	
34	00053-05200	ROD, Yoke	1	
35	00030-09425	WASHER	1	
36	00030-00030	WASHER	1	
37	00040-05117	PIN	9	
38	02132-12600	BOOT, (L. H)	1	
39	00932-11100	BOOT, (R. H)	1	
40	00050-00490	ROD	2	
41	00050-00480	ROD	1	
42	01432-09100	BRACKET	2	
43	00050-08190	ROD	2	
44	00055-05032	YOKE	6	
45	01432-03700	SPACER	1	
46	13400-00080	ROD, End	7	
47	13400-00085	ROD, End	8	
48	13405-00020	ROD, End	2	
49	13300-02002	MINI-FILLOW	5	
50	13300-01510	RUSHING	6	

NOTE for Assembly 825 ~

No. G

FIG.13-2 CONTROL LEVER, OPERATION

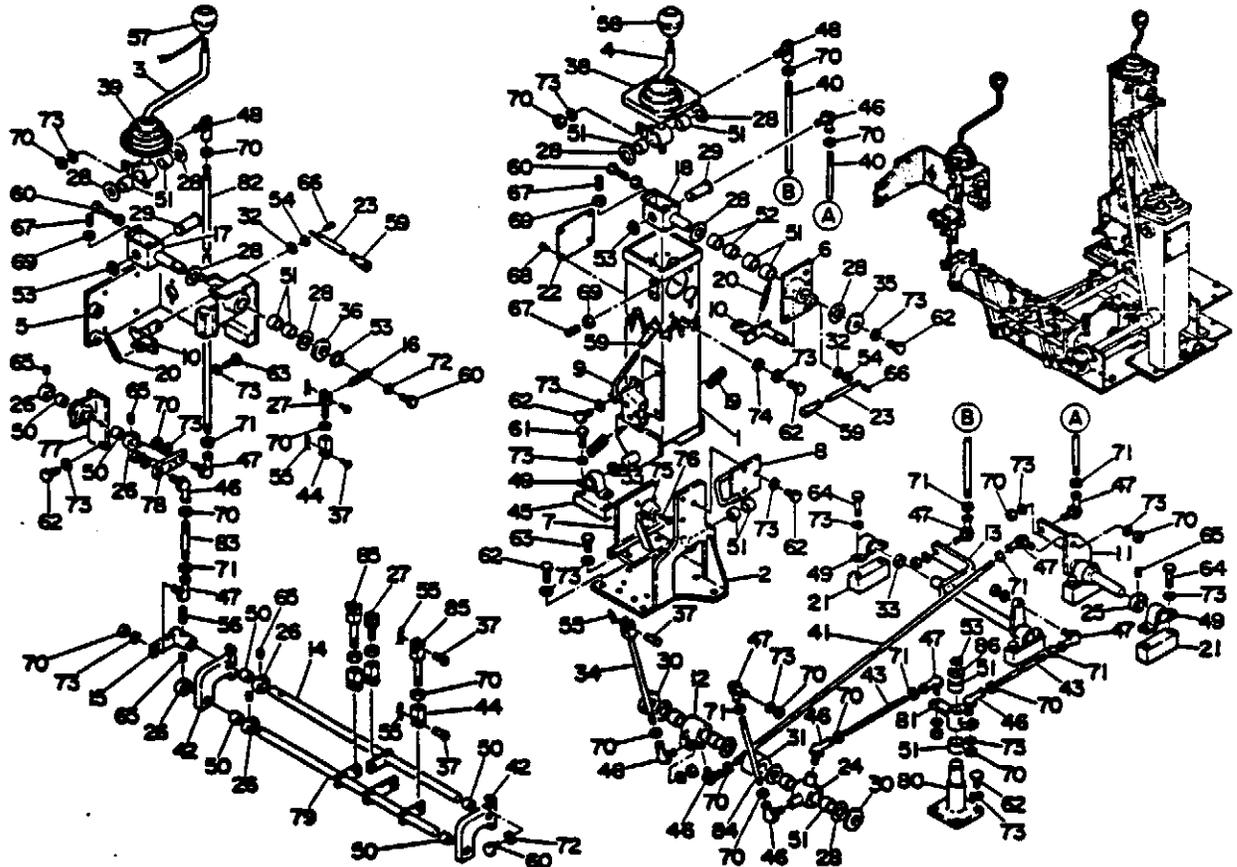

QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS	QTY	PARTS NUMBER	DESCRIPTION	QTY	REMARKS
1	13330-02015	BUSHING	10		76	11205-30520	SCREW, Pan Head	1	
2	12140-01720	SLEEVE	2		77	01432-09200	BRACKET	1	
4	12200-00020	RING, Snap	4		78	01432-09500	LEVER	1	
2	12200-00015	RING, Snap	2		79	01432-09600	LEVER	1	
3	12140-00005	PIN, Snap	3		80	01432-03100	BOSS	1	
1	12130-00030	PIN, Spring	1		81	01432-03200	LEVER	1	
1	16502-01000	GRIP, (R. H.)	1		82	00050-00165	ROD	1	
1	16502-01100	GRIP, (L. H.)	1		83	00050-00055	ROD	1	
3	16501-22050	GRIP	3		84	00050-00140	ROD	1	
7	11000-40620	BOLT	7		85	00053-05000	ROD, Yoke	2	
2	11000-40040	BOLT	2		86	00036-00034	WASHER	1	
10	11000-40020	BOLT	10						
4	11000-40030	BOLT	4						
8	11000-40050	BOLT	8						
7	11210-50016	SET. Screw	7						
2	11210-50016	SET. Screw	2						
4	11210-50025	SET. Screw	4						
12	11205-30510	SCREW, Pan Head	12						
6	11300-40006	NUT	6						
26	11300-40008	NUT	26						
3	11315-40000	NUT	3						
5	11400-20006	WASHER, Spring	5						
6	11400-20000	WASHER, Spring	6						
3	11411-10000	WASHER, Plain	3						
1	16521-04527	FOOT, Rubber	1						

NOTE

for items  
SEE -


NOTE for items SEE -

Rev. 0

Fig. 2

# FIG.13-3 CONTROL LEVER, OPERATION

Product: Takeuchi TB35S Mini Compact Excavator Parts Manual  
 Full Download: <https://www.arepairmanual.com/downloads/takeuchi-tb35s-mini-compact-excavator-parts-manual/>

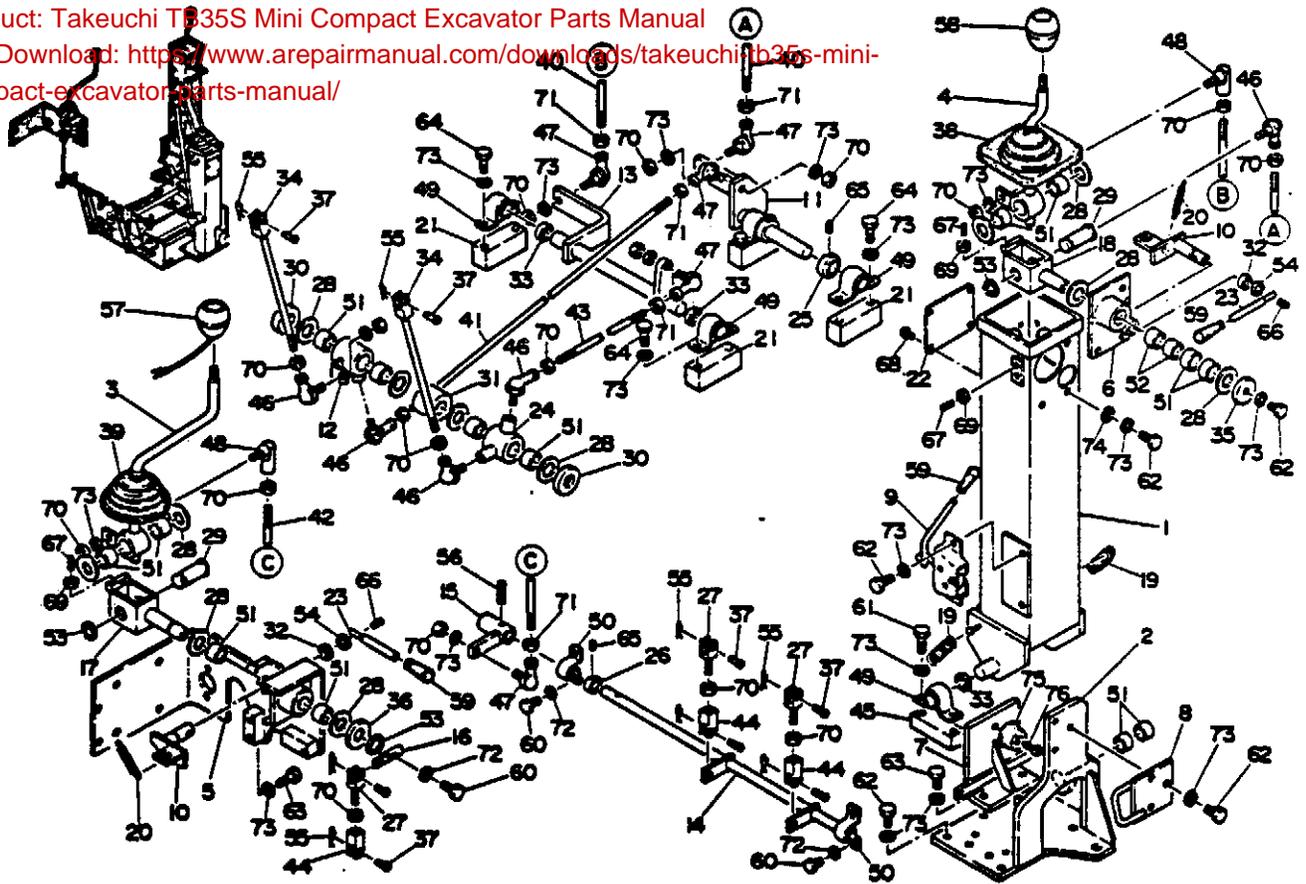

Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS	Qty	PARTS NUMBER	DESCRIPTION	Qty	REMARKS
1	01432-00200	STAND, Lever	1		25	01632-00200	STOPPER	1	
2	01432-00300	BRACKET, Stand	1		27	00932-70900	ROD, Yoke	3	
3	01432-04100	LEVER, (R. H)	1	STR ~	28	01632-10200	WASHER	12	
4	01432-04200	LEVER, (L. H)	1	STR ~	29	02332-24700	PIN	2	
5	01432-00100	BRACKET, (R. H)	1		30	00030-20010	COLLAR	2	
6	01432-01100	BRACKET, (L. H)	1		31	00030-00031	COLLAR	1	
7	01432-01500	STOPPER, Stand	1		32	00030-15005	COLLAR	2	
8	01432-01600	STRIKER	1		33	00030-20005	COLLAR	3	
9	01432-01700	LOCK, Stand	1		34	00053-05280	ROD, Yoke	2	
10	01432-01800	LEVER, Lock	2		35	00030-09425	WASHER	1	
11	01432-02400	LEVER	1		36	00030-00030	WASHER	1	
12	01432-73100	LEVER	1		37	00040-05117	PIN	8	
13	01432-02600	LEVER	1		38	02132-12600	BOOT, (L. H)	1	
14	01432-02700	LEVER	1		39	00932-11100	BOOT, (R. H)	1	
15	01432-02800	LEVER	1		40	00050-08490	ROD	2	
16	01432-72600	LEVER	1		41	00050-08480	ROD	1	
17	01432-03200	LEVER, Yoke	1		42	00050-08270	ROD	1	
18	01432-03300	LEVER, Yoke	1		43	00050-08410	ROD	1	
19	01432-03400	SPRING	2		44	00055-05030	YOKE	2	
20	01432-03500	SPRING	2		45	01432-03700	SPACER	1	
21	01432-03600	SPACER	4		46	13400-00080	ROD, End	5	
22	01432-70100	COVER	1		47	13400-00085	ROD, End	5	
23	01432-72600	LEVER	2		48	13405-20080	ROD, End	2	
24	01332-11500	LEVER	2		49	13320-00020	MINI-PILLOW	1	
25	01632-09400	STOPPER	2		50	13320-01510	MINI-PILLOW	2	

NOTE for Frame SEE ~