

Product: 2001 Canon iR1600/iR2000 Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2001-canon-ir1600ir2000-printer-service-repair-workshop-manual/>

iR1600/iR2000

SERVICE MANUAL

REVISION 0

Canon

Sample of manual. Download All 487 pages at:

SEPT. 2001 **FY8-13HJ-000**
<https://www.arepairmanual.com/downloads/2001-canon-ir1600ir2000-printer-service-repair-workshop-manual/>

COPYRIGHT© 2001 CANON INC. CANON iR1600/iR2000 REV.0 SEPT. 2001 PRINTED IN JAPAN (IMPRIME AU JAPON)

Download free service manual at <http://printer1.blogspot.com>

Product: 2001 Canon iR1600/iR2000 Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2001-canon-ir1600ir2000-printer-service-repair-workshop-manual/>
Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2001 CANON INC.

Printed in Japan

Imprimé au Japon

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Sample of manual. Download All 487 pages at:
<https://www.arepairmanual.com/downloads/2001-canon-ir1600ir2000-printer-service-repair-workshop-manual/>

1 Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
 Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
 REF.	Indicates an item of reference assisting the understanding of the topic in question.
	Provides a description of a service mode.
	Provides a description of the nature of an error indication.
	Refers to the Copier Basics Series for a better understanding of the contents.



2 Outline of the Manual

This Service Manual provides basic facts and figures needed to service the iR1600/iR2000. Of the machine's accessories, this manual covers the cassette unit and inner 2-way tray; for other accessories including the ADF, see its own Service Manual.

In this manual, the 1-Cassette Unit-F1, 2-Cassette Unit-G1 and 3-Cassette Unit-H1 are collectively called "cassette unit," and the Inner 2-Way Tray-B1 is referred to as the inner 2-way tray.

This Service Manual consists of the following chapters:

Chapter 1 Introduction:	features, specifications, operation, system construction, routine maintenance by the user, safety, reproduction processes
Chapter 2 Basic Operation:	basic operation, outline of electrical circuitry, basic sequence
Chapter 3 Image Reading/ Processing System:	principles of operation of the exposure system, principles of operation of the image processing system, timing of operation; disassembly/assembly and adjustment
Chapter 4 Laser Exposure System:	principles of operation of the image formation system, timing of operation; disassembly/assembly
Chapter 5 Image formation system:	standards, adjustments, troubleshooting tables
Chapter 6 Pickup/Feeding System:	principles of operation of the pickup/feeding system, timing of operation; disassembly/assembly and adjustment
Chapter 7 Fixing System:	principles of operation of the fixing system, timing of operation; disassembly/assembly and adjustment
Chapter 8 Externals and Auxiliary Control System:	principles of operation of the externals/auxiliary control system, timing of operation; disassembly/assembly and adjustment
Chapter 9 Cassette Unit:	principles of operation of the pickup system; disassembly/assembly and adjustments
Chapter 10 Inner 2-Way Tray:	principles of operation; disassembly/assembly and adjustment
Chapter 11 Installation:	site requirements and installation procedure
Chapter 12 Maintenance and Inspection:	table of periodically replaced parts, table of durables, scheduled servicing chart
Chapter 13 Troubleshooting:	maintenance and inspection, standards/adjustment, troubleshooting image faults/malfunctions; service mode, self diagnosis
Chapter 14 Version up:	version up
Appendix:	general timing chart, general circuit diagram

The descriptions are subject to change for product improvement, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to go through the contents of this Service Manual and Service Information bulletins and have a good understanding of the machine, readying themselves to promptly respond to the needs of the field (i.e., identifying and correcting faults).

The descriptions in this Service Manual are based on the following rules:

1. In each chapter, the uses of the function in question and its relationship to electrical and mechanical systems are discussed and the timing of operation of its associated parts is explained by means of outlines and diagrams.

In the diagrams, the symbol  represents a mechanical path, while the symbol  with a name next to it indicates the flow of an electric signal.

The expression “turn on the power” means turning on the power switch, closing the front door, and closing the delivery door so that the machine will be supplied with power.


2. In circuit diagrams (digital), a signal whose level is High is expressed as being ‘1’, while a signal whose level is Low is expressed as being ‘0’; the level of voltage, however, varies from circuit to circuit.

The machine uses CPUs, whose internal mechanisms cannot be checked in the field, and, therefore, are not explained. In addition, the machine’s PCBs are not intended for repairs at the user’s and, therefore, are explained by means of block diagrams: two types are used, i.e., between sensors and inputs of PCBs equipped with a control or drive function and between outputs equipped with a control or drive function and loads; in addition, functional block diagrams are used at times.

Changes made to the machine for product improvement are communicated in the form of a Service Information bulletin as needed. All service persons are expected to go through all service documentation including the bulletins and be equipped to respond to the needs of the field (as by being able to identify possible causes of problems).


System Configuration

1. The machine may be configured as follows with its accessories (except the original/paper feed device and boards):

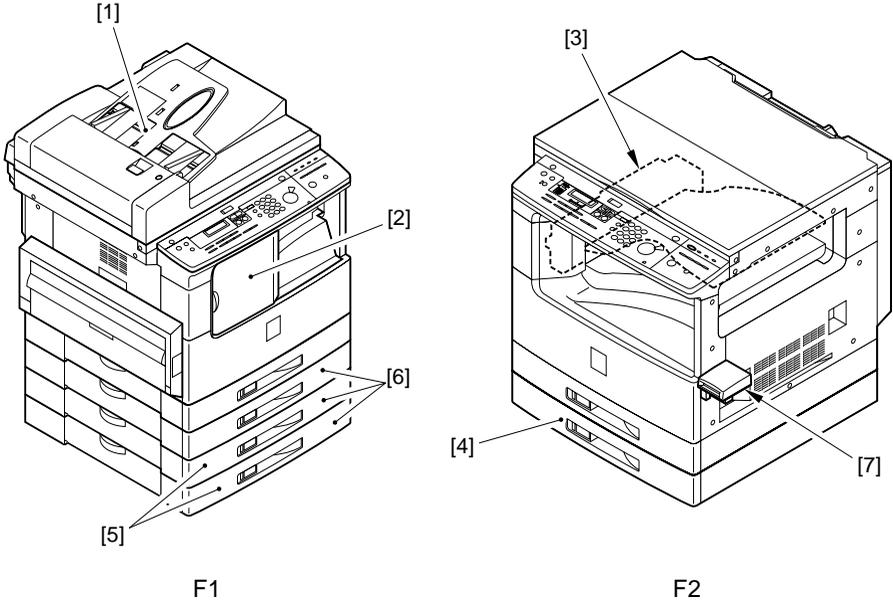

- [1] ADF-J1
- [2] Finisher-L1 (if PDL output, requires hard disk.)
- [3] Inner 2-Way Tray-B1
- [4] 1-Cassette Unit-F1 (iR1600 only)
- [5] 2-Cassette Unit-G1 (iR2000 only)
- [6] 3-Cassette Unit-H1 (iR1600 only)
- [7] Card Reader-E1

2. The machine may be configured with the following accessory boards:

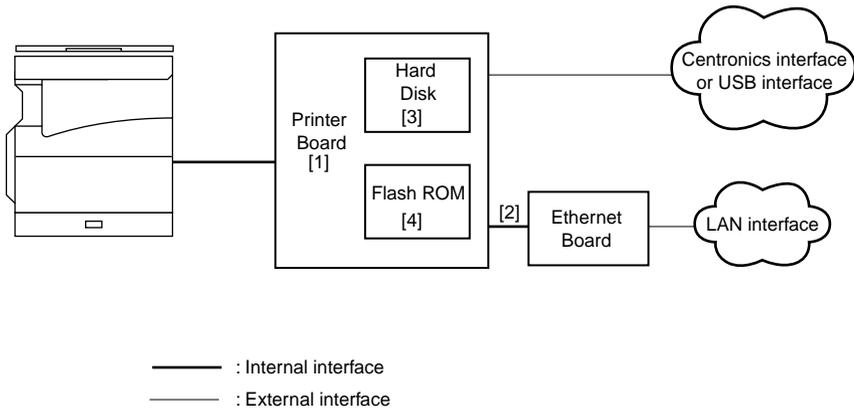

F3


- [1] Printer Board-N1*
- [2] Ethernet Network Interface Adapter iN-E5*
- [3] Hard Disk HD-65
- [4] Flash ROM Module FR-65

* : standard if printer model

<Points to Note When Turning Off the Power Switch>

Be sure to turn off the power switch and disconnect the power plug before starting disassembly/assembly work; further, keep the following in mind:

1. If you turn off the main power switch while a printer function is in use, the data being processed can be lost. Check to be sure that the online LED in the control panel is OFF before operating the power switch.
2. Do not turn off the power switch while downloading is taking place; otherwise, the machine may fail to operate.
3. Remember that not all power will be removed in response to the opening of the front cover as long as the power switch remains ON.
4. Be sure to use SHUT DOWN MENU to shut down the printer if the Hard Disk HD-65 (accessory) has been installed.

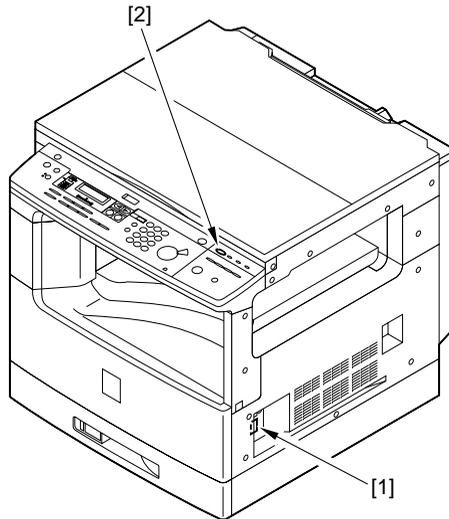

F4

- [1] Power switch
[2] Online LED

Contents

CHAPTER 1 INTRODUCTION

1 Features	1-1	4 Control Panel	1-18
1.1 Features	1-1	4.1 Control Panel	1-18
2 Specifications	1-1	4.2 Basic Operation	1-21
2.1 Copier	1-3	4.3 Extended Operation	1-21
2.1.1 Type	1-3	4.4 User Mode	1-22
2.1.2 System	1-3	5 Cleaning by the User	1-30
2.1.3 Functions	1-4	5.1 Cleaning by the User	1-30
2.1.4 Others	1-6	5.1.1 Cleaning the	
2.2 Cassette Unit	1-8	Fixing Roller	1-30
2.3 Inner 2-Way Tray	1-9	5.1.2 Cleaning the Copyboard Glass,	
3 Names of Parts	1-10	Reading Glass, and Copyboard	
3.1 External View	1-10	Cover White Plate	1-32
3.1.1 Copier	1-10	6 Safety and Warnings	1-33
3.1.2 Cassette Unit	1-12	6.1 Safety of Laser Light	1-33
3.1.3 Inner 2-Way Tray	1-13	6.2 CDRH Requirements	1-33
3.2 Cross Section	1-14	6.3 Handling the Laser Unit	1-34
3.2.1 Copier	1-14	6.4 Safety of the Toner	1-35
3.2.2 Cassette Unit	1-16	7 Reproduction Processes	1-36
3.2.3 Inner 2-Way Tray	1-17	7.1 Outline	1-36

CHAPTER 2 BASIC OPERATION

1 Basic Operation	2-1	1.3.3 Wiring Diagram of Electrical	
1.1 Functional Construction	2-1	Components (2/2)	2-8
1.2 Outline of Electrical Circuitry ..	2-2	1.4 Basic Sequence of Operation	2-9
1.2.1 Image Processor PCB	2-2	1.4.1 Outline	2-9
1.2.2 DC Controller PCB	2-3	1.4.2 Basic Sequence of Operation	
1.2.3 Power Supply PCB	2-5	(power-on)	2-10
1.2.4 Analog Processor PCB	2-5	1.4.3 Basic Sequence of Operation	
1.3 Inputs to and Outputs from Electri-		(printing)	2-11
cal Components	2-6	1.5 Controlling the Main Motor	
1.3.1 Wiring Diagram of the Major		(M101)	2-13
PCBs	2-6	1.5.1 Outline	2-13
1.3.2 Wiring Diagram of the Electri-			
cal Components (1/2)	2-7		

CHAPTER 3 IMAGE READING/PROCESSING SYSTEM

1 Outline of Operation	3-1	4.9 Edge Emphasis	3-17
1.1 Outline	3-1	4.10 Editing	3-17
2 Reader Drive System	3-2	4.11 Density Conversion (LUT, i.e., look-up table processing)	3-17
2.1 Outline	3-2	4.11.1 Density Adjustment (F-value conversion)	3-17
2.2 Controlling the Reader Motor... 3-3		4.11.2 Density Correction (g correction)	3-17
2.2.1 Moving the Carriage in Reverse After an Image Scan	3-3	4.12 Binary Processing	3-18
3 Detecting the Size of Originals	3-4	4.12.1 Error Diffusion	3-18
3.1 Outline	3-4	4.13 Image Memory Control	3-18
3.2 Detection by the Original Size Sensors	3-4	4.13.1 Compression/Expansion, Rotation, and Enlargement/ Reduction	3-18
3.3 Detecting the Size of Originals	3-6	4.13.2 SDRAM	3-18
3.4 Detection by the ADF	3-7	4.14 Output Image Processing	3-19
4 Image Processing	3-8	4.14.1 Smoothing	3-19
4.1 Outline	3-8	5 Disassembly and Assembly	3-20
4.2 Contact Sensor	3-9	5.1 Copyboard Glass	3-21
4.2.1 Outline of the Contact Sensor	3-9	5.1.1 Removing the Copyboard Glass	3-21
4.2.2 Construction of the Contact Sensor (CS)	3-10	5.1.2 After Replacing the Copyboard Glass	3-23
4.3 A/D Conversion	3-11	5.2 CS Unit	3-23
4.4 Shading Correction	3-11	5.2.1 Removing the CS Unit	3-23
4.4.1 Black Shading Correction	3-12	5.2.2 Points to Note When Mounting the CS Unit	3-26
4.4.2 White Shading Correction	3-12	5.2.3 After Replacing the CS Unit	3-28
4.5 Re-Ordering	3-12	5.2.4 Points to Note When Handling the CS Unit	3-29
4.6 ABC (auto background control)	3-13	5.3 Reader Motor	3-30
4.7 LED Intensity Adjustment	3-14	5.3.1 Removing the Reader Motor	3-30
4.8 Enlargement/Reduction	3-14	5.3.2 Points to Note When Mounting the Reader Motor	3-31
4.8.1 Enlargement/Reduction in Main Scanning Direction ..	3-14		
4.8.2 Changing the Reproduction Ratio in Sub Scanning Direction	3-16		

CHAPTER 4 LASER EXPOSURE SYSTEM

1 Outline of Operation	4-1	4 Controlling the Scanner Motor	4-8
1.1 Outline	4-1	4.1 Outline	4-8
1.2 Basic Sequence of Operation (laser exposure system)	4-3	4.2 Controlling the Scanner Motor	4-8
2 Generating the Horizontal Signal	4-4	4.3 Scanner Pre-Rotation	4-9
2.1 Outline	4-4	5 Disassembly and Assembly	4-10
2.2 Signals Used	4-4	5.1 Removing the Laser/ Scanner Unit	4-11
3 Laser Driver Circuit	4-6		
3.1 Laser Control	4-6		

CHAPTER 5 IMAGE FORMATION SYSTEM

1 Outline of Processes	5-1	3.4 Controlling the Voltage Level of the Developing DC Bias	5-7
1.2 Sequence of Operation (image formation system)	5-3	4 Controlling the Transfer Charging Roller Bias	5-8
2 Controlling the Primary Charging Roller Bias	5-4	4.1 Outline	5-8
2.1 Outline	5-4	4.2 Turning On and Off the Bias	5-9
2.2 Turning On and Off the Bias	5-5	4.2.1 Turning On and Off the Positive DC Bias	5-9
2.2.1 DC Bias	5-5	4.2.2 Turning On and Off the Negative DC Bias	5-9
2.2.2 AC Bias	5-5	4.3 Controlling the Bias to a Constant Current /Voltage Level	5-9
2.3 Bias Constant Voltage/ Constant Current Control	5-5	4.3.1 Controlling the DC Bias to a Constant Current Level	5-9
2.3.1 DC Bias Constant Voltage Control	5-5	4.3.2 Controlling the DC Bias to a Constant Level	5-9
2.3.2 AC Bias Constant Current Control	5-5	4.4 Correcting the Voltage Level (ATVC control)	5-10
3 Controlling the Developing Bias	5-6	4.5 Controlling the Output According to Operation Mode	5-10
3.1 Outline	5-6	4.5.1 Type of Mode	5-10
3.2 Turning On/Off the Bias	5-7	5 Detecting the Presence/Absence of a Cartridge and the Level of Toner	5-11
3.2.1 DC Bias	5-7	5.1 Outline	5-11
3.2.2 AC Bias	5-7	5.2 Sequence of Detection (level of toner)	5-12
3.3 Controlling the Bias to a Constant Voltage Level	5-7	6 Monitoring the Waste Toner Case ...	5-14
3.3.1 Controlling the Developing DC Bias to a Constant Level	5-7	6.1 Outline	5-14
3.3.2 Controlling the Developing AC Bias to a Constant Voltage Level	5-7		

6.2	Sequence of Operation	5-15	7.2	Developing Assembly	5-18
7	Disassembly and Assembly	5-16	7.2.1	Removing the Developing Assembly	5-18
7.1	Photosensitive Drum	5-17	7.3	Transfer Roller	5-20
7.1.1	Removing the Drum Unit	5-17	7.3.1	Removing the Transfer Roller	5-20
7.1.2	Cleaning the Photosensitive Drum	5-17			

CHAPTER 6 PICKUP/FEEDING SYSTEM

1	Outline	6-1	4.2.4	Jam History	6-17
1.1	Specifications and Constructions	6-1	5	Disassembly and Assembly	6-18
1.2	Arrangement of Major Rollers and Sensors	6-2	5.1	Cassette Pickup Assembly	6-19
2	Controlling the Pickup Assembly	6-3	5.1.1	Remove the Cassette Pickup Assembly	6-19
2.1	Controlling the Pickup from the Cassette	6-3	5.1.2	Removing the Cassette Pickup Roller	6-21
2.1.1	Outline	6-3	5.1.3	Removing the Feeding/ Separation Roller	6-22
2.1.2	Pickup form the Cassette ...	6-4	5.1.4	Removing the Cassette Pickup Solenoid	6-22
2.1.3	Pickup Retry	6-6	5.1.5	Removing the Paper Size Detecting Switch	6-22
2.1.4	Detecting the Size of Paper in the Cassette	6-7	5.1.6	Removing the Cassette Paper Sensor	6-23
2.2	Controlling the Pickup from the Multifeeder Tray	6-8	5.1.7	Removing the Retry Sensor	6-23
2.2.1	Outline	6-8	5.1.8	Removing the Pickup Motor (iR2000 only)	6-23
2.2.2	Pickup from the Multifeeder Tray	6-9	5.2	Multifeeder Tray Assembly	6-24
2.2.3	Multifeeder Retry Operation	6-11	5.2.1	Removing the Multifeeder Tray	6-24
2.2.4	Setting the Paper Size for the Multifeeder Tray (user mode)	6-11	5.2.2	Removing the Manual feed Pickup Roller	6-25
3	Controlling the Registration Roller	6-12	5.2.3	Removing the Separation Pad	6-26
3.1	Detecting the Leading Edge of Paper	6-12	5.2.4	Removing the Multifeeder Paper Sensor	6-26
4	Detecting Jams	6-13	5.2.5	Removing the Multifeeder Pickup Solenoid	6-27
4.1	Outline	6-13	5.3	Drive Assembly	6-27
4.2	Sequence of Jam Detection	6-14	5.3.1	Removing the Drive Assembly	6-27
4.2.1	Delay Jam	6-14			
4.2.2	Stationary Jams	6-16			
4.2.3	Cover Open Jam	6-17			

5.4 Registration Roller Assembly	6-31	5.4.2 Removing the Registration Paper Sensor	6-32
5.4.1 Removing the Registration Roller	6-31	5.4.3 Removing the Registration Clutch	6-33

CHAPTER 7 FIXING SYSTEM

1 Outline of Operation	7-1	2.3.3 Conditions for Error Detection	7-8
1.1 Outline	7-1	2.4 Protective Mechanism	7-10
2 Controlling the Fixing Temperature ..	7-3	3 Disassembly and Assembly	7-11
2.1 Outline	7-3	3.1 Removing the Fixing Assembly	7-12
2.2 Controlling the Temperature	7-4	3.2 Cleaning the Inside of the Fixing Assembly or Replacing Its Parts	7-15
2.2.1 Control at Time of Power-On	7-5	3.3 Removing the Delivery Sensor ..	7-15
2.2.2 Control According to the Type of Paper	7-6	3.4 Removing the Pressure Roller ..	7-16
2.2.3 Control at Time of Down Sequence	7-6	3.5 Removing the Fixing Roller/ Fixing Heater/Separation Claw	7-22
2.2.4 Control in ESS (energy save mode)	7-7	3.6 Mounting the Fixing Roller/ Fixing Heater/Separation Claw	7-24
2.3 Detecting an Error	7-8		
2.3.1 Outline	7-8		
2.3.2 Control in Response to an Error	7-8		

CHAPTER 8 EXTERNALS AND AUXILIARY CONTROL SYSTEM

1 Control Panel	8-1	3 Control at Time of Energy Save Mode	8-6
1.1 The machine's control panel has the following construction	8-1	3.1 Outline	8-6
2 Power supply	8-2	3.2 Control	8-6
2.1 Power Supply	8-2	3.3 Operation	8-8
2.1.1 Outline	8-2	4 Fan	8-9
2.1.2 Rated Outputs from the Power Supply PCB	8-4	4.1 Outline	8-9
2.2 Protective Mechanisms	8-5	4.2 Control	8-10
2.3 High-Voltage Power Supply Circuit	8-5	4.2.1 Controlling the Speed	8-10
		4.2.2 Error Detection	8-11
		4.2.3 Sequence of Operation (fan drive)	8-11

5 Back-Up Battery	8-12	6.1.1 Removing the Front Cover	8-20
5.1 Back-Up Mechanism	8-12	6.1.2 Removing the Control Panel Lower Cover	8-20
5.1.1 Outline	8-12	6.2 Control Panel	8-21
5.1.2 Lithium Battery (BAT1)....	8-13	6.2.1 Removing the Control Panel	8-21
5.2 Back-Up Data	8-15	6.3 Main Motor	8-22
5.2.1 Types of Data	8-15	6.3.1 Removing the Main Motor	8-22
5.2.2 Printing Out the Back-Up Data List	8-16	6.4 Fan	8-23
6 Disassembly and Assembly	8-17		
6.1 External Covers	8-18		

CHAPTER 9 CASSETTE UNIT

1 Outline	9-1	4.2 Cassette Pickup Assembly	9-12
1.1 Outline	9-1	4.2.1 Removing the Cassette Pickup Assembly	9-12
1.2 Specifications and Construction	9-1	4.2.2 Removing the Cassette Pickup Roller	9-12
1.3 Arrangement of Major Rollers and Sensors	9-2	4.2.3 Removing the Cassette Pickup Solenoid	9-12
2 Pickup Assembly	9-4	4.2.4 Removing the Paper Size Switch	9-12
2.1 Pickup Control System	9-4	4.2.5 Removing the Cassette Paper Sensor	9-12
2.2 Pickup Control	9-7	4.2.6 Removing the Re-Try Sensor	9-12
2.3 Cassette Pickup Operation	9-7	4.3 PCBs	9-13
2.4 Pickup Re-Try Operation	9-7	4.3.1 Removing the Cassette Unit Controller PCB	9-13
2.5 Cassette Paper Size Detection ..	9-7	4.4 Drive-Related Parts	9-13
3 Detecting Jams	9-8	4.4.1 Removing the Pickup Motor	9-13
3.1 Outline	9-8		
3.2 Sequence of Jam Detection	9-8		
3.1.1 Delay Jam	9-8		
3.1.2 Stationary Jam	9-8		
3.1.3 Jam History	9-8		
4 Disassembly and Assembly	9-9		
4.1 Removing the Cassette Unit ...	9-10		

CHAPTER 10 INNER 2-WAY TRAY

1 Specifications	10-1	3 Detecting Jams	10-4
1.1 System	10-1	3.1 Outline	10-4
1.2 Arrangement of Rollers and Sensors	10-2	3.2 Sequence of Jam Detection	10-4
2 Controlling Delivery Operation	10-3	3.2.1 Delay Jam	10-4
2.1 Controlling Delivery Operation	10-3	3.2.2 Stationary Jam	10-4
2.2 Selecting a Delivery Slot (user mode)	10-3	3.2.3 Jam History	10-4
		4 Disassembly and Assembly	10-5
		4.1 Removing the Inner 2-Way Unit	10-6

CHAPTER 11 INSTALLATION

1 Selecting the Site of Installation	11-1	2.10 Data Initialization through Service Operation	11-21
2 Unpacking and Installing the Machine	11-3	2.11 Setting the Date/Time (user mode)	11-22
2.1 Points to Note Before Starting the Work	11-3	2.12 Storing the Specifications Report	11-23
2.2 Installing the Machine	11-4	2.13 Checking the Printer Functions (if equipped with printer functions)	11-24
2.3 Unpacking and Removing the Fixing Members	11-5	3 Relocating the Machine	11-25
2.4 Removing the Dummy Drum	11-7	4 Installing the Card Readere-E1 (accessory)	11-26
2.5 Mounting the Drum Unit	11-9	4.1 Points to Note for Installation	11-26
2.6 Mounting the Toner Cartridge	11-11	4.2 Installation	11-27
2.7 Putting Paper in the Cassette	11-14	5 Installing the Image RAM (accessory)	11-31
2.8 Placing Paper in the Multifeeder Tray	11-18	5.1 Installation	11-31
2.9 Checking the Copy Images ...	11-20		

CHAPTER 12 MAINTENANCE AND INSPECTION

1	Periodically Replaced Parts	12-1	3.1	Basic Service Work	12-3
1.1	Copier	12-1	4	Cleaning During a Visit	12-4
1.2	Cassette Unit	12-1	5	Points to Note When Storing/Handling the Drum Unit	12-7
1.3	Inner 2-Way Tray	12-1	5.1	Outline	12-7
2	Guide to Durables	12-2	5.2	Storage and Handling After Remov- ing the Packaging Seal	12-7
2.1	Checking the Timing of Replace- ment	12-2	5.2.1	Storage After Removing the Packaging Seal	12-7
2.2	Copier	12-2	5.2.2	Points to Note When Handling the Drum Unit	12-8
2.3	Cassette Unit	12-2			
2.4	Inner 2-Way Tray	12-2			
3	Basic Service Work	12-3			

CHAPTER 13 TROUBLESHOOTING

1	Image Adjustment Basic Procedure	13-1	2.3.5	When Replacing the DC Controller PCB	13-12
1.1	Image Adjustment Basic Procedure	13-1	2.3.6	When Replacing the Analog Processor PCB	13-12
2	Standards and Adjustments	13-3	2.4	Checking the Sensors	13-13
2.1	Image Adjustments	13-3	2.4.1	Checking the Sensors	13-13
2.1.1	Standards for Image Position	13-3	3	Troubleshooting Image/Operation Faults	13-16
2.1.2	Adjusting the Image Position	13-4	3.1	Making Initial Checks on Image Faults	13-16
2.1.3	Adjusting the Leading Edge Margin for the Printer Unit (if equipped printer functions)	13-5	3.1.1	Site of Installation	13-16
2.1.4	Adjusting the Image Position for Copying	13-7	3.1.2	Checking the Originals ...	13-16
2.2	Fixing System	13-9	3.1.3	Copyboard Cover and Copyboard Glass (standard white plate)	13-16
2.2.1	Checking the Fixing Roller Pressure (nip)	13-9	3.1.4	Checking the Transfer Charg- ing Roller/Static Eliminator	13-17
2.3	Electrical Parts	13-10	3.1.5	Checking the Drum Unit	13-17
2.3.1	When Replacing the Major Parts	13-10	3.1.6	Checking the Paper	13-17
2.3.2	Gain Auto Adjustment	13-10	3.1.7	Image Adjustment Basic Procedure	13-17
2.3.3	When Replacing the Contact Sensor	13-10	3.1.8	Others	13-17
2.3.4	When Replacing the Image Processor PCB	13-11	3.2	Image Fault Samples	13-20
			3.3	Troubleshooting Image Faults	13-21

3.3.1	The copy is too light. (halftone only).....	13-21	3.3.19	The copy is foggy. (cross-feed- ing direction)	13-33
3.3.2	The copy is too light. (both halftone and solid black)	13-21	3.3.20	The copy has poor sharpness.	13-34
3.3.3	The copy is too light. (entire copy, appreciably)	13-21	3.3.21	The copy is blank.	13-35
3.3.4	The copy has uneven density. (darker along front).....	13-24	3.3.22	The copy is solid black. ..	13-36
3.3.5	The copy has uneven density. (lighter along front)	13-24	3.4	Troubleshooting Malfunctions	13-37
3.3.6	The copy is foggy. (entire copy)	13-25	3.4.1	AC power is absent.	13-37
3.3.7	The copy is foggy. (feeding direction).	13-26	3.4.2	DC power is absent.	13-38
3.3.8	The copy has black lines. (feeding direction, fuzzy, thick)	13-26	3.4.3	Pickup operation fails. (cassette).....	13-39
3.3.9	The copy has black lines. (feeding direction, fine) ..	13-26	3.4.4	Pickup operation fails. (multifeeder tray)	13-40
3.3.10	The copy has white strips. (feeding direction)	13-27	3.4.5	Pickup operation fails. (cas- sette unit).....	13-41
3.3.11	The copy has white lines. (feeding direction)	13-27	3.4.6	The vertical path roller fails to rotate.	13-42
3.3.12	The output has white strips. (cross-feeding direction)	13-28	3.4.7	The registration roller fails to rotate.	13-42
3.3.13	The back of the copy is soiled.	13-29	3.4.8	The contact sensor fails to go ON.	13-43
3.3.14	The copy has a poor fixing.	13-30	3.4.9	The speaker fails to operate.	13-43
3.3.15	The copy has displaced registration. (leading edge extremely excessive margin).	13-31	3.4.10	The 'Add Toner' message fails to go OFF.	13-44
3.3.16	The copy has displaced registration. (leading edge, excessive margin).....	13-31	3.4.11	The 'Add Paper' message fails to go OFF. (machine and cassette unit).....	13-45
3.3.17	The copy has displaced registration. (leading edge, no margin)	13-31	3.4.12	The 'Add Paper' message fails to go OFF. (multifeeder tray)	13-46
3.3.18	The copy has blurred images.	13-32	3.4.13	The 'Jam' message fails to go OFF.	13-46
			3.4.14	The 'Waste Toner Full' message does not go OFF.	13-47
			3.4.15	The 'Controller Card Set' message does not go ON.	13-47
			3.4.16	The 'Control Card Set' message does not go OFF.	13-47
			3.5	Troubleshooting Feeding Faults	13-48

3.5.1	Outline	13-48	5.4.2	Setting Numeric Parameters (#3 NUMERIC Param.) ..	13-79
3.5.2	Pickup Assembly	13-49	5.4.3	Selecting the Country/Region of Installation (#5 TYPE)	13-82
3.5.3	Transfer/Feeding Assembly	13-50	5.4.4	Setting Original Read Func- tions (#6 SCANNER)	13-83
3.5.4	Fixing/Delivery Assembly	13-51	5.4.5	Setting the Printer Parameters (#7 PRINTER)	13-86
3.5.5	Feeding Fault (double feeding)	13-52	5.4.6	PDL (#8 PDL)	13-86
3.5.6	Feeding Faults (wrinkling)	13-53	5.4.7	Counters (#9 COUNTER)	13-87
4	Arrangement and Functions of Electrical Parts	13-54	5.4.8	Generating a Report (#10 REPORT)	13-90
4.1	Outline	13-54	5.4.9	Downloading (#11 DOWNLOAD)	13-91
4.1.1	Outline	13-54	5.4.10	Clear (#12 CLEAR)	13-92
4.1.2	Checking the Sensors	13-54	5.4.11	ROM Indication (#13 ROM)	13-93
4.2	Clutches, Solenoids, Motors, and Fans	13-55	5.4.12	Resetting the CS Unit Position (#14 CS SET)	13-93
4.3	Sensors	13-56	5.5	Test Mode (TEST MODE)	13-94
4.4	PCBs	13-57	5.5.1	Outline	13-94
4.5	Switches, Others	13-59	5.5.2	Test Mode Menu	13-95
4.6	Cassette Unit	13-61	5.5.3	D-RAM Test (1: D-RAM)	13-98
4.7	Inner 2-Way Tray	13-63	5.5.4	CCD Test (2: CCD TEST)	13-100
4.8	Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins	13-64	5.5.5	PRINT Test (3: PRINT)	13-101
4.8.1	Image Processor PCB	13-65	5.5.7	Faculty Test (6: FACULTY TEST)	13-102
4.8.2	DC Controller PCB	13-66	5.5.8	Book Read Test (8: BOOK TEST)	13-108
4.8.3	Power Supply PCB	13-67	5.6	Report	13-109
4.8.4	Analog Processor PCB	13-68	5.6.1	User report	13-109
4.8.5	1-Cassette Unit Controller PCB	13-69	5.6.2	Service Report	13-110
4.8.6	2/3-Cassette Unit Controller PCB	13-69	6	Self Diagnosis	13-117
5	Service Mode	13-70	6.1	Outline	13-117
5.1	Outline	13-70	6.2	Error Codes	13-118
5.2	Using the Mode	13-72	6.2.1	Error Codes Used for the Machine	13-118
5.3	Service Mode Menus	13-73	6.2.2	Finisher Error Codes	13-123
5.4	Setting the parameters	13-77			
5.4.1	Registering the Bit Switch (#1 SSSW)	13-77			

CHAPTER 14 VERSION UP

1 Upgrading	14-1	2.3 Installing the Firmware	14-7
1.1 Outline	14-1	2.4 Downloading the System Software	14-10
2 Upgrading by Downloading	14-3	2.5 Downloading for the Finisher-L1	14-17
2.1 Before Starting the Work	14-3	2.5.1 Outline	14-17
2.2 Installing the USB Driver (only if Windows 98 or Windows 98SE)	14-4	2.5.2 Downloading	14-18

APPENDIX

A General Timing Charts	A-1	E Inner 2-way tray	A-7
B General Circuit Diagram	A-3	F Special Tools	A-9
C 1-cassette unit	A-5	G Solvents and Oils	A-11
D 2/3-cassette unit	A-6		

CHAPTER 1

INTRODUCTION

1 Features

1.1 Features

1. High-Speed, High Image Quality

Copying speed	16 copies/min (iR1600 ; 1-to-N, from cassette)
	20 copies/min (iR2000 ; 1-to-No: from cassette)
Reading resolution	: 600 dpi x 600 dpi
Printing resolution	
	Copying : 1,200 (equivalent) x 600 dpi
	PDL output : 2,400 (equivalent) x 600 dpi

2. Large Paper Source

With the addition of accessories, as many as 1,100 sheets (80 g/m²) may be accommodated.

Multifeeder : 100 sheets (A4R, A4, B5, B5R, A5, A5R; 80 g/m²)

- iR1600 Cassette

Cassette 1 : 250 sheets

1-cassette unit (accessory) : 250 sheets

3-cassette unit (accessory) : 250 sheets x 3

- iR2000 Cassette

Cassette 1 : 250 sheets

Cassette 2 : 250 sheets

2-cassette unit (accessory) : 250 sheets x 2

3. Mixed Paper Sizes (of same configuration)

Installation of an ADF will enable mixing of different paper sizes (of the same configuration).

4. Networking

Mounting of a printer board and network interface board will enable the use of the machine as a network printer in an Ethernet environment.

5. Hard Disk

Installation of a hard disk (accessory) will enable storage of image data on the hard disk. Since the images will be read from the hard disk, multiple sets of copies may be obtained faster (RIP-once function).

6. Selection of a Delivery Tray

Installation of an inner 2-way tray (accessory) will enable the selection of trays separately for copier and printer output (in user mode).

7. Auto Start/Interrupt Copying

The existing models retains no more than one job. The machine, however, keeps jobs on queue, thus enabling auto-start/interrupt copying.

2 Specifications

2.1 Copier

2.1.1 Type

Item	Description
Body	Desktop
Copyboard	Fixed
Light source	LED
Lens	Rod lens array
Photosensitive medium	OPC (30-mm dia.)
	T01-201-01

2.1.2 System

Item	Description
Copying	Indirect photoelectric reproduction
Charging	Roller charging
Exposure	Semiconductor laser
Copy density adjustment	Auto or manual
Development	Dry, 1-component toner projection
Pickup	Auto Manual
	Cassette Manual feed tray
Transfer	Roller charging
Separation	Curvature + static (static eliminator)
Cleaning	Rubber blade
Fixing	Heat roller (800 W for 120/230V)
	T01-201-02

2.1.3 Functions

Item	Description
Original type	Sheet, book, 3-D (2 kg max.)
Maximum original size	A3/279.4 x 431.8mm (11" x 17")
Reproduction ratio	Direct (1:1)
4R4E	Reduce I (1:0.500), Reduce II (1:0.707) Reduce III (1:0.816), Reduce IV (1:0.865) Enlarge I (1:1.154), Enlarge II (1:1.224), Enlarge III (1:1.414) Enlarge IV (1:2.000)
4R3E	Reduce I (1:0.500), Reduce II (1:0.647), Reduce III (1:0.733) Reduce IV (1:0.786) Enlarge I (1:1.214), Enlarge II (1:1.294), Enlarge III (1:2.000)
4R2E	Reduce I (1:0.500), Reduce II (1:0.707) Enlarge I (1:1.414), Enlarge II (1:2.000) Zoom (1:0.500 to 2.00; 50% to 200%; 1%-increment)
Wait time	30 sec or less from power-on (at 20°C room temperature)
First copy time	Less than 8.2 sec (from copier cassette; Direct, A4/LTR, non-AE)
Continuous copying	99 copies max.
Copy size	
Cassette	
	AB : A3 max. A5 (vertical) min.
	Inch : 11x17 (279.4 x 431.8 mm) max. STMT (vertical) min.
Multifeeder	
pickup	AB : A3 max. Postcard min.
	Inch : 11x17 (279.4 x 431.8 mm) max. STMT (vertical) min.

T01-201-03

Item	Description
Paper type	
Cassette	Plain paper (60 to 90 g/m ²), recycled paper (60 to 90 g/m ²), colored paper, label sheet
Multifeeder	Plain paper (60 to 90 g/m ²), thick paper (90 to 128 g/m ²), recycled paper (64 to 90 g/m ²), colored paper, transparency, postcard, double-postcard, envelope
Multifeeder	10 mm in height
Tray AB:	Plain paper, recycled paper, colored paper 100 sheets if A4R, A4, B5, B5R, A5, A5R (80 g/m ²) 50 sheets if A3, B4 (80 g/m ²) 50 sheets if transparency, thick paper (90 to 128 g/m ²) 10 sheets if envelope
Inch:	Plain paper, recycled paper, colored paper 100 sheets if LTR, LTRR, STMT, STMTR (80 g/m ²) 50 sheets if transparency, thick paper (90 to 128 g/m ²) 10 sheets if envelope 50 sheets if 11x17 (279.4x431.8 mm), LGL
Cassette	25 mm in depth (250 sheets max. of 80 g/m ²)
Delivery	Face-down (250 sheets max. of 80 g/m ²)
Non-image width	
Leading edge	3.0±2mm
Trailing edge	3.0±2mm
Left/right	3.0±2mm
Auto clear	Yes (2 min standard; may be changed between 0 and 9 min in 1-min increment)
Energy saver	Yes (15 min standard; may be changed between 3 and 30 min in 1-min increment)
Accessory	Cassette unit Finisher ADF Inner 2-way tray Card reader Hard disk Expansion RAM Flash ROM Network interface board *1 PCL printer board *1

*1 : Standard if printer model.

T01-210-04

2.1.4 Others

Item	Description	
Operating environment		
Temperature range	15 to 30°C; 59 to 86°F	
Humidity range	10% to 80%	
Atmospheric pressure range	810.6 to 1013.3 hPa (0.8 to 1.0 atm)	
Power supply	120V (60Hz), 230V (50Hz)	
Serial number	iR1600 : UHRxxxxx	iR2000 : UHSxxxxx
	UJJxxxxx	UJKxxxxx
	SDMxxxxx	SDPxxxxx
	SEDxxxxx	SEExxxxx
	TDWxxxxx	TDYxxxxx
	TENxxxxx	TEPxxxxx
	QSKxxxxx	QSMxxxxx
	RSMxxxxx	RSSxxxxx
	QENxxxxx	QEQxxxxx
	QFBxxxxx	QFCxxxxx
	QSLxxxxx	QSNxxxxx
	RSNxxxxx	REVxxxxx
	RENxxxxx	REPxxxxx
	RFJxxxxx	RFKxxxxx
	RSPxxxxx	RSTxxxxx
	RSQxxxxx	RSTxxxxx
Power consumption		
Maximum	940W	
Standby	30W (reference) *1	
Continuous copying	900W (reference) *1	
Energy saver	High	20W (reference) *1
	Low	4.8W (reference) *1
Noise		
Copying	66 dB or less	
Standby	40 dB or less	
Dimensions	iR 1600 615 (W) x 631 (D) x 560 (H) mm/24.0 (W) x 24.8 (D) x 22.0 (H) in.	
	iR 2000 615 (W) x 631 (D) x 645 (H) mm/24.0 (W) x 24.8 (D) x 25.1 (H) in.	
Weight	iR 1600 38.0kg/83.8lb	
	iR 2000 43.4kg/95.7lb	
Consumables		
Paper	Keep wrapped to avoid humidity.	
Toner	Avoid direct sunshine, and keep at 40°C (104°F) 85% or less.	

*1 : In copyboard cover model; for rated power supply voltage in the absence of printer board.

T01-210-05

Reproduction ratio	Size	Paper size	Copies/min (1-to-N)	
			iR1600	iR2000
Direct	A3 (297 x 420mm)	A3	9	9
	A4 (297 x 420mm)	A4	16	20
	B4 (297 x 420mm)	B4	10	10
	B5 (297 x 420mm)	B5	16	20
	A4R (297 x 420mm)	A4R	12	15
	B5R (297 x 420mm)	B5R	13	16
	A5 (297 x 420mm)	A5	16	20

Auto paper select ON, Auto density adjustment ON, Non-sort, Pickup from cassette

T01-201-06

The above specifications are subject to change for product improvement.

Reproduction ratio	Size	Paper size	Copies/min (1-to-N)	
			iR1600	iR2000
Direct	279.4 x 431.8mm	279.4 x 431.8mm	9	9
	(11" x 17")	(11" x 17")		
	LTR	LTR	16	20
	LGL	LGL	10	10
	LTRR	LTRR	12	16
	STMT	STMT	16	20

Auto paper select ON, Auto density adjustment ON, Non-sort, Pickup from cassette

T01-201-07

The above specifications are subject to change for product improvement.

2.2 Cassette Unit

Item	Description
Pickup	Claw-less (retard) method
Paper type	Same as host.
Cassette	25 mm deep (250 sheets of 80 g/m ² paper max.)
Serial Number	1-cassette type : XGQxxxxx 2-cassette type : XGRxxxxx 3-cassette type : XGSxxxxx
Dimensions	
1-cassette type	560 (W) x 564.3 (D) x 90.8 (H) mm 22.0 (W) x 22.0 (D) x 3.54 (H) in.
2-cassette type	560 (W) x 564.3 (D) x 175.8 (H) mm 22.0 (W) x 22.0 (D) x 6.79 (H) in.
3-cassette type	560 (W) x 564.3 (D) x 260.8 (H) mm 22.0 (W) x 22.0 (D) x 10.2 (H) in.
Weight	
1-cassette type	6.3 kg/13.9 lb (approx.; including cassette)
2-cassette type	12.7 kg/28.0 lb (approx.; including cassette)
3-cassette type	19.1 kg/42.1 lb (approx.; including cassette)
Power supply	DC power from host
Operating environment	Same as host
Temperature range	
Humidity range	
Atmospheric pressure	

T01-202-01

The above specifications are subject to change for product improvement.

Sample of manual. Download All 487 pages at:

<https://www.arepairmanual.com/downloads/2001-canon-ir1600ir2000-printer-service-repair-workshop-manual/>