



# Bobcat®


---

## Service Manual

# 430 Compact Excavator

---

**S/N AA8711001 & Above**  
**S/N AA8811001 & Above**  
**S/N AACF11001 & Above**  
**S/N AACG11001 & Above**

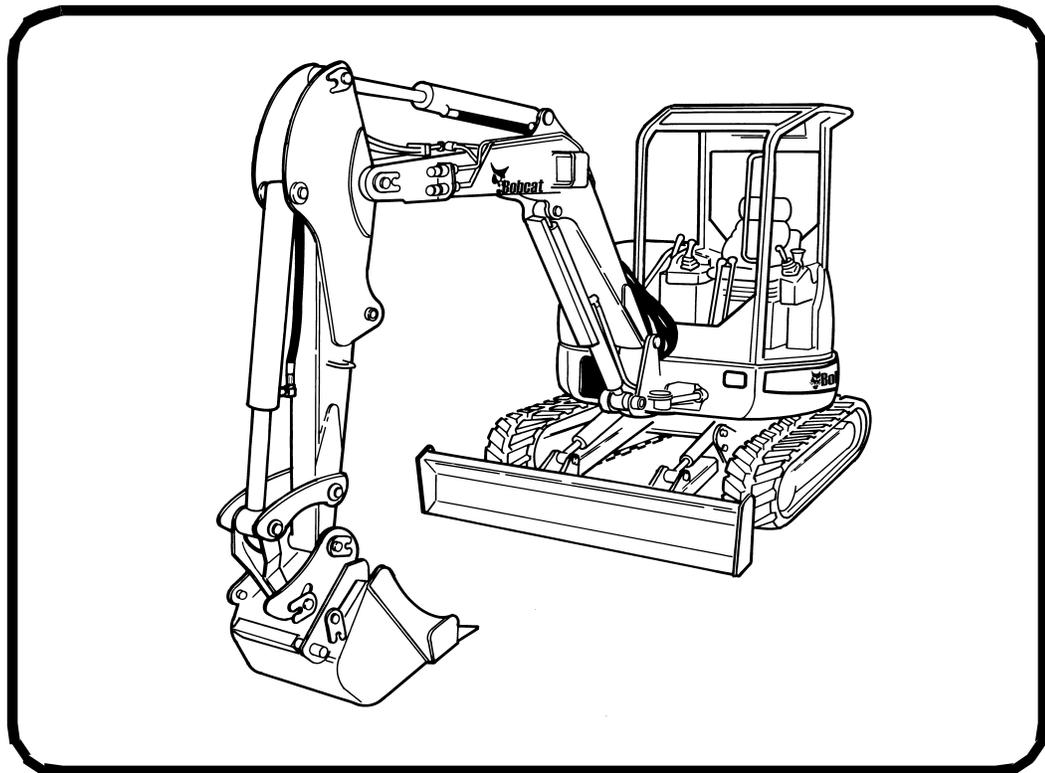

Product: 2009 Bobcat 430 Compact Excavator Service Repair Workshop Manual(S/N AA8711001 & Above,S/N AA8811001 & Above,S/N AA8911001 & Above,S/N AA9011001 & Above)  
Full Download: [https://www.arepairmanual.com/downloads/2009-bobcat-430-comp  
act-excavator-service-repair-workshop-manuals-n-aa8711001-ab  
oves-n-aa8811001-aboves-n-aac11001-aboves-n-aac21001-above  
/](https://www.arepairmanual.com/downloads/2009-bobcat-430-compact-excavator-service-repair-workshop-manuals-n-aa8711001-above-n-aa8811001-above-n-aac11001-above-n-aac21001-above-n-aac31001-above-n-aac41001-above-n-aac51001-above-n-aac61001-above-n-aac71001-above-n-aac81001-above-n-aac91001-above-n-aac101001-above-n-aac111001-above-n-aac121001-above-n-aac131001-above-n-aac141001-above-n-aac151001-above-n-aac161001-above-n-aac171001-above-n-aac181001-above-n-aac191001-above-n-aac201001-above-n-aac211001-above-n-aac221001-above-n-aac231001-above-n-aac241001-above-n-aac251001-above-n-aac261001-above-n-aac271001-above-n-aac281001-above-n-aac291001-above-n-aac301001-above-n-aac311001-above-n-aac321001-above-n-aac331001-above-n-aac341001-above-n-aac351001-above-n-aac361001-above-n-aac371001-above-n-aac381001-above-n-aac391001-above-n-aac401001-above-n-aac411001-above-n-aac421001-above-n-aac431001-above-n-aac441001-above-n-aac451001-above-n-aac461001-above-n-aac471001-above-n-aac481001-above-n-aac491001-above-n-aac501001-above-n-aac511001-above-n-aac521001-above-n-aac531001-above-n-aac541001-above-n-aac551001-above-n-aac561001-above-n-aac571001-above-n-aac581001-above-n-aac591001-above-n-aac601001-above-n-aac611001-above-n-aac621001-above-n-aac631001-above-n-aac641001-above-n-aac651001-above-n-aac661001-above-n-aac671001-above-n-aac681001-above-n-aac691001-above-n-aac701001-above-n-aac711001-above-n-aac721001-above-n-aac731001-above-n-aac741001-above-n-aac751001-above-n-aac761001-above-n-aac771001-above-n-aac781001-above-n-aac791001-above-n-aac801001-above-n-aac811001-above-n-aac821001-above-n-aac831001-above-n-aac841001-above-n-aac851001-above-n-aac861001-above-n-aac871001-above-n-aac881001-above-n-aac891001-above-n-aac901001-above-n-aac911001-above-n-aac921001-above-n-aac931001-above-n-aac941001-above-n-aac951001-above-n-aac961001-above-n-aac971001-above-n-aac981001-above-n-aac991001-above-n-aac1001001-above)

Sample of manual. Download All 1168 pages at:  
<https://www.arepairmanual.com/downloads/2009-bobcat-430-compact-excavator-service-repair-workshop-manuals-n-aa8711001-above-n-aa8811001-above-n-aac11001-above-n-aac21001-above-n-aac31001-above-n-aac41001-above-n-aac51001-above-n-aac61001-above-n-aac71001-above-n-aac81001-above-n-aac91001-above-n-aac101001-above-n-aac111001-above-n-aac121001-above-n-aac131001-above-n-aac141001-above-n-aac151001-above-n-aac161001-above-n-aac171001-above-n-aac181001-above-n-aac191001-above-n-aac201001-above-n-aac211001-above-n-aac221001-above-n-aac231001-above-n-aac241001-above-n-aac251001-above-n-aac261001-above-n-aac271001-above-n-aac281001-above-n-aac291001-above-n-aac301001-above-n-aac311001-above-n-aac321001-above-n-aac331001-above-n-aac341001-above-n-aac351001-above-n-aac361001-above-n-aac371001-above-n-aac381001-above-n-aac391001-above-n-aac401001-above-n-aac411001-above-n-aac421001-above-n-aac431001-above-n-aac441001-above-n-aac451001-above-n-aac461001-above-n-aac471001-above-n-aac481001-above-n-aac491001-above-n-aac501001-above-n-aac511001-above-n-aac521001-above-n-aac531001-above-n-aac541001-above-n-aac551001-above-n-aac561001-above-n-aac571001-above-n-aac581001-above-n-aac591001-above-n-aac601001-above-n-aac611001-above-n-aac621001-above-n-aac631001-above-n-aac641001-above-n-aac651001-above-n-aac661001-above-n-aac671001-above-n-aac681001-above-n-aac691001-above-n-aac701001-above-n-aac711001-above-n-aac721001-above-n-aac731001-above-n-aac741001-above-n-aac751001-above-n-aac761001-above-n-aac771001-above-n-aac781001-above-n-aac791001-above-n-aac801001-above-n-aac811001-above-n-aac821001-above-n-aac831001-above-n-aac841001-above-n-aac851001-above-n-aac861001-above-n-aac871001-above-n-aac881001-above-n-aac891001-above-n-aac901001-above-n-aac911001-above-n-aac921001-above-n-aac931001-above-n-aac941001-above-n-aac951001-above-n-aac961001-above-n-aac971001-above-n-aac981001-above-n-aac991001-above-n-aac1001001-above>

# MAINTENANCE SAFETY




## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

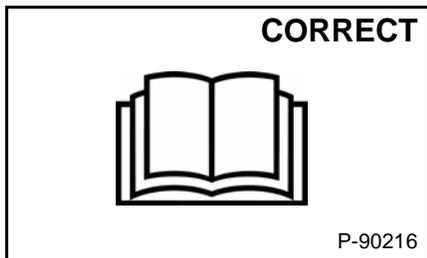


P-90216

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

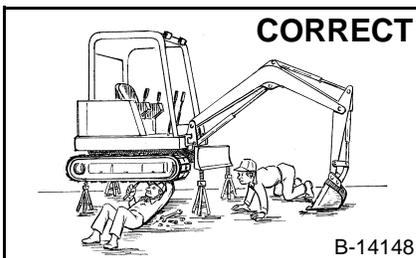


B-14148

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

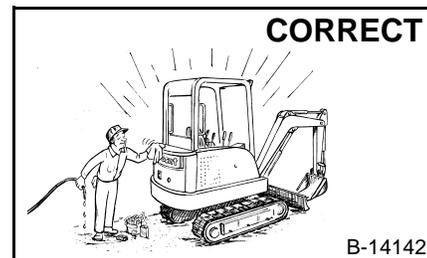

B-14142

- ⚠ Cleaning and maintenance are required daily.

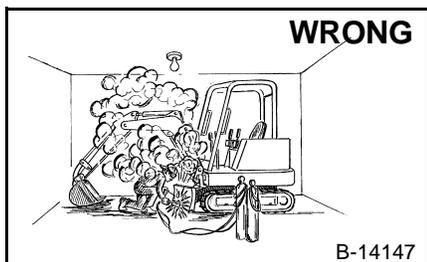


B-14147

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.




B-14141

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

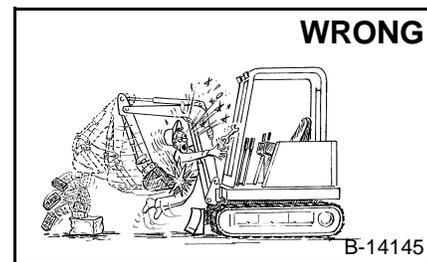


B-14145

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

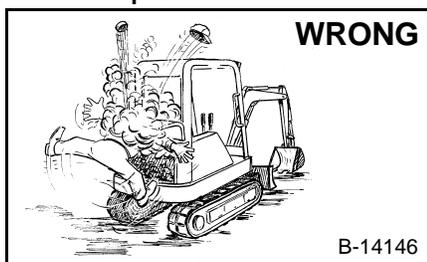

B-14146

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

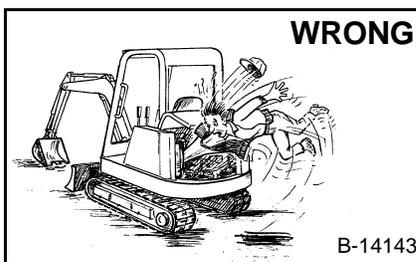

B-14143

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

AIR CLEANER .....	10-01, 70-01	EVAPORATOR .....	80-01
AIR CONDITIONING SERVICE .....	80-01	EVAPORATOR/HEATER UNIT .....	80-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	EXPANSION VALVE .....	80-01
ALTERNATOR .....	60-01	EXTENDIBLE ARM CYLINDER .....	20-01
ANGLE BLADE .....	40-01	FAN/CHARGE PUMP .....	30-01
ANGLE BLADE ASSEMBLY .....	40-01	FLOORMAT AND FLOOR PLATES .....	50-01
ANGLE BLADE CUTTING EDGE .....	40-01	FUEL, COOLANT AND LUBRICANTS .....	SPEC-01
ANGLE BLADE CYLINDER .....	20-01	FUEL LEVEL SENDER .....	60-01
ANGLE BLADE VALVE .....	20-01	FUEL SYSTEM .....	10-01
ARM .....	50-01	FUEL TANK .....	50-01
ARM CYLINDER .....	20-01		
		GENERAL AIR CONDITIONING SERVICE GUIDELINES	
BASIC TROUBLESHOOTING .....	80-01	.....	80-01
BATTERY .....	60-01		
BLADE .....	40-01	HEATER AIR FILTER (WITH CAB OPTION ONLY)	
BLADE CONTROL .....	50-01	.....	10-01
BLADE CYLINDER .....	20-01	HEATER COIL .....	80-01
BLOWER FAN .....	80-01	HEATER VALVE .....	80-01
BOOM .....	50-01	HORN .....	50-01
BOOM CYLINDER .....	20-01	HYDRAULIC CONTROL VALVE .....	20-01
BOOM SWING CYLINDER .....	20-01	HYDRAULIC CONNECTION SPECS .....	SPEC-01
BOOM SWING LOCK VALVE .....	20-01	HYDRAULIC FLUID SPECIFICATIONS .....	SPEC-01
BUCKET .....	50-01	HYDRAULIC FILTER MOUNT .....	20-01
BUCKET CYLINDER .....	20-01	HYDRAULIC PUMP .....	20-01
BUILD UP VALVE .....	20-01	HYDRAULIC PUMP START-UP .....	20-01
		HYDRAULIC RESERVOIR .....	20-01
CAB .....	50-01	HYDRAULIC SYSTEM .....	10-01
CASE DRAIN FILTER .....	20-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CLAMP .....	50-01	HYDRAULIC X-CHANGE VALVE .....	50-01
CLAMP CYLINDER .....	20-01	HYDROSTATIC PUMP .....	30-01
COMPONENTS .....	80-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
COMPRESSOR .....	80-01		
CONDENSOR .....	80-01	LEFT CONTROL LEVER (JOYSTICK) .....	20-01
CONVERSIONS .....	SPEC-01	LEFT CONSOLE .....	50-01
CONTROL LINKAGE ASSEMBLY .....	50-01	LIFTING AND BLOCKING THE EXCAVATOR .....	10-01
CONTROL PATTERN SELECTOR VALVE .....	20-01	LIFTING THE EXCAVATOR .....	10-01
COOLING FAN .....	20-01	LIGHTS .....	60-01
COOLING SYSTEM .....	10-01	LOWER TRACK ROLLER .....	40-01
CROSSPORT RELIEF VALVE .....	20-01	LUBRICATION OF THE HYDRAULIC EXCAVATOR	
		.....	10-01
DELUXE INSTRUMENT PANEL SETUP .....	60-01		
DIAGNOSTICS SERVICE CODE .....	60-01	MAIN RELIEF VALVES .....	20-01
DIRECT TO TANK VALVE .....	20-01	MANIFOLD ASSEMBLY/ACCUMULATOR .....	20-01
DRIVE BELT .....	30-01	MUFFLER .....	70-01
DRIVE BELT SHIELD .....	30-01		
		OIL COOLER .....	20-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	OPERATOR CAB (ROPS/TOPS) .....	10-01
ENGINE .....	70-01		
ENGINE ACCESSORY DRIVE BELT .....	10-01	PORT RELIEF VALVES .....	20-01
ENGINE COMPONENTS AND TESTING .....	70-01	PRESSURE REDUCING VALVE .....	20-01
ENGINE FLYWHEEL .....	70-01	PRESSURE RELIEF VALVE .....	80-01
ENGINE LUBRICATION SYSTEM .....	10-01	PRESSURE SWITCH .....	80-01
ENGINE SPECIFICATIONS .....	SPEC-01		
ENGINE SPEED CONTROL .....	50-01		

## ALPHABETICAL INDEX (CONT'D)

RADIATOR .....	70-01
RECEIVER/DRIER .....	80-01
RECONDITIONING THE ENGINE .....	70-01
REGULAR MAINTENANCE .....	80-01
RIGHT CONTROL LEVER (JOYSTICK) .....	20-01
RIGHT CONSOLE .....	50-01
RIGHT PEDAL AND LINKAGE.....	50-01
RIGHT SIDE COVER .....	10-01, 50-01
ROPS CANOPY.....	50-01
SAFETY .....	80-01
SEAT AND SEAT MOUNT.....	50-01
SERVICE SCHEDULE .....	10-01
SPARK ARRESTOR MUFFLER.....	10-01
SPECIFICATIONS .....	SPEC-01
STARTER .....	60-01
SWING CIRCLE GEAR .....	40-01
SWING FRAME .....	50-01
SWING MOTOR .....	20-01
SWING MOTOR DRIVE CARRIER .....	20-01
SWIVEL JOINT.....	20-01
SYSTEM CHARGING AND RECLAMATION .....	80-01
SYSTEM TROUBLESHOOTING CHART .....	80-01
TAILGATE.....	10-01, 50-01
TEMPERATURE/PRESSURE .....	80-01
THERMOSTAT.....	80-01
TORQUE SPECIFICATIONS .....	SPEC-01
TRACK DAMAGE IDENTIFICATION.....	40-01
TRACK FRAME .....	40-01
TRACK IDLER .....	40-01
TRACKS .....	40-01
TRANSPORTING THE EXCAVATOR.....	10-01
TRAVEL CONTROL VALVE .....	20-01
TRAVEL CONTROLS .....	50-01
TRAVEL MOTOR.....	10-01, 20-01
TRAVEL PILOT PRESSURE.....	30-01
TROUBLESHOOTING.....	70-01
TWO SPEED SWITCH .....	60-01
UPPERSTRUCTURE .....	50-01
UPPERSTRUCTURE SLEW LOCK .....	10-01, 50-01
UPPER TRACK ROLLER.....	40-01
X-CHANGE .....	50-01
X-CHANGE (HYDRAULIC).....	50-01

## CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS .....	IV
FIRE PREVENTION .....	VII
SERIAL NUMBER LOCATIONS .....	VIII
DELIVERY REPORT.....	IX
BOBCAT EXCAVATOR IDENTIFICATION .....	X
SAFETY & MAINTENANCE .....	10-01
HYDRAULIC SYSTEM .....	20-01
HYDROSTATIC SYSTEM.....	30-01
UNDERCARRIAGE.....	40-01
UPPERSTRUCTURE & SWING SECTION .....	50-01
ELECTRICAL SYSTEM & ANALYSIS.....	60-01
ENGINE SERVICE .....	70-01
HEATING, VENTILATION, AIR CONDITIONING .....	80-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**UNDER-  
CARRIAGE**

**UPPER-  
STRUCTURE &  
SWING SECTION**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

**ENGINE  
SERVICE**

**HVAC**


**SPECIFICATIONS**

# FOREWORD


This manual is for the Bobcat excavator mechanic. It provides necessary servicing and adjustment procedures for the Bobcat excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the excavator has had service or repair:


1. Check that the ROPS/TOPS/FOPS is in good condition and is not modified.

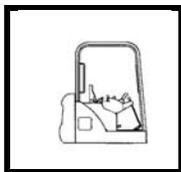


9. Safety treads must be in good condition.

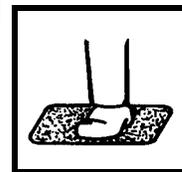


2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

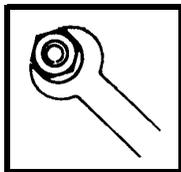


10. Check for correct function of indicator lamps.

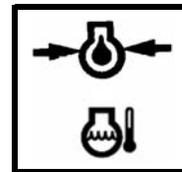

3. The seat belt must be correctly installed, functional and in good condition.

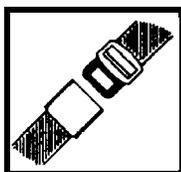


11. Check hydraulic fluid level, engine oil level and fuel supply.

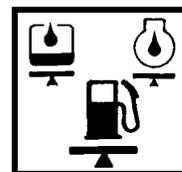


4. Machine signs (decals) must be legible and in the correct location.



12. Inspect for fuel, oil or hydraulic fluid leaks.

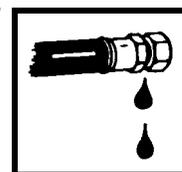

5. Travel levers, control levers and foot pedals must return to neutral. Check that the pedal locks are in working order.

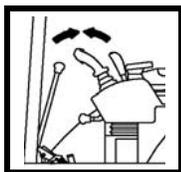


13. Lubricate the excavator.



6. Check for correct function of the work lights.




14. Check the condition of the battery and cables.

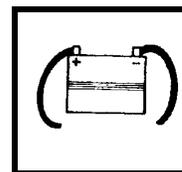


7. Enclosure door latches must open and close freely.




15. Inspect the air cleaner for damage or leaks. Check the condition of the element.

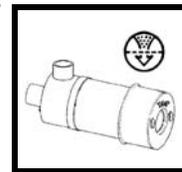

8. Attachment locking pins must function correctly and be in good condition.

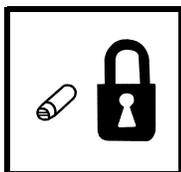


16. Check the electrical charging system.

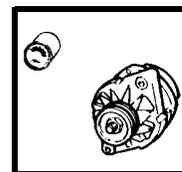


FW EXC-0308 SM

20. Check tracks for wear and tension. Use only approved tracks.

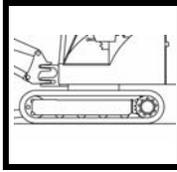


21. Inspect for loose or broken parts or connections.

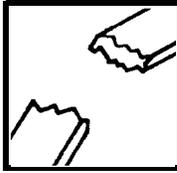


22. Check for any field modification not completed.




23. Operate the machine and check all functions.

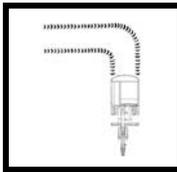

24. Check the control console interlocks for correct function.

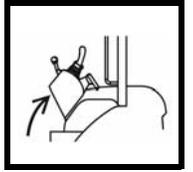

25. Inspect the X-Change for wear or damage. Repair or replace damaged parts.

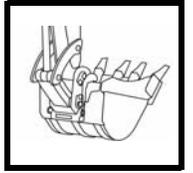

26. Check function or condition of all equipped options and accessories (examples: special applications kit, motion alarm, etc.).



27. Recommend to the owner that all necessary corrections be made before the machine is returned to service.



**CALIFORNIA  
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

## SAFETY INSTRUCTIONS



### Safety Alert Symbol

This symbol with a warning statement means: “Warning, be alert! Your safety is involved!” Carefully read the message that follows.



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator’s Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

## IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



## DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



## WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator’s Handbook fastened to the operator cab. It’s brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Compact Excavator Operator Training Course is available through your local dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). This course is intended to provide rules and practices of correct operation of the Bobcat excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). They provide information for safe and correct service procedures.
- The Bobcat compact excavator Safety Video is available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com).

SI EXC-0308 SM

## SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

**Call Before You Dig**  
**Dial 811 (USA Only)**  
**1-888-258-0808 (USA & Canada)**

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

## FIRE PREVENTION



### Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

### Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

### Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

## Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

### Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

### Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

## Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

## **FIRE PREVENTION (CONT'D)**


### **Welding And Grinding**

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

### **Fire Extinguishers**

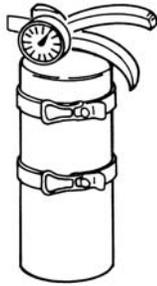


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

## SERIAL NUMBER LOCATIONS

Always use the serial number of the excavator when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

**Figure 1**

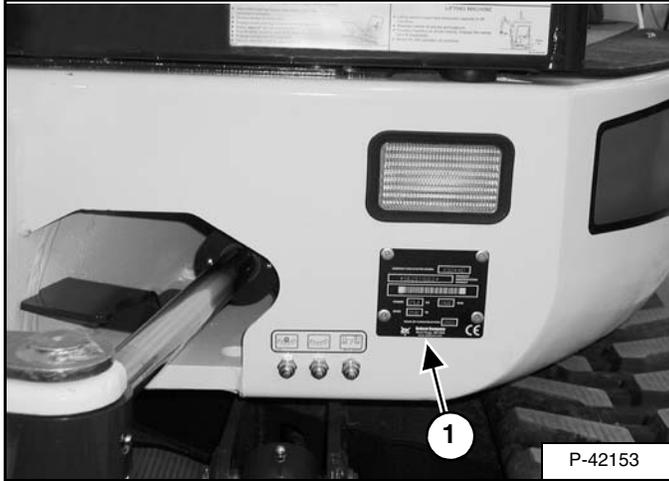

### Excavator Serial Number

The excavator serial number plate (Item 1) [Figure 1] is located on the frame of the machine in the location shown.

Explanation of Excavator Serial Number:

XXXX XXXXX

Module 2. - Production Sequence (Series)


Module 1. - Model / Engine Combination

1. The 4 digit Model/Engine Combination Module number identifies the model number and engine combination.


2. The 5 digit Production Sequence Number identifies the order which the excavator is produced.

## Engine Serial Number

**Figure 2**

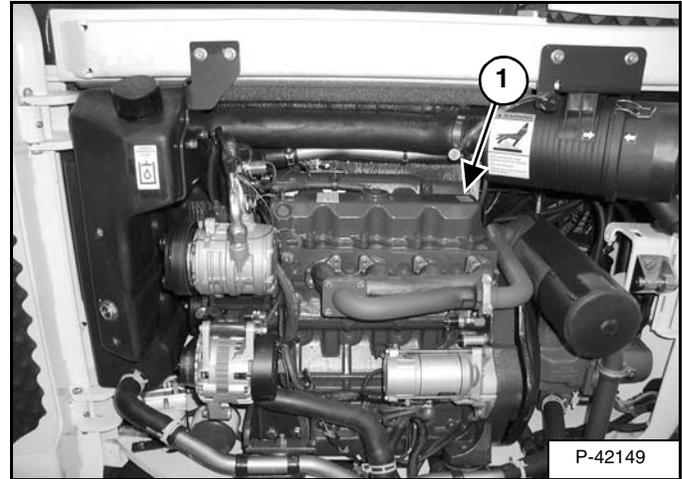

**Figure 3**

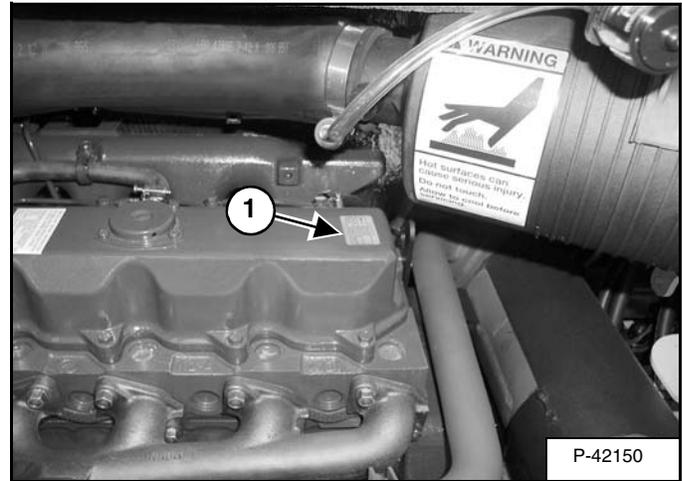

The engine serial number (Item 1) [Figure 2] & [Figure 3] is located on the engine in the location shown.


## DELIVERY REPORT

Figure 4

The diagram shows a form layout for a delivery report. It includes a title 'DELIVERY REPORT' at the top right, a 'WARNING' section, and various areas for text entry represented by horizontal lines. A reference code 'B-16315' is located in the bottom right corner of the form's frame.

The delivery report must be filled out by the dealer and signed by the owner or operator when the Bobcat Excavator is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

**BOBCAT EXCAVATOR IDENTIFICATION**

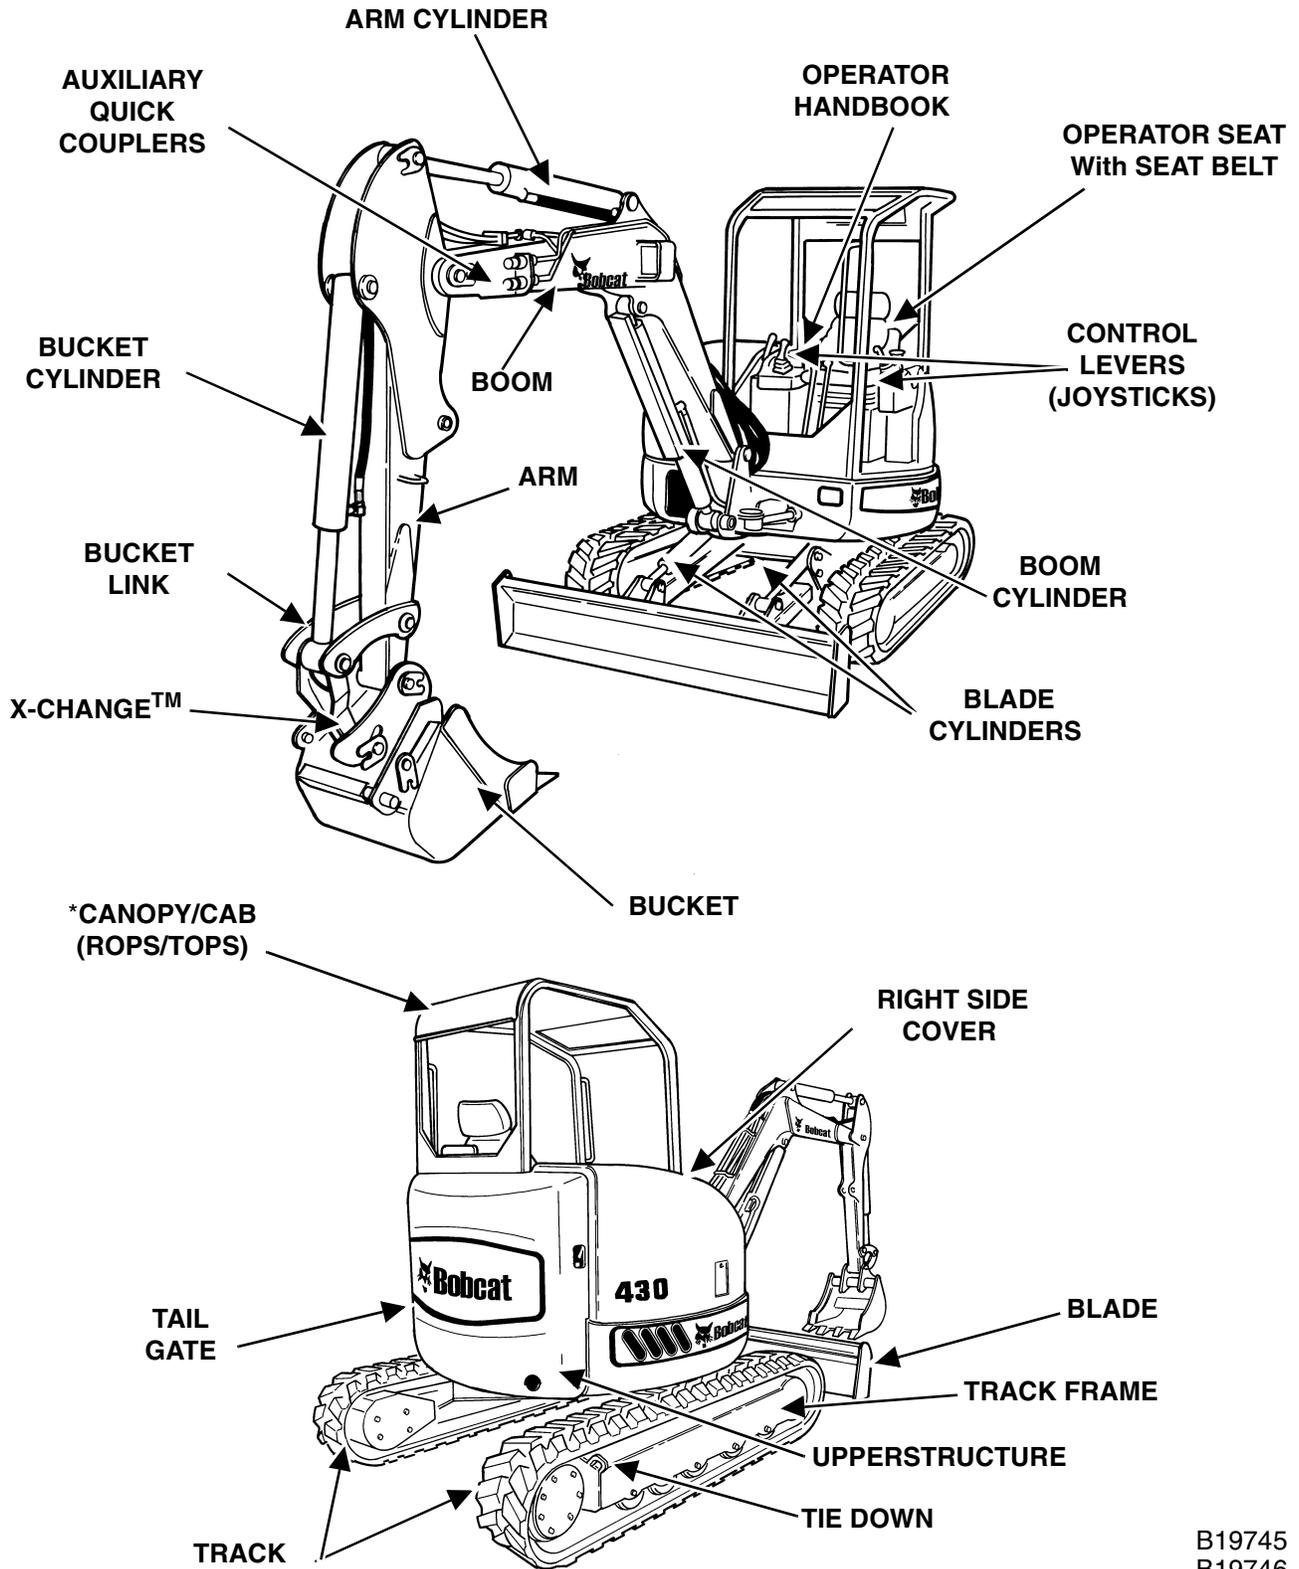

B19745  
B19746

\* FOGS (Falling Object Guards) is available from your Bobcat Excavator dealer.

**SAFETY & MAINTENANCE**

AIR CLEANER . . . . . 10-60-1  
    Daily Check . . . . . 10-60-1  
    Replacing The Elements . . . . . 10-60-1

ENGINE COOLING SYSTEM . . . . . 10-70-1  
    Checking Coolant Level . . . . . 10-70-1  
    Cleaning The Cooling System . . . . . 10-70-1  
    Removing And Replacing Coolant . . . . . 10-70-2

ALTERNATOR BELT . . . . . 10-140-1  
    Belt Adjustment . . . . . 10-140-1  
    Belt Tension . . . . . 10-140-1

ENGINE LUBRICATION SYSTEM . . . . . 10-90-1  
    Checking And Adding Engine Oil . . . . . 10-90-1  
    Removing And Replacing Oil And Filter . . . . . 10-90-1  
    Engine Oil Chart . . . . . 10-90-1

EXCAVATOR STORAGE AND RETURN TO SERVICE . . . . . 10-170-1  
    Return to Service . . . . . 10-170-1  
    Storage . . . . . 10-170-1

FUEL SYSTEM . . . . . 10-80-1  
    Biodiesel Blend Fuel . . . . . 10-80-1  
    Draining The Fuel Tank . . . . . 10-80-4  
    Filling The Fuel Tank . . . . . 10-80-2  
    Fuel Specifications . . . . . 10-80-1  
    Inline Fuel Filter . . . . . 10-80-4  
    Removing Air From The Fuel System . . . . . 10-80-4  
    Removing Water . . . . . 10-80-3  
    Replacing Element . . . . . 10-80-3

HEATER AIR FILTER (WITH CAB OPTION ONLY) . . . . . 10-61-1  
    Removal And Installation . . . . . 10-61-1

HYDRAULIC SYSTEM . . . . . 10-100-1  
    Checking And Adding Fluid . . . . . 10-100-1  
    Diagnostic Couplers . . . . . 10-100-5  
    Hydraulic Fluid Chart . . . . . 10-100-2  
    Removing And Replacing The Fan Filter . . . . . 10-100-5  
    Removing And Replacing The Case Drain Filter . . . . . 10-100-4  
    Removing And Replacing The Hydraulic Filter . . . . . 10-100-4  
    Removing And Replacing The Hydraulic Fluid . . . . . 10-100-3

**Continued On Next Page**

## SAFETY & MAINTENANCE (CONT'D)

LIFTING AND BLOCKING THE EXCAVATOR . . . . .	10-10-1
Procedure . . . . .	10-10-1
LUBRICATING THE EXCAVATOR . . . . .	10-110-1
Lubrication Locations . . . . .	10-110-1
LIFTING THE EXCAVATOR . . . . .	10-12-1
Procedure . . . . .	10-12-1
MOTION ALARM SYSTEM (IF EQUIPPED) . . . . .	10-190-1
Adjusting Switch Position . . . . .	10-190-1
Description . . . . .	10-190-1
Inspecting . . . . .	10-190-1
OPERATOR CAB (ROPS/TOPS) . . . . .	10-20-1
Cab Door . . . . .	10-20-1
Description . . . . .	10-20-1
Front Window . . . . .	10-20-2
Front Wiper . . . . .	10-20-4
Right Side Window . . . . .	10-20-5
Heating, Ventilation, and Air Conditioning Duct . . . . .	10-20-6
Window Washer Reservoir . . . . .	10-20-4
PIVOT PINS . . . . .	10-160-1
Inspection And Maintenance . . . . .	10-160-1
RIGHT SIDE COVER . . . . .	10-41-1
Opening And Closing The Right Side Cover . . . . .	10-41-1
SEAT BELT . . . . .	10-150-1
Inspection And Maintenance . . . . .	10-150-1
SERVICE SCHEDULE . . . . .	10-50-1
Chart . . . . .	10-50-1
SPARK ARRESTOR MUFFLER . . . . .	10-130-1
Cleaning Procedure . . . . .	10-130-1

Continued On Next Page

## SAFETY & MAINTENANCE (CONT'D)

STOPPING THE ENGINE AND LEAVING THE EXCAVATOR . . . . .	10-180-1
Emergency Exits . . . . .	10-180-2
Procedure . . . . .	10-180-1
TAILGATE . . . . .	10-40-1
Adjusting The Latch . . . . .	10-40-1
Opening And Closing The Tailgate . . . . .	10-40-1
TRANSPORTING THE EXCAVATOR ON A TRAILER . . . . .	10-30-1
Fastening . . . . .	10-30-1
Loading And Unloading . . . . .	10-30-1
TRAVEL MOTOR . . . . .	10-120-1
Checking And Adding Oil . . . . .	10-120-1
Removing And Replacing Oil . . . . .	10-120-1
UPPERSTRUCTURE SLEW LOCK . . . . .	10-11-1
Operation . . . . .	10-11-1

**TIGHTEN ALL HARDWARE PER SIZE TO GRADE 5 TORQUE (SEE STANDARD TORQUE SPECIFICATIONS FOR BOLTS, SPEC SECTION) UNLESS OTHERWISE SPECIFIED.**

**SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE AND STANDARD ITEMS MAY VARY.**




**Bobcat®**

## LIFTING AND BLOCKING THE EXCAVATOR

### Procedure

Figure 10-10-1

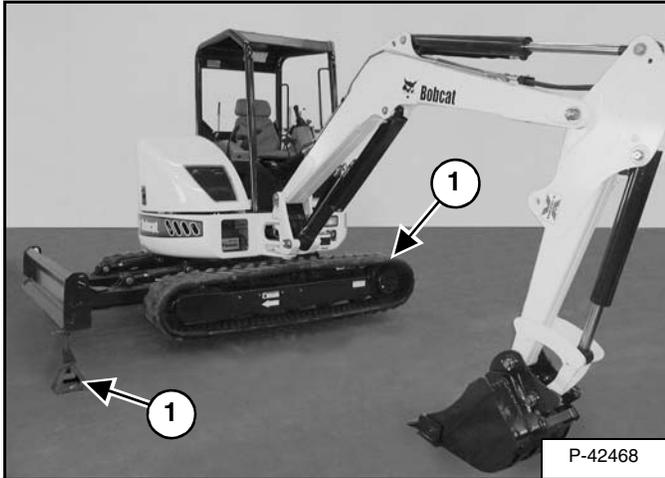

Raise one side of the machine (approximately 4 in.) using the boom and arm [Figure 10-10-1].

Raise the blade fully and install jack stands under the blade and track frame (Item 1) [Figure 10-10-1]. Lower the boom until all machine weight is on the jack stands.

**NOTE: For machines equipped with angle blade, make sure blade is in the straight position prior to lifting.**

Repeat the procedure for the other side.

Stop the engine.

## WARNING

### AVOID INJURY

Keep fingers and hands out of pinch points when checking the track tension.

W-2142-0903

## WARNING

Put jackstands under the blade and rear corners of the undercarriage before working under the machine. Failure to block up the machine may allow it to move or fall and result in injury or death.

W-2218-1195




**Bobcat®**

## UPPERSTRUCTURE SLEW LOCK

### Operation

Figure 10-11-1

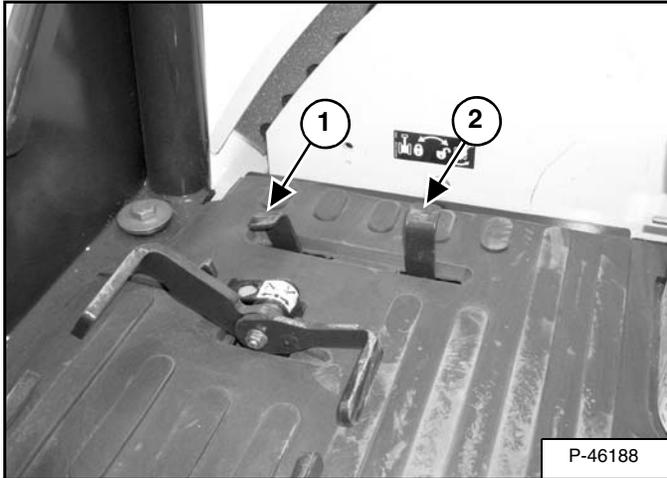

Push down on the front (Item 1) [Figure 10-11-1] of the foot pedal to engage the upperstructure swing lock.

Push down on the rear (Item 2) [Figure 10-11-1] to disengage the upperstructure slew lock.

**NOTE:** upperstructure must be in the straight forward or straight rearward position for upperstructure to lock.

## WARNING

### AVOID INJURY

The upperstructure slew lock lever must be engaged when transporting the machine.

W-2197-0904

## WARNING

### AVOID INJURY OR DEATH

Never use attachments or buckets which are not approved by Bobcat Company. Buckets and attachments for safe loads of specified densities are approved for each model. Unapproved attachments can cause injury or death.

W-2052-0907




**Bobcat®**

## LIFTING THE EXCAVATOR

### Procedure

**NOTE:** For machines equipped with angle blade, make sure blade is in the straight position prior to lifting.

Figure 10-12-1

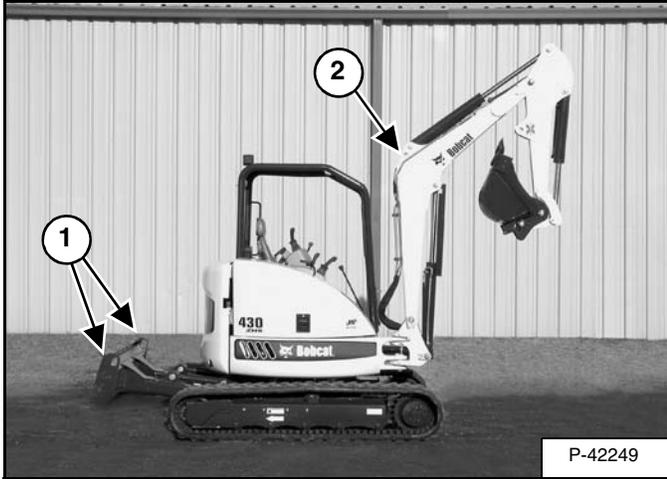

Fully extend the cylinders of the bucket, arm, and boom so that the excavator is in the position as shown [Figure 10-12-1].

Swing upperstructure so the blade is to the rear.

Engage the swing locking lever.

Raise the blade all the way.

Put all the control levers in neutral.


## WARNING

### AVOID INJURY OR DEATH

- Use a lifting fixture with sufficient capacity for the weight of the excavator plus any added attachments.
- Maintain center of gravity and balance when lifting.
- Do not swing boom or upperstructure. Engage the upperstructure slew lock.
- Never lift with operator on machine.

W-2202-0607


Figure 10-12-2

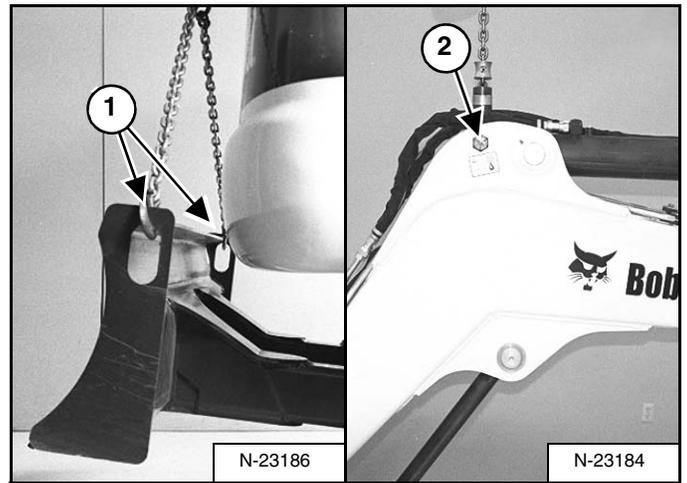

Fasten chains to the ends of the blade (Item 1) [Figure 10-12-1] & [Figure 10-12-2] and up to a lifting device above the canopy/cab. Place protective material between the chains and ROPS/taillgate to prevent damage.

Install a 1 in. (25 mm) bolt and nut (Grade 5 or 8) through the holes at the boom (Item 2) [Figure 10-12-1] & [Figure 10-12-2]. Fasten a chain from the bolt to the lift fixture.

Figure 10-12-3

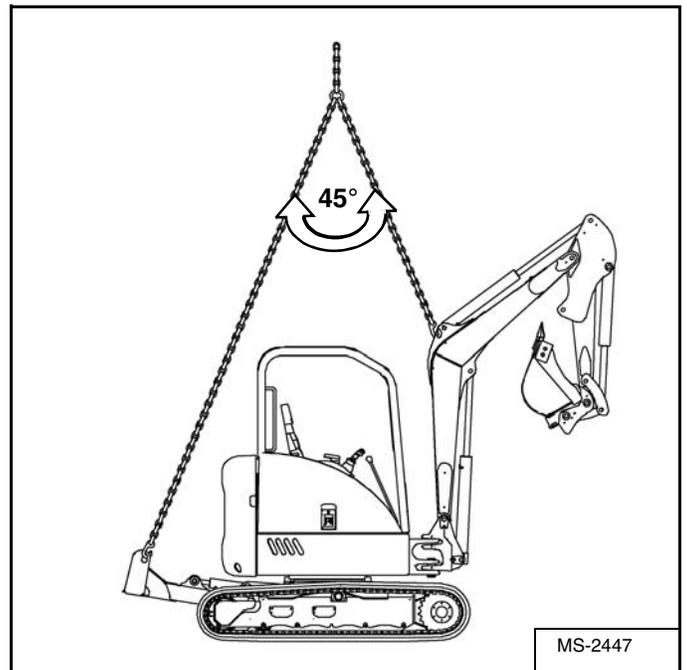

Keep the angle between the front and rear chains less than 45° [Figure 10-12-3].



**Bobcat®**

## OPERATOR CAB (ROPS/TOPS)

### Description

The excavator has an optional operator cab (ROPS/TOPS) (Roll Over Protective Structure / Tip Over Protective Structure). The ROPS / TOPS meets SAE J1040, ISO 3471 and ISO 12117.


## WARNING

Never modify operator cab by welding, grinding, drilling holes or adding attachments unless instructed to do so by Bobcat Company. Changes to the cab can cause loss of operator protection from rollover and falling objects, and result in injury or death.

W-2069-0200

### Cab Door

Figure 10-20-1

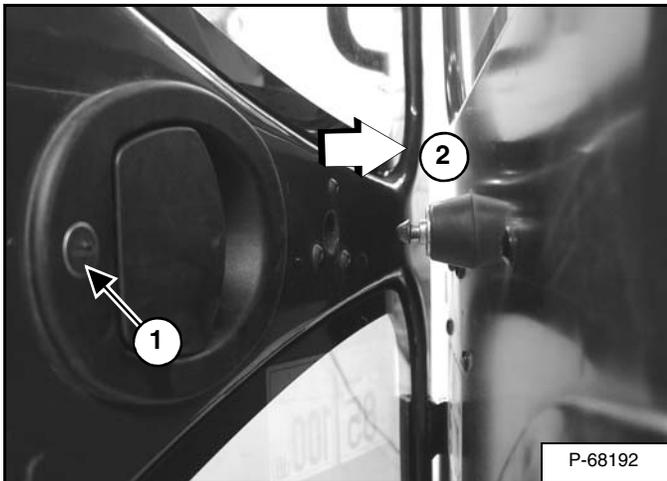

The cab door (Item 1) [Figure 10-20-1] can be locked with the same key as the starter switch (if equipped).

Push the door all the way open (Item 2) [Figure 10-20-1] until the latch engages to hold the door in the open position.

Figure 10-20-2




When the door is in the open position, push down on the latch (Item 1) [Figure 10-20-2] and close the door.

From inside the cab, open the door using the handle (Item 2) [Figure 10-20-2].

## OPERATOR CAB (ROPS/TOPS) (CONT'D)

### Front Window


Figure 10-20-3

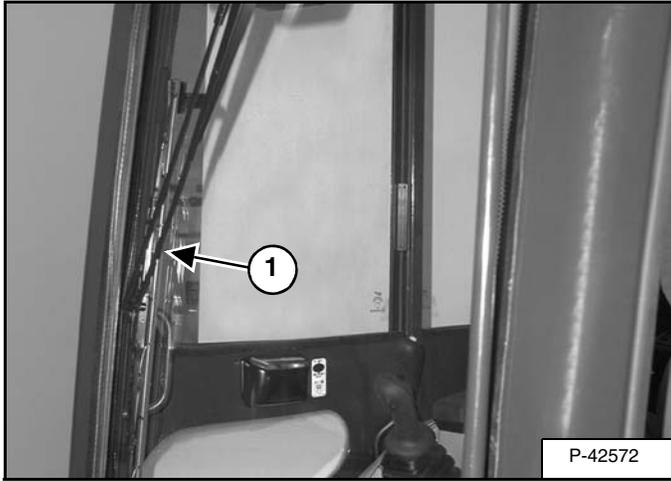

The front window is equipped with a wiper (Item 1) [Figure 10-20-3] and washer.


### Opening The Front Window

Figure 10-20-4

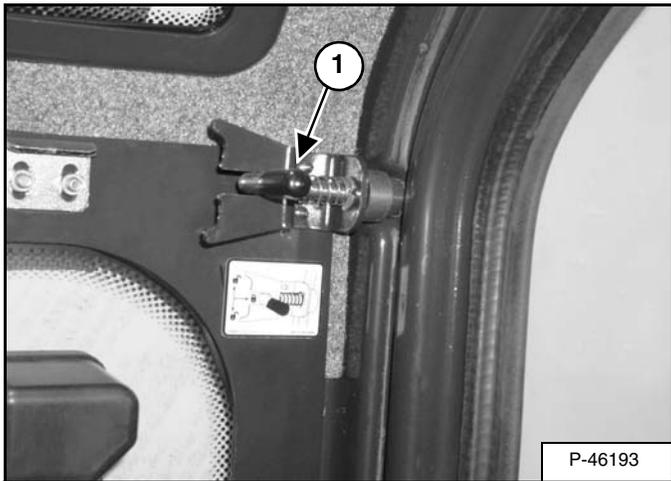

Retract the two top window latch pins (Item 1) [Figure 10-20-4].

Figure 10-20-5

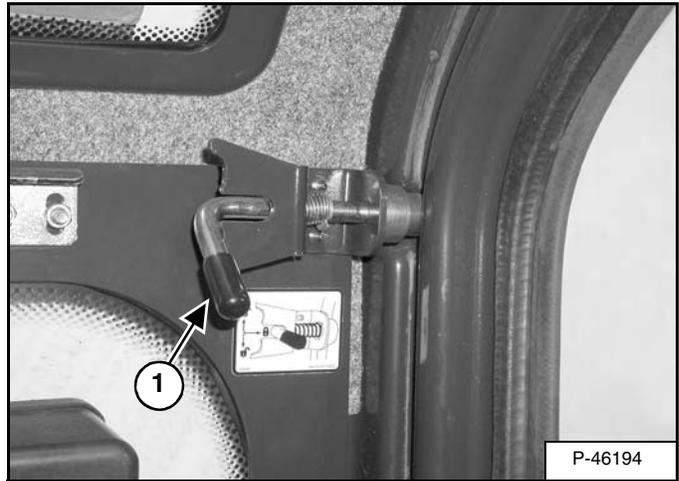

Turn the two top latches (Item 1) [Figure 10-20-5] to the unlocked position.

Figure 10-20-6




Use both window grab handles to pull the top of the window in [Figure 10-20-6].

Continue moving the window in and up over the operator's head until the window is fully raised.

## OPERATOR CAB (ROPS/TOPS) (CONT'D)

### Front Window (Cont'd)

Figure 10-20-7

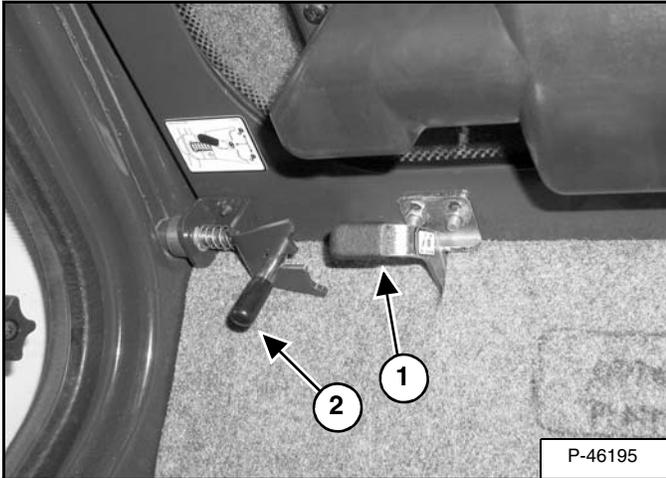

When the window is fully raised, the latch (Item 1) will close on the bracket. Turn the two top latches (Item 2) **[Figure 10-20-7]** to the locked position.

#### *Closing The Front Window*

Support the window while releasing both window latch pins and placing the pins in the unlocked position **[Figure 10-20-7]**.

Support the window using the left grab handle and pull down on the latch (Item 1) **[Figure 10-20-7]** to release the window.

Use both window grab handles to pull the window down **[Figure 10-20-6]**.

Rotate the top latches (Item 1) **[Figure 10-20-5]** to the locked position (Item 1) **[Figure 10-20-4]**.

**OPERATOR CAB (ROPS/ TOPS) (CONT'D)**

**Front Wiper**


**Figure 10-20-8**



The front window is equipped with a wiper (Item 1) [Figure 10-20-8] and washer.

**Window Washer Reservoir**

**Figure 10-20-9**

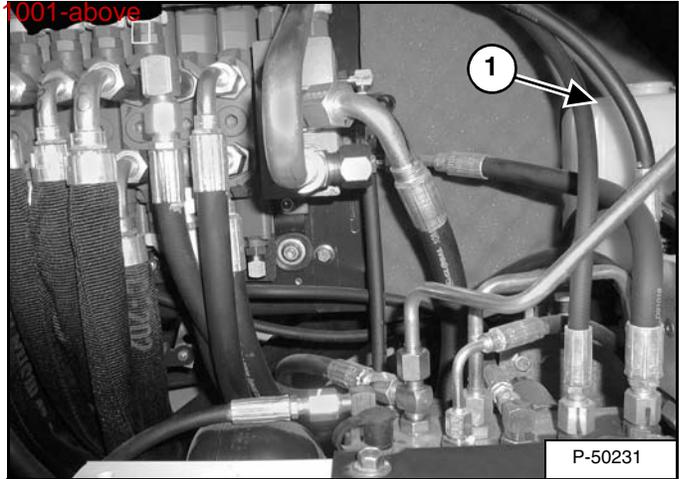

The window washer reservoir (Item 1) [Figure 10-20-9] is located under the right side cover.