

# HYDRAULIC EXCAVATOR

## SHOP MANUAL

## CASE CX14

## INDEX

1	SPECIFICATIONS
2	MAINTENANCE
3	SYSTEM
4	DISASSEMBLING
5	TROUBLESHOOTING
6	ENGINE
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENTS

OPT	E/G	TROUBLESHOOTING	DISASSEMBLING	SYSTEM	MAINTENANCE	SPECIFICATIONS
-----	-----	-----------------	---------------	--------	-------------	----------------

# CASE

Book Code No. **S5PE0001E** (1)

Sample of manual. Download All 497 pages at:

<https://www.arepairmanual.com/downloads/case-cx14-crawler-excavator-service-manual-6-49190/>

0001

Product: Case CX14 Crawler Excavator Service Manual 6-49190

Full Download: <https://www.arepairmanual.com/downloads/case-cx14-crawler-excavator-service-manual-6-49190/>

**Shop Manual Model Number Cross Reference:**  
**SK13SR is CASE Model CX14**

Sample of manual. Download All 497 pages at:

<https://www.arepairmanual.com/downloads/case-cx14-crawler-excavator-service-manual-6-49190/>

# INDEX

SK13SR

Book Code No.			Title	Index No.
S5PE0101E 2000-9	S5PE0101E① 2001-7		SPECIFICATIONS	PRELIMINARY REMARKS PE01
S5PE0201E 2000-9	S5PE0201E① 2001-7			SPECIFICATIONS PE02
S5PE0301E 2000-9	S5PE0301E① 2001-7			ATTACHMENT DIMENSIONS PE03
S5PE1101E 2000-9				TOOLS PE11
S5PE1201E 2000-9				STANDARD MAINTENANCE TIME TABLE PE12
S5PE1301E 2000-9	S5PE1301E① 2001-7			MAINTENANCE STANDARDS AND TEST PROCEDURES PE13
—				
S5PE2201E 2000-9	S5PE2201E① 2001-7			HYDRAULIC SYSTEM PE22
S5PE2301E 2000-9	S5PE2301E① 2001-7			ELECTRICAL SYSTEM PE23
S5PE2401E 2000-9	S5PE2401E① 2001-7			COMPONENTS SYSTEM PE24
—			DISASSEMBLING	
—				
S5PE3101E 2000-9				WHOLE DISASSEMBLING & ASSEMBLING PE31
S5PE3201E 2000-9	S5PE3201E① 2001-7			ATTACHMENTS PE32
S5PE3301E 2000-9	S5PE3301E① 2001-7			UPPER SLEWING STRUCTURE PE33
S5PE3401E 2000-9	S5PE3401E① 2001-7		TROUBLESHOOTING	TRAVEL SYSTEM PE34
—				
S5PE4201E 2000-9				HYDRAULIC SYSTEM PE42
S5PE4301E 2000-9				ELECTRICAL SYSTEM PE43
S5PE4401E 2000-9			E/G	ENGINE PE44
S5PE5101E 2000-9				ENGINE PE51
OPT				
—				
—				
—				
—				

# SAFETY PRECAUTIONS

## 1.1 GENERAL SAFETY INFORMATION

### WARNING

Do Not operate or perform any maintenance on this machine until all instructions found in the OPERATION & MAINTENANCE MANUAL have been thoroughly read and understood.

Improper operation or maintenance of this machine may cause accidents and could result in serious injury or death.

Always keep the manual in the operator's seat pocket.

If it is missing or damaged, place an order with an authorized CASE Distributor for a replacement.

If you have any questions, please consult an authorized CASE Distributor.

1. Most accidents, which occur during operation, are due to neglect of precautionary measures and safety rules. Sufficient care should be taken to avoid these accidents. Erroneous operation, lubrication or maintenance services are very dangerous and may cause injury or death of personnel. Therefore all precautionary measures, NOTES, DANGERS, WARNINGS and CAUTIONS contained in the manual and on the machine should be read and understood by all personnel before starting any work with or on the machine.

2. Operation, inspection, and maintenance should be carefully carried out, and safety must be given the first priority. Messages of safety are indicated with marks. The safety information contained in the manual is intended only to supplement safety codes, insurance requirements, local laws, rules and regulations.

3. Messages of safety appear in the manual and on the machine : All messages of safety are identified by either word of "DANGER", "WARNING" and "CAUTION".

a. **DANGER**- Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury and is represented as follows:

### DANGER

b. **WARNING**- Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury and is represented as follows:

### WARNING

c. **CAUTION**- Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against possible damage to the machine and its components and is represented as follows:

### CAUTION

4. It is very difficult to forecast every danger that may occur during operation. However, safety can be ensured by fully understanding proper operating procedures for this machine according to methods recommended by CASE.
5. While operating the machine, be sure to perform work with great care, so as not to damage the machine, or allow accidents to occur.
6. Continue studying the manual until all Safety, Operation and Maintenance procedures are completely understood by all persons working with the machine.

## 1.2 SAFETY PRECAUTIONS

### WARNING

The proper and safe lubrication and maintenance for this machine, recommended by CASE, are outlined in the OPERATOR'S MANUAL for the machine.

Improper performance of lubrication or maintenance procedures are dangerous and could result in injury or death. Read and understand the MANUAL before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this manual. Use proper lifting procedures when removing any components. Weight of components table is shown in the section ; SPECIFICATIONS.

## SAFETY PRECAUTIONS

The following is a list of basic precautions that must always be observed.

1. Read and understand all Warning plates and decal on the machine before Operating, Maintaining or Repairing this machine.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when using hammers, punches or drifts on any part of the machine or attachments. Use welders gloves, hood/goggles, apron and the protective clothing appropriate to the welding job being performed. Do not wear loose fitting or torn clothing. Remove all rings from fingers, loose jewelry, confine long hair and loose clothing before working on this machinery.
3. Disconnect the battery and hang a "Do Not Operate" tag in the Operators Compartment. Remove ignition keys.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block the machine so it does not roll while working on or under the machine. Hang a "Do Not Operate" tag in the Operators Compartment.
5. Do not work on any machine that is supported only by lift, jacks or a hoist. Always use blocks or jack stands, capable of supporting the machine, before performing any disassembly.
6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, dozer, or other attachments to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, dozer, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face to the machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 20kg (45lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and compartments.
11. Be careful when removing cover plates. Gradually back off the last two capscrews or nuts located at opposite ends of the cover or device and carefully pry cover loose to relieve any spring or other pressure, before removing the last two capscrews or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.
13. Always use the proper tools that are in good condition and that are suited for the job at hand. Be sure you understand how to use them before performing any service work.
14. Reinstall all fasteners with the same part number. Do not use a lesser quality fastener if replacements are necessary.
15. Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of the parent metal. Make sure to disconnect battery before any welding procedures are attempted.



### WARNING



Do not operate this machine unless you have read and understand the instructions in the OPERATOR'S MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, dozer, or other attachments to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, dozer, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.

## **SAFETY PRECAUTIONS**

---

16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will be damaged in operation of the machine by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution and replace the guard or shield after repair is completed.
18. The maintenance and repair work while holding the bucket raised is dangerous due to the possibility of a falling attachment. Don't fail to lower the attachment and place the bucket to the ground before starting the work.
19. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Very small (pinhole) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pinhole leaks.
20. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
21. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
22. Be careful when servicing or separating the tracks (crawlers). Chips can fly when removing or installing a track (crawlers) pin. Wear safety glasses and long sleeve protective clothing. Tracks (crawlers) can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks (crawlers) are disengaged from the sprockets. Block the machine to prevent it from moving.

**PE01**

# **CASE CX14**

*See next page for model cross reference.*

## **PRELIMINARY REMARKS**

### **TABLE OF CONTENTS**

1. GENERAL PRECAUTIONS FOR REPAIRS .....	1-1
2. ESCAPING PROCEDURE IN CASE OF EMERGENCY .....	1-4
3. INTERNATIONAL UNIT CONVERSION SYSTEM .....	1-5

**Shop Manual Model Number Cross Reference:**  
**SK13SR is CASE Model CX14**

## 1. GENERAL PRECAUTIONS FOR REPAIRS



### 1.1 PREPARATION BEFORE DISASSEMBLING

#### (1) Understanding operating procedure

Read OPERATION & MAINTENANCE MANUAL carefully to understand the operating procedure.

#### (2) Cleaning machines

Remove soil, mud, and dust from the machine before carrying it into the service shop to prevent loss of work efficiency, damage of parts, and difficulty in rust prevention and dust protection while reassembling.

#### (3) Inspecting machines

Identify the parts to be disassembled before starting work, determine the disassembling procedure by yourself considering the workshop situations etc., and request procurement of necessary parts in advance.

#### (4) Recording

Record the following items for communication and prevention of recurring malfunction.

##### 1) Inspection date and place

2) Model name, applicable machine number, and hour meter read

3) Trouble condition, place and cause, if any

4) Visible oil leakage, water leakage and damage

5) Clogging of filters, oil level, oil quality, oil contamination and loosening of connections

6) Result of consideration if any problem exists based on the operation rate per month calculated from hour meter indication after the last inspection date.

#### (5) Arrangement and cleaning in service shop


1) Tools required for repair work.

2) Prepare space to place the disassembled parts.

3) Prepare oil containers for spilling oil etc.

preliminary meeting before starting work.

- 3) Stop the engine before starting inspection and maintenance to prevent the operator being caught in machine.
- 4) Identify the location of a first-aid kit and a fire extinguisher, and also where to make contact in a state of emergency.
- 5) Choose a hard, level and safe place, and place the attachment on the ground securely.
- 6) Use a lifter such as a crane to remove heavy parts (20 kg [45 lbs] or more) from the machine.
- 7) Use proper tools, and replace or repair defective tools.
- 8) Support the machine and attachment with supports or blocks if the work is performed in the lifted condition.



### 1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT

#### (1) Removing hydraulic equipment

1) Before disconnecting pipes, release the hydraulic pressure of the system, or open the return side cover and take out the filter.

2) Carefully drain oil of the removed pipes into a containers without spilling on the floor.

3) Apply plugs or caps on the pipe ends to avoid oil spillage and dust intrusion.

4) Clean off the external surface of the equipment before disassembling, and drain hydraulic and gear oil before placing it on the workbench.

#### (2) Disassembling hydraulic equipment

1) Do not disassemble, reassemble or modify the hydraulic equipment without the permission of the manufacturer, who is not responsible for the performance and function of the product after reassembling.

2) When disassembling and reassembling for unavoidable reason, refer the work to qualified personnel who have the specific knowledge or completed the parts service training.

3) Provide matching marks to facilitate reassembling work.

4) Before starting the work, read the manual of disassembling procedure, if it is provided, and decide whether the work can be performed by yourself.



### 1.2 SAFETY IN DISASSEMBLING AND ASSEMBLING

- 1) Wear appropriate clothes with long sleeves, safety shoes, safety helmet and protective glasses.
- 2) Suspend warning tag "DO NOT OPERATE" from the doorknob or the operating lever, and have a

- 5) Use the special jig and tools without fail if they are specified.
- 6) If it is hard to remove a part according to the procedure, do not try it by force but investigate the cause.
- 7) Place the removed parts in order and attach tags to facilitate the reassembling.
- 8) Note the location and quantity of parts commonly applied to multiple locations.

(3) **Inspecting parts**

- 1) Ensure that the disassembled parts are free from seizure, interference and uneven contact.
- 2) Measure and record wear condition of parts and clearance.
- 3) If the problem is found in a part, repair or replace it with a new one.

(4) **Reassembling hydraulic equipment**

- 1) Turn ON the ventilation fan or open windows to maintain good ventilation prior to starting the cleaning of parts.
- 2) Perform rough and finish cleaning before assembling.
- 3) Remove washing oil by air and apply clean hydraulic or gear oil for assembling.
- 4) Always replace the removed O-rings, backup rings and oil seals with new ones by applying grease in advance.
- 5) Remove dirt and moisture from and perform degreasing on the surface where liquid gasket to be applied.
- 6) Remove rust preventive agent from the new parts before use.
- 7) Fit bearings, bushings and oil seals using special jigs.
- 8) Assemble the parts utilizing matching marks.
- 9) Ensure all the parts are completely assembled after the work.

(5) **Installing hydraulic equipment**



- 1) Ensure hydraulic oil and lubricant are properly supplied.
- 2) Perform air bleeding when:
  - a. Hydraulic oil changed
  - b. Parts of suction side piping replaced
  - c. Hydraulic pump installed
  - d. Slewing motor installed
  - e. Travel motor installed
  - f. Hydraulic cylinder installed

⚠ • Operation of the hydraulic equipment without filling hydraulic oil or lubricant or without performing air bleeding will result in damage to the equipment.

- 3) Perform air bleeding of the hydraulic pump and slewing motor after loosening the upper drain plug, starting the engine and keep it in low idle condition. Complete the air bleeding when seeping of hydraulic oil is recognized, and tightly plug.
- 4) Perform air bleeding of the travel motor and the hydraulic cylinders by running the engine for more than 5 minutes at low speed without load.

⚠ • Do not allow the hydraulic cylinder to bottom on the stroke end just after the maintenance.

- 5) Perform air bleeding of pilot line by performing a series of digging, slewing and travel.
- 6) Check hydraulic oil level after placing the attachment to the oil check position, and replenish oil if necessary.

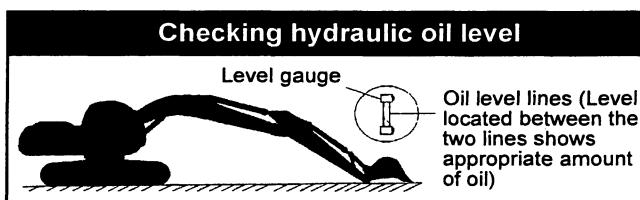

#### 1.4 ELECTRICAL EQUIPMENT

- (1) Do not disassemble electrical equipment.
- (2) Handle it carefully not to drop and give a shock.
- (3) Turn the key OFF prior to connecting and disconnecting work.
- (4) Disconnect the connector by holding it and pressing the lock. Do not pull the wire to apply force to the caulking portion.
- (5) Connect the connector and ensure it is completely locked.
- (6) Turn the key OFF prior to touching the terminal of starter or generator.
- (7) Remove the ground (earth) terminal of battery

when handling tools around the battery or its relay.


- (8) Do not splash water on the electrical equipment and connectors during machine washing.
- (9) Check for moisture adhesion inside the water-proof connector after pulling it out, since it is hard to remove moisture from the connector. If moisture adhesion is found, dry it completely before the connection.



- Battery electrolyte is hazardous.

Battery electrolyte is dilute sulfuric acid. Exposure of skin or eyes to this liquid will cause burning or loss of eyesight. If the exposure occurs, take the following emergency measures and seek the advice of a medical specialist.

- When skin exposed: Wash with water and soap sufficiently.
- When eyes exposed: Immediately wash away with city water continuously for more than 10 minutes.
- When a large amount of the liquid flows out: Neutralize with sodium bicarbonate or wash away with city water.
- When swallowed: Drink a large amount of milk or water.
- When clothes exposed: Immediately undress and wash.



## 1.5 HYDRAULIC PARTS

### 1) O-ring

- Ensure O-rings have elasticity and are not damaged before use.
- Use the appropriate O-rings. O-rings are made of various kinds of materials having different hardness to apply to a variety of parts, such as the part for moving or fixed portion, subjected to high pressure, and exposed to corrosive fluid, even if the size is same.
- Fit the O-rings without distortion and bend.
- Always handle floating seals as a pair.

### 2) Flexible hose (F hose)

- Use the appropriate parts. Different parts are used depending on the working pressure even

the size of fitting and the total length of the hose is same.

- Tighten the fitting at the specified torque. Ensure no kink, tension, interference nor oil leakage is recognized.

## 1.6 WELDING REPAIR

- (1) Refer repair welding to qualified personnel according to the appropriate procedure.
- (2) Disconnect the ground (earth) cable of the battery before starting the repair. Failure to do so will cause damage to the electrical equipment.
- (3) Move away the articles in advance that may cause fire if exposed to sparks.
- (4) Before starting the repair of the attachment, do not fail to cover the plated surface of the piston rod with flameproof sheet to prevent it from being exposed to sparks.

## 1.7 ENVIRONMENTAL MEASURE

- (1) Run the engine at the place that is sufficiently ventilated.
- (2) Industrial waste disposal  
Dispose of the following parts according to the relevant regulations:  
Waste oil and waste container  
Battery
- (3) Precautions for handling hydraulic oil  
Exposure of eyes to hydraulic oil will cause inflammation. Wear protective glasses before handling to avoid an accident. If an eye is exposed to the oil, take the following emergency measures:  
• When an eye exposed: Immediately wash away with city water sufficiently till stimulative feeling vanishes.  
• When swallowed: Do not let vomit, and receive medical treatment immediately.  
• When skin exposed: Wash with water and soap sufficiently.
- (4) Others  
Use replacement parts and lubricants authorized as the KOBELCO genuine parts.

## 2. ESCAPING PROCEDURE IN CASE OF EMERGENCY

### 2.1 WHEN CAB DOOR DOES NOT OPEN ;(CAB spec. only)

- (1) Escape from the front window.
- (2) Escape from skylight.
- (3) When front window and skylight do not open ;  
The life hammer is always reserved on the rear left side of cab. Break the glass on the rear side of cab, and escape from there.

**⚠** • Break the window glass with care to protect eyes, and don't fail to break the window on which label "Emergency exit" is stuck.

- (4) In addition, the life hammer is equipped with a cutter on the lever side to cut the seat belt, etc.

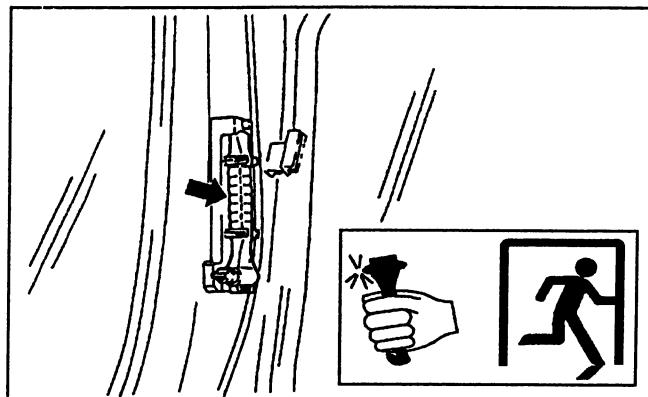


Fig. 2-1 LIFE HAMMER AND "EMERGENCY EXIT" SEAL

### 2.2 TOWING THE MACHINE

1. If the machine should become stuck in soft soil areas it may be necessary to tow the machine. Attach a wire rope or chain, with the capacity to pull the machine out, to the lower frame axles.
2. Attach other end to the vehicle used to pull the machine. Operate the Machine's Travel Lever in the proper direction while pulling with the other vehicle.

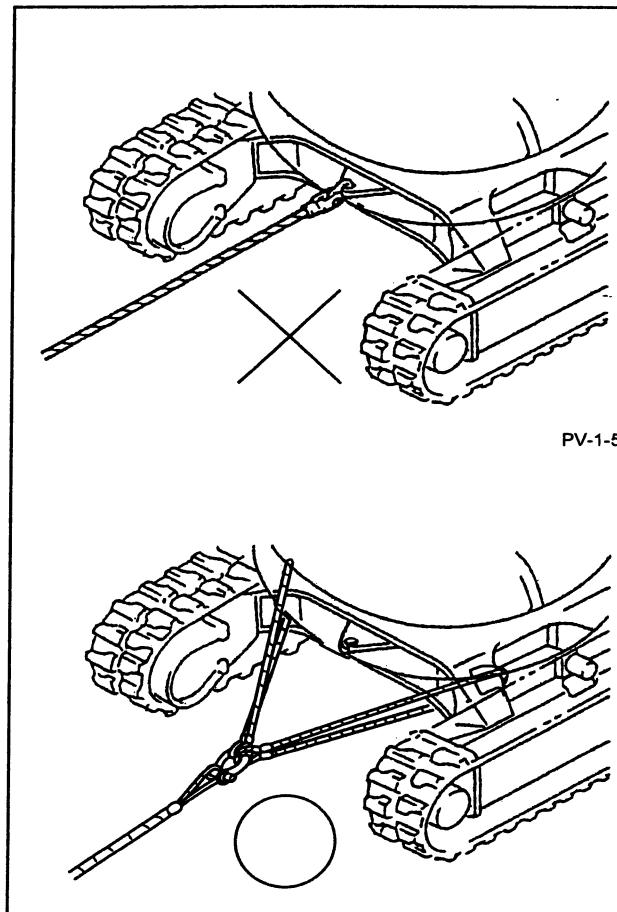
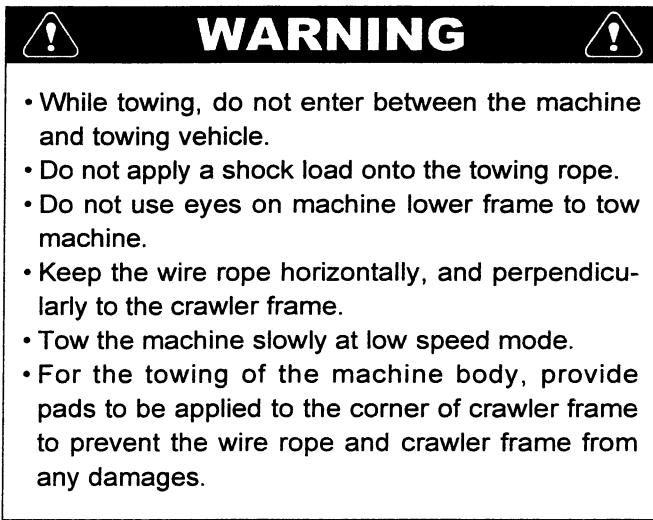


FIG. 2-2 TOW MACHINE PROPERLY

### NOTE

Do not pull machine utilizing the brackets welded on the lower plates of the carbody. These brackets are provided for pulling lightweight objects. See figure for better reference.

### 3. INTERNATIONAL UNIT CONVERSION SYSTEM

(Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS)

#### Introduction

Although this manual uses the gravitational unit system, if you need SI unit, refer to the following international system of units.


are related to this manual :

#### 1. Etymology of SI Units

French :Le Systme International d' Units

English :International System of Units

#### 2. Construction of SI Unit System

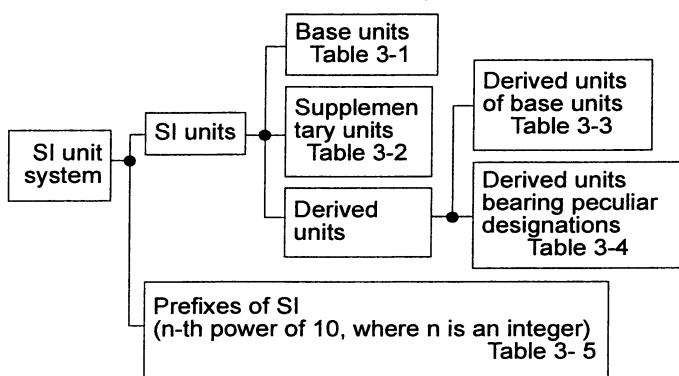

#### (4) Derived Units bearing Peculiar Designations

[ Table 3-4 ]

QUANTITY	UNIT	SYMBOL	FORMULA
Frequency	hertz	Hz	1/s
Force	newton	N	kg • m/s <sup>2</sup>
Pressure and Stress	pascal	Pa	N/m <sup>2</sup>
Energy, Work and Quantity of heat	joule	J	N • m
Power	watt	W	J/s
Quantity of electricity	coulomb	C	A • s
Electric potential difference, Voltage, and Electromotive force	volt	V	W/A
Quantity of static electricity and Electric capacitance	farad	F	C / V
Electric resistance	ohm	Ω	V / A
Celcius temperature	celcius degree or degree	°C	(t+273.15)K
Illuminance	lux	lx	lm/m <sup>2</sup>

#### (1) Base Units [ Table 3-1 ] Given hereinafter is an excerpt of the units that

QUANTITY	UNIT	SYMBOL
Length	metre	m
Mass	kilogram	kg
Time	second	s
Electric current	ampere	A
Thermodynamic temperature	kelvin	K
Amount of substance	mol	mol
Luminous intensity	candela	cd

#### (5) Prefixes of SI [ Table 3-5 ]

PREFIX	SYMBOL	MULTIPLICATION FACTORS
giga	G	10 <sup>9</sup>
mega	M	10 <sup>6</sup>
kilo	k	10 <sup>3</sup>
hecto	h	10 <sup>2</sup>
deca	da	10
deci	d	10 <sup>-1</sup>
centi	c	10 <sup>-2</sup>
milli	m	10 <sup>-3</sup>
micro	μ	10 <sup>-6</sup>
nano	n	10 <sup>-9</sup>
pico	p	10 <sup>-12</sup>

#### (2) Supplementary Units [ Table 3-2 ]

QUANTITY	UNIT	SYMBOL
Plane angle	radian	rad
Solid angle	steradian	sr

#### (3) Derived Units [ Table 3-3 ]




QUANTITY	UNIT	SYMBOL
Area	square metre	m <sup>2</sup>
Volume	cubic metre	m <sup>3</sup>
Velocity	metre per second	m/s
Acceleration	metre per second squared	m/s <sup>2</sup>
Density	kilogram per cubic metre	kg/m <sup>3</sup>

#### (6) Unit Conversion [ Table 3-6 ]

QUANTITY	Gravitational	SI	CONVERSION FACTOR
Weight	kgf	kg	1 kgf=1 kg
Mass			1 kgf=9.807 N
Force	kgf	N	1 kgf=9.807 N
Torque	kgf • m	N•m	1 kgf•m=9.807 N•m
Pressure	kgf/cm <sup>2</sup>	MPa	1 kgf/cm <sup>2</sup> =0.09807 MPa
Motive power	PS	kW	1 PS=0.7355 kW
Revolution	rpm	min <sup>-1</sup>	r/min *1

\*1 Units that are allowed to use

(7) Unit conversion logarithmic chart

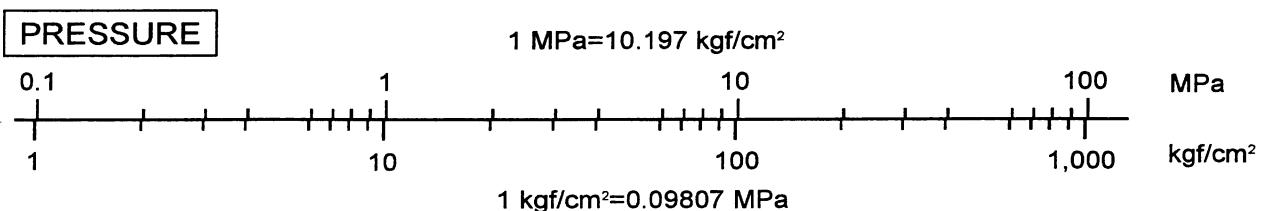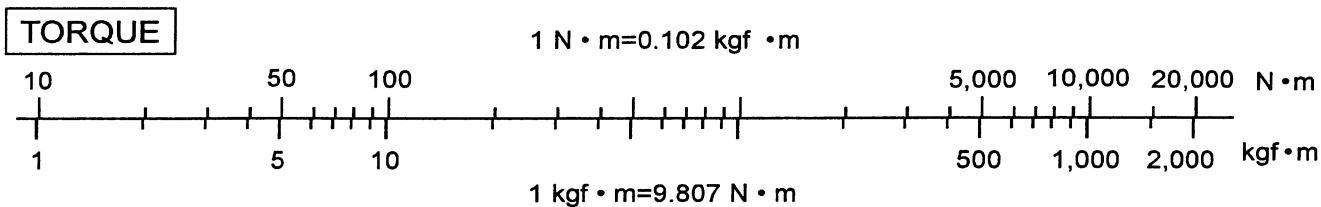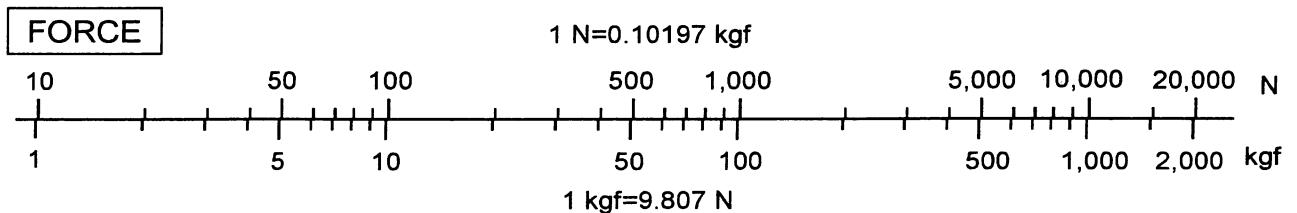

# **CASE CX14**

**PE02**

*See next page for model cross reference.*


## **SPECIFICATIONS**

### **TABLE OF CONTENTS**

1. COMPONENTS NAME .....	1-1
2. MACHINE DIMENSIONS .....	1-2
3. SPECIFICATIONS AND PERFORMANCE .....	1-3
4. MACHINE & COMPONENTS WEIGHT (DRY) .....	1-4
5. TRANSPORTATION DIMENSIONS AND WEIGHT .....	1-5
6. CRAWLER SHOES .....	1-7
7. BUCKETS .....	1-7
8. THE MACHINE LIFTING PROCEDURES .....	1-8
9. ATTACHMENT WORKING RANGES .....	1-9
10. LIFTING CAPACITIES.....	1-10
11. ENGINE SPECIFICATIONS .....	1-12

**Shop Manual Model Number Cross Reference:**  
**SK13SR is CASE Model CX14**


## 1. COMPONENTS NAME

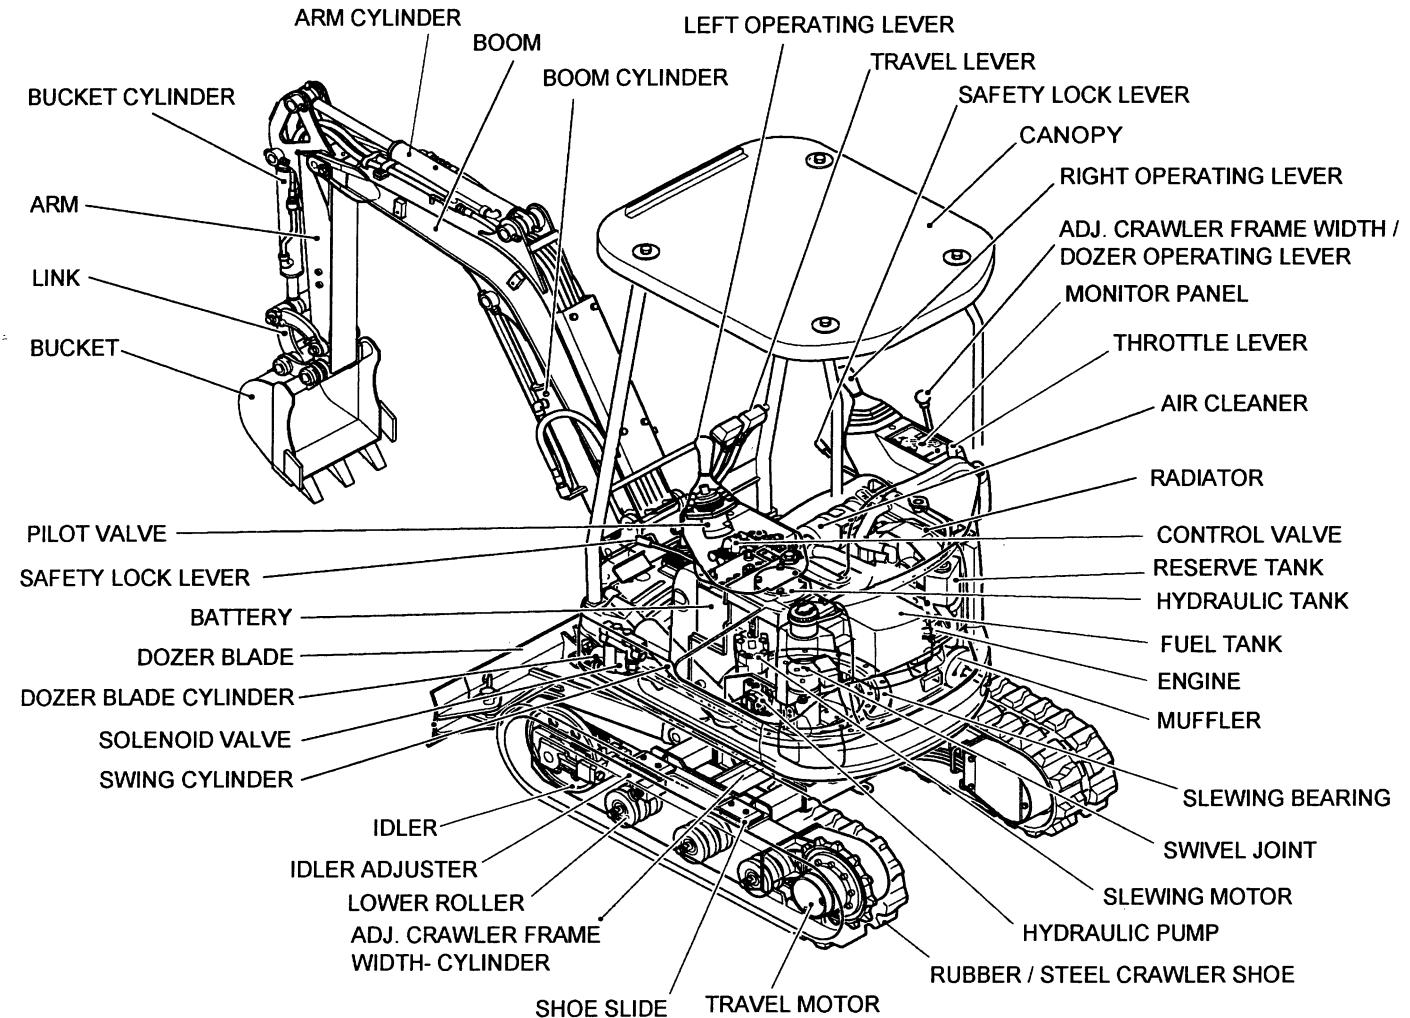

## 2. MACHINE DIMENSIONS

### ■ SK13SR (LONG ARM)

Unit : mm(ft · in)

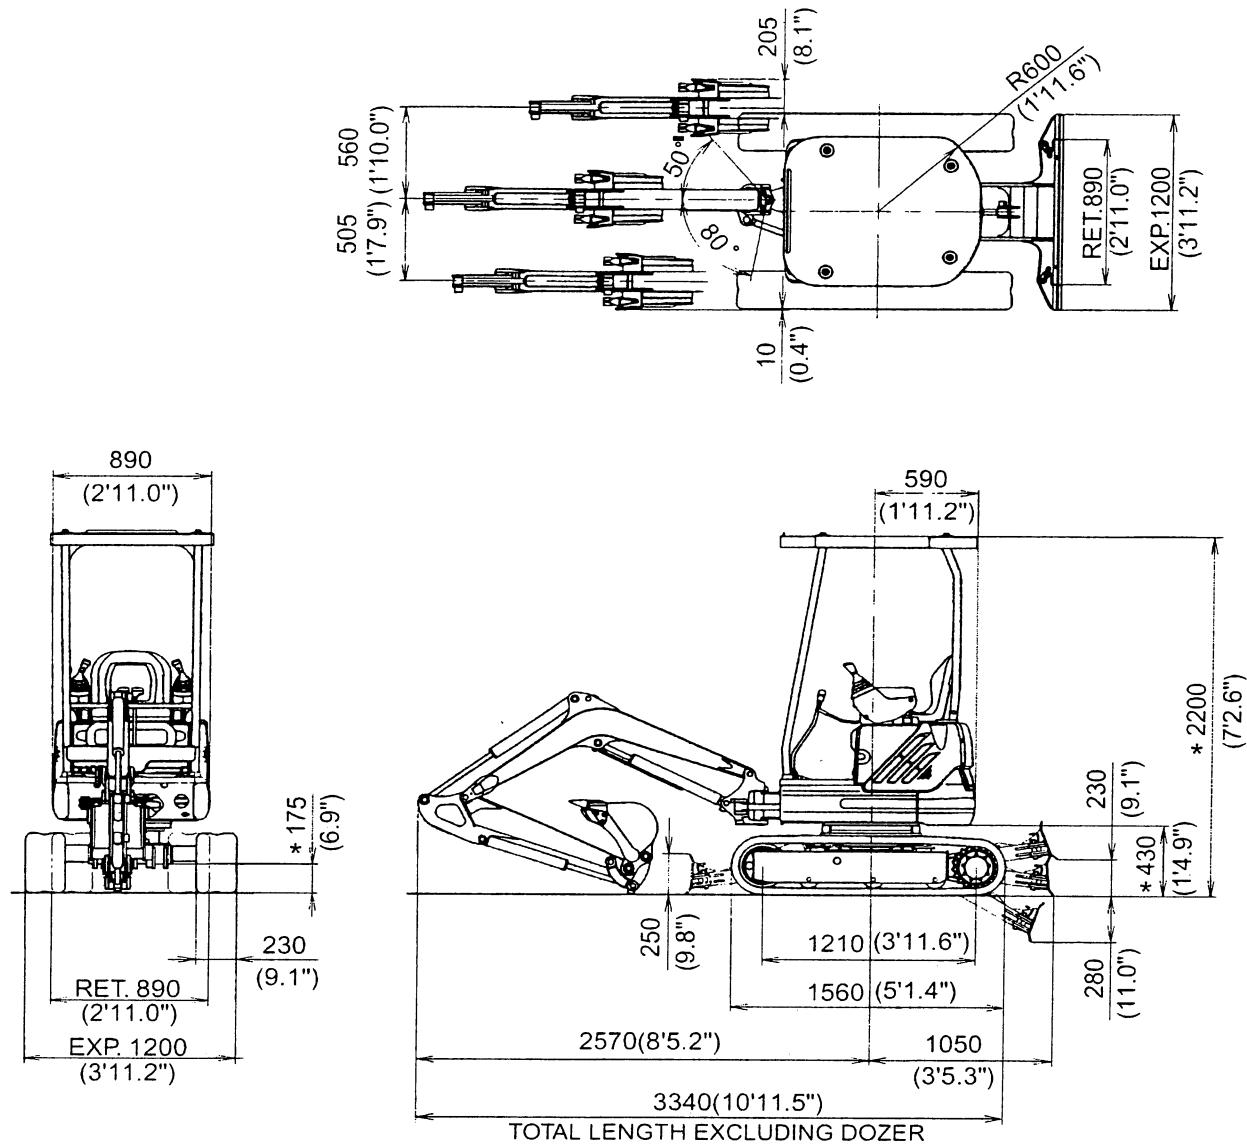

\*Dimension does not include height of grouser  
Shoe lug : 18mm(0.7in)

### 3. SPECIFICATIONS AND PERFORMANCE

#### 1. SPEED AND GRADEABILITY

Item	Model		SK13SR
	Rubber crawler shoe		
Slewing Speed	10.7 rpm		
Travel Speed	Low (1st)		High (2nd)
	2.0km/h (1.2mph)		3.5km/h (2.2mph)
Gradeability % (degree)	58 % (30°)		

#### 2. SIDE DIGGING & DOZER

Type	Boom swing by hydraulic cylinder	
Boom Swing Angle	Right	50°
	Left	80°
Stroke of Dozer(above/below) mm(in)	230 / 280 (9.1 / 11.0)	

#### 3. ENGINE

Model	YANMAR 3TNE68 - YB
Type	Water-cooled, 4-cycle type Swirl chamber type diesel engine
Number of cylinders-Bore x Stroke	3 - 68mm X 72mm (2.68in X 2.83in)
Total Displacement	0.784 liters (47.8 cu.in)
Output Rating	12.1PS / 2,000rpm (8.9kW / 2,000min <sup>-1</sup> )
Maximum Torque	4.7kgf·m / 1,500rpm (34ft-lbs/1,500rpm)
Starting Motor	12V / 0.9 kW
Generator	12V / 20 A

#### 4. HYDRAULIC COMPONENTS

Hydraulic Pump	Variable displacement axial piston + gear pump
Hydraulic Motor	Orbit motor
Hydraulic Motor w/Reducer (Travel)	Axial piston, 2-Speed motor
Control Valve	9-function multiple control valve
Cylinder (Boom, Arm, Swing, Bucket, Dozer, Frame width)	Double action cylinder
Return Filter	Safety valve containing/Filter Type (30μ)

#### 5. NOISE LEVEL

Sound Power Level	88dB (A)
-------------------	----------

#### 4. MACHINE & COMPONENTS WEIGHT (DRY)

MODEL	Unit ; kgf (lbs)	
SK13SR		
COMPLETE MACHINE	1,390	(3,060)
UPPER FRAME ASSEMBLY (ASSY OF FOLLOWINGS)	600	(1,320)
UPPER FRAME	141	(311)
ENGINE	82	(181)
RADIATOR	8	(18)
HYDRAULIC PUMP	10	(22)
HYDRAULIC TANK	21	(46)
FUEL TANK	3	(7)
CONTROL VALVE	17	(37)
SLEWING MOTOR	15	(33)
SWING BRACKET	21	(46)
SWING CYLINDER	19	(42)
COUNTER WEIGHT	80	(176)
CANOPY	93	(205)
LOWER FRAME ASSEMBLY (ASSY OF FOLLOWINGS)	554	(1,220)
LOWER FRAME	190	(419)
SWIVEL JOINT	12	(26)
SLEWING BEARING	17	(37)
RUBBER CRAWLER SHOE	58 X 2	(128 X 2)
TRAVEL MOTOR	18 X 2	(40 X 2)
LOWER ROLLER	4 X 6	(9 X 6)
IDLER	14 X 2	(31 X 2)
SPROCKET	5 X 2	(11 X 2)
IDLER ADJUSTER	8 X 2	(18 X 2)
DOZER	66	(146)
DOZER CYLINDER	9 X 2	(20 X 2)
CRAWLER WIDTH CYLINDER	8	(18)
HOE ATTACHMENT (ASSY OF FOLLOWINGS)	195	(430)
BOOM	44	(97)
ARM	29	(64)
BUCKET	33	(71)
BOOM CYLINDER	12	(26)
ARM CYLINDER	10	(22)
BUCKET CYLINDER	9	(20)
FLUIDS	37	(82)
HYDRAULIC OIL	17 liters	(4 gal)
COOLING WATER	3 liters	(1 gal)
ENGINE OIL	3 liters	(1 gal)
FUEL	15 liters	(4 gal)

Note : Bucket weight is shown with Japanese standard bucket weight.

## 5. TRANSPORTATION DIMENSIONS AND WEIGHT

### (1) PRECAUTIONS FOR MACHINE

#### TRANSPORTATION

While transporting the machine, observe the legal traffic regulations keeping safety in mind.

#### (1.1) Observe Legal Traffic Regulations


- a) While transporting heavy articles, strictly observe the legal traffic regulations concerned.
- b) Check in advance the routing for width of road, bridges, height of overhead wirings, weight limits, local traffic regulations, etc. for traveling, if there are no problems to transport the machine with a truck or trailer.
- c) It may be required to obtain permission of government agencies or disassemble the machine for the transportation.

#### (1.2) Transporting Vehicle

As a general rule, use a truck or trailer to transport the machine.


Select a suitable truck or trailer referring to the dimensions and weight of the machine shown in "2. MACHINE DIMENSIONS" and "4. MACHINE & COMPONENTS WEIGHT."

Note that the overall dimensions for transportation and weight of the machine are different depending on the kinds of shoe and arm.

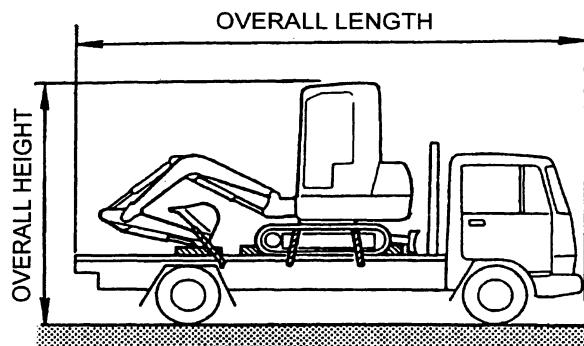


OBSERVE LEGAL REGULATION

(2) BOOM WITH ARM CYLINDER

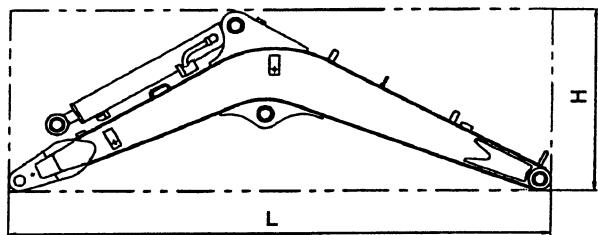


Model	SK13SR
L X H X W mm(ft-in)	1670 X 620 X 250 (55.7" X 20.4" X 9.8")
Weight w/Arm cyl. kgf(lbs)	59 (130)

(3) ARM & BUCKET (Japanese standard bucket)

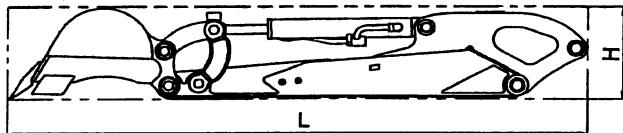

Model	SK13SR
L X H X W mm(ft-in)	1800 X 370 X 350 (5'10.9" X 1'2.6" X 1'1.8")
Weight kgf(lbs)	94 (207)


(4) ARM

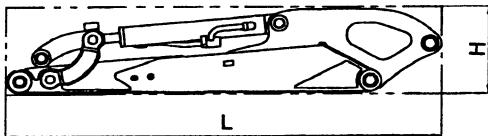

Model	SK13SR
L X H X W mm(ft-in)	1300 X 280 X 180 (4'3.2" X 11.0" X 7.1")
Weight kgf(lbs)	61 (135)

(5) BUCKET (Japanese standard bucket)


Model	SK13SR
Heaped capacity m <sup>3</sup> (cu.yd)	0.040 (0.052)
L X H X W mm(in)	520 X 440 X 350 (1'8.5" X 1'5.3" X 1'1.8")
Weight kgf(lbs)	32 (71)

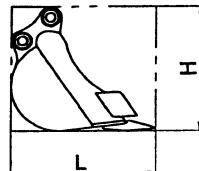

(6) DOZER

w/o cylinder weight

Model	SK13SR
L X H X W ; Ret/Exp mm(in)	860 X 240 X 890/1200 (2'9.9"X9.4"X2'11.0"/3'11.2")
Weight kgf(lbs)	66 (146)




## 6. CRAWLER SHOE



Type	Model	Shoe width mm(in)	Total Crawler width mm (ft.in)	Ground Pressure kgf/cm <sup>2</sup> (psi)
Rubber shoe	SK13SR	230 (9.1)	Retracted ; 890 (2'11.0") Expanded ; 1,200 (3'11.2")	0.22 (3.1)

## 7. TYPE OF BUCKETS

(Japanese standard bucket)

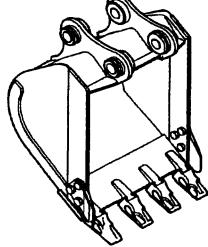	Heaped capacity m <sup>3</sup> (cu.yd)	Outside Width of Bucket mm (ft.in)	Number of Teeth	Weight kgf (lbs)	Remarks
	0.040 (0.049)	350 (1' 1.8")	3	32 (71)	Standard
	0.044 (0.052)	400 (1' 3.7")	3	33 (73)	Optional
	0.046 (0.058)	450 (1' 5.7")	3	35 (77)	Optional

## 8. THE MACHINE LIFTING PROCEDURES

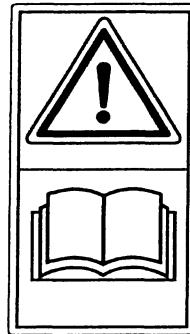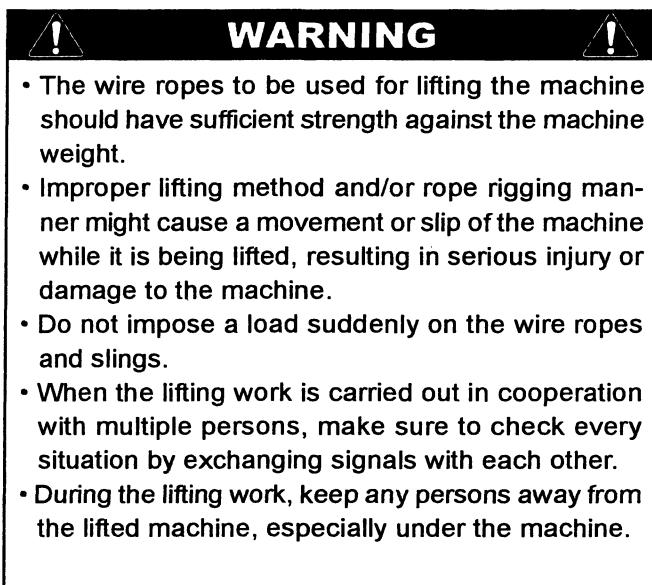


TOOLS {SK13SR}		WEIGHT : 1,390 kg (3,064 lb)
ITEM	SIZE	Q'TY
CABLE (C)	Ø14 X 3.0m	1
CABLE (D)	Ø14 X 4.5m	2
SPREADER BARS (E)	1.3m	3

Carry out the lifting work on a level ground.

- [1] Start up the engine, and slew the machine so that the dozer blade comes to backside.
- [2] Raise the dozer blade up to the most upper position.
- [3] Manipulate each operating lever to take a posture as shown in the figure.
- [4] When the boom is swung, operate the boom swing pedal to face the boom direct front.
- [5] Stop the engine, and make the safety lock lever to "LOCKED" position. Then take off the machine after ensuring no abnormalities around the operator's seat.
- [6] Install shackles to both bores (A) provided at both ends to the dozer blade, and put the wire ropes on them.
- [7] Put the wire ropes on the (B) portion.
- [8] If any portions of the wire ropes directly get touch with the machine when the wire ropes are pulled up, protect the machine from damages by means of applying a wooden piece or pad between them.
- [9] Put the wire ropes from 30 to 40 degrees of lifting angle with each other.
- [10] Slightly lift the machine to confirm the balance, then lift up the machine.

**NOTE :** If wire ropes get touch with the Canopy Roof, remove the Canopy prior to lifting.

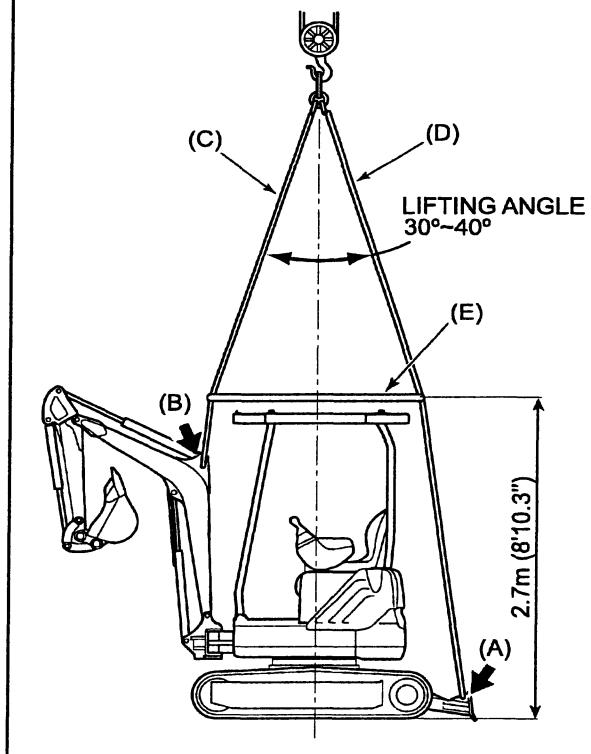


Note : This figure is calculated with Japanese standard bucket.  
Bucket weight : 32kg (71 lb)

## 9. ATTACHMENT WORKING RANGES

### [LONG ARM / STANDARD BUCKET] (Japanese standard bucket)

■ SK13SR

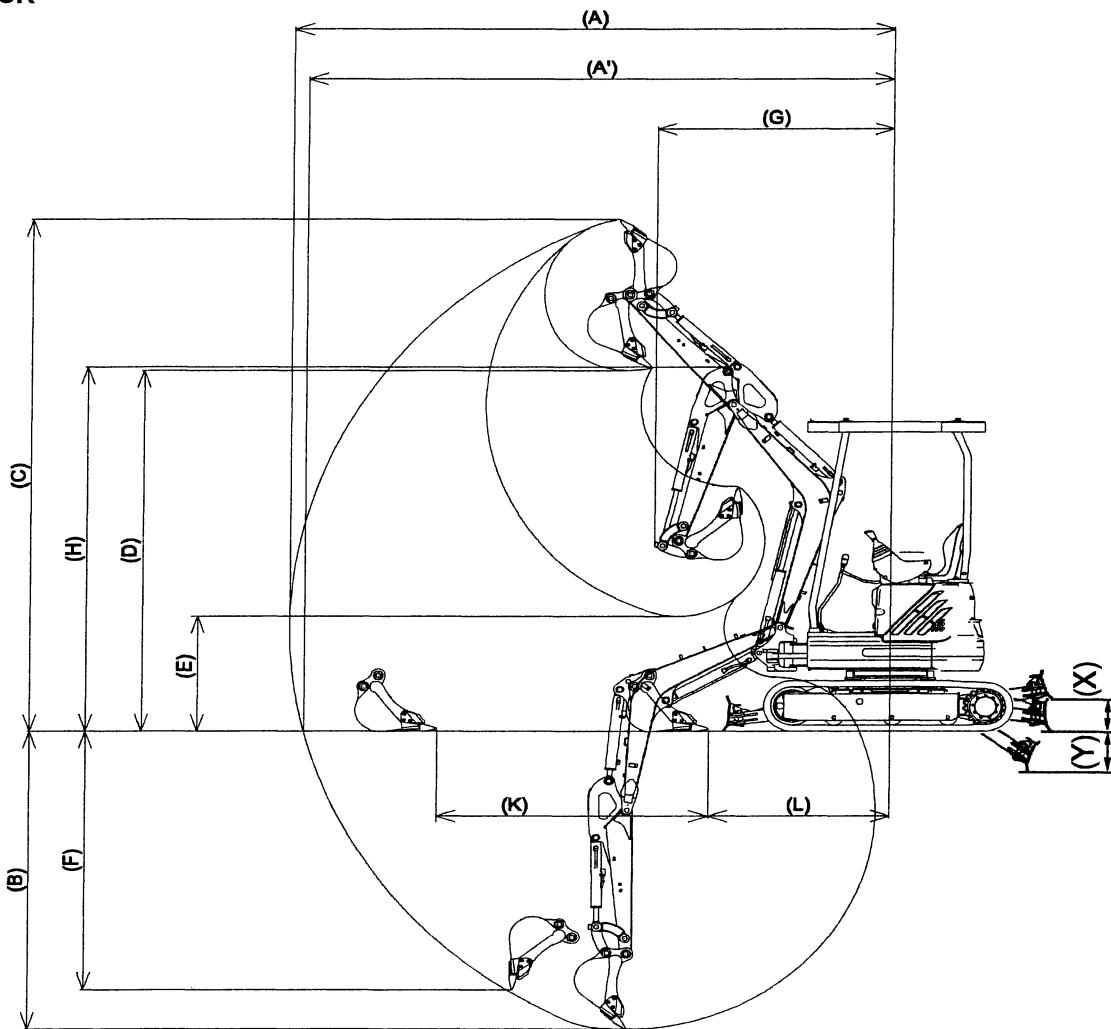

Unit : mm (ft-in)

Model		SK13SR
Attachment Item	Arm(Long )	1,020 (3' 4.2")
	Bucket	0.040m <sup>3</sup> (0.052 cu.yd)
A	Max. digging reach	3,770 (12' 4.4")
A'	Max. digging reach at ground level	3,680 (12' 0.9")
* B	Max. digging depth	2,110 (6' 11.1")
* C	Max. digging height	3,630 (11' 10.9")
* D	Max. dumping clearance	2,560 (8' 4.8")
* E	Min. dumping clearance	820 (2' 8.3")
* F	Max. vertical wall digging depth	1,840 (6' 0.4")
G	Min. front slew radius	1,490 (4' 10.7")
* H	Height at min. slew radius	2,590 (8' 6.0")
K	Horizontal digging stroke at ground level	1,710 (5' 7.3")
L	Minimum	1,140 (3' 8.9")
X	Above	230 (9.1")
Y	Below	280 (11.0")

\* Dimension does not include height of grouser ; Shoe lug : 18mm (0.7")

Note : Japanese standard bucket.

## 10. LIFTING CAPACITIES


### (1) Conditions of calculation

- 1) The lifting load shows the lower value either 87% of lifting capacity by hydraulic pressure, or 75% of tipping load.
- 2) The load point is on the bucket lift point, and the bucket cylinder is extended (bucket IN).
- 3) Weight of hooks, slings, and all other lifting equipment shall be considered a part of the load.
- 4) The values in the upper rows show the lifting capacity at a machine facing sideways, and values in the lower rows show a machine facing longitudinally.
- 5) Unit : lbs,  
Crawler : 230mm (9.1 in) width, Rubber crawler shoe.
- 6) Set hydraulic pressure 210 kgf / cm<sup>2</sup> (2990 psi)

### (2) Reference No. list of lifting diagram

#### ■ SK13SR

<b>Attachment</b>	Long Arm + Bucket (Japanese standard bucket) 1,020mm (3'4.2") + 0.040m <sup>3</sup> (0.052 cu · yd)	
<b>Crawler width</b>	EXPANDING 1,200mm (3'11.2")	—
<b>Dozer blade position</b>	Up and Front	—
<b>Figure No.</b>	(1)	—

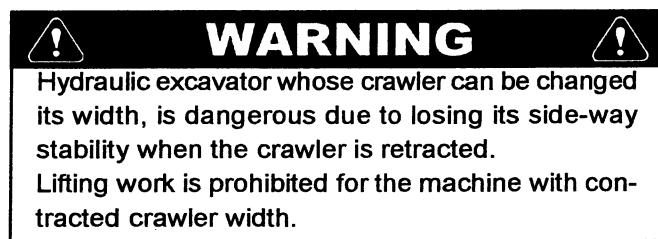


■ SK13SR

(1) Crawler width ; Expanding  
Dozer blade ; Up and Front

**SK13SR LIFTING CAPACITIES**

Based on machine equipped with  
Arm 1020mm (3'4.2") arm  
Shoe 230mm (9.1") Rubber Shoe  
Dozer blade up  
Width over tracks : full expanded  
With Japanese standard bucket  
Bucket weight 32 kg (71 lb)

A	B	LOAD RADIUS				
		2.5' (0.8m)	5' (1.5m)	7.5' (2.3m)	10' (3.0m)	12.5' (3.8m)
10' (3.0m)	1b					
7.5' (2.3m)	1b					
5' (1.5m)	1b					
2.5' (0.8m)	1b					
GROUND LEVEL	1b	* 1130	* 1130	1250	970	640
LEVEL	1b	* 510	* 510	560	440	280
-2.5' (-0.8m)	1b	* 1860	* 1860	1250	970	630
-5' (-1.5m)	1b	* 840	* 840	560	440	280
				* 1040	1000	
				* 470	450	

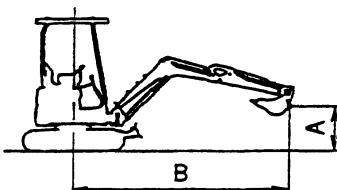

1. Do not attempt to lift or hold any load that is greater than these rated values at their specified load radius and height. Weight of all accessories must be deducted from the above lifting capacities.
2. Lifting capacities are based on machine standing on level, firm, and uniform ground. User must make allowance for job conditions such as soft or uneven ground out of level conditions, side loads, sudden stopping of loads, hazardous conditions, experience of personnel, etc.
3. Ratings bucket lift hook
4. Do not lift or hold any load without crawler is full expanded.
5. The above rated loads are in compliance with BS1757:1986. They do not exceed 87% of hydraulic lifting capacity or 75% of tipping load. Rated loads marked with an asterisk (\*) are limited by hydraulic capacity rather than tipping load.
6. Operator should be fully acquainted with the operator's and Maintenance Instructions before operating this machine and rules for safe operation of equipment should be adhered to at all times.
7. Capacities apply to only machine as originally manufactured and normally equipped by Kobelco Construction Machinery America LLC.

## 11. ENGINE SPECIFICATIONS


### 11.1 SPECIFICATIONS

Item	Model	SK13SR	
Engine Model	3TNE68-YB		
Type	Vertical, 4-cycle water-cooled diesel engine		
No. of cylinders - Bore x Stroke	3 - 68mm (2.68 in) x 72 mm (2.83 in)		
Total displacement	0.784 liter (47.8 cu·in)		
Compression ratio	23.5		
Rated output	12.1 PS (8.9 kW) at 2000 rpm		
Maximum torque	4.7 ~ 5.1 kgf·m (34.0 ~ 36.9 ft·lbs) at 1500 rpm		
Low idling	1300 ± 25 rpm		
High idling	2180 ± 25 rpm		
Fuel consumption rate	Less than 200 g / PS·h		
Allowable tilting angles	Back and forth, left and right 25° (momentary 30°)		
Rotating direction	Counterclockwise as seen from flywheel side		
Firing order	1-3-2-1		
Fuel injection timing (FID, b.T.D.C.)	12 ± 1°		
Fuel injection pressure	120 <sup>+10</sup> <sub>-0</sub> kgf / cm <sup>2</sup> (1710 <sup>+140</sup> <sub>-0</sub> psi)		
Valve action		Open	Close
	Intake valve	b.T.D.C. 10 ± 5°	a.B.D.C. 42 ± 5°
	Exhaust valve	b.T.D.C. 42 ± 5°	a.B.D.C. 10 ± 5°
Valve clearance	Intake valve	0.2 mm (0.008 in) in cold condition	
	Exhaust valve	0.2 mm (0.008 in) in cold condition	
Thermostat action	Start 71 ± 1.5°C (160 ± 3°F) / Full open 85°C(185°F)		
Compression pressure	33 ± 1 kgf / cm <sup>2</sup> (469 ± 14psi) at 250 rpm		
Lubrication oil pressure	2.5 ± 0.5 kgf / cm <sup>2</sup> (36 ± 7psi) at 2000 rpm		
Dimensions L x W x H	473 x 410 x 511 mm (18.6 x 16.1 x 20.1 in)		
Dry weight	81 <sup>+5</sup> <sub>-0</sub> kgf (179 <sup>+11</sup> <sub>-0</sub> lbs)		
Governor	Mechanical centrifugal governor (All speed type)		
Lubrication system	Forced lubrication with trochoid pump		
Cooling system	Liquid cooling / Radiator		
Starter capacity	12 V x 0.9 kW		
Generator capacity	12 V x 20 A		
Cooling water capacity : Max / Engine	2.5 / 0.9 liter (0.66 / 0.24 gal)		
Engine oil volume : Max / Effective	2.8 / 1.2 liter (0.74 / 0.32 gal)		

## 11.2 ENGINE PERFORMANCE CURVE

Model : 3TNE68-YB

Rated Output : 12.1PS / 2,000rpm (8.9 kW / 2000min<sup>-1</sup>)

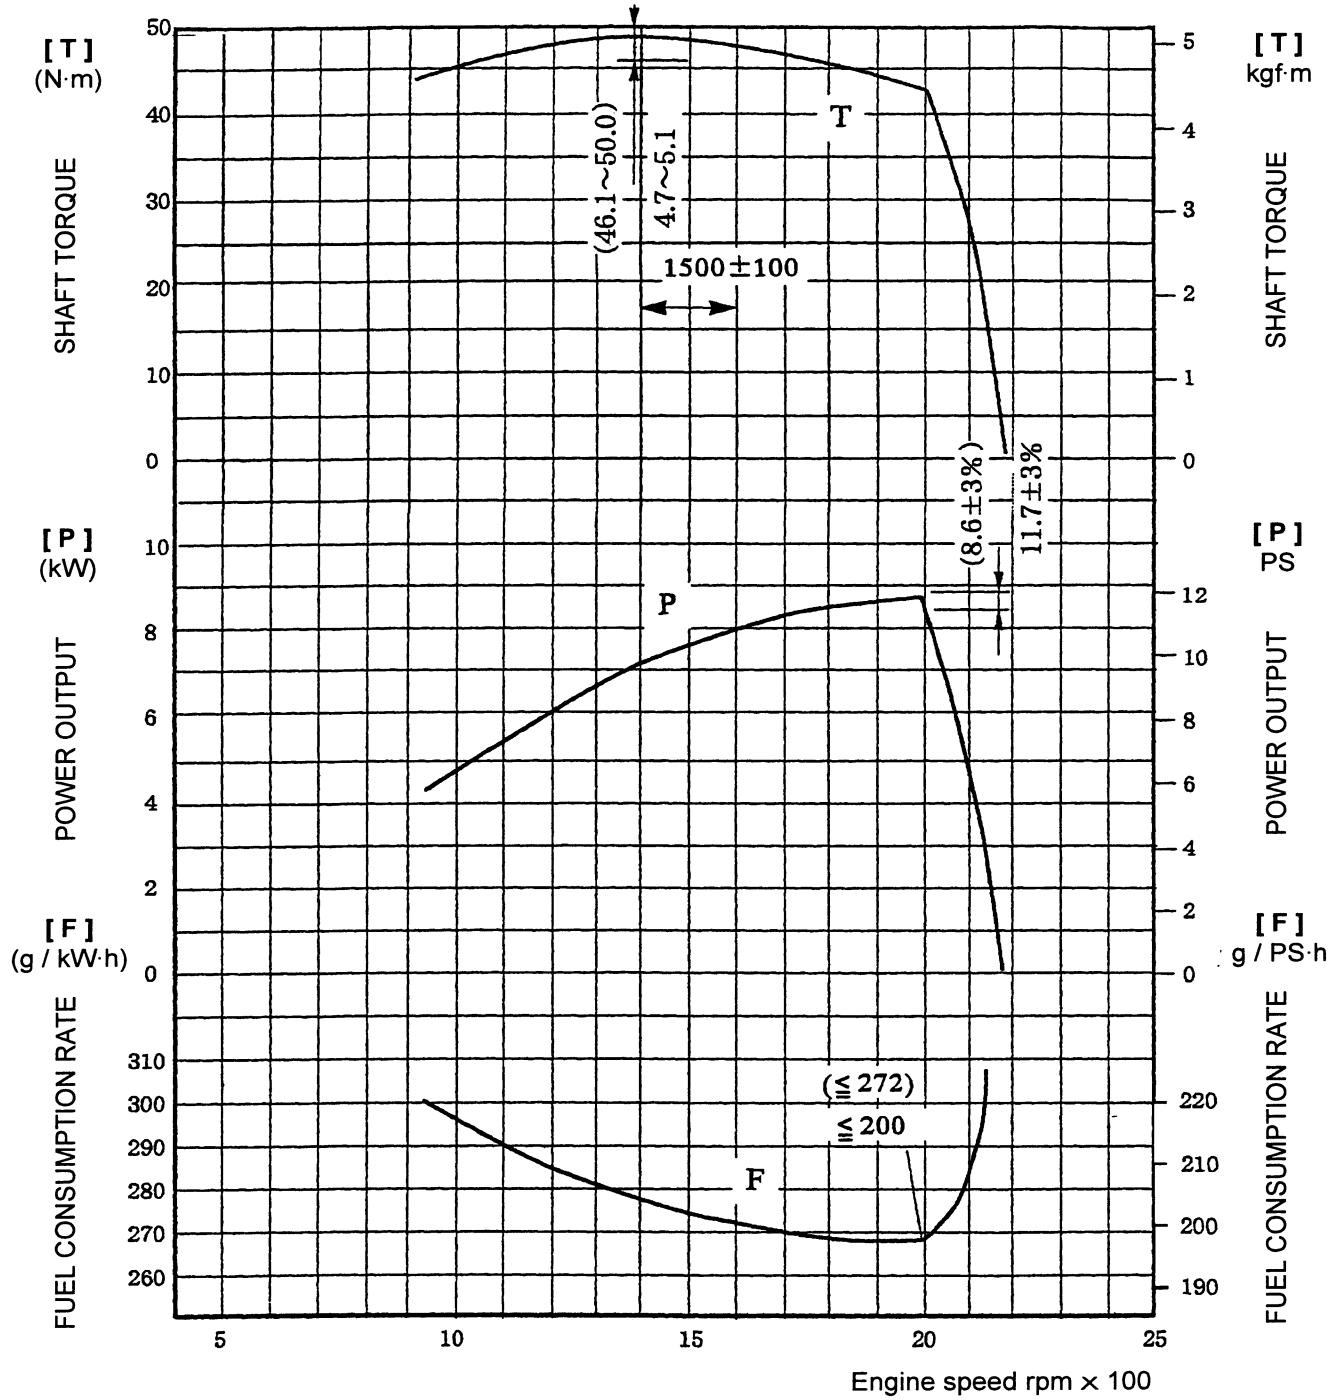

$$\begin{aligned}
 \text{Fuel consumption volume} &= \frac{F}{\rho \times 1000} \times P \times \alpha \\
 &= \frac{200}{0.835 \times 1000} \times 11.7 \times \alpha \\
 &= 2.80 \alpha
 \end{aligned}$$

F : Fuel consumption rate (g / PS·h)

P : Shaft output (ps)

$\rho$  : Specific gravity

$\alpha$  : Standard load factor (0.60 ~ 0.70)

Fuel consumption in normal operation ;  
1.7 ~ 2.0 l / h (load factor : (0.60 ~ 0.70))

Product: Case CX14 Crawler Excavator Service Manual 6-49190

Full Download: <https://www.arepairmanual.com/downloads/case-cx14-crawler-excavator-service-manual-6-49190/>

Sample of manual. Download All 497 pages at:

<https://www.arepairmanual.com/downloads/case-cx14-crawler-excavator-service-manual-6-49190/>