

585G/586G/588G Forklift Service Manual 7-14851

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		7-15500
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-15160
Loctite Product Chart		8-98900
Engines		
	Tab 2	
Section Index - Engines		7-15510
Engine Removal and Installation	2000	7-15520
Stall Test	2001	7-15170
Electrical		
	Tab 4	
Section Index - Electrical		7-15530
Removal and Installation of Electrical Components	4000	7-15540
Electrical Specifications and Troubleshooting	4001	7-14860
Batteries	4003	7-49440
Starter Motor - Denso	4003	7-11450
Instrument Cluster	4005	7-49560
Alternator	4007	7-49250
Steering		
	Tab 5	
Section Index - Steering		7-15550
Removal and Installation of Steering Components	5000	7-15560
Steering Specifications, Pressure Checks and Troubleshooting	5001	7-15180
Steering Control Valve	5002	7-15570
Steering Cylinders	5003	7-11930
Steering Axle - Two Wheel Drive	5005	7-15310
Steering Axle - Four Wheel Drive	5006	7-15320

Reprinted

CASE CORPORATION
 700 State Street
 Racine, WI 53404 U.S.A.

Sample of manual. Download All 786 pages at:
<https://www.arenairmanual.com/downloads/case-585g-586g-588g-forklift-service-repair-manual-7-14851/>

© 2000 Case Corporation
 Printed in U.S.A.
 June, 1999 (Revised March, 2000)

CASE CANADA CORPORATION
 450 Sherman Avenue
 Hamilton, ON L8N 4C4 CANADA

Table of Contents

Description	Section No.	Form No.
Power Train		
	Tab 6	
Section Index - Power Train		7-15581
Removal and Installation of Power Train Components	6000	7-15590
Transmission Specifications, Pressure Checks and Troubleshooting - Forklift Early Production	6002	7-15710
Transmission Specifications, Pressure Checks and Troubleshooting - Forklift Late Production	6002	7-15800
Wheels and Tires	6003	7-15400
Drive Axle and Planetaries	6004	7-15601
Standard (Carraro) Transmission	6007	7-10431
Brakes		
	Tab 7	
Section Index - Brakes		7-15610
Removal and Installation of Brake Components	7000	7-15620
Master Cylinder	7003	7-49490
Hydraulics		
	Tab 8	
Section Index - Hydraulics		7-15630
Removal and Installation of Hydraulic Components	8001	7-15640
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-15190
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-16050
Control Valve	8005	7-15660
Flow Control Priority Valve	8006	7-15670
Cylinders	8010	7-15300
Mounted Equipment		
	Tab 9	
Section Index - Mounted Equipment		7-15680
Pedals and Levers	9001	7-15200
ROPS Canopy	9007	7-15690
Seat and Seat Belts	9009	7-15650
Forklift Mast	9010	7-15700
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	7-15140

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Sample of manual. Download All 786 pages at:

<https://www.arepairmanual.com/downloads/case-585g-586g-588g-forklift-service-repair-manual-7-14851/>

SECTION INDEX - GENERAL

Section Title

Section Number

Standard Torque Specifications.....	1001
Fluid and Lubricants.....	1002
Loctite Product Chart	

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
450 Sherman Avenue
Hamilton, ON L8N 4C4 CANADA

Section 1001

STANDARD TORQUE SPECIFICATIONS

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Burlington, ON L7N 3M6 CANADA

Rac 8-71601

© 1994 Case Corporation
Printed in U.S.A.
Issued November, 1991

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE 2

TORQUE SPECIFICATIONS - METRIC HARDWARE 3

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS 4

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS 5

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983

Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827

NOTE: Use thick nuts with Grade 8 bolts.

TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
M4	24 to 36	3 to 4
M5	60 to 72	7 to 8
M6	96 to 108	11 to 12
M8	228 to 276	26 to 31
M10	456 to 540	52 to 61
Size	Pound-Feet	Newton metres
M12	66 to 79	90 to 107
M14	106 to 127	144 to 172
M16	160 to 200	217 to 271
M20	320 to 380	434 to 515
M24	500 to 600	675 to 815
M30	920 to 1100	1250 to 1500
M36	1600 to 1950	2175 to 2600

Grade 10.9 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
M4	36 to 48	4 to 5
M5	84 to 96	9 to 11
M6	132 to 156	15 to 18
M8	324 to 384	37 to 43
Size	Pound-Feet	Newton metres
M10	54 to 64	73 to 87
M12	93 to 112	125 to 150
M14	149 to 179	200 to 245
M16	230 to 280	310 to 380
M20	450 to 540	610 to 730
M24	780 to 940	1050 to 1275
M30	1470 to 1770	2000 to 2400
M36	2580 to 3090	3500 to 4200

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
37 Degree Flare Fitting			
1/4 inch 6.4 mm	7/16-20	72 to 144	8 to 16
5/16 inch 7.9 mm	1/2-20	96 to 192	11 to 22
3/8 inch 9.5 mm	9/16-18	120 to 300	14 to 34
1/2 inch 12.7 mm	3/4-16	180 to 504	20 to 57
5/8 inch 15.9 mm	7/8-14	300 to 696	34 to 79
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
3/4 inch 19.0 mm	1-1/16-12	40 to 80	54 to 108
7/8 inch 22.2 mm	1-3/16-12	60 to 100	81 to 135
1.0 inch 25.4 mm	1-5/16-12	75 to 117	102 to 158
1-1/4 inch 31.8 mm	1-5/8-12	125 to 165	169 to 223
1-1/2 inch 38.1 mm	1-7/8-12	210 to 250	285 to 338

Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
Straight Threads with O-ring			
1/4 inch 6.4 mm	7/16-20	144 to 228	16 to 26
5/16 inch 7.9 mm	1/2-20	192 to 300	22 to 34
3/8 inch 9.5 mm	9/16-18	300 to 480	34 to 54
1/2 inch 12.7 mm	3/4-16	540 to 804	57 to 91
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
5/8 inch 15.9 mm	7/8-14	58 to 92	79 to 124
3/4 inch 19.0 mm	1-1/16-12	80 to 128	108 to 174
7/8 inch 22.2 mm	1-3/16-12	100 to 160	136 to 216
1.0 inch 25.4 mm	1-5/16-12	117 to 187	159 to 253
1-1/4 inch 31.8 mm	1-5/8-12	165 to 264	224 to 357
1-1/2 inch 38.1 mm	1-7/8-12	250 to 400	339 to 542

Split Flange Mounting Bolts		
Size	Pound- Inches	Newton metres
5/16-18	180 to 240	20 to 27
3/8-16	240 to 300	27 to 34
7/16-14	420 to 540	47 to 61
Size	Pound- Feet	Newton metres
1/2-13	55 to 65	74 to 88
5/8-11	140 to 150	190 to 203

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	Thread Size	Pound-Inches	Newton metres
O-ring Face Seal End					O-ring Boss End Fitting or Lock Nut		
-4	1/4 inch 6.4 mm	9/16-18	120 to 144	14 to 16	7/16-20	204 to 240	23 to 27
-6	3/8 inch 9.5 mm	11/16-16	216 to 240	24 to 27	9/16-18	300 to 360	34 to 41
-8	1/2 inch 12.7 mm	13/16-16	384 to 480	43 to 54	3/4-16	540 to 600	61 to 68
					Thread Size	Pound-Inches	Newton metres
-10	5/8 inch 15.9 mm	1-14	552 to 672	62 to 76	7/8-14	60 to 65	81 to 88
Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	1-1/16-12	85 to 90	115 to 122
					1-3/16-12	95 to 100	129 to 136
-12	3/4 inch 19.0 mm	1-3/16-12	65 to 80	90 to 110	1-5/16-12	115 to 125	156 to 169
-14	7/8 inch 22.2 mm	1-3/16-12	65 to 80	90 to 110	1-5/8-12	150 to 160	203 to 217
-16	1.0 inch 25.4 mm	1-7/16-12	92 to 105	125 to 140	1-7/8-12	190 to 200	258 to 271
-20	1-1/4 inch 31.8 mm	1-11/16-12	125 to 140	170 to 190			
-24	1-1/2 inch 38.1 mm	2-12	150 to 180	200 to 254			

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 1002

1002

FLUIDS AND LUBRICANTS

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
450 Sherman Avenue
Hamilton, ON L8N 4C4 CANADA

Bur 7-15160

© 1999 Case Corporation
Printed in U.S.A.
March, 1999

TABLE OF CONTENTS

CONVERSION FORMULAS	2
CAPACITIES AND LUBRICANTS	3
ENGINE OIL RECOMMENDATIONS	4
DIESEL FUEL	5
Fuel Storage	5

CONVERSION FORMULAS

Imperial quart = litres x 0.879877

Imperial gallon = litres x 0.219969

CAPACITIES AND LUBRICANTS

Engine Oil	
Capacity with Filter Change	11 litres (11.6 U.S. quarts)
Capacity without Filter Change	10 litres (10.6 U.S. quarts)
Type of oil	See Engine Oil Recommendations on page 4
Engine Cooling System	
Capacity	15.8 litres (16.7 U.S. quarts)
Type of coolant	Ethylene Glycol type antifreeze and water that is mixed 50% Ethylene Glycol and 50% water.
Fuel Tank	
Capacity	117 litres (31 U.S. gallons)
Type of fuel	See diesel fuel specifications on page 5
Hydraulic System	
Hydraulic reservoir refill capacity with filter change	54.9 litres (58 U.S. quarts)
Hydraulic reservoir refill capacity without filter change	53 litres (56 U.S. quarts)
Total System Capacity	68.1 litres (72 U.S. quarts)
Type of oil	Case TCH Fluid
Transmission	
2 Wheel Drive	
Total System	18 litres (19 U.S. quarts)
Refill with or without filter	16 litres (16.9 U.S. quarts)
Type of oil	Case Hy Tran Plus® (MS1207)
4 Wheel Drive	
Total System	20.8 litres (22 U.S. quarts)
Refill with or without filter	18.5 litres (19.5 U.S. quarts)
Type of oil	Case Hy Tran Plus® (MS1207)
Front Axle - Drive	
Capacity of center bowl	14.2 litres (15 U.S. quarts)
Capacity of planetary (each)	1.5 litres (1.6 U.S. quarts)
Type of oil	Case Hy-Tran Plus® (MS 1207)
Rear Axle - Steer - 4wd	
Capacity of center bowl	5.5 litres (5.8 U.S. quarts)
Capacity of planetary (each)	0.7 litres (0.7 U.S. quart)
Type of oil.....	Case Hy-Tran Plus® (MS 1207)
Brake Fluid	Case TCH fluid

ENGINE OIL RECOMMENDATIONS

Case IH No.1 Engine Oil is recommended for use in your Case IH Engine. Case IH No.1 Engine Oil will lubricate your engine correctly under all operating conditions. If Case IH No. 1 Multi-Viscosity Engine Oil is not available, Case IH No. 1 Single Grade Engine Oil can be used.

If Case IH No.1 Multi-Viscosity or Single Grade Engine Oil is not available, use only oil meeting API engine oil service category CE.




B196H018

See the chart below for recommended viscosity at ambient air temperature ranges.

NOTE: Do not put Performance Additives or other oil additive products in the engine crankcase. The oil intervals given in this manual are according to tests with Case IH lubricants.



BP97H064

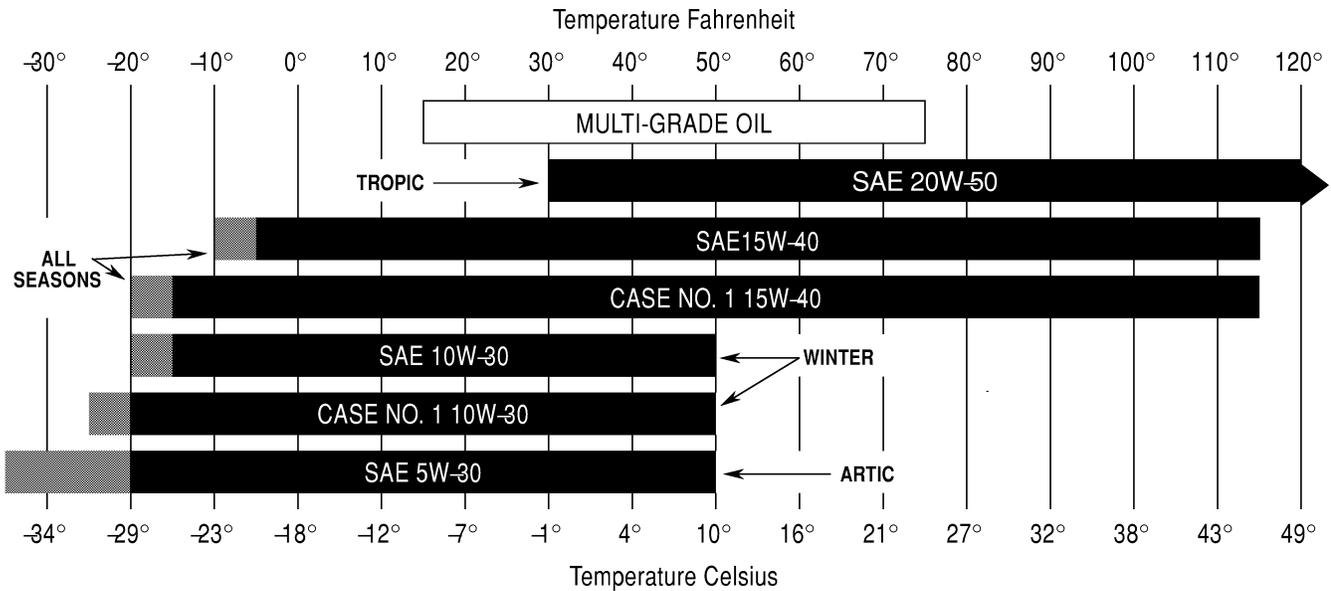

■ Indicates use of an engine oil heater or a jacket water heater is required.

DIESEL FUEL

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No. 1 and No. 2 diesel fuels is temporarily permitted. See the following Note.

NOTE: See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel is below the cloud point (wax appearance point), wax crystals in the fuel will cause the engine to lose power or not start.

The diesel fuel used in this machine must meet the specifications in the chart below or Specification D975-81 of the American Society for Testing and Materials.

Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Specifications for Acceptable No. 2 Diesel Fuel

API gravity, minimum	34
Flash Point, Minimum	60x° C (140° F)
Cloud point (wax appearance point), maximum	-20° C (-5° F) See Note above
Pour point, maximum	-26° C (-15° Fx) See Note above
Viscosity, at 38° C (100° F)	
Centistokes	2.0 to 4.3
Saybolt Seconds Universal	32 to 40
Cetane number, minimum	43 (45 to 55 for winter or high altitudes)
Water and sediment, by volume, maximum	0.05 of 1%
Sulfur, by weight, maximum	0.50 of 1%
Copper strip corrosion, maximum	No. 2
Ash, by weight, maximum	0.01 of 1%

SECTION INDEX - ENGINES

Section Title

Section Number

Engine Removal and Installaiton	2000
Stall Test	2001

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
450 Sherman Avenue
Hamilton, ON L8N 4C4 CANADA

Bur 7-15510

© 1999 Case Corporation
Printed in U.S.A.
June, 1999

Section 2000

ENGINE REMOVAL AND INSTALLATION

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
450 Sherman Avenue
Hamilton, ON L8N 4C4 CANADA

Bur 7-15520


© 1999 Case Corporation
Printed in U.S.A.
March, 1999

2000

TABLE OF CONTENTS

SPECIAL TOOL

The following special tool is used to turn the flywheel.

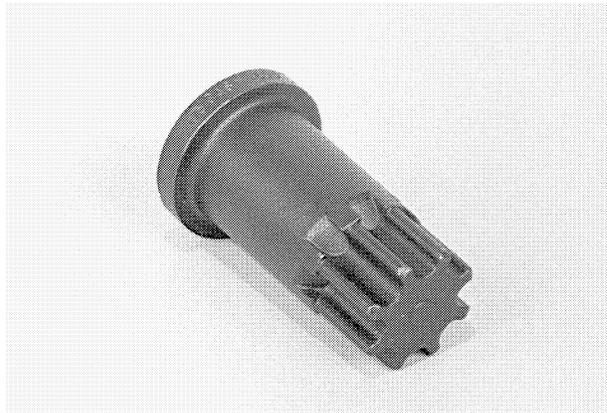

B430842

Special tool CAS-1690. First used on page 8.

TABLE OF CONTENTS

- SPECIAL TOOL 2
- ENGINE 5
 - Removal 5
 - Installation 10
 - Engine Mounting 16
- RADIATOR 17
 - Removal 17
 - Installation 18
 - Oil Cooler 20
 - Radiator 21

THIS PAGE IS BLANK

ENGINE

Removal

STEP 1

Park the machine on a level surface.

STEP 2

Lower the forks to the ground

STEP 3

Stop the engine and apply the parking brake.

STEP 4

Remove the access cover from the battery compartment.

STEP 5

Disconnect the ground cable from the negative battery post.

STEP 6

Open the drain valve on the radiator. Drain the cooling system.

STEP 7

Drain the oil from the hydraulic reservoir.


STEP 8

Remove the fill plug from the flywheel housing.

STEP 9

Remove the drain plug from the flywheel housing and drain the oil for the hydrostatic pump drive gears.

STEP 10

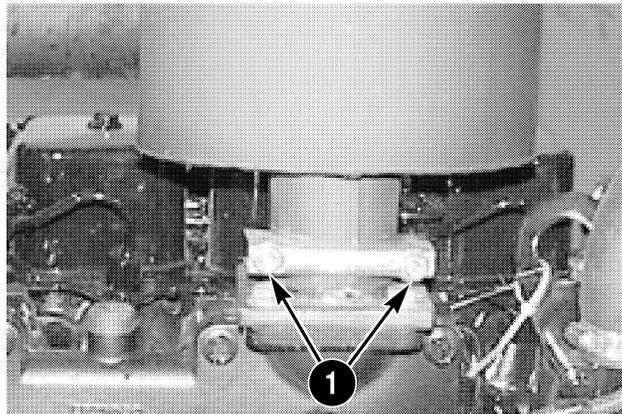

1. NUTS

Loosen the nuts on the clamp that fastens the muffler to the adapter on the exhaust manifold.

STEP 11

Remove the muffler from the machine.

STEP 12

Loosen the clamp that fastens the precleaner assembly to the air cleaner.

STEP 13

Remove the precleaner assembly from the air cleaner.

STEP 14

Open the side panel doors and disconnect the door cables from the hood.

STEP 15


Loosen and remove the cap screws and flat washers that fasten the hood to the machine.

Remove the hood from the machine.

STEP 17

Loosen the clamps on the top radiator hose.

STEP 18

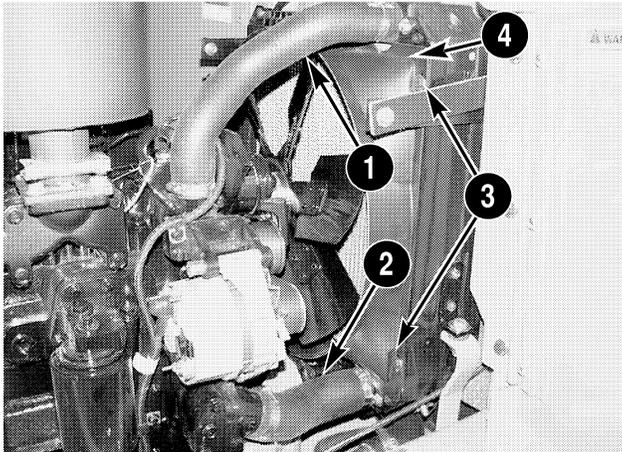

BD99F074

- | | |
|---------------|---------------|
| 1. UPPER HOSE | 3. CAP SCREW |
| 2. LOWER HOSE | 4. FAN SHROUD |

Remove the top radiator hose from the machine.

STEP 19

Loosen the claps on the lower radiator hose.


STEP 20

Remove the lower radiator hose from the engine.

STEP 21

Loosen and remove the cap screws and flat washers that fasten the fan shroud to the radiator.

STEP 22

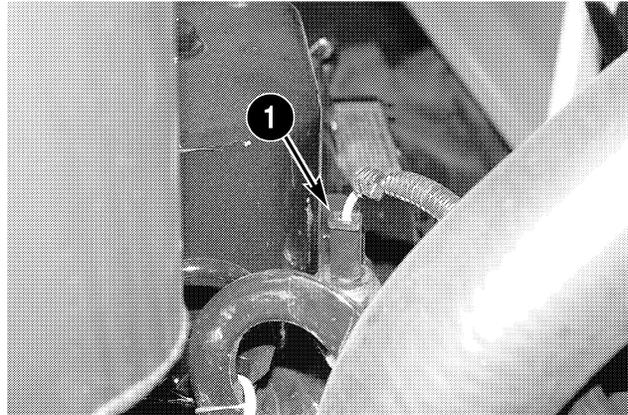


BD99F073

1. ENGINE TEMPERATURE SENDER CONNECTOR

Remove the wire from the engine temperature sender.

STEP 23

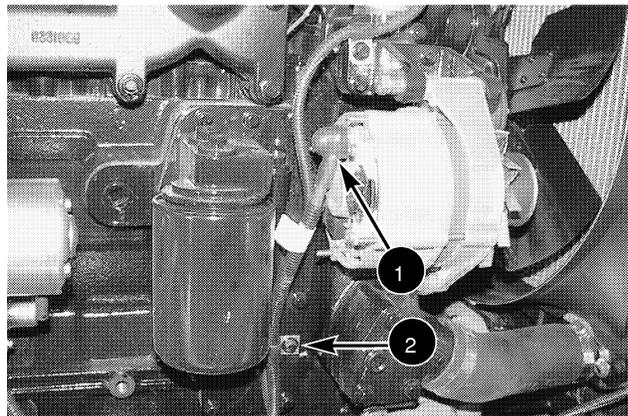

BD99F072

1. BATTERY TERMINAL 2. WIRE HARNESS CLAMP

Loosen and remove the nut and washer that fasten the wires to the battery terminal on the alternator.

STEP 24


Remove the cap screw and the wire harness clamp.

Remove the wires from the battery terminal on the alternator.

STEP 26

Disconnect the electrical connector from the alternator.

STEP 27

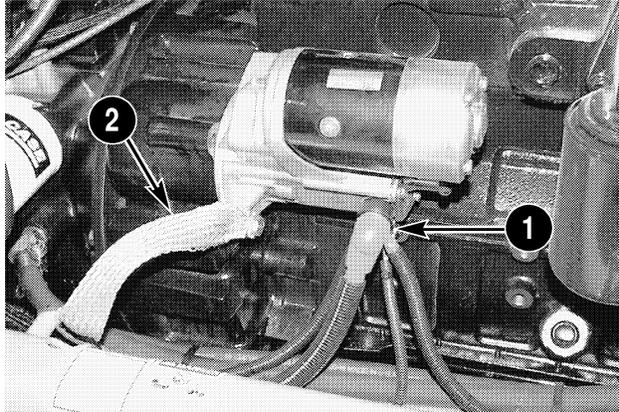

1. STARTER SOLENOID WIRES 2. GROUND STRAP

BD99F071

Loosen and remove the nut and lock washer that fastens the battery cable and wires to the starter solenoid.

STEP 28

Remove the battery cable and wires from the starter solenoid.

STEP 29

Loosen and remove the screw and lock washer that fasten the wire to the starter solenoid.

STEP 30

Move the wiring harness for the left side of the engine out of the way.

STEP 31

Loosen and remove the cap screw and lock washer that fasten the ground strap to the starter mounting bracket.


STEP 32

Disconnect the hose for the hydraulic pump from the fitting on the hydraulic reservoir.

STEP 33

Disconnect the hose for the coolant reservoir from the radiator.

STEP 34

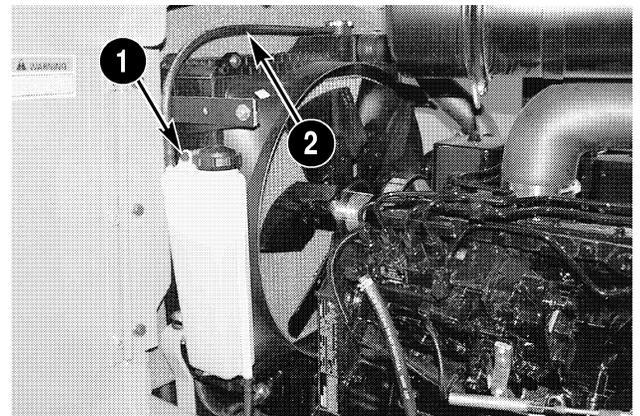

1. BOLT 2. COOLANT RESEVOIR HOSE

BD99F076


Loosen and remove the bolt, flat washers, and spacer that fastens the coolant reservoir to the radiator.

STEP 35

Remove the coolant reservoir from the machine.

Disconnect the wire from the sender for the air filter warning lamp.

STEP 37

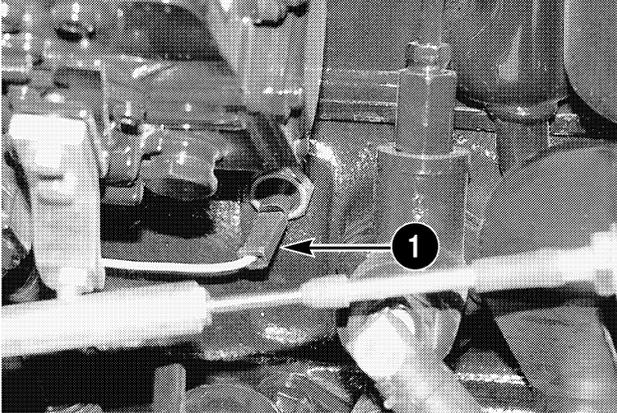


BD99F066

1. OIL PRESSURE SENDER CONNECTOR

Disconnect the wire from the engine oil pressure sender.

STEP 38

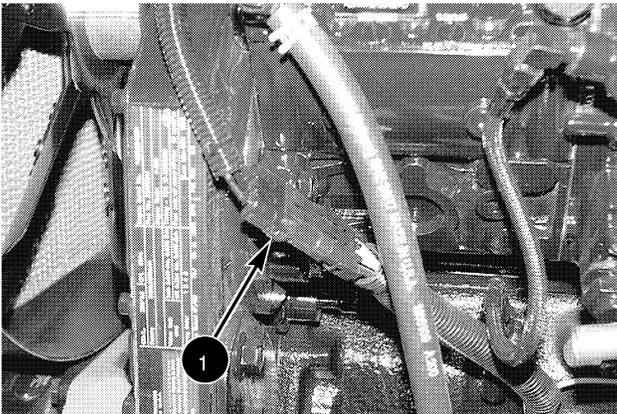


BD99F068

1. FUEL SHUTOFF SELENOID CONNECTOR

Disconnect the wire from the fuel shutoff solenoid.

STEP 39

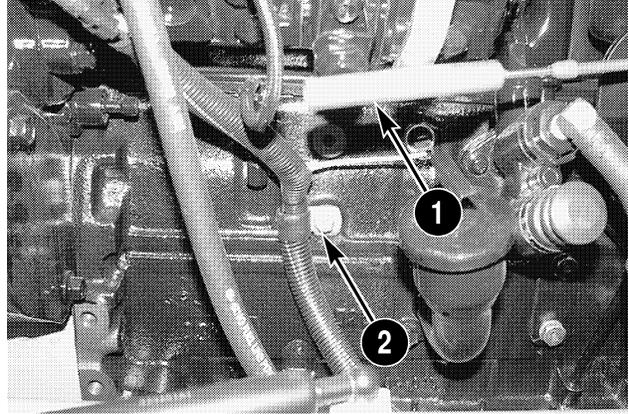

BD99F065

1. THROTTLE LINKAGE 2. WIRE HARNESS CLAMP

Loosen and remove the nut, lock washer, and flat washer that fasten the throttle linkage to the arm on the fuel injection pump.


STEP 40

Remove the throttle linkage from the arm on the fuel injection pump.

STEP 41

Loosen and remove the cap screw and wire harness clamp.

STEP 42

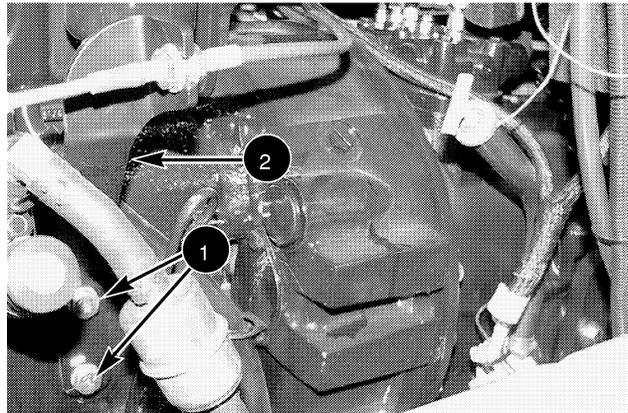

BD99FF063

1. BOLTS 2. BRACKET

Loosen and remove the bolts that fasten the mounting bracket for the throttle linkage to the engine.

Move the throttle cable and mounting bracket for the throttle linkage out of the way.


STEP 44

Move the wiring harness for the right side of the engine out of the way.

STEP 45

Remove the fuel hose from the fitting on the hand primer pump.

STEP 46

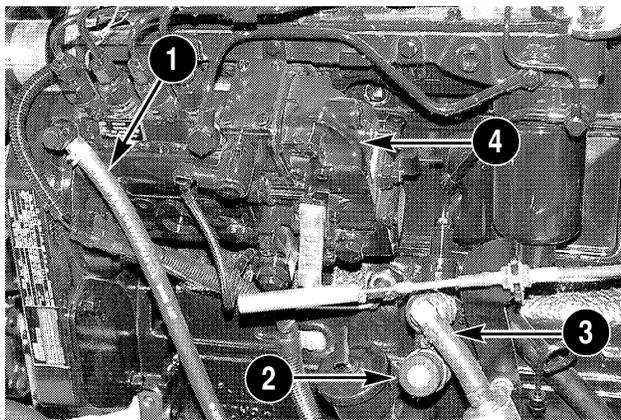


- 1. FUEL RETURN HOSE
- 2. HAND PRIMER
- 3. FUEL HOSE
- 4. FUEL PUMP

BD99F067

Remove the fuel hose from the fitting on the fuel pump.

STEP 47

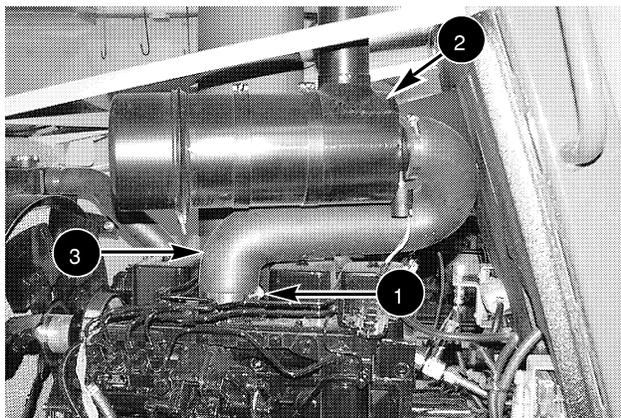

- 1. CLAMP
- 2. AIR CLEANER
- 3. HOSE


BD99F062

Loosen the clamp that fastens the hose from the air cleaner to the intake manifold.

STEP 48

Remove the hose from the intake manifold. Put a cover over the opening in the intake manifold.

STEP 49

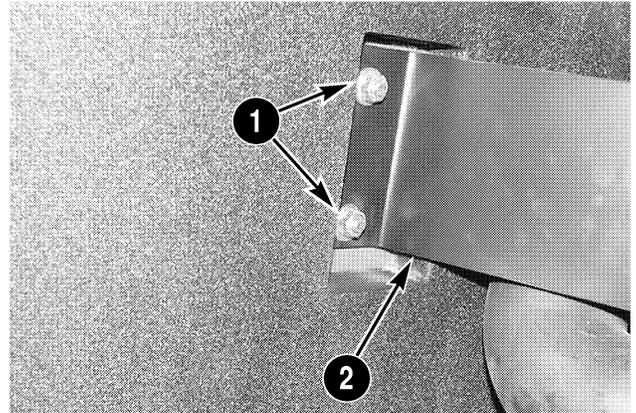


BD99F077

- 1. BOLTS
- 2. BRACKET

Loosen and remove the self-locking nuts, flat washers, and bolts that fasten the air cleaner mounting bracket to the machine.

STEP 50

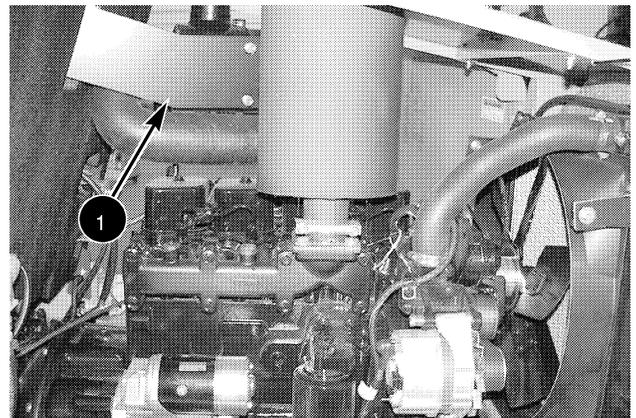

BD99F070

- 1. AIR CLEANER MOUNTING BRACKET

Remove the air cleaner and mounting bracket from the machine.

STEP 51


Loosen and remove the cap screws that fasten the hydraulic pump to the coupling assembly.

STEP 52

Remove the hydraulic pump from the coupling assembly. Move the hydraulic pump out of the way.

Connect lifting equipment to the lifting eyes on the engine.

STEP 54

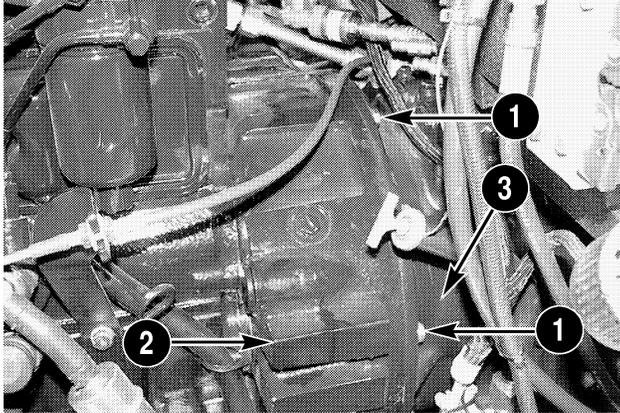

1. CAP SCREWS
2. FLYWHEEL HOUSING
3. TRANSMISSION

BD99F064

Loosen and remove the cap screws and washers that fastens the transmission to the flywheel housing.

STEP 55

Loosen and remove the bolt, flat washers, and nut that fasten the front engine support bracket to the frame.

STEP 56

Raise the engine a short distance and move the engine forward until the gear on the hydrostatic pump shaft is free of the pump drive housing. the hydraulic hoses will support the hydrostatic pump.

STEP 57

Raise the front of the engine until the oil pan is clear of the rear axle.

STEP 58

Remove the engine from the machine.

Installation

STEP 1

Put the engine in position over the frame.

STEP 2

Lower the rear of the engine and move the engine toward the rear of the machine. Be careful not to damage the gear on the hydrostatic pump shaft.


STEP 3

Lower the front of the engine until the engine is level.

STEP 4

Align the engine with the transmission.

STEP 5

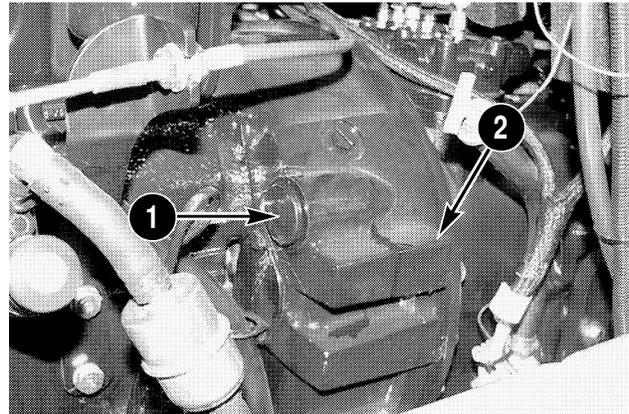

1. PLUG
2. FLYWHEEL HOUSING

BD99F063

If the gear on the piston pump shaft does not engage the drive gear in the pump drive housing, do the following

- A. Remove the plug from the flywheel housing.
- B. Use the Cas-1690 and turn the flywheel until the driven gear on the piston pump shaft engages the drive gear in the pump drive housing.
- C. Install the plug in the flywheel housing.

STEP 6

Install the cap screws that fasten the transmission to the engine.

STEP 7

Install the bolts, flat washers, and self-locking nuts that fasten the engine front support bracket to the frame. Make sure that the large flat washers and rubber insulators are in position.

Put the hydraulic pump in position on the coupling assembly.

STEP 9


If the splined shaft on the hydraulic pump does not engage the gear in the adapter, do the following:

- A. Remove the plug from the flywheel housing
- B. Use the CAS-1690 and turn the flywheel until the splines shaft on the hydraulic pump engages the gear in the adapter. Continue to turn the flywheel as required to align the holes in the hydraulic pump with the holes in the adapter.
- C. Install the plug in the flywheel housing.

STEP 10

Install the cap screws and washers that fasten the hydraulic pump to the coupling assembly.

STEP 11

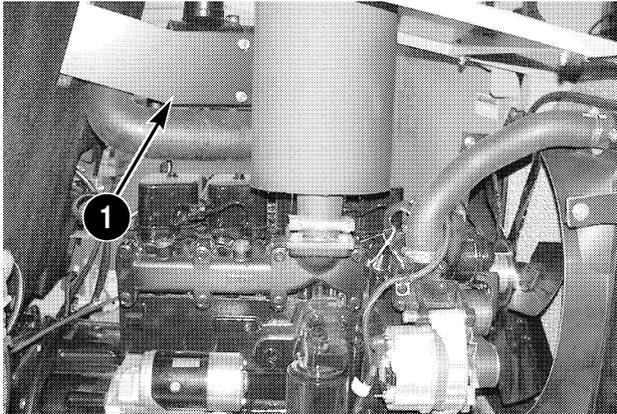


BD99F070

1. AIR FILTER MOUNTING BRACKET

Put the air cleaner and mounting bracket in position on the machine. Install the bolt, flat washers, and self-locking nuts that fasten the air cleaner mounting bracket to the machine.

STEP 12

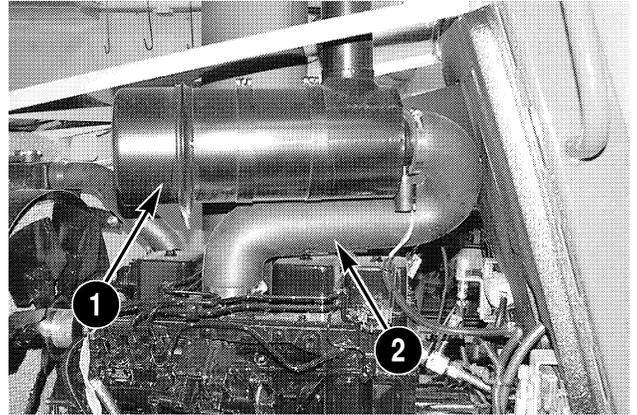


BD99F062

1. AIR FILTER

2. HOSE

Put the hose for the air cleaner in position on the opening for the intake manifold. Tighten the clamp that fastens the air cleaner hose to the intake manifold.

STEP 13

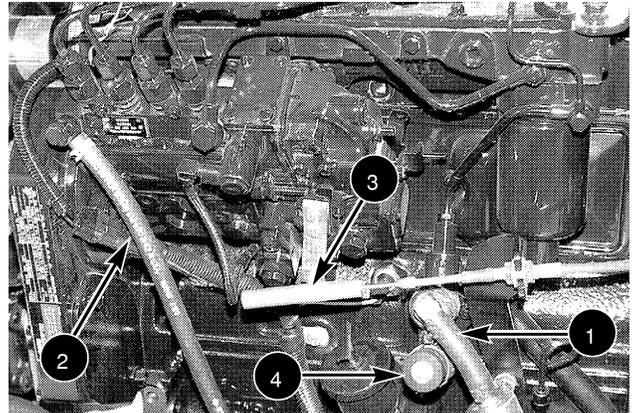

BD99F067


1. FUEL LINE

2. FUEL RETURN LINE

3. THROTTLE LINKAGE CABLE

4. HAND PRIMER

Connect the fuel return line to the fuel injector and the fuel line to the hand primer.

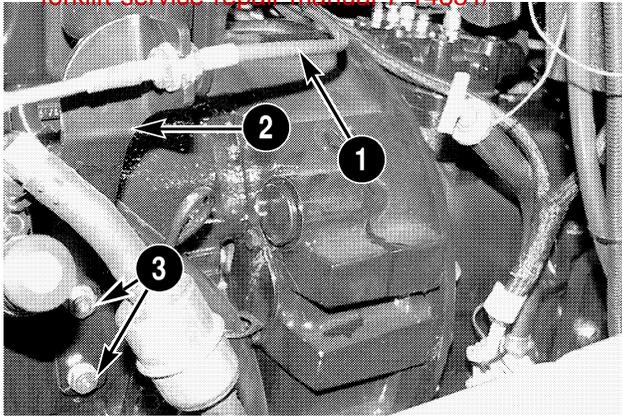

BD99F063


- 1. THROTTLE CABLE
- 2. BRACKET
- 3. BOLTS

Put the throttle cable and mounting bracket in position on the engine. Install the bolts that fasten the mounting bracket for the throttle cable to the engine.

STEP 15

Connect the throttle linkage to the arm on the fuel injection pump. Install the flat washer, Lock washer, and nut that fastens the throttle linkage to the arm on the fuel injection pump.

STEP 16

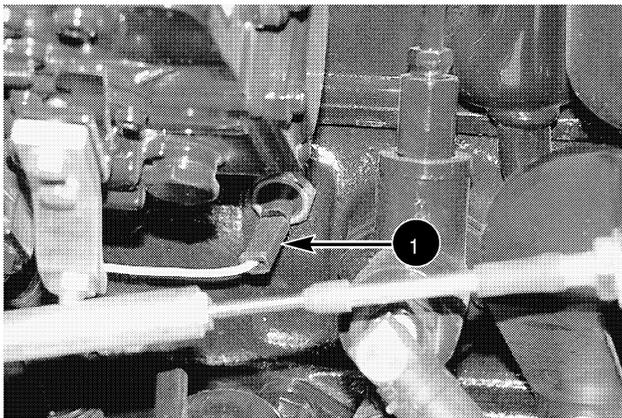


BD99F066

- 1. OIL PRESSURE SENDER CONNECTOR

Connect the wire to the engine oil pressures sender.

STEP 17

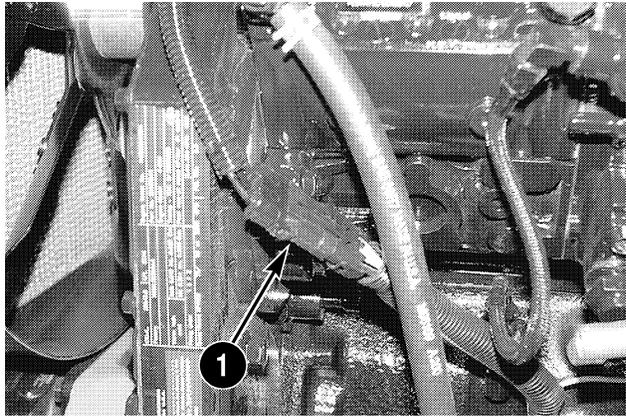

BD99F068


- 1. FUEL SHUTOFF SOLENOID CONNECTOR

Connect the wire to the fuel shutoff solenoid.

STEP 18

Connect the wires to the sender for the air filter warning lamp.

STEP 19

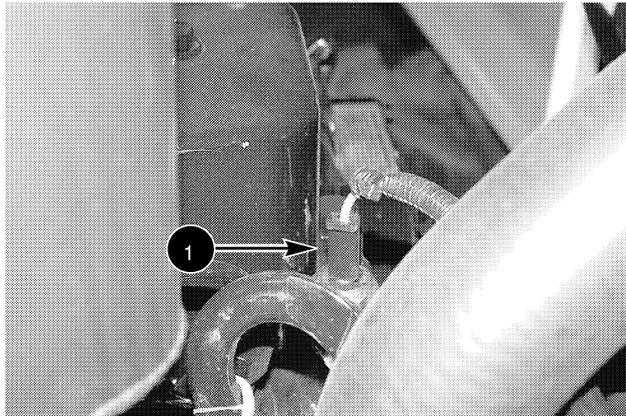

BD99F073

- 1. ENGINE TEMPERATURE SENDER CONNECTOR

Connect the wire for the engine temperature sender.