

HYDRAULIC EXCAVATOR

SHOP MANUAL

model

SK 60

This is the shop manual for KOBELCO hydraulic excavator. Contained is the necessary technical data concerning the maintenance and repair of this model. The manual is divided into the following four major sections; GENERAL, SYSTEMS, COMPONENTS and PROCEDURE.

*GENERAL

- | | |
|--|---|
| LE01. SPECIFICATION
— OPERATION AND CONTROLS | LE05. TROUBLE SHOOTING
— PREVENTIVE MAINTENANCE
(Refer to Operators Manual) |
| LE03. LOCATION AND WEIGHT OF COMPONENTS | LE07. WORKING STANDARD |
| LE04. MAINTENANCE STANDARD AND
TEST PROCEDURE | |

*SYSTEMS

- | | |
|------------------------|------------------------------|
| LE11. DRIVE SYSTEM | LE22. CONTROL SYSTEM |
| LE12. HYDRAULIC SYSTEM | LE23. UPPER FRAME |
| LE15. SWING SYSTEM | LE25. ELECTRICAL SYSTEM |
| LE18. TRAVEL SYSTEM | LE26. AIR-CONDITIONER SYSTEM |
| LE21. ATTACHMENTS | LE50. ENGINE |

*COMPONENTS

- | | |
|---------------------|------------------------|
| 12. HYDRAULIC PUMP | 16. SWIVEL JOINT |
| 13. CONTROL VALVE | 17. HYDRAULIC CYLINDER |
| 14. OTHER VALVES | 21. REDUCTION UNIT |
| 15. HYDRAULIC MOTOR | |

*PROCEDURE

When checking or repairing the machine we suggest that you refer to this manual carefully. We hope that reference to this manual will help to maintain a high level of working efficiency and reliability. For further details on maintenance and checks refer to the "OPERATORS MANUAL" which has been supplied with the machine.

Although all data was correct at the time of printing, due to continual design changes and improvements, some contents may not conform to the actual machine. Take special care to order parts only after confirming the validity of the parts number in the "PARTS MANUAL".

If you notice any explanatory discrepancies, after consulting one of our representatives, please update your manual according to the latest data. However, in the event of any specification changes, we will issue revised edition.

INDEX

KOBELCO

Book code No. S5LE0005E③

Sample of manual. Download All 782 pages at:

<https://www.arepairmanual.com/downloads/kobelco-model-sk60-hydraulic-excavator-service-repair-workshop-manual/>

 **WARNING**

SAFETY

 **WARNING**

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood/goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Compartment.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.

 **WARNING**

Do not operate this machine unless you have read and understand the instructions in the OPERATOR'S MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other implements to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other implement is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and compartments.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

 **WARNING**

13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
 14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
 15. Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
 16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
 17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
 18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pin hole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pin hole leaks.
 19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
 20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
 21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.
 22. Caution should be used to avoid breathing dust that may be generated when handling components containing asbestos fibers. If this dust is inhaled, it can be hazardous to your health. Components in KOBELCO products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates and some gaskets. The asbestos used in these components is usually bound in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust which contains asbestos is not generated.
- If dust which may contain asbestos is present, there are several common sense guidelines that should be followed.
- a. Never use compressed air for cleaning.
 - b. Avoid brushing or grinding of asbestos containing materials.
 - c. For clean up, use wet methods or a vacuum equipped with a high efficiency particulate air (HEPA) filter.
 - d. Use exhaust ventilation on permanent machining jobs.
 - e. Wear an approved respirator if there is no other way to control the dust.
 - f. Comply with applicable rules and regulations for the work place.
 - g. Follow environmental rules and regulations for disposal of asbestos.
 - h. Avoid areas where asbestos particles may be in the air.

SHOP MANUAL

model

SK 60

TABLE OF CONTENTS

1. SPECIFICATION
2. OPERATION AND CONTROLS (Refer to Operators Manual)
3. LOCATION AND WEIGHT OF COMPONENTS
4. MAINTENANCE STANDARDS AND TEST PROCEDURES.....
5. TROUBLESHOOTING
6. PREVENTIVE MAINTENANCE (Refer to Operators Manual)
7. WORKING STANDARDS

LE01

LE03


LE04

LE05

LE07

○How to Index each Shop Manual Section

The GENERAL of this shop manual consists of 7 headings as shown above. Each section can be easily referred to by indexes appended to the margin of the page as indicated on the right. Please use the indexes for speedy reference.

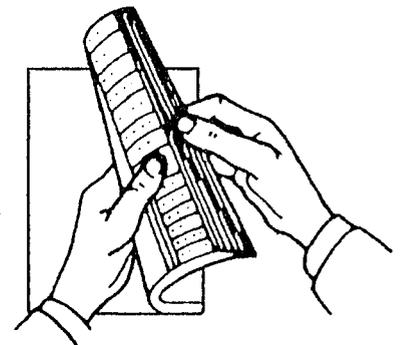

KOBELCO

GENERAL

Book code No.

S5LE0105E②

KOBELCO

SHOP MANUAL

SK60

LE01

SPECIFICATION

TABLE OF CONTENTS

1. NAME OF COMPONENTS	1
2. GENERAL DIMENSIONS	2
3. SPECIFICATIONS AND PERFORMANCE	4
4. TYPE OF SHOES	5
5. TYPE AND COMBINATION OF ATTACHMENTS	5
6. WORKING RANGES OF ATTACHMENTS	7
7. LIFTING-UP ABILITY DIAGRAM	9
8. ENGINE SPECIFICATIONS	12




KOBE STEEL, LTD.

Applicable Machines
LE-11001~

Revision	Date of Issue	Remarks
First edition	June, 1990	S5LE0105E K
First revision	November, 1990	S5LE0105E① K
Second revision	December, 1991	S5LE0105E② K


1. LOCATION OF COMPONENTS

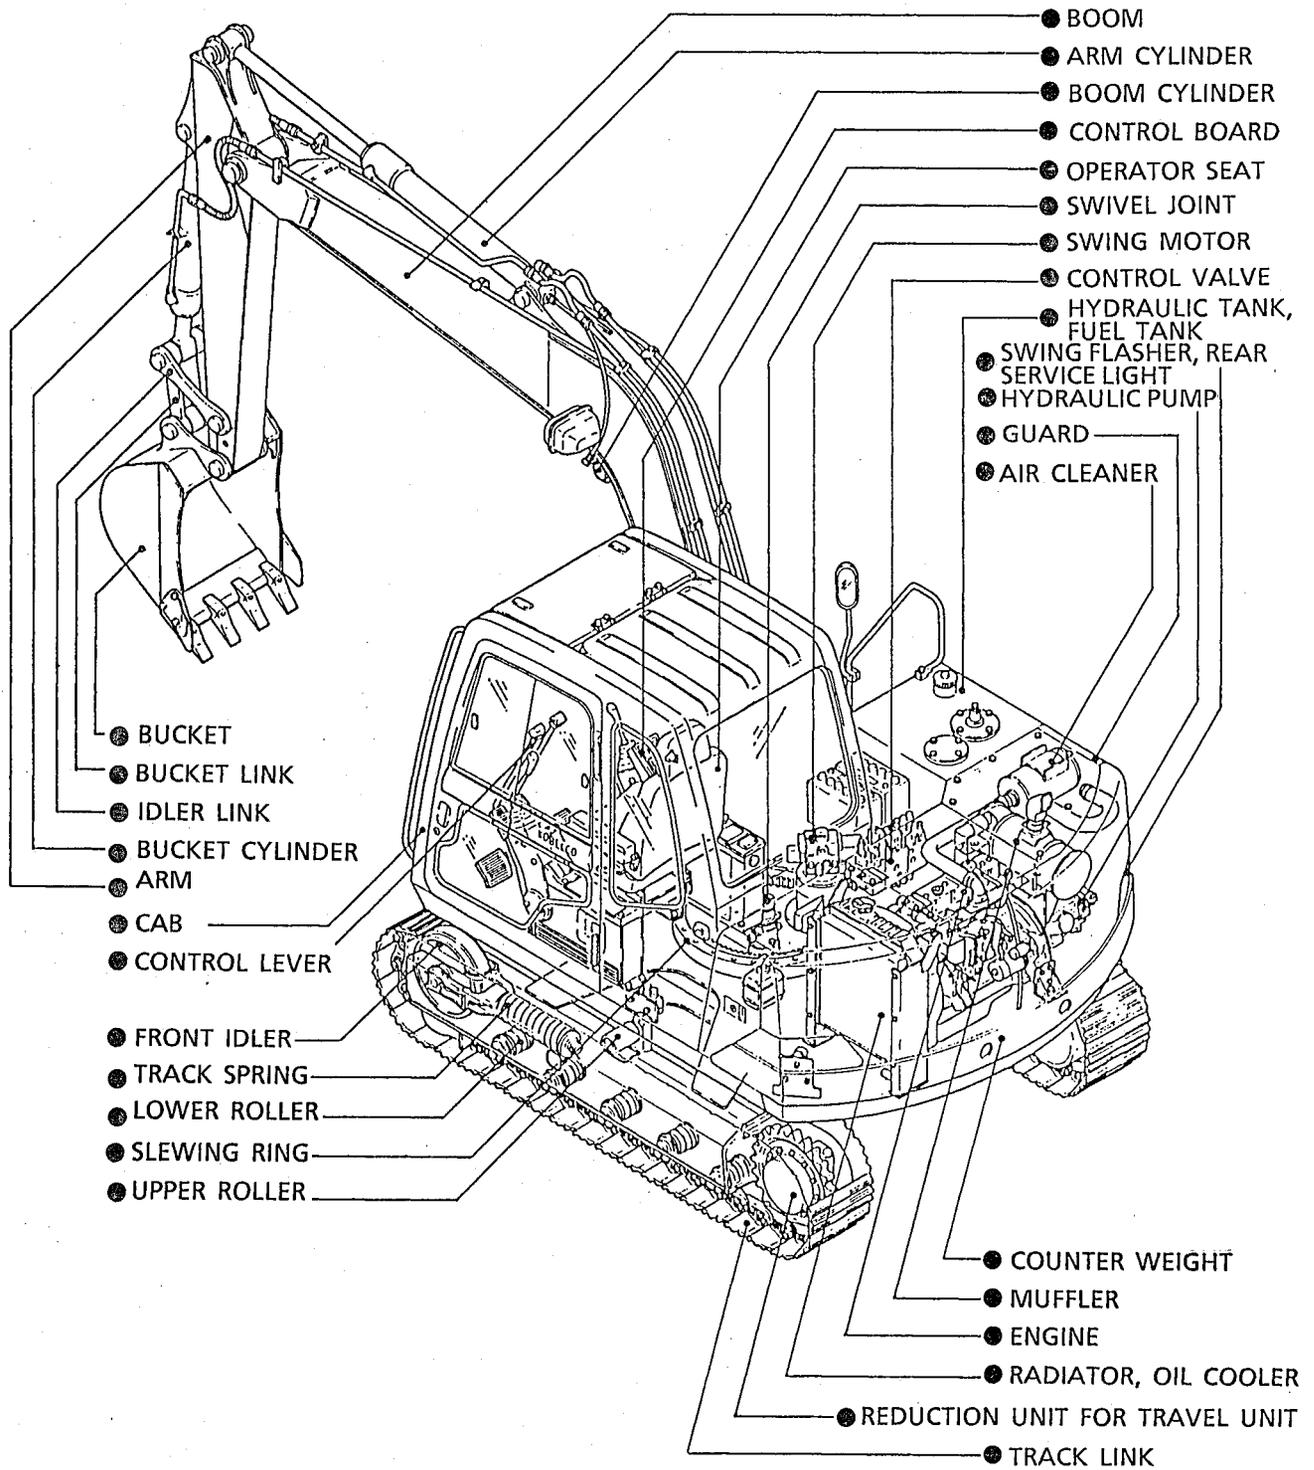


2. GENERAL DIMENSIONS

■ 3.7m (12ft2 in) BOOM + 1.73m (5ft 8 in) ARM-ATTACHED STANDARD MACHINE


Unit : mm (ft-in)

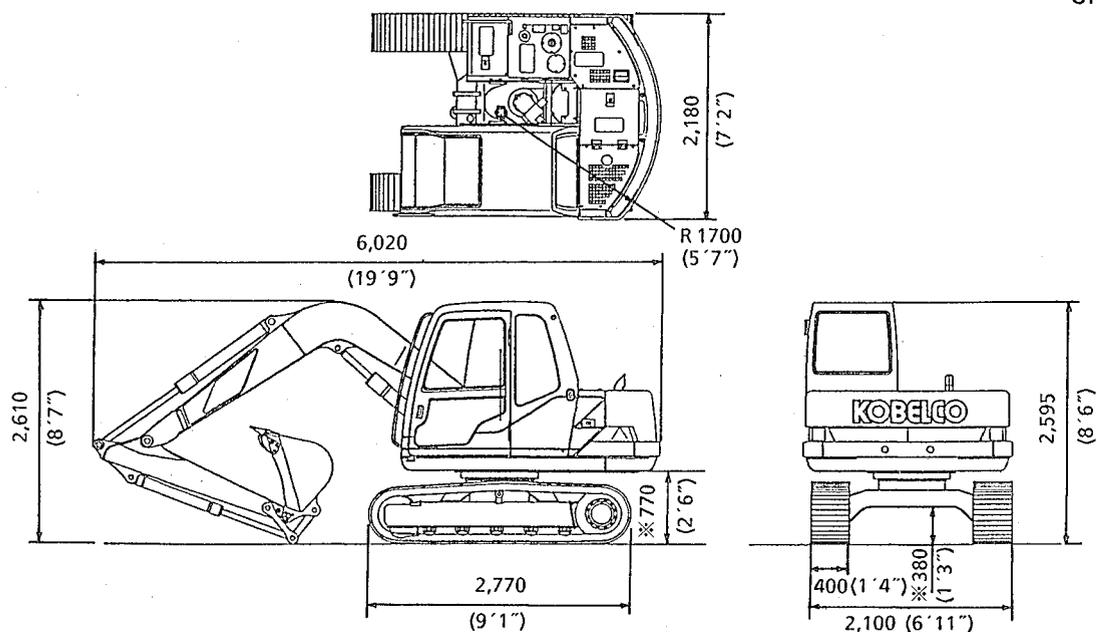

■ WITH 3.7m (12ft2 in) BOOM + 2.15m (7ft 1in) ARM)

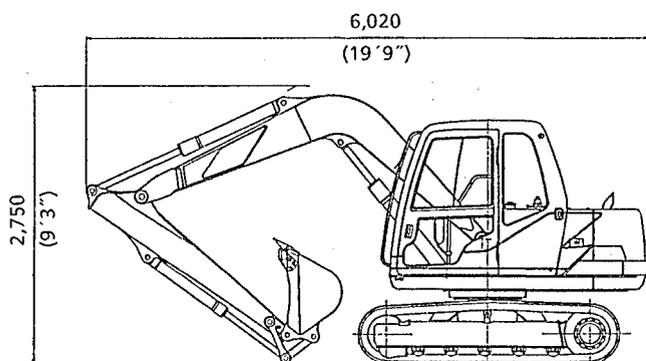

■ 3.7m (12ft2 in) BOOM + 1.73m (5ft 8 in) + 0.45m (1ft 6 in) EXTENSION ARM

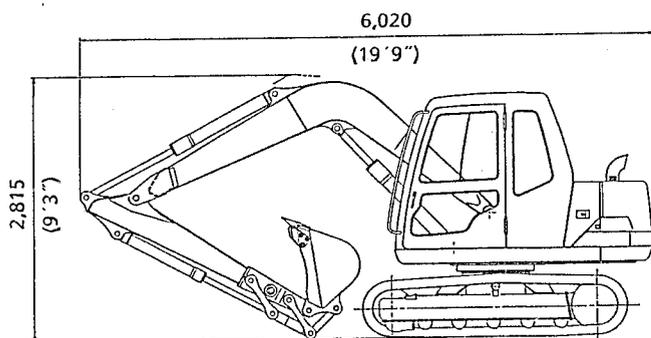

☞ The figures marked ※ in the illustration do not include the shoe embossment (20mm) (0.78").

3. SPECIFICATIONS AND PERFORMANCE

■ SPEED AND CLIMBING ABILITY

Swing speed	13rpm
Travel speed	2-SPEED 5.5 km / h (3.4 MPH) · 1-SPEED 3.7 km / h (2.3 MPH)
Gradeability	35° (70%)

■ ENGINE

Model	ISUZU 4JB1	
Type	Water-cooled 4-cycle, direct injection type	
Number of cylinder - Bore × Stroke	4 - 93mm(3.66in) × 102mm(4.02in)	
Total displacement	2,771c.c. (169cuin)	
Rated output power/revolution	JISD1005 Net	57ps / 2,200rpm
	SAEJ1349 Net	40.7kw / 2,200rpm
	DIN 6270 Net	39.8kw / 2,200rpm
Maximum torque/revolution	JISD1005 Net	18kgf·m / 1,800rpm
	SAEJ1349 Net	171.6N·m / 1,800rpm
	DIN 6270 Net	167.5N·m / 1,800rpm




■ HYDRAULIC COMPONENTS

Hydraulic pump	Double-pump variable displacement, axial piston + gear pump
Hydraulic motor (swing)	Axial piston motor
Hydraulic motor (travel)	Axial piston motor
Control valve	5-section multiple control valve + 1-section control valve (swing)
Cylinders (boom, arm, and bucket)	Double acting cylinder
Return filter	Safety valve containing filter type
Oil cooler	Air-cooled type

■ WEIGHT

	Unit : kg (lbs)	
Fully-equipped weight	6,400 (14,100)	6,670 (14,700)
Upper machinery	3,170 (7,000)	←
Lower machinery (with 400mm(16") grocer shoe)	2,190 (4,800)	-
(with 600mm(24") grocer shoe)	-	2,460 (5,400)
Attachment (3.7(12ft 2in) boom + 1.73m(5ft 8in) arm + 0.25m ³ (0.33cu vd) bucket)	1,040 (2,300)	←

4. TYPE OF SHOES

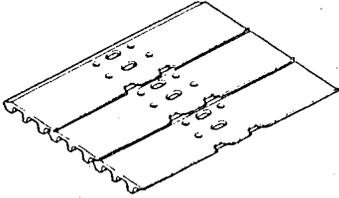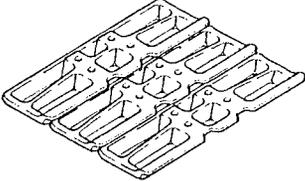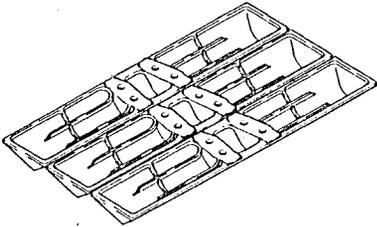Shape	Width of track shoe (mm(ft-in))	Overall width of crawler (mm(ft-in))	Ground contact Pressure kgf/cm ² (psi)		
			S.T.D Arm 1.73m (5'8")	2.15m (7'1") Arm	1.73m (5'8") + EXT.
Grouser(equal height) 	400(16")	2,100(6'11")	0.34(4.83)	0.34(4.83)	0.34(4.83)
	500(20")	2,200(7' 3")	0.27(3.83)	0.27(3.83)	0.28(3.98)
	600(24")	2,300(7' 7")	0.23(3.27)	0.23(3.27)	0.23(3.27)
Flat 	400(16")	2,100(6'11")	0.34(4.83)	0.34(4.83)	0.35(4.98)
Triangle 	600(24")	2,300(7' 7")	0.23(3.27)	0.23(3.27)	0.23(3.27)
	700(27")	2,400(7'10")	0.20(2.84)	0.20(2.84)	0.20(2.84)


☞ 400mm (16") · 500mm (20") · 600mm (24") shoes, flat shoes and 600mm (24") · 700mm (27") triangle shoes come in three types, wet land, paved road and soft land. Do not use them at sites with many stones and gravels in any circumstances.

● Note that if you operate such shoe-mounted machines in general civil construction work and in a dry riverbed, it will cause shoes to bend, bring about slackening of shoe bolts and damage to under frame parts (links, crawlers, etc.).

5. TYPE AND COMBINATION OF ATTACHMENTS

■ TYPES OF BUCKETS


HOE BUCKET

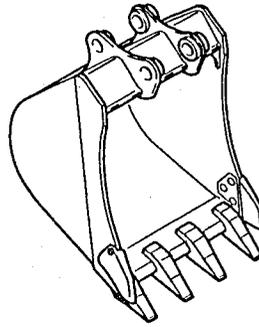

Heaped capacity m ³ (cuyd)	Outside width of bucket mm (ft-in)		No. of teeth	Presence or not of side cutter	Possibility of turnover	Weight kg (lbs)
	With side cutter	With out side cutter				
0.1(0.13)	—	368(1' 2")	3	No	Yes	160(350)
0.16(0.21)	560(1' 10")	460(1' 6")	3	Yes	Yes	170(370)
0.2(0.26)	650(2' 2")	550(1' 10")	3	Yes	Yes	180(400)
0.25(0.33)	770(2' 6")	670(2' 2")	4	Yes	Yes	210(460)
0.3(0.39)	—	820(2' 8")	4	No	Yes	220(490)


RIPPER

Turnover not possible
Weight : 210kg (460 lbs)

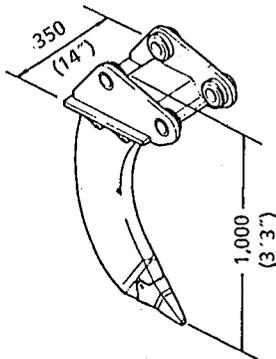


SLOPE FINISHING BUCKET

Turnover not possible
Capacity : 0.2m³ (0.26 cuyd)
Weight : 300kg (660 lbs)

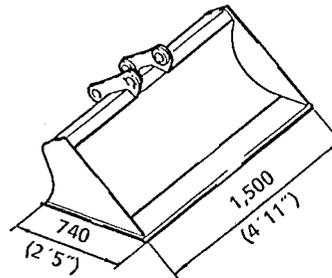


CLAMSHELL BUCKET

Capacity : 0.2m³ (0.26 cuyd)
Weight : 435kg (960 lbs)
Width of opening :
1,240mm (4ft1in)

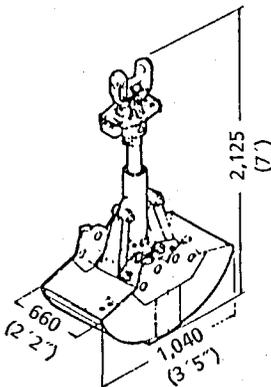

V-BUCKET

Turnover not possible
Capacity : 0.2m³ (0.26 cuyd)
Weight : 180kg (400 lbs)

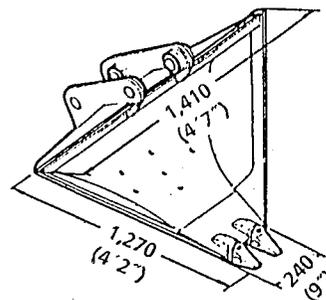

■ COMBINATIONS OF ATTACHMENTS

Type	Bucket			Applicable arm		
	JIS heaped capacity m ³ (cu yd)	SAE heaped capacity m ³ (cu yd)	JIS.SAE struck capacity m ³ (cu yd)	1.73m (5ft8in) arm	2.15m (7ft1in) arm	1.73m (5ft8in) arm + 0.45 m (1ft6in) extension arm
Hoe bucket	0.1 (0.13)	0.11 (0.14)	0.09 (0.12)	○	○	○
	0.16 (0.21)	0.18 (0.24)	0.14 (0.18)	○	○	○
	0.2 (0.26)	0.23 (0.3)	0.17 (0.22)	○	◎	◎
	0.25 (0.33)	0.28 (0.37)	0.22 (0.29)	◎	△	△
	0.3 (0.39)	0.34 (0.44)	0.26 (0.34)	△	×	×
Clamshell bucket	0.2 (0.26)	—	—	○	○	×
Slope finishing bucket	Width × depth 0.74m × 1.5m (2ft5in × 4ft11in)	—	—	△	△	△
Ripper	—	—	—	○	×	×
V-bucket	0.2 (0.26)	0.23 (0.3)	0.17 (0.22)	△	△	△
Bucket with ejector	0.1 (0.13)	0.11 (1.14)	0.09 (0.12)	○	○	○



◎ Standard combinations

- General operation : Digging and loading of sand, gravels and clay-mixed soil
- △ Light operation : Operations mainly consisting of loading of loose sand and soil (for instance, operations in paddy fields and loading of sand and gravels)
- × Not usable : Do not operate in such combinations as guarantee does not cover them.




- ◎ If a bucket other than hoe buckets is used to execute turnover operation, it will cause damage to the arm and the bucket.
- ◎ The combinations other than those mentioned in the above table can not be used in principle. For details, contact us.

■ DIGGING FORCE

Arm + Bucket	Digging force ton (UK ton)	
	Arm	Bucket
1.73m + 0.25m ³ (5 ft 8 in + 0.33 cuyd)	3.7 (3.6)	4.8 (4.7)
2.15m + 0.2m ³ (7 ft 1 in + 0.26 cuyd)	3.2 (3.1)	4.8 (4.7)
1.73m + 0.45m EXT. + 0.2m ³ (5 ft 8 in + 1 ft 6 in + 0.26 cuyd)	3.2 (3.1)	4.8 (4.7)

6. WORKING RANGES OF ATTACHMENTS

■ BACKHOE ATTACHMENT

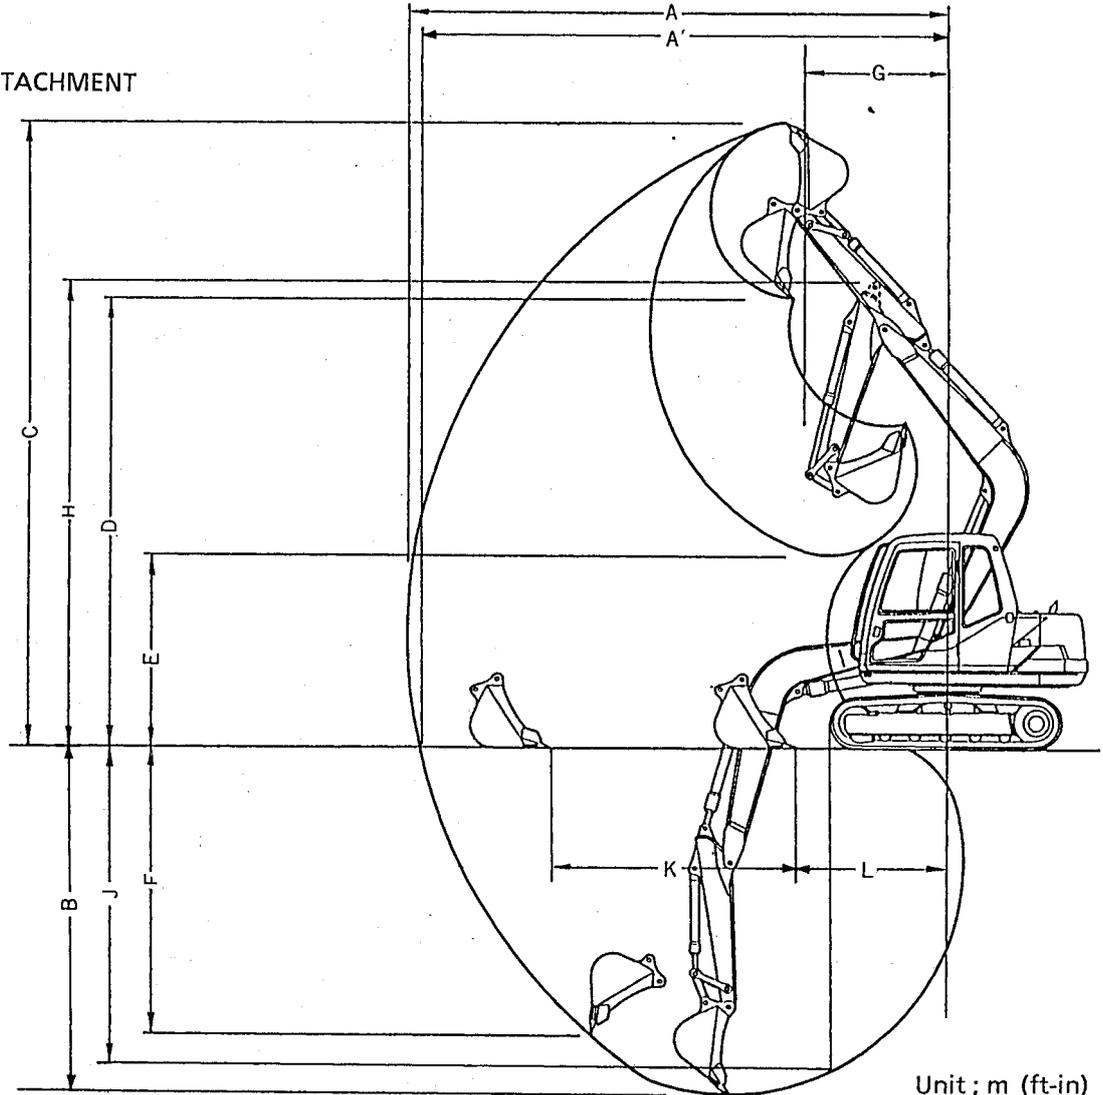


Unit ; m (ft-in)

Type of attachment		1.73m (5ft8in) arm with 0.25m ³ (0.33cuyd) bucket	2.15m (7ft1in) arm with 0.2m ³ (0.26cuyd) bucket	1.73m (5ft8in) arm + 0.45m (1ft6in) arm extension arm with 0.2m ³ (0.26cuyd) bucket	
Item	Range				
A	Max digging reach	6.42(21' 1")	6.81(22' 4")	6.82(22' 4")	
A'	Max. reach at ground level	6.28(20' 7")	6.68(21' 11")	6.70(22')	
B	Max. digging depth	4.20(13' 9")	4.60(15' 1")	4.63(15' 2")	
C	Max. digging height	7.36(24' 2")	7.69(25' 3")	7.68(25' 2")	
D	Max. dumping clearance	5.29(17' 4")	5.62(18' 5")	5.61(18' 5")	
E	Min. dumping clearance	2.29(7' 6")	1.87(6' 2")	1.86(6' 1")	
F	Max. vertical digging depth	3.47(11' 5")	3.85(12' 8")	3.78(12' 5")	
G	Min swing radius	1.70(5' 7")	1.74(5' 9")	1.81(5' 11")	
H	Height at min. swing radius	5.51(18' 1")	5.50(18' 1")	5.51(18' 1")	
J	Digging depth at 8ft-flat floor	3.85(12' 8")	4.33(14' 2")	4.37(14' 4")	
K	Horizontal digging distance	Stroke	2.92(9' 7")	3.63(11' 11")	3.61(11' 10")
		At min.	1.79(5' 10")	1.48(4' 10")	1.52(5')

☞ The figures in this table do not include the projection of shoes (20mm (0.78in)).

■ FACE SHOVEL ATTACHMENT

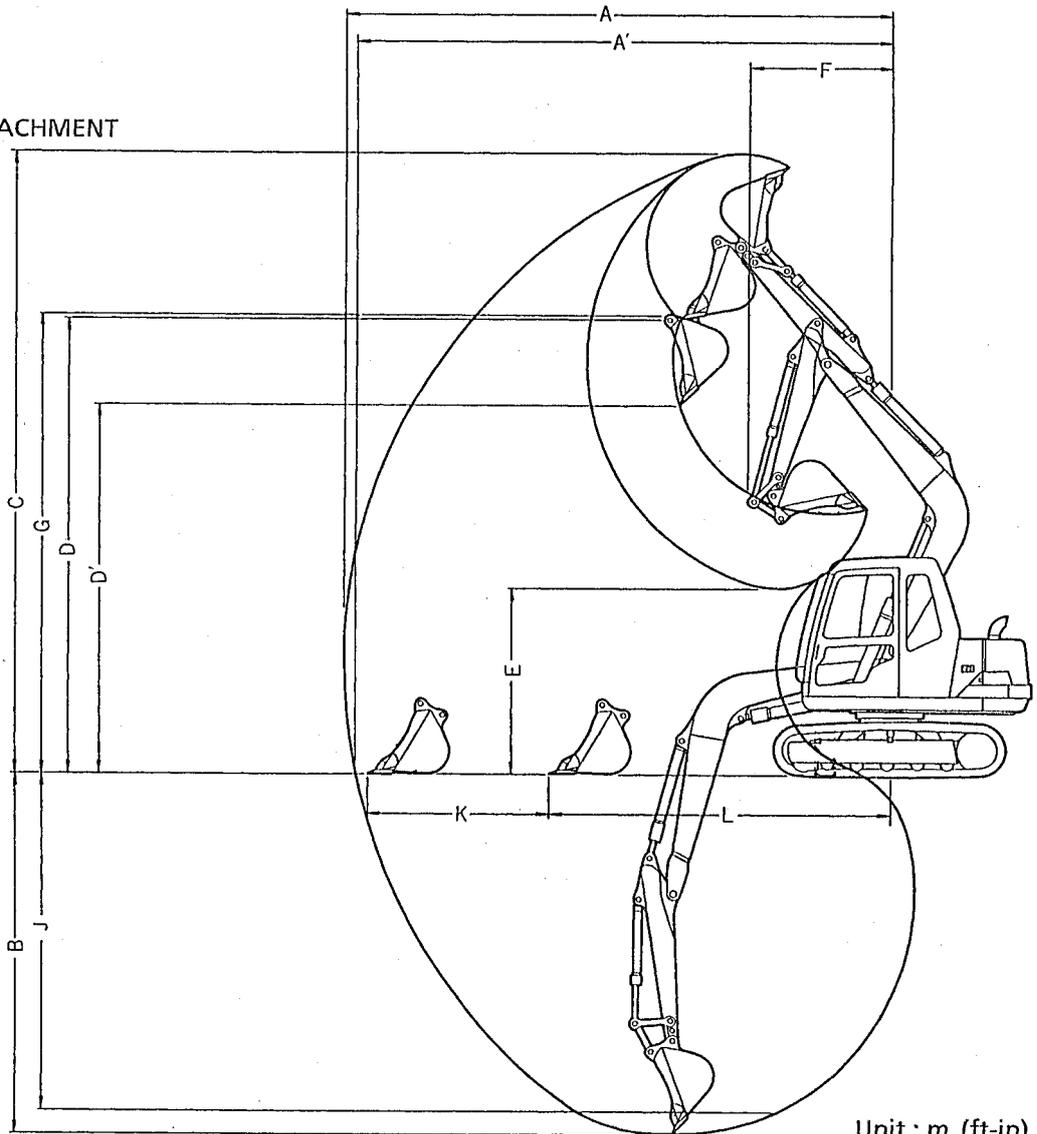

Unit ; m (ft-in)

Item		Type of attachment	1.73m (5ft8in) arm with 0.25m ³ (0.33cuyd) bucket	2.15m (7ft1in) arm with 0.2m ³ (0.26cuyd) bucket	1.73m (5ft8in) arm + 0.45m (1ft6in) arm extension arm with 0.2m ³ (0.26cuyd) bucket
A	Max digging reach		6.51(21' 4")	6.91(22' 8")	6.92(22' 8")
A'	Max. reach at ground level		6.37(20' 11")	6.78(22' 3")	6.79(22' 3")
B	Max. digging depth		4.30(14' 1")	4.70(15' 5")	4.72(15' 6")
C	Max. digging height		7.46(24' 6")	7.80(25' 7")	7.79(25' 7")
D	Max. dumping clearance		5.46(17' 11")	5.79(19')	5.79(19')
D'	Max. dumping clearance (45°)		4.42(14' 6")	4.58(15')	4.53(14' 10")
E	Min. dumping clearance		2.20(7' 3")	1.77(5' 10")	1.76(5' 9")
F	Min swing radius		1.70(5' 7")	1.74(5' 9")	1.81(5' 11")
G	Height at min. swing radius		5.51(18' 1")	5.50(18')	5.51(18' 1")
J	Digging depth at 8ft-flat floor		3.98(13' 1")	4.43(14' 6")	4.47(14' 8")
K	Horizontal digging distance	Stroke	2.16(7' 1")	2.82(9' 3")	2.90(9' 6")
		At min.	4.07(13' 4")	3.82(12' 6")	3.75(12' 4")

☞ The figures in this table do not include the projection of shoes (20mm (0.78in)).

7. LIFTING-UP ABILITY DIAGRAM

(1) Calculation condition

The lifting-up ability of this drawing is indicated by metric standard. The indicated figures fall within 87% of a set pressure of the main relief valve used in the arm and the boom cylinder and 75% of static tilting load.

- 1) The load point is the fulcrum of the bucket and the bucket position is an embraced posture.
- 2) The figures on the upper stage indicate the lifting-up ability of a machine facing sideways, while the figures at the bottom stage represent a machine facing longitudinally.
- 3) Unit : ton Shoe width : 400mm (16") shoe or 600mm (24") shoe


Calculation condition for U.K.

The lifting-up ability of this drawing is indicated by metric standard.

The indicated figures fall within 87% of a set pressure of the main relief valve used in the arm and the boom cylinder and 71% of static tilting load.

(2) Lifting-up ability diagram Item No. table

Model	Shoe width	Arm length (M) + bucket capacity (M ³)					
		1.73M + 0.25M ³ (5'8") + (0.33cu·yd) STD		2.15M + 0.2M ³ (7'1") + (0.26cu·yd) LONG		1.73M+EXT + 0.2M ³ (5'8")+EXT+(0.26cu·yd)	Short Loader + 0.3M ³ Short Loader + (0.39cu·yd)
		Reference	No. 1	3	For U.K	7	9
SK60	400mm (16")				-		
	600mm (24")						

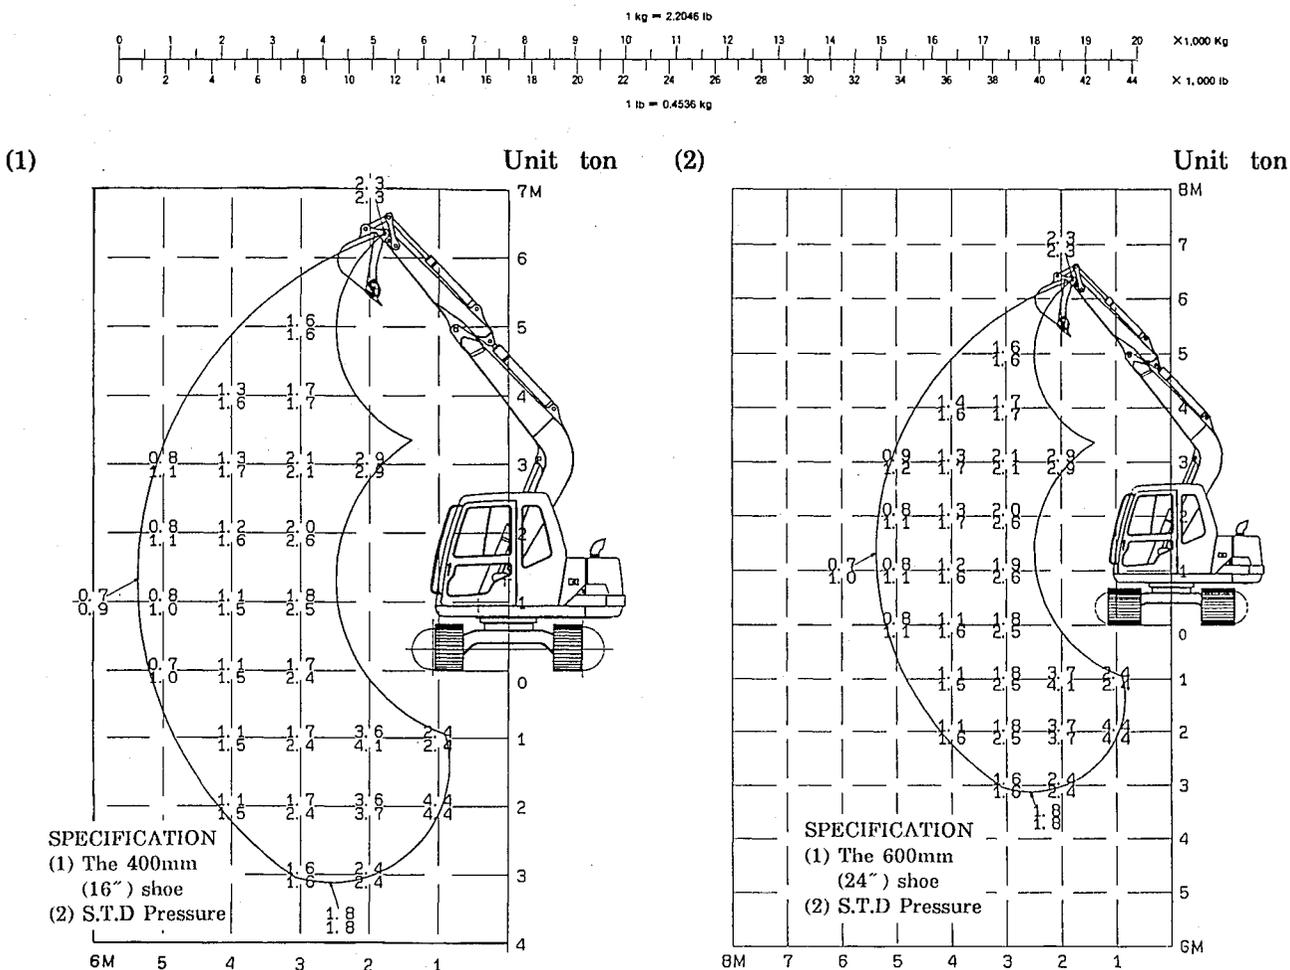


8. ENGINE SPECIFICATIONS

MAJOR SPECIFICATIONS

SK60

Type		Isuzu Motors Limited 4JB1		
No. of cylinders-Dir×Stroke		6-93mm×102mm (3.66 in×4.02 in)		
Total displacement		2,771cc (169 cuin)		
Compression ration		18.2		
Output rating		57PS / 2,200 rpm (40.7kw/ 2,200 rpm)		
Max. torque		18kgf·m / 1,800 rpm (171.6 N-m / 1,800 rpm)		
High idling		2,470±50 rpm		
Low idling		850±25 rpm		
Injection start pressure		185kgf/cm ² (2,630psi)		
Thermostat		Before top-dead center 82°C (180°F) Full open 95°C (203°F)		
Ignition order		1-3-4-2		
Compression pressure		30kgf/cm ² (427psi) [at 200 rpm]		
Lube oil pressure		-		
Fuel injection timing		17°C before the top dead point		
Valve clearance, valve action timing		Valve clearance	Open	Close
	Suction valve	In cold state, in cold condition 0.4mm (0.016")	24.5° before the top dead point	55.5° before the bottom dead point
	Exhaust valve	In cold state, in cold condition 0.4mm (0.016")	54° before the bottom dead point	26° before the top dead point
Starter capacity		3.2kw		
Generator capacity		24V (20A)		
Cooling fan drive method		Ø450 (Ø18in)suction type Belt drive pulley ratio=Crank / Fan=1.117		
Engine oil volume		Engine body 7±1ℓ (1.85±0.26 gal)		
Dry weight		237kg (522 lbs)		
Fuel consumption ratio (rated point)		170g (0.375 lbs) / PS·h		
Allowable inclination angle		Front·Rear·Left·Right 35°		
Engine dimension (total length×total width×total height)		751mm×610mm×781mm (30in×24in×31in)		
Rotating direction		Clockwise as seen from the fan side		

ENGINE CHARACTERISTIC CURVE
(ISUZU 4JB1)

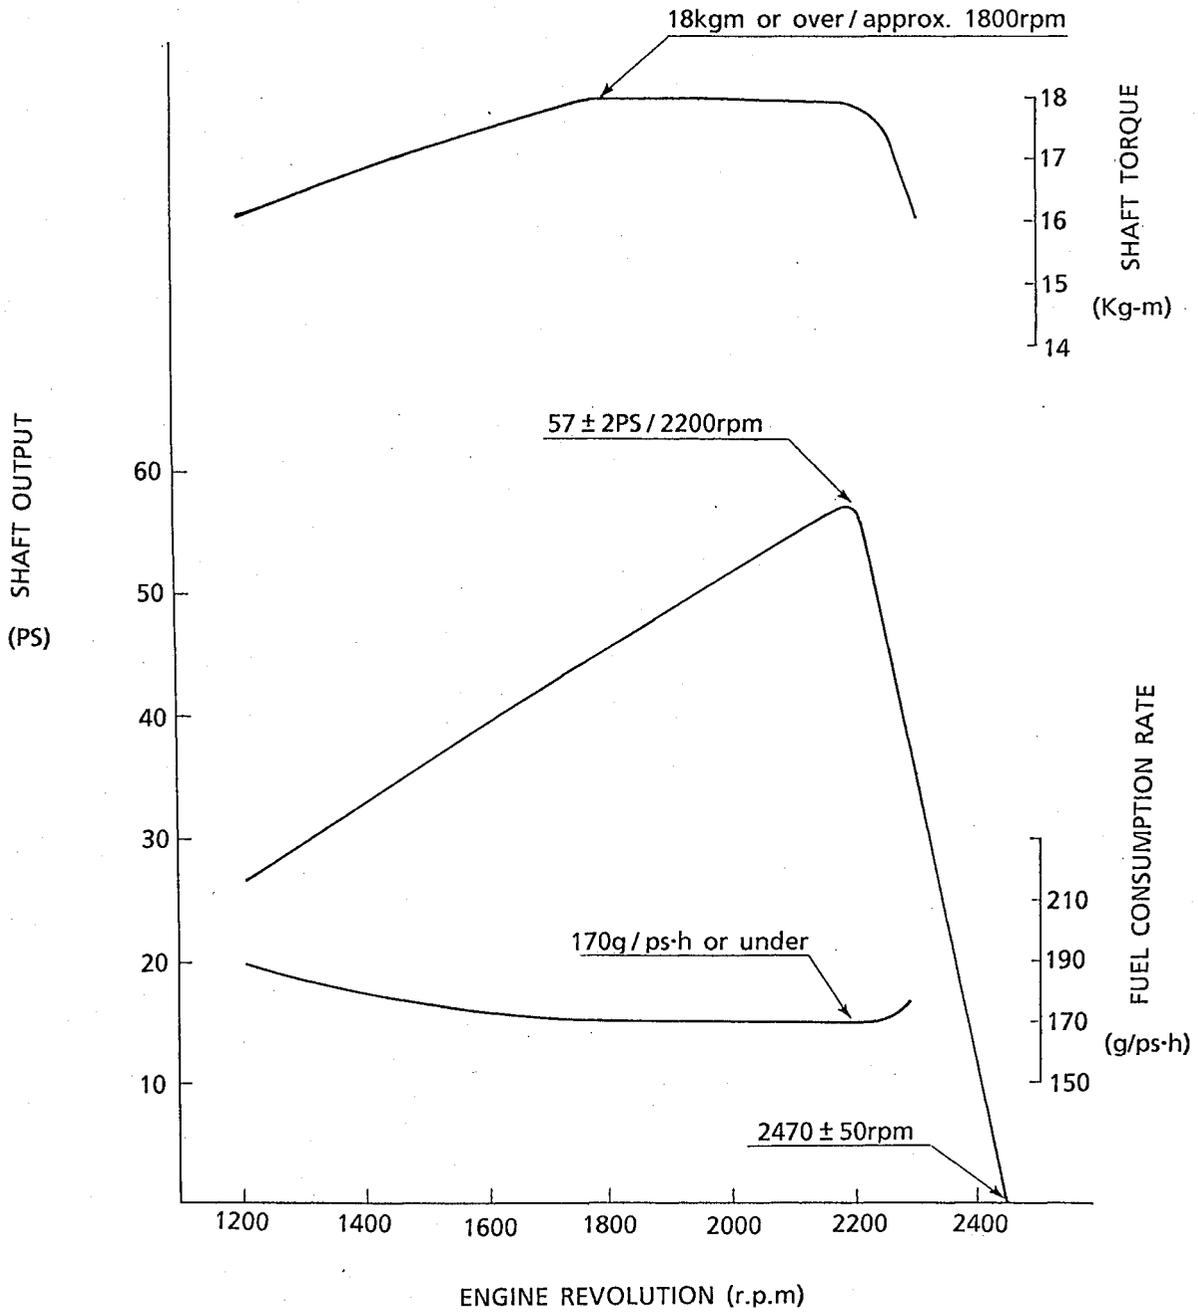



Book code No.

S5 **LE03** 05E①

SHOP MANUAL **SK 60**

LOCATION AND WEIGHT OF COMPONENTS

TABLE OF CONTENTS


LE03

1. LOCATION OF COMPONENTS	1
2. WEIGHT OF COMPONENTS	2
3. TRANSPORTATION WEIGHT	3

Applicable Machines
LE-11001~

Revision	Date of Issue	Remarks
First edition	June, 1990	S5LE0305E K
First revision	November, 1990	S5LE0305E① K

1. LOCATION OF COMPONENTS

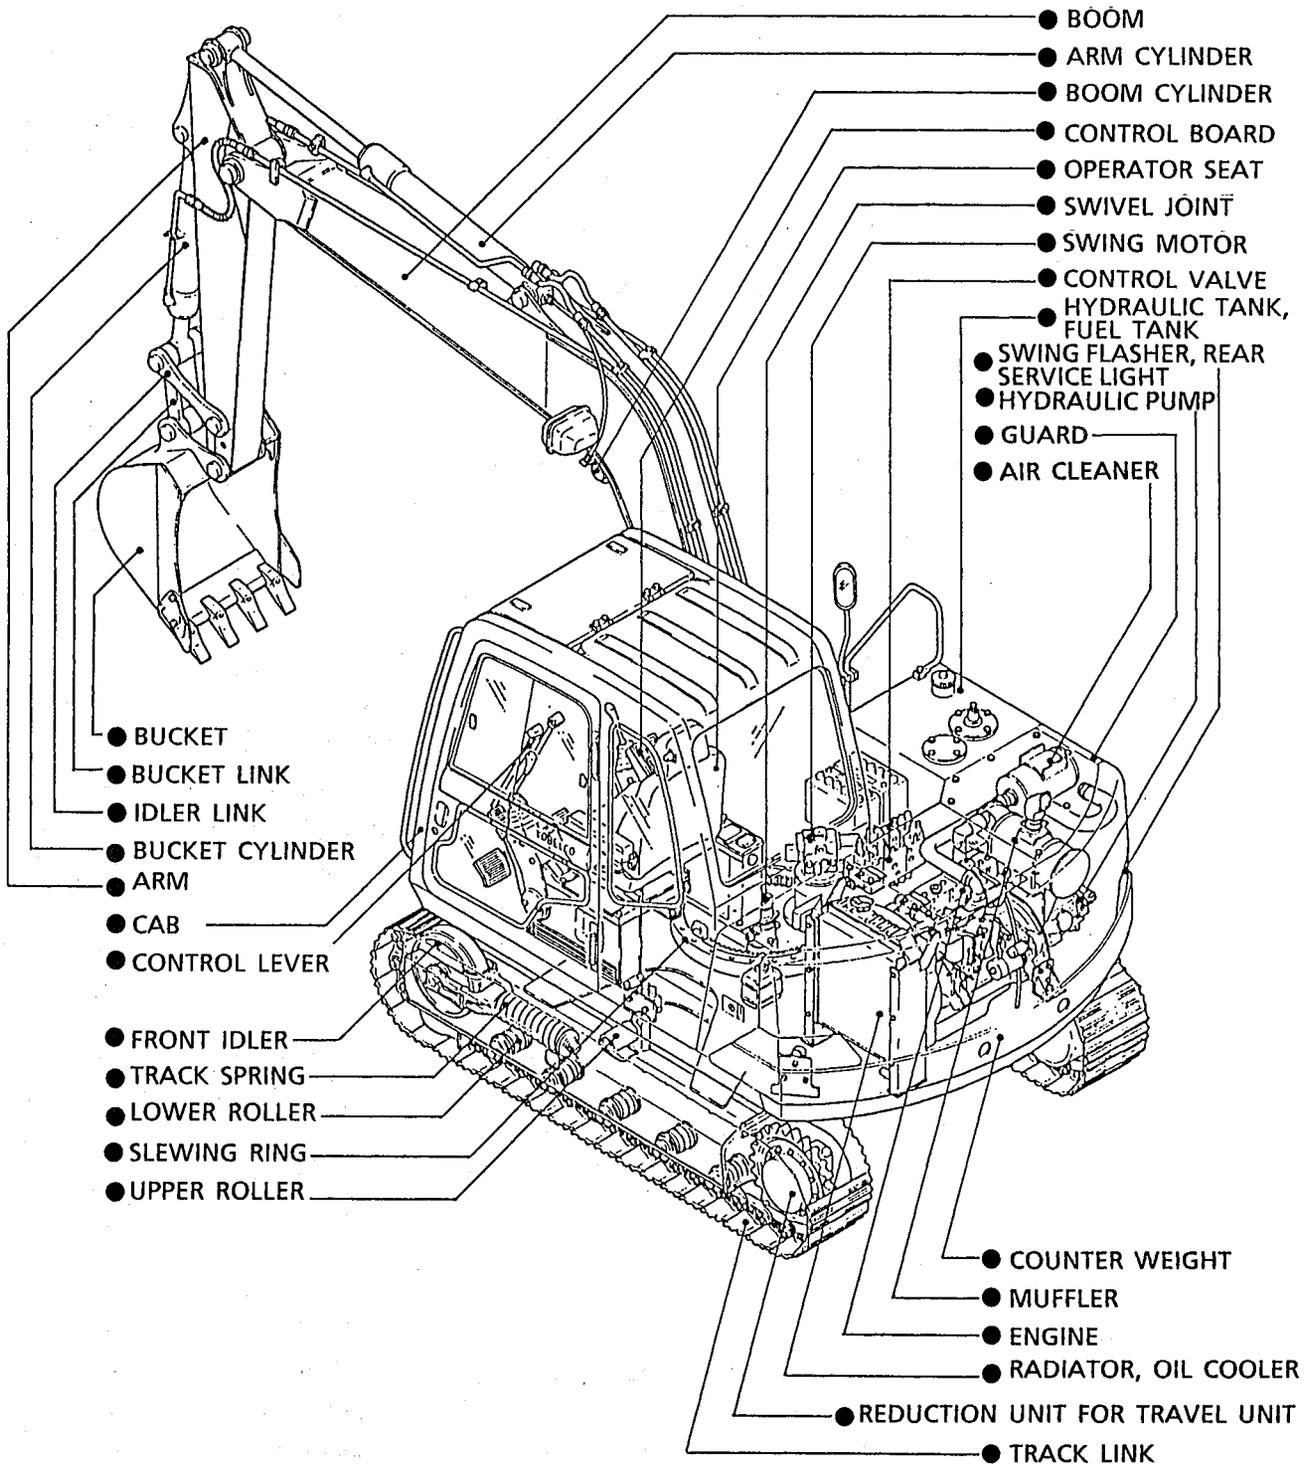

2. WEIGHT OF COMPONENTS

Unit : kg (lbs)

Item	Model	SK60	
Complete Machine [std Export 400mm (16") shoe]		6,400(14,100)	-
[std Export 600mm (24") shoe]		-	6,670(14,700)
<hr/>			
1. Upper Frame Assy (incl. 1.1~1.8)		3,170(7,000)	←
1.1 · Counter-weight		750(1,650)	←
1.2 · Cab		250(550)	←
1.3 · Boom cylinder	※	120(260)	←
1.4 · Engine, radiator	※	270(600)	←
1.5 · Pump assy		53(115)	←
1.6 · Control valve		67(150)	←
1.7 · Fuel and Hydraulic tank	※	145(320)	←
1.8 · Swing motor & reduction unit		110(240)	←
<hr/>			
2. Lower frame assy (incl. 2.1~2.9)		2,190(4,800)	2,470(5,450)
2.1 · Swing ring		107(240)	←
2.2 · Travel motor & reduction unit		90 × 2(200 × 2)	←
2.3 · Idler assy		40 × 2(88 × 2)	←
2.4 · Lower roller assy		14 × 2(30 × 2)	←
2.5 · Upper roller assy		4.5 × 2(10 × 10)	←
2.6 · Track tension assy		26 × 2(57 × 2)	←
2.7 · Sprocket		28 × 2(62 × 2)	←
2.8 · Swivel joint		18(40)	←
2.9 · Track link with 400mm (16") shoe assy		760(1670)	-
· Track link with 500mm (20") shoe assy		880(1940)	-
· Track link with 600mm (24") shoe assy		-	1,040(2,290)
2.9.1 · Track link		150 × 2(330 × 2)	←
<hr/>			
3. Attachment (incl. 3.1~3.3)		1,040(2,290)	←
3.1 · Bucket assy (0.25 m ³ (0.33cu yd) STD)		210(460)	←
3.2 · Arm assy (1.73m (5ft-8in) STD.) (incl. following)		280(620)	←
3.2.1 · · Arm		150(330)	←
3.2.2 · · Bucket cylinder	※	64(140)	←
3.2.3 · · Idler link		18(39)	←
3.2.4 · · Bucket link		18(39)	←
3.2.5 · · Pin (2 pcs for mounting the arm cylinder and the bucket)		11(24)	←
3.3 · Boom assy (includes the following :)		540(1,190)	←
3.3.1 · · Boom		440(970)	←
3.3.2 · · Arm cylinder	※	93(200)	←
3.3.3 · · Pin (mounting the arm)		8(18)	←
<hr/>			
4. Oil, grease, water, etc. (incl. 4.1~4.3)		220(480)	←
4.1 · · Hydraulic oil, engine oil		104(230)	←
4.2 · · Fuel		107(240)	←
4.3 · · Water		10(22)	←


※ mark dry weight.

3. TRANSPORTATION WEIGHT

3.1 PRINCIPAL PARTICULARS OF A FULLY-EQUIPPED MACHINE ON A TRAILER


Unit: mm (ft-in)

	400mm (16") shoe	600mm (24") shoe
Total width (UPP)	2,180mm (7 ft-2 in)	2,300mm (7 ft-7 in)
Weight	6.4ton (14,100 lbs)	6.67ton (14,700 lbs)

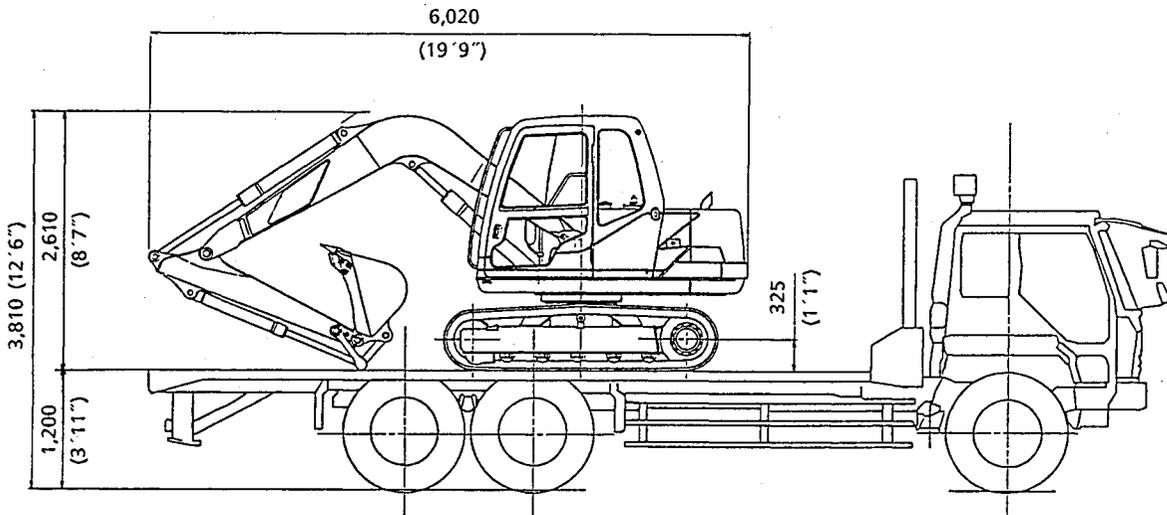


3.2 BASIC MACHINE LIFTING

	400mm (16") shoe	600mm (24") shoe
Width	2,180mm (7ft-2in)	2,300mm (7ft-7in)
Weight	5.4ton (11,800 lbs)	5.6ton (12,400 lbs)

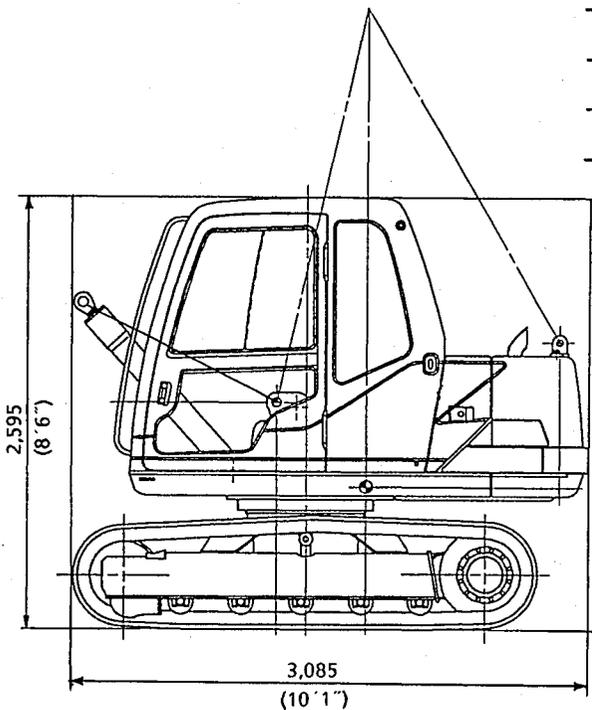


3.3 PRINCIPAL PARTICULARS OF BOOM

Range	3.7m (12ft-2 in)
Total length x total height x total width LxHxW m (ft-in)	3.85 x 1.45 x 0.40 (12'6" x 4'9" x 1'4")
Weight kg (lbs)	530 (1,170)

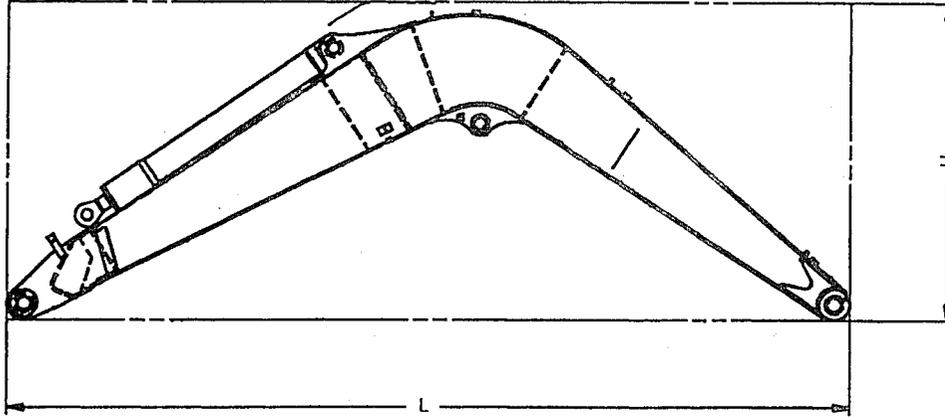


3.4 PRINCIPAL PARTICULARS OF ARM + BUCKET

Combination	1.73m(5ft-8 in) arm + 0.25m ³ (0.33cuyd) bucket	2.15m(7ft-1 in) arm + 0.2m ³ (0.26cuyd) bucket	1.73m (5ft-8 in) arm + 0.45m (1ft-6 in) extension arm + 0.2m ³ (0.26cuyd) bucket
Total length x total height x total width LxHxW m (ft-in)	3.26 x 0.70 x 0.77 (10'8" x 2'4" x 2'6")	3.68 x 0.70 x 0.65 (12'1" x 2'4" x 2'2")	3.71 x 0.70 x 0.65 (12'2" x 2'4" x 2'2")
Weight kg (lbs)	490 (1,080)	490 (1,080)	590 (1,300)

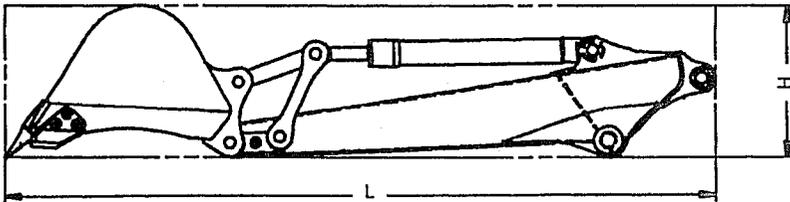

3.5 PRINCIPAL PARTICULARS OF ARM

Length of arm	1.73m(5ft-8 in) arm	2.15m(7ft-1 in) arm	1.73m(5ft-8 in) + 0.45m (1ft-6 in) with extension arm
Total length x total height x total width LxHxW m (ft-in)	2.28 x 0.56 x 0.30 (7'6" x 1'10" x 1')	2.70 x 0.56 x 0.30 (8'10" x 1'10" x 1')	2.75 x 0.56 x 0.43 (9' x 1'10" x 1'5")
Weight kg (lbs)	280 (620)	310 (680)	410 (900)

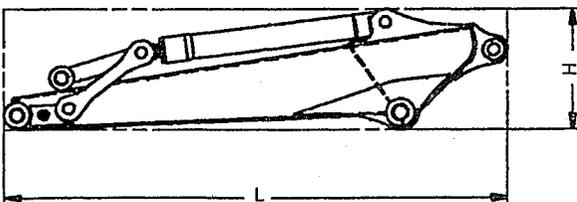


3.6 PRINCIPAL PARTICULARS OF BUCKET


Type	Hoe bucket			
Total length x total height x total width L x H x W m (ft-in)	1.10 x 0.60 x 0.40 (3'7" x 2' x 1'4")	0.98 x 0.89 x 0.56 (3'3" x 2'11" x 1'10")	0.98 x 0.89 x 0.65 (3'3" x 2'11" x 2'2")	0.98 x 0.89 x 0.77 (3'3" x 2'11" x 2'6")
Weight kg (lbs)	160 (350)	170 (370)	180 (400)	210 (460)
Bucket capacity m ³ (cuyd)	0.1 (0.13)	0.16 (0.21)	0.2 (0.26)	0.25 (0.33)

Type	Hoe bucket	V-bucket	Slope finishing bucket	Ripper
Total length x total height x total width L x H x W m (ft-in)	0.98 x 0.89 x 0.82 (3'3" x 2'11" x 2'8")	1.08 x 0.47 x 1.41 (3'6" x 1'6" x 4'7")	0.79 x 0.62 x 1.50 [2'7" x 2' x 4'11"]	1.11 x 0.56 x 0.40 [3'8" x 1'10" x 1'4"]
Weight kg (lbs)	220 (490)	180 (400)	300 (660)	210 (460)
Bucket capacity m ³ (cuyd)	0.3 (0.39)	0.2 (0.26)	0.2 (0.26)	—


● Hoe bucket

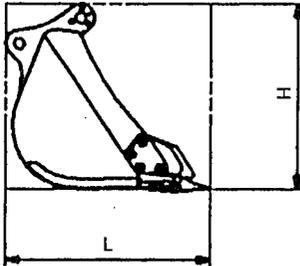


● Ripper

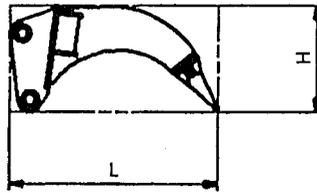

● Slope finishing bucket

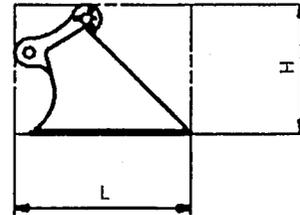

● V-bucket

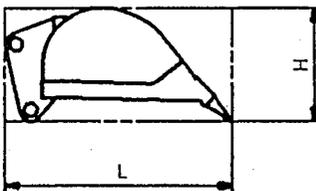

Product: Kobelco Model SK60 Hydraulic Excavator Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/kobelco-model-sk60-hydraulic-excavator-service-repair-workshop-manual/>

Sample of manual. Download All 782 pages at:
<https://www.arepairmanual.com/downloads/kobelco-model-sk60-hydraulic-excavator-service-repair-workshop-manual/>