

Product: Kobelco Model SK60V Hydraulic Excavator Service Repair Workshop Manual(No.S5LE0006E)
 Full Download: <https://www.arepairmanual.com/downloads/kobelco-model-sk60v-hydraulic-excavator-service-repair-workshop-manualno-s5le0006e/>

HYDRAULIC EXCAVATOR

SHOP MANUAL

model **SK60V**

This is the shop manual for KOBELCO hydraulic excavator. Contained is the necessary technical data concerning the maintenance and repair of this model. The manual is divided into the following four major sections; GENERAL, SYSTEM, COMPONENTS and PROCEDURE.

* GENERAL

- LE01. Specification
Operation (Refer to Operator's Manual)
- LE03. Equipment layout and Weight
- LE04. Maintenance standard and Test procedure
- LE07. Working procedure
Preventive Maintenance (Refer to Operator's Manual)
- LE08. Standard Flat rate table

* FACILITY

- | | |
|------------------------|-------------------------------|
| LE12. Hydraulic system | LE22. Control system |
| LE15. Upper structure | LE25. Electric system |
| LE18. Lower structure | LE26. Air conditioning system |
| LE21. Attachment | LE29. Troubleshooting |

* EQUIPMENT

- | | |
|-------------------|--------------------|
| 12. Pump | 16. Swivel joint |
| 13. Control valve | 17. Cylinder |
| 14. Other valves | 21. Reduction unit |
| 15. Motor | 50. Engine |

* PROCEDURE

When checking or repairing the machine we suggest that you refer to this manual carefully. We hope that reference to this manual will help to maintain a high level of working efficiency and reliability. For further details on maintenance and checks refer to the "OPERATORS MANUAL" which has been supplied with the machine.

Although all data was correct at the time of printing, due to continual design changes and improvements, some contents may not conform to the actual machine. Take special care to order parts only after confirming the validity of the part number in the "PARTS MANUAL".

If you notice any explanatory discrepancies, after consulting one of our representatives, please update your manual according to the latest data. However, in the event of any specification changes, we will issue revised edition.

INDEX

KOBELCO

Book code No. **S5LE0006E ①**

Sample of manual. Download All 720 pages at:

<https://www.arepairmanual.com/downloads/kobelco-model-sk60v-hydraulic-excavator-service-repair-workshop-manualno-s5le0006e/>



WARNING

SAFETY



WARNING

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATORS MANUAL for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATORS MANUAL before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and labels on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood/goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Compartment.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.



WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other attachments to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other attachments is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and compartments.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

 **WARNING**

13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
 14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
 15. Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
 16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
 17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
 18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pin hole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pin hole leaks.
 19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
 20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
 21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.
 22. Caution should be used to avoid breathing dust that may be generated when handling components containing asbestos fibers. If this dust is inhaled, it can be hazardous to your health. Components in KOBELCO products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates and some gaskets. The asbestos used in these components is usually bound in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust which contains asbestos is not generated.
- If dust which may contain asbestos is present, there are several common sense guidelines that should be followed.
- a. Never use compressed air for cleaning.
 - b. Avoid brushing or grinding of asbestos containing materials.
 - c. For clean up, use wet methods or a vacuum equipped with a high efficiency particulate air (HEPA) filter.
 - d. Use exhaust ventilation on permanent machining jobs.
 - e. Wear an approved respirator if there is no other way to control the dust.
 - f. Comply with applicable rules and regulations for the work place.
 - g. Follow environmental rules and regulations for disposal of asbestos.
 - h. Avoid areas where asbestos particles may be in the air.

SHOP MANUAL

model

SK60V

CONTENTS

1. SPECIFICATION	LE01
2. OPERATION (Refer to Operators Manual)	
3. EQUIPMENT LAYOUT AND WEIGHT	LE03
4. MAINTENANCE STANDARDS AND TEST PROCEDURE	LE04
6. PREVENTIVE MAINTENANCE (Refer to Operators Manual)	
7. WORK STANDARD	LE07
8. STANDARD FLAT RATE TABLE	LE08

* How to index sections in this manual


The general section in this manual is composed of 7 chapters as shown above, and every chapter can be indexed easily using the marks on the edge. This is useful for rapid reference.

⚠ WARNING

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATORS MANUAL for this machine. Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATORS MANUAL before performing any lubrication or maintenance.

⚠ WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

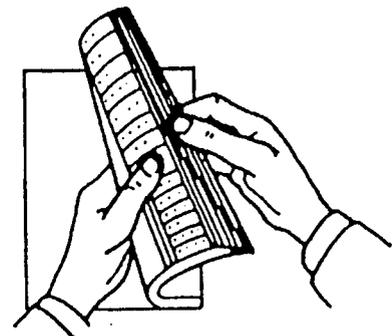

KOBELCO

GENERAL

Book code No. S5LE0106E

KOBELCO

SHOP MANUAL

SK60V

SPECIFICATION

LE01

CONTENTS


1. DESIGNATION	1
2. GENERAL DIMENSION	2
3. SPECIFICATION AND PERFORMANCE	3
4. TYPE OF SHOES	4
5. TYPE OF BUCKETS	5
6. COMBINATION OF ATTACHMENTS	6
7. WORKING RANGE OF ATTACHMENTS	7
8. LIFTING CAPACITY DIAGRAM.....	9
9. ENGINE SPECIFICATION	11

Applicable machine

LE-17701~


Revisions	Print date	Remarks
First edition	July, 1994	S5LE0106E Y.G

1. DESIGNATION

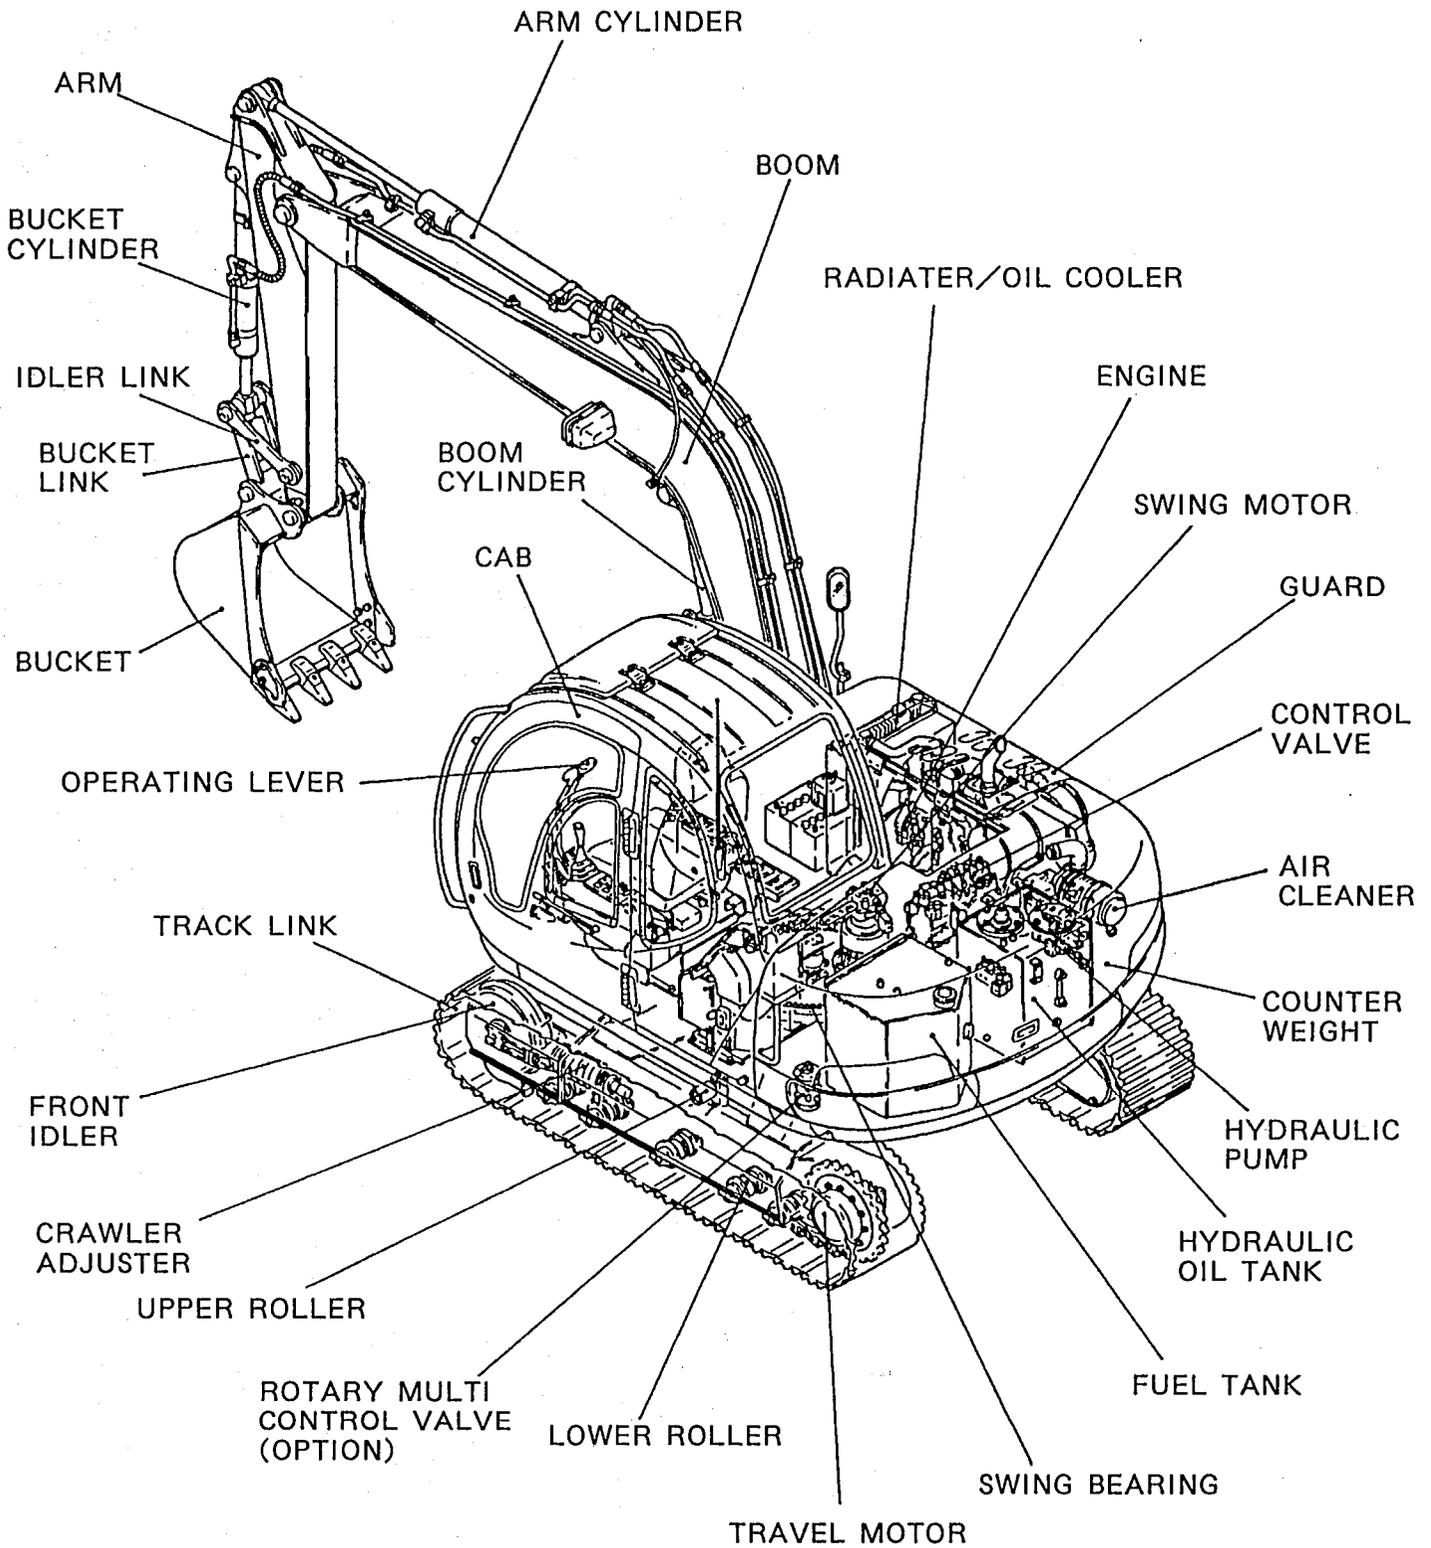


2. GENERAL DIMENSION


- Standard with 3.7m (12' 2") Boom + 1.73m (5' 8") Arm

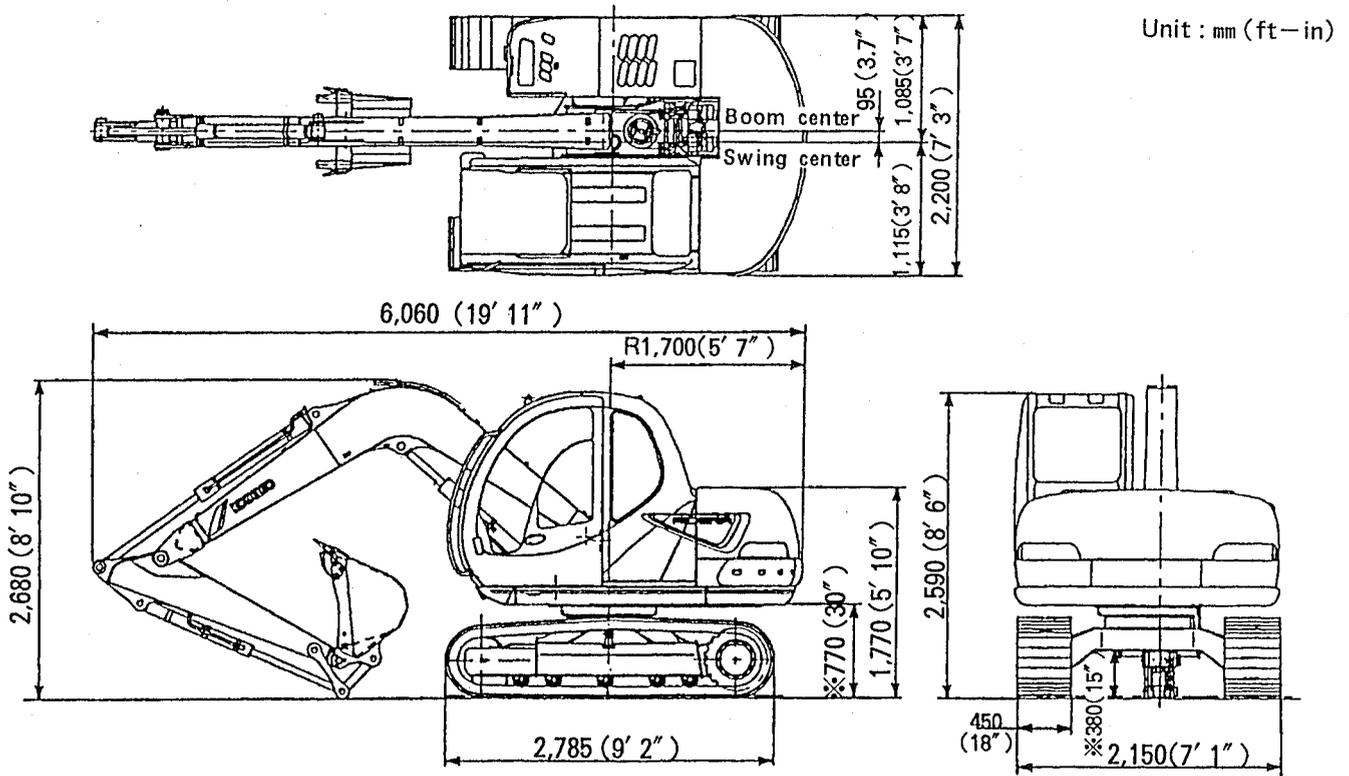

- With 3.7m (12' 2") Boom + 2.15m (7' 1") Long Arm

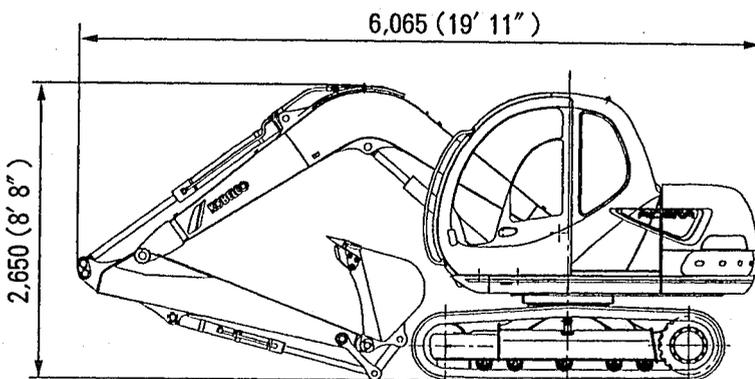

- With 3.7m (12' 2") Boom + 1.73m (5' 8") Arm + 0.5m (1' 8") Extension Arm

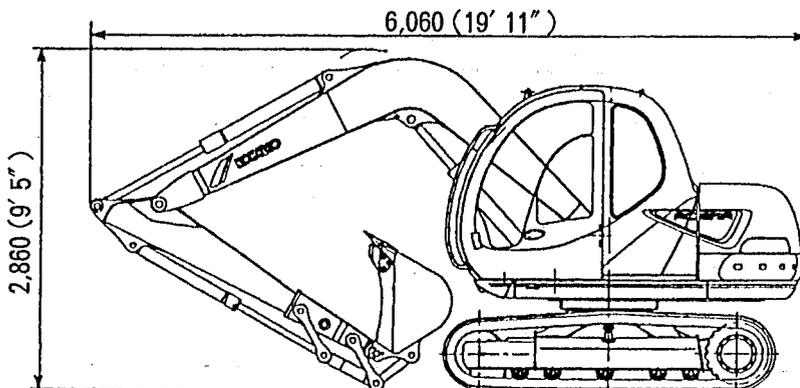

3. SPECIFICATION AND PERFORMANCE

● SPEED AND GRADABILITY

Item	Model	SK60
Swing speed (High/Low) rpm		13/6.5
Travel speed (High/Low)		5.5/3.5/ km/h (3.4/2.2/ mph)
Gradability % (degree)		70 (35)

● ENGINE

Item	Model	SK60
Model		ISUZU 4JB1
Type		4 cycle, Water – coold direct injection type
Number of cylinder – Bore × Stroke		4 – 93mm × 102mm (4 – 3.66 in × 4.02 in)
Total displacement		2,771 c.c (169.1 cu•in)
Rated output/Revolution		57PS/2,200 rpm
Maximum torque/Revolution		19.2 kgf•m (138.9 ft•lbs)/1,600 rpm

● HYDRAULIC SYSTEM

Item	Model	SK60
Hydraulic pump		Variable displacement double pump(Axial piston + Gear pump)
Hydraulic motor (Swing)		Axial piston type motor
Hydraulic motor (Travel)		Axial piston type motor
Control valve		6 – spool multiple control valve
Cylinder (Boom, Arm, Bucket)		Double acting cylinders
Return filter		Filter paper with safety valve
Oil cooler		Air – cooled type





● WEIGHT

Unit: kg (lbs)

Item	Model	SK60
Working weight		6,500 (14,300)
Upper structure		3,200 (7,050)
Under carriage (with 450mm (18") grouser shoes)		2,250 (4,950)
Attachment 3.7m (12' 2") Boom + 1.73m (5' 8") Arm + 0.25m ³ (0.33cu•yd) Bucket		1,050 (2,300)

4. SHOES


■ TYPE OF SHOES

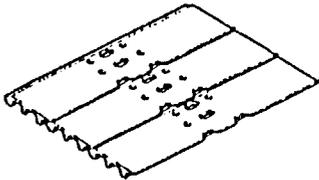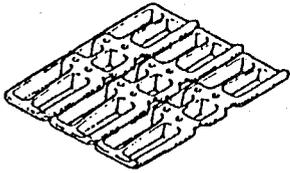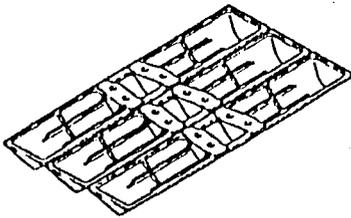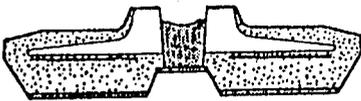Shape	Width of track shoe mm (in)	Overall width of crawler mm (in)	Ground pressure kg/cm ² (psi)
Grouser shoe  LE-6-4 38 links	450 (17.7)	2,150 (7' 0.6")	0.30 (4.27)
	600 (23.6)	2,300 (7' 6.6")	0.23 (3.27)
Flat shoe  LE-6-5 38 links	450 (17.7)	2,150 (7' 0.6")	0.31 (4.41)
Triangle shoe  LE-6-6 38 links	600 (23.6)	2,300 (7' 6.6")	0.23 (3.27)
	700 (27.6)	2,400 (7' 10.5")	0.20 (2.84)
Rubber shoe  LE-6-7	450 (17.7)	2,150 (7' 0.6")	0.30 (4.27)

Note:


- Do not use the shoes other than 450 mm (17.7in) grouser shoe in gravel pit or rocky areas. Traveling and digging work in those areas cause the shoe to be bent, and loosening of shoe bolt, etc., and also may damage other undercarriage (link, roller, etc.).

5. BUCKET

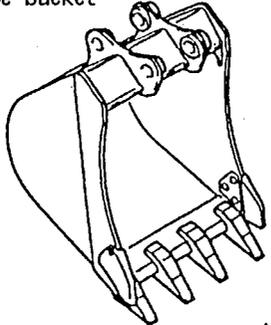Hoe bucket 	Heaped capacity m ³ (cu yd)	Outer width mm (ft-in)		Number of tooth	W or W/O side cutter	Availability of face shovel	Weight kg (lbs)
		With side cutter	Without side cutter				
	0.1(0.13)	—	400(1' 3.7")	3	No	Yes	160(350)
	0.13(0.17)	450	—	3	Yes(Welded)	Yes	150(330)
	0.16(0.21)	550	450(1' 5.7")	3	Yes	Yes	170(370)
	0.2(0.26)	650	550(1' 9.7")	4	Yes	Yes	190(420)
	0.25(STD) (0.33)	750	650(2' 1.6")	4	Yes	Yes	200(440)
	0.3(0.39)	850	750(2' 5.5")	4	Yes	Yes	220(485)

LE-6-8

Ripper

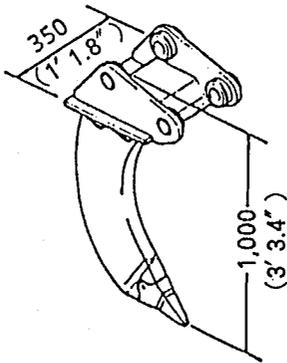


Weight: 210 kg (460 lbs)

Face shovel
unavailable

LE-6-9

Slope finishing bucket

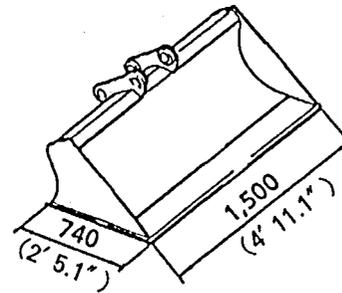


Capacity: 0.2 m³ (0.26 cu yd)
Weight: 300 kg (660 lbs)

Face shovel
unavailable

LE-6-11

V-shape bucket

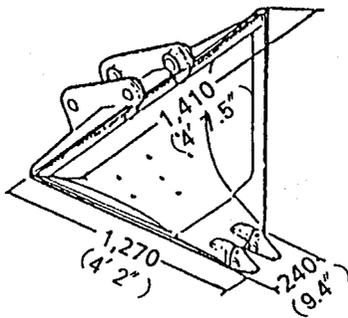

Capacity: 0.2 m³ (0.26 cu yd)
Weight: 180 kg (400 lbs)

Face shovel
unavailable

LE-6-10

6. COMBINATION OF ATTACHMENTS

Bucket		Applicable arm		
Type	Heaped capacity m ³ (cu·yd)	1.73m (5' 8") Standard arm	2.15m (7' 1") Long arm	1.73m (5' 8")arm+0.5 m (1' 8")extention arm
Hoe bucket	0.1 (0.13)	○	○	○
	0.13 (0.17)	○	○	○
	0.16 (0.21)	○	○	○
	0.2(0.26)	○	⊙	⊙
	0.25STD (0.33)	⊙	△	△
	0.3 (0.39)	△	×	×
Bucket with ejector	0.1 (0.13)	○	○	○
Slope finishing bucket	740×1,500 (2' 5.1" × 4' 11")	△	△	△
Ripper	—	○	×	×
V-shape bucket	0.2 (0.26)	△	△	△
Breaker	—	○	×	×

Note: Marks in the above mean the following.

Standard combination

General use Digging and loading of gravel, sand and clayey soil

Light duty Work mainly loading loose gravel or clayey soil

Not usable Not warranted

The genuine or KOBELCO recommended attachments should be used for this machine.

The use of attachments other than the designated ones may cause the abnormality of the machine.


Maker does not compensate for those abnormalities of attachments.

CAUTION

If a bucket other than the back hoe bucket is turned over and used, the arm and the bucket may be broken.

7. WORKING RANGE OF ATTACHMENTS

● Back hoe attachment

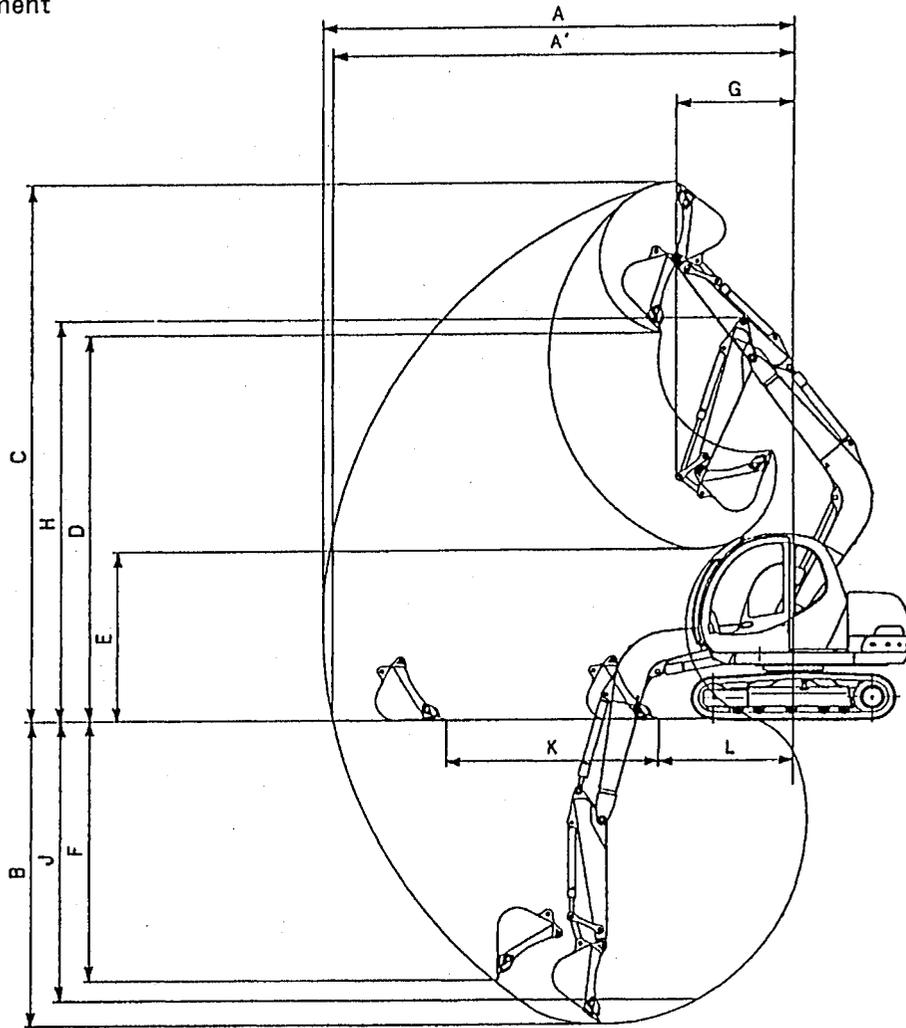


Unit: m(ft·in)

Item		Type	1.73m(5' 8") Arm with	2.15m(7' 1") Arm with	1.73m(5' 8") Arm + 0.5m
			0.25m ³ (0.33 cu·yd) Bucket	0.2m ³ (0.26 cu·yd) Bucket	(1' 8") Extention arm with 0.2m ³ (0.26 cu·yd) Bucket
A		Maximum digging reach	6.39 (20' 11.6")	6.78 (22' 2.9")	6.84 (22' 5.3")
A'		Maximum digging reach at ground level	6.26 (20' 6.5")	6.65 (21' 9.8")	6.71 (22' 0.2")
※ B		Maximum digging depth	4.20 (13' 9.4")	4.61 (15' 1.5")	4.69 (15' 4.6")
※ C		Maximum digging height	7.40 (24' 3.3")	7.72 (25' 3.9")	7.76 (25' 5.5")
※ D		Maximum dumping clearance	5.34 (17' 6.2")	5.65 (18' 6.4")	5.69 (18' 8.")
※ E		Minimum dumping clearance	2.37 (7' 9.3")	2.09 (6' 10.3")	1.89 (6' 2.4")
※ F		Maximum vertical wall digging	3.60 (11' 9.7")	3.96 (12' 11.9")	4.09 (13' 5")
G		Minimum swing radius	1.61 (5' 3.4")	1.96 (6' 5.2")	1.75 (5' 8.9")
※ H		Height at minimum swing radius	5.54 (18' 2.1")	5.57 (18' 3.3")	5.54 (18' 2.1")
※ J		Digging depth for 8 feet flat bottom	3.86 (12' 8")	4.28 (14' 0.5")	4.41 (14' 5.6")
K	Horizontal digging distance	Stroke	2.88 (9' 5.4")	3.29 (10' 9.5")	3.64 (11' 11.3")
		Minimum	1.82 (5' 11.7")	1.80 (5' 10.9")	1.50 (4' 11.1")
L					

Note: Dimensions with ※ mark do not include the shoe lug height.

● Face shovel attachment

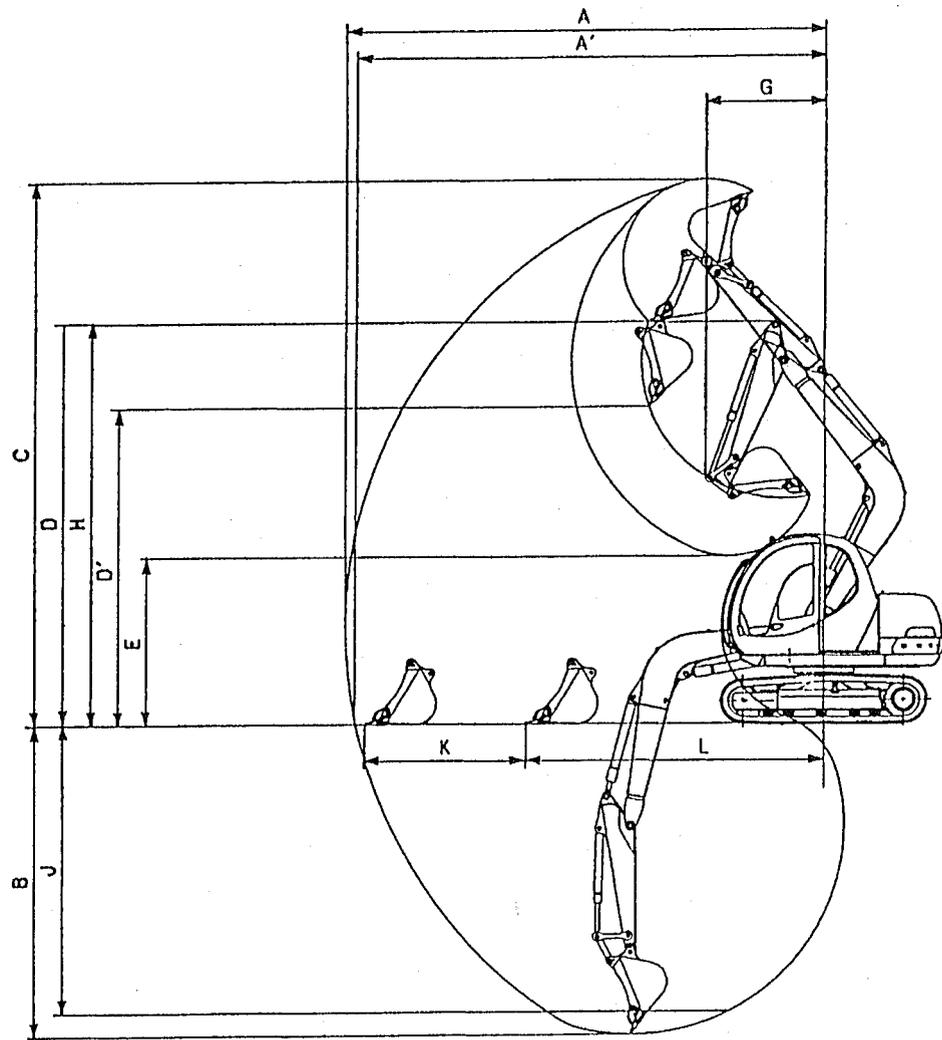

Unit: m (ft·in)

Item		Type	1.73m (5' 8") Arm with 0.25m ³ (0.33 cu·yd) Bucket	2.15m (7' 1") Arm with 0.2m ³ (0.26 cu·yd) Bucket	1.73m (5' 8") Arm + 0.5m (1' 8") Extension arm with 0.2m ³ (0.26 cu·yd) Bucket
A		Maximum digging reach	6.48 (21' 3.1")	6.86 (22' 6.1")	6.92 (22' 8.4")
A'		Maximum digging reach at ground level	6.34 (20' 9.6")	6.73 (22' 1")	6.80 (22' 3.7")
※ B		Maximum digging depth	4.27 (14' 0.1")	4.69 (15' 4.6")	4.77 (15' 7.8")
※ C		Maximum digging height	7.48 (24' 6.5")	7.80 (25' 7.1")	7.84 (25' 8.7")
※ D		Maximum dumping clearance	5.55 (18' 2.5")	5.85 (19' 2.3")	5.90 (19' 4.3")
※ E		Minimum dumping clearance	4.36 (14' 3.7")	4.48 (14' 8.4")	4.44 (14' 6.8")
※ F		Maximum vertical wall digging	2.29 (7' 6.2")	2.00 (6' 6.7")	1.81 (5' 11.3")
G		Minimum swing radius	1.61 (5' 3.4")	1.96 (6' 5.2")	1.75 (5' 8.9")
※ H		Height at minimum swing radius	5.54 (18' 2.1")	5.57 (18' 3.3")	5.54 (18' 2.1")
※ J		Digging depth for 8 feet flat bottom	3.95 (12' 11.5")	4.37 (14' 4")	4.50 (14' 9.2")
K	Horizontal digging distance	Stroke	2.21 (7' 3")	2.85 (9' 4.2")	3.02 (9' 10.9")
L		Minimum	4.00 (13' 1.5")	3.74 (12' 3.2")	3.63 (11' 10.9")

Note: Dimensions with ※ mark do not include the shoe lug height.

8. LIFTING CAPACITY


(1) Conditions of calculation

- 1) The lifting load indicates a smaller value of either an 87% of hydraulic lifting capacity or a 75% of tipping load.
- 2) The load point is on the bucket supporting point, and the bucket position is a loading position.
- 3) The values in the upper rows show the lifting capacity in a horizontal position of machine, and values in the lower rows show in a vertical position of machine.
- 4) Unit : ton Shoe : 450 mm, Iron shoe
- 5) Set hydraulic pressure 260 kg/cm².

(2) Reference No. list of lifting capacity line diagram

Arm	1.73m(5' 8") Arm		2.15m(7' 0.6") Arm		1.73m(5'8") Arm + 0.5m(1'8") Ext.	
Bucket W or W/O	With 0.25m ³ (0.33cu·yd) bucket	Without	With 0.2m ³ (0.26cu·yd) bucket	Without	With 0.2m ³ (0.26cu·yd) bucket	Without
	(1)	(2)	(3)	(4)	(5)	(6)

1 kg=2.2046lb

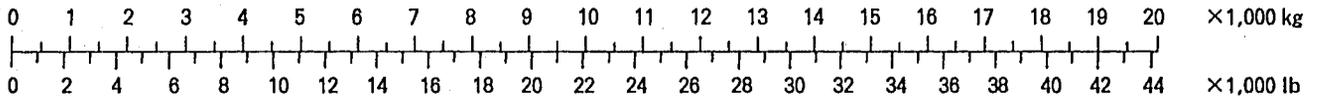



1 lb=0.4536kg



(1)

Unit: TON

(2)

Unit: TON

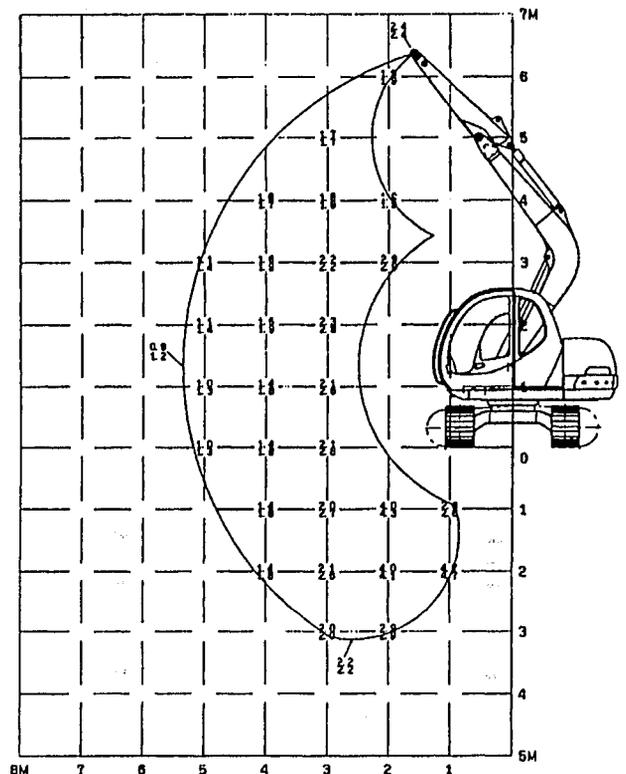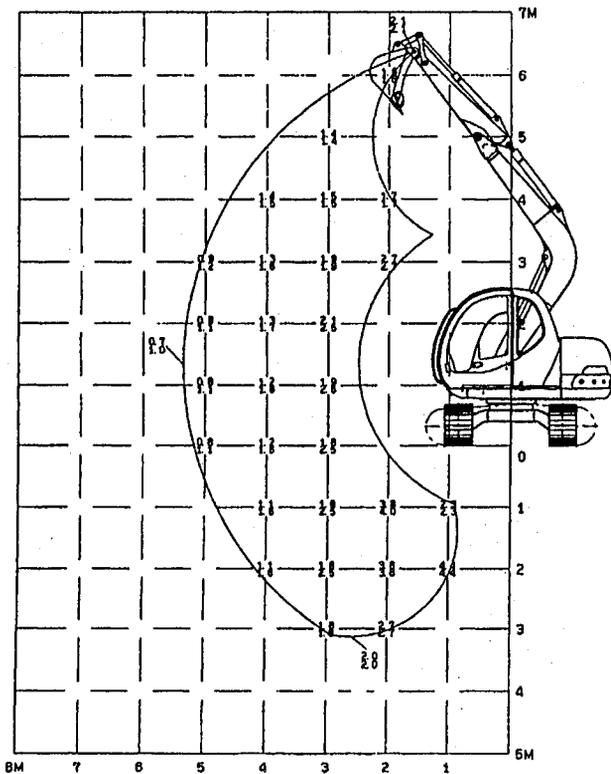

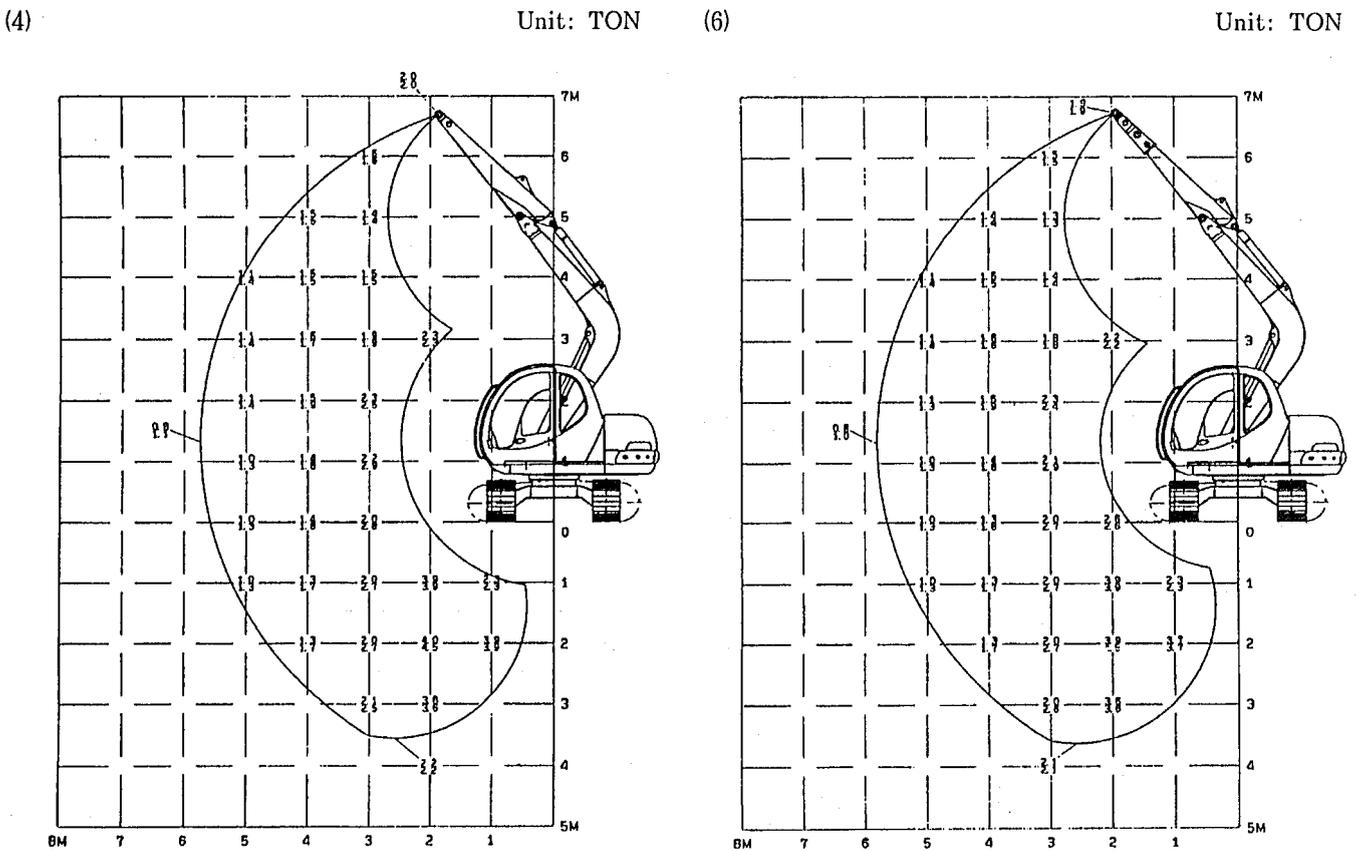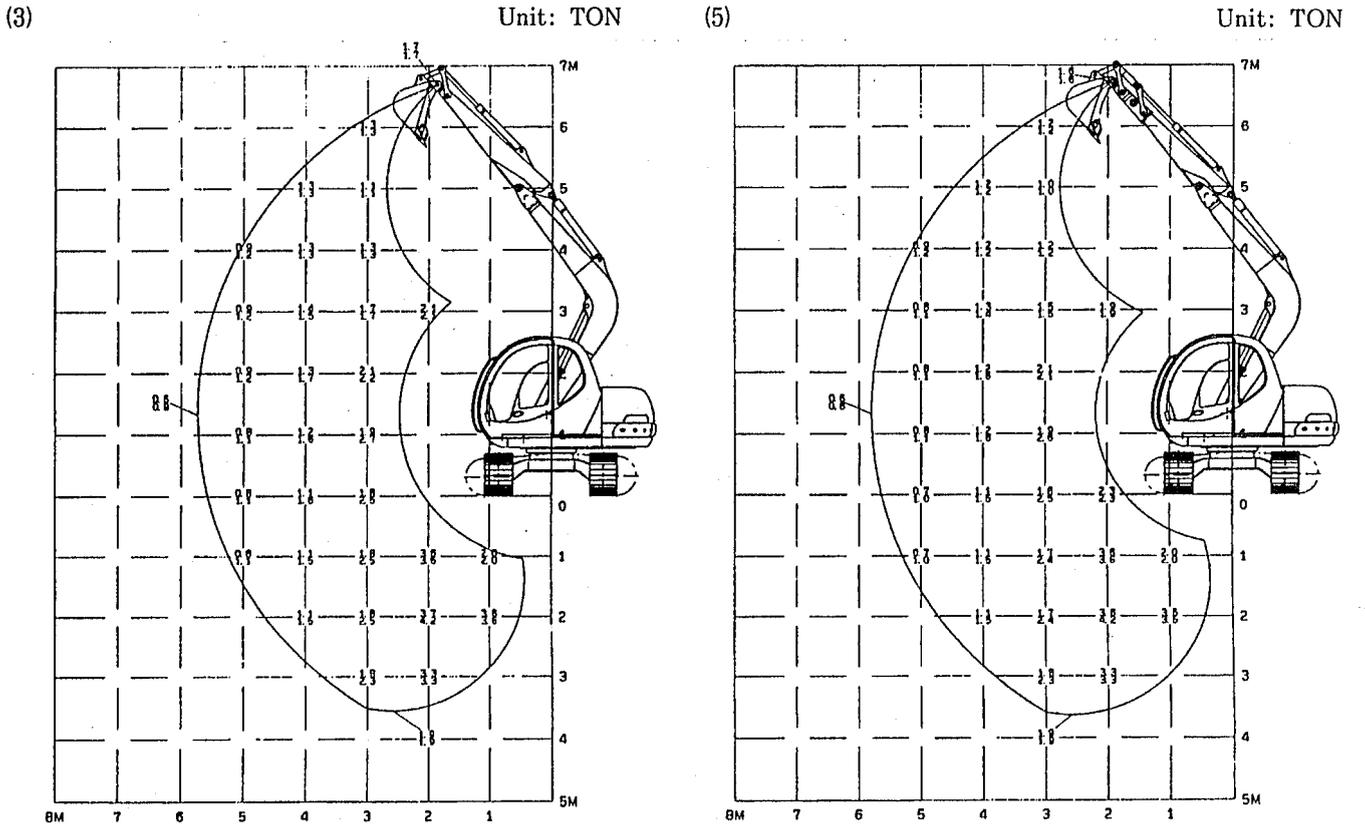


9. ENGINE SPECIFICATION

Principal Items

Type	ISUZU 4JB1			
Number of cylinders — Bore × Stroke	4 — 93 mm × 102 mm (3.66 in × 4.02 in)			
Total displacement	2,771 cc (169.1 cu·in)			
Compression ratio	18.2			
Rated output	57PS/2,200 rpm (42 kW/2,200 rpm)			
Maximum torque	19.2 kgf·m/1,600 rpm (138.9 ft·lbs or over/1,600 rpm)			
High idling	2,420±20 rpm			
Low idling	925±20rpm			
Injection valve opening pressure	185 kgf/cm ² (2632 psi)			
Thermostat action	Start 82°C (180°F) Full open 95°C (203°F)			
Firing order	1-3-4-2			
Compression pressure	30 kgf/cm ² (427 psi) at 200 rpm			
Lubrication oil pressure	—			
Fuel injection timing	17° before top dead point			
Valve clearance		Valve clearance	Open	Close
	Intake valve	0.4mm (0.016") in cold condition	24.5° before top dead point	55.5° after bottom dead point
	Exhaust valve	↑	54° before bottom dead point	26° after top dead point
Starter capacity	3.5 kW			
Generator capacity	24V 20A			
Cooling fan drive method	φ 450mm (φ 17.7 in) suction type Belt driven pulley ratio Crank/Fan=1.117			
Engine oil quantity	Engine body 7±1 ℓ (1.85±0.3 gal)			
Dry weight	240 kg (530 lbs)			
Fuel consumption ratio	164±5 g/PS·h			
Allowable inclination	Front/Rear and Right/Left: 35°			
Dimension L × W × H	760 mm × 570 mm × 715 mm (30 in × 22.4 in × 28.1 in)			
Turning direction	Clockwise direction from fan side			

Engine performance
(ISUZU 4JB1)

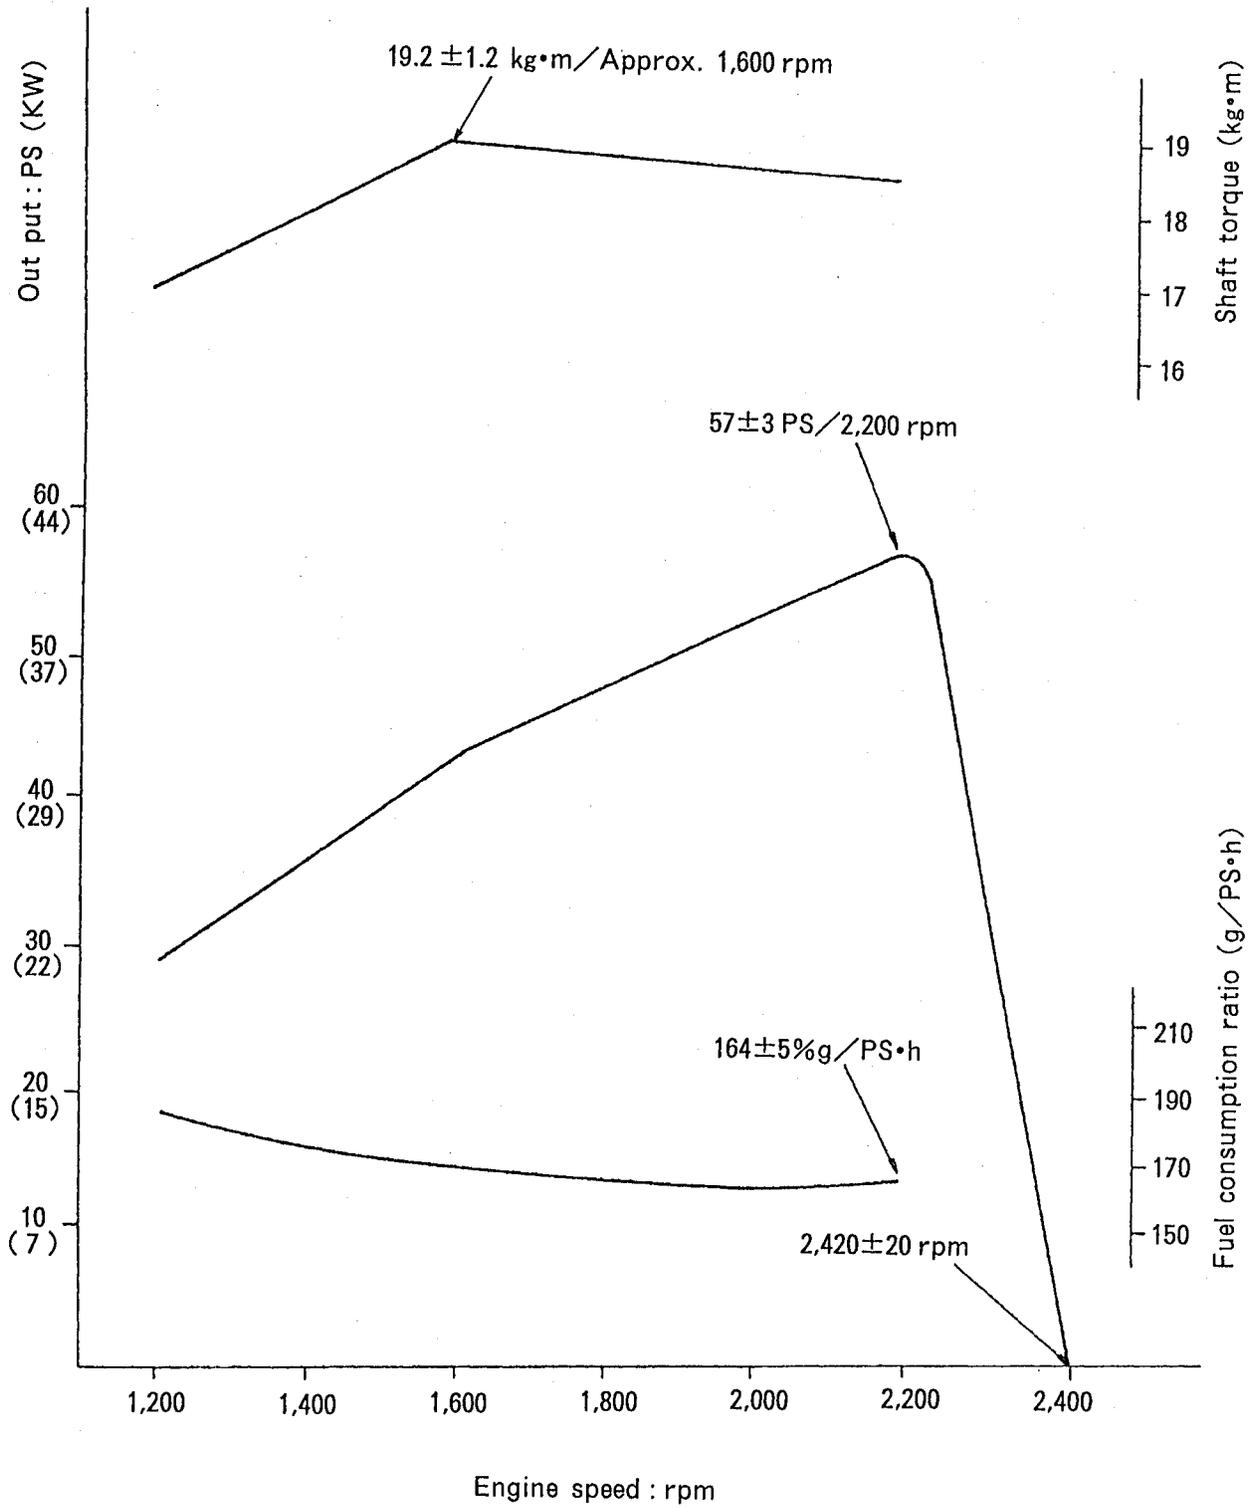

Book code No.

S5 LE03_{06E}

KOBELCO

SHOP MANUAL

SK60V

———— EQUIPMENT LAYOUT ———— AND WEIGHT

CONTENTS


LE03

1. EQUIPMENT LAYOUT	1
2. UNIT WEIGHT	2
3. TRANSPORTATION WEIGHT.....	3

Applicable machine
LE-17701~

Revisions	Print date	Remarks
First edition	July, 1994	S5LE0306E Y.G

1. DESIGNATION

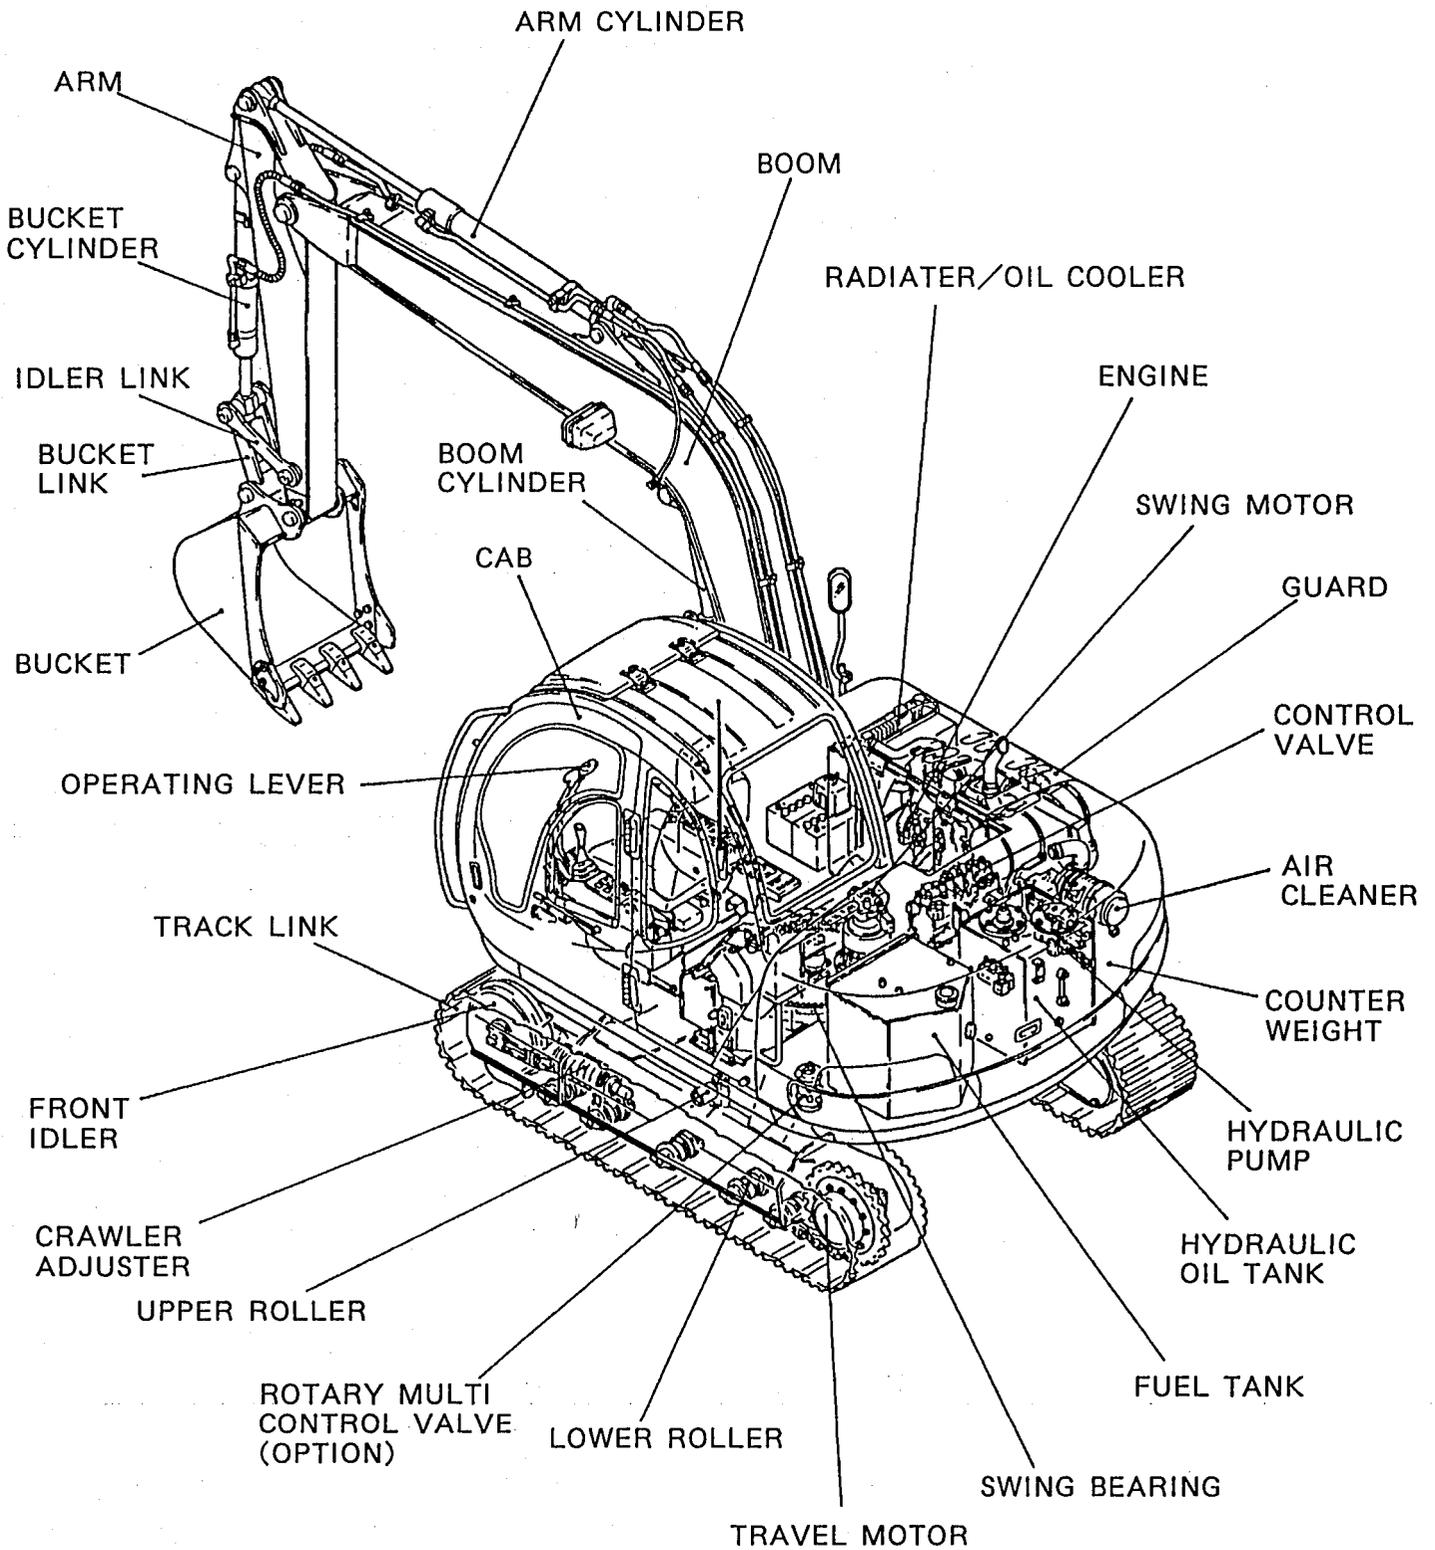

2. UNIT WEIGHT

Unit : kg (lbs)

Item	Model	SK60V
Working weight [Standard with 450mm (17.7") shoe]		6,500 (14350)
● Upper structure		3,200 (7100)
●● Counterweight		830 (1830)
●● Cab		250 (550)
●● Engine		240 (530)
●● Hydraulic oil tank		※70 (160)
●● Fuel tank		※52 (120)
●● Swing motor, reduction unit		70 (160)
●● Control valve		88 (200)
●● Boom cylinder		※83 (180)
●● Pump		43 (100)
●● Radiator		※39 (90)
● Undercarriage		2,250 (5000)
●● Swing bearing		115 (260)
●● Travel motor, travel reduction		90 (200) × 2
●● Upper roller		4 (9) × 2
●● Lower roller		14 (30) × 10
●● Front idler		43 (100) × 2
●● Idler adjuster		30 (70) × 2
●● Sprocket		28 (60) × 2
●● Swivel joint		18 (40)
●● Track link ass'y with 450mm(17.7") shoe(STD)		410 (900) × 2
●● Track link ass'y with 600mm(23.6") shoe		520 (1150) × 2
●● Track link ass'y with 600mm(23.6") triangle shoe		430 (950) × 2
●●● Track link ass'y		150 (330) × 2
● Attachment 3.7m(12' 2") Boom+1.73m(5' 8") Arm+0.25m ³ (0.33cu·yd) Bucket		1,050 (2,300)
●● 0.25m ³ (0.33cu·yd) Bucket ass'y		200 (440)
●● Standard arm ass'y (including the following)		290 (640)
●●● Standard arm		170 (380)
●●● Bucket cylinder		※50 (110)
●●● Idler link		18 (40)
●●● Bucket link		23 (55)
●●● Pin (To mount bucket cylinder and bucket)		21 (50)
●● Boom ass'y (including the following)		570 (1260)
●●● Boom		400 (900)
●●● Arm cylinder		※72 (160)
●●● Pin (To mount arm)		76 (170)
● Grease, water, etc. (including the following)		220 (490)
●● Hydraulic oil, engine oil		104 (230)
●● Fuel		107 (235)
●● Water		10 (22)


Note:

Figures with ※ mark shows the dry weight.

3. TRANSPORTATION


● Specification and performance of all equipment to load on trailer

Item	Model	SK60V	Note: Figures in [] shows the specification of long arm.
Overall width mm(ft-in)		2,200 (7' 2.6")	
Weight ton(lbs)		6.5 (14350)	

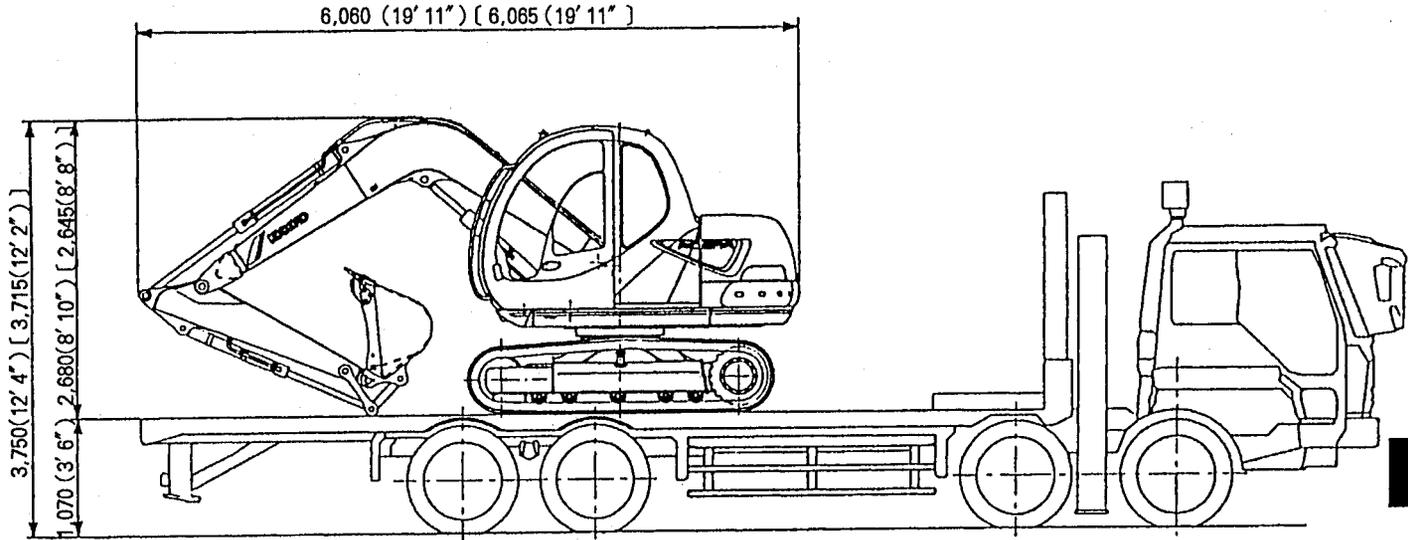


● Boom

	3.7m (12' 2") Boom
Overall L×H×W m(ft·in)	3.84×1.5×0.36 (12' 7" × 4' 11" × 1' 2")
Weight kg (lbs)	530 (1200 lbs)

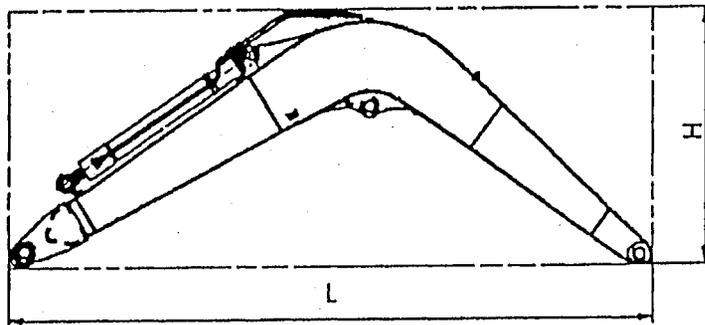


● Arm + Bucket

Combination	1.73m (5' 8") Arm + 0.25m ³ (0.33cu·yd) Bucket	2.15m (7' 11") Arm + 0.2m ³ (0.26cu·yd) Bucket	1.73m (5' 8") Arm + 0.5m (1' 8") Ext. Arm + 0.2m ³ (0.26cu·yd) Bucket
Overall L×H×W m(ft·in)	3.23×0.71×0.75 (10' 7" × 2' 4" × 2' 6")	3.62×0.71×0.65 (11' 11" × 2' 4" × 2' 2")	3.74×0.71×0.65 (12' 3" × 2' 4" × 2' 2")
Weight kg (lbs)	480 (1000)	500 (1100)	580 (1280)

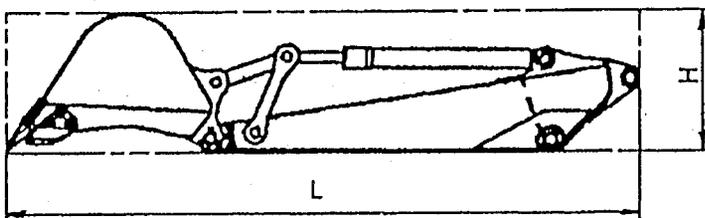

● Arm


Arm length	1.73m(5' 8")	2.15m(7' 1")
Overall L×H×W m(ft·in)	2.26×0.54×0.36 (7' 5"×1' 9"×1' 2")	2.64×0.54×0.36 (8' 8"×1' 9"×1' 2")
Weight kg(lbs)	280 (620)	310 (680)

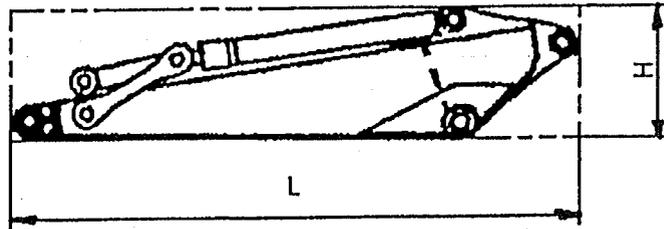


● Bucket

Class	Hoe bucket			
Overall L×H×Wm(ft-in)	1.10×0.60×0.40 (3' 7"×2' ×1' 4")	0.98×0.89×0.55 (3' 3"×2' 11"×1' 10")	0.98×0.89×0.65 (3' 3"×2' 11"×2' 2")	0.98×0.89×0.75 (3' 3"×2' 11"×2' 6")
Weight kg (lbs)	160 (350)	170 (375)	190 (420)	200 (440)
Bucket capacity m ³ (cu·yd)	0.1 (0.13)	0.16 (0.21)	0.2 (0.26)	0.25 (0.33)
Combination	Hoe bucket	Ripper	V-shape bucket	Slope finishing bucket
Overall L×H×Wm(ft-in)	0.98×0.89×0.85 (3' 3"×2' 11"×2' 9")	1.11×0.56×0.40 (3' 8"×1' 10"×1' 4")	1.08×0.47×1.41 (3' 7"×1' 7"×4' 8")	0.79×0.62×1.50 (2' 7"×2' ×4' 11")
Weight kg (lbs)	220 (485)	210 (460)	180 (400)	300 (660)
Bucket capacity m ³ (cu·yd)	0.3 (0.39)	—	0.2 (0.26)	—


● Hoe bucket

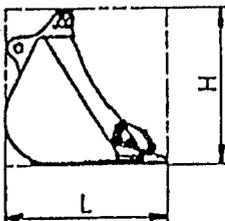


● Ripper

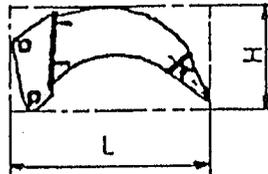

● Slope finishing bucket

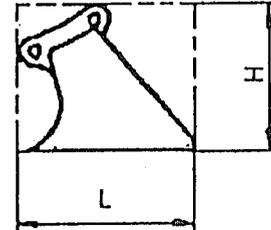

● V-shape bucket

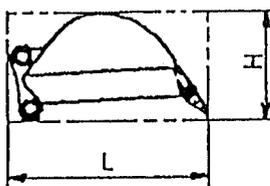

KOBELCO**SHOP MANUAL****SK60V**

— MAINTENANCE STANDARD — AND TEST PROCEDURE

CONTENTS

1. HOW TO USE THE MAINTENANCE STANDARD AND CAUTIONS TO BE OBSERVED	1
2. MEASURING ENGINE REVOLUTION	2
2.1 Engine Revolution	2
3. MEASURING HYDRAULIC PRESSURE	3
3.1 Equipment to be Prepared	3
3.2 Standard Measuring Condition	3
3.3 Fitting Position of pressure Gauge	3
3.4 Procedure for Measuring Procedure	3
3.5 Performance Inspection Stanard Table	4
3.6 Fitting Position of Relief Valve	5
3.7 Procedure for Adjusting Relief Valve	6
4. MEASURING TRAVEL PERFORMANCE	7
4.1 Travel Speed	7
4.2 Deviation of Travel	7
4.3 Performance of Parking Brake	8
4.4 Drain Rate of Travel Motor	8
5. MEASURING SWING PERFORMANCE	9
5.1 Swing Speed	9
5.2 Performance of Swing Brake	9
5.3 Performance of Swing Parking Brake	10
5.4 Drain Rate of Swing Motor	10
6. MEASURING ATTACHMENT OPERATING PERFORMANCE	11
6.1 Operating Time of Cylinders	11
6.2 Oil Tightness of Cylinder	11
7. MEASURING PERFORMANCE OF SWING BEARING	12

LE04**KOBE STEEL, LTD.**

Applicable machine

LE-17701~

Revisions	Print date	Remarks
First edition	July, 1994	S5LE0407E Y.G

1. HOW TO USE THE MAINTENANCE STANDARD AND CAUTIONS TO BE OBSERVED

(1) Application

1) When the machine is new;

Confirm that performances are in accordance with standard specifications as compared to the performance standards.

2) At specific self inspection;

Use the data for criterion, for the purpose of repair, adjustment and replacement.

3) When performance are deteriorated;

Determine whether it is caused by a fault or end of service life after long hours of operation, to be used for safety and economical considerations.

4) When main components are replaced;

For example, use the data to restore performances of pumps and others.

(2) Terminology

1) Standard values;

Values to be used to condition or assemble a new machine. Where special notes are not given, these values represent standard specifications (machine with standard attachments and standard shoes).

2) Reference values for repair;

Values at which readjustment is required. Adjust immediately if the value is close to the service limit value.

3) Service limit value

This is the limit value at which reconditioning is impossible without replacing of parts. If the value is expected to exceed the service limit before next inspection and repair are performed, replace the parts immediately. If the part is used to beyond the limit, chances of trouble increase, ultimately resulting in a breakdown of the machine. Avoid operating the machine beyond this service limit.

(3) Cautions to be observed at judgment

1) Evaluation of measured data;

Disagreement of measuring conditions, variations of data peculiar to a new machine, and measuring errors are to be evaluated.

Determine generally at what levels measured values are located instead of determining whether or not values fall within or run out of the reference values.

2) Determining repair, adjustment or replacement;

Machine performance deteriorates with time as

parts wear and some deteriorated performances may be restored to brand new levels. Therefore, determine repair, adjustment or replacement, depending upon the operating hours, kind of work and circumstances in which the machine is placed, and condition the machine performances to its most desirable levels.

(4) Other cautions to observed;

1) Parts liable to deterioration;

Rubber products, such as, hydraulic hoses, O-ring and oil seals deteriorate with time; replace them at regular intervals or at overhauls.

2) Parts requiring regular replacement;

Out of critical hoses that are necessary to secure safety, we designate very important parts (V.I.P) and recommended that they should be replaced regularly.

3) Inspection and replacement of oils and greases;

In performing maintenance, it is necessary for the user to familiarize himself with how to handle the machine safety, cautions to be observed and inspection/lubrication procedures.

Refer to the Operator's manuals as well.

2. MEASURING ENGINE REVOLUTION

2.1 Engine Revolution

(1) Purpose

To measure the engine revolution at low speed, at high speed and in different modes.

(2) Condition

Engine coolant temperature: 60°C-90°C (140°F-194°F) [At the surface of radiator]

(3) Preparation

Install the pickup of diesel revolution counter on any of injection pipes which is easier to install.

(4) Measurement

Measure the following items at no load speed.

Table 1 Unit: rpm

Items to be inspected		Reference value	Tolerance		Measuring
Engine revolution	Low idling	900	+50	-50	Low throttle
	High idling	2,350	+50	-50	Full throttle (High idling)
	FC mode	1,600	+50	-50	
	Decel	1,600	+50	-50	

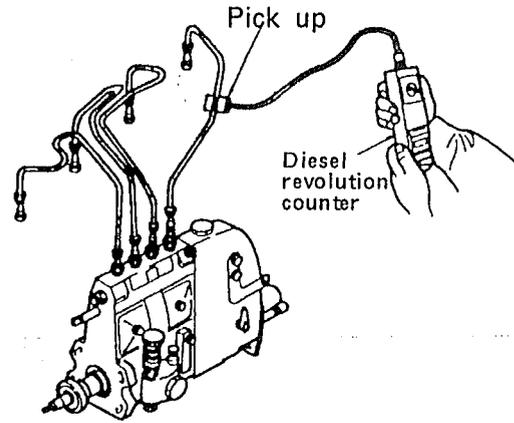


Fig. 1 Measuring engine revolution

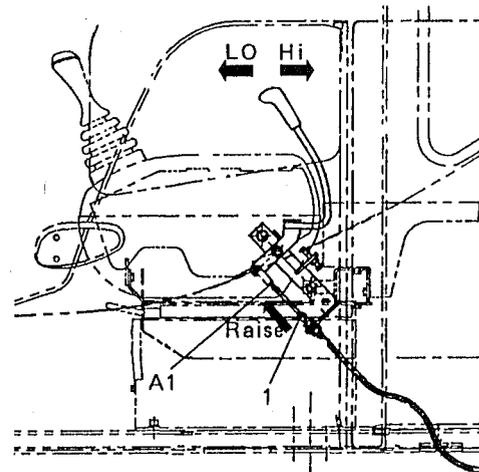


Fig. 2 Details of throttle lever installation

(5) Adjusting engine revolution

1) Adjusting low idling

Loosen control cable installing nut A1 shown in Fig. 2, and A2 in Fig. 3 and adjust it with the length of cable(1).

: 8mm

However if the high idling does not rise to the reference value, contact the engine maker for adjustment.

2) Adjusting decel revolution

Loosen cable installing nuts B1 and B2, and adjust it with the length of cable (2).

: 13mm

3) Adjusting engine stop

Loosen nuts C1 and C2, and rotate rod (3). The rod has right-hand threads and left-hand threads.

: 10mm

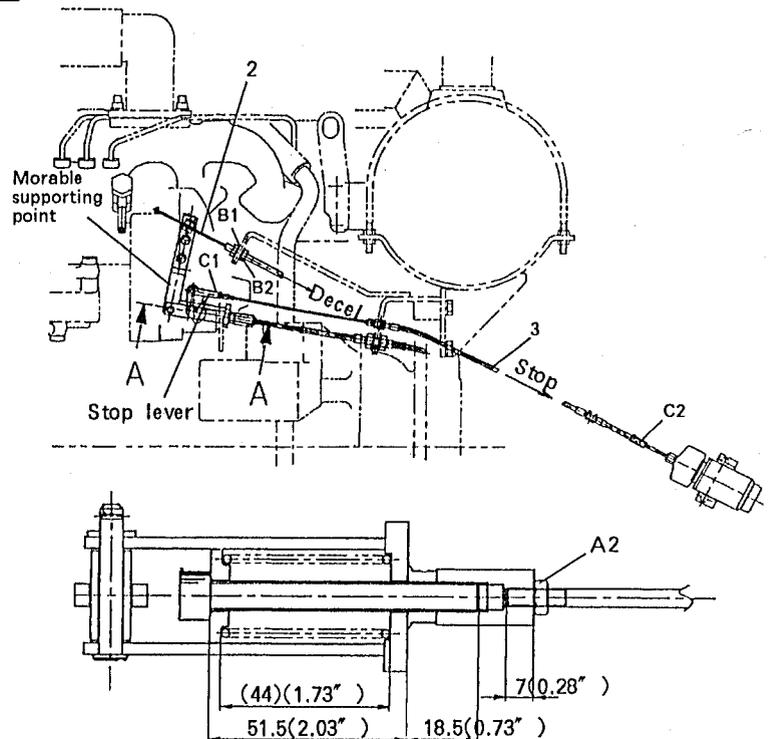


Fig. 3 Engine control on the engine side