

# HYDRAULIC EXCAVATOR

## SHOP MANUAL

model

# SK 220 SK 220LC

This is the shop manual for KOBELCO hydraulic excavator. Contained is the necessary technical data concerning the maintenance and repair of this model. The manual is divided into the following four major sections; GENERAL, SYSTEMS, COMPONENTS and PROCEDURE.

### \*GENERAL

- |  |   |
|--|---|
| LQ01. SPECIFICATION                              | LQ05. TROUBLE SHOOTING                                      |
| LQ02. OPERATION AND CONTROLS                     | LQ06. PREVENTIVE MAINTENANCE<br>(Refer to Operators Manual) |
| LQ03. LOCATION AND WEIGHT OF COMPONENTS          | LQ07. WORKING STANDARD                                      |
| LQ04. MAINTENANCE STANDARD AND<br>TEST PROCEDURE |   |

### \*SYSTEMS

- |                        |                              |
|------------------------|------------------------------|
| LQ11. DRIVE SYSTEM     | LQ22. CONTROL SYSTEM         |
| LQ12. HYDRAULIC SYSTEM | LQ23. UPPER FRAME            |
| LQ15. SWING SYSTEM     | LQ25. ELECTRICAL SYSTEM      |
| LQ18. TRAVEL SYSTEM    | LQ26. AIR-CONDITIONER SYSTEM |
| LQ21. ATTACHMENTS      | LQ50. ENGINE                 |

### \*COMPONENTS

- |                     |                        |
|---------------------|------------------------|
| 12. HYDRAULIC PUMP  | 16. SWIVEL JOINT       |
| 13. CONTROL VALVE   | 17. HYDRAULIC CYLINDER |
| 14. OTHER VALVES    | 21. REDUCTION UNIT     |
| 15. HYDRAULIC MOTOR |                        |

### \*PROCEDURE

When checking or repairing the machine we suggest that you refer to this manual carefully. We hope that reference to this manual will help to maintain a high level of working efficiency and reliability. For further details on maintenance and checks refer to the "OPERATORS MANUAL" which has been supplied with the machine.

Although all data was correct at the time of printing, due to continual design changes and improvements, some contents may not conform to the actual machine. Take special care to order parts only after confirming the validity of the parts number in the "PARTS MANUAL".

If you notice any explanatory discrepancies, after consulting one of our representatives, please update your manual according to the latest data. However, in the event of any specification changes, we will issue revised edition.

## INDEX

# KOBELCO

Book code No. S5LQ0004E②

Sample of manual. Download All 1102 pages at:

<https://www.arepairmanual.com/downloads/kobelco-model-sk220sk220lc-hydraulic-excavator-service-repair-workshop-manual/>

## WARNING

### SAFETY

#### WARNING

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood/goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Compartment.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.

#### WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATOR'S MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other implements to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other implement is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and compartments.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

**⚠ WARNING**

13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
  14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
  15. Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
  16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
  17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
  18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pin hole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pin hole leaks.
  19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
  20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
  21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.
  22. Caution should be used to avoid breathing dust that may be generated when handling components containing asbestos fibers. If this dust is inhaled, it can be hazardous to your health. Components in KOBELCO products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates and some gaskets. The asbestos used in these components is usually bound in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust which contains asbestos is not generated.
- If dust which may contain asbestos is present, there are several common sense guidelines that should be followed.
- a. Never use compressed air for cleaning.
  - b. Avoid brushing or grinding of asbestos containing materials.
  - c. For clean up, use wet methods or a vacuum equipped with a high efficiency particulate air (HEPA) filter.
  - d. Use exhaust ventilation on permanent machining jobs.
  - e. Wear an approved respirator if there is no other way to control the dust.
  - f. Comply with applicable rules and regulations for the work place.
  - g. Follow environmental rules and regulations for disposal of asbestos.
  - h. Avoid areas where asbestos particles may be in the air.



# SHOP MANUAL

model


# SK 220 SK 220LC

## TABLE OF CONTENTS

1. SPECIFICATION .....	<b>LQ01</b>
2. OPERATION AND CONTROLS (Refer to Operators Manual)	
3. LOCATION AND WEIGHT OF COMPONENTS .....	<b>LQ03</b>
4. MAINTENANCE STANDARDS AND TEST PROCEDURES.....	<b>LQ04</b>
5. TROUBLESHOOTING .....	<b>LQ05</b>
6. PREVENTIVE MAINTENANCE (Refer to Operators Manual)	
7. WORKING STANDARDS .....	<b>LQ07</b>

○How to Index each Shop Manual Section

The GENERAL of this shop manual consists of 7 headings as shown above. Each section can be easily referred to by indexes appended to the margin of the page as indicated on the right. Please use the indexes for speedy reference.

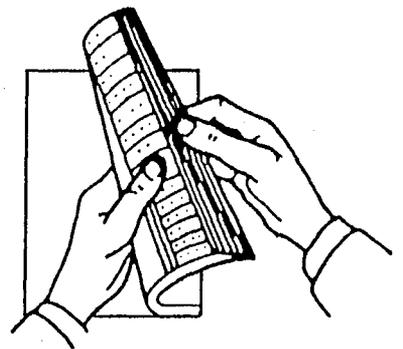

# KOBELCO

# GENERAL

SK220 List of Shop Manual GENERAL Section  
 SK220<sub>LC</sub>

Index No.	Title	Book Code No.		
		Distribution Year - Month		
LQ01	SPECIFICATION	S5LQ0104E① 1991-12		
	OPERATION	S2LQ1016E Refer to Operators manual		
LQ03	LOCATION AND WEIGHT OF COMPONENTS	S5LQ0304E 1990-3		
LQ04	MAINTENANCE STANDARDS AND TEST PROCEDURES	S5LQ0405E 1990-3		
LQ05	TROUBLESHOOTING	S5LQ0504E① 1993-2		
	PREVENTIVE MAINTENANCE	S2LQ1016E Refer to Operators manual		
LQ07	WORKING STANDARDS	S5LQ0704E 1990-3		
	Applicable Machines	LQ-2101~ LL-1801~		

Book code No. S5LQ0104E①

# KOBELCO

## SHOP MANUAL

# SK 220 SK 220LC

**LQ01**

### SPECIFICATION

#### TABLE OF CONTENTS

1. NAME OF COMPONENTS .....	1
2. GENERAL DIMENSIONS .....	2
3. SPECIFICATIONS AND PERFORMANCE .....	4
4. TYPE OF SHOES .....	5
5. TYPE AND COMBINATION OF ATTACHMENTS .....	6
6. WORKING RANGES OF ATTACHMENTS .....	7
7. LIFTING-UP ABILITY DIAGRAM .....	9
8. ENGINE SPECIFICATIONS .....	14


Applicable Machines

LQ-2101~

LL-1801~

Revision	Date of Issue	Remarks
First edition	March, 1990	S5LQ0104E K
First revision	December, 1991	S5LQ0104E① K


# 1. NAME OF COMPONENTS

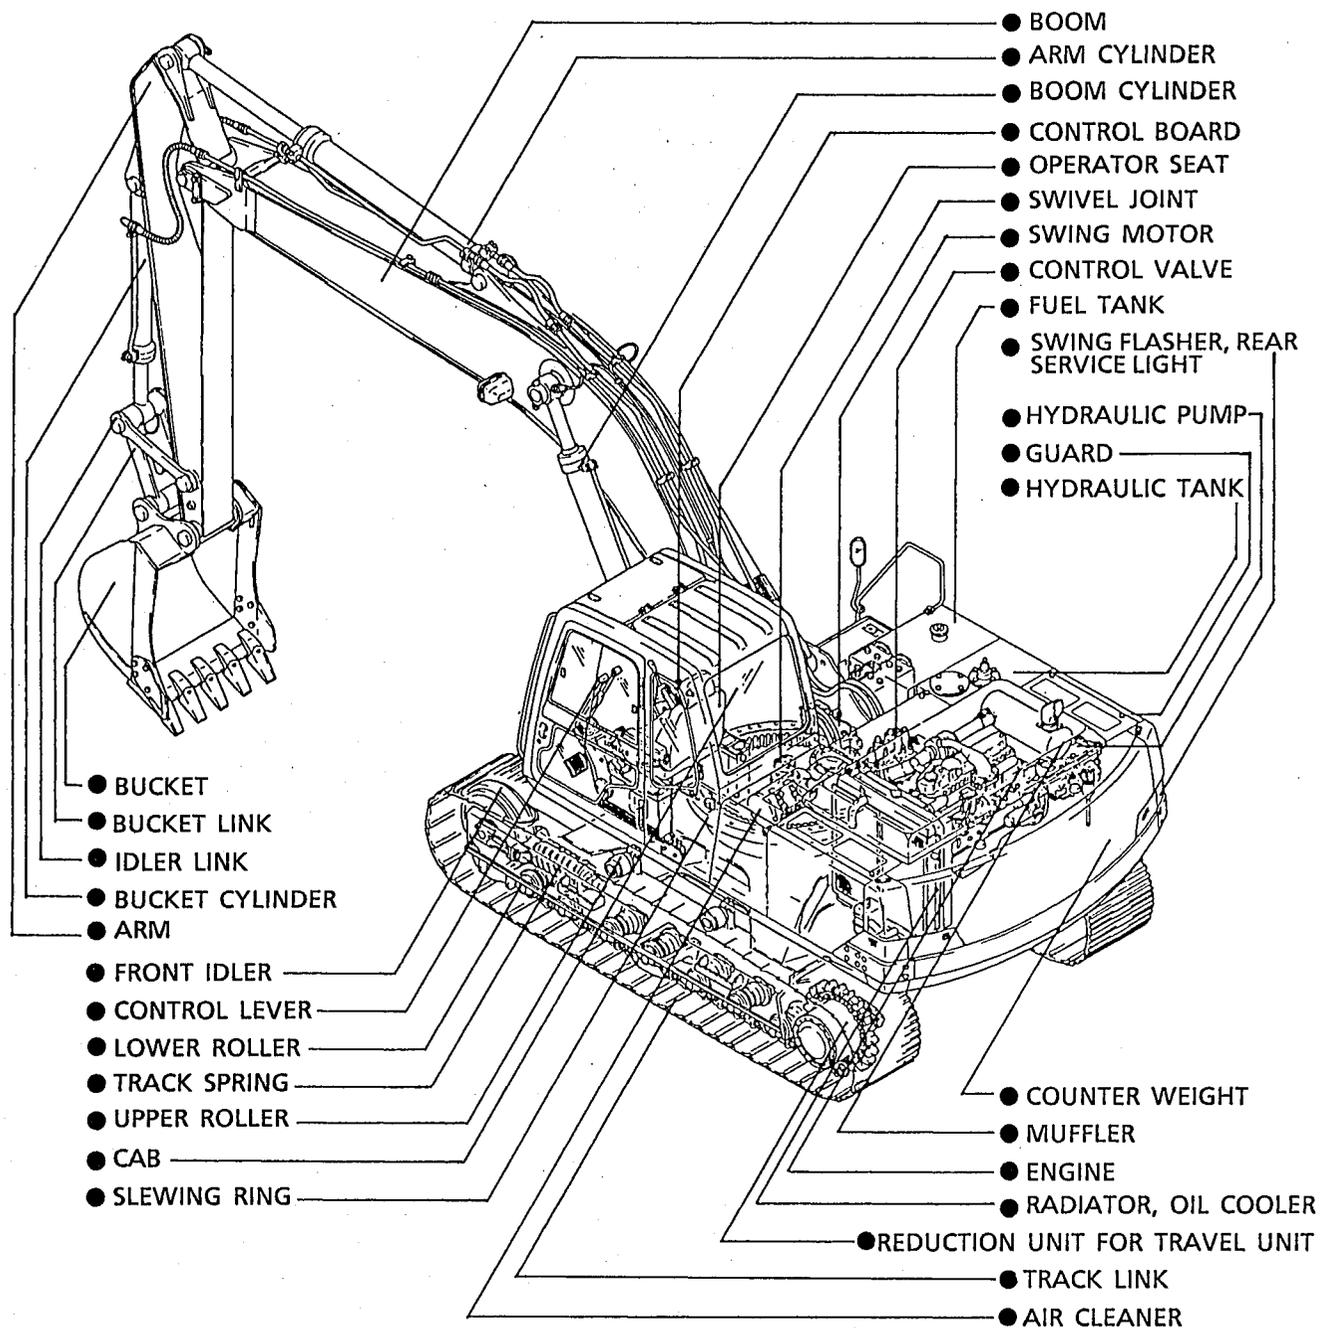


## 2. GENERAL DIMENSIONS

■ SK220 ( 6.02m (19ft 9in) BOOM + 2.98m (9ft 9in) ARM-ATTACHED STANDARD MACHINE )

Unit : mm ( ft-in )

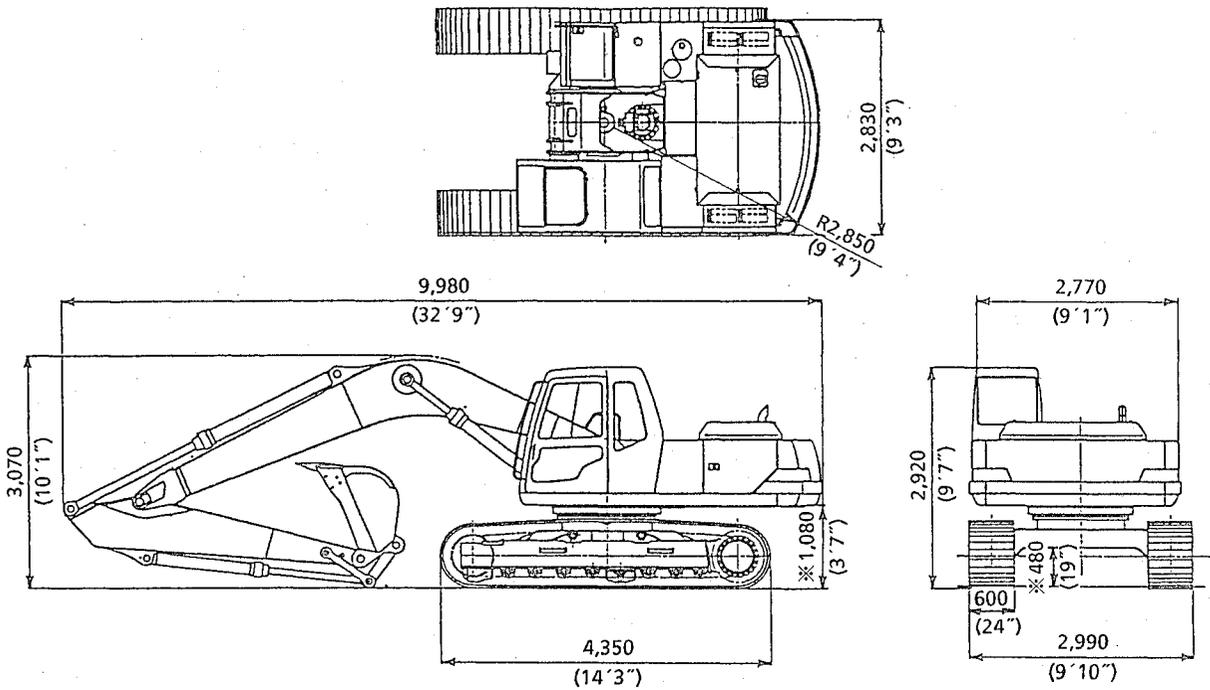


■ SK220Lc ( 6.02m (19ft 9in) BOOM + 2.98m (9ft 9in) ARM-ATTACHED STANDARD MACHINE )

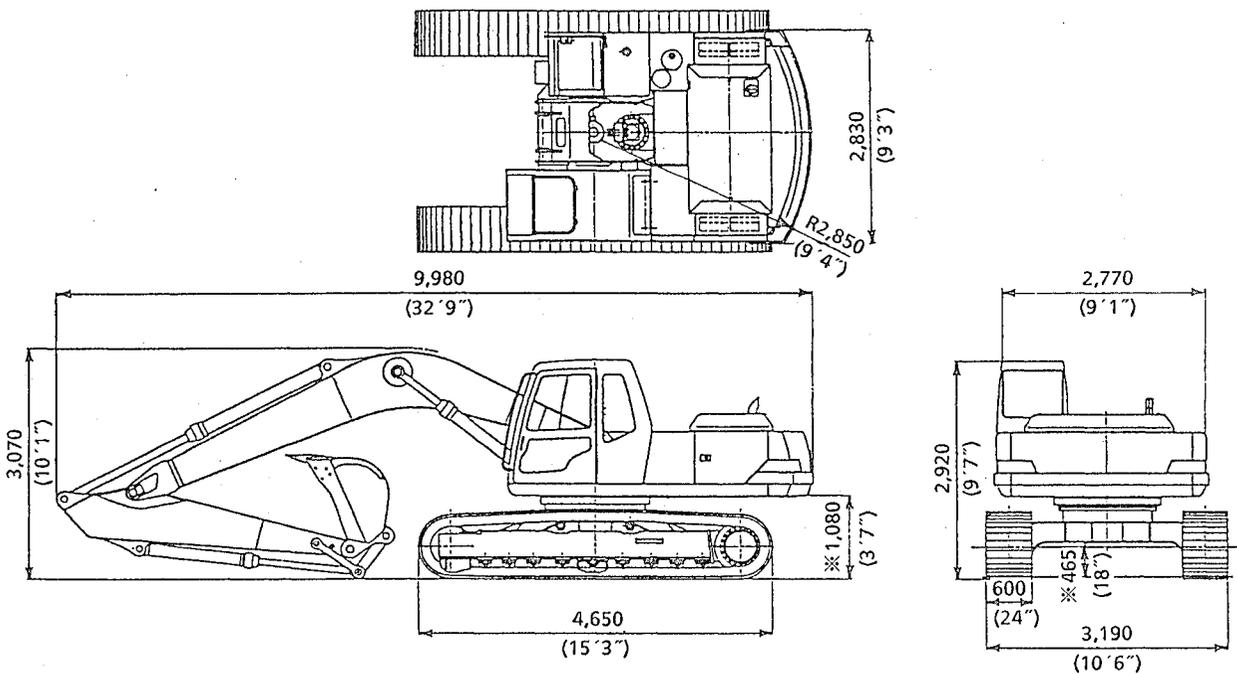


☞ The figures marked ※ in the illustration do not include the shoe embossment (26mm) ( 1.02" ).

■ SK220 ( WITH 6.02m (19ft 9in) BOOM + 2.5m (8ft 2in) ARM )

Unit : mm [ft-in]

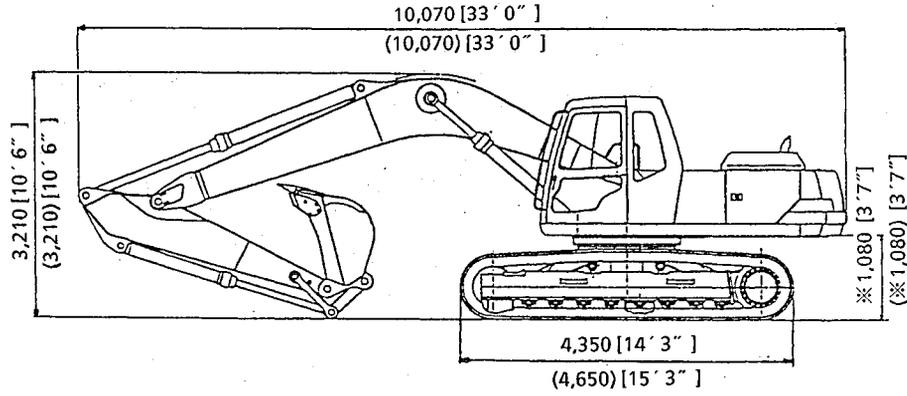

■ SK220 ( WITH 6.02m (19ft 9in) BOOM + 3.66m (12ft) ARM )

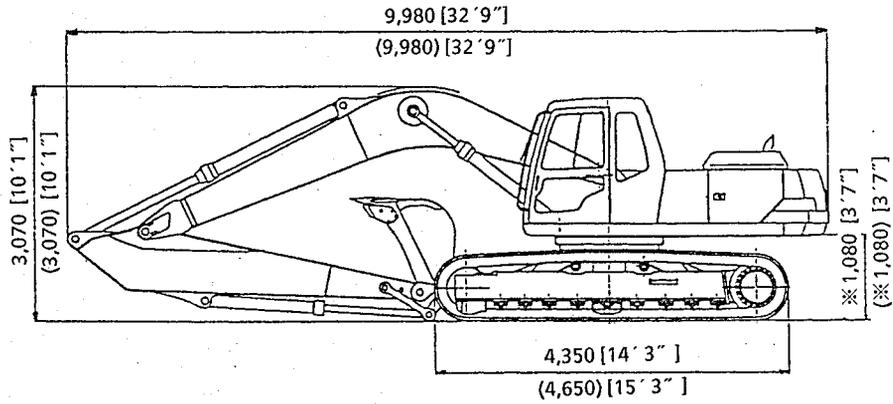

- ☞ ● The figures marked ※ in the illustration do not include the shoe embossment (26mm) [1.02"].
- SK200lc has the dimensions given in parentheses [     ].

### 3. SPECIFICATIONS AND PERFORMANCE

#### ■ SPEED AND CLIMBING ABILITY

Item	Model	SK220	SK220LC
Swing speed		12rpm	
Travel speed		7/4km/h (4.3/2.5 MPH)	
Gradeability		35° (70%)	

#### ■ ENGINE

Model		Mitsubishi 6 D15-T	
Type		Water-cooled 4-cycle, direct injection type with exhaust turbo supercharger	
Number of cylinder - Bore x Stroke		6 - 113mm(4.45in) x 115mm(4.53in)	
Total displacement		6,919c.c. (422cuin)	
Rated output power/revolution	JIS D 1005 Net	165ps/2,150rpm	
	SAE J 1345 Net	121kw/2,150rpm	
	DIN 6270 Net	121kw/2,150rpm	
Maximum torque/revolution	JIS D 1005 Net	60kgf·m / 1,600rpm	
	SAE J 1349 Net	588N·m / 1,600rpm	
	DIN 6270 Net	60kgf·m / 1,600rpm	

#### ■ HYDRAULIC COMPONENTS


Hydraulic pump	Double-pump variable displacement, axial piston + gear pump
Hydraulic motor (swing)	Axial piston motor
Hydraulic motor (travel)	Axial piston motor
Control valve	5-section multiple control valve + 1-section control valve (swing)
Cylinders (boom, arm, and bucket)	Double acting cylinder
Return filter	Safety valve containing filter type
Oil cooler	Air-cooled type

#### ■ WEIGHT

Unit : kg (lbs)

Fully-equipped weight	22,900 (50,500)	23,500 (51,800)
Upper machinery	9,980 (22,000)	←
Lower machinery (with 600mm (24") grocer shoe )	8,860 (19,500)	9,460 (20,900)
Attachment [ 6.02m(19ft 9in) boom + 2.98m (9ft 9in) arm + 0.9m <sup>3</sup> (0.92cuyd) bucket ]	4,070 (8,970)	←

#### 4. TYPE OF SHOES

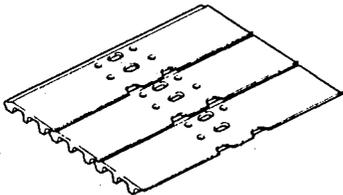Shape	Model	Width of track shoe mm(ft-in)	Overall width of crawler mm(ft-in)	Ground contact Pressure kg/cm <sup>2</sup> (psi)		
				STD, Arm 2.98M (9'8")	2.5M (8'2") Arm	3.66M (12'0") Arm
 Grouser (equal height)	SK220	600 (24")	2,990 (9'9")	0.51 (7.25)	0.51 (7.25)	0.51 (7.25)
		700 (28")	3,090 (10'2")	0.44 (6.26)	0.44 (6.26)	0.45 (6.40)
		45 link 800 (32")	3,190 (10'6")	0.39 (5.55)	0.39 (5.55)	0.40 (5.69)
	SK220LC	600 (24")	3,190 (10'6")	0.48 (6.83)	0.48 (6.83)	0.49 (6.97)
		700 (28")	3,290 (10'9")	0.41 (5.83)	0.41 (5.83)	0.42 (5.97)
		48 link 800 (32")	3,390 (11'1")	0.37 (5.26)	0.37 (5.26)	0.38 (5.40)

- ☞ ● 700mm (28") shoes and 800mm (32") shoes come in three types, wet land, paved road and soft land. Do not use them at sites with many stones and gravels in any circumstances.
- Note that if you operate such shoe-mounted machines in general civil construction work and in a dry riverbed, it will cause shoes to bend, bring about slackening of shoe bolts and damage to under frame parts (links, crawlers, etc.).


#### ■ DIGGING FORCE

Arm	+	Bucket	Digging force ton (UK ton)	
			Arm	Bucket
2.5M (8'2")	+	1.0M <sup>3</sup> 1.3cuyd	12.9/13.8 (12.7/13.6)	13.8/14.7 (13.6/14.5)
2.98M (9'9")	+	0.9M <sup>3</sup> 1.5cuyd	10.9/11.6 (10.7/11.4)	13.8/14.7 (13.6/14.5)
3.66M (12'0")	+	0.7M <sup>3</sup> 0.91cuyd	9.5 (9.3)	13.8 (13.6)

## 5. TYPES OF COMBINATIONS AND ATTACHMENTS

### ■ TYPES OF BUCKETS


#### HOE BUCKET

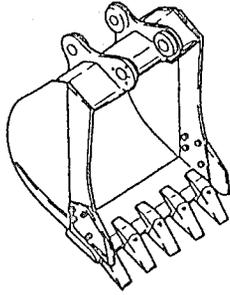

Heaped capacity m <sup>3</sup> (cuyd)	Outside width of bucket mm (ft in)		No. of teeth	Presence or not of side cutter	Possibility of turnover	Weight kg (lbs)
	With side cutter	Without side cutter				
1.2(1.57)	—	1,490(4'11")	6	No	Yes	900(1,980)
1.0(1.31)	1,390(4'7")	1,290(4'3")	5	Yes	Yes	830(1,830)
0.9(1.18)	1,280(4'2")	1,180(3'10")	4	Yes	Yes	770(1,700)
0.7(0.92)	1,060(3'6")	950(3'1")	4	Yes	Yes	690(1,520)
* 0.9(1.18)	—	1,170(3'10")	5	No	Yes	890(1,960)

✱ mark indicates one for heavy digging work.


#### RIPPER

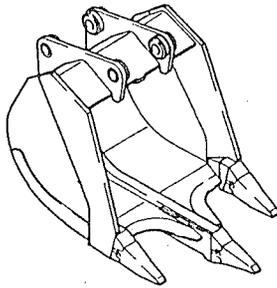

Capacity: 0.6 m<sup>3</sup> (0.78cuyd)  
Weight : 1,020kg (2,250 lbs)  
Turnover not possible.

#### SLOPE FINISHING BUCKET

Weight : 1,050kg(2,300 lbs)  
Turnover not possible.

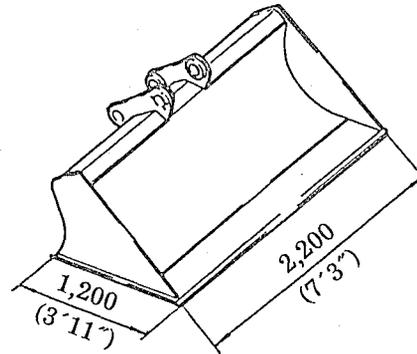


### ■ COMBINATIONS OF ATTACHMENTS

Type	Bucket			Applicable arm		
	JIS heaped capacity m <sup>3</sup> (cuyd)	SAE heaped capacity m <sup>3</sup> (cuyd)	JIS-SAE struck capacity m <sup>3</sup> (cuyd)	2.5m (8ft2in) arm	2.98m (9ft9in) arm	3.66m (12ft) arm
Hoe bucket	0.7 (0.92)	0.81 (1.06)	0.59 (0.81)	○	○	◎
	0.9 (1.18)	1.04 (1.37)	0.76 (0.98)	○	◎	△
	* 0.9 (1.18)	1.04 (1.37)	0.76 (0.98)	○	○	×
	1.0 (1.31)	1.16 (1.52)	0.84 (1.09)	◎	△	×
	1.2 (1.57)	1.4 (1.83)	1.0 (1.31)	△	×	×
Slope finishing bucket	0.76 (0.99)	—	—	△	△	
Ripper	—	—	—	○	○	×
Ripper bucket	0.6 (0.78)	0.5 (0.65)	0.38 (0.5)	○	○	×

## 6. WORKING RANGES OF ATTACHMENTS

### ■ BACKHOE ATTACHMENT SK220, SK220LC

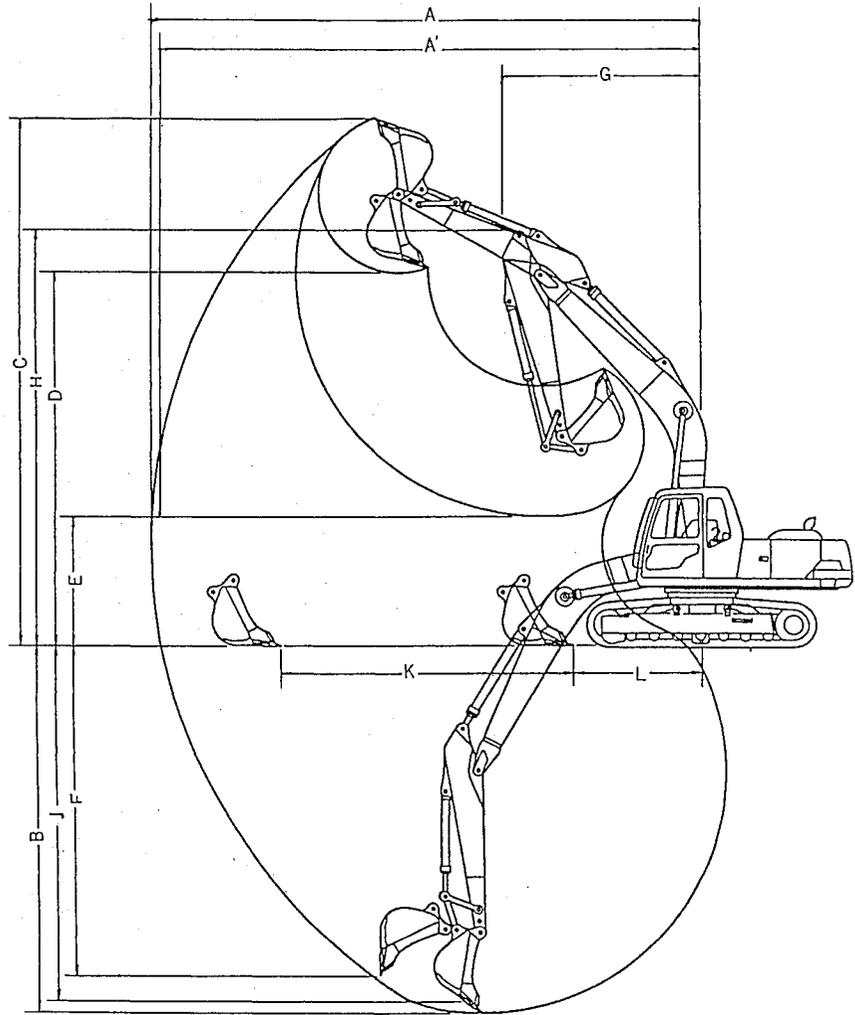


Unit ; m (ft-in)

Item		Range	Type of attachment	2.5m (8ft2in) arm	2.98m (9ft9in) arm	3.66m (12ft) arm
				with 1.0m <sup>3</sup> (1.31cuyd) bucket	with 0.9m <sup>3</sup> (1.18cuyd) bucket	with 0.7m <sup>3</sup> (0.92cuyd) bucket
A	A max digging reach			9.85 (32'4")	10.31 (33'10")	10.91 (35'10")
A'	Max. reach at ground level			9.66 (31'8")	10.13 (33'3")	10.74 (35'3")
B	Max. digging depth			6.52 (21'5")	7.00 (22'12")	7.68 (25'2")
C	Max. digging height			9.44 (30'12")	9.72 (31'11")	9.92 (32'7")
D	Max. dumping clearance			6.58 (21'7")	6.83 (22'5")	7.05 (23'2")
E	Min. dumping clearance			3.03 (9'11")	2.55 (8'4")	1.87 (6'2")
F	Vertical digging depth			5.31 (17'5")	6.04 (19'10")	6.58 (21'7")
G	Min swing radius			4.06 (13'4")	4.00 (13'1")	4.01 (13'2")
H	Height at min. swing radius			8.04 (26'5")	7.95 (26'1")	7.94 (26'1")
J	Digging depth at 8ft-flat floor			6.30 (20'8")	6.81 (22'4")	7.48 (24'6")
K	Horizontal digging distance	Stroke		4.17 (13'8")	5.27 (17'3")	6.48 (21'3")
		At min.		3.22 (10'7")	2.58 (8'6")	1.97 (6'6")

☞ The figures in this table do not include the projection of shoes ( 26mm (1.02in) ).

■ FACE SHOVEL ATTACHMENT  
SK220, SK220LC

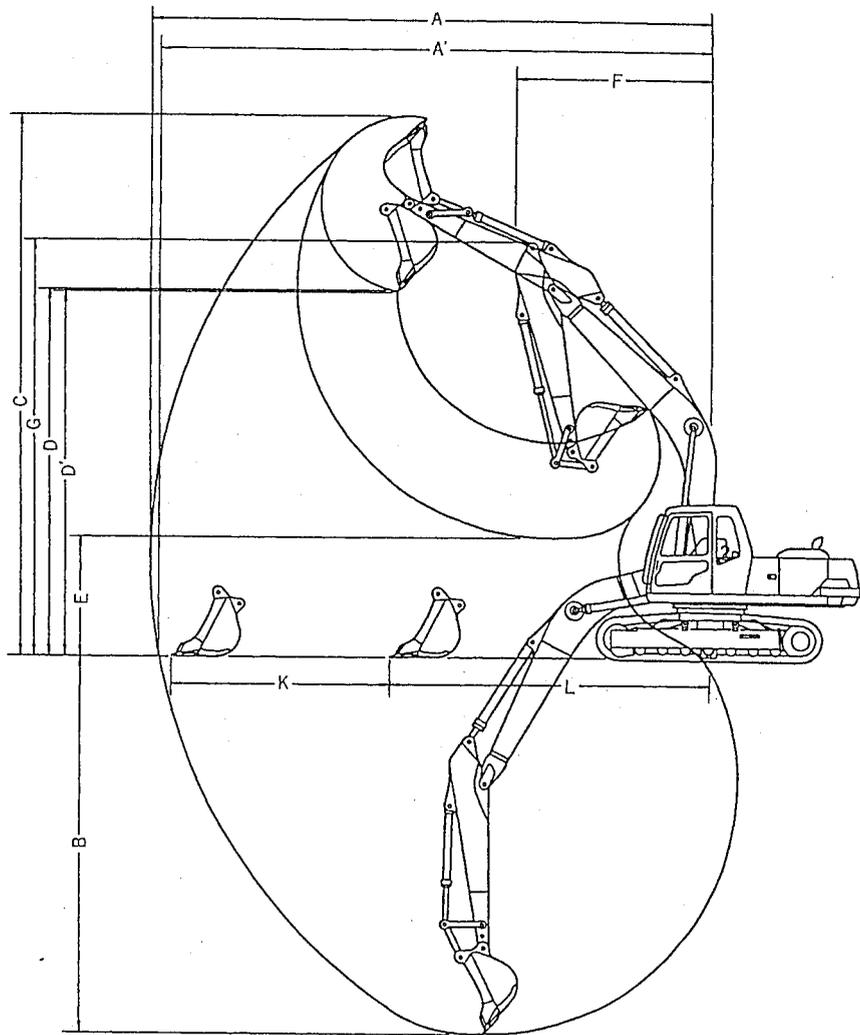

Unit ; m (ft-in)

Item		Range	Type of attachment		
			2.5m (8ft2in) arm with 1.0m <sup>3</sup> (1.31cuyd) bucket	2.98m (9ft9in) arm with 0.9m <sup>3</sup> (1.18cuyd) bucket	3.66m (12ft) arm with 0.7m <sup>3</sup> (0.92cuyd) bucket
A	A max digging reach		10.03 (32'11")	10.49 (34'5")	11.09 (36'5")
A'	Max. reach at ground level		9.85 (32'4")	10.32 (33'10")	10.93 (35'10")
B	Max. digging depth		6.70 (21'12")	7.18 (23'7")	7.86 (25'9")
C	Max. digging height		9.80 (32'2")	10.05 (32'12")	10.26 (33'8")
D	Max. dumping clearance		6.47 (21'3")	6.75 (22'2")	6.95 (22'10")
D'	Max. dumping clearance (45°)		6.13 (20'1")	6.13 (20'1")	6.30 (20'8")
E	Min. dumping clearance		2.84 (9'4")	2.36 (7'9")	1.68 (5'6")
F	Min swing radius		4.06 (13'4")	4.00 (13'1")	4.01 (13'2")
G	Height at min. swing radius		8.04 (26'5")	7.95 (26'1")	7.94 (26')
K	Horizontal	Stroke	3.39 (11'1")	4.26 (13'12")	5.40 (17'9")
L	digging distance	At min.	6.26 (20'6")	5.86 (19'3")	5.32 (17'5")

☞ The figures in this table do not include the projection of shoes ( 26mm (1.02in) ).

## 7. LIFTING-UP ABILITY DIAGRAM

**(1) Calculation condition**

The lifting-up ability of this drawing is indicated by metric standard. The indicated figures fall within 87% of a set pressure of the main relief valve used in the arm and the boom cylinder and 75% of static tilting load.

- 1) The load point is the fulcrum of the bucket and the bucket position is an embraced posture.
- 2) The figures on the upper stage indicate the lifting-up ability of a machine facing sideways, while the figures at the bottom stage represent a machine facing longitudinally.
- 3) Unit : ton Shoe width : 600mm (24") shoe




**Calculation condition for U.K.**






The lifting-up ability of this drawing is indicated by metric standard.






The indicated figures fall within 87% of a set pressure of the main relief valve used in the arm and the boom cylinder and 71% of static tilting load.






**(2) Lifting-up ability diagram Item No. table**


Model	Pressure kgf/cm <sup>2</sup> (psi)	Arm length (M) + bucket capacity (M <sup>3</sup> )				
		2.5M + 1.0M <sup>3</sup> (8'2") + (1.31cu·yd) (Short)		2.98M + 0.9M <sup>3</sup> (9'9") + (1.18cu·yd) STD		3.66M + 0.7 (12') + (0.92cu·yd) (Long)
		Item	No. 1		For U. K	
SK220	300 (4270)		1	5	9	13
	Heavy lift 335 (4760)		2	6	10	14
SK220 LC	300 (4270)		3	7	11	15
	Heavy lift 335 (4760)		4	8	12	16

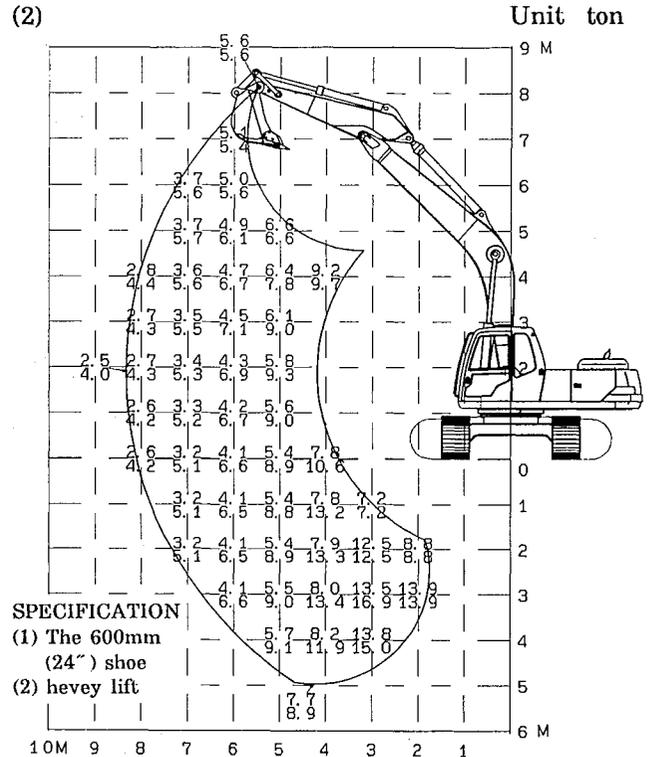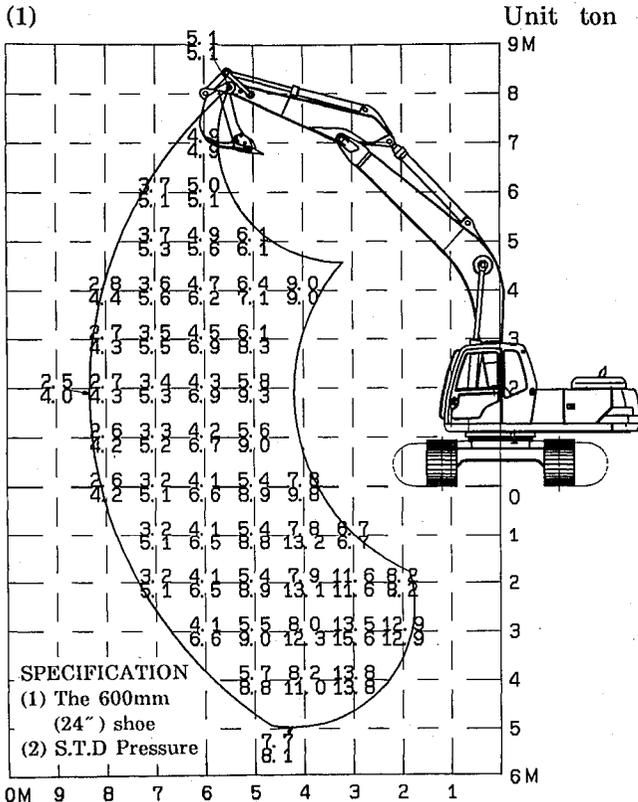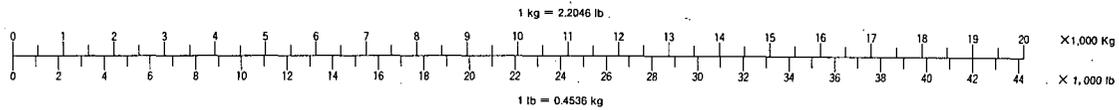

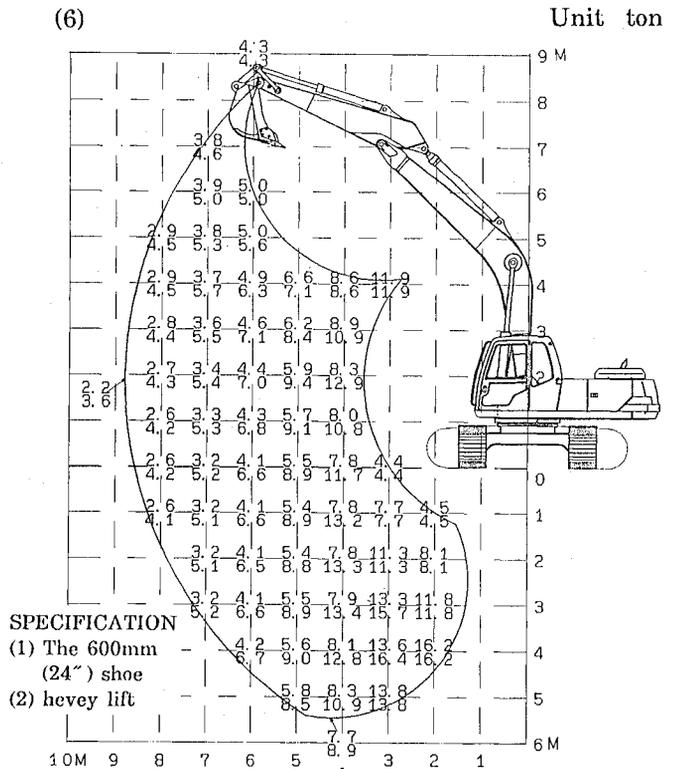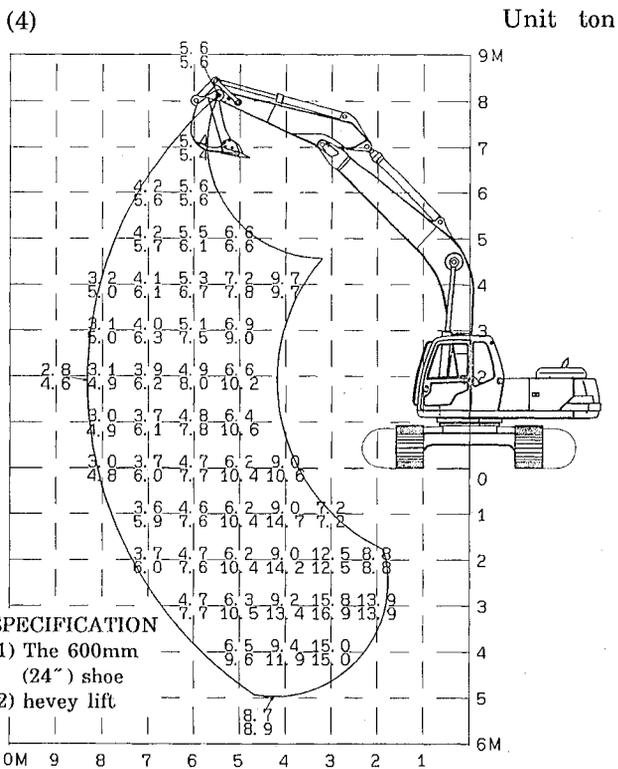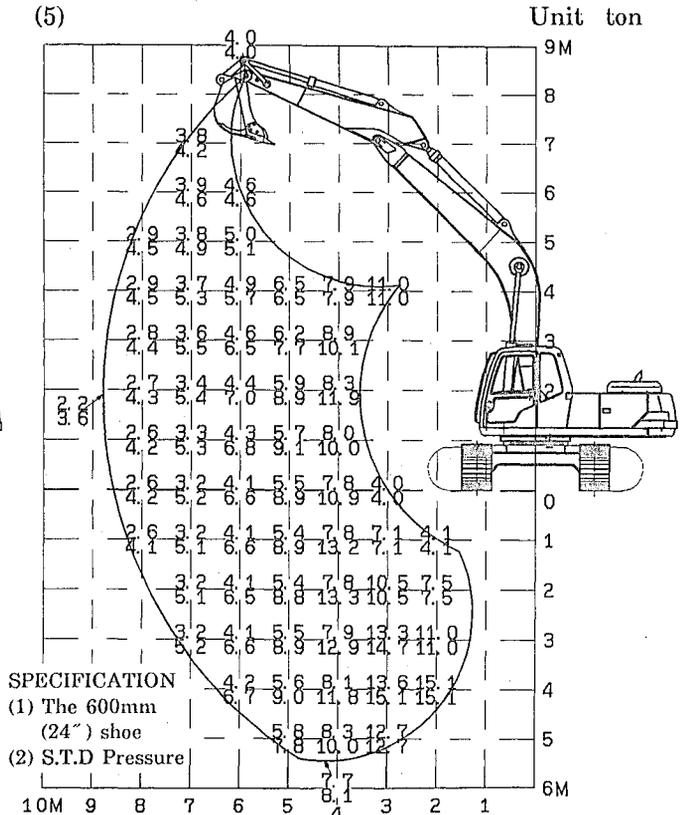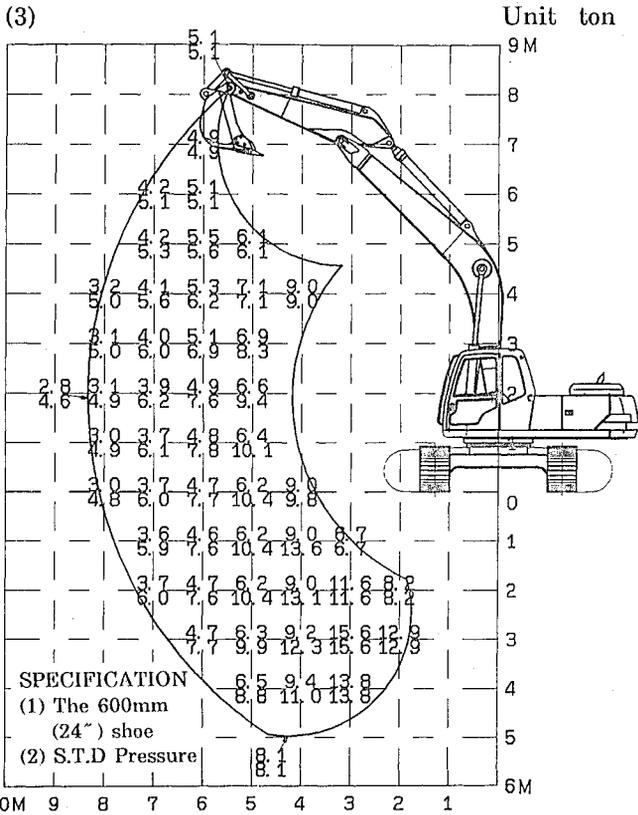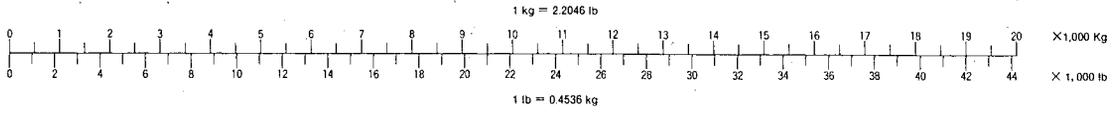

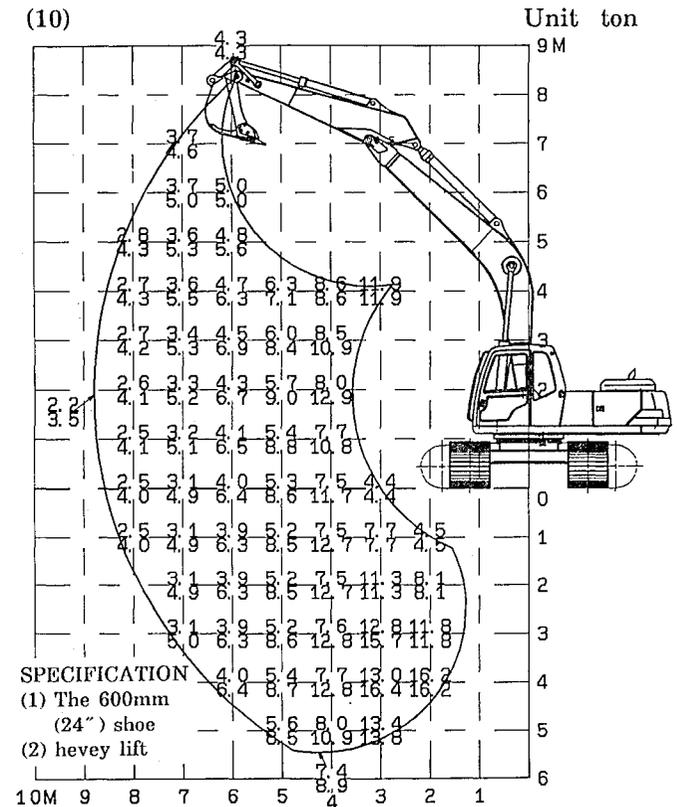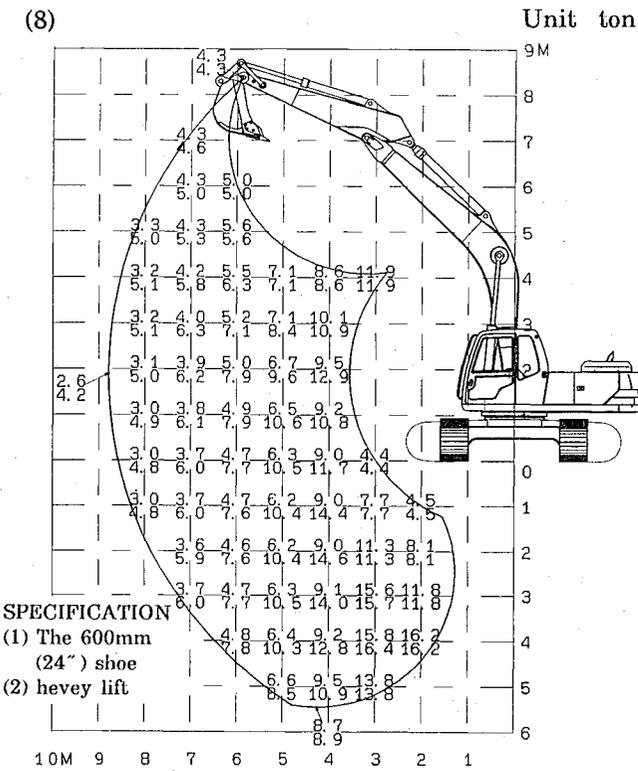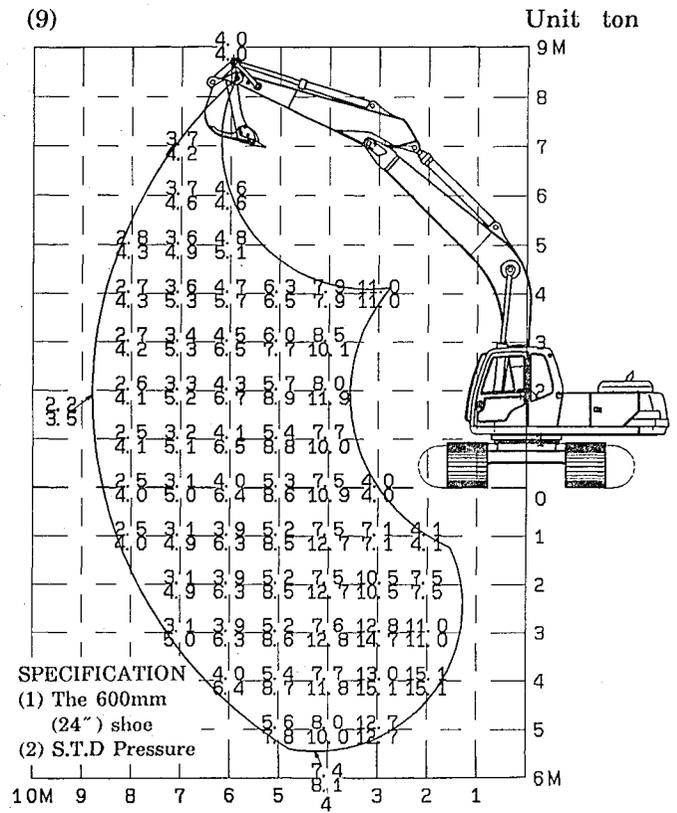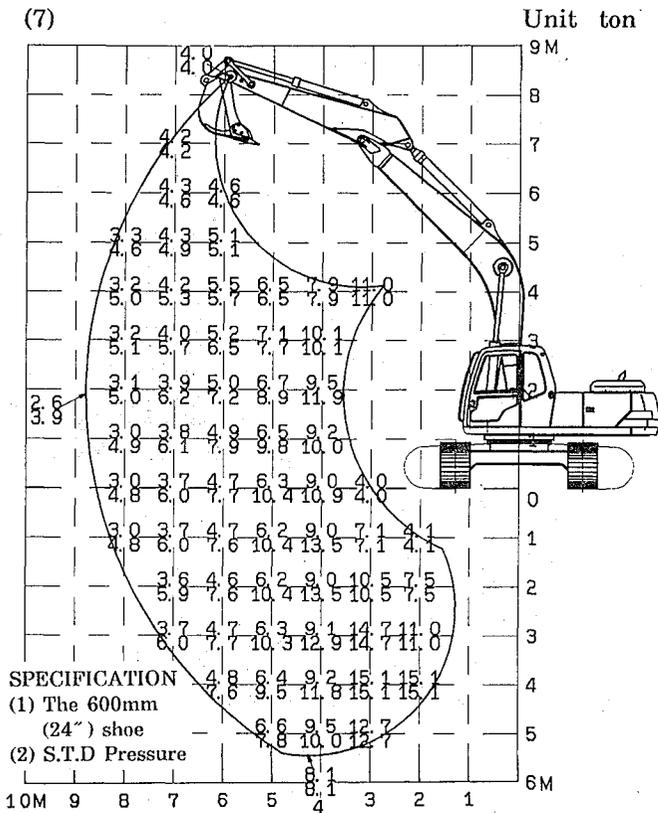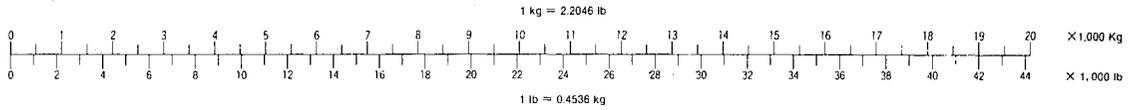


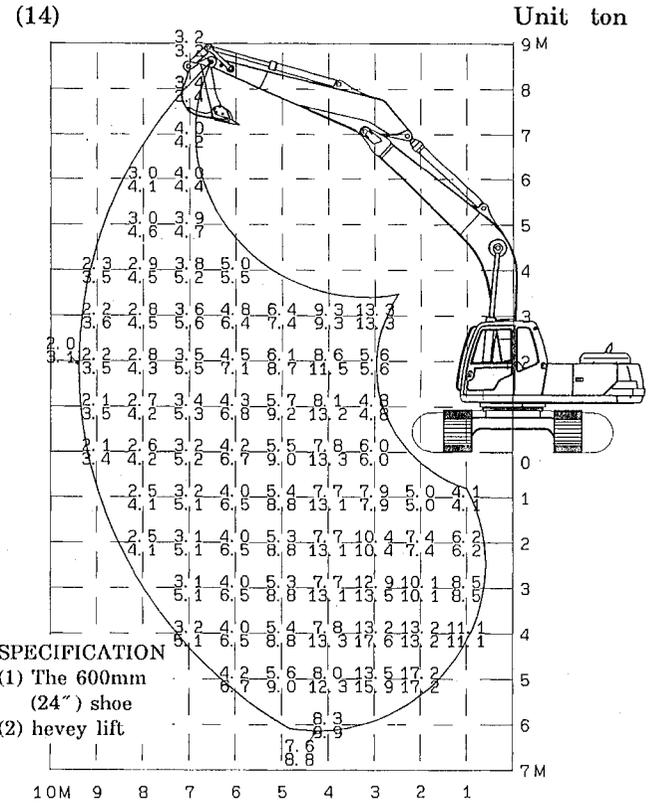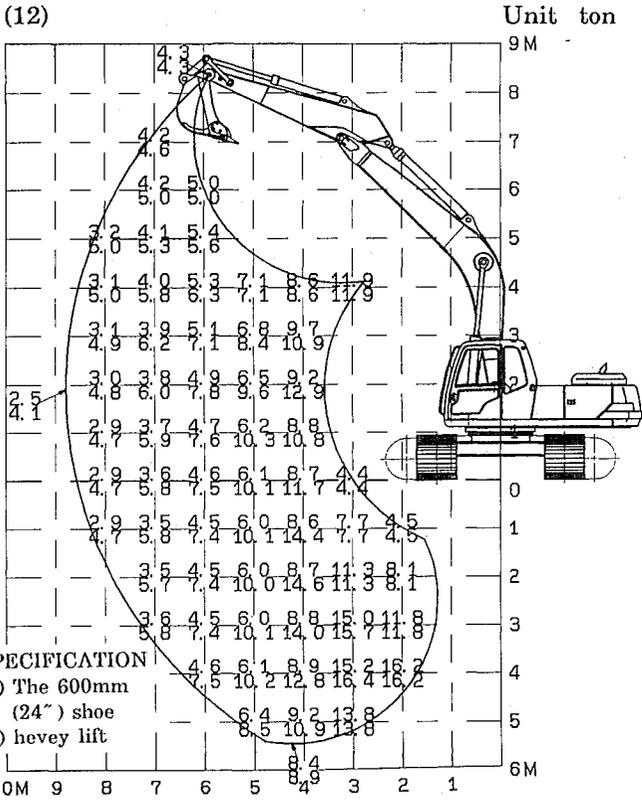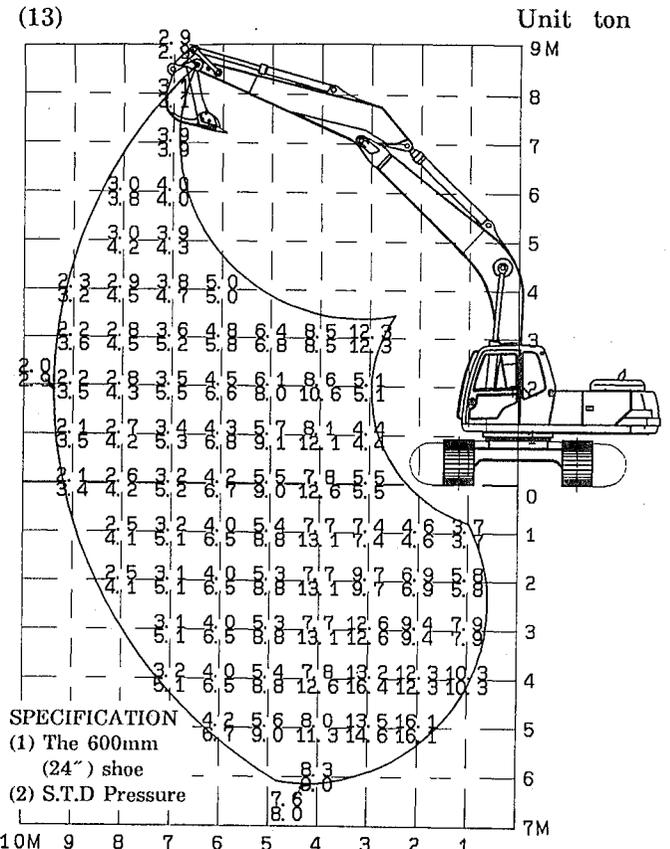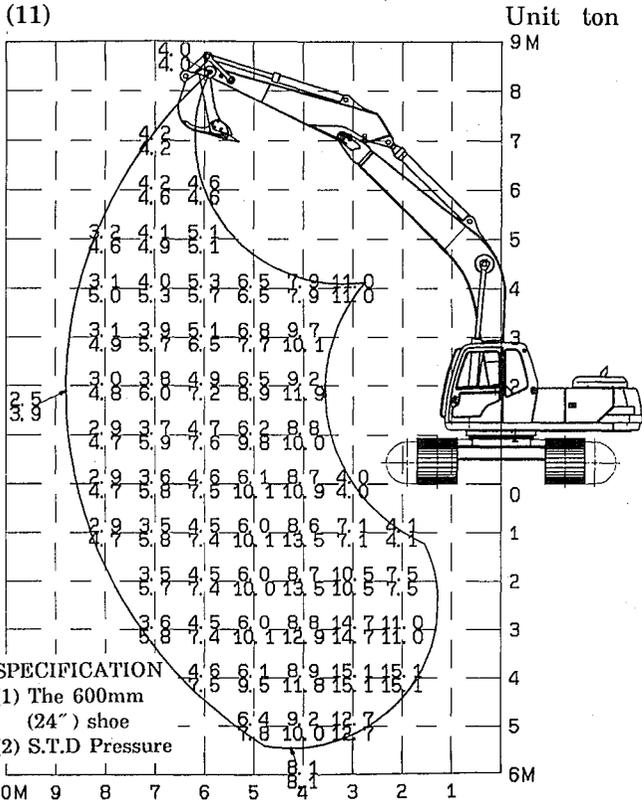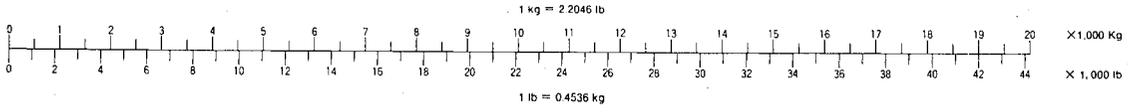

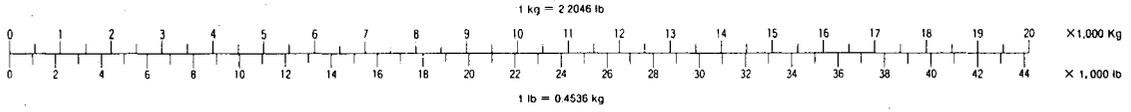


(15)

Unit ton

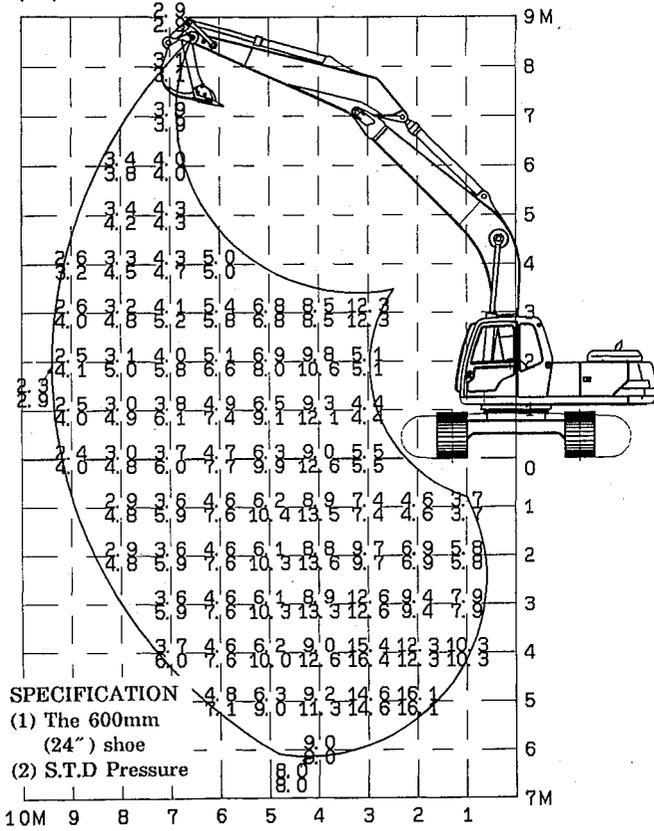

(16)

Unit ton

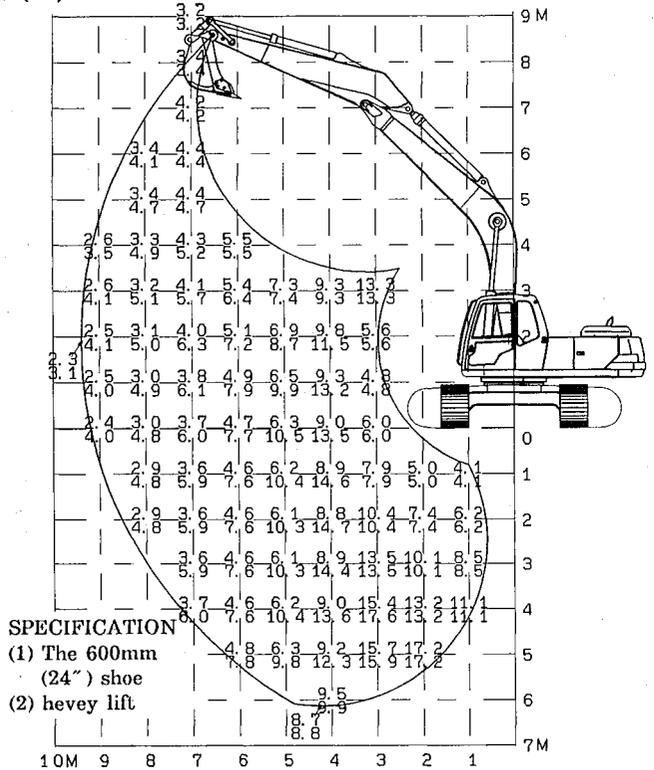


## 8. ENGINE SPECIFICATIONS

### MAJOR SPECIFICATIONS

SK220, SK220LC

Type		Mitsubishi 6D31-T		
No. of cylinders-Dir×Stroke		6-113mm×115mm (4.45 in×4.53 in)		
Total displacement		6,919cc (422 cuin)		
Compression ration		16		
Output rating		165PS / 2,150 rpm		
Max. torque		60kgf · m / 1,600 rpm (433ft · lbs / 1,600 rpm)		
High idling		2,320 ± 20 rpm		
Low idling		650 ± 20 rpm		
Injection start pressure		220kgf / cm <sup>2</sup> (3,128psi)		
Injection timing		Before top-dead center 76.5°C (170°F) Full open 90°C (194°F)		
Ignition order		1-5-3-6-2-4		
Compression pressure		26kgf / cm <sup>2</sup> (370psi)		
Lube oil pressure		Rating 3~4kgf/cm <sup>2</sup> (42.7~56.9psi)		
Fuel injection timing		18°C before the top dead point		
Valve clearance, valve action timing		Valve clearance	Open	Close
	Suction valve	In cold state, in cold condition 0.4mm (0.016")	21° before the top dead point	37° before the bottom dead point
	Exhaust valve	In cold state, in cold condition 0.4mm (0.016")	62° before the bottom dead point	18° before the top dead point
Starter capacity		4.5kw		
Generator capacity		30A 800W		
Super Charging type		Turbo type		
Cooling fan drive method		Ø600 (Ø24in)suction type Belt drive pulley ratio:1.0		
Engine oil volume		Engine body 24ℓ (6.34gal)		
Dry weight		590kg (1300 lbs)		

**ENGINE CHARACTERISTIC CURVE**  
**(MITSUBISHI 6D15-T)**

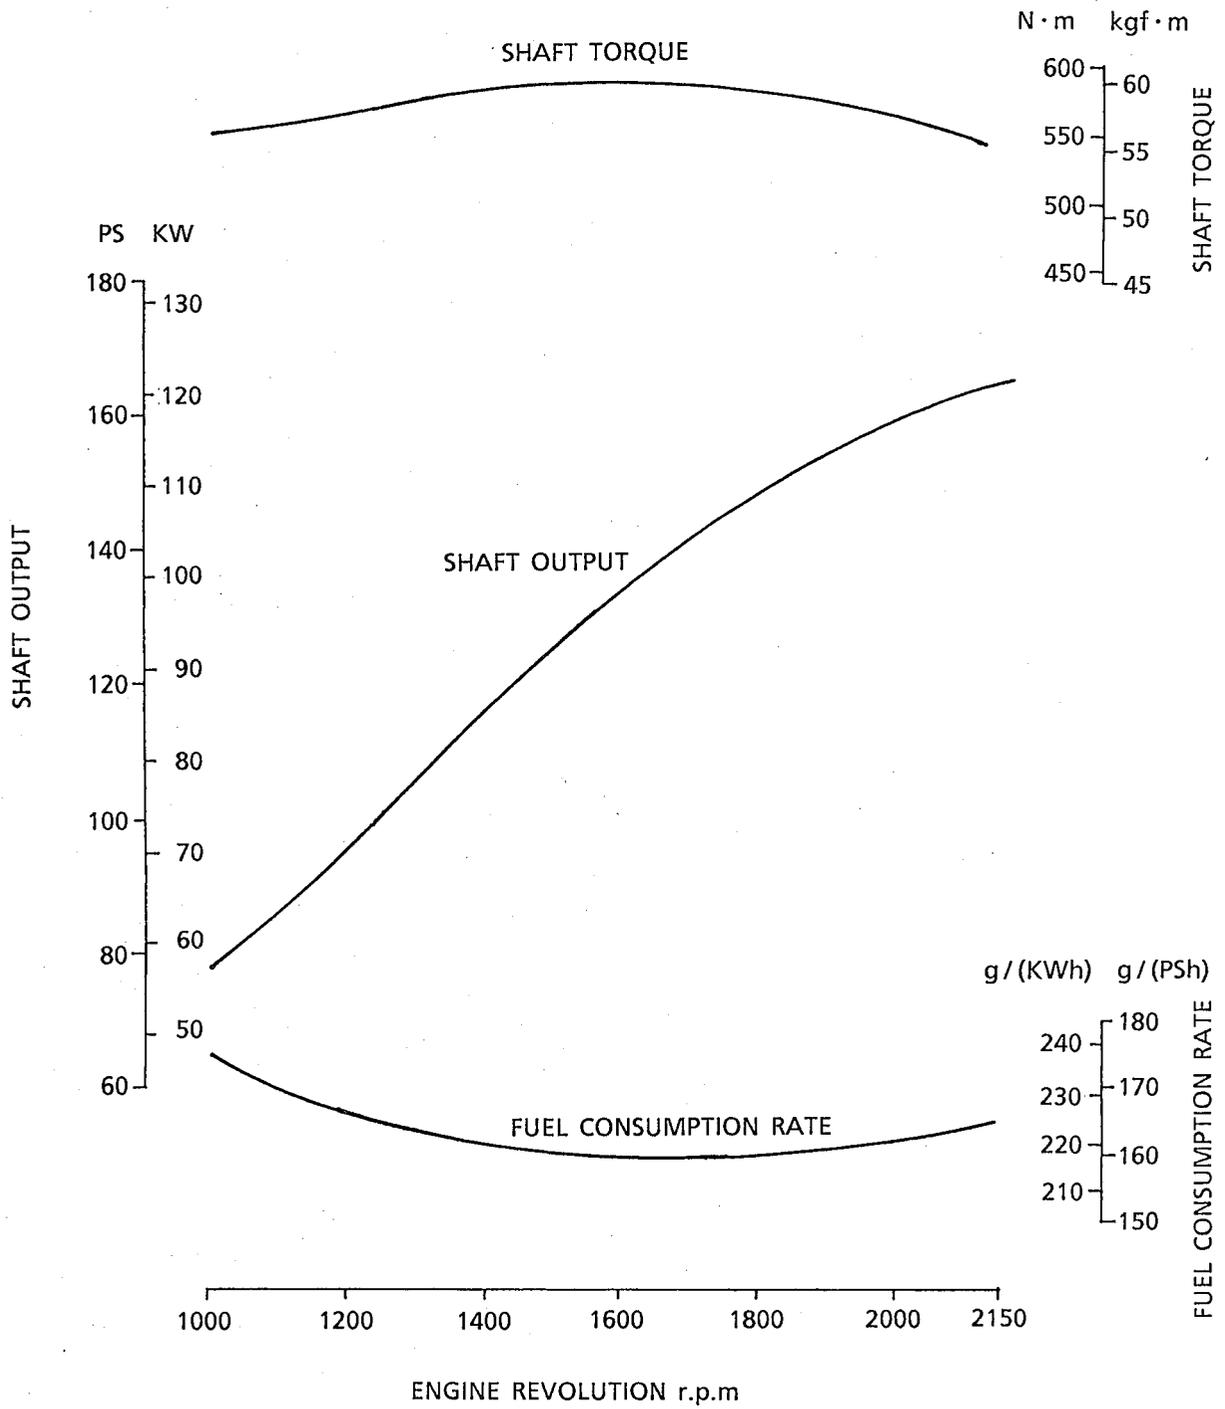





Book code No. S5 LQ03 04E

SHOP MANUAL

SK 220  
SK 220LC

LOCATION AND WEIGHT  
OF COMPONENTS

TABLE OF CONTENTS

LQ03

1. LOCATION OF COMPONENTS .....	1
2. WEIGHT OF COMPONENTS .....	2
3. TRANSPORTATION WEIGHT .....	3


Applicable Machines

LQ-2101~

LL-1801~

Revision	Date of Issue	Remarks
First edition	March, 1990	S5LQ0304E K

# 1. LOCATION OF COMPONENTS

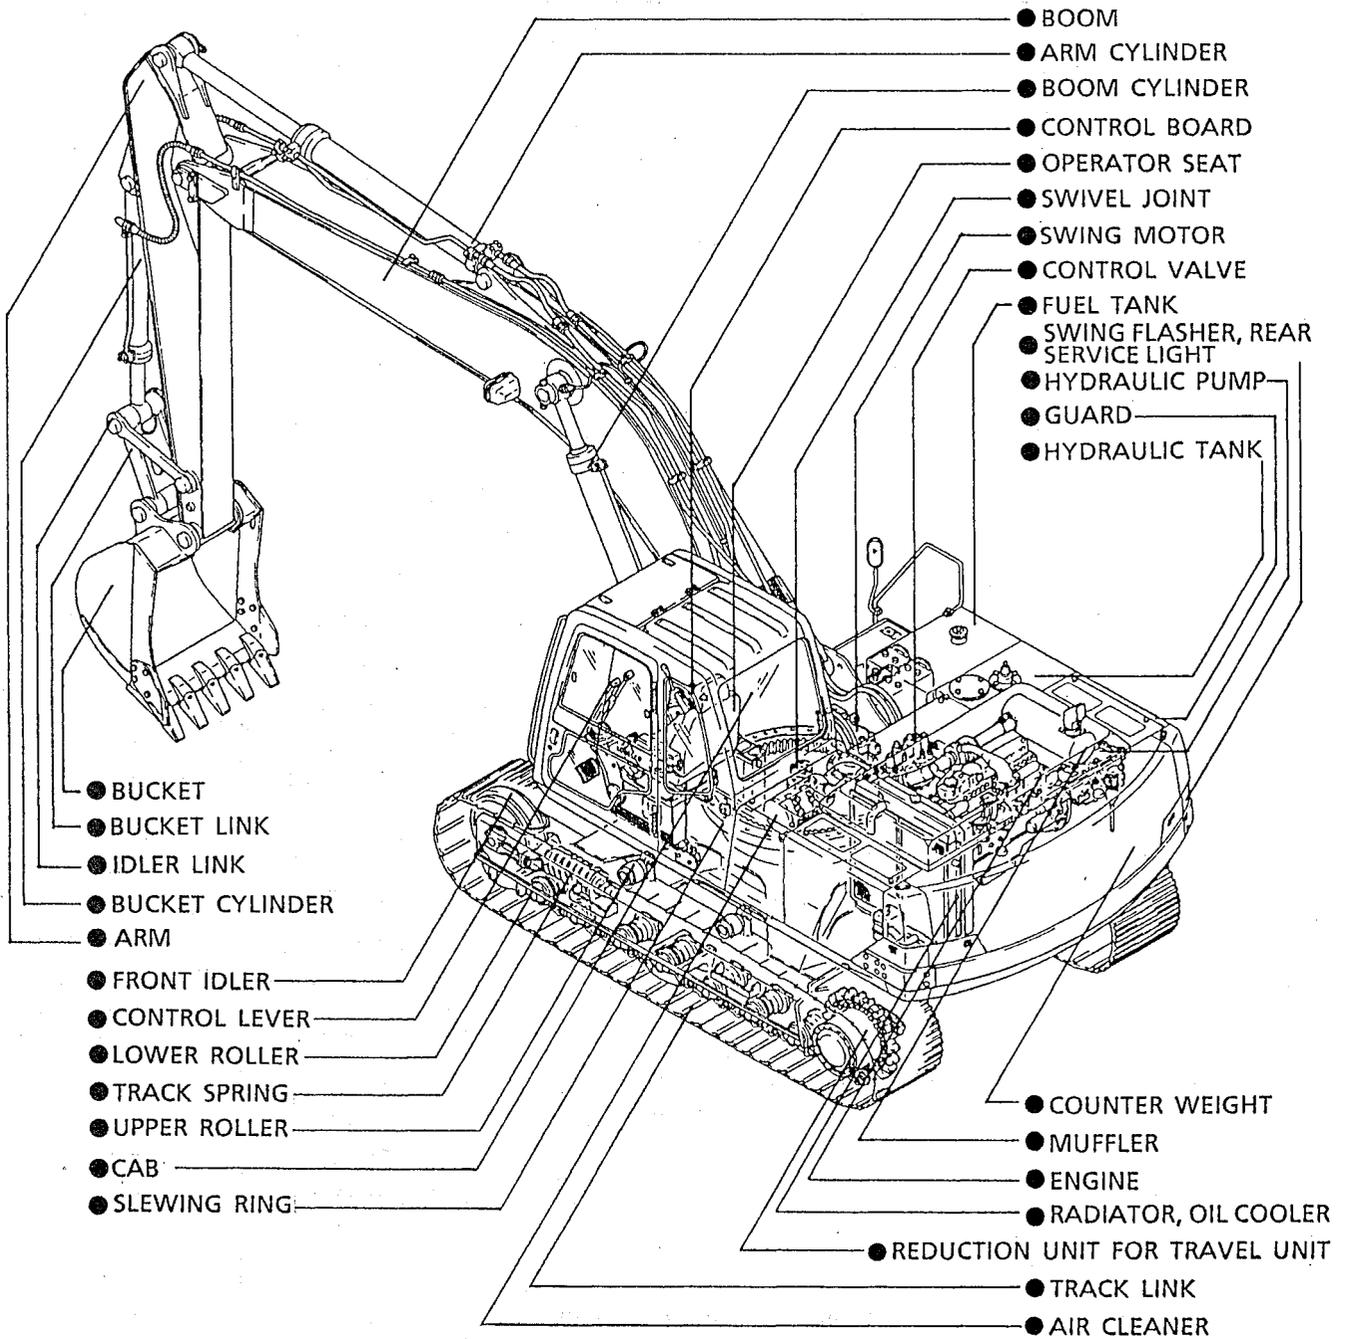

## 2. WEIGHT OF COMPONENTS (DRY WEIGHT)

Unit : kg (lbs)


Item	Model	SK220	SK220LC
Complete machine ( std Export 600mm (24") shoe )		22,900(50,500)	23,500(51,800)
1. Upper frame assy (incl. 1.1~1.9)		9,980(22,000)	←
1.1 · Counter-weight		4,460(9,800)	←
1.2 · Cab		260(570)	←
1.3 · Boom cylinder		※ 220(490) × 2	←
1.4 · Engine, radiator		※ 660(1,460)	←
1.5 · Pump assy		260(570)	←
1.6 · Control valve		130(290)	←
1.7 · Fuel tank		※ 84(190)	←
1.8 · Hydraulic tank		※ 190(420)	←
1.9 · Swing motor & reduction unit		340(750)	←
2. Lower frame assy (incl. 2.1~2.9)		8,860(19,500)	9,460(20,900)
2.1 · Slwing ring		355(780)	←
2.2 · Travel motor & reduction unit		810(1,790)	←
2.3 · Idler assy		130(280) × 2	←
2.4 · Lower roller assy		44(97) × 16	44(97) × 18
2.5 · Upper roller assy		19(42) × 4	←
2.6 · Track tension assy		155(340) × 2	←
2.7 · Sprocket		66(150) × 2	←
2.8 · Swivel joint		30(66)	←
2.9 · Track link with 600mm (24") shoe assy		3,200(7,050)	3,410(7,520)
· Track link with 700mm (28") shoe assy (Option)		3,580(7,890)	3,820(8,400)
· Track link with 800mm (32") shoe assy (Option)		4,040(8,910)	4,310(9,500)
2.9.2 · Track link		660(1,460) × 2	710(1,560) × 2
3. Attachment (incl. 3.1~3.3)		4,070(8,970)	←
3.1 · Bucket assy ( 0.9 m <sup>3</sup> (1.18cuyd) STD )		825(1,820)	←
3.2 · Arm assy ( 2.98m (9ft-9in) STD. ) (incl. following)		1,150(2,500)	←
3.2.1 · · Arm		750(1,600)	←
3.2.2 · · Bucket cylinder		※ 200(450)	←
3.2.3 · · Idler link		57(130)	←
3.2.4 · · Bucket link		110(240)	←
3.2.5 · · Pin (2 pcs for mounting the arm cylinder and the bucket)		41(90)	←
3.3 · Boom assy (includes the following :)		2,090(4,610)	←
3.3.1 · · Boom		1,720(3790)	←
3.3.2 · · Arm cylinder		※ 330(730)	←
3.3.3 · · Pin (mounting the arm)		29(64)	←
4. Oil, grease, water, etc. (incl. 4.1~4.3)		580(1,280)	←
4.1 · · Hydraulic oil, engine oil		290(640)	←
4.2 · · Fuel		260(570)	←
4.3 · · Water		32(71)	←

※ mark dry weight.

### 3. TRANSPORTATION WEIGHT


#### 3.1 PRINCIPAL PARTICULARS OF A FULLY-EQUIPPED MACHINE ON A TRAILER

	SK220	SK220LC
Total width	2,990mm [9 ft-10 in]	3,190mm [10 ft-6 in]
Weight	22.9ton[50,500 lbs](STD)	23.5ton[51,800 lbs](STD)

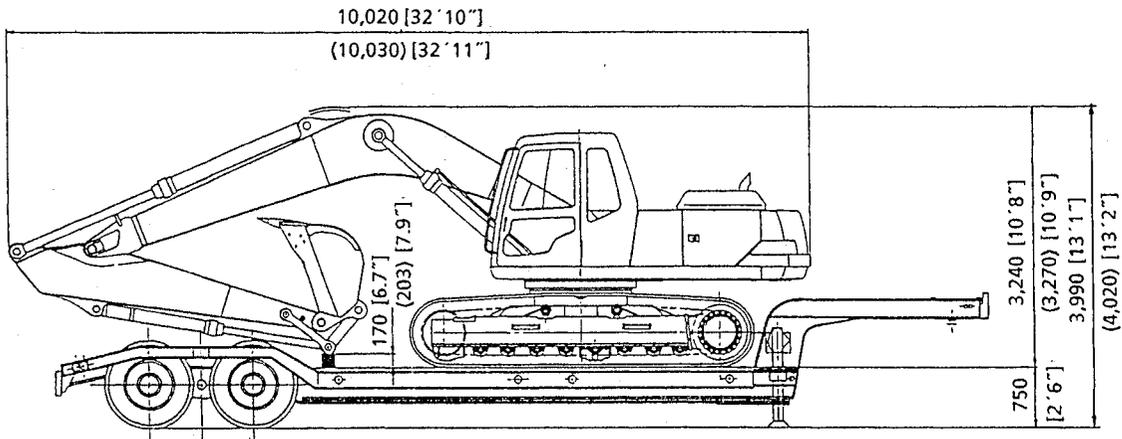

Dimensions in parentheses ( ) indicate those for SK220LC.


#### 3.2 BASIC MACHINE LIFTING

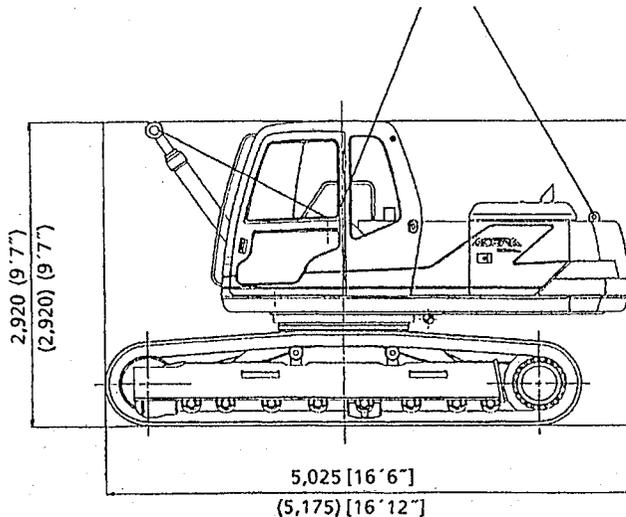

	SK220	SK220LC
Width	2,990mm (9ft-10in)	3,190mm (10ft-6in)
Weight	19ton (41,900 lbs)	19.6ton (43,200 lbs)


#### 3.3 PRINCIPAL PARTICULARS OF BOOM

	6.02m [19ft-9 in] boom
Total length x total height x total width L x H x W m [ft-in]	6.24 x 1.65 x 0.75 [20'6" x 5'5" x 2'6"]
Weight kg [lbs]	1,990 [4,390]

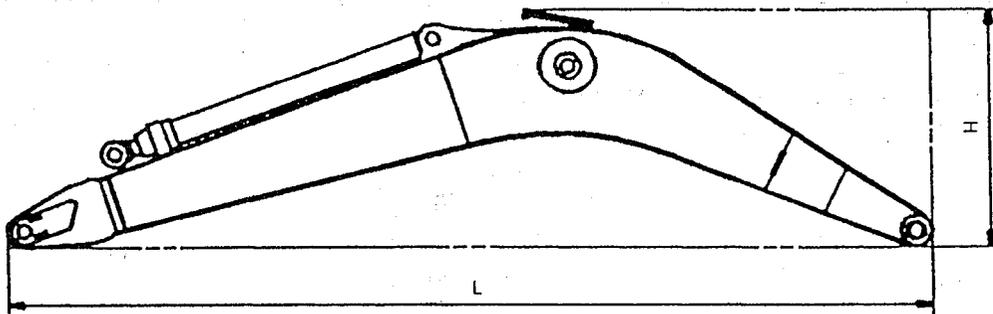


3.4 PRINCIPAL PARTICULARS OF ARM + BUCKET

Combination	2.5m[8ft-2 in] arm + 1.0m <sup>3</sup> [1.31cuyd] bucket	2.98m[9ft-9 in] arm + 0.9m <sup>3</sup> [1.18cuyd] bucket	3.66m[12ft] arm + 0.7m <sup>3</sup> [0.92cuyd] bucket
Total length x total height x total width L x H x W m [ft-in]	5.02 x 0.98 x 1.38 [16'6" x 3'3" x 4'6"]	5.46 x 0.98 x 1.27 [17'11" x 3'3" x 4'2"]	6.15 x 0.98 x 1.05 [20'2" x 3'3" x 3'5"]
Weight kg [lbs]	1,940 [4,280]	1,940 [4,280]	2,010 [4,430]

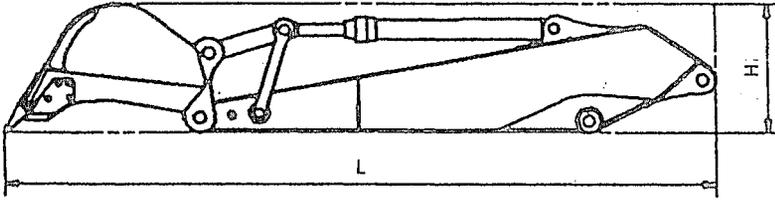

3.5 PRINCIPAL PARTICULARS OF ARM

Length of arm	2.5m[8ft-2 in] arm	2.98m[9ft-9 in] arm	3.66m[12ft] arm
Total length x total height x total width L x H x W m [ft-in]	3.59 x 0.94 x 0.43 [11'9" x 3'1" x 1'5"]	4.04 x 0.89 x 0.43 [13'3" x 2'11" x 1'5"]	4.73 x 0.92 x 0.43 [15'6" x 3'0" x 1'5"]
Weight kg [lbs]	1,060 [2,340]	1,110 [2,450]	1,270 [2,800]

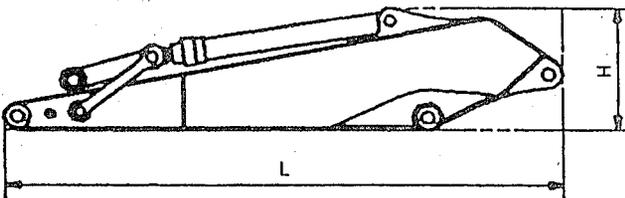


3.6 PRINCIPAL PARTICULARS OF BUCKET


Type	Hoe bucket			
Total length x total height x total width L x H x W m [ft-in]	1.49 x 1.34 x 1.05 [4'11" x 4'5" x 3'5"]	1.49 x 1.34 x 1.27 [4'11" x 4'5" x 4'2"]	1.49 x 1.34 x 1.38 [4'11" x 4'5" x 4'6"]	1.49 x 1.34 x 1.60 [4'11" x 4'5" x 5'3"]
Weight kg [lbs]	690 [1,520]	770 [1,700]	830 [1,830]	900 [1,980]
Bucket capacity m <sup>3</sup> [cuyd]	0.7 [0.92]	0.9 [1.18]	1.0 [1.31]	1.2 [1.57]

Type	Slope facing bucket	Ripper		
Total length x total height x total width L x H x W m [ft-in]	1.39 x 0.95 x 2.20 [4'7" x 3'1" x 7'3"]	1.57 x 0.89 x 0.48 [5'2" x 2'11" x 1'7"]		
Weight kg [lbs]	1,050 [2,310]	620 [1,370]		
Bucket capacity m <sup>3</sup> [cuyd]	—	—		

● Hoe bucket

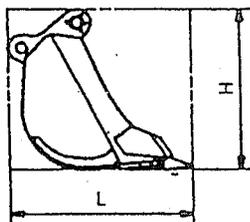

● Slope facing bucket

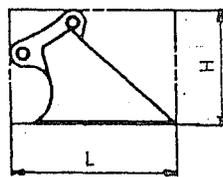

● Ripper

