

HYDRAULIC EXCAVATOR

**SHOP
MANUAL**

**model SK115SR-1E
SK135SR(LC)-1E
SK135SRL-1E**

INDEX

1	SPECIFICATION SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT

MAINTENANCE SPECIFICATION

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

KOBELCO

Book code No. S5YY0004E②

Product: Kobelco Model SK115SR-1E,SK135SR(LC)-1E,SK135SRL-1E Hydraulic Excavator Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/kobelco-model-sk115sr-1esk135src-1esk135srl-1e-hydraulic-excavator-service-repair-workshop-manual/>

Sample of manual. Download All 1040 pages at:
<https://www.arepairmanual.com/downloads/kobelco-model-sk115sr-1esk135src-1esk135srl-1e-hydraulic-excavator-service-repair-workshop-manual/>

WARNING

SAFETY

WARNING

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood / goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Cab.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.

WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other attachment to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and components.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

⚠ WARNING

13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
 14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
 15. Repairs, which require welding, should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
 16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
 17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
 18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high-pressure lines or install ones, which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pinhole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pinhole leaks.
 19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
 20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed-rotating component that has been damaged or altered should be checked for balance before reusing.
 21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.
 22. Caution should be used to avoid breathing dust that may be generated when handling components containing asbestos fibers. If this dust is inhaled, it can be hazardous to your health. Components in KOBELCO products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates and some gaskets. The asbestos used in these components is usually bound in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust, which contains asbestos, is not generated.
- If dust, which may contain asbestos, is present, there are several common sense guidelines that should be followed.
- a. Never use compressed air for cleaning.
 - b. Avoid brushing or grinding of asbestos containing materials.
 - c. For clean up, use wet methods or a vacuum equipped with a high efficiency particulate air (HEPA) filter.
 - d. Use exhaust ventilation on permanent machining jobs.
 - e. Wear an approved respirator if there is no other way to control the dust.
 - f. Comply with applicable rules and regulations for the work place.
 - g. Follow environmental rules and regulations for disposal of asbestos.
 - h. Avoid areas where asbestos particles may be in the air.

SK115SR-1E
SK135SR(LC)-1E Index of Shop Manual
SK135SRL-1E

Book Code No. Distribution Year—Month		Index No	Title	
S5YY0104E 2002-02	S5YY0104E① 2003-12	SPECIFICATION	OUTLINE	YY01
S5YY0204E 2002-02	S5YY0204E① 2003-12		SPECIFICATION	YY02
S5YY0304E 2002-02	S5YY0304E① 2003-12		ATTACHMENT DIMENSION	YY03
S5YY1104E 2002-02	S5YY1104E① 2003-12	MAINTENANCE	TOOLS	YY11
S5YY1204E 2002-02	S5YY1204E① 2003-12		STANDARD MAINTENANCE TIME SCHEDULE	YY12
S5YY1304E 2002-02	S5YY1304E① 2003-12		MAINTENANCE STANDARD AND TEST PROCEDURE	YY13
S5YY2104E 2002-02	S5YY2104E① 2003-12	SYSTEM	MECHATRO CONTROL SYSTEM	YY21
S5YY2204E 2002-02	S5YY2204E① 2003-12		HYDRAULIC SYSTEM	YY22
S5YY2304E 2002-02	S5YY2304E① 2003-12		ELECTRICAL SYSTEM	YY23
S5YY2404E 2002-02	S5YY2404E① 2003-12		COMPONENTS SYSTEM	YY24
S5YY2504E 2002-02	S5YY2504E① 2003-12		AIR-CONDITIONER SYSTEM	YY25
—	—		—	
S5YY3104E 2002-02	S5YY3104E① 2003-12	DISASSEMBLING	DISASSEMBLING AND ASSEMBLING	YY31
S5YY3204E 2002-02	S5YY3204E① 2003-12		ATTACHMENT	YY32
S5YY3304E 2002-02	S5YY3304E① 2003-12		UPPER STRUCTURE	YY33
S5YY3404E 2002-02	S5YY3404E① 2003-12		TRAVEL SYSTEM	YY34
S5YY4104E 2002-02	S5YY4104E① 2003-12	TROUBLESHOOTING	MECHATRO CONTROL	YY41
S5YY4204E 2002-02	S5YY4204E① 2003-12		HYDRAULIC	YY42
S5YY4304E 2002-02	S5YY4304E① 2003-12		ELECTRICAL	YY43
S5YY4404E 2002-02	S5YY4404E① 2003-12		ENGINE	YY44
S5YY5104E 2002-02	S5YY5104E① 2003-12	E/G	ENGINE	YY51
S5YY6304E 2002-05	S5YY6304E① 2003-12	OPT.	MOUNTING THE BREAKER AND NIBBLER & BREAKER	YY63
YV02-01701~ YY02-03001~ YH02-01301~ LK02-01041~	YV02-01701~ YY02-03001~ YH02-01301~ LK02-01041~ YV03-02194~ YY03-04464~ YH03-02077~ LK03-01107~		APPLICABLE MACHINES	

KOBELCO

Book code No.

S5 YY01 04E①

SHOP MANUAL **SK115SR-1E**
SK135SR(LC)-1E
SK135SRL-1E

YY01

OUTLINE

TABLE OF CONTENTS

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS 1
2. INTERNATIONAL UNIT CONVERSION SYSTEM 4

KOBELCO CONSTRUCTION MACHINERY CO., LTD.

Applicable Machines

SK115SR-1E YV02-01701~
 SK135SR-1E YY02-03001~
 SK135SRLC-1E YH02-01301~
 SK135SRL-1E LK02-01041~
 SK115SR-1E YV03-02194~
 SK135SR-1E YY03-04464~
 SK135SRLC-1E YH03-02077~
 SK135SRL-1E LK03-01107~

Revision	Date of Issue	Remarks
First edition	February, 2002	S5YY0104E K
First revision	December, 2003	S5YY0104E① K

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS



1.1 PREPARATION BEFORE DISASSEMBLING


- (1) Knowledge of operating procedure
Read Operator's Manual carefully to understand the operating procedure.
- (2) Cleaning machines
Clean machines of soil, mud, and dust before carrying into the repair shop.
Carrying a soiled machine into the repair shop, causes making less efficient work and damage of parts, and interferes with rust prevention and dust protection while reassembling.
- (3) Inspecting machines
Confirm the disassembling section before starting work, determine the disassembly procedure taking the conditions in work shop into account, and request to procure necessary parts in advance.
- (4) Recording
Record the following items to keep contact and prevent malfunction from recurring.
 - 1) Inspecting date, place
 - 2) Model name, Applicable machine No., Records on hour meter
 - 3) Trouble condition, place, cause
 - 4) Visible oil leakage, water leakage and damage
 - 5) Clogging of filters, etc., oil level, oil quality, oil contamination and looseness which can be inspected.
- (5) Examine the problems on the basis of operation rate with the last inspection date and records on hour meter.
- (5) Arrangement and cleaning in repair shop
 - 1) Tools required for repair work.
 - 2) Specify places to put the disassembled parts on in advance.
 - 3) Prepare oil pans for leaking oil, etc.



1.2 SAFETY WHEN DISASSEMBLING AND ASSEMBLING

- (1) Safety
 - 1) Wear appropriate clothing, safety shoes, safety helmet, goggles, and clothes with long sleeves.
 - 2) Suspend warning tag "Don't operate" from lever, and begin preliminaries before getting down to work.
 - 3) Before starting inspection and maintenance which contain the danger of being caught in machine, stop the engine.

- 4) Confirm the position of first-aid box and fire extinguisher, and also where to make contact for emergency measure and ambulance to prepare for accidents and fire.
- 5) Choose a hard, flat and safe place, and put attachment on the ground without fail.
- 6) Use crane, etc. to remove parts of heavy weight (20kg [44 lbs] or more).
- 7) Use proper tools, and change or repair defective tools.
- 8) Machine and attachment required to work in the lifting condition should be supported with supports or blocks securely.



1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT

- (1) Removing hydraulic equipment assy
 - 1) Before removing pipes, release the pressure of hydraulic oil tank, or open the cover on the return side to tank, and take out the filter.
 - 2) Put the oil in the removed pipes in reservoir taking care it is not spilled on the ground.
 - 3) Pipes with plugs or caps to prevent oil leaking, entry of dust, etc.
 - 4) Clean the outside surface of equipment, etc. before disassembling, and drain hydraulic oil and gear oil before putting them on working bench.
- (2) Disassembling hydraulic equipment
 - 1) Since performance and function of hydraulic equipment after disassembly and assembly results in immunity from responsibility on the manufacture's side, disassembly, assembly and conversion without permission are strictly prohibited.
 - 2) If it is unavoidably necessary to disassemble and convert, it should be carried out by experts or personnel authorized through service training.
 - 3) Make match mark on parts for reassembling.
 - 4) Before disassembling, read Disassembling Instruction supplied with equipment in advance, and determine if the disassembly and assembly are permitted or not.
 - 5) For parts which are required to use jig and tools, don't fail to use the specified jig and tools.
 - 6) For parts which can not be removed in the specified produre, never force removzl. First check for the cause.

- 7) The removed parts should be put in order and tagged so as to install on proper places without confusion.
 - 8) For common parts, pay attention to the quantity and places.
- (3) Inspecting parts
- 1) Check that the disassembled parts are free from adherence, interference and non-uniform working face.
 - 2) Measure the wear of parts and clearance, and record the measured values.
 - 3) If an abnormality is detected, repair or replace the parts.
- (4) Reassembling hydraulic equipment
- 1) Before cleaning, turn the fan on or open doors to ventilate air.
 - 2) Before assembly, clean parts roughly first, and then completely.
 - 3) Remove with oil by compressed air, and apply hydraulic oil or gear oil, and then assemble them.
 - 4) Replace the removed O ring, back-up rings and oil seal with new ones, and apply grease oil on them before assembling.
 - 5) Removes stain and water on the surface on which liquid sealant are applied, decrease them, and apply liquid sealant on them.
 - 6) Before assembling, remove rust preventives on new parts.
 - 7) Use special tools to fit bearings, bushing and oil seal.
 - 8) Assemble parts matching to the marks.
 - 9) After completion, check that there is no omission of parts.

- (5) Installing hydraulic equipment
- 1) Confirm hydraulic oil and lubrication oil.
 - 2) Air release is required in the following cases ;
 - a. Change of hydraulic oil
 - b. Replacement of parts on suction pipe side
 - c. Removing and attaching hydraulic pump
 - d. Removing and attaching swing motor
 - e. Removing and attaching travel motor
 - f. Removing and attaching hydraulic cylinder



⚠ If hydraulic oil and lubricating oil are not filled and also air bleed is not performed, the hydraulic equipment may be damaged.

- 3) For air bleed of hydraulic pump and swing motor, loosen drain plug on the upper part, start engine, and run in low idling, then bleed air until hydraulic oil is oozed out. After completion of air bleed, tighten plug securely.
- 4) For air bleed of travel motor and hydraulic cylinder, starts engine and operate it for 10 minutes or more at no-load and low speed.

⚠ For cylinder, don't move it to the stroke end at beginning.

- 5) Air in pilot circuit can be bled out by only operating digging, swing and traveling motions thoroughly.
- 6) Check hydraulic oil level.
Move attachments to hydraulic oil check position, and check hydraulic oil level of tank. Refill oil if the oil level is lower than the minimum level.

How to check oil level of hydraulic oil tank

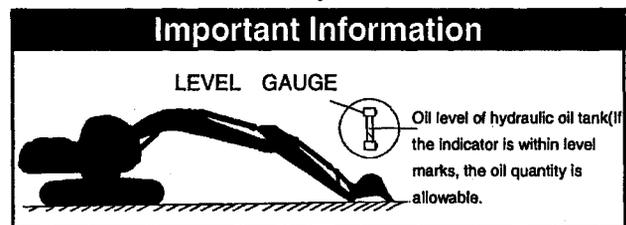

1.4 ELECTRICAL EQUIPMENT

- (1) The disassembly of electrical equipment is not allowed.
- (2) Handle equipment with care so as not to drop it or bump it.
- (3) Connector should be removed by unlocking while holding the connector.
Never stress in tension to the caulked section by pulling wire.
- (4) Check that connector is connected and locked completely.
- (5) Switch key off before removing and connecting connector
- (6) Switch key off before touching terminals of starter and alternator.
- (7) Remove battery grounding terminal before beginning work close to battery and battery relay with tools.
- (8) Wash machine with care so as not to splash water on electrical equipment and connector.

- (9) When water has entered in the waterproofed connector, the removing of water is not easy. So check the removed waterproofed connector with care to protect it from entry of water. If moisture adheres on it, dry it completely before connecting.



Battery electrolyte is dangerous.

The battery electrolyte is dilute sulfuric acid, and causes scald and loss of eyesight by adhering on eyes, skin and clothes. When the electrolyte has adhered on them, take an emergency measure immediately and see a doctor for medical advice.

- o When it has adhered on skin ;
Wash with soap and water.
- o When it has got in eyes ;
Wash in water for 10 minutes or more immediately.
- o When it has spilled out in large quantity ;
Use sodium bicarbonate to neutralize, or wash away with water.
- o When it was swallowed ;
Drink milk or water.
- o When it has adhered on clothes ;
Wash it immediately.



1.5 HYDRAULIC PARTS

1) O ring

- Check that O ring is free from flaw and has elasticity before fitting.
- Even if the size of O ring is equal, the usage differs, for example in dynamic and static sections, the rubber hardness also differs according to the pressure force, and also the quality differs depending on the materials to be seated. So, choose proper O ring.
- Fit O ring so as to be free from distortion and bend.
- Floating seal should be put in pairs.

2) Flexible hose (F hose)

- Even if the connector and length of hose are the same, the parts differ according to the withstanding pressure. Use proper parts.

- Tighten it to the specified torque, and check that it is free from distortion, over tension, interference, and oil leakage.

1.6 WELD REPAIR

- (1) The weld repair should be carried out by authorized personnel in the specified procedure after disconnecting the grounding cable of battery. If the grounding cable is not disconnected, the electrical equipment may be damaged.
- (2) Remove parts which may cause flame due to the entry of spark beforehand.
- (3) Repair attachments which are damaged, giving particular attention to the plated section of piston rod to protect it from sparks, and don't fail to cover the section with fire clothes.

1.7 ENVIRONMENTAL ISSUES

- (1) Engine should be started and operated in the place where air can be sufficiently ventilated.
- (2) Industrial waste disposal
The following parts follows the regulation.
Waste oil, waste container
Battery
- (3) Asbestos parts
Breathing dust that may be generated when handling components containing asbestos fibers raises danger of getting lung cancer. Don't raise dust by compressed air and breath it.

Parts to be handled with care :

Brake parts, gasket, etc.

- (4) Precautions for handling hydraulic oil
Hydraulic oil may cause inflammation of eyes. Wear goggles to protect eyes on handling it.
 - o When it has got in eyes ;
Wash eyes with water until the stimulus is gone.
 - o When breathed dust ;
Immediately see a doctor for medical advice.
 - o When it has adhered on skin ;
Wash with soap and water.

(5) Others

For spare parts, grease and oil, use KOBELCO genuine ones.

2. INTERNATIONAL UNIT CONVERSION SYSTEM

Introduction

Although this manual uses the JIS unit system. If you need SI unit, refer to following international system of units.


Given hereinunder are an excerpt of the units that are related to this manual :

1. Etymology of SI Units

French : Le Système International d' Unitès

English: International System of Units

2. Construction of SI Unit System

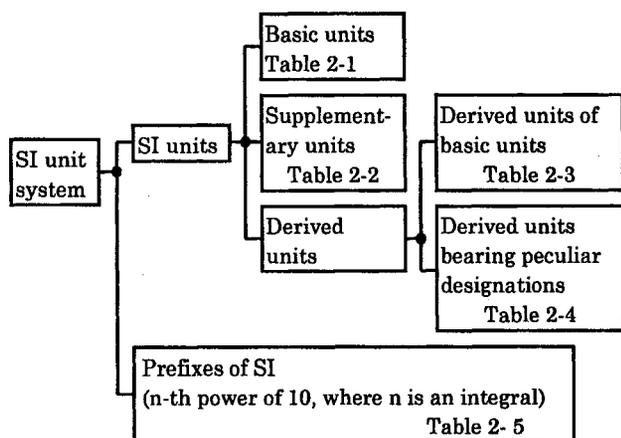

(1) Basic Units

Table 2-1

QUANTITIES	DESIGNATION	SIGN
Length	Meter	m
Mass	Kilogram	kg
Time	Second	s
Current	Ampere	A
Thermodynamic temperature	Kelvin	K
Gram molecule	Mol	mol
Luminous intensity	Candela	cd

(2) Supplementary Units

Table 2-2

QUANTITIES	DESIGNATION	SIGN
Plane angle	Radian	rad
Solid angle	Steradian	sr

(3) Derived Units of Basic Units

Table 2-3

QUANTITIES	DESIGNATION	SIGN
Area	Square meter	m ²
Volume	Cubic meter	m ³
Velocity	Meter per second	m/s
Acceleration	Meter per second / second	m/s ²
Density	Kilogram per cubic meter	kg/m ³

(4) Derived Units bearing Peculiar Designations

Table 2-4

QUANTITIES	DESIGNATION	SIGN	DERIVED UNIT
Frequency	Hertz	Hz	1Hz=1s ⁻¹
Force	Newton	N	1N=1kgf·m/s ²
Pressure, Stress	Pascal	Pa	1Pa=1N/m ²
Energy Work, Quantity of heat	Joule	J	1J=1N·m
Power Motive power, Electric power	Watt	W	1W=1J/s
Charge, Quantity of electricity	Coulomb	C	1C=1A·s
Potential Voltage, Electromotive force	Volt	V	1V=1J/C (1W/A)
Quantity of static electricity Capacitance	Farad	F	1F=1C/V
Electric resistance	Ohm	Ω	1Ω=1V/A
Celcius temperature	Celcius degree or degree	℃	
Illuminance	lux	ℓX	1. ℓX=1 ℓm/m ²

(5) Prefixes of SI

Table 2-5

PREFIX		POWER
DESIGNATION	SIGN	
Giga-	G	10 ⁹
Mega-	M	10 ⁶
Kilo-	k	10 ³
Hecto-	h	10 ²
Deca-	da	10
Deci-	d	10 ⁻¹
Centi-	c	10 ⁻²
Milli-	m	10 ⁻³
Micro-	μ	10 ⁻⁶
Nano-	n	10 ⁻⁹
Pico-	p	10 ⁻¹²

(6) Unit Conversion Table

Table 2-6

QUANTITIES	JIS	SI	REMARKS
Mass	kgf	kg	
Force	kgf	10N	9.807N
Torque	kgf·m	10N·m	9.807N·m
Pressure	kgf/cm ²	0.1MPa	0.098MPa
Motive power	PS	0.7355kW	
Revolution	rpm	min ⁻¹	r/min ※1

※1 Units that are allowed to use

KOBELCO

Book code No.

S5 YY02_{04E}①

SHOP MANUAL **SK115SR-1E** **SK135SR(LC)-1E** **SK135SRL-1E**

YY02

SPECIFICATION

TABLE OF CONTENTS

1. NAME OF COMPONENTS	1
2. GENERAL DIMENSION	2
3. WEIGHT OF COMPONENTS	3
4. TRANSPORTATION DIMENSION AND WEIGHT	4
5. SPECIFICATIONS AND PERFORMANCE	12
6. TYPE OF CRAWLER	14
7. TYPE OF BUCKET	16
8. COMBINATIONS OF ATTACHMENT	17
9. ENGINE SPECIFICATION	18


KOBELCO CONSTRUCTION MACHINERY CO., LTD.

Applicable Machines

SK115SR-1E YV02-01701~
 SK135SR-1E YY02-03001~
 SK135SRLC-1E YH02-01301~
 SK135SRL-1E LK02-01041~
 SK115SR-1E YV03-02194~
 SK135SR-1E YY03-04464~
 SK135SRLC-1E YH03-02077~
 SK135SRL-1E LK03-01107~

Revision	Date of Issue	Remarks
First edition	February, 2002	S5YY0204E K
First revision	December, 2003	S5YY0204E① K


1. NAME OF COMPONENTS

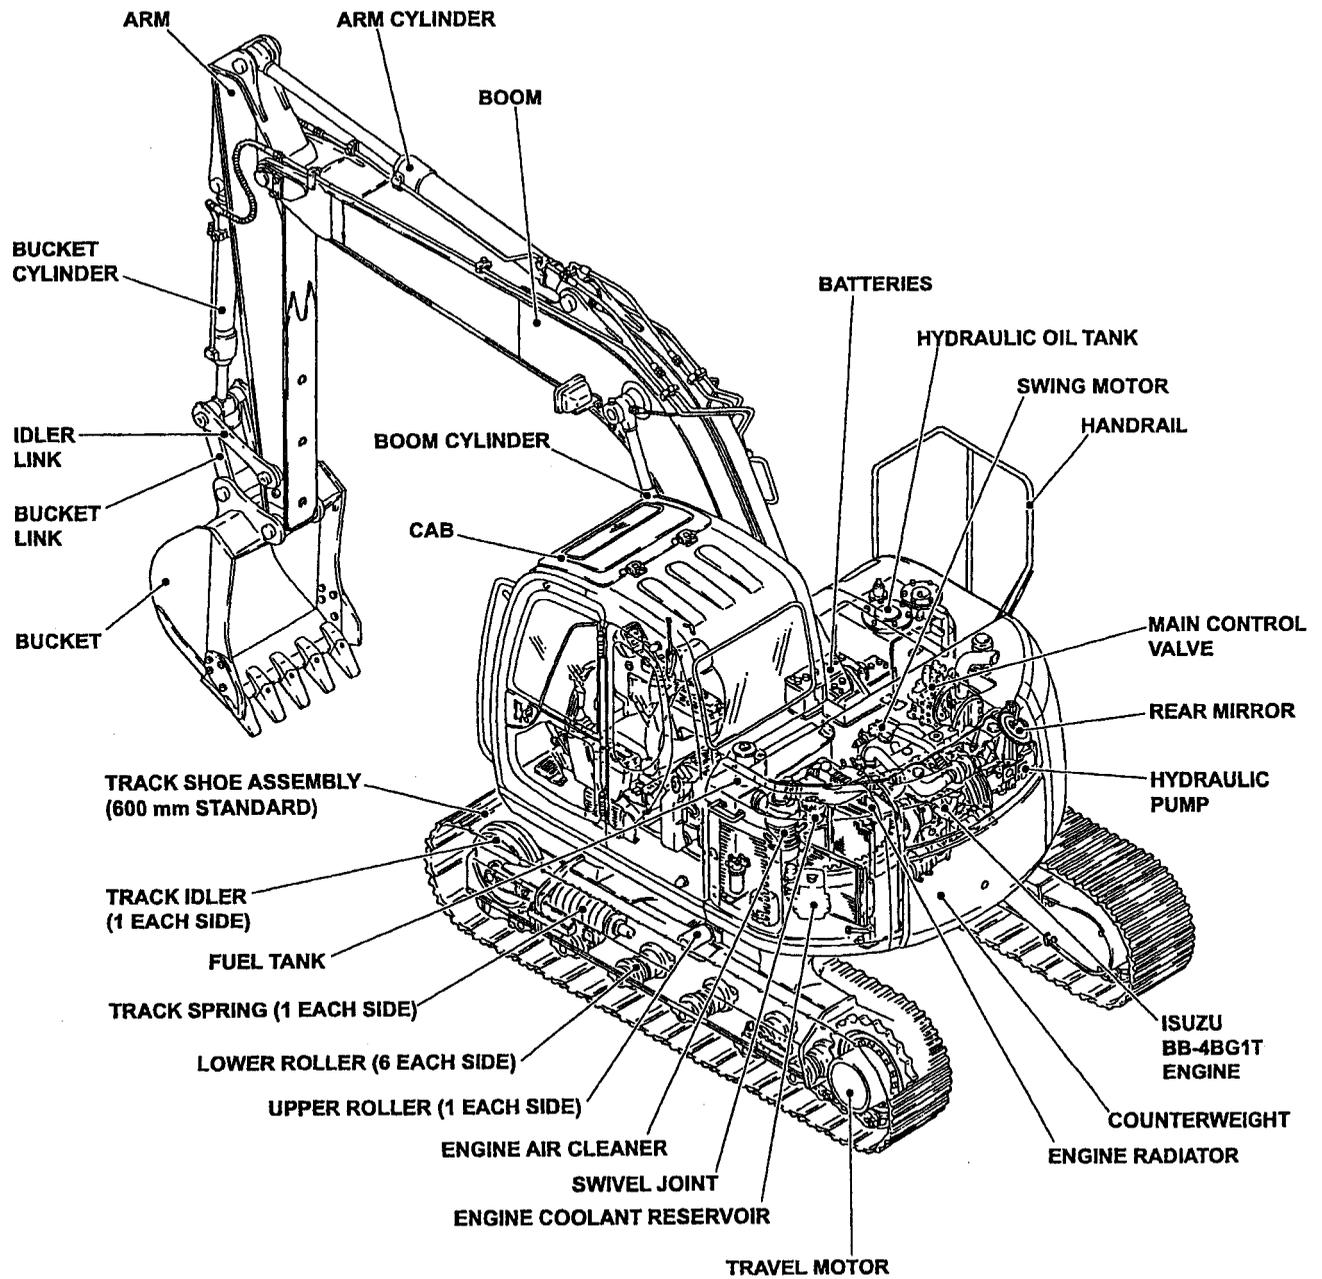

2. GENERAL DIMENSION

2.1 SK135SR (LC)-1E


4.6m (15' 1") Boom+2.45m (8') Arm+0.5m³ (0.65cu.yd) Bucket+600mm (23.6") Shoe

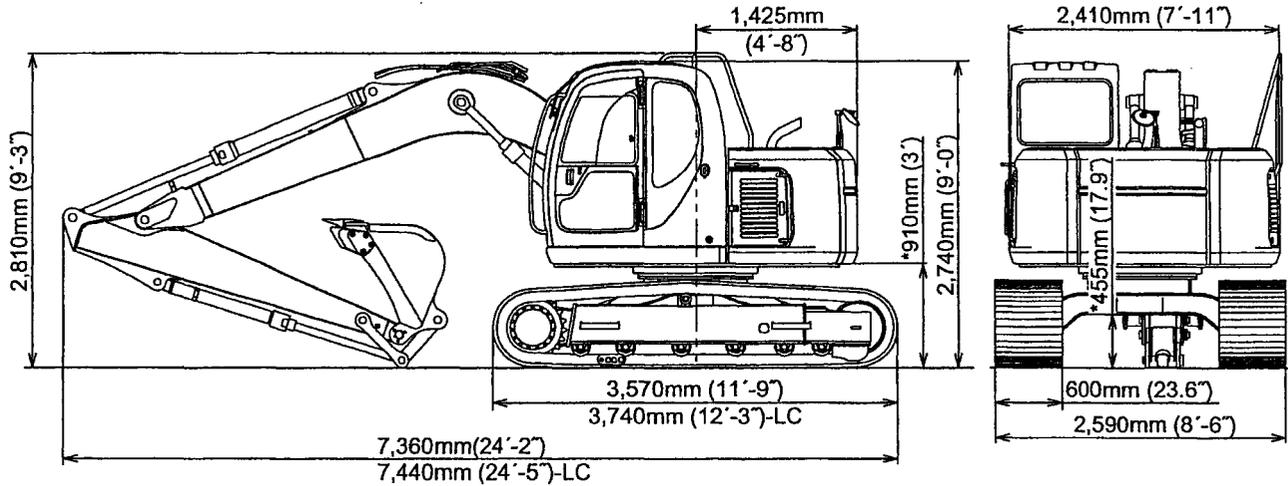

*Marked dimensions do not include height of shoe lug.

2.2 SK135SRL-1E


4.6m (15' 1") Boom+2.45m (8') Arm+0.5m³ (0.65cu.yd) Bucket+700mm (28") Shoe

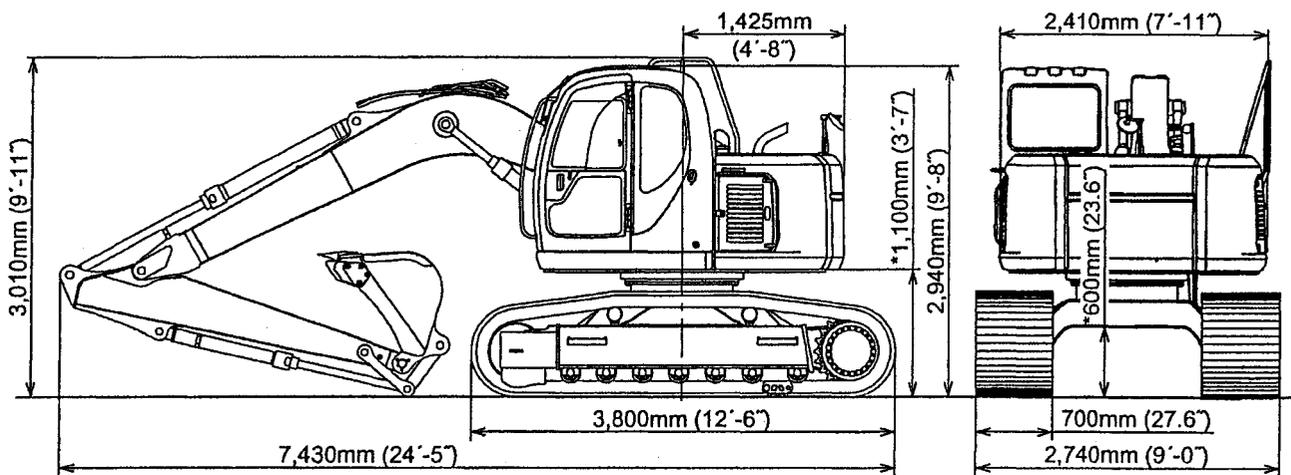

*Marked dimensions do not include height of shoe lug.

2.3 SK115SR-1E

4.26m (14') Boom+2.2m (7' 3") Arm+0.45m³ (0.59cu.yd) Bucket+600mm (23.6") Shoe

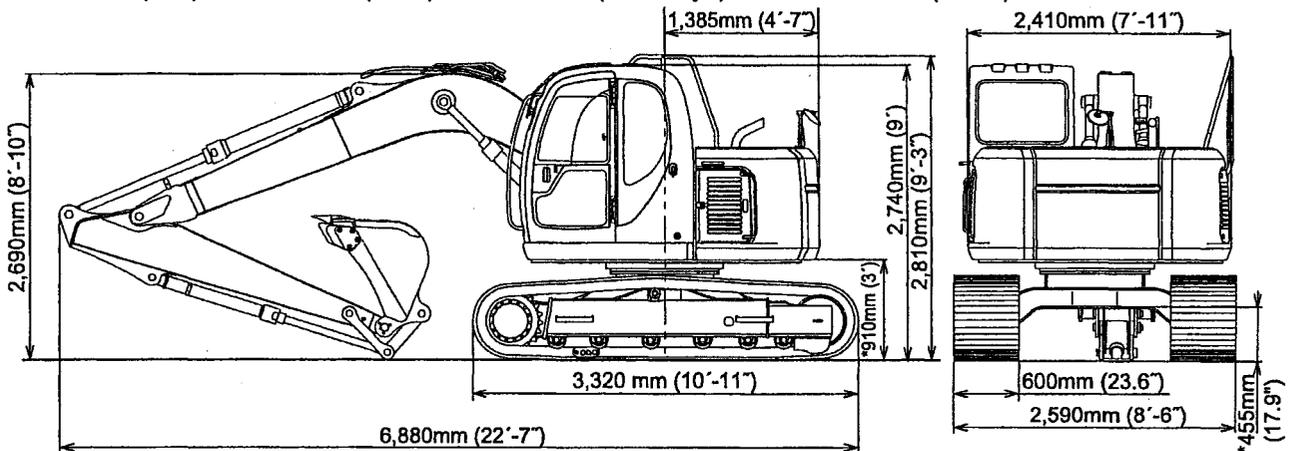

*Marked dimensions do not include height of shoe lug.

3. WEIGHT OF COMPONENTS

Unit : kg (lbs)

Item	Model	SK135SR-1E	SK135SRLC-1E [SK135SRL-1E]	SK115SR-1E
Machine complete		13,700(30,200)	13,900(30,640) [15,700(34,610)]	11,900(26,230)
1. Upper frame assy (including the following :)		7,330(16,160)	←	6,080(13,400)
1.1 Counterweight		3,490(7,690)	←	2,340(5,160)
Counterweight (Add-on)		600(1,320)	←	←
1.2 Cab		210(460)	←	←
1.3 Engine ※		368(810)	←	363(800)
1.4 Hydraulic oil tank ※		91(200)	←	←
1.5 Fuel tank ※		53(116)	←	←
1.6 Slewing motor (including reduction unit)		110(240)	←	←
1.7 Control valve		122(270)	←	114(251)
1.8 Boom cylinder ※		107(235)×2	←	84(235)×2
1.9 Pin (2pcs. for mounting boom)		37(82)	←	←
1.10 Pump ※		95(210)	←	←
1.11 Radiator ※		77(170)	←	65(143)
2. Lower frame assy (including the following :)		4,450(9,810)	4,650(10,250) [6,750(14,880)]	4,140(9,130)
2.1 Slewing bearing		149(330)	←	←
2.2 Travel motor (including reduction unit)		144(320)×2	←	←
2.3 Upper roller		8(18)×2	8(18)×4	8(18)×2
2.4 Lower roller		27(60)×12	27(60)×14	27(60)×12
2.5 Front idler		70(150)×2	←	←
2.6 Track tension adjuster		57(125)×2	←	←
2.7 Sprocket		36(79)×2	←	←
2.8 Swivel joint		30(66)	←	←
2.9 Track link with 700mm (28in) shoes assy		—	[1,340 (2,950)]×2	—
Track link with 600mm (24in) shoes assy		870(1,920)×2	915(2,020)×2	760(1,670)×2
Track link with 500mm (20in) shoes assy		730(1,610)×2	—	680(1,500)×2
2.9.1 Track link assy		290(640)×2	300(660)×2 [465(1,040)]×2	270(590)×2
2.10 Dozer blade (OPT)		470(1,040)	←	←
2.11 Dozer blade cylinder (OPT) ※		57(125)×2	←	←
3. Attachment		1,920(4,230)	←	1,680(3,700)
3.1 Bucket assy		380(840)	←	340(750)
3.2 Arm assy (including the following :)		580(1,280)	←	490(1,080)
3.2.1 Arm		374(820)	←	300(660)
3.2.2 Bucket cylinder ※		90(198)	←	87(190)
3.2.3 Idler link		12(26)×2	←	←
3.2.4 Bucket link		43(95)	←	35(77)
3.2.5 Attachment pin		36(79)	←	24(52)
3.3 Boom assy (Including the following :)		940(2,070)	←	850(1,870)
3.3.1 Boom		740(1,630)	←	680(1,500)
3.3.2 Arm cylinder ※		149(330)	←	128(280)
3.3.3 Pin (Mounting arm • Mounting arm cylinder)		29(64)	←	27(59)
4. Lubricant and water (including the following :)		310(680)	←	←
4.1 Hydraulic oil		138(304)	←	←
4.2 Engine oil		11(24)	←	←
4.3 Fuel + water		139(310) + 18(40)	←	←


NOTE : Numerical values marked ※ indicate the dry weight.

4. TRANSPORTATION DIMENSION AND WEIGHT

SK135SR(LC)-1E SK135SRL-1E


● OVERALL DIMENSIONS OF A STD COMPLETE MACHINE ON A TRAILER

Item	Model	SK135SR-1E	SK135SRLC-1E	SK135SRL-1E
Shoe & Width	mm(ft-in)	600mm (24") 2,590 (8' 6")		800mm (32") 2,790 (9' 2")
Weight	kg(lbs)	13,700 (30,200)	13,900 (30,600)	16,000 (35,300)

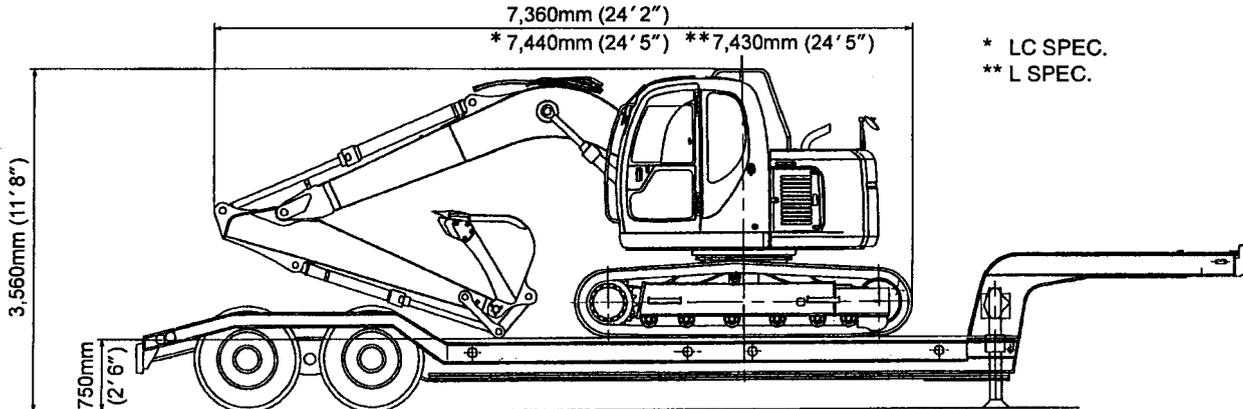

● OVERALL DIMENSIONS OF WITHOUT ARM AND BUCKET


Combination	Type	A : Shoe width mm (ft-in)	L : Length mm (ft-in)	H : Height mm (ft-in)	W : Width mm (ft-in)	Weight kg (lbs)
Without Arm and Bucket	STD	600 (24")	6,510 (21' 4")	2,740 (8' 12")	2,590 (8' 6")	12,720 (28,000)
	LC	600 (24")	6,590 (21' 7")	2,940 (9' 8")	2,840 (9' 4")	12,920 (28,500)
	L	800 (32")	6,620 (21' 9")	↑	↑	14,920 (32,900)

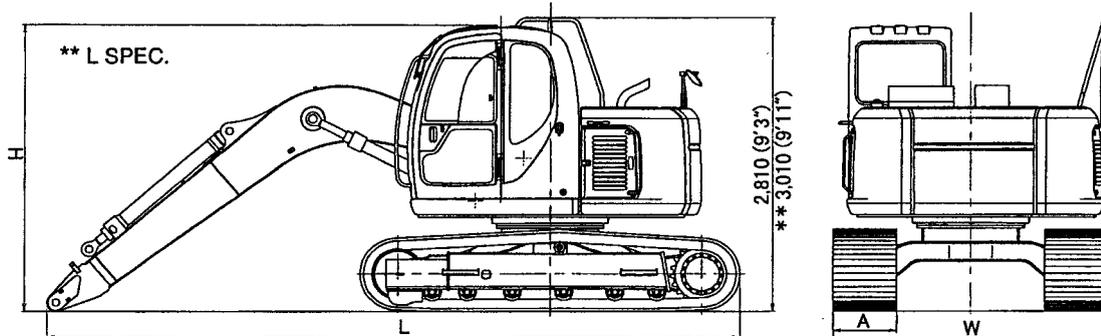

● OVERALL DIMENSIONS OF WITHOUT BOOM, ARM AND BUCKET


Combination	Type	A : Shoe width mm (ft-in)	L : Length mm (ft-in)	H : Height mm (ft-in)	W : Width mm (ft-in)	Weight kg (lbs)
Without Arm and Bucket	STD	600 (24")	3,570 (11' 9")	2,740 (8' 12")	2,590 (8' 6")	11,780 (26,000)
	LC	600 (24")	3,740 (12' 3")	2,940 (9' 8")	2,840 (9' 4")	11,980 (26,400)
	L	800 (32")	3,800 (12' 6")	↑	↑	13,980 (30,800)

** L SPEC.

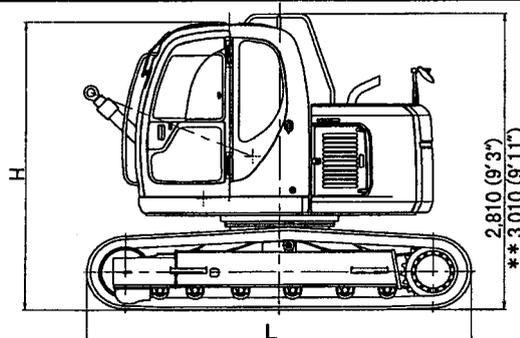


● OVERALL DIMENSIONS OF BOOM

Item	Type	4.6m (15ft-1in) Boom
Length×Height×Width L×H×W	m(ft-in)	4.76×1.39×0.57 (15' 7"×4' 7"×1' 10")
Weight	kg (lbs)	940 (2,080)

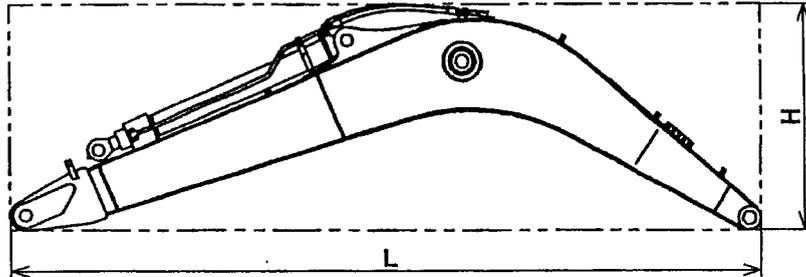


● OVERALL DIMENSIONS OF ARM+BUCKET

Item	Type	2.45m (8ft) Arm+0.5m ³ (0.65cu·yd) Bucket
Length×Height×Width L×H×W	m(ft-in)	4.36×0.81×1.00 (14' 4"×2' 8"×3' 3")
Weight	kg (lbs)	970(2,140)

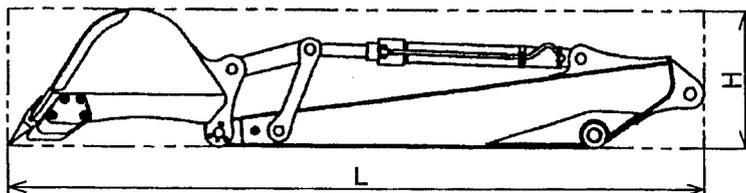

● OVERALL DIMENSIONS OF ARM

Item	Type	2.45m (8ft) Arm
Length×Height×Width L×H×W	m(ft-in)	3.20×0.61×0.37 (10' 6"×2' ×1' 3")
Weight	kg (lbs)	580(1,280)

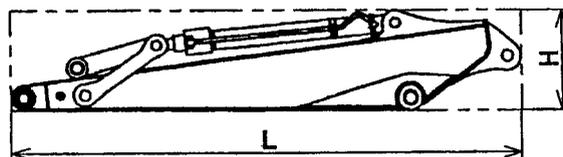


● OVERALL DIMENSIONS OF BUCKET


Type	Hoe bucket			
Length× Height×Width L×H×W m (ft-in)	1.19×1.07×0.70 (3' 11"×3' 6"×2' 4")	1.19×1.07×0.70 (3' 11"×3' 6"×2' 4")	1.19×1.07×0.80 (3' 11"×3' 6"×2' 7")	1.19×1.07×0.90 (3' 11"×3' 6"×2' 11")
Weight kg (lbs)	280 (620)	300 (660)	340 (750)	350 (770)
Bucket capacity m ³ (cu·yd)	0.24 (0.31)	0.31 (0.41)	0.38 (0.50)	0.45 (0.59)

Type	Hoe bucket		V-bucket	Slope finishing bucket
Length× Height×Width L×H×W m (ft-in)	1.19×1.07×1.00 (3' 11"×3' 6"×3' 3")	1.19×1.07×1.10 (3' 11"×3' 6"×3' 7")	1.25×0.65×1.79 (4' 1"×2' 2"×5' 10")	1.01×0.79×1.80 (3' 4"×2' 7"×5' 11")
Weight kg (lbs)	380 (840)	400 (880)	290 (640)	550 (1,210)
Bucket capacity m ³ (cu·yd)	STD 0.50 (0.65)	0.57 (0.75)	0.46 (0.60)	0.52 (0.68)


● Hoe bucket

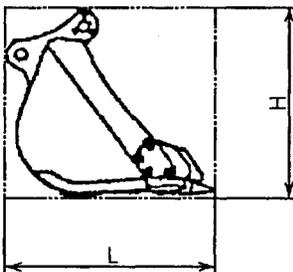

● V-bucket

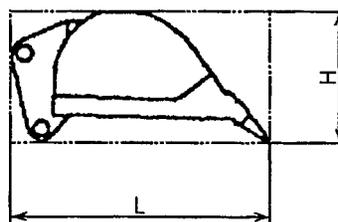


● Slope finishing bucket

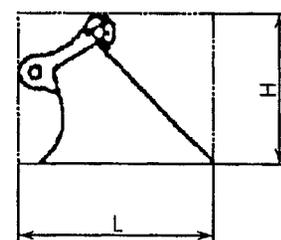

SK115SR-1E


● **OVERALL DIMENSIONS OF A COMPLETE MACHINE ON A TRAILER**

Item	Type	4.26m (14ft) Boom+2.2m (7ft-3in) Arm+ 0.45m ³ (0.59cu·yd) Bucket+600mm (23.6in) Shoes
Width	mm(ft-in)	2,590 (8' 6")
Weight	kg(lbs)	11,900 (26,230)

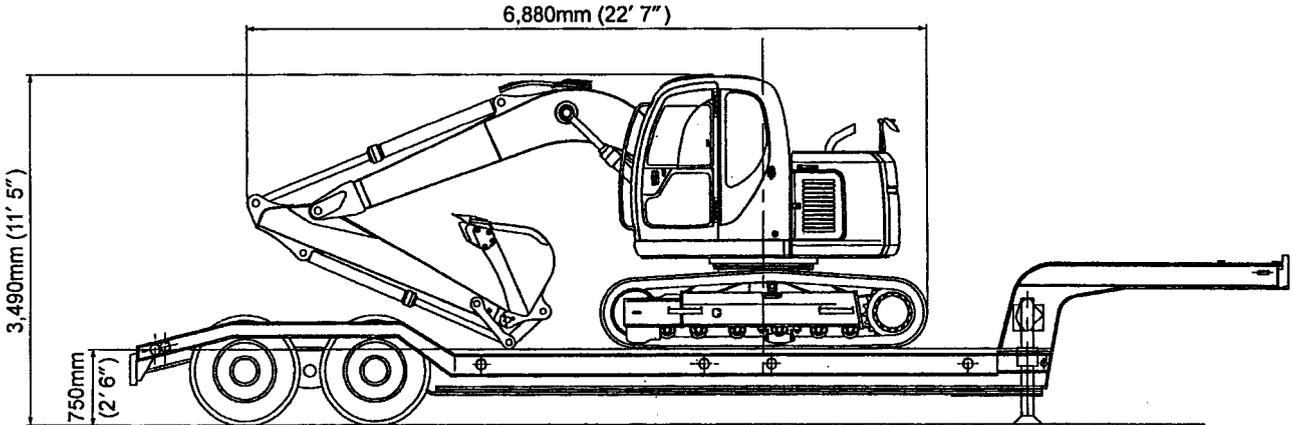


● **OVERALL DIMENSIONS OF WITHOUT ARM AND BUCKET**

Combination	Type	A : Shoe width mm (ft-in)	L : Length mm (ft-in)	H : Height mm (ft-in)	W : Width mm (ft-in)	Weight kg (lbs)
Without arm and bucket		600 (24")	6,030 (19' 9")	2,740 (9')	2,590 (8' 6")	11,070 (24,400)
		500 (20")	6,030 (19' 9")	2,740 (9')	2,490 (8' 2")	10,990 (24,200)

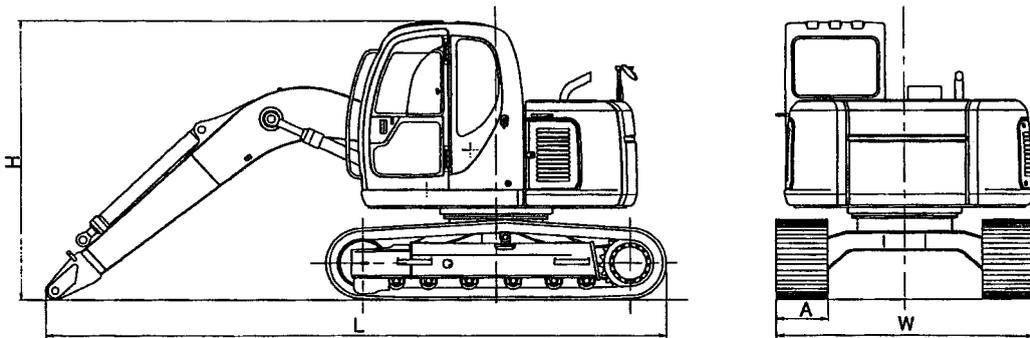


● **OVERALL DIMENSIONS OF WITHOUT BOOM, ARM AND BUCKET**

Combination	Type	A : Shoe width mm (ft-in)	L : Length mm (ft-in)	H : Height mm (ft-in)	W : Width mm (ft-in)	Weight kg (lbs)
Without boom, arm and bucket		600 (24")	3,320 (10' 11")	2,740 (9')	2,590 (8' 6")	10,220 (22,500)
		500 (20")	3,320 (10' 11")	2,740 (9')	2,490 (8' 2")	10,140 (22,400)

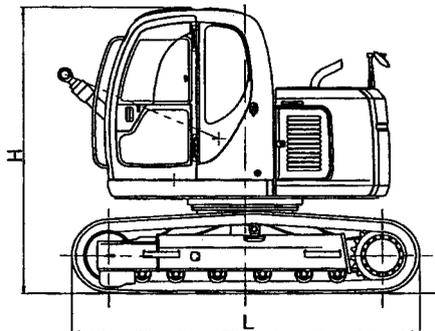


● OVERALL DIMENSIONS OF BOOM

Item	Type	4.26m (14ft) Boom
Length×Height×Width L×H×W	m(ft-in)	4.42×1.33×0.57 (14' 6"×4' 4"×1' 10")
Weight	kg (lbs)	790 (1,740)

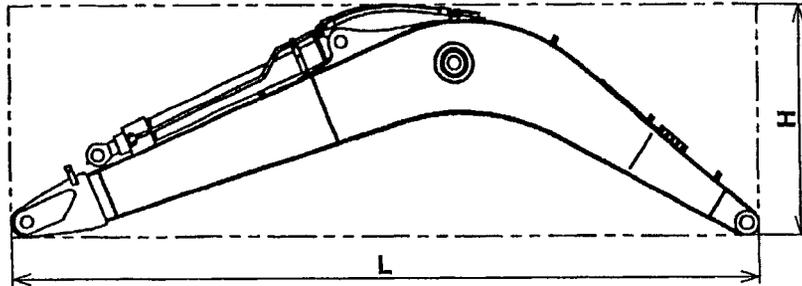


● OVERALL DIMENSIONS OF ARM+BUCKET

Item	Type	2.2m (7ft-3in) Arm+0.45m ³ (0.59cu·yd) Bucket
Length×Height×Width L×H×W	m(ft-in)	4.07×0.79×0.95 (13' 4"×2' 7"×3' 1")
Weight	kg (lbs)	820(1,810)

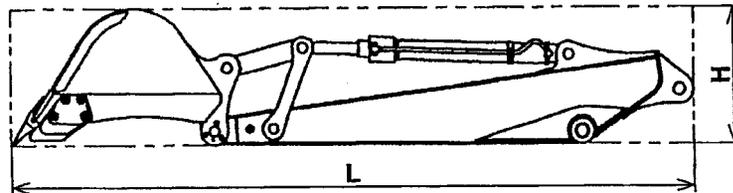

● OVERALL DIMENSIONS OF ARM

Item	Type	2.2m (7ft-3in) Arm
Length×Height×Width L×H×W	m(ft-in)	2.93×0.59×0.35 (9' 7"×1' 11"×1' 2")
Weight	kg (lbs)	480(1,060)

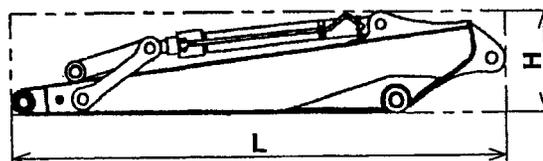


● OVERALL DIMENSIONS OF BUCKET


Type	Hoe bucket			
Length× Height×Width L×H×W m (ft-in)	1.35×0.60×0.46 (4' 5"×2' ×1' 6")	1.19×1.03×0.60 (3' 11"×3' 5"×2')	1.19×1.03×0.70 (3' 11"×3' 5"×2' 4")	1.19×1.03×0.80 (3' 11"×3' 5"×2' 7")
Weight kg (lbs)	210 (460)	260 (570)	280(620)	320 (705)
Bucket capacity m ³ (cu·yd)	0.17 (0.22)	0.23 (0.30)	0.30 (0.39)	0.37 (0.48)

Type	Hoe bucket		V-bucket	Slope finishing bucket
Length× Height×Width L×H×W m (ft-in)	1.19×1.03×0.95 (4' 5"×2' ×3' 1")	1.19×1.03×1.00 (4' 5"×2' ×3' 3")	1.29×0.64×1.81 (4' 3"×2' 1"×5' 11")	0.99×0.73×1.60 (3' 3"×2' 5"×5' 3")
Weight kg (lbs)	350 (770)	370 (820)	280(620)	480(1,060)
Bucket capacity m ³ (cu·yd)	STD 0.45(0.59)	0.51(0.67)	0.46(0.60)	0.40 (0.52)


● Hoe bucket

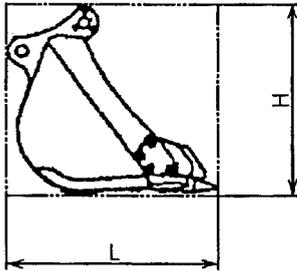

● V-bucket

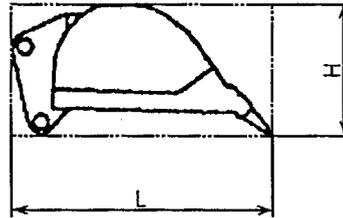


● Slope finishing bucket

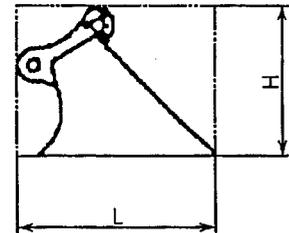


SK135SR-1E DOZER

● **OVERALL DIMENSIONS A COMPLETE MACHINE**

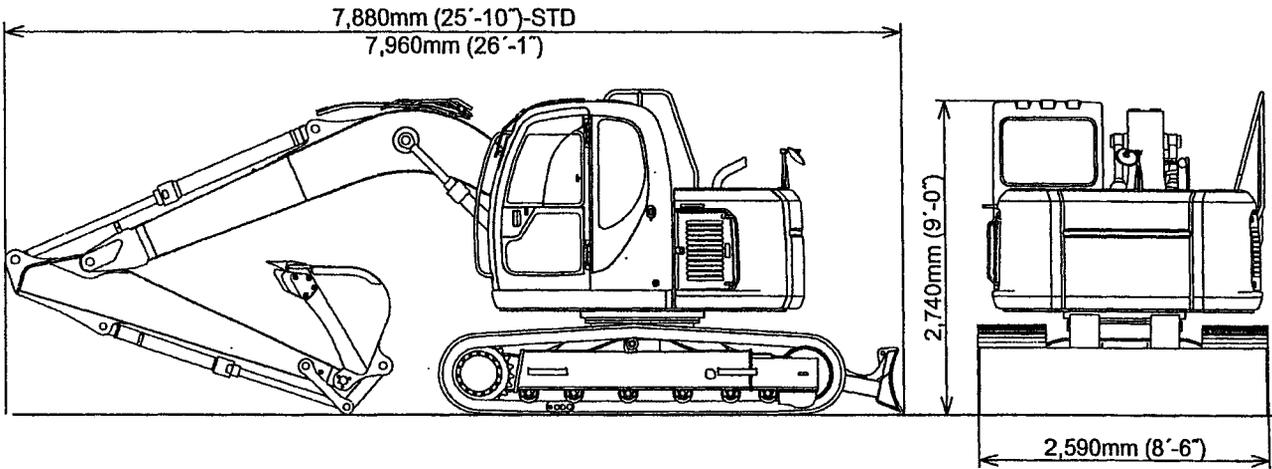


● **STRAIGHT & ANGLE DOZER SPECIFICATIONS**

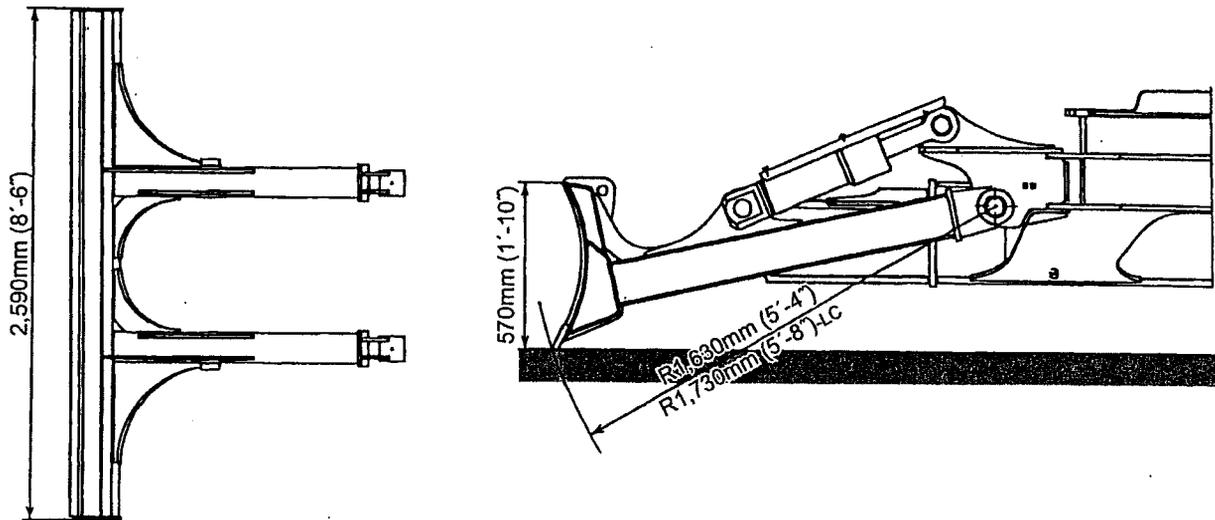


ITEM	SK135SR-1E	SK135SRLC-1E
Length (From the center of the arm fixing pin to the tip of the blade)	R1,630mm (5'4")	R1,730mm (5'8")
Width [600mm (23.6") shoe only]	2,590mm (8'6")	2,590mm (8'6")
Height	570mm (1'10")	570mm (1'10")
Weight	470kg (1,040 lb)	480kg (1,060 lb)
Set Pressure of Main Relief Valve	210kgf/cm ² (2,990pis)	210kgf/cm ² (2,990pis)
Set pressure Of Overload Relief Valve	280kgf/cm ² (3,980pis)	280kgf/cm ² (3,980pis)

SK115SR-1E DOZER

● **OVERALL DIMENSIONS A COMPLETE MACHINE**

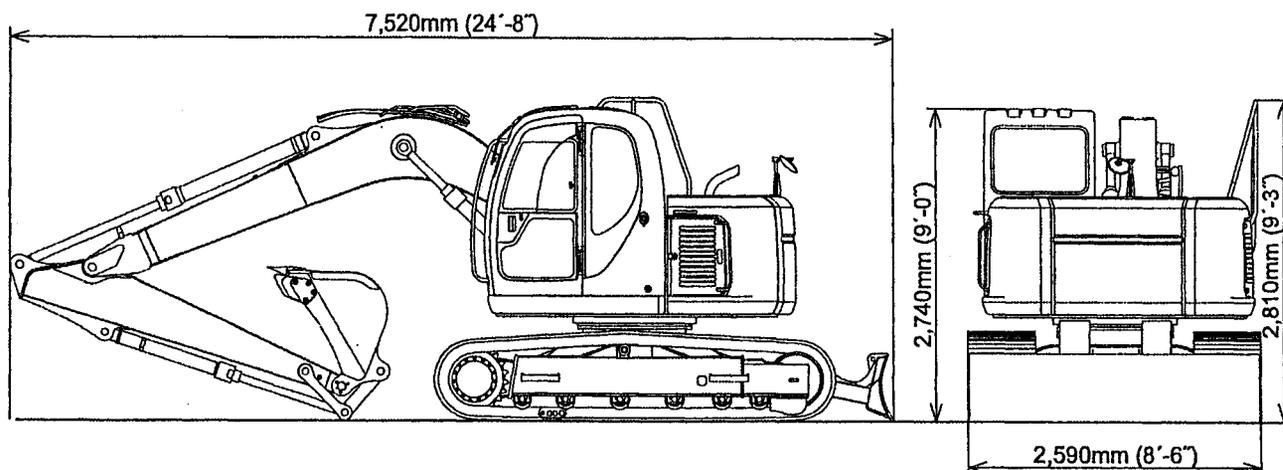

● **DOZER SPECIFICATIONS**

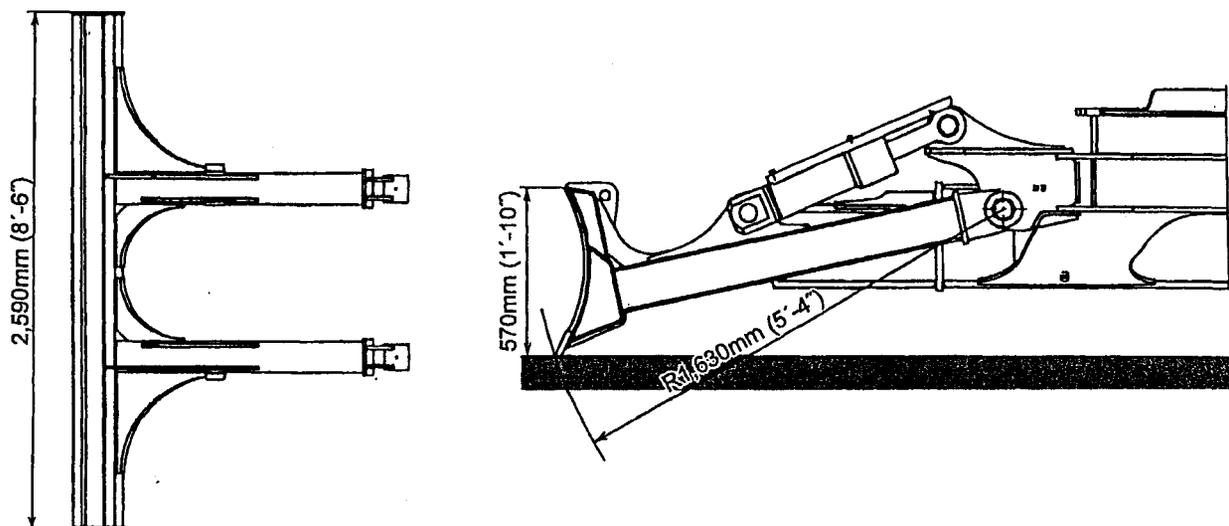

ITEM	SK115SR-1E
Length (From the center of the arm fixing pin to the tip of the blade)	R1,630mm (5'4")
Width [600mm (23. 6") shoe only]	2,590mm (8'6")
Height	570mm (1'10")
Weight	455kg (1,000 lb)
Set Pressure of Main Relief Valve	210kgf/cm ² (2,990pis)
Set pressure Of Overload Relief Valve	280kgf/cm ² (3,980pis)

5. SPECIFICATIONS AND PERFORMANCE

SK135SR(LC)-1E

SK135SRL-1E

5.1 SPEED AND CLIMBING CAPABILITY

Item	Model	SK135SR(LC)-1E, SK135SRL-1E
Swing speed		11.7rpm
TRAVEL SPEED (1-speed/2-speed)	km/h (mph)	2.8 / 5.1 (1.7 / 3.2)
Gradeability	%(degree)	70 (35)

5.2 ENGINE

Engine model	ISUZU BB-4BG1T
Type	Water-cooled, 4-cycle direct injection, turbo charged engine
Number of cylinders—Bore×Stroke	4—105mm×125mm (4.13in×4.92in)
Total displacement	4,329cc (264cu·in)
Rated output / Rotation speed	62.5kW (85PS) / 2,050rpm
Maximum torque / Rotation speed	32.4kgf·m (235 lbf·ft) / 1,600rpm
Starter	24V / 4.5kW
Alternator	24V / 50A

5.3 HYDRAULIC COMPONENTS

Hydraulic pump	Variable displacement axial piston + gear pump
Hydraulic motor (swing)	Axial piston motor
Hydraulic motor (travel)	2-speed axial piston motor
Control valve	6-spool control valve
Cylinder (Boom, Arm, and Bucket)	Double action cylinder
Oil cooler	Air-cooled type

5.4 WEIGHT

Unit : kg (lbs)

	SK135SR-1E	SK135SRLC-1E	SK135SRL-1E
Fully equipped weight	13,700 (30,200)	13,900 (30,640)	15,700 (34,610)
Upper structure	7,330 (16,160)	7,330 (16,160)	7,330 (16,160)
Lower machinery	4,450 (9,810) With 600mm (24in) shoe	4,650 (10,250) With 600mm (24in) shoe	6,750 (14,880) With 700mm (28in) shoe
Attachment (Boom+2.45m(8ft) Arm+0.5m ³ (0.65cu·yd)Bucket)	1,920 (4,230)	1,920 (4,230)	1,920 (4,230)

SK115SR-1E

5.5 SPEED AND CLIMBING CAPABILITY

Item	Model	SK115SR-1E
Swing speed		11.4rpm
TRAVEL SPEED (1-speed/2-speed)	km/h (mph)	3.5 / 6.0 (2.2 / 3.7)
Gradeability	%(degree)	70 (35)

5.6 ENGINE

Engine model	ISUZU BB—4BG1T
Type	Water-cooled 4-cycle direct injection turbo charger engine
Number of cylinders—Bore×Stroke	4—105mm×125mm (4.13in×4.92in)
Total displacement	4,329cc (264cu·in)
Rated output / Rotation speed	58.8kW (80PS) / 2,050rpm
Maximum torque / Rotation speed	30.0kgf·m (217 lbf·ft) / 1,600rpm
Starter	24V / 4.5kW
Alternator	24V / 30A

5.7 HYDRAULIC COMPONENTS

Hydraulic pump	Variable displacement axial piston + gear pump
Hydraulic motor (swing)	Axial piston motor
Hydraulic motor (travel)	2-speed axial piston motor
Control valve	6-spool control valve
Cylinder (Boom, Arm, and Bucket)	Double action cylinder
Oil cooler	Air-cooled type





5.8 WEIGHT

Unit : kg (lbs)

	SK115SR-1E
Fully equipped weight	11,900 (26,230)
Upper structure	6,080 (13,400)
Lower machinery (With grouser shoe)	4,140 (9,130) With 600mm (24in) shoe
Attachment (Boom+2.2m(7ft-3in) Arm+0.45m ³ (0.59cu·yd)Bucket)	1,680 (3,700)

6. TYPE OF CRAWLER





SK135SR(LC)-1E SK135SRL-1E

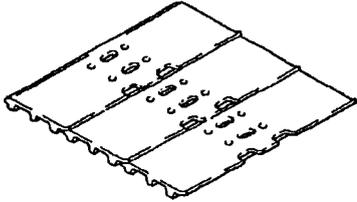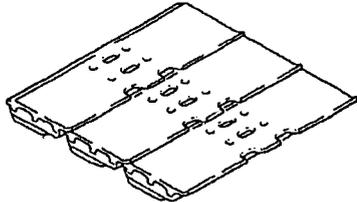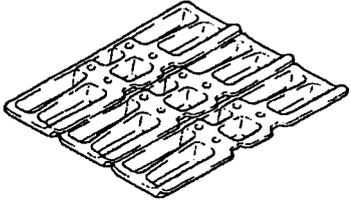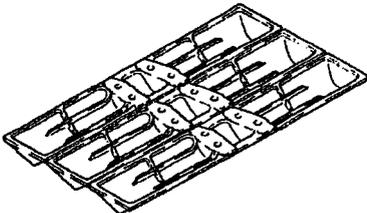Shape	Shoe width mm (in)	Overall width of crawler mm (ft-in)	Ground pressure kgf /cm ² (psi)
Grouser shoe  44 links	500 (20)	2,490 (8' 2")	0.43 (6.12)
	600 (24)	2,590 (8' 6")	0.36 (5.1)
	700 (28)	2,690 (9' 0")	0.32 (4.49)
	800 (32)	2,790 (9' 2")	0.30 (4.3)
Rubber pad shoe  44 links	500 (20)	2,490 (8' 2")	0.44 (6.26)
Flat shoe  44 links	500 (20)	2,490 (8' 2")	0.43 (6.12)
Triangle shoe  44 links	800 (32)	2,790 (9' 2")	0.28 (3.98)

NOTE :

Use grouser shoes 500mm (20in) or 600mm (24in) on rough ground (areas covered with rocks and gravel). If you drive or excavate with other shoes, this may cause shoe bending, shoe bolt looseness, and track assembly (link, roller, etc.) damage.

SK115SR-1E

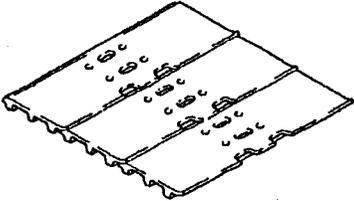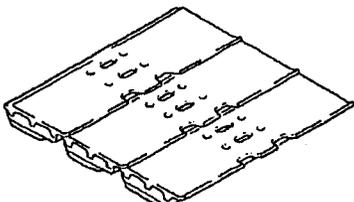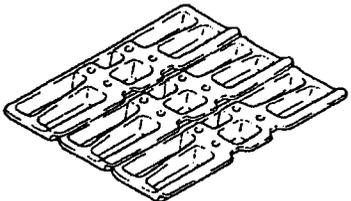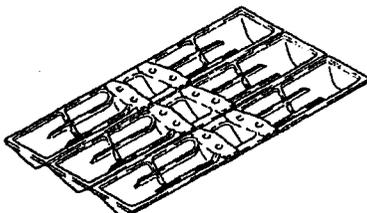Shape	Shoe width mm (in)	Overall width of crawler mm (ft-in)	Ground pressure kgf /cm ² (psi)
Grouser shoe  41 links	500 (20)	2,490 (8' 2")	0.41 (5.83)
	600 (24)	2,590 (8' 6")	0.34 (4.8)
	700 (28)	2,690 (9' 0")	0.31 (4.41)
Rubber pad shoe  41 links	500 (20)	2,490 (8' 2")	0.43 (6.12)
Flat shoe  41 links	500 (20)	2,490 (8' 2")	0.42 (5.97)
Triangle shoe  41 links	800 (32)	2,790 (9' 2")	0.27 (3.84)

NOTE :


Use grouser shoes 500mm (20in) or 600mm (24in) on rough ground (areas covered with rocks and gravel). If you drive or excavate with other shoes, this may cause shoe bending, shoe bolt looseness, and track assembly (link, roller, etc.) damage.

7. TYPE OF BUCKET

SK135SR(LC)-1E

SK135SRL-1E


Hoe bucket

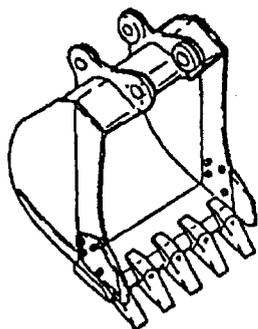

Heaped capacity m ³ (cu·yd)	Struck m ³ (cu·yd)	Outer width mm (ft-in)		Number of tooth	W or W/O side cutter	Availability of face shovel	Weight kg (lbs)
		With side cutter	Without side cutter				
0.24(0.31)	0.20 (0.26)	600 (2')	500 (1' 8")	3	W	YES	280 (620)
0.31(0.41)	0.23 (0.3)	700 (2' 4")	600 (2')	3	W	YES	330 (660)
0.38(0.50)	0.28 (0.37)	800 (2' 7")	700 (2' 4")	4	W	YES	340 (750)
0.45(0.59)	0.35 (0.46)	900 (2' 11")	800 (2' 7")	4	W	YES	350 (770)
STD 0.50(0.65)	0.38 (0.50)	1,000 (3' 3")	900 (2' 11")	5	W	YES	380 (840)
0.57(0.75)	0.43 (0.56)	1,100 (3' 7")	1,000 (3' 3")	5	W	YES	400 (880)
0.70(0.92)	0.50 (0.65)	—	1,150 (3' 9")	5	W/O	YES	400 (880)

SK115SR-1E

Hoe bucket

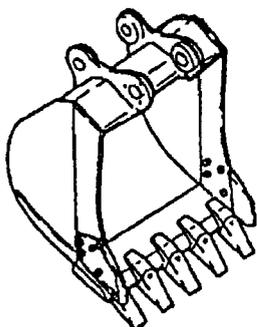

Heaped capacity m ³ (cu·yd)	Struck m ³ (cu·yd)	Outer width mm (ft-in)		Number of tooth	W or W/O side cutter	Availability of face shovel	Weight kg (lbs)
		With side cutter	Without side cutter				
0.17(0.22)	0.13 (0.17)	—	450 (1' 6")	3	W/O	YES	210 (460)
0.23(0.30)	0.19 (0.25)	600 (2')	500 (1' 8")	3	W	YES	260 (570)
0.30(0.39)	0.22 (0.29)	700 (2' 4")	600 (2')	3	W	YES	280 (620)
0.37(0.48)	0.27 (0.35)	800 (2' 7")	700 (2' 4")	4	W	YES	320 (705)
STD 0.45(0.59)	0.39 (0.51)	950 (3' 1")	850 (2' 9")	4	W	YES	350 (770)
0.51(0.67)	0.35 (0.46)	1,000 (3' 3")	900 (2' 11")	5	W	YES	370 (820)