

# Shop Manual

DUMP TRUCK

**HD465-7R**

**HD605-7R**

SERIAL NUMBERS HD465- 15001 and up  
HD605- 15001

**KOMATSU**

# SHOP MANUAL

# DUMP TRUCK

## HD465-7R HD605-7R

### Machine model      Serial number

HD465-7R	15001 and up
HD605-7R	15001 and up

---

## 00 Index and foreword

### Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02283-10
00 Index and foreword	SEN02284-10
Index	SEN02285-10 ●
Foreword and general information	SEN02286-04
01 Specification	SEN02287-01
Specification and technical data	SEN02289-01
10 Structure, function and maintenance standard	SEN02290-04
Engine and cooling system	SEN02291-01
Power train, Part 1	SEN02292-02 ●
Power train, Part 2	SEN02293-01
Steering system	SEN02294-01
Brake system	SEN02295-01
Undercarriage and frame	SEN02296-01
Hydraulic system	SEN02297-01
Work equipment (Body)	SEN04680-00
Cab and its attachments	SEN02298-01
Electrical system, Part 1	SEN02299-02
Electrical system, Part 2	SEN02300-01
Electrical system, Part 3	SEN02301-01
Electrical system, Part 4	SEN02302-01
20 Standard value table	SEN02308-02
Standard service value table	SEN02527-02
30 Testing and adjusting	SEN02309-04
Testing and adjusting, Part 1	SEN02528-03 ●
Testing and adjusting, Part 2	SEN02529-02
Testing and adjusting, Part 3	SEN02530-01
Testing and adjusting, Part 4	SEN02531-02
Testing and adjusting, Part 5	SEN02532-03 ●
40 Troubleshooting	SEN02310-04
Failure code table and fuse locations	SEN02717-02

---

General information on troubleshooting	SEN02718-02
Troubleshooting by failure code, Part 1	SEN02533-02
Troubleshooting by failure code, Part 2	SEN02534-02
Troubleshooting by failure code, Part 3	SEN02535-02
Troubleshooting by failure code, Part 4	SEN02536-02
Troubleshooting by failure code, Part 5	SEN02537-02
Troubleshooting by failure code, Part 6	SEN02538-03
Troubleshooting by failure code, Part 7	SEN02539-01
Troubleshooting by failure code, Part 8	SEN02540-02
Troubleshooting by failure code, Part 9	SEN02541-02
Troubleshooting of electrical system (E-mode)	SEN02542-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02543-01
Troubleshooting of engine (S-mode)	SEN02544-02
50 Disassembly and assembly	SEN02311-02
General information on disassembly and assembly	SEN02726-02
Engine and cooling system	SEN02727-02
Power train, Part 1	SEN02728-01
Power train, Part 2	SEN02729-01
Steering system	SEN02730-01
Brake system	SEN02731-01
Undercarriage and frame	SEN02732-01
Hydraulic system	SEN02733-01
Body	SEN02734-01
Cab and its attachments	SEN02735-02
Electrical system	SEN02736-01
90 Diagrams and drawings	SEN02312-05
Hydraulic diagrams and drawings	SEN02313-01
Electrical diagrams and drawings	SEN02314-05

## Table of contents

00 Index and foreword	
Index	SEN02285-10
Composition of shop manual.....	2
Table of contents .....	4
Foreword and general information	SEN02286-04
Safety notice.....	2
How to read the shop manual .....	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code .....	23
Precautions when carrying out operation .....	26
Method of disassembling and connecting push-pull type coupler .....	29
Standard tightening torque table .....	32
Conversion table .....	36
01 Specification	
Specification and technical data	SEN02289-01
Specification drawing.....	2
Specifications .....	3
Weight table .....	9
Fuel, coolant and lubricants .....	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN02291-01
Radiator, torque converter oil cooler, after cooler, work equipment oil cooler.....	2
Fuel system .....	4
Brake oil cooler.....	5
Output shaft.....	6
Power train, Part 1	SEN02292-02
Power train skeleton.....	2
Drive shaft .....	4
Torque converter and transmission hydraulic piping .....	6
Brake cooling oil control valve (BCV).....	8
Torque converter .....	10
Torque converter valve .....	17
Transmission .....	19
Transmission control valve.....	35
ECMV .....	36
Power train, Part 2	SEN02293-01
Axle .....	2
Differential .....	4
Final drive.....	5
Wheels .....	6
Steering system	SEN02294-01
Steering column.....	2
Steering linkage.....	3
Brake system	SEN02295-01
Brake piping .....	2
Brake valve.....	4
Secondary brake valve.....	7
Relay valve.....	8

Front brake off valve .....	9
Accumulator charge valve .....	10
Accumulator .....	14
Slack adjuster.....	15
Brake.....	17
Parking brake solenoid valve .....	21
Undercarriage and frame .....	SEN02296-01
Suspension .....	2
Suspension cylinder .....	4
Rear axle support.....	10
Hydraulic system .....	SEN02297-01
Steering and hoist hydraulic piping .....	2
Dump body control .....	4
Hydraulic tank .....	5
Steering valve.....	6
Crossover relief valve.....	10
Steering cylinder.....	11
Steering control valve.....	12
Hoist valve.....	18
EPC valve .....	24
Hoist cylinder.....	25
Hydraulic pump .....	26
Work equipment (Body) .....	SEN04680-00
Auto greasing system.....	2
Cab and its attachments .....	SEN02298-01
Air conditioner .....	2
Electrical system, Part 1 .....	SEN02299-02
Machine monitor system .....	2
Electrical system, Part 2 .....	SEN02300-01
Automatic shift control system .....	2
Transmission controller .....	6
Automatic emergency steering system .....	20
Automatic suspension system.....	22
Retarder control system .....	25
Electrical system, Part 3 .....	SEN02301-01
Payload meter II (Card type) .....	2
Electrical system, Part 4 .....	SEN02302-01
VHMS controller related .....	2
Sensors, switches .....	26
20 Standard value table .....	
Standard service value table .....	SEN02527-02
Standard value table for engine .....	2
Standard value table for machine.....	4
30 Testing and adjusting .....	
Testing and adjusting, Part 1 .....	SEN02528-03
Tools for testing, adjusting, and troubleshooting .....	3
Testing engine speed .....	6
Testing air supply pressure (boost pressure) .....	7
Testing exhaust temperature.....	8
Testing exhaust gas color.....	10
Adjustment of valve clearance .....	12
Testing of compression pressure .....	14

Testing blow-by pressure.....	17
Testing engine oil pressure.....	18
Handling of fuel system devices.....	19
Releasing residual pressure from fuel system .....	19
Testing of fuel pressure .....	20
Cylinder cut-out mode operation .....	21
No-injection cranking.....	21
Testing of fuel return rate and fuel leakage .....	22
Bleeding air from fuel circuit.....	24
Testing the fuel circuit for leakage .....	25
Replacing and adjusting of fan belt .....	26
Replacing and adjusting of alternator and air conditioner compressor belt.....	27
Testing and adjusting, Part 2	SEN02529-02
Testing torque converter stall speed.....	3
Testing power train oil pressure.....	4
Adjusting transmission speed sensor.....	11
Testing and adjusting brake oil pressure .....	12
Testing of accumulator nitrogen gas pressure and procedure for charging accumulator with nitrogen gas .....	15
Testing brake performance.....	18
Bleeding air from brake circuit.....	20
Testing wear of front brake pad .....	21
Testing wear of rear brake disc .....	22
Method of releasing parking brake in an emergency .....	23
Testing and adjusting front suspension cylinder.....	24
Testing and adjusting rear suspension cylinder.....	28
Testing and adjusting front suspension cylinder (Automatic suspension specification) .....	32
Testing and adjusting hydraulic pressure in steering/hoist circuit.....	33
Testing and adjusting oil pressure in dump EPC circuit .....	36
Air bleeding from steering cylinder.....	37
Procedure for raising dump body in emergency.....	38
Adjusting body positioner sensor .....	39
Handling of high voltage circuit of engine controller.....	40
Adjusting transmission controller.....	40
Method for emergency escape at electrical system failure .....	41
Testing and adjusting, Part 3	SEN02530-01
Setting and adjusting of devices.....	2
Special functions of machine monitor (EMMS).....	14
Testing and adjusting, Part 4	SEN02531-02
Special functions of machine monitor (EMMS).....	2
Testing and adjusting, Part 5	SEN02532-03
Request for opening ORBCOMM terminal .....	2
VHMS controller initial setting procedure .....	4
Using method of KOMTRAX functions of ORBCOMM terminal .....	24
Precautions for replacing VHMS controller .....	27
Pm Clinic check sheet .....	33
Initial setting of payload meter.....	36
Setting of payload meter built in VHMS.....	37
Setting of card-type payload meter (PLM-II) after installation or replacement.....	45
40 Troubleshooting	
Failure code table and fuse locations	SEN02717-02
Failure codes table .....	2
Fuse locations .....	13
General information on troubleshooting	SEN02718-02
Points to remember when troubleshooting.....	2

Sequence of events in troubleshooting .....	3
Check before troubleshooting .....	4
Classification and procedures for troubleshooting .....	5
Contents of troubleshooting table.....	6
Connection table for connector pin numbers .....	8
T-adapter box and T-adapter table .....	44
Troubleshooting by failure code, Part 1	SEN02533-02
Failure code [1500L0] (Dual engagement).....	3
Failure code [15B0NX] (Transmission oil filter: Clogging).....	4
Failure code [15F0KM] (R → F shifting abuse 1: Mistake in operation) .....	6
Failure code [15F0MB] (R → F shifting abuse 2: Mistake in operation) .....	6
Failure code [15F7KM] (Forward clutch disk abuse: Mistake in operation or setting).....	7
Failure code [15G0MW] (R clutch: Slipping) .....	8
Failure code [15G7KM] (Reverse clutch disk abuse: Mistake in operation or setting).....	10
Failure code [15H0MW] (Hi clutch: Slipping) .....	12
Failure code [15J0MW] (Lo clutch: Slipping).....	14
Failure code [15K0MW] (1st clutch: Slipping) .....	16
Failure code [15L0MW] (2nd clutch: Slipping) .....	18
Failure code [15M0MW] (3rd clutch: Slipping) .....	20
Failure code [15N0MW] (4th clutch: Slipping).....	22
Failure code [15SBL1] (R clutch solenoid: Fill signal is ON when command current is OFF) ....	24
Failure code [15SBMA] (R clutch solenoid: Malfunction) .....	26
Failure code [15SCL1] (Hi clutch solenoid: Fill signal is ON when command current is OFF) ...	27
Failure code [15SCMA] (Hi clutch solenoid: Malfunction) .....	30
Failure code [15SDL1] (Lo clutch solenoid: Fill signal is ON when command current is OFF)...	31
Failure code [15SDMA] (Lo clutch solenoid: Malfunction) .....	34
Failure code [15SEL1] (1st clutch solenoid: Fill signal is ON when command current is OFF) ..	35
Failure code [15SEMA] (1st clutch solenoid: Malfunction).....	38
Troubleshooting by failure code, Part 2	SEN02534-02
Failure code [15SFL1] 2nd clutch solenoid: Fill signal is ON when command current is OFF....	4
Failure code [15SFMA] 2nd clutch solenoid: Malfunction .....	7
Failure code [15SGL1] 3rd clutch solenoid: Fill signal is ON when command current is OFF....	8
Failure code [15SGMA] 3rd clutch solenoid: Malfunction .....	11
Failure code [15SHL1] 4th clutch solenoid: Fill signal is ON when command current is OFF ....	12
Failure code [15SHMA] 4th clutch solenoid: Malfunction.....	15
Failure code [15SJMA] Lockup clutch solenoid: Malfunction .....	16
Failure code [2C4MNX] Retarder cooling oil filter: Clogging.....	18
Failure code [2F00KM] Parking brake: Mistake in operation or setting.....	20
Failure code [2G42ZG] Accumulator: Oil pressure reduction (Front).....	23
Failure code [2G43ZG] Accumulator: Oil pressure reduction (Rear) .....	23
Failure code [6014NX] Hydraulic oil filter: Clogging.....	24
Failure code [989A00] Engine over run prevention command signal: Operating.....	26
Failure code [989D00] Rear section tipping over alarm: Alarm is activated.....	26
Failure code [A570NX] Engine oil filter: Clogging .....	27
Failure code [AA10NX] Air cleaner element: Clogging .....	28
Failure code [AB00MA] Alternator: Malfunction .....	30
Failure code [B@BAZG] Abnormal lowering of engine oil pressure: Lowering of oil pressure ...	32
Failure code [B@BAZK] Engine oil: Level too low .....	33
Failure code [B@BCNS] Engine: Overheat .....	34
Failure code [B@BCZK] Lowering of radiator coolant: Lowering of level .....	36
Failure code [B@BFZK] Lowering of fuel level .....	38
Failure code [B@C7NS] Brake cooling oil: Overheating (Rear).....	40
Failure code [B@CENS] Overheating of torque converter oil.....	42
Failure code [B@GAZK] Battery electrolyte level: Lowering of level .....	43
Failure code [B@JANS] Steering oil temperature: Overheat .....	44
Troubleshooting by failure code, Part 3	SEN02535-02
Failure code [CA111] (Abnormality in engine controller) .....	4

Failure code [CA115] (Engine Ne or Bkup speed sensor error) .....	6
Failure code [CA122] (Charge pressure sensor high error) .....	8
Failure code [CA123] (Charge pressure sensor low error).....	10
Failure code [CA131] (Throttle sensor high error).....	12
Failure code [CA132] (Throttle sensor low error) .....	15
Failure code [CA135] (Engine oil pressure sensor high error) .....	17
Failure code [CA141] (Engine oil pressure sensor low error).....	19
Failure code [CA144] (Coolant temperature sensor high error) .....	21
Failure code [CA145] (Coolant temperature sensor low error).....	23
Failure code [CA153] (Charge temperature sensor high error).....	25
Failure code [CA154] (Charge temperature sensor low error) .....	27
Failure code [CA187] (Sensor power supply 2 low error).....	27
Failure code [CA212] (Engine oil temperature sensor high error).....	29
Failure code [CA213] (Engine oil temperature sensor low error) .....	31
Failure code [CA221] (Atmospheric pressure sensor high error) .....	33
Failure code [CA222] (Atmospheric pressure sensor low error) .....	35
Failure code [CA227] (Sensor power supply 2 high error) .....	37
Failure code [CA234] (Engine overspeed) .....	39
Failure code [CA238] (Ne speed sensor power supply error) .....	41
Failure code [CA263] (Fuel temperature sensor high error).....	43
Failure code [CA265] (Fuel temperature sensor low error) .....	45
Failure code [CA271] (PCV1 Short circuit).....	47
Failure code [CA272] (PCV1 Disconnection) .....	49
Failure code [CA273] (PCV2 Short circuit).....	51
Failure code [CA274] (PCV2 Disconnection) .....	53
Failure code [CA322] (Injector #1 open/short error).....	55
Failure code [CA323] (Injector #5 open/short error).....	57
Failure code [CA324] (Injector #3 open/short error).....	59
Failure code [CA325] (Injector #6 open/short error).....	61
Failure code [CA331] (Injector #2 open/short error).....	63
Failure code [CA332] (Injector #4 open/short error).....	65
Failure code [CA342] (Calibration code inconsistency).....	67
Failure code [CA351] (Injectors drive circuit error).....	67
Failure code [CA352] (Sensor power supply 1 low error).....	68
Failure code [CA386] (Sensor power supply 1 high error) .....	69
Troubleshooting by failure code, Part 4	SEN02536-02
Failure code [CA431] (Trouble in idle validation switch).....	4
Failure code [CA432] (Idle validation action error) .....	8
Failure code [CA441] (Battery voltage low error) .....	8
Failure code [CA442] (Battery voltage high error).....	9
Failure code [CA449] (Common rail pressure high error 2) .....	9
Failure code [CA451] (Common rail pressure sensor high error).....	10
Failure code [CA452] (Common rail pressure sensor low error) .....	12
Failure code [CA553] (Common rail pressure high error 1) .....	13
Failure code [CA554] (Common rail pressure sensor: In-range error) .....	14
Failure code [CA559] (Supply pump pressure very low error) .....	15
Failure code [CA689] (Engine Ne speed sensor error) .....	18
Failure code [CA731] (Engine Bkup speed sensor phase error).....	20
Failure code [CA757] (All continuous data lost error).....	21
Failure code [CA778] (Engine Bkup speed sensor error).....	22
Failure code [CA1633] (KOMNET datalink timeout error) .....	24
Failure code [CA2185] (Throttle sensor supply voltage high error).....	26
Failure code [CA2186] (Throttle sensor power supply low error) .....	28
Failure code [CA2249] (Supply pump pressure very low error 2) .....	29
Failure code [CA2555] (Intake heater relay voltage low error) .....	30
Failure code [CA2556] (Intake heater relay voltage high error) .....	32

Troubleshooting by failure code, Part 5	SEN02537-02
Failure code [D19HKB] Stop lamp relay output system: Short circuit .....	3
Failure code [D5ZKKZ] Front brake cut-off solenoid valve: Disconnection, short circuit or short circuit to power supply line .....	4
Failure code [DAF9KM] Wrong connection of connector .....	6
Failure code [DAFRKR] Abnormal CAN communication (machine monitor): Abnormal communication .....	7
Failure code [DAQ0KK] Transmission controller direct power supply: Lowering of supply voltage .....	8
Failure code [DAQ0KT] Transmission controller nonvolatile memory: Abnormality in controller .....	10
Failure code [DAQ2KK] Transmission controller solenoid power supply: Power supply voltage too low .....	12
Failure code [DAQ9KQ] Transmission controller: Disagreement of model selection .....	14
Failure code [DAQRKR] Abnormality in CAN communication (Transmission) .....	15
Failure code [DAQRMA] Transmission controller option setting: Malfunction .....	20
Failure code [DB10KT] Retarder controller nonvolatile memory: Abnormality in controller .....	20
Failure code [DB12KK] Retarder controller solenoid power supply: Power supply system trouble .....	21
Failure code [DB13KK] Retarder controller battery direct power supply: Power supply voltage too low .....	23
Failure code [DB19KQ] Disagreement of model selection (Retarder controller) .....	25
Failure code [DB1RKR] CAN communication (retarder controller): Communication disabled ....	27
Failure code [DB1RMA] Disagreement of option setting (Retarder controller) .....	31
Failure code [DB2RKR] CAN communication (engine controller): Communication disabled .....	32
Failure code [DBB0KK] or VHMS_LED display: "n9" → "01" VHMS controller: Low power supply voltage (input) .....	38
Failure code [DBB0KQ] or VHMS_LED display: "nF" → "11" VHMS controller: Disagreement of model selection signals .....	40
Failure code [DBB3KK] or VHMS_LED display: "n9" → "05" VHMS controller battery power supply: Low power supply voltage (input) .....	42
Failure code [DBB5KP] or VHMS_LED display: "n9" → "04" VHMS controller 5 V power supply output: Low output voltage .....	44
Failure code [DBB6KP] or VHMS_LED display: "n9" → "02" VHMS controller 24 V power supply output: Low output voltage .....	46
Failure code [DBB7KP] or VHMS_LED display: "n9" → "03" VHMS controller 12 V power supply output: Low output voltage .....	48
Failure code [DBQRKR] or VHMS_LED display: "n8" → "02" VHMS controller CAN communication: Defective communication (Abnormality in target component system) .....	49
Failure code [DBBRKR] Abnormality in CAN communication (VHMS) .....	49
Failure code [DBC2KK] ABS controller solenoid power supply: Power supply system trouble ..	50
Failure code [DBC3KK] ABS controller battery direct power supply: Power supply voltage too low .....	52
Failure code [DBC9KQ] Disagreement of model selection (ABS controller) .....	54
Failure code [DBCRRK] Abnormality in CAN communication (ABS) .....	55
Failure code [DBCRRMA] Disagreement of option setting (ABS controller) .....	59
Failure code [DDD7KX] Trouble in travel speed setting switch system: Out of input signal range .....	60
Failure code [DDD8KA] ARSC system switch system: Disconnection (If equipped) .....	62
Failure code [DDD8KB] ARSC system switch system: Short circuit (If equipped) .....	64
Failure code [DDD9KA] ABS system switch system: Disconnection .....	66
Failure code [DDD9KB] ABS system switch system: Short circuit .....	68

Failure code [DDDAKA] ASR system switch: Disconnection .....	70
Failure code [DDDAKB] ASR system switch: Short circuit.....	72
Failure code [DDP6L4] Service brake pressure switch trouble (Rear).....	74
Failure code [DDTHKA] Hi clutch fill switch: Disconnection .....	76
Failure code [DDTJKA] Lo clutch fill switch: Disconnection .....	78
Failure code [DDTKKA] 1st clutch fill switch: Disconnection.....	80
Failure code [DDTLKA] 2nd clutch fill switch: Disconnection .....	82
Failure code [DDTMKA] 3rd clutch fill switch: Disconnection.....	84
Failure code [DDTNKA] R clutch fill switch: Disconnection.....	86
Failure code [DDTPKA] 4th clutch fill switch: Disconnection.....	88
Failure code [DF10KA] Gear shift lever: Disconnection.....	90
Failure code [DF10KB] Gear shift lever: Short circuit.....	93
Failure code [DGE5KX] or VHMS_LED display: "n4" → "01" Atmospheric temperature sensor: Out of input signal range .....	98
Failure code [DGF1KX] Transmission oil temperature sensor: Out of input signal range .....	100
Failure code [DGR2KZ] Retarder oil temperature sensor system trouble: Ground fault (Rear wheel) .....	102
Failure code [DGR6KX] Steering oil temperature sensor: Input signal out of range .....	104
Failure code [DGT1KX] Torque converter oil temperature sensor: Out of input signal range .....	106
Troubleshooting by failure code, Part 6	SEN02538-03
FFailure code [DGT4KA] or VHMS_LED display: "n3" → "12" Exhaust gas temperature sensor (F): Disconnection .....	3
Failure code [DGT4KB] or VHMS_LED display: "n3" → "11" Exhaust gas temperature sensor (F): Short circuit.....	6
Failure code [DGT5KA] or VHMS_LED display: "n3" → "22" Exhaust gas temperature sensor (R): Disconnection.....	9
Failure code [DGT5KB] or VHMS_LED display: "n3" → "21" Exhaust gas temperature sensor (R): Short circuit.....	12
Failure code [DHE5KB] or VHMS_LED display: "n3" → "32" Blow-by pressure sensor: Short circuit.....	15
Failure code [DHE5KY] or VHMS_LED display: "n3" → "31" Blow-by pressure sensor: Short circuit with power supply line.....	18
Failure code [DHP4KY] or VHMS_LED display: "n5" → "44" Short circuit in suspension pressure sensor system (Front right).....	20
Failure code [DHP4KZ] or VHMS_LED display: "n5" → "43" Disconnection or ground fault in suspension pressure sensor system(Front right).....	22
Failure code [DHP5KY] or VHMS_LED display: "n5" → "54" Short circuit in suspension pressure sensor system (Front left).....	24
Failure code [DHP5KZ] or VHMS_LED display: "n5" → "53" Disconnection or ground fault in suspension pressure sensor system(Front left).....	26
Failure code [DHP6KA] Suspension pressure sensor system: Disconnection right rear .....	28
Failure code [DHP6KX] Failure in suspension pressure sensor system trouble: Out of input signal range (Right rear) .....	29
Failure code [DHP6KY] or VHMS_LED display: "n5" → "64" Suspension pressure sensor system: Short circuit (Right rear) .....	32
Failure code [DHP6KZ] or VHMS_LED display: "n5" → "63" Suspension pressure sensor system: Disconnection or ground fault (Right rear).....	34
Failure code [DHP7KA] Suspension pressure sensor system: Disconnection (Left rear).....	36
Failure code [DHP7KX] Failure in suspension pressure sensor system trouble: Out of input signal range (Left rear).....	38

Failure code [DHP7KY] or VHMS_LED display: "n5" → "74" Suspension pressure sensor system: Short circuit (Left rear).....	40
Failure code [DHP7KZ] or VHMS_LED display: "n5" → "73" Suspension pressure sensor system: Disconnection or ground fault (Left rear).....	42
Failure code [DHT5KX] Torque converter oil pressure sensor: Out of input signal range.....	44
Failure code [DHT5L6] Torque converter oil pressure sensor: Disagreement of run and stop condition with signal .....	46
Failure code [DHU2KX] Front accumulator oil pressure sensor: Out of input signal range .....	48
Failure code [DHU3KX] Rear accumulator oil pressure sensor: Out of input signal range.....	50
Failure code [DHU6KX] Trouble in ABS control valve pressure sensor (Front right).....	52
Failure code [DHU7KX] Trouble in ABS control valve pressure sensor (Front left) .....	54
Failure code [DHU8KX] Trouble in ABS control valve pressure sensor (Front right).....	56
Failure code [DHU9KX] Trouble in ABS control valve pressure sensor (Front right).....	58
Failure code [DJF1KA] Fuel level sensor: Disconnection .....	60
Failure code [DK30KX] Steering angle potentiometer: Trouble (Disconnection).....	62
Failure code [DK51L5] Retarder lever potentiometer: Potentiometer signal is inconsistent with switch signal.....	63
Failure code [DK52KX] Failure in hoist lever potentiometer 1: Out of input signal range .....	66
Failure code [DK53L8] Failure in hoist lever potentiometer 2: Disagreement of analog signal...	68
Failure code [DK54KX] Body positioner sensor: Out of input signal range.....	70
Failure code [DKD0L6] Failure in steering speed sensor.....	72
Failure code [DKH0KX] Clinometer sensor signal out of range .....	74
Failure code [DKH1KX] or VHMS_LED display: "n4"→"33" Abnormality in clinometer sensor...	76
Failure code [DLF1KA] Transmission input shaft speed sensor: Disconnection.....	78
Failure code [DLF1LC] Transmission input shaft speed sensor: Disagreement of revolution speed signal.....	80
Failure code [DLF2KA] Transmission intermediate shaft speed sensor: Disconnection.....	82
Failure code [DLF2LC] Transmission intermediate shaft speed sensor: Disagreement of revolution speed signal .....	84
Troubleshooting by failure code, Part 7	SEN02539-01
Failure code [DLF8KA] (Wheel speed sensor: Disconnection (Right rear)).....	4
Failure code [DLF8L3] (Wheel speed sensor: Disconnection (Right rear)).....	6
Failure code [DLF8LC] (Wheel speed sensor: Trouble (Right rear)).....	8
Failure code [DLF8MA] (Wheel speed sensor: Disconnection (Right rear)) .....	9
Failure code [DLF9KA] (Wheel speed sensor: Disconnection (Left rear)) .....	10
Failure code [DLF9L3] (Wheel speed sensor: Trouble (Left rear)).....	12
Failure code [DLF9LC] (Wheel speed sensor: Trouble (Left rear)) .....	14
Failure code [DLF9MA] (Wheel speed sensor: Disconnection (Left rear)).....	15
Failure code [DLT3KA] (Transmission output shaft speed sensor: Disconnection) .....	16
Failure code [DLT3LC] (Transmission output shaft speed sensor: Disagreement of revolution speed signal) .....	18
Failure code [DLT4KA] (Transmission output shaft speed sensor: Disconnection) .....	20
Failure code [DLT4MA] (Transmission output shaft speed sensor: Malfunction) .....	22
Failure code [DV00KB] (Buzzer output: Short circuit) .....	24
Failure code [DW2AKA] (Main pressure variable valve output: Disconnection) .....	26
Failure code [DW2AKB] (Main pressure variable valve output circuit: Ground fault).....	28
Failure code [DW2AKY] (Main pressure variable valve output circuit: Hot short) .....	30
Failure code [DW2AL1] (Main pressure variable valve: Defective reset).....	32
Failure code [DW2ALH] (Main pressure variable valve: Malfunction).....	34
Failure code [DW35KZ] (Failure in output system of auto suspension solenoid 1: Disconnection or short circuit) .....	36
Failure code [DW36KZ] (Failure in output system of auto suspension solenoid 2: Disconnection or short circuit) (If equipped).....	38

Failure code [DW72KZ] (Kick-out solenoid output system trouble: Disconnection or short circuit) .....	40
Failure code [DW73KZ] (Failure in hoist select valve output system: Disconnection or short circuit) .....	42
Failure code [DW78KZ] (Brake cooling valve (BCV) (rear wheel) output system trouble: Disconnection or short circuit) .....	44
Failure code [DWNBK4] (ASR shut-off valve: Trouble (Valve keeps operating)) .....	46
Failure code [DWNBKA] (ASR shut-off valve output circuit: Disconnection).....	48
Failure code [DWNBKB] (ASR shut-off valve output circuit: Ground fault) .....	50
Failure code [DWNBKY] (ASR shut-off valve output circuit: Short circuit) .....	52
Failure code [DWNBMA] (ASR shut-off valve: Trouble (Valve does not operate)).....	53
Troubleshooting by failure code, Part 8	SEN02540-02
Failure code [DX11K4] (Rear brake proportional pressure reducing solenoid valve: Out of control).....	4
Failure code [DX11KA] (Rear brake proportional pressure reducing solenoid valve output circuit: Disconnection).....	6
Failure code [DX11KB] (Rear brake proportional pressure reducing solenoid valve: Short circuit).....	7
Failure code [DX11KY] (Rear brake proportional pressure reducing solenoid valve: Short circuit to power source line) .....	8
Failure code [DX11MA] (Rear brake proportional pressure reducing solenoid valve: Malfunction) .....	9
Failure code [DX13KA] (Output circuit of hoist EPC valve: Disconnection) .....	10
Failure code [DX13KB] (Output circuit of hoist EPC valve: Short circuit).....	12
Failure code [DX13KY] (Output circuit of hoist EPC valve: Short circuit with power source line) .....	14
Failure code [DX17K4] (ASR proportional pressure reducing solenoid valve (right): Trouble (Valve keeps operating)) .....	16
Failure code [DX17KA] (ASR proportional pressure reducing solenoid valve (right) output circuit: Disconnection).....	18
Failure code [DX17KB] (ASR proportional pressure reducing solenoid valve (right) output circuit: Ground fault) .....	20
Failure code [DX17KY] (ASR proportional pressure reducing solenoid valve (right) output circuit: Short circuit) .....	22
Failure code [DX17MA] (ASR proportional pressure reducing solenoid valve (right): Trouble (Valve does not operate)) .....	22
Failure code [DX18K4] (ASR proportional pressure reducing solenoid valve (left): Trouble (Valve keeps operating)) .....	24
Failure code [DX18KA] (ASR proportional pressure reducing solenoid valve (left) output circuit: Disconnection).....	26
Failure code [DX18KB] (ASR proportional pressure reducing solenoid valve (left) output circuit: Ground fault) .....	28
Failure code [DX18KY] (ASR proportional pressure reducing solenoid valve (left) output circuit: Short circuit) .....	30
Failure code [DX18MA] (ASR proportional pressure reducing solenoid valve (left): Trouble (Valve does not operate)) .....	30
Failure code [DX21KA] Disconnection in ABS control valve output circuit (Front right).....	31
Failure code [DX21KB] Ground fault in ABS control valve output circuit (Front right).....	32
Failure code [DX21KY] Hot short in ABS control valve output circuit (Front right).....	33
Failure code [DX21MA] Defective ABS control valve (Front right) .....	34
Failure code [DX22KA] Disconnection in ABS control valve output circuit (Front left) .....	35
Failure code [DX22KB] Ground fault in ABS control valve output circuit (Front left).....	36
Failure code [DX22KY] Hot short in ABS control valve output circuit (Front left) .....	37
Failure code [DX22MA] Defective ABS control valve (Front left) .....	38
Failure code [DX23KA] Disconnection in ABS control valve output circuit (Rear right) .....	39
Failure code [DX23KB] Ground fault in ABS control valve output circuit (Rear right) .....	40

Failure code [DX23KY] Hot short in ABS control valve output circuit (Rear right) .....	41
Failure code [DX23MA] Defective ABS control valve (Rear right) .....	42
Failure code [DX24KA] Disconnection in ABS control valve output circuit (Rear left).....	43
Failure code [DX24KB] Ground fault in ABS control valve output circuit (Rear left) .....	44
Failure code [DX24KY] Hot short in ABS control valve output circuit (Rear left) .....	45
Failure code [DX24MA] Defective ABS control valve (Rear left).....	46
Failure code [DX25MA] Defective ABS front wheel system control valve.....	47
Failure code [DX26MA] Defective ABS rear wheel system control valve .....	47
Troubleshooting by failure code, Part 9	SEN02541-02
Failure code [DXH1KA] Lockup clutch solenoid output circuit:	
Disconnection .....	4
Failure code [DXH1KB] Lockup clutch solenoid output circuit:	
Short circuit .....	6
Failure code [DXH1KY] Lockup clutch solenoid output circuit:	
Short circuit to power supply line.....	8
Failure code [DXH2KA] Hi clutch solenoid output circuit:	
Disconnection.....	10
Failure code [DXH2KB] Hi clutch solenoid output circuit:	
Short circuit.....	12
Failure code [DXH2KY] Hi clutch solenoid output circuit:	
Short circuit to power supply line .....	14
Failure code [DXH3KA] Lo clutch solenoid output circuit:	
Disconnection .....	18
Failure code [DXH3KB] Lo clutch solenoid output circuit:	
Short circuit.....	20
Failure code [DXH3KY] Lo clutch solenoid output circuit:	
Short circuit in power supply line.....	22
Failure code [DXH4KA] 1st clutch solenoid output circuit:	
Disconnection .....	26
Failure code [DXH4KB] 1st clutch solenoid output circuit:	
Short circuit.....	28
Failure code [DXH4KY] 1st clutch solenoid output circuit:	
Short circuit to power supply line.....	30
Failure code [DXH5KA] 2nd clutch solenoid output circuit:	
Disconnection .....	34
Failure code [DXH5KB] 2nd clutch solenoid output circuit:	
Short circuit.....	36
Failure code [DXH5KY] 2nd clutch solenoid output circuit:	
Short circuit in power supply line.....	38
Failure code [DXH6KA] 3rd clutch solenoid output circuit:	
Disconnection.....	42
Failure code [DXH6KB] 3rd clutch solenoid output circuit:	
Short circuit.....	44
Failure code [DXH6KY] 3rd clutch solenoid output circuit:	
Short circuit to power supply line .....	46
Failure code [DXH7KA] R clutch solenoid output circuit:	
Disconnection.....	50
Failure code [DXH7KB] R clutch solenoid output circuit:	
Short circuit .....	52

Failure code [DXH7KY] R clutch solenoid output circuit:	
Short circuit to power supply line .....	54
Failure code [DXHHKA] 4th clutch solenoid output circuit:	
Disconnection.....	56
Failure code [DXHHKB] 4th clutch solenoid output circuit:	
Short circuit .....	58
Failure code [DXHHKY] 4th clutch solenoid output circuit:	
Short circuit to power supply line .....	60
Failure code [F@BBZL] or VHMS_LED display: "n3"→"38"	
Blow-by pressure: High error.....	63
Failure code [F@BYNR] or VHMS_LED display: "n3"→"62"	
Exhaust gas temperature (F): Abnormal heat .....	64
Failure code [F@BYNS] or VHMS_LED display: "n3"→"61"	
Exhaust gas temperature (F): Overheat .....	66
Failure code [F@BZNR] or VHMS_LED display: "n3"→"72"	
Exhaust gas temperature (R): Abnormal heat .....	68
Failure code [F@BZNS] or VHMS_LED display: "n3"→"71"	
Exhaust gas temperature (R): Overheat.....	70
Troubleshooting of electrical system (E-mode)	SEN02542-01
Before troubleshooting of electric system .....	3
Contents of troubleshooting table.....	4
E-1 Engine does not start.....	5
E-2 Automatic preheating does not operate .....	8
E-3 Machine monitor does not display all, when starting switch is turned ON .....	12
E-4 Machine monitor does not operate when starting switch is OFF .....	14
E-5 Alarm buzzer does not sound .....	16
E-6 Gauges of machine monitor, caution lamps or character display section do not display properly. ....	18
E-7 A selection of the display in character display section cannot be changed .....	19
E-8 Power mode selecting function does not operate properly .....	22
E-9 AISS function does not operate properly .....	23
E-10 Seat belt caution lamp does not display properly .....	24
E-11 Turn signal lamp or turning lamp (hazard lamp) do not work properly .....	25
E-12 Night illumination (lighting) does not work properly .....	28
E-13 Emergency steering does not operate .....	40
E-14 Hoist lever does not operate normally .....	46
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02543-01
Contents of troubleshooting table.....	3
H-1 Machine does not start .....	4
H-2 Machine does not travel smoothly (hunting).....	6
H-3 Lockup cannot be cancelled .....	6
H-4 Excessive shock when starting or shifting excessive .....	7
H-5 Transmission does not shift up .....	8
H-6 Machine lacks power or speed when traveling.....	10
H-7 Time lag is excessive when starting or shifting gear .....	14
H-8 Torque converter oil temperature is high .....	16
H-9 Torque converter oil pressure is low .....	17
H-10 Front brake is ineffective .....	18
H-11 Rear brake is ineffective .....	19
H-12 Steering wheel is heavy.....	20
H-13 Steering wheel does not work.....	21
H-14 Steering wheel vibrates .....	22
H-15 Dump body lifting speed is slow .....	23
H-16 Dump body does not work.....	24
H-17 Excessive hydraulic drift of dump body .....	25

Troubleshooting of engine (S-mode)	SEN02544-02
Method of using troubleshooting chart .....	4
S-1 Starting performance of engine is poor.....	8
S-2 Engine does not start.....	9
S-3 Engine does not pick up smoothly .....	12
S-4 Engine stops during operation .....	13
S-5 Engine does not rotate smoothly .....	14
S-6 Engine lack output (or lacks power) .....	15
S-7 Exhaust gas is black (incomplete combustion).....	16
S-8 Oil consumption is excessive (or exhaust gas is blue) .....	18
S-9 Oil becomes dirty quickly.....	19
S-10 Fuel consumption is excessive.....	20
S-11 Oil is in coolant (or coolant spurts back or coolant level goes down) .....	21
S-12 Oil pressure drops .....	22
S-13 Oil level rises (Entry of coolant or fuel).....	23
S-14 Coolant temperature becomes too high (Overheating) .....	24
S-15 Abnormal noise is made .....	25
S-16 Vibration is excessive .....	26
50 Disassembly and assembly	
General information on disassembly and assembly	SEN02726-02
How to read this manual .....	2
List of adhesives .....	4
Special tool list .....	7
Sketches of special tools.....	10
Engine and cooling system	SEN02727-02
Removal and installation of engine assembly .....	2
Removal and installation of radiator assembly.....	9
Removal and installation of output shaft assembly .....	13
Disassembly and assembly of output shaft assembly.....	14
Removal and installation of fuel supply pump assembly.....	17
Removal and installation of fuel injector assembly .....	20
Removal and installation of brake and power train oil cooler assembly.....	24
Power train, Part 1	SEN02728-01
Removal and installation of torque converter and transmission assembly .....	2
Separation and coupling of transmission assembly and torque converter assembly.....	5
Disassembly and assembly of transmission assembly and torque converter assembly.....	6
Disassembly and assembly of torque converter assembly .....	8
Disassembly and assembly of transmission assembly .....	18
Removal and installation of transmission control valve assembly (ECMV assembly).....	49
Disassembly and assembly of transmission control valve assembly (ECMV assembly) .....	50
Power train, Part 2	SEN02729-01
Removal and installation of differential assembly .....	2
Disassembly and assembly of differential assembly .....	4
Removal and installation of final drive carrier assembly .....	16
Disassembly and assembly of final drive carrier assembly.....	17
Disassembly and assembly of front wheel hub assembly .....	18
Steering system	SEN02730-01
Disassembly and assembly of steering cylinder assembly .....	2
Brake system	SEN02731-01
Removal and installation of front brake caliper pads.....	2
Removal and installation of front brake calipers assembly .....	3
Disassembly and assembly of front brake calipers assembly.....	4
Removal and installation of final drive and rear brake assembly .....	6
Removal and installation of final drive, rear brake, and parking brake assembly .....	9
Disassembly and assembly of final drive, rear brake, and parking brake assembly .....	10

Undercarriage and frame	SEN02732-01	
Removal and installation of front wheel assembly .....		2
Removal and installation of rear wheel assembly .....		3
Removal and installation of front suspension cylinder assembly .....		5
Disassembly and assembly of front suspension cylinder assembly (Cylinder with buffer ring)...		7
Removal and installation of rear suspension cylinder assembly .....		10
Disassembly and assembly of rear suspension cylinder assembly (Cylinder with buffer ring)....		11
Hydraulic system	SEN02733-01	
Disassembly and assembly of hoist cylinder assembly.....		2
Body	SEN02734-01	
Removal and installation of body assembly .....		2
Cab and its attachments	SEN02735-02	
Disassembly and assembly of operator's seat assembly .....		2
Removal and installation of air conditioner unit assembly.....		11
Electrical system	SEN02736-01	
Removal and installation of engine controller assembly .....		2
Removal and installation of transmission controller assembly .....		3
Removal and installation of retarder controller assembly.....		4
90 Diagrams and drawings		
Hydraulic diagrams and drawings	SEN02313-01	
Power train hydraulic circuit diagram .....		2
Steering and hoist hydraulic circuit diagram.....		3
Brake hydraulic circuit diagram .....		5
Electrical diagrams and drawings	SEN02314-05	
Electrical circuit diagram inside cab (1/3).....		3
Electrical circuit diagram inside cab (2/3).....		5
Electrical circuit diagram inside cab (3/3).....		7
Electrical circuit diagram outside cab (1/3).....		9
Electrical circuit diagram outside cab (2/3).....		11
Electrical circuit diagram outside cab (3/3).....		13
Electrical circuit diagram for VHMS.....		15
Electrical circuit diagram for ASR (If equipped).....		17
Air conditioner electrical circuit diagram.....		19
Electrical circuit diagram for auto greasing (If equipped) .....		21
Connectors table and arrangement drawing .....		23



HD465-7R, HD605-7R Dump truck

Form No. SEN02285-10

---

© 2011 KOMATSU  
All Rights Reserved  
Printed in Japan 01-11

---

# DUMP TRUCK

## HD465-7R

## HD605-7R

Machine model	Serial number
HD465-7R	15001 and up
HD605-7R	15001 and up

---

## 00 Index and foreword

### Foreword and general information

---

Safety notice .....	2
How to read the shop manual .....	7
Explanation of terms for maintenance standard .....	9
Handling of electric equipment and hydraulic component .....	11
Handling of connectors newly used for engines .....	20
How to read electric wire code .....	23
Precautions when carrying out operation .....	26
Method of disassembling and connecting push-pull type coupler .....	29
Standard tightening torque table .....	32
Conversion table .....	36

## Safety notice

(Rev. 2008/08)

### Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

### 1. General precautions

 **Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine. In addition, read this manual and understand its contents before starting the work.**

- 1) Before carrying out any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
  - Always wear safety glasses when hitting parts with a hammer.
  - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.
- 9) Avoid continuing work for long hours and take rests at proper intervals to keep your body in good condition. Take rests in specified safe places.

### Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

## 2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on a hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

## 3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

**4. Precautions for sling work and making signs**


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is well seen from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

**⚠ Slinging with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.**

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

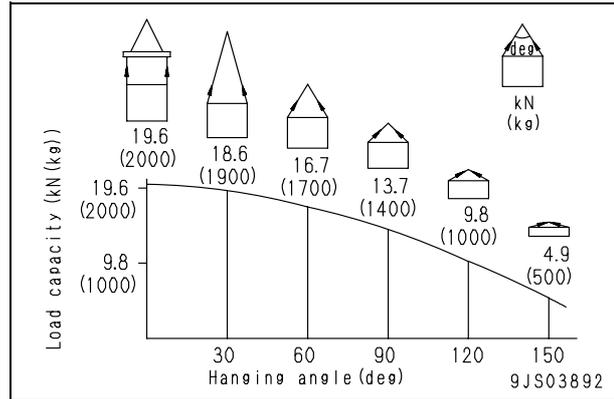

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
  - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

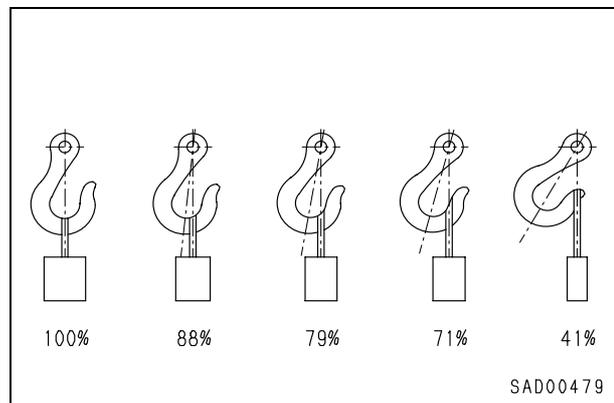

- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
  - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
  - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
  - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
  - Check that the load is stable, and then remove the sling.
  - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

#### 5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

#### 6. Precautions for using overhead hoist crane

**▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .**

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

#### 7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes  
(Standard "Z" twist ropes without galvanizing)  
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope mm	Allowable load	
	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

## 8. Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

### 1) Disconnection

**⚠ For the environment, the air conditioner of this machine uses the refrigerant (air conditioner gas: R134a) which has fewer factors of the depletion of the ozone layer. However, it does not mean that you may discharge the refrigerant into the atmosphere as it is. Be sure to recover the refrigerant when disconnecting the refrigerant gas circuit and then reuse it.**

★ Ask professional traders for collecting and filling operation of refrigerant (R134a).

★ Never release the refrigerant (R134a) to the atmosphere.

**⚠ If the refrigerant gas gets in your eyes or contacts your skin, you may lose your sight and your skin may be frozen. Accordingly, put on safety glasses, safety gloves and safety clothes when recovering or adding the refrigerant. Refrigerant gas must be recovered and added by a qualified person.**

### 2) Connection


1] When installing the air conditioner circuit hoses and tubes, take care that dirt, dust, water, etc. will not enter them.

2] When connecting the air conditioner hoses and tubes, check that O-rings (1) are fitted to their joints.

3] Check that each O-ring is not damaged or deteriorated.

4] When connecting the refrigerant piping, apply compressor oil for refrigerant (R134a) (**DENSO: ND-OIL8, VALEO THERMAL SYSTEMS: ZXL100PG (equivalent to PAG46)**) to its O-rings.

★ Example of O-ring (Fitted to every joint of hoses and tubes)

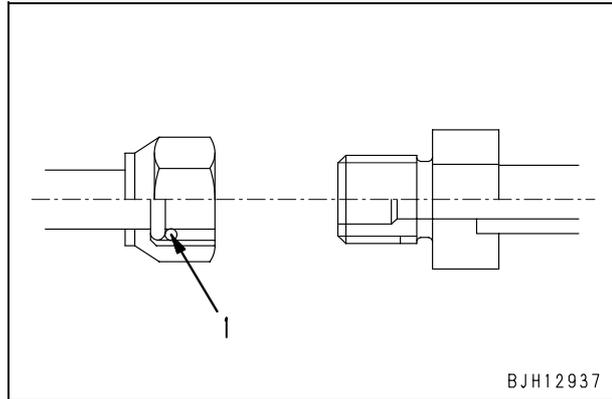

★ For tightening torque, see the precautions for installation in each section of "Disassembly and assembly".

## How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

### 1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

#### 00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

#### 01. Specification

This section explains the specifications of the machine.

#### 10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

#### 20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

#### 30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

#### 40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

#### 50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

#### 90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume  
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume  
This section explains the method of reproducing, repairing, and replacing parts.

### 2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

### 3. Filing method

File by the brochures in the correct order of the form number printed in the shop manual composition table.

- **Revised edition mark**

When a manual is revised, the ones and tens digits of the form number of each brochure is increased by 1. (Example: 00, 01, 02 ...)

- **Revisions**

Revised brochures are shown in the shop manual composition table.

### 4. Symbols

Important safety and quality portions are marked with the following symbols so that the shop manual will be used practically.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing work.
	Weight	Weight of parts of component or parts. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for tightening torque during assembly.
	Coat	Places to be coated with adhesives, etc. during assembly.
	Oil, coolant	Places where oil, etc. must be added, and capacity.
	Drain	Places where oil, etc. must be drained, and quantity to be drained.

### 5. Units

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.

## Explanation of terms for maintenance standard

The maintenance standard chapter explains the criteria for replacing or reusing products and parts in the machine maintenance work. The following terms are used to explain the criteria.

### 1. Standard size and tolerance

- To be accurate, the finishing size of parts is a little different from one to another.
- To specify a finishing size of a part, a temporary standard size is set and an allowable difference from that size is indicated.
- The above size set temporarily is called the “standard size” and the range of difference from the standard size is called the “tolerance”.
- The tolerance with the symbols of + or – is indicated on the right side of the standard size.


Example:

Standard size	Tolerance
120	–0.022 –0.126

- ★ The tolerance may be indicated in the text and a table as [standard size (upper limit of tolerance/lower limit of tolerance)].  
Example) 120 (–0.022/–0.126)
- Usually, the size of a hole and the size of the shaft to be fitted to that hole are indicated by the same standard size and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of size of rotating shaft and hole and relationship drawing of them

Example:

Standard size	Tolerance	
	Shaft	Hole
60	–0.030 –0.076	+0.046 0

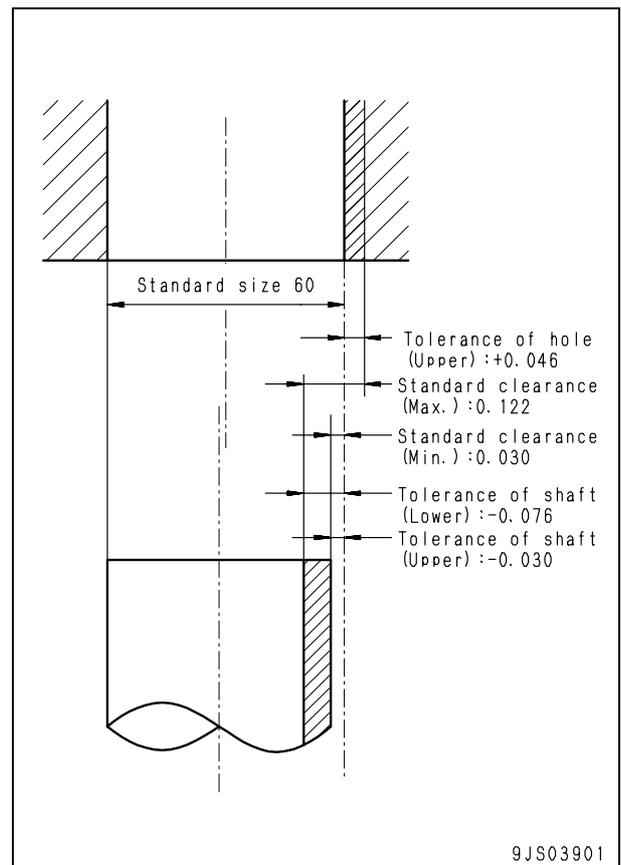

**2. Standard clearance and standard value**

- The clearance made when new parts are assembled is called the “standard clearance”, which is indicated by the range from the minimum clearance to the maximum clearance.
- When some parts are repaired, the clearance is generally adjusted to the standard clearance.
- A value of performance and function of new products or equivalent is called the “standard value”, which is indicated by a range or a target value.
- When some parts are repaired, the value of performance/function is set to the standard value.

**3. Standard interference**

- When the diameter of a hole of a part shown in the given standard size and tolerance table is smaller than that of the mating shaft, the difference between those diameters is called the “interference”.
- The range (A – B) from the difference (A) between the minimum size of the shaft and the maximum size of the hole to the difference (B) between the maximum size of the shaft and the minimum size of the hole is the “standard interference”.
- After repairing or replacing some parts, measure the size of their hole and shaft and check that the interference is in the standard range.

**4. Repair limit and allowable value or allowable dimension**

- The size of a part changes because of wear and deformation while it is used. The limit of changed size is called the “repair limit”.
- If a part is worn to the repair limit, it must be replaced or repaired.
- The performance and function of a product lowers while it is used. A value which the product can be used without causing a problem is called the “allowable value” or “allowable dimension”.
- If a product is worn to the allowable value, it must be checked or repaired. Since the permissible value is estimated from various tests or experiences in most cases, however, it must be judged after considering the operating condition and customer's requirement.

**5. Clearance limit**

- Parts can be used until the clearance between them is increased to a certain limit. The limit at which those parts cannot be used is called the “clearance limit”.
- If the clearance between the parts exceeds the clearance limit, they must be replaced or repaired.

**6. Interference limit**

- The allowable maximum interference between the hole of a part and the shaft of another part to be assembled is called the “interference limit”.
- The interference limit shows the repair limit of the part of smaller tolerance.
- If the interference between the parts exceeds the interference limit, they must be replaced or repaired.

## Handling of electric equipment and hydraulic component


To maintain the performance of the machine over a long period, and to prevent failures or other troubles before they occur, correct “operation”, “maintenance and inspection”, “troubleshooting”, and “repairs” must be carried out. This section deals particularly with correct repair procedures for mechatronics and is aimed at improving the quality of repairs. For this purpose, it gives sections on “Handling electric equipment” and “Handling hydraulic equipment” (particularly gear oil and hydraulic oil).

### Points to remember when handling electric equipment

#### 1. Handling wiring harnesses and connectors

Wiring harnesses consist of wiring connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protectors or tubes used for protecting the wiring.


Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain, water, heat, or vibration. Furthermore, during inspection and repair operations, they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling wiring harnesses.

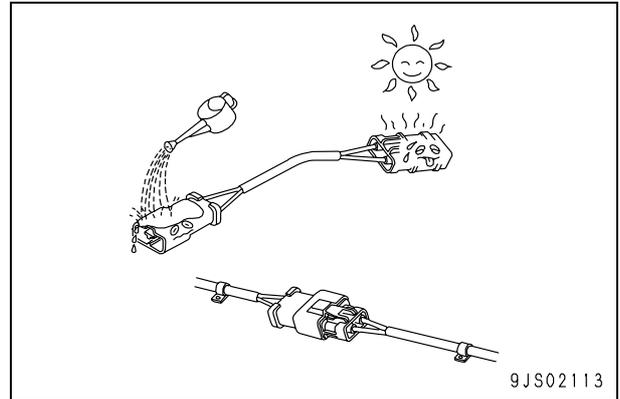

#### 2. Main failures occurring in wiring harness

##### 1) Defective contact of connectors (defective contact between male and female)

Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of the connectors is deformed or the position is not correctly aligned, or because there is corrosion or oxidization of the contact surfaces. The corroded or oxidized contact surfaces may become shiny again (and contact may become normal) by connecting and disconnecting the connector about 10 times.

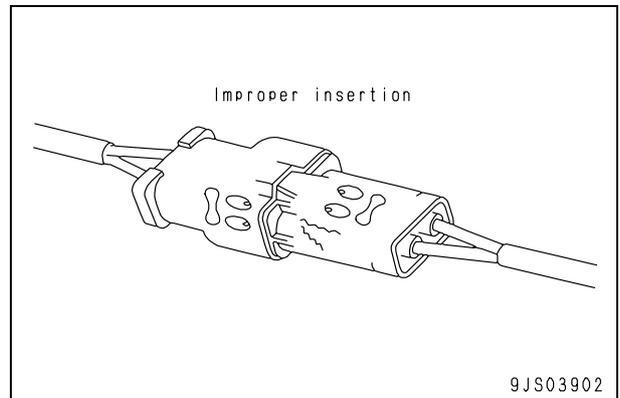

##### 2) Defective crimping or soldering of connectors

The pins of the male and female connectors are in contact at the crimped terminal or soldered portion, but if there is excessive force brought to bear on the wiring, the plating at the joint will peel and cause improper connection or breakage.

