

Product: KOMATSU Bulldozer GALEO D65EX-15E0,D65PX-15E0,D65WX-15E0 Service Repair Manual 69001-69012

Full Download: <https://www.arepairmanual.com/downloads/komatsu-bulldozer-galeo-d65ex-15e0-d65px-15e0-d65wx-15e0-service-repair-workshop-manual/>

# Shop Manual

BULLDOZER

**GALEO**

**D65EX -15E0**  
**D65PX -15E0**  
**D65WX-15E0**

SERIAL NUMBERS      D65EX- 69001  
D65PX- 69001      and up  
D65WX- 69001

**KOMATSU**

Sample of manual. Download All 1106 pages at:

<https://www.arepairmanual.com/downloads/komatsu-bulldozer-galeo-d65ex-15e0-d65px-15e0-d65wx-15e0-service-repair-workshop-manual/>

# **BULLDOZER**

**D65EX-15E0**

**D65PX-15E0**

**D65WX-15E0**

**Machine model      Serial number**

**D65EX-15E0              69001 and up**

**D65PX-15E0              69001 and up**

**D65WX-15E0              69001 and up**

---

## **00 Index and foreword**

### **Index**

---

---

Organization list of the shop manual .....	2
Table of contents .....	4

Sample of manual. Download All 1106 pages at:

<https://www.arepairmanual.com/downloads/komatsu-bulldozer-galeo-d65ex-15e0d65px-15e0d65wx-15e0-service-repair-wc>

**D65EX, PX, WX-15E0**

**KOMATSU**

## Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00046-02
00 Index and foreword	SEN00047-02
Index	SEN00055-02 ●
Foreword and general information	SEN00056-01
01 Specification	SEN00048-01
Specification and technical data	SEN00057-01
10 Structure, function and maintenance standard	SEN00049-01
Engine and cooling system	SEN00281-01
Power train, Part 1	SEN00282-01
Power train, Part 2	SEN00283-01
Undercarriage and frame	SEN00284-01
Hydraulic system, Part 1	SEN00285-01
Hydraulic system, Part 2	SEN00286-01
Hydraulic system, Part 3	SEN00287-01
Work equipment	SEN00288-00
Cab and its attachments	SEN00289-00
Electrical system	SEN00290-01
20 Standard value table	SEN00050-00
Standard service value table	SEN00584-00
30 Testing and adjusting	SEN00051-00
Testing and adjusting, Part 1	SEN00585-00
Testing and adjusting, Part 2	SEN00586-00
Testing and adjusting, Part 3	SEN00587-00

40 Troubleshooting	SEN00052-00
General information on troubleshooting	SEN00588-00
Troubleshooting by failure code (Display of code), Part 1	SEN00589-00
Troubleshooting by failure code (Display of code), Part 2	SEN00590-00
Troubleshooting by failure code (Display of code), Part 3	SEN00591-00
Troubleshooting by failure code (Display of code), Part 4	SEN00592-00
Troubleshooting of electrical system (E-mode)	SEN00593-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00594-00
Troubleshooting of engine (S-mode)	SEN00595-00
50 Disassembly and assembly	SEN00053-00
General information on disassembly and assembly	SEN00944-00 ○
Engine and cooling system, Part 1	SEN00945-00 ○
Engine and cooling system, Part 2	SEN00946-00 ○
Power train, Part 1	SEN00947-00 ○
Power train, Part 2	SEN00948-00 ○
Undercarriage and frame, Part 1	SEN00949-00 ○
Undercarriage and frame, Part 2	SEN00950-00 ○
Hydraulic system	SEN00951-00 ○
Work equipment	SEN00952-00 ○
Cab and its attachments	SEN00953-00 ○
Electrical system	SEN00954-00 ○
90 Diagrams and drawings	SEN00054-01
Hydraulic diagrams and drawings	SEN00058-00
Electrical diagrams and drawings	SEN00059-01

## Table of contents

00 Index and foreword	
Index	SEN00055-02
Organization list of the shop manual .....	2
Table of contents.....	4
Foreword and general information	SEN00056-01
Foreword and general information .....	2
Safety notice .....	2
How to read the shop manual .....	6
Explanation of terms for maintenance standard .....	8
Handling electric equipment and hydraulic component .....	10
How to read electric wire code.....	18
Method of disassembling and connecting push-pull type coupler .....	21
Standard tightening torque table .....	24
Conversion table .....	28
01 Specification	
Specification and technical data	SEN00057-01
Specification and technical data .....	2
Specification dimensions .....	2
Specifications.....	3
Weight table .....	8
Table of fuel, coolant and lubricants .....	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00281-01
Engine and cooling system .....	2
Cooling system .....	2
Cooling fan pump.....	4
Cooling fan motor .....	12
Power train, Part 1	SEN00282-01
Power train, Part 1.....	2
Power train.....	2
HSS system .....	4
General view of power train unit .....	6
Power train hydraulic piping drawing .....	8
Transmission, steering and brake control.....	10
Damper and universal joint .....	12
Torque converter and PTO.....	15
Transmission.....	20
Transmission clutch ECMV .....	32
Main relief valve and torque converter relief valve .....	38
Lubrication relief valve .....	40
Power train, Part 2	SEN00283-01
Power train, Part 2.....	2
Bevel gear shaft, HSS and brake .....	2
Brake valve .....	18
Final drive .....	24

Undercarriage and frame	SEN00284-01
Undercarriage and frame .....	2
Main frame.....	2
Suspension.....	4
Track frame and idler cushion .....	10
Idler.....	14
Track roller.....	16
Carrier roller.....	17
Sprocket.....	18
Track shoe .....	20
Hydraulic system, Part 1	SEN00285-01
Hydraulic system, Part 1 .....	2
Work equipment hydraulic piping diagram .....	2
Work equipment control.....	4
Hydraulic tank and filter .....	6
Scavenging pump.....	8
Power train and steering lubrication pump .....	9
HSS pump .....	10
HSS motor .....	28
Hydraulic system, Part 2	SEN00286-01
Hydraulic system, Part 2 .....	2
Control valve.....	2
Self pressure reducing valve .....	36
Hydraulic system, Part 3	SEN00287-01
Hydraulic system, Part 3 .....	2
PPC valve (blade lift, blade tilt).....	2
PPC valve (ripper) .....	8
Electric lever (steering).....	12
Quick drop valve.....	16
PPC lock valve .....	18
Accumulator.....	19
Work equipment	SEN00288-00
Work equipment .....	2
Blade .....	2
Cutting edge and end bit .....	6
Ripper .....	7
Hydraulic cylinder .....	8
Piston valve .....	11
Cab and its attachments	SEN00289-00
Cab and its attachments.....	2
Cab mount .....	2
Cab .....	3
Air conditioner.....	5
Electrical system	SEN00290-01
Electrical system .....	2
Monitor system .....	2
Monitor panel .....	4
Engine control.....	9
Engine control system .....	10
Cooling system control system.....	12
System components .....	14
Palm command control system .....	23
KOMTRAX terminal system.....	25
KOMTRAX terminal .....	26
Sensor .....	27

20 Standard value table	
Standard service value table	SEN00584-00
Standard service value table for engine.....	2
Standard service value table for chassis .....	4
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN00585-00
Testing and adjusting, Part 1.....	3
Tools for testing, adjusting, and troubleshooting.....	3
Measuring engine speed .....	5
Measuring intake air pressure (boost pressure) .....	7
Measuring exhaust temperature .....	9
Measuring exhaust gas color.....	11
Adjusting valve clearance .....	12
Measuring compression pressure.....	15
Measuring blow-by pressure.....	19
Measuring engine oil pressure.....	20
Handling of fuel system devices .....	21
Releasing residual pressure from fuel system.....	21
Testing fuel pressure.....	22
Testing fuel return and leak amount.....	26
Bleeding air from fuel circuit .....	28
Testing fuel circuit for leakage .....	29
Handling of reduced cylinder mode operation .....	30
Testing and adjusting air conditioner compressor belt tension .....	31
Adjusting fuel control dial and decelerator pedal .....	32
Measuring power train oil pressure.....	34
Adjusting transmission speed sensor (replacement procedure).....	38
Simple method to test brake performance.....	39
Adjusting brake pedal .....	40
Adjusting parking brake lever .....	42
Emergency escape method when power train has trouble.....	43
Adjusting clearance of idler.....	46
Inspecting wear of sprocket.....	47
Testing and adjusting track shoe tension .....	47
Testing and adjusting work equipment and HSS oil pressure.....	48
Testing control circuit basic pressure .....	51
Measuring PPC valve output pressure .....	52
Adjusting play of work equipment PPC valve .....	54
Measuring internal leakage of work equipment cylinder.....	55
Bleeding air from work equipment cylinder.....	55
Releasing residual pressure in work equipment cylinder .....	56
Checking parts which caused hydraulic drift of blade or ripper.....	57
Adjusting work equipment lock lever .....	58
Measuring fan motor speed .....	59
Measuring fan pump circuit pressure .....	60
Bleeding air from fan pump.....	61
Adjusting straight tiltdozer.....	62
Testing and adjusting operator cab.....	64
Testing and adjusting, Part 2	SEN00586-00
Testing and adjusting, Part 2.....	2
Special functions of monitor panel (EMMS).....	2
Testing and adjusting, Part 3	SEN00587-00
Testing and adjusting, Part 3.....	2
Handling of voltage circuit of engine controller .....	2
Adjustment method when controller has been replaced.....	2
Preparation work for troubleshooting for electric system .....	4

Inspection procedure of diode .....	9
Pm-Clinic service .....	10
How to start operation of KOMTRAX terminal .....	20
Lamp display of KOMTRAX terminal .....	24
 40 Troubleshooting	
General information on troubleshooting .....	SEN00588-00
Points to remember when troubleshooting .....	2
How to proceed troubleshooting .....	3
Checks before troubleshooting .....	4
Classification and procedures of troubleshooting .....	5
How to distinguish wire code .....	8
Wiring table for connector pin numbers .....	12
T-adapter box and T-adapter table .....	35
Troubleshooting by failure code (Display of code), Part 1 .....	SEN00589-00
Troubleshooting by failure code (Display of code), Part 1 .....	3
Failure code table .....	3
Before troubleshooting by failure codes .....	10
Contents of troubleshooting table .....	12
Failure code [1500L0] Transmission clutch: Dual engagement .....	14
Failure code [15SAL1] Forward clutch: Fill signal is ON when command current is OFF .....	16
Failure code [15SALH] Forward clutch: Fill signal is OFF when command current is ON .....	18
Failure code [15SBL1] Reverse clutch: Fill signal is ON when command current is OFF .....	20
Failure code [15SBLH] Reverse clutch: Fill signal is OFF when command current is ON .....	22
Failure code [15SEL1] 1st clutch: Fill signal is ON when command current is OFF .....	24
Failure code [15SELH] 1st clutch: Fill signal is OFF when command current is ON .....	25
Failure code [15SFL1] 2nd clutch: Fill signal is ON when command current is OFF .....	26
Failure code [15SFLH] 2nd clutch: Fill signal is OFF when command current is ON .....	28
Failure code [15SGL1] 3rd clutch: Fill signal is ON when command current is OFF .....	30
Failure code [15SGLH] 3rd clutch: Fill signal is OFF when command current is ON .....	32
Failure code [AB00MA] Alternator: Malfunction .....	34
Failure code [B@BAZG] Engine oil: Oil pressure too low .....	34
Failure code [B@BCNS] Radiator coolant: Overheat .....	35
Failure code [B@CENS] Power train oil: Overheat .....	35
Failure code [B@HANS] Hydraulic oil: Overheat .....	36
Failure code [CA111] Engine controller: Abnormality in controller .....	37
Failure code [CA115] Abnormal engine Ne and Bkup speed sensors:	
Abnormal speed sensor signal .....	37
Failure code [CA122] Charge pressure sensor tool high: Excessively high voltage detected .....	38
Failure code [CA123] Charge pressure sensor too low: Excessively low voltage detected .....	40
Failure code [CA131] Decelerator pedal sensor tool high: Excessively high voltage detected .....	42
Failure code [CA132] Decelerator pedal sensor too low: Excessively low voltage detected .....	44
Failure code [CA144] Coolant temperature sensor too high:	
Excessively high voltage detected .....	46
Failure code [CA145] Coolant temperature sensor too low: Excessively low voltage detected .....	48
Failure code [CA153] Charge temperature sensor too high:	
Excessively high voltage detected .....	50
Failure code [CA154] Charge temperature sensor too low: Excessively low voltage detected .....	52
Failure code [CA155] Charge temperature too high and engine speed derated:	
Exceeded upper control limit of temperature .....	54
Failure code [CA187] Sensor power source 2 too low: Excessively low voltage detected .....	56
Failure code [CA221] Atmospheric pressure sensor too high:	
Excessivley high voltage detected .....	58
Failure code [CA222] Atmospheric pressure sensor too low:	
Excessively low voltage detected .....	60
Failure code [CA227] Sensor power source No. 2 too high:	
Excessively high voltage detected .....	62

Failure code [CA234] Engine over speed: Excessively high speed.....	64
Failure code [CA238] Abnormal power source for Ne speed sensor: Excessively low voltage detected.....	65
Failure code [CA271] IMV/PCV1 short circuit: Short circuit.....	66
Failure code [CA272] IMV/PCV1 disconnection: Disconnection.....	68
Failure code [CA281] Abnormal supply pump pressure balance: Abnormal pressure feed of fuel .....	70
Troubleshooting by failure code (Display of code), Part 2	SEN00590-00
Troubleshooting by failure code (Display of code), Part 2.....	4
Failure code [CA322] Injector No. 1 system disconnection or short circuit: disconnection, short circuit.....	4
Failure code [CA323] Injector No. 5 system disconnection or short circuit: disconnection, short circuit.....	6
Failure code [CA324] Injector No. 3 system disconnection or short circuit: disconnection, short circuit.....	8
Failure code [CA325] Injector No. 6 system disconnection or short circuit: disconnection, short circuit.....	10
Failure code [CA331] Injector No. 2 system disconnection or short circuit: disconnection, short circuit.....	12
Failure code [CA332] Injector No. 4 system disconnection or short circuit: disconnection, short circuit .....	14
Failure code [CA342] Engine controller data matching error: matching error.....	16
Failure code [CA352] Sensor power source 1 too low: Excessively low voltage detected .....	18
Failure code [CA386] Sensor power source 1 too high: Excessively high voltage detected ...	20
Failure code [CA428] Water detection sensor too high: Excessively high voltage detected ...	22
Failure code [CA429] Water detection sensor too low: Excessively low voltage detected .....	24
Failure code [CA435] Abnormal engine oil pressure switch: Abnormal signal circuit.....	26
Failure code [CA441] Power source voltage too low: Excessively low voltage detected.....	28
Failure code [CA442] Power source voltage too high: Excessively high voltage has occurred in the controller power source circuit.....	30
Failure code [CA449] Common rail pressure too high (2): Excessively high pressure trouble occurred .....	32
Failure code [CA451] Common rail pressure sensor too high: Excessively high voltage detected .....	36
Failure code [CA452] Common rail pressure sensor too low: Excessively low voltage detected .....	38
Failure code [CA488] Charge temperature too high and torque derated: Exceeded upper control limit of temperature .....	40
Failure code [CA553] Common rail pressure too high (1): Excessively high pressure detected.....	41
Failure code [CA559] Loss of pressure feed from supply pump (1): Loss of pressure feed detected .....	42
Failure code [CA689] Abnormal engine Ne speed sensor: Abnormal signal.....	44
Failure code [CA731] Abnormal engine Bkup speed sensor phase: Abnormal phase .....	46
Failure code [CA757] Loss of all engine controller data: Loss of all data .....	48
Failure code [CA778] Abnormal engine Bkup speed sensor: Abnormal Bkup signal .....	50
Failure code [CA1633] Abnormal KOMNET: Abnormal communication .....	52
Failure code [CA2185] Decelerator pedal sensor power source too high: Excessively high voltage detected .....	54
Failure code [CA2186] Decelerator pedal sensor power source too low: Excessively low voltage detected.....	55
Failure code [CA2249] Loss of pressure feed from supply pump (2): Loss of pressure feed detected .....	56
Failure code [CA2265] Electric lift pump disconnection: Disconnection .....	58
Failure code [CA2266] Electric lift pump short circuit: Short circuit .....	60
Failure code [CA2311] Abnormal IMV solenoid: Abnormal resistance .....	62
Failure code [CA2555] Air intake heater relay disconnection: Disconnection .....	64
Failure code [CA2556] Air intake heater relay short circuit: Short circuit.....	66

Troubleshooting by failure code (Display of code), Part 3	SEN00591-00
Troubleshooting by failure code (Display of code), Part 3.....	4
Failure code [D110KA] Battery relay: Short circuit .....	4
Failure code [D110KB] Battery relay: Disconnection.....	6
Failure code [D130KA] Neutral safety relay: Disconnection.....	8
Failure code [D130KB] Neutral safety relay: Short circuit .....	10
Failure code [D161KA] Back-up alarm relay: Disconnection.....	12
Failure code [D161KB] Back-up alarm relay: Short circuit .....	14
Failure code [DAFRKR] Monitor panel CAN communication: Defective communication .....	16
Failure code [DAQ0KT] [DB30KT] Steering and transmission controller: Abnormality in controller .....	18
Failure code [DAQ1KK] [DB31KK] Main power source of steering and transmission controller: Power source voltage drop and input .....	20
Failure code [DAQ2KK] [DB32KK] Load power source of steering and transmission controller: Power source voltage drop and input .....	22
Failure code [DAQ5KK] [DB35KK] Steering and transmission controller sensor 5 V power source: Power source voltage drop and input.....	24
Failure code [DAQ6KK] [DB36KK] Steering and transmission controller sensor 24 V power source: Power source voltage drop and input.....	26
Failure code [DAQ9KQ] [DB39KQ] Steering and transmission controller model selection: Inconsistency in model select signal.....	28
Failure code [DB2RKR] Steering and transmission controller CAN communication: Defective communication .....	30
Failure code [DB30KT] [DAQ0KT] Steering and transmission controller: Abnormality in controller .....	32
Failure code [DB31KK] [DAQ1KK] Main power source of steering and transmission controller: Power source voltage drop and input .....	32
Failure code [DAB32KK] [DAQ2KK] Load power source of steering and transmission controller: Power source voltage drop and input .....	32
Failure code [DB35KK] [DAQ5KK] Steering and transmission controller sensor 5 V power source: Power source voltage drop and input.....	32
Failure code [DB36KK] [DAQ6KK] Steering and transmission controller sensor 24 V power source: Power source voltage drop and input.....	32
Failure code [DB39KQ] [DAQ9KQ] Steering and transmission controller model selection: Inconsistency in model select signal.....	32
Failure code [DD12KA] Shift up switch: Disconnection .....	34
Failure code [DD12KB] Shift up switch: Short circuit.....	36
Failure code [DD13KA] Shift down switch: Disconnection .....	38
Failure code [DD13KB] Shift down switch: Short circuit .....	40
Failure code [DD14KA] [DDQ2KA] Parking brake lever switch: Disconnection .....	42
Failure code [DD14KB] [DDQ2KB] Parking brake lever switch: Short circuit .....	44
Failure code [DDN7KA] Pitch control switch: Disconnection .....	46
Failure code [DDN7KB] Pitch control switch: Short circuit .....	48
Failure code [DDQ2KA] [DD14KA] Parking brake lever switch: Disconnection .....	50
Failure code [DDQ2KB] [DD14KB] Parking brake lever switch: Short circuit .....	50
Failure code [DGS1KX] Hydraulic oil temperature sensor: Input signal is out of normal range	52
Failure code [DGT1KA] Power train oil temperature sensor: Disconnection .....	54
Failure code [DGT1KX] Power train oil temperature sensor: Input signal is out of normal range .....	55
Failure code [DK10KA] Fuel dial: Disconnection .....	56
Failure code [DK10KB] Fuel dial: Short circuit .....	58
Failure code [DK30KA] Steering potentiometer (1): Disconnection .....	60
Failure code [DK30KB] Steering potentiometer (1): Short circuit .....	62
Failure code [DK30KX] Steering potentiometer: Input signal is out of normal range.....	64
Failure code [DK30KZ] Steering potentiometer:   Disconnection or short circuit (Double failure) .....	65
Failure code [DK30L8] Steering potentiometer: Inconsistent analog signal .....	65
Failure code [DK31KA] Steering potentiometer (2): Disconnection .....	66

Failure code [DK31KB] Steering potentiometer (2): Short circuit.....	68
Failure code [DK40KA] Brake potentiometer: Disconnection .....	70
Failure code [DK40KB] Brake potentiometer: Short circuit.....	71
Failure code [DK55KX] Forward-reverse potentiometer: Input signal is out of normal range..	72
Failure code [DK55KZ] Forward-reverse potentiometer: Disconnection or short circuit (Double failure) .....	73
Failure code [DK55L8] Forward-reverse potentiometer: Inconsistent analog signal .....	74
Failure code [DK56KA] Forward-reverse potentiometer (1): Short circuit .....	76
Failure code [DK56KB] Forward-reverse potentiometer (1): Disconnection.....	78
Failure code [DK57KA] Forward-reverse potentiometer (2): Disconnection.....	80
Failure code [DK57KB] Forward-reverse potentiometer (2): Short circuit .....	82
Troubleshooting by failure code (Display of code), Part 4	SEN00592-00
Troubleshooting by failure code (Display of code), Part 4.....	3
Failure code [DKH1KA] [DKH1KX] Pitch angle sensor: Short circuit.....	3
Failure code [DKH1KX], [DKH1KA] or [DKH1KB] Pitch angle sensor: Input signal out of range.....	5
Failure code [DLT3KA] Transmission output speed sensor: Disconnection .....	6
Failure code [DLT3KB] Transmission output speed sensor: Short circuit.....	7
Failure code [DV00KB] Alarm buzzer: Short circuit.....	8
Failure code [DW5AKA] Pitch control solenoid: Disconnection .....	9
Failure code [DW5AKB] Pitch control solenoid: Short circuit.....	10
Failure code [DW5AKY] Pitch control solenoid: Short circuit to power source line .....	11
Failure code [DW7BKA] Fan reverse solenoid: Disconnection.....	12
Failure code [DW7BKB] Fan reverse solenoid: Short circuit .....	13
Failure code [DWN1KA] HSS EPC solenoid right: Disconnection.....	14
Failure code [DWN1KB] HSS EPC solenoid right: Short circuit .....	15
Failure code [DWN1KY] HSS EPC solenoid right: Short circuit to power source line .....	16
Failure code [DWN2KA] HSS EPC solenoid left: Disconnection .....	17
Failure code [DWN2KB] HSS EPC solenoid left: Short circuit.....	18
Failure code [DWN2KY] HSS EPC solenoid left: Short circuit to power source line .....	19
Failure code [DWN5KA] Fan pump TVC solenoid: Disconnection .....	20
Failure code [DWN5KB] Fan pump TVC solenoid: Short circuit.....	21
Failure code [DWN5KY] Fan pump TVC solenoid: Short circuit in power source line .....	22
Failure code [DXA0KA] HSS pump TVC solenoid: Disconnection .....	23
Failure code [DXA0KB] HSS pump TVC solenoid: Short circuit.....	24
Failure code [DXA0KY] HSS pump TVC solenoid: Short circuit to power source line.....	25
Failure code [DXH4KA] 1st clutch ECMV: Disconnection.....	26
Failure code [DXH4KB] 1st clutch ECMV: Short circuit .....	27
Failure code [DXH4KY] 1st clutch ECMV: Short circuit to power source line .....	28
Failure code [DXH5KA] 2nd clutch ECMV: Disconnection .....	29
Failure code [DXH5KB] 2nd clutch ECMV: Short circuit .....	30
Failure code [DXH5KY] 2nd clutch ECMV: Short circuit to power source line .....	31
Failure code [DXH6KA] 3rd clutch ECMV: Disconnection .....	32
Failure code [DXH6KB] 3rd clutch ECMV: Short circuit.....	33
Failure code [DXH6KY] 3rd clutch ECMV: Short circuit to power source line.....	34
Failure code [DXH7KA] Reverse clutch ECMV: Disconnection .....	35
Failure code [DXH7KB] Reverse clutch ECMV: Short circuit.....	36
Failure code [DXH7KY] reverse clutch ECMV: Short circuit to power source line.....	37
Failure code [DXH8KA] Forward clutch ECMV: Disconnection .....	38
Failure code [DXH8KB] Forward clutch ECMV: Short circuit.....	39
Failure code [DXH8KY] forward clutch ECMV: Short circuit to power source line.....	40
Troubleshooting of electrical system (E-mode)	SEN00593-00
Troubleshooting of electrical system (E-mode) .....	3
Contents of troubleshooting table .....	5
Contents of troubleshooting table .....	5
E-1 The engine does not start (the starting motor does not turn) .....	6
E-2 The preheater does not operate.....	10

E-3 The monitor panel does not light up at all when the starting switch is turned ON.....	14
E-4 When the starting switch is turned on, the monitor panel completely remains lighted and does not go out.....	15
E-5 While the engine is running, the battery charge level caution lamp flashes.....	16
E-6 While the engine is running, the emergency warning item flashes.....	18
E-7 While the preheater is operating, the preheating pilot lamp does not light up.....	22
E-8 The coolant temperature gauge does not indicate correctly.....	24
E-9 The power train oil temperature gauge does not indicate correctly.....	26
E-10 Hydraulic oil temperature gauge does not indicate properly.....	28
E-11 Fuel gauge does not indicate properly.....	30
E-12 Gear speed and engine speed are not indicated properly.....	31
E-13 The preset mode service meter does not indicate normally.....	31
E-14 The warning lamp does not flash or does not go out.....	31
E-15 The alarm buzzer does not sound or does not stop.....	32
E-16 Auto shift down is not possible or is not released.....	34
E-17 The buzzer cancel switch does not work.....	36
E-18 The information switch does not work.....	38
E-19 The fan cleaning does not operate or cannot be reset.....	40
E-20 The preset mode does not operate or cannot be reset.....	42
E-21 The monitor panel cannot be set in the service mode or cannot be set out of the service mode.....	44
E-22 The back-up alarm does not sound.....	46
E-23 The head lamp and rear lamp do not light up.....	48
E-24 The horn does not sound or does not stop.....	51
E-25 Malfunction of wipers.....	52
E-26 Washer does not spray water.....	68
E-27 The air conditioner does not operate.....	74
E-28 KOMTRAX system does not operate normally.....	78
Troubleshooting of hydraulic and mechanical system (H-mode) .....	SEN00594-00
Troubleshooting of hydraulic and mechanical system (H-mode) .....	3
Contents of troubleshooting table .....	3
H-1 There is no travel power (no drawbar pull) .....	4
H-2 Machine does not move (at 2nd or 3rd speed) .....	5
H-3 Machine does not move at any gear speed .....	6
H-4 Machine travels only in one direction, forward or in reverse .....	7
H-5 When gear is shifted or travel direction is changed, large time lag is made .....	8
H-6 Machine cannot be steered (Machine does not turn leftward or rightward) .....	9
H-7 Steering speed or power is low .....	9
H-8 Brake does not work .....	10
H-9 Overheat of power train oil .....	11
H-10 Abnormal sound comes out from around HSS and work equipment pump or HSS motor .....	12
H-11 All work equipment speeds are slow .....	12
H-12 Work equipment does not move .....	13
H-13 Blade lift speed is slow or lacks power .....	13
H-14 Blade tilt speed is slow or lacks power .....	14
H-15 Ripper lift speed is slow or lacks power .....	14
H-16 Excessive hydraulic drift of blade lift .....	15
H-17 Excessive hydraulic drift of blade tilt .....	15
H-18 Excessive hydraulic drift of ripper lift .....	16
Troubleshooting of engine (S-mode) .....	SEN00595-00
Troubleshooting of engine (S-mode) .....	3
Method of using troubleshooting charts .....	3
S-1 Starting performance is poor .....	6
S-2 Engine does not start .....	7
S-3 Engine does not pick up smoothly .....	10
S-4 Engine stops during operations .....	11

S-5 Engine does not rotate smoothly.....	12
S-6 Engine lacks output (or lacks power) .....	13
S-7 Exhaust smoke is black (imcomplete combustion) .....	14
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	15
S-9 Oil becomes contaminated quickly.....	16
S-10 Fuel consumption is excessive .....	17
S-11 Oil is in coolant (or coolant spurts back, or coolant level goes down).....	18
S-12 Oil pressure drops.....	19
S-13 Oil level rises (water, fuel in oil).....	20
S-14 Coolant temperature becomes too high (overheating).....	21
S-15 Abnormal noise is made.....	22
S-16 Vibration is excessive.....	23
 50 Disassembly and assembly	
General information on disassembly and assembly	SEN00944-00
How to read this manual .....	2
Coating materials list .....	4
Special tool list .....	7
Sketches of special tools .....	12
Engine and cooling system, Part 1	SEN00945-00
Removal and installation of fuel supply pump assembly .....	2
Removal and installation of cylinder head assembly .....	6
Removal and installation of fuel injector assembly .....	18
Removal and installation of engine front seal .....	20
Removal and installation of engine rear seal.....	23
Engine and cooling system, Part 2	SEN00946-00
Removal and installation of engine assembly.....	2
Removal and installation of radiator assembly .....	9
Removal and installation of air aftercooler assembly .....	13
Removal and installation of fan drive assembly.....	14
Removal and installation of fan motor assembly .....	15
Removal and installation of fuel tank assembly.....	16
Removal and installation of damper assembly .....	18
Removal and installation of engine hood assembly.....	19
Power train, Part 1	SEN00947-00
Removal and installation of power train unit assembly.....	2
Disconnection and connection of power train unit assembly .....	5
Disassembly and assembly of PTO assembly.....	9
Disassembly and assembly of torque converter assembly.....	15
Disassembly and assembly of TORQFLOW transmission assembly .....	20
Power train, Part 2	SEN00948-00
Disassembly and assembly of HSS assembly.....	2
Removal and installation of final drive assembly .....	20
Disassembly and assembly of final drive assembly.....	22
Undercarriage and frame, Part 1	SEN00949-00
Removal and installation of track frame assembly .....	2
Removal and installation of idler assembly.....	4
Disassembly and assembly of idler assembly .....	5
Removal and installation of recoil spring assembly .....	9
Disassembly and assembly of recoil spring assembly.....	10
Removal and installation of track roller assembly.....	14
Disassembly and assembly of track roller assembly .....	15
Removal and installation of carrier roller assembly .....	19
Disassembly and assembly of carrier roller assembly.....	20

Undercarrige and frame, Part 2	SEN00950-00
Expansion and installation of track shoe assembly .....	2
Whole disassembly and whole assembly of track shoe assembly .....	5
Field disassembly and assembly of one link .....	20
Removal and installation of pivot shaft assembly .....	27
Removal and installation of equalizer bar assembly .....	28
Disassembly and assembly of equalizer bar side bushing .....	30
Hydraulic system	SEN00951-00
Removal and installation of control valve assembly .....	2
Disassembly and assembly of control valve assembly .....	4
Removal and installation of HSS pump assembly .....	5
Removal and installation of power train and lubricating oil pump assembly .....	6
Removal and installation of cooling fan pump assembly .....	7
Removal and installation of scavenging pump assembly .....	9
Removal and installation of HSS motor assembly .....	10
Disassembly and assembly of hydraulic cylinder assembly .....	11
Work equipment	SEN00952-00
Removal and installation of blade assembly .....	2
Cab and its attachments	SEN00953-00
Removal and installation of ROPS guard .....	2
Removal and installation of operator's cab assembly .....	3
Removal and installation of operator's cab glass (Stuck glass) .....	9
Removal and installation of floor frame assembly .....	17
Electrical system	SEN00954-00
Removal and installation of engine controller .....	2
Removal and installation of steering and transmission controller assembly .....	4
Removal and installation of KOMTRAX terminal .....	5
90 Diagrams and drawings	
Hydraulic diagrams and drawings	SEN00058-00
Hydraulic diagrams and drawings .....	2
Power train hydraulic circuit diagram .....	2
Hydraulic circuit diagram .....	3
Electrical diagrams and drawings	SEN00059-01
Electrical diagrams and drawings .....	3
Electrical circuit diagram .....	3
Connector arrangement diagram .....	5

D65EX, PX, WX-15E0 Bulldozer

---

Form No. SEN00055-02

© 2006 KOMATSU  
All Rights Reserved  
Printed in Japan 03-06 (01)

---

# **BULLDOZER**

## **D65EX-15E0**

## **D65PX-15E0**

## **D65WX-15E0**

**Machine model      Serial number**

D65EX-15E0	69001 and up
D65PX-15E0	69001 and up
D65WX-15E0	69001 and up

---

## **00 Index and foreword**

## **Foreword and general information**

---

Foreword and general information .....	2
Safety notice .....	2
How to read the shop manual .....	6
Explanation of terms for maintenance standard.....	8
Handling electric equipment and hydraulic component.....	10
How to read electric wire code .....	18
Method of disassembling and connecting push-pull type coupler.....	21
Standard tightening torque table .....	24
Conversion table .....	28

# Foreword and general information

(Rev. 2005/11)

## Safety notice

### Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **⚠** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

### 1. General precautions

**⚠ Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine.**

- 1) Before carrying out any greasing or repairs, read all the safety plates stuck to the machine. For the locations of the safety plates and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
  - Always wear safety glasses when hitting parts with a hammer.
  - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.

- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.

### Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

### 2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.


- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.
- 3. Precautions during work**
  - 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spouting out.
  - 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
  - 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
  - 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
  - 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
  - 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
  - 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
  - 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
  - 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
  - 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
  - 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
  - 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
  - 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
  - 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
  - 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
  - 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

#### 4. Precautions for sling work and making signs


- 1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is seen well from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.
  - Do not stand under the load.
  - Do not step on the load.
- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

**⚠ Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.**

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

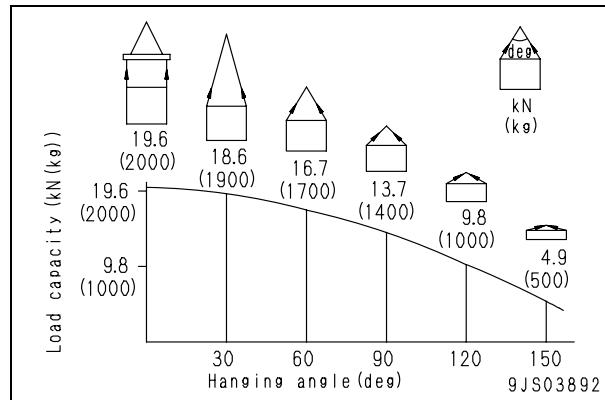

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
  - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

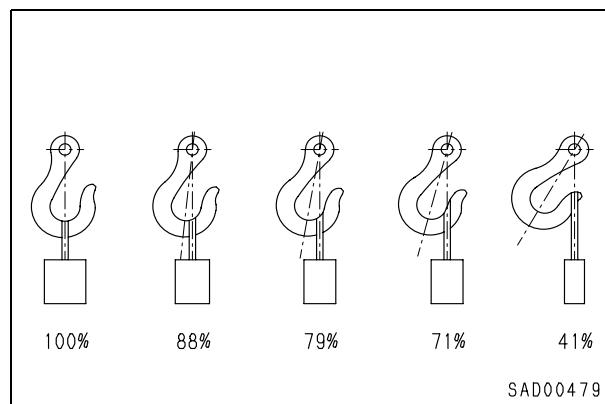

- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
  - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
  - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
- Do not lift up the load slantly.

13) When lifting down a load, observe the following.

- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
- Check that the load is stable, and then remove the sling.
- Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. **Precautions for using mobile crane**

★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. **Precautions for using overhead hoist crane**

⚠ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.

14) If you find an obstacle around the hoist, stop the operation.

15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. **Selecting wire ropes**

1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes  
(Standard "Z" twist ropes without galvanizing)  
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope	Allowable load	
mm	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

## How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

### 1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

#### 00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

#### 01. Specification

This section explains the specifications of the machine.

#### 10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

#### 20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

#### 30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

#### 40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

#### 50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

#### 90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume  
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume  
This section explains the method of reproducing, repairing, and replacing parts.

### 2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

### 3. Filing method

File by the brochures in the correct order of the form number printed in the shop manual composition table.

- **Revised edition mark**

When a manual is revised, the ones and tens digits of the form number of each brochure is increased by 1. (Example: 00, 01, 02 ...)

- **Revisions**

Revised brochures are shown in the shop manual composition table.

### 4. Symbols

Important safety and quality portions are marked with the following symbols so that the shop manual will be used practically.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing work.
	Weight	Weight of parts of component or parts. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for tightening torque during assembly.
	Coat	Places to be coated with adhesives, etc. during assembly.
	Oil, coolant	Places where oil, etc. must be added, and capacity.
	Drain	Places where oil, etc. must be drained, and quantity to be drained.

### 5. Units

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.

## Explanation of terms for maintenance standard

The maintenance standard values necessary for judgment of products and parts are described by the following terms.

### 1. Standard size and tolerance

- To be accurate, the finishing size of parts is a little different from one to another.
- To specify a finishing size of a part, a temporary standard size is set and an allowable difference from that size is indicated.
- The above size set temporarily is called the "standard size" and the range of difference from the standard size is called the "tolerance".
- The tolerance with the symbols of + or – is indicated on the right side of the standard size.

Example:

Standard size	Tolerance
120	$-0.022$
	$-0.126$


- ★ The tolerance may be indicated in the text and a table as [standard size (upper limit of tolerance/lower limit of tolerance)].

Example) 120 ( $-0.022/-0.126$ )

- Usually, the size of a hole and the size of the shaft to be fitted to that hole are indicated by the same standard size and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of size of rotating shaft and hole and relationship drawing of them

Example:

Standard size	Tolerance	
	Shaft	Hole
60	$-0.030$	$+0.046$
	$-0.076$	0

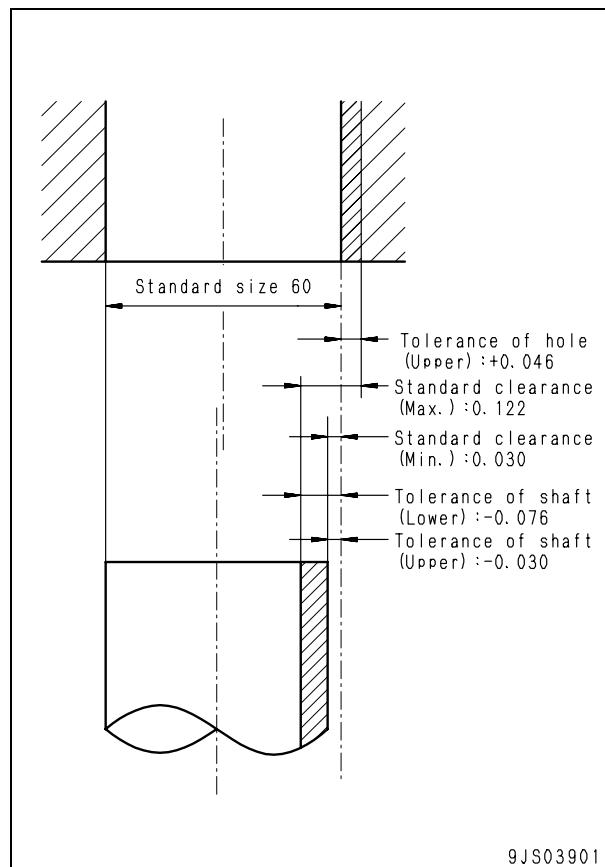

**2. Standard clearance and standard value**

- The clearance made when new parts are assembled is called the “standard clearance”, which is indicated by the range from the minimum clearance to the maximum clearance.
- When some parts are repaired, the clearance is generally adjusted to the standard clearance.
- A value of performance and function of new products or equivalent is called the “standard value”, which is indicated by a range or a target value.
- When some parts are repaired, the value of performance/function is set to the standard value.

**3. Standard interference**

- When the size of a hole is smaller than the size of a shaft because of the standard size and tolerance, the difference between these sizes is called the “interference”.
- The range ( $A - B$ ) from the difference ( $A$ ) between the minimum size of the shaft and the maximum size of the hole to the difference ( $B$ ) between the maximum size of the shaft and the minimum size of the hole is the “standard interference”.
- After repairing or replacing some parts, measure the size of their hole and shaft and check that the interference is in the standard range.

**4. Repair limit and allowable value**

- The size of a part changes because of wear and deformation while it is used. The limit of changed size is called the “repair limit”.
- If a part is worn to the repair limit must be replaced or repaired.
- The performance and function of a product lowers while it is used. A value below which the product can be used without causing a problem is called the “allowable value”.
- If a product is worn to the allowable value, it must be checked or repaired. Since the permissible value is estimated from various tests or experiences in most cases, however, it must be judged after considering the operating condition and customer's requirement.

**5. Clearance limit**

- Parts can be used until the clearance between them is increased to a certain limit. The limit at which those parts cannot be used is called the “clearance limit”.
- If the clearance between the parts exceeds the clearance limit, they must be replaced or repaired.

**6. Interference limit**

- The allowable maximum interference between the hole of a part and the shaft of another part to be assembled is called the “interference limit”.
- The interference limit shows the repair limit of the part of smaller tolerance.
- If the interference between the parts exceeds the interference limit, they must be replaced or repaired.

## Handling electric equipment and hydraulic component


To maintain the performance of the machine over a long period, and to prevent failures or other troubles before they occur, correct "operation", "maintenance and inspection", "troubleshooting", and "repairs" must be carried out. This section deals particularly with correct repair procedures for mechatronics and is aimed at improving the quality of repairs. For this purpose, it gives sections on "Handling electric equipment" and "Handling hydraulic equipment" (particularly gear oil and hydraulic oil).

### Points to remember when handling electric equipment

#### 1. Handling wiring harnesses and connectors

Wiring harnesses consist of wiring connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protectors or tubes used for protecting the wiring.


Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain, water, heat, or vibration. Furthermore, during inspection and repair operations, they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling wiring harnesses.

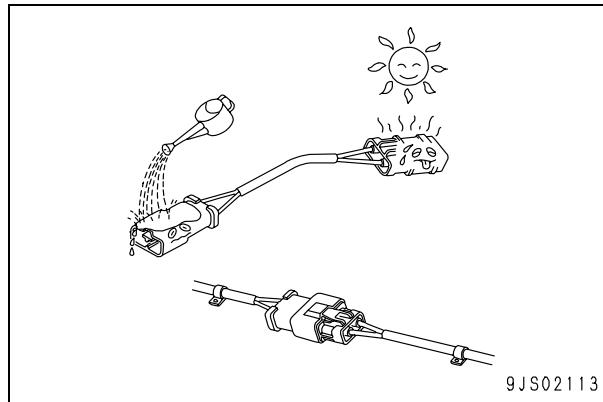

#### 2. Main failures occurring in wiring harness


##### 1) Defective contact of connectors (defective contact between male and female)

Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of the connectors is deformed or the position is not correctly aligned, or because there is corrosion or oxidization of the contact surfaces.

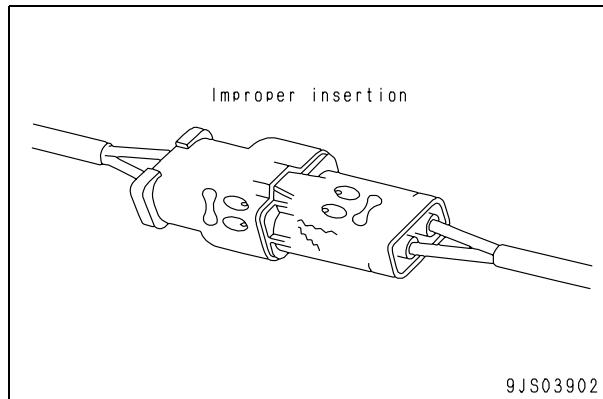


##### 2) Defective crimping or soldering of connectors

The pins of the male and female connectors are in contact at the crimped terminal or soldered portion, but if there is excessive force brought to bear on the wiring, the plating at the joint will peel and cause improper connection or breakage.

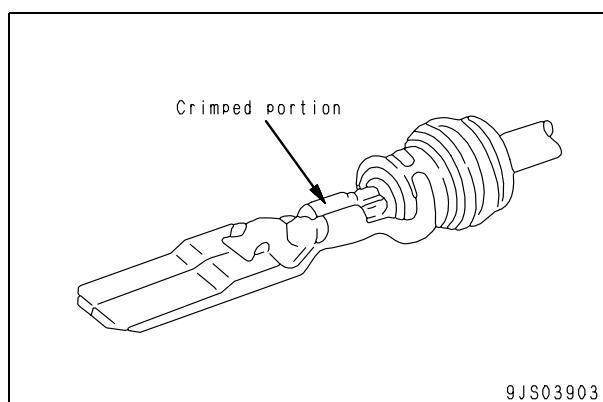


## 3) Disconnections in wiring

If the wiring is held and the connectors are pulled apart, or components are lifted with a crane with the wiring still connected, or a heavy object hits the wiring, the crimping of the connector may separate, or the soldering may be damaged, or the wiring may be broken.

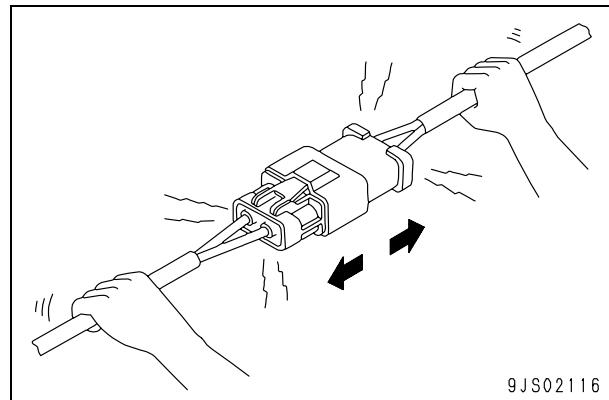

## 4) High-pressure water entering connector


The connector is designed to make it difficult for water to enter (drip-proof structure), but if high-pressure water is sprayed directly on the connector, water may enter the connector, depending on the direction of the water jet. Accordingly, take care not to splash water over the connector. The connector is designed to prevent water from entering, but at the same time, if water does enter, it is difficult for it to be drained. Therefore, if water should get into the connector, the pins will be short-circuited by the water, so if any water gets in, immediately dry the connector or take other appropriate action before passing electricity through it.

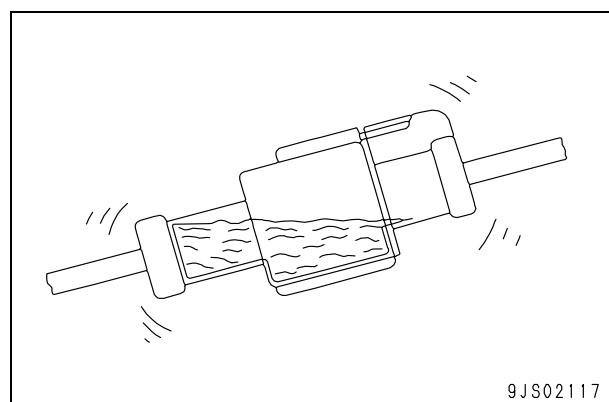

## 5) Oil or dirt stuck to connector

If oil or grease are stuck to the connector and an oil film is formed on the mating surface between the male and female pins, the oil will not let the electricity pass, so there will be defective contact. If there is oil or grease stuck to the connector, wipe it off with a dry cloth or blow it dry with compressed air and spray it with a contact restorer.

- ★ When wiping the mating portion of the connector, be careful not to use excessive force or deform the pins.
- ★ If there is oil or water in the compressed air, the contacts will become even dirtier, so remove the oil and water from the compressed air completely before cleaning with compressed air.

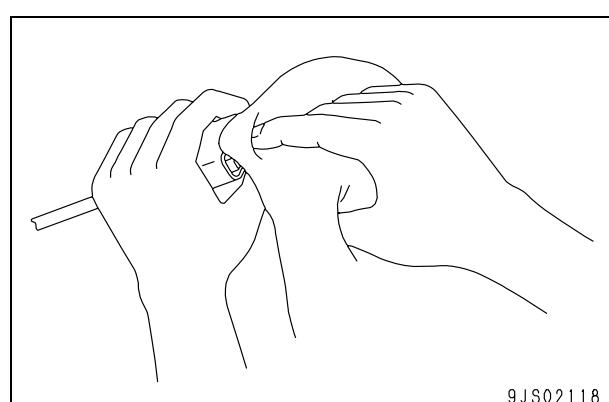

### 3. Removing, installing, and drying connectors and wiring harnesses

#### 1) Disconnecting connectors


1] Hold the connectors when disconnecting.

When disconnecting the connectors, hold the connectors. For connectors held by a screw, loosen the screw fully, then hold the male and female connectors in each hand and pull apart. For connectors which have a lock stopper, press down the stopper with your thumb and pull the connectors apart.

★ Never pull with one hand.


2] When removing from clips

- Both of the connector and clip have stoppers, which are engaged with each other when the connector is installed.

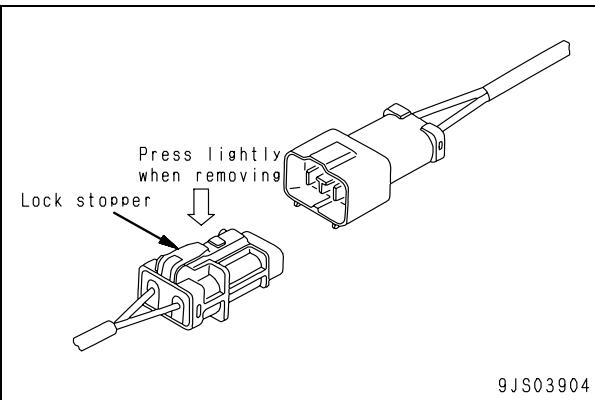

- When removing a connector from a clip, pull the connector in a parallel direction to the clip for removing stoppers.



★ If the connector is twisted up and down or to the left or right, the housing may break.

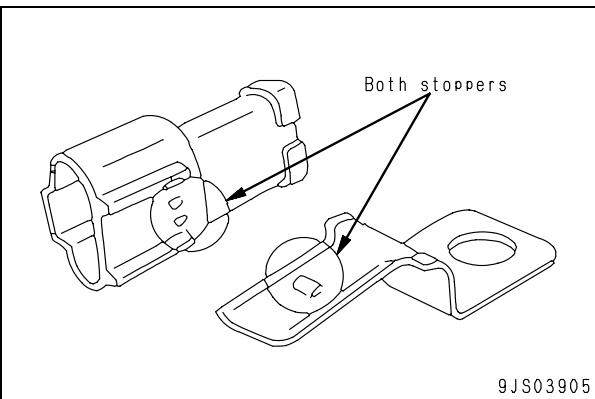

3] Action to take after removing connectors

After removing any connector, cover it with a vinyl bag to prevent any dust, dirt, oil, or water from getting in the connector portion.

★ If the machine is left disassembled for a long time, it is particularly easy for improper contact to occur, so always cover the connector.

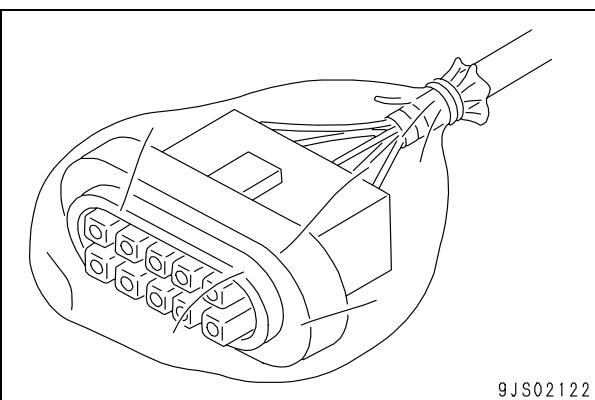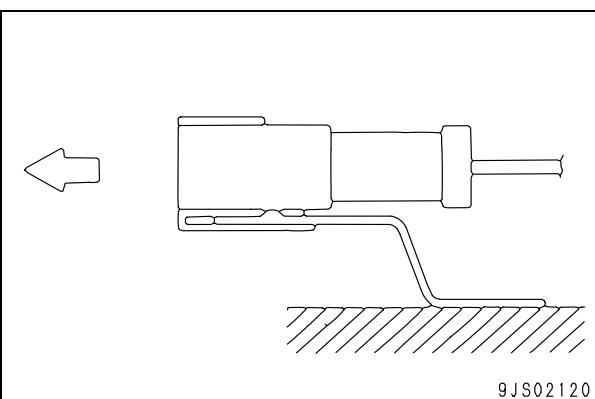

## 2) Connecting connectors

## 1] Check the connector visually.

Check that there is no oil, dirt, or water stuck to the connector pins (mating portion).

Check that there is no deformation, defective contact, corrosion, or damage to the connector pins.

Check that there is no damage or breakage to the outside of the connector.

★ If there is any oil, water, or dirt stuck to the connector, wipe it off with a dry cloth. If any water has got inside the connector, warm the inside of the wiring with a dryer, but be careful not to make it too hot as this will cause short circuits.

★ If there is any damage or breakage, replace the connector.

## 2] Fix the connector securely.

Align the position of the connector correctly, and then insert it securely. For connectors with lock stopper, push in the connector until the stopper clicks into position.

## 3] Correct any protrusion of the boot and any misalignment of the wiring harness.

For connectors fitted with boots, correct any protrusion of the boot. In addition, if the wiring harness is misaligned, or the clamp is out of position, adjust it to its correct position.

★ If the connector cannot be corrected easily, remove the clamp and adjust the position.

● If the connector clamp has been removed, be sure to return it to its original position. Check also that there are no loose clamps.


## 3) Connecting DT connectors

Since the DT 8-pin and 12-pin heavy duty wire connectors have 2 latches respectively, push them in until they click 2 times.


## 1. Male connector

## 2. Female connector


- Normal locking state (Horizontal): a, b, d
- Incomplete locking state (Diagonal): c

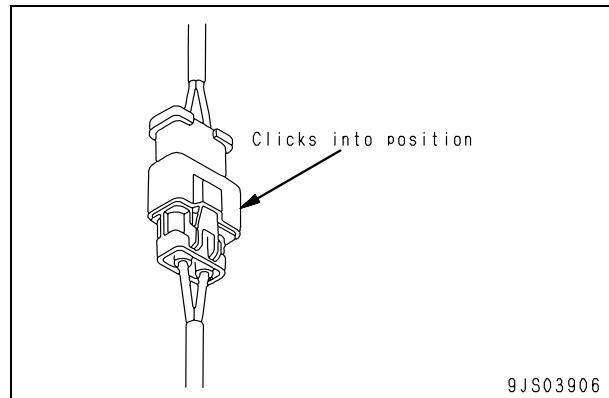


9JS03906

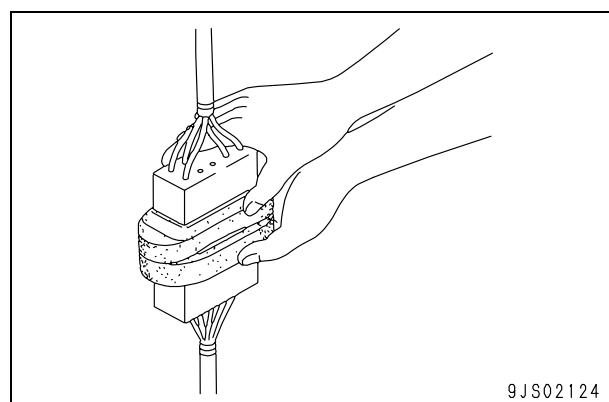

9JS02124

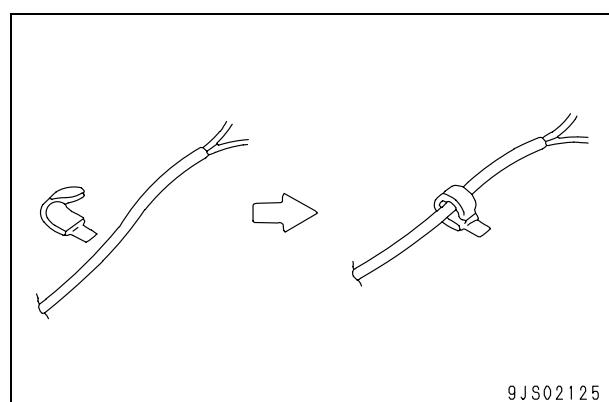

9JS02125

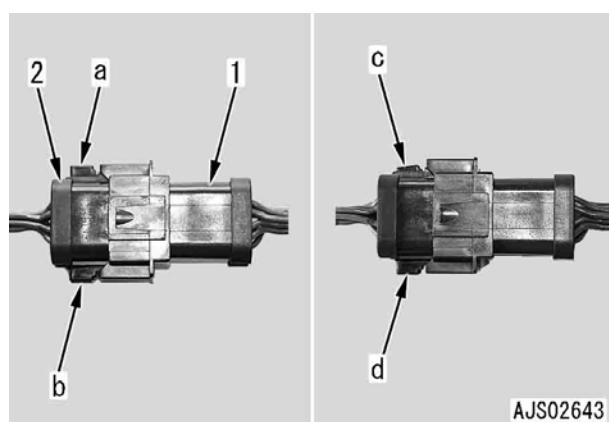

AJS02643

## 4) Drying wiring harness

If there is any oil or dirt on the wiring harness, wipe it off with a dry cloth. Avoid washing it in water or using steam. If the connector must be washed in water, do not use high-pressure water or steam directly on the wiring harness. If water gets directly on the connector, do as follows.

1] Disconnect the connector and wipe off the water with a dry cloth.

★ If the connector is blown dry with compressed air, there is the risk that oil in the air may cause defective contact, so remove all oil and water from the compressed air before blowing with air.

2] Dry the inside of the connector with a dryer.




If water gets inside the connector, use a dryer to dry the connector.

★ Hot air from the dryer can be used, but regulate the time that the hot air is used in order not to make the connector or related parts too hot, as this will cause deformation or damage to the connector.

3] Carry out a continuity test on the connector.



After drying, leave the wiring harness disconnected and carry out a continuity test to check for any short circuits between pins caused by water.

★ After completely drying the connector, blow it with contact restorer and reassemble.

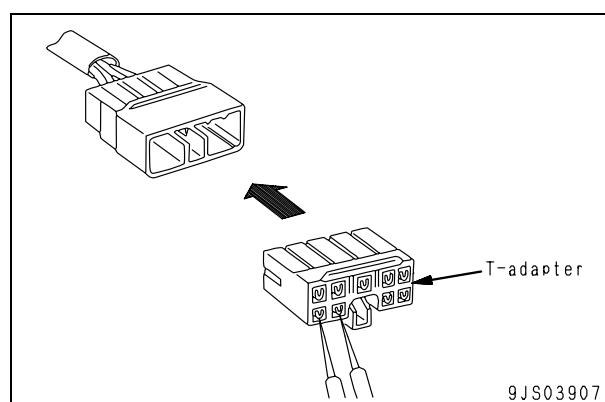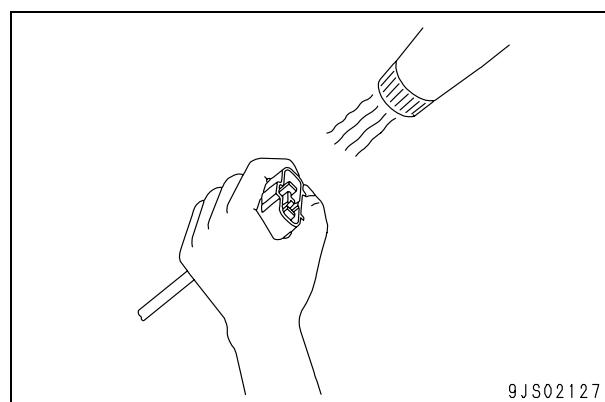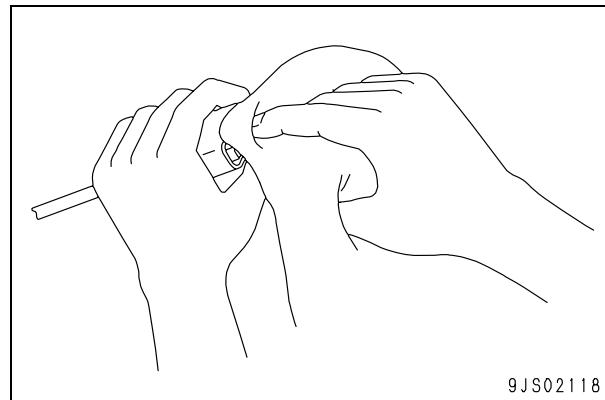

#### 4. Handling controller

- 1) The controller contains a microcomputer and electronic control circuits. These control all of the electronic circuits on the machine, so be extremely careful when handling the controller.
- 2) Do not place objects on top of the controller.
- 3) Cover the control connectors with tape or a vinyl bag. Never touch the connector contacts with your hand.
- 4) During rainy weather, do not leave the controller in a place where it is exposed to rain.
- 5) Do not place the controller on oil, water, or soil, or in any hot place, even for a short time. (Place it on a suitable dry stand).
- 6) Precautions when carrying out arc welding  
When carrying out arc welding on the body, disconnect all wiring harness connectors connected to the controller. Fit an arc welding ground close to the welding point.

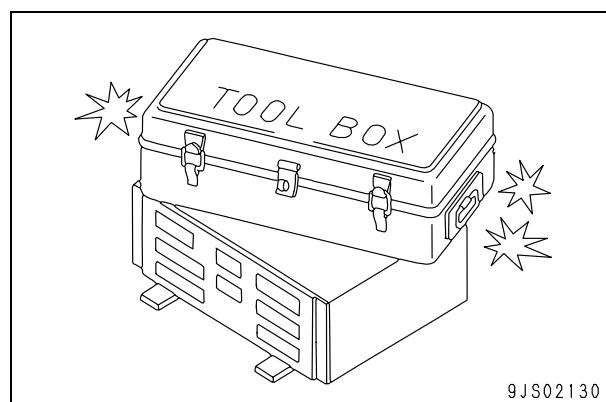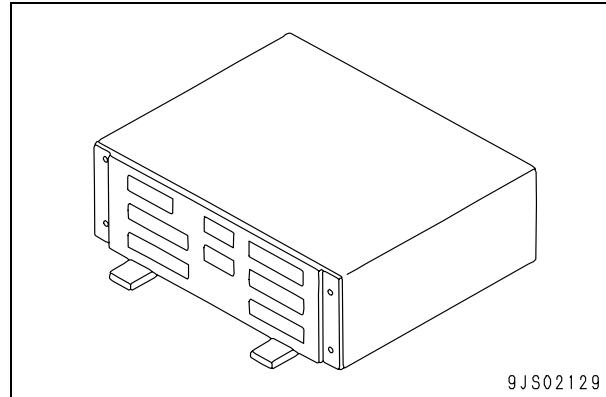

#### 5. Points to remember when troubleshooting electric circuits

- 1) Always turn the power OFF before disconnecting or connecting connectors.
- 2) Before carrying out troubleshooting, check that all the related connectors are properly inserted.
  - ★ Disconnect and connect the related connectors several times to check.
- 3) Always connect any disconnected connectors before going on to the next step.
  - ★ If the power is turned ON with the connectors still disconnected, unnecessary abnormality displays will be generated.
- 4) When carrying out troubleshooting of circuits (measuring the voltage, resistance, continuity, or current), move the related wiring and connectors several times and check that there is no change in the reading of the tester.
  - ★ If there is any change, there is probably defective contact in that circuit.

