


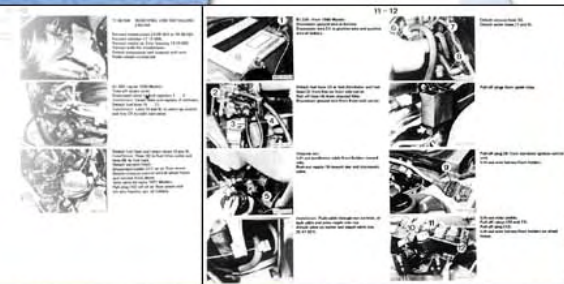


Product: 1990 BMW E30 Car Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/1990-bmw-e30-car-service-repair-workshop-manual/>

E30



Reparaturanleitung
Repair Manual

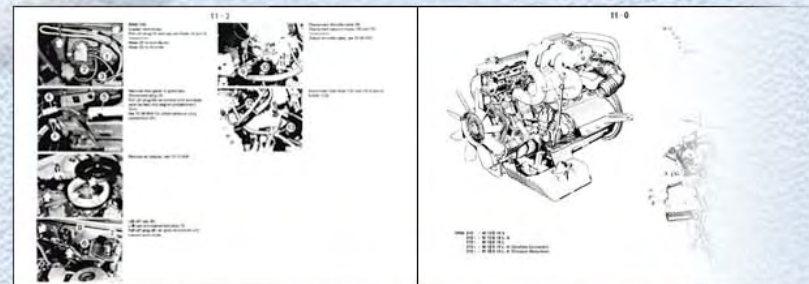

Sample of manual. Download All 1313 pages at:

<https://www.arepairmanual.com/downloads/1990-bmw-e30-car-service-repair-workshop-manual/>

Product: 1990 BMW E30 Car Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/1990-bmw-e30-car-service-repair-workshop-manual/>

Important notes on using this CD

The documents on this CD are to be used to perform professional maintenance and repair work on unmodified, standard production BMW vehicles.

In order to carry out the above-mentioned work, full training as a motor vehicle technician is required, plus regular advanced training at BMW Service training centres.

Whenever reference in the documents is made to the use of special tools, expendable materials and manufacturers' descriptions, this corresponds to up to date information at the time the documentation was produced.

Progressive technology e.g. the use of modern materials or environmental requirements can lead to variations between these repair instructions and the improved products currently on the market.

The special tools, expendable materials and manufacturers' descriptions that are essential to repair BMW vehicles professionally must be used in accordance with the latest standards, which can be obtained from BMW Service.

You are asked to appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions.

Sample of manual. Download All 1313 pages at:

<https://www.arepairmanual.com/downloads/1990-bmw-e30-car-service-repair-workshop-manual/>

Main Contents

00	Maintenance and General Data	36	Wheels and Tires
11	Engine	37	Integrated Suspension Systems
12	Engine Electrical Equipment	41	Body
13	Fuel System	51	Body Equipment
16	Fuel Tank and Lines	52	Seats
17	Radiator	54	Hood, Sun Roof
18	Exhaust System	61	Electrical System
21	Clutch	62	Instruments
23	Manual Transmission	63	Lights
24	Automatic Transmission	64	Heating and Air Conditioning
25	Gear Shift Mechanism	65	Radio and Special Equipment
26	Propeller Shaft	71	Equipment and Accessories for Engine and Chassis
27	Transfer Box	72	Equipment and Accessories for Body
31	Front Axle	97	Body Cavity Sealing and Undercoating
32	Steering and Wheel Alignment		
33	Rear Axle		
34	Brakes		
35	Pedals		

00 Maintenance and General Data

	Introduction	0-	1
	Precautions for working with asbestos components	0-	2
	General information	0-	3
	Lifting car with a car hoist	0-	4
	Lifting car with a garage jack	0-	4
	Towing	0-	5
00 00 009	Pre-delivery inspection	00-	1
210	BMW running-in Inspection at 2,000 km (1,200 miles)	00-	5
220	BMW Inspection I	00-	6
230	BMW Inspection II = Inspection I + additional work	00-	10
240	BMW annual check / additional test points for Inspection I or II	00-	12
245	BMW annual check	00-	13
249	BMW engine oil service	00-	15
259	BMW safety test	00-	16
400	Special emission inspection (ASU)	00-	17
099	Exchange engine inspection after 1,000 km (600 miles)	00-	18

Introduction

This repair manual microfiche is to assist you in performing the necessary maintenance and repair work expertly and correctly. It must be placed at the disposal of shop foremen and mechanics, and will complement the practical and theoretical training offered by our Service Training Centre.

Since 1985 models there are two repair manuals.

- Repair manual to models
- Repair manual to construction groups

The Construction Group Repair Manual consists of Groups 11, 12, 13, 23, 24 and 33.

It is independent of models and describes repairing procedures on removed components and provides testing instructions and troubleshooting tables.

A Model Repair Manual ('3' Series, '5' Series, '6' Series or '7' Series) contains all construction groups. The descriptions in the above mentioned construction groups refer chiefly to removing and installing or replacing procedures.

There are technical data and nominal value microfiches for specifications and adjusting values.

Application of this repair manual microfiche is in reference to a standard production car free from accident damage and not subsequently modified in any way.

The construction group system has been adopted from the flat rate manual.

The job numbers used in the text are meant for use as cross reference. They will frequently contain job procedures, which must not be used for extension of the flat rates. They are only provided to make finding of repair procedures easier.

The individual page numbering, for example 32 – 6, means:

- 32 - main group
- 6 - page number

The special tools essential for correct repair work are summarized on the special tool microfiche, Order No. 01 99 9 699 422. Their use is illustrated in the descriptions of the various repair jobs.

The removal work is described for each repair job in this manual. If installation does not take place in the reverse order of work, an "Installation" note is provided.

In addition to the improvements supplied to you regularly in the form of "Service Information", you are recommended to consult the parts microfiches for additional illustrated data.

BAYERISCHE MOTOREN WERKE AG
SERVICE DIVISION

© 1990 Bayerische Motoren Werke (BMW) AG, Munich (Germany)
Reproduction wholly or in part only with written permission of BMW AG, Munich.

General Information

PRECAUTIONS FOR WORKING WITH PARTS CONTAINING ASBESTOS

Inhaling asbestos dust could impair health. Conform with these safety precautions when working with asbestos parts.

- Only work outdoors or in well ventilated rooms.
- Only use manually operated or slow running equipment, with dust extracting equipment if necessary! Only operate fast running equipment with dust extracting attachments.
- Moisten parts prior to machining whenever possible.
- Never blow out brake and clutch parts.
- Moisten dust, fill in containers which can be sealed perfectly and scrap in a manner which prevents danger.
- Asbestos waste and scrapped parts must be collected in perfectly sealed containers marked accordingly and then eliminated without danger for human beings or the environment.

General Information

Important When Disconnecting Battery!

Unscrew ground lead on the ground connection point when disconnecting a battery. Disconnection will cancel the fault memories of control units. Consequently first read fault memories with the tester and print out faults when applicable.

Important With Connected Battery!

Working on components, electric lead connections, etc. could cause faults in the fault memories of concerned control units. If a repair job in the repair manual specifies disconnection of the battery, always conform with this in the interest of safety.

Windshield Wipers (Wiper Motor)!

Intermittent wiping and wiper speed 1 are switched off by a protector in case of failure. The protector remains active even after eliminating the fault. It can be cancelled by turning the ignition off (terminals 15 and R) for 3 minutes.

Windshield Wipers (Wiper Contact Pressure Motor)!

This wiper contact pressure motor is switched off by a protector in case of failure. The protector remains active even after eliminating the fault. To cancel the protector,

- a) disconnect the battery for 30 seconds (caution: all fault memories are cancelled!)
or
- b) operate car for automatic cancellation.

GENERAL INFORMATION

LIFTING CAR WITH A CAR HOIST

Before driving a car on the platform, make sure that there is sufficient space (clearance) between the hoist and car (if applicable, spoiler or splash guard, etc.).

Car hoists must conform with local and national legislative measures concerning accident prevention and maintenance. Arms of a car hoist must always be applied only on the reinforced points of the frame members. Make sure that the underside is not damaged.

Front:
Apply rubber block of lifting arm on the front perpendicular reinforcement of the frame member, which is also provided for application of the car's jack.

Rear:
Apply rubber block of lifting arm on the rear perpendicular reinforcement of the frame member, which is also provided for application of the car's jack. Make sure that the underside of the fuel tank is not damaged.





LIFTING CAR WITH A GARAGE JACK

A garage jack may also be only applied for lifting the car on the same take-up points described for the car hoist.
A suitable liner (rubber, wood or plastic) must be used between the jack and car to avoid damage to the undercoating, frame members or floor plate.

Front Take-up Point

Rear Take-up Point

Caution!
Don't damage the fuel tank.

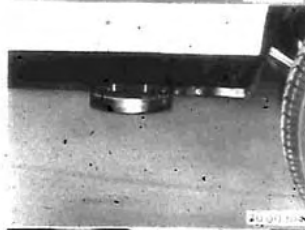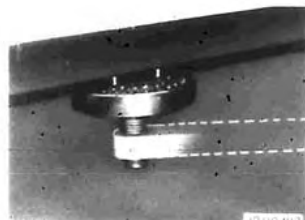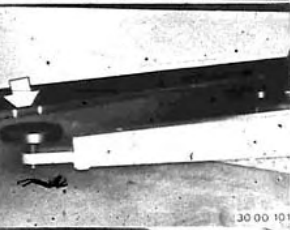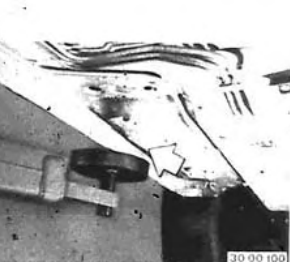

TOWING

Always conform with local and national legislative measures concerning the towing of vehicles as applicable.

Turn the ignition key to position "1" to unlock the steering wheel and be able to use the turn signals, horn and possibly windshield wipers.

Since the brake booster only works with the engine running, greater force will be required on the brake pedal of cars with a brake booster when the "engine is stopped".

The towing cable should be elastic to protect the towing and towed vehicles. Consequently only use plastic fiber cables or cables with elastic links.

Cars with Automatic Transmission

Selector lever in "N"

Max. towing speed:
50 km/h (30 mph).

Max. towing distance:
40 to 50 km (25 to 30 miles).

If the car has to be towed further than 50 km (30 miles) add an extra liter (2 pints) of ATF than the specified oil volume for automatics or remove the propeller shaft. After repairing the car it is absolutely essential to correct the ATF volume to the specified amount.

Important!

Cars with four driven wheels (325 iX) can be towed, if all 4 wheels are on the road or on the towing vehicle. Towing with one axle lifted is permitted only when the rear propeller shaft is removed with the front axle lifted, or the front propeller shaft with the rear axle lifted, since otherwise the central lock would be damaged. Never run the engine of a car on which a propeller shaft has been removed!

0 5



Front Towing Eyes

Rear Towing Eye

00-1

BMW MAINTENANCE SYSTEM 00 00 009 Pre-delivery inspection	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Call faults in diagnosis system.						See operating instructions for BMW diagnosis system.
Brief test.						Connect BMW Service Tester.
Check / correct engine oil level.				Gr. 11		Use approved oil.
S 14 Engine: replace spark plugs.	Gr. 12	Gr. 12				
325 IX: Check / correct adjustment of throttle valve drive (not applicable since introduction of M 1.1).	Gr. 13		Gr. 13			
Check fuel pipes, tank and hoses for correct routing, condition and leaks.						Visual inspection.
Check / correct hydraulic fluid level in supply tank for brakes and clutch.				Gr. 34		Use approved brake fluid.
Check connections and lines of brake system for leaks, correct location and damage.						Visual inspection.
Check rim size, tire size and type as well as tire inflation pressure (including spare wheel).		Gr. 36		SI Gr. 36		
Check wheel bolts for specified tightening torque.		Gr. 36				
SI = Service Information						

00-2

BMW MAINTENANCE SYSTEM 00 00 009 Pre-delivery Inspection	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Check / correct level and antifreeze concentration of washing fluid in supply tank for windshield and headlights(if installed in car: check / correct level of intensive cleaning fluid in supply tank).					+	
Check operation of windshield wipers/washer and aiming of spray nozzles; remove protective sleeves on wiper blades.					+	
Check acid level and charge of battery (as applicable, in trunk or underneath rear seat), correcting with distilled water when necessary. Charge battery when necessary.				Gr. 61 00	+	
Check lights: headlights/front fog lamps, parking lights, turn signals, tail lights, backup lights, rear fog lights, license plate lights, passenger compartment lights, glove box light, engine compartment light and trunk light.					+	
Check horns, headlight flasher and hazard warning lights.					+	
Check instrument and sign lights.					+	
Check control and warning lights in instrument cluster (ABS, airbag control lamp, etc.) and Check Control.					+	
Check heating, ventilating and blower.	Gr. 64					
Check operation of headlight cleaners and central locks.	Gr. 63				+	
Insert and check operation of cigar lighters.						

00 - 3

BMW MAINTENANCE SYSTEM 00 00 009 Pre-delivery Inspection	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Check operation of other special equipment.						
Initialize sender of remote control system.						
Check data plate, vehicle identification and engine numbers.						
Compare ordered car equipment against delivered car equipment.						
Tune in radio station and check shielding with engine running while switching all electric equipment on and off.						
Mount hub caps, if applicable wheel ornamental rings and tailpipe extension.						
Place tools in toolbox and secure jack and wheel bolt wrench.						
Paste label for BMW Emergency Service on lid of toolbox.						
Place owner's manual/service booklet, list of BMW service stations and BMW emergency service stations, spare keys and key case in glove box.						
Stamp and insert service booklet.						

00 - 4

BMW MAINTENANCE SYSTEM

00 00 009 Pre-delivery Inspection

General Information

Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	Important Information!
Check operation of engine, clutch, transmission, final drive, steering, foot and hand operated brakes. Cars with rear disc brakes: break in parking brake. Check function of speedometer with odometer and daily trip recorder, tachometer (Economy Control), clock, temperature and fuel gages. Check engine, transmission, steering, final drive, dust covers on drive shafts, fuel, clutch and brake systems for leaks. Remove seat and other protective covers. Reset the service indicator. <i>Important!</i> The service indicator (SI) must be reset after completion of the pre-delivery inspection as follows. Switch off all electrical equipment. Turn on ignition; do not run engine. Plug SI-R* with adapter** for large (20-pin) diagnosis socket in diagnosis socket. Push in and hold recessed, red INSPECTION button - green lamp (function control) comes on. Red lamp also comes on after approx. 3 sec. and goes out after approx. 12 seconds. Release inspection button - green lamp goes out. Gradual introduction of new SI display with clock symbol and only one red diode light since January, 1986. Load and time memories are separated and resetting must be repeated to reset the time memory. The break before the second inspection reset must be at least 10 seconds long, but may be up to 17.5 hours after the first reset. Check Service Indicator Display: All five green diode lights must be on. Yellow and possibly red diode lights as well as INSPECTION sign should go out.					
	 62 1 100 20 PIN (20A) 32 PIN (32A)				

* SI-R = Service Indicator Resetter, Order No. 62 1 100.

** Adapter, Order No. 62 1 140.

00-5

BMW MAINTENANCE SYSTEM 00 00 210 BMW Running-In Inspection at 2000 km (1200 mi.)	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Call faults in diagnosis system.						
Brief test.						See operating instructions of BMW Service Tester.
Replace engine oil and oil filter at operating temperature.	Gr. 11			Gr. 11	+	Use approved oil.
325 IX: Remove / install splash guard and check / correct adjustment of throttle valve drive (not applicable after introduction of M 1.1).	Gr. 13		Gr. 13			
Check / adjust valve clearance (excluding 324 d, td, S 14 and M 40 engines).	Gr. 11	Gr. 11				
Tighten nuts and bolts of steering, exhaust assembly, brakes and road wheels.		Gr. 18/32 34/36				Correct tightening torque.
Replace oil in manual transmission at operating temperature; check automatic transmission fluid level.	Gr. 23/24			Gr. 23/24	+	Use approved oil.
Replace oil in final drive at operating temperature.		Gr. 33		Gr. 33		Use approved oil.
325 IX: Replace oil in front axle final drive at operating temperature.	Gr. 31					
Replace oil in transfer box at operating temperature.	Gr. 27					
Final inspection with operating safety test, brakes, steering, control and warning lamps as well as check control reports.					+	

00-6

BMW MAINTENANCE SYSTEM 00 00 220 BMW Inspection I	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Call faults in diagnosis system.						See operating instructions of BMW diagnosis system.
Brief test.						See operating instructions of BMW Service Tester.
Replace engine oil and oil filter at operating temperature.	Gr. 11	Gr. 11		Gr. 11		Use approved oil.
Check / adjust valve clearance (excluding diesels and M 40).	Gr. 11	Gr. 11				
Replace spark plugs.		Gr. 12				
Check coolant hoses for leaks; check / correct coolant level and concentration.				Gr. 17		Replace coolant every 2 years at latest.
Check tightness and condition of all drive belts, tightening when necessary or replacing with separate invoicing.	Gr. 12/32/64					
325 IX: Check / correct adjustment of throttle valve drive (not applicable after introduction of M 1.1).	Gr. 13		Gr. 13			
Air cleaner: replace air filter cartridge. Replace filter cartridge more frequently when car is operated in dusty regions.	Gr. 13					

00 - 7

BMW MAINTENANCE SYSTEM

00 00 220 BMW Inspection I

General Information

	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	Important Information!
Check fuel pipes, tank and hoses for correct routing, condition and leaks. BMW Diesel Engine: Drain water trap (replacement intervals depending on country).	Gr. 13/16					
Check condition, routing, suspension and leakage of exhaust assembly.						
Check power steering for leaks; check / correct oil level.	Gr. 32			Gr. 32		Use approved oil.
Check / correct steering play. Check condition of tie rods and front axle joints. Check steering gear, steering linkage and coupling.	Gr. 32	Gr. 32				
Remove and install front and rear disc brake pads. Check total thickness. Replace pads when necessary. Check surface condition of brake discs. Check brake caliper dust covers for leaks. Lubricate centering pins of wheel rims with grease.	Gr. 34/36					Correct tightening torque for road wheel bolts.
Check connections and lines of brake system for leaks, damage and correct location (clean brake liners and drums and check for wear; check wheel brake cylinders and dust covers for leaks). Check movement of parking brake cables. Adjust parking brake.	Gr. 34					
Check / correct hydraulic fluid level in supply tank for brakes and clutch.	Gr. 34			Gr. 34		Use approved brake fluid. <i>Important!</i> Replace brake fluid every two years.

00-8

BMW MAINTENANCE SYSTEM 00 00 220 BMW Inspection I	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Check / correct tire inflation pressure (including spare wheel). Check condition of tires (if worn unevenly and customer approves, check and correct wheel alignment with separate invoicing).				SI Gr. 36		Visual Inspection.
Check all gearboxes for leaks.						
Check lights: parking lights, turn signals, tail lights, stop lights, backup lights, rear fog lights, license plate lights, passenger compartment lights, glove box light, engine compartment light and trunk light.						
Check headlights and front fog lamps.						
Check horn, headlight flasher and hazard warning lights.						
Check instrument and sign lights.						
Check acid level in battery, correcting with distilled water if necessary.				Gr. 61	+	
Check condition and operation of seat belts.	Gr. 72					
Lubricate locks of doors, engine hood and trunk lid with oil or grease and check function.						
SI = Service Information						

BMW MAINTENANCE SYSTEM

00 00 220 BMW Inspection I

General information

Check / correct level and antifreeze concentration of washing fluid in supply tank for windshield and headlights. If installed, check / correct level of intensive cleaning fluid in supply tank.

Check windshield wiping/washing system (wiper blades and spray nozzle aiming).

Final inspection with operating safety test: brakes (with rear disc brakes: break in parking brake), steering or power steering, clutch or automatic transmission, coil springs and shock absorbers (visual inspection), control and warning lamps in instrument cluster (ABS, airbag, etc.), check control, mirrors and heater blower. Check operation of power steering.


Important!
Service Indicator (SI) must be reset after inspection I:
Switch off all electrical equipment.
Turn on ignition - do not run engine.
Use SI-R* with adapter** for large (20-pin) diagnosis socket and plug in diagnosis socket.
Push in and hold recessed, red INSPECTION button - green lamp (function control) comes on.
Red lamp also comes on after approx. 3 sec. and goes out after approx. 12 seconds.
Release INSPECTION button - green lamp goes out.

Gradual introduction of a new SI display with clock symbol and only one red diode light since January, 1986. A clock symbol lights up together with the INSPECTION sign to announce a time-dependent inspection interval and has no influence on the green diode lights. When load and time dependent inspections occur together, resetting must be repeated after 10 seconds to cancel the clock symbol and INSPECTION sign.

Checking Service Indicator (SI):
All five green diode lights must be on.
Yellow and possibly red diode lights as well as INSPECTION sign should go out.

Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	Important Information!
 62 1 100 20 00 00 5					


* SI-R = Service Indicator Resetter, Order No. 62 1 100.
** Adapter, Order No. 62 1 140.

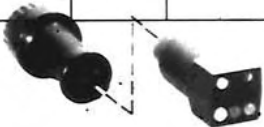

00-10

BMW MAINTENANCE SYSTEM	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
00 00 230 BMW Inspection II = Inspection I + Additional Jobs						
Replace oil in rear axle final drive (325 iX; also transfer box and front axle final drive) and automatic transmission at operating temperature.	Gr. 23/24/33			Gr. 23/24/27/33		Use approved oil
Replace fuel filter.	Gr. 16					
Check clutch drive plate for wear.	Gr. 21					
Check play of front wheel bearings.	Gr. 31					
Rear disc brakes: check thickness of parking brake liners, replacing if necessary.	Gr. 34	Gr. 34				
Check condition of dust covers on output shafts and for leaks.						
Replace toothed drive belt (every second inspection II or every 4 years).	Gr. 11					

00-11

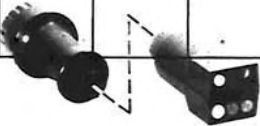BMW MAINTENANCE SYSTEM	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
00 00 230 BMW Inspection II = Inspection I + Additional Jobs	Gr. 11					
BMW 324 d: check / correct basic static adjustment of injection pump (not applicable with DDE). Tighten toothed drive belt.	Gr. 11					
Catalytic converter cars: Check function of oxygen sensor in every Inspection II (by calling fault memory in cars with self-diagnosis).						
<i>Important!</i> Service Indicator.(SI) must be reset after Inspection II: Switch off all electrical equipment. Turn on Ignition – do not run engine. Use SI-R* with adapter** for large (20-pin) diagnosis socket and plug in diagnosis socket. Push in and hold recessed, red INSPECTION button – green lamp (function control) comes on. Red lamp also comes on after approx. 3 sec. and goes out after approx. 12 seconds. Release INSPECTION button – green lamp goes out. Gradual Introduction of a new SI display with clock symbol and only one red diode light since January, 1986. A clock symbol lights up together with the INSPECTION sign to announce a time dependent inspection interval and has no influence on the green diode lights. If load and time dependent inspections occur together, resetting must be repeated after 10 seconds to cancel the clock symbol and INSPECTION sign.						
			20 00 004			
* SI-R = Service Indicator Resetter, Order No. 62 1 100. ** Adapter, Order No. 62 1 140.						

32 00 018


00-12

BMW MAINTENANCE SYSTEM 00 00 240 BMW Annual Check / Additional Inspection Points for Inspection I or II	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Replace brake fluid every two years.				Gr. 34		Use approved brake fluid.
Replace coolant every two years (invoiced separately).				SI Gr. 00		
Inspect entire body – excluding cavities – for damage from rust. Repair (invoiced separately) and enter inspection and repairs in Service Booklet.						
Check and aim headlights and front fog lamps.	Gr. 63					
If installed: check fire extinguisher every two years (invoiced separately).						
<u>Invoiced separately</u> (e.g. for official inspections):						
Inspect supporting body parts for ruptures and cracks.						
Inspect supporting body parts for corrosion.						
Check completed body repairs for conformance with BMW specifications.						
Check steering: steering locks, bolted connections, steering damper/power steering. Check dust covers on rack-and-pinion steering for leaks.	Gr. 32					
Brakes: check brake master cylinder and brake booster opera- tion and for leaks.	Gr. 34					
Corrections on body, repairs and replacement of parts as well as vehicle inspection in accordance with legislation* are invoiced separately.						
Reset Service Indicator (SI): see inspection.						
* Check legislation of pertinent country.						
SI = Service Information						

00 - 13

BMW MAINTENANCE SYSTEM 00 00 245 BMW Annual Check	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Replace brake fluid every two years.				Gr. 34		Use approved brake fluid.
Replace coolant every two years (invoiced separately).				SI Gr. 00		
Inspect entire body – excluding cavities – for damage from rust. Repair (invoiced separately) and enter inspection and repairs in Service Booklet.						
Check and aim headlights and front fog lamps.	Gr. 63					
If installed: check fire extinguisher every two years (invoiced separately).						
<u>Invoiced separately</u> (e.g. for official inspections):						
Inspect supporting body parts for ruptures and cracks.						
Inspect supporting body parts for corrosion.						
Check completed body repairs for conformance with BMW specifications.						
Check steering: steering locks, bolted connections, steering damper/power steering. Check dust covers on rack-and-pinion steering for leaks.	Gr. 32					
Brakes: check brake master cylinder and brake booster operation and for leaks.	Gr. 34					
Corrections on body, repairs and replacement of parts as well as vehicle inspection in accordance with legislation* are invoiced separately.						
* Check legislation of pertinent country.						
SI = Service Information						

00-14

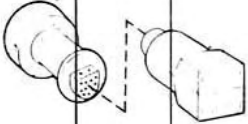BMW MAINTENANCE SYSTEM 00 00 245 BMW Annual Check	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Important! Service Indicator (SI) must be reset after annual check display (INSPECTION): Switch off all electrical equipment. Turn on Ignition – do not run engine. Use SI-R* with adapter** for large (20-pin) diagnosis socket and plug in diagnosis socket. Push in and hold recessed, red INSPECTION button – green lamp (function control) comes on. Red lamp also comes on after approx. 3 sec. and goes out after approx. 12 seconds. Release INSPECTION button – green lamp goes out. Gradual introduction of a new SI display with clock symbol and only one red diode light since January, 1986. This clock symbol lights up together with the INSPECTION sign for a time dependent inspection and has no influence on the green diode lights. Resetting must be repeated after 10 seconds when load and time dependent inspections occur together (clock symbol and yellow or red diode light come on), in order to cancel the clock symbol and INSPECTION sign, and reactivate the green diode lights. Checking Service Indicator (SI): The number of lighted green diode lights is not changed by resetting a time dependent inspection, but the INSPECTION sign and clock symbol must go out. * SI-R = Service Indicator Resetter, Order No. 62 1 100. ** Adapter, Order No. 62 1 140. Order No. of new SI-R = 62 1 Order No. of adapter for new SI-R = 62 1						
						

00-15

BMW MAINTENANCE SYSTEM

00 00 249 BMW Engine Oil Service

General Information

Replace engine oil and oil filter at operating temperature.

324 d, td:
Drain water trap.325 IX:
Check / correct adjustment of throttle valve drive (not applicable after introduction of M 1.1).*Important!*

Service Indicator (SI) must be reset after an Oil Service:
Switch off all electrical equipment.
Turn on Ignition – do not run engine.
Use SI-R* with adapter** for large (20-pin) diagnosis socket and plug in diagnosis socket.
Push in and hold yellow OIL SERVICE*** button – green lamp (function control) comes on.
Yellow lamp also comes on after approx. 10 seconds and goes out after approx. 3 seconds.
Release OIL SERVICE button – green lamp goes out.

Checking Service Indicator (SI) After 10 Seconds:
At least one (but more than previously) green diode light must come on. Yellow (possibly red) diode light and OIL SERVICE sign must go out.

Gradual introduction of a new SI display with clock symbol and only one red diode light since January, 1986. All five green diode lights come on after resetting the Oil Service.


* SI-R = Service Indicator Resetter, Order No. 62 1 100.

** Adapter, Order No. 62 1 140.

*** *Caution!*

Resetting with the wrong button cannot be corrected.
Service intervals would be mixed up – also refer to BMW Technik Information of Group 62.

324 d:
2 x Oil Service between inspection intervals for diesels.

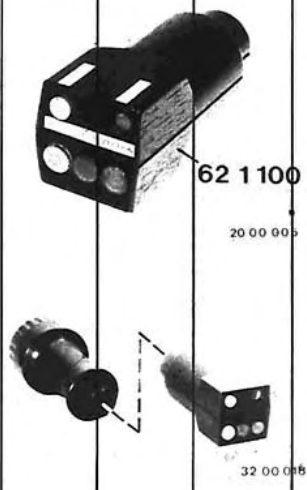Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	Important Information!
			Gr. 11		Use approved oil.
Gr. 13					
Gr. 13		Gr. 13			
					

00 - 16

BMW MAINTENANCE SYSTEM 00 00 259 BMW Safety Test	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Call faults in diagnosis system and brief test.						See operating instructions of BMW diagnosis system.
Steering Test: Steering gear, linkage, coupling, connections, leaks, oil volume, tightness and condition of drive belt for power steering.	Gr. 32			Gr. 32		Use approved oil.
Brake Test: Brake pads (remove/install wheels, lubricate centers), brake discs, pipes, hoses, connections, fluid level, parking brake cables, parking brake adjustment. With rear brake discs: break in parking brake. <i>Important!</i> Replace brake fluid every two years at the latest.	Gr. 34			Gr. 34 Gr., 34		Use approved brake fluid.
Tire and Wheel Rim Test: Condition, specified size and type, tread depth, wear pattern, tire inflation pressure (including spare wheel).		Gr. 36		Gr. 36		
Light Test: Headlights and front fog lamps (also aiming), parking lights, tail lights, backup lights, license plate lights, instrument and sign lights, control and warning lamps (ABS and airbag).	Gr. 63				+	
Signal Test: Horns, turn signals, hazard warning lights, stop lights, headlight flasher and rear fog lights.					+	
Windshield Wiper/Washer Test: Wiper blades, washer (windshield, if applicable headlights), washing fluid tank (level/antifreeze concentration), spray nozzle aiming (windshield, if applicable headlights). If applicable, fill intensive cleaning fluid tank.				Gr. 00	+	
Seat Belt Test: Condition and operation.	Gr. 72					
Remarks: Repairs and adjustments are involved separately.						

00-17

BMW MAINTENANCE SYSTEM 00 00 400 Special Emission Inspection (ASU)	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Connect and disconnect BMW Service Tester. Check engine idle speed, CO level and, if applicable, dwell angle and ignition timing.	Gr. 12/13		Engine test			
If necessary, necessary additional work invoiced separately:						
11 00 540 Check compression of all cylinders (remove/install spark plugs).	Gr. 11					
11 34 505 Adjust valve clearance.	Gr. 11	Gr. 11				
12 11 514 Adjust dwell angle and ignition timing.	Gr. 12					
12 12 521 Replace all spark plugs.	Gr. 12	Gr. 12				
13 00 604 Check engine idle speed and fuel/air mixture, and perform exhaust test (excluding diesel engine models).	Gr. 13		+			
Cars with Self-diagnosis:						
Call faults in diagnosis system.						See operating instructions of BMW diagnosis system.
Brief test.						See operating instructions of BMW Service Tester.

00-18

BMW MAINTENANCE SYSTEM 00 00 099 Exchange Engine Inspection	General Information					Important Information!
	Repair Manual	Technical Data	Nominal Values	Operating Fluids	Owner's Manual	
Replace engine oil and oil filter at operating temperature.	Gr. 11	Gr. 11		Gr. 11		
325 IX: Remove and install splash guard.						
Check coolant hoses for leaks; check / correct coolant level and antifreeze concentration.				Gr. 17	+	Use longterm antifreeze and corrosion inhibitor.
Check tightness and condition of all drive belts, tightening when necessary.	Gr. 12/32/64					
Check / adjust valve clearance (excluding diesel and M 40 engines).						
Check engine idle speed and fuel/air mixture, and perform exhaust test (excluding diesel engines).	Gr. 13					

11 Engine

Model 316 / 316i / 318i – **M10**

Model 316i / 318i – **M40**.....

Model 318is – **M42**

Model 320i / 323i / 325e / 325i – **M20**.....

Model 320is – **S14**.....

Model 324d, 324 td – **M21**.....


11 Engine

Models: 316 / 316i / 318i – Engine M10


11 00 006	Diagnosis with BMW Service Tester	see Nominal Value Microfiche
	Engine view	11- 0
039	Compression of all cylinders – check	11- 1
050	Engine – remove and install	11- 2
091	Engine – exchange	11- 6
11 12 000	Cylinder head cover – remove and install	11- 6
100	Cylinder head – remove and install	11- 7
11 13 010	Oil pan upper section – remove and install / replace	11- 11
020	Oil pan lower section – remove and install / replace	11- 11
	Emission control – layout drawing	
	BMW 318i – AUS/CH/S – beginning with 1984 models	11- 12
	BMW 318iA – AUS – beginning with 1984 models	11- 13
11 70 009	Emission control – check function	11- 15
11 72 140	Air pulse valves – replace	11- 17
11 74 545	Temperature switch – replace	11- 17
11 76 000	Catalytic converter – convert	11- 18
11 78 010	Oxygen sensor – check	11- 19
510	Oxygen sensor – replace	11- 19

Product: 1990 BMW E30 Car Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/1990-bmw-e30-car-service-repair-workshop-manual/>

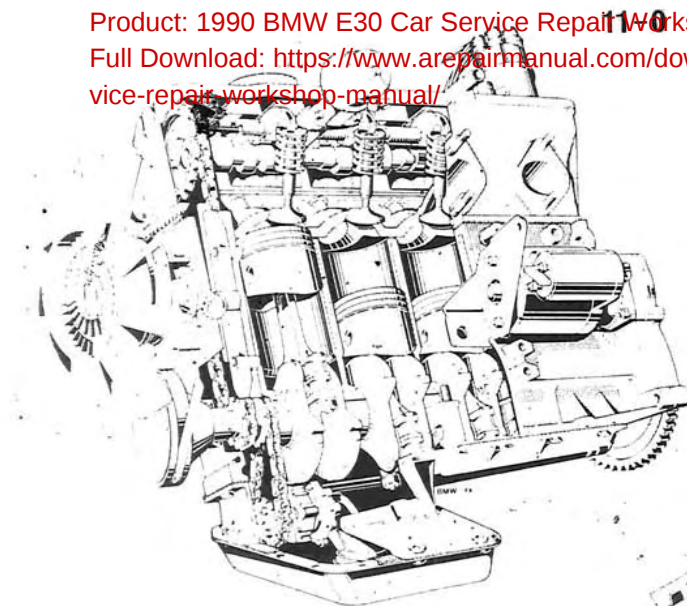

M 10 B 18 V
 = Gasoline
 = Displacement (x 100)
 = Carburetor
 = L-Jetronic
 = Australia/Switzerland/Sweden/USA

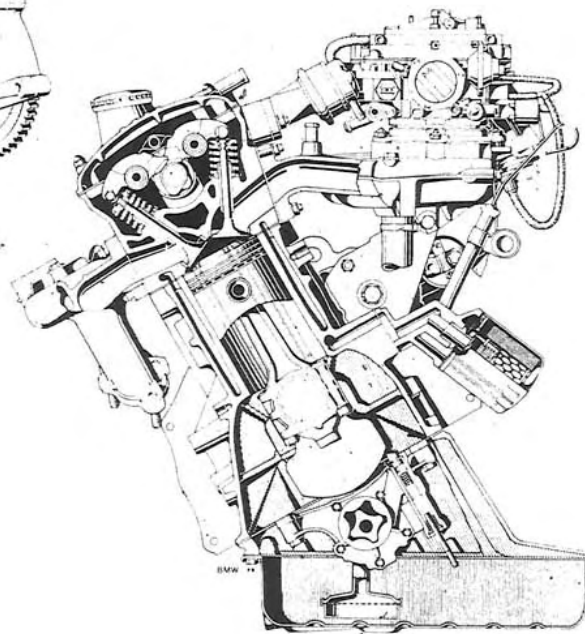

BMW 316 - M 10 B 18 V
 316 i - M 10 B 18 L, U
 318 i - M 10 B 18 L
 318 i - M 10 B 18 L, U (Catalytic Converter)
 318 i - M 10 B 18 L, U (Emission Reduction)

Sample of manual. Download All 1313 pages at:

<https://www.arepairmanual.com/downloads/1990-bmw-e30-car-service-repair-workshop-manual/>