


Product: 2003 Kawasaki Z1000 Motorcycle Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/2003-kawasaki-z1000-motorcycle-service-repair-workshop-manual/>

# Kawasaki

# Z1000

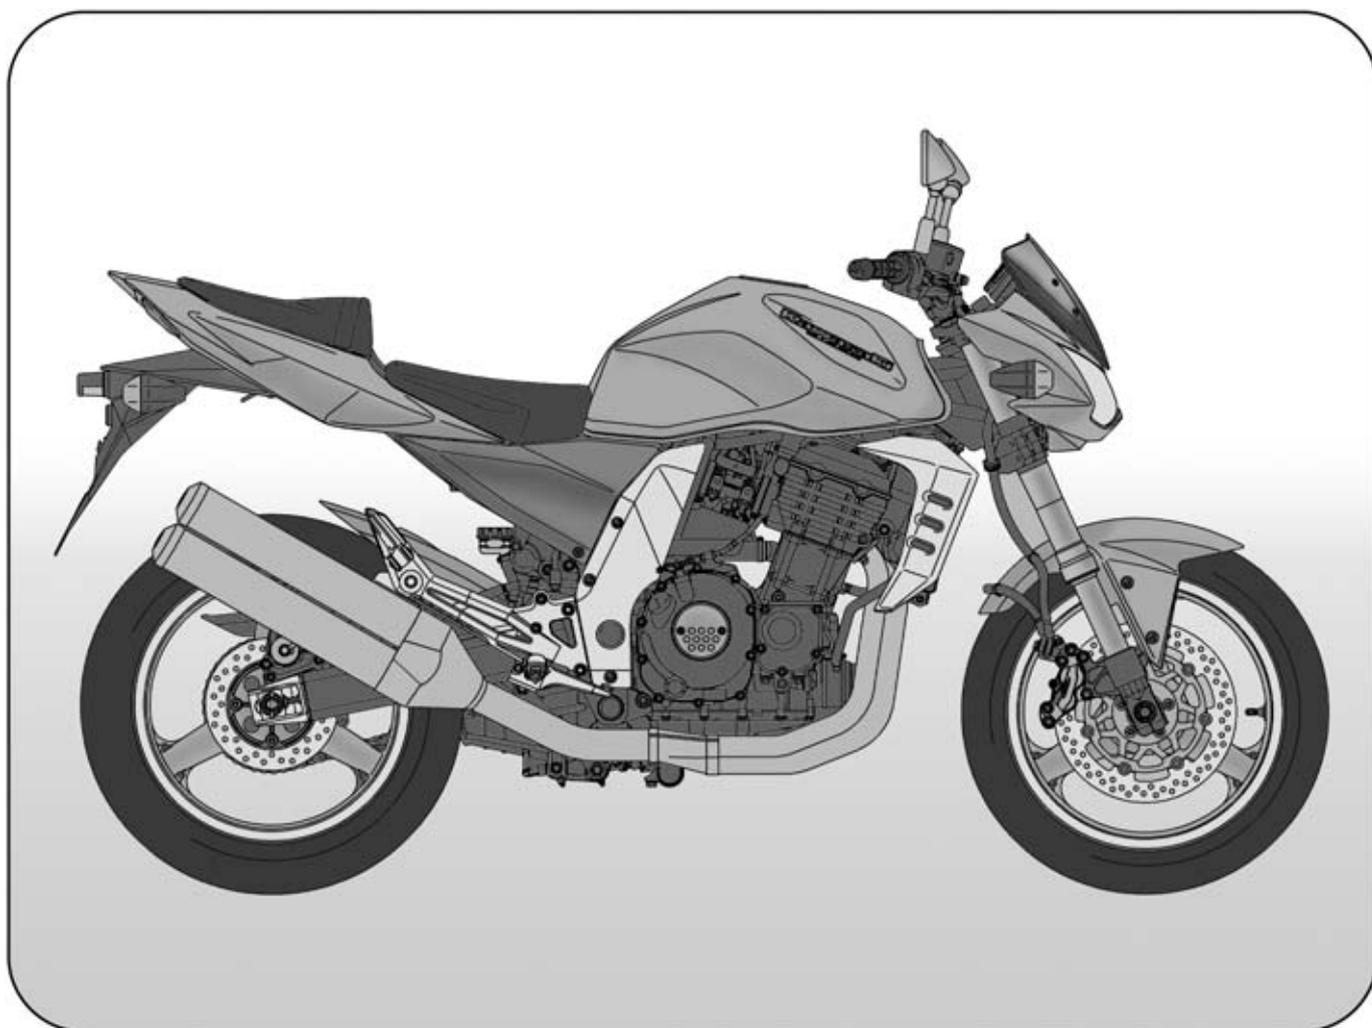

# Motorcycle Service Manual

Sample of manual. Download All 515 pages at:

<https://www.arepairmanual.com/downloads/2003-kawasaki-z1000-motorcycle-service-repair-workshop-manual/>

Product: 2003 Kawasaki Z1000 Motorcycle Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/2003-kawasaki-z1000-motorcycle-service-repair-workshop-manual/>

Sample of manual. Download All 515 pages at:  
<https://www.arepairmanual.com/downloads/2003-kawasaki-z1000-motorcycle-service-repair-workshop-manual/>


# Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Periodic Maintenance</b>	<b>2</b>
<b>Fuel System (DFI)</b>	<b>3</b>
<b>Cooling System</b>	<b>4</b>
<b>Engine Top End</b>	<b>5</b>
<b>Clutch</b>	<b>6</b>
<b>Engine Lubrication System</b>	<b>7</b>
<b>Engine Removal/Installation</b>	<b>8</b>
<b>Crankshaft/Transmission</b>	<b>9</b>
<b>Wheels/Tires</b>	<b>10</b>
<b>Final Drive</b>	<b>11</b>
<b>Brakes</b>	<b>12</b>
<b>Suspension</b>	<b>13</b>
<b>Steering</b>	<b>14</b>
<b>Frame</b>	<b>15</b>
<b>Electrical System</b>	<b>16</b>
<b>Appendix</b>	<b>17</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.



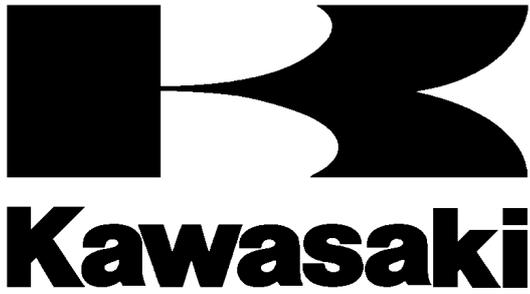

**Z1000**

# **Motorcycle Service Manual**

---

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Assurance Department/Consumer Products and Machinery Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your Motorcycle dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.

## LIST OF ABBREVIATIONS

A	ampere(s)	lb	pound(s)
ABDC	after bottom dead center	m	meter(s)
AC	alternating current	min	minute(s)
ATDC	after top dead center	N	newton(s)
BBDC	before bottom dead center	Pa	pascal(s)
BDC	bottom dead center	PS	horsepower
BTDC	before top dead center	psi	pound(s) per square inch
°C	degree(s) Celsius	r	revolution
DC	direct current	rpm	revolution(s) per minute
F	farad(s)	TDC	top dead center
°F	degree(s) Fahrenheit	TIR	total indicator reading
ft	foot, feet	V	volt(s)
g	gram(s)	W	watt(s)
h	hour(s)	Ω	ohm(s)
L	liter(s)		

**Read OWNER'S MANUAL before operating.**

## EMISSION CONTROL INFORMATION

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board. Additionally, Kawasaki has incorporated an evaporative emission control system (3) in compliance with applicable regulations of the California Air Resources Board on vehicles sold in California only.

### 1. Crankcase Emission Control System

This system eliminates the release of crankcase vapors into the atmosphere. Instead, the vapors are routed through an oil separator to the intake side of the engine. While the engine is operating, the vapors are drawn into combustion chamber, where they are burned along with the fuel and air supplied by the fuel injection system.

### 2. Exhaust Emission Control System

This system reduces the amount of pollutants discharged into the atmosphere by the exhaust of this motorcycle. The fuel, ignition, and exhaust systems of this motorcycle have been carefully designed and constructed to ensure an efficient engine with low exhaust pollutant levels. The exhaust system of this model motorcycle manufactured primarily for sale in California includes a catalytic converter system.

### 3. Evaporative Emission Control System

Vapors caused by fuel evaporation in the fuel system are not vented into the atmosphere. Instead, fuel vapors are routed into the running engine to be burned, or stored in a canister when the engine is stopped. Liquid fuel is caught by a vapor separator and returned to the fuel tank.

The Clean Air Act, which is the Federal law covering motor vehicle pollution, contains what is commonly referred to as the Act's "tampering provisions."

"Sec. 203(a) The following acts and the causing thereof are prohibited...

(3)(A) for any person to remove or render inoperative any device or element of design installed on or in a motor vehicle or motor vehicle engine in compliance with regulations under this title prior to its sale and delivery to the ultimate purchaser, or for any manufacturer or dealer knowingly to remove or render inoperative any such device or element of design after such sale and delivery to the ultimate purchaser.

(3)(B) for any person engaged in the business of repairing, servicing, selling, leasing, or trading motor vehicles or motor vehicle engines, or who operates a fleet of motor vehicles knowingly to remove or render inoperative any device or element of design installed on or in a motor vehicle or motor vehicle engine in compliance with regulations under this title following its sale and delivery to the ultimate purchaser..."

### NOTE

○The phrase "remove or render inoperative any device or element of design" has been generally interpreted as follows:

1. Tampering does not include the temporary removal or rendering inoperative of devices or elements of design in order to perform maintenance.
2. Tampering could include:
  - a. Maladjustment of vehicle components such that the emission standards are exceeded.
  - b. Use of replacement parts or accessories which adversely affect the performance or durability of the motorcycle.
  - c. Addition of components or accessories that result in the vehicle exceeding the standards.
  - d. Permanently removing, disconnecting, or rendering inoperative any component or element of design of the emission control systems.

**WE RECOMMEND THAT ALL DEALERS OBSERVE THESE PROVISIONS OF FEDERAL LAW, THE VIOLATION OF WHICH IS PUNISHABLE BY CIVIL PENALTIES NOT EXCEEDING \$10,000 PER VIOLATION.**

## **TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED**

Federal law prohibits the following acts or the causing thereof: (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- Replacement of the original exhaust system or muffler with a component not in compliance with Federal regulations.
- Removal of the muffler(s) or any internal portion of the muffler(s).
- Removal of the air box or air box cover.
- Modifications to the muffler(s) or air inlet system by cutting, drilling, or other means if such modifications result in increased noise levels.

# Foreword

This manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough detail and basic information to make it useful to the owner who desires to perform his own basic maintenance and repair work. A basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily. Whenever the owner has insufficient experience or doubts his ability to do the work, all adjustments, maintenance, and repair should be carried out only by qualified mechanics.

In order to perform the work efficiently and to avoid costly mistakes, read the text, thoroughly familiarize yourself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools or equipment are specified, do not use makeshift tools or equipment. Precision measurements can only be made if the proper instruments are used, and the use of substitute tools may adversely affect safe operation.

**For the duration of the warranty period,** we recommend that all repairs and scheduled maintenance be performed in accordance with this service manual. Any owner maintenance or repair procedure not performed in accordance with this manual may void the warranty.

To get the longest life out of your vehicle:

- Follow the Periodic Maintenance Chart in the Service Manual.
- Be alert for problems and non-scheduled maintenance.
- Use proper tools and genuine Kawasaki Motorcycle parts. Special tools, gauges, and testers that are necessary when servicing Kawasaki motorcycles are introduced by the Special Tool Catalog or Manual. Genuine parts provided as spare parts are listed in the Parts Catalog.
- Follow the procedures in this manual carefully. Don't take shortcuts.
- Remember to keep complete records of maintenance and repair with dates and any new parts installed.

---

## How to Use This Manual

---

In preparing this manual, we divided the product into its major systems. These systems became the manual's chapters. All information for a particular system from adjustment through disassembly and inspection is located in a single chapter.

The Quick Reference Guide shows you all of the product's system and assists in locating their chapters. Each chapter in turn has its own comprehensive Table of Contents.

The Periodic Maintenance Chart is located in the Periodic Maintenance chapter. The chart gives a time schedule for required maintenance operations.

If you want spark plug information, for example, go to the Periodic Maintenance Chart first. The chart tells you how frequently to clean and gap the plug. Next, use the Quick Reference Guide to locate the Periodic Maintenance chapter. Then, use the Table of Contents on the first page of the chapter to find the Spark Plug section.

Whenever you see these WARNING and CAUTION symbols, heed their instructions! Always follow safe operating and maintenance practices.

### WARNING

**This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury, or loss of life.**

### CAUTION

**This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of equipment.**

This manual contains four more symbols (in addition to WARNING and CAUTION) which will help you distinguish different types of information.

## NOTE

○ *This note symbol indicates points of particular interest for more efficient and convenient operation.*

● Indicates a procedural step or work to be done.

○ Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

In most chapters an exploded view illustration of the system components follows the Table of Contents. In these illustrations you will find the instructions indicating which parts require specified tightening torque, oil, grease or a locking agent during assembly.

# General Information

## Table of Contents

Before Servicing .....	1-2
Model Identification.....	1-7
General Specifications.....	1-8
Technical Information – Air Inlet System .....	1-11
Technical Information – New Ignition Interlock Sidestand .....	1-13
Technical Information – Tail/Brake Lights Employing LED .....	1-14
Technical Information - KLEEN (KAWASAKI LOW EXHAUST EMISSION SYSTEM) .....	1-16
Unit Conversion Table .....	1-17

## 1-2 GENERAL INFORMATION


### Before Servicing

Before starting to perform an inspection service or carry out a disassembly and reassembly operation on a motorcycle, read the precautions given below. To facilitate actual operations, notes, illustrations, photographs, cautions, and detailed descriptions have been included in each chapter wherever necessary. This section explains the items that require particular attention during the removal and reinstallation or disassembly and reassembly of general parts.

Especially note the following:


#### *Battery Ground*

Before completing any service on the motorcycle, disconnect the battery wires from the battery to prevent the engine from accidentally turning over. Disconnect the ground wire (-) first and then the positive (+). When completed with the service, first connect the positive (+) wire to the positive (+) terminal of the battery then the negative (-) wire to the negative terminal.

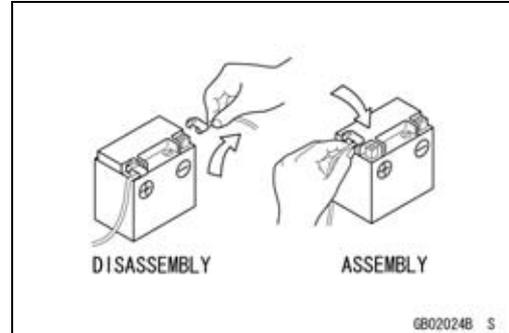


#### *Edges of Parts*

Lift large or heavy parts wearing gloves to prevent injury from possible sharp edges on the parts.

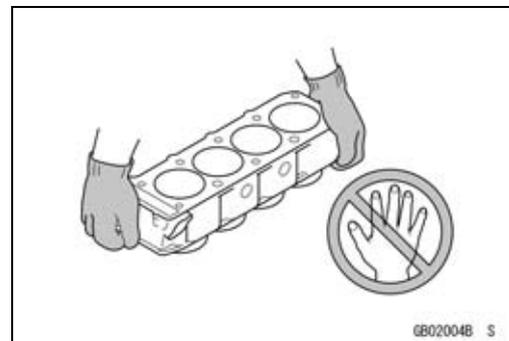


#### *Solvent*

Use a high flash point solvent when cleaning parts. High flash point solvent should be used according to directions of the solvent manufacturer.

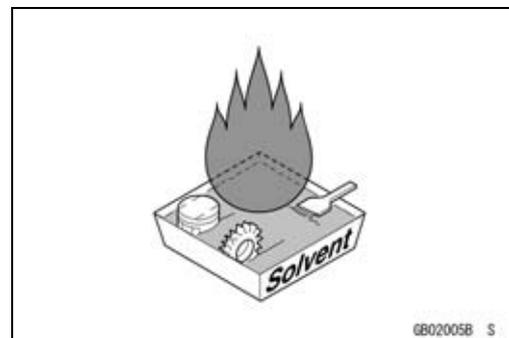

#### *Cleaning vehicle before disassembly*


Clean the vehicle thoroughly before disassembly. Dirt or other foreign materials entering into sealed areas during vehicle disassembly can cause excessive wear and decrease performance of the vehicle.

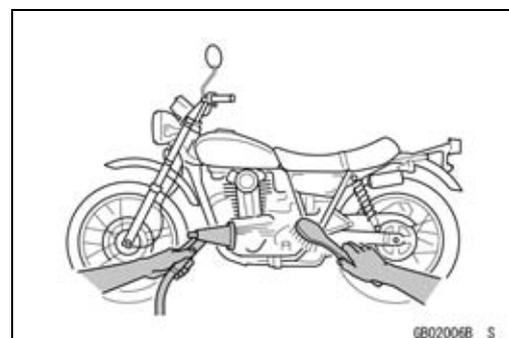

## Before Servicing


### *Arrangement and Cleaning of Removed Parts*

Disassembled parts are easy to confuse. Arrange the parts according to the order the parts were disassembled and clean the parts in order prior to assembly.

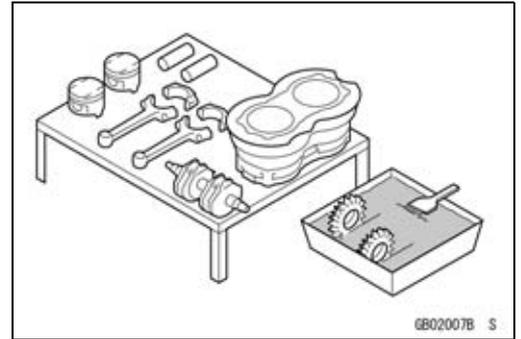


### *Storage of Removed Parts*

After all the parts including subassembly parts have been cleaned, store the parts in a clean area. Put a clean cloth or plastic sheet over the parts to protect from any foreign materials that may collect before re-assembly.

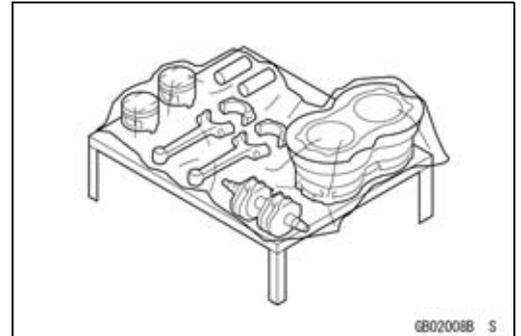


### *Inspection*

Reuse of worn or damaged parts may lead to serious accident. Visually inspect removed parts for corrosion, discoloration, or other damage. Refer to the appropriate sections of this manual for service limits on individual parts. Replace the parts if any damage has been found or if the part is beyond its service limit.

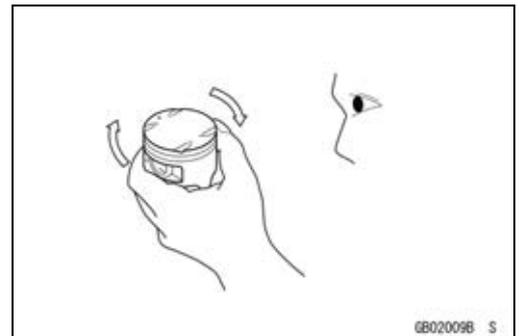


### *Replacement Parts*

Replacement Parts must be KAWASAKI genuine or recommended by KAWASAKI. Gaskets, O rings, Oil seals, Grease seals, circlips or cotter pins must be replaced with new ones whenever disassembled.

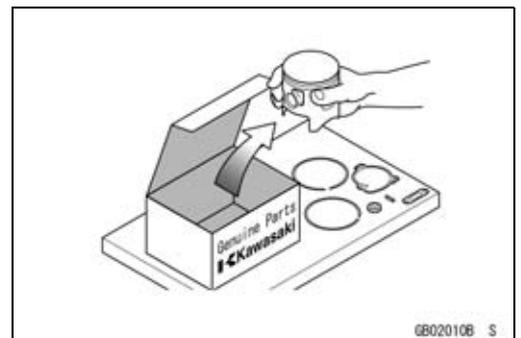

### *Assembly Order*

In most cases assembly order is the reverse of disassembly, however, if assembly order is provided in this Service Manual, follow the procedures given.

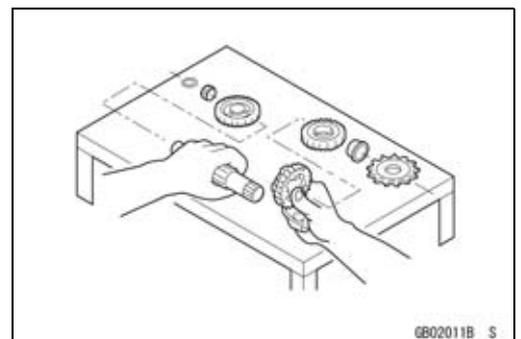


# 1-4 GENERAL INFORMATION

## Before Servicing

### *Tightening Sequence*


Bolts, nuts, or screws must be tightened according to the specified sequence to prevent case warpage or deformation which can lead to malfunction. If the specified tightening sequence is not indicated, tighten the fasteners alternating diagonally.

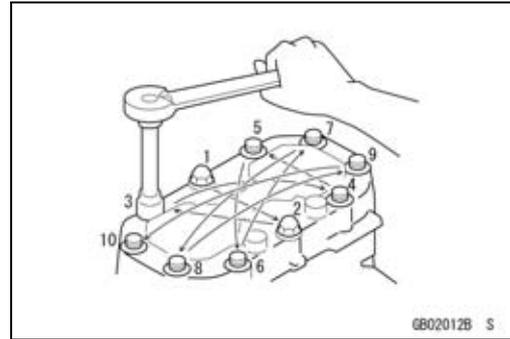

### *Tightening Torque*


Incorrect torque applied to a bolt, nut, or screw may lead to serious damage. Tighten fasteners to the specified torque using a good quality torque wrench.

Often, the tightening sequence is followed twice—initial tightening and final tightening with torque wrench.

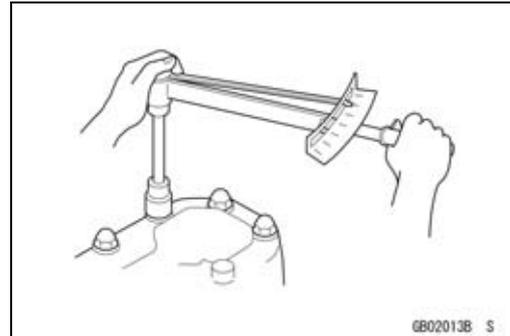


### *Force*

Use common sense during disassembly and assembly, excessive force can cause expensive or hard to repair damage. When necessary, remove screws that have a non-permanent locking agent applied using an impact driver. Use a plastic-faced mallet whenever tapping is necessary.

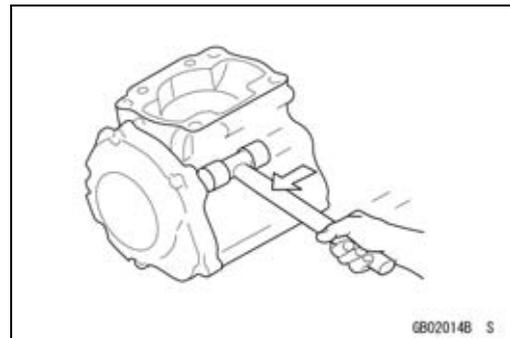

### *Gasket, Oring*

Hardening, shrinkage, or damage of both gaskets and grease seals after disassembly can reduce sealing performance. Remove old gaskets and clean the sealing surfaces thoroughly so that no gasket material or other material remains. Install new gaskets and replace used grease seal when re-assembling.

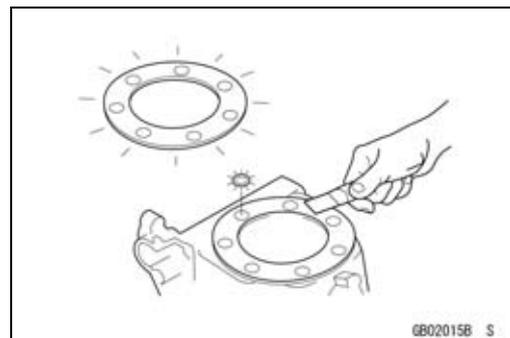

### *Liquid Gasket, Locking Agent*


For applications that require Liquid Gasket or a Locking agent, clean the surfaces so that no oil residue remains before applying liquid gasket or locking agent. Do not apply them excessively. Excessive application can clog oil passages and cause serious damage.



**Before Servicing**

**Press**

For items such as bearings or oil seals that must be pressed into place, apply small amount of oil to the contact area. Be sure to maintain proper alignment and use smooth movements when installing.

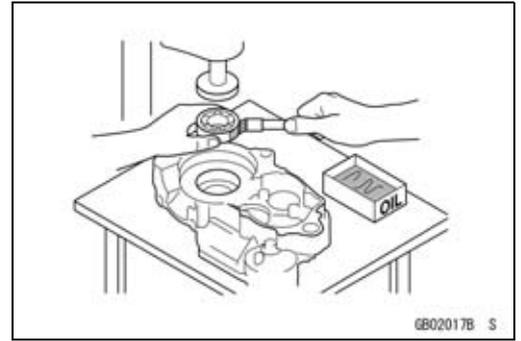


GB02017B S

**Ball Bearing and Needle Bearing**

Do not remove pressed ball or needle unless removal is absolutely necessary. Replace with new ones whenever removed. Press bearings with the manufacturer and size marks facing out. Press the bearing into place by putting pressure on the correct bearing race as shown.


Pressing the incorrect race can cause pressure between the inner and outer race and result in bearing damage.

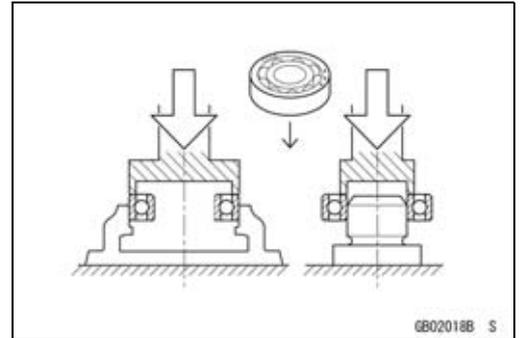

GB02018B S

**Oil Seal, Grease Seal**


Do not remove pressed oil or grease seals unless removal is necessary. Replace with new ones whenever removed. Press new oil seals with manufacture and size marks facing out. Make sure the seal is aligned properly when installing.

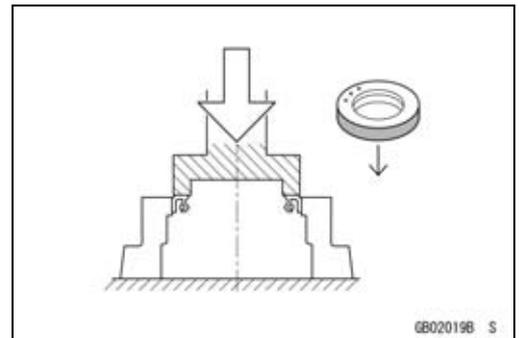

GB02019B S

**Circlips, Cotter Pins**


Replace circlips or cotter pins that were removed with new ones. Install the circlip with its sharp edge facing outward and its chamfered side facing inward to prevent the clip from being pushed out of its groove when loaded. Take care not to open the clip excessively when installing to prevent deformation.

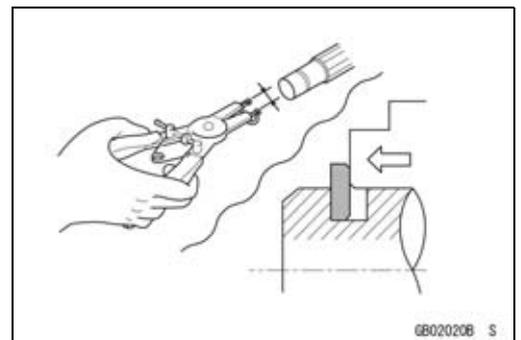

GB02020B S

**Lubrication**

It is important to lubricate rotating or sliding parts during assembly to minimize wear during initial operation. Lubrication points are called out throughout this manual, apply the specific oil or grease as specified.

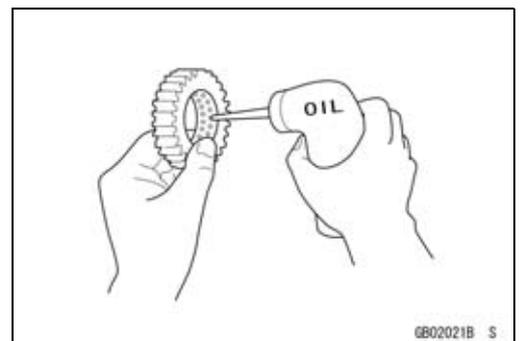


GB02021B S

## 1-6 GENERAL INFORMATION

### Before Servicing


#### *Direction of Engine Rotation*

When rotating the crankshaft by hand, the free play amount of rotating direction will affect the adjustment. Rotate the crankshaft to positive direction (clockwise viewed from output side).

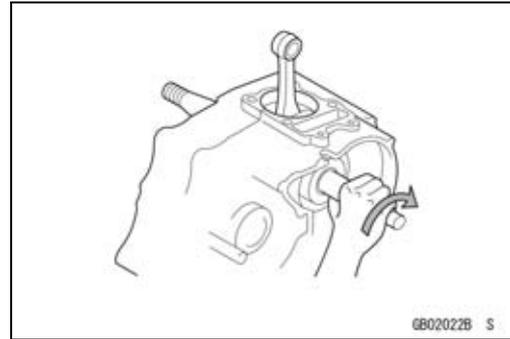

#### *Electrical Wires*

A two-color wire is identified first by the primary color and then the stripe color. Unless instructed otherwise, electrical wires must be connected to those of the same color.

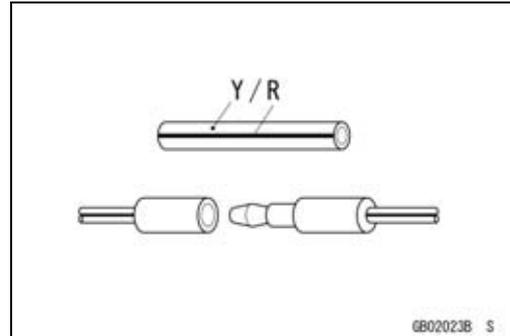

Model Identification

ZR1000-A1 Left Side View:



ZR1000-A1 Right Side View:



# 1-8 GENERAL INFORMATION

## General Specifications

Items	ZR1000-A1 ~
<b>Dimensions:</b> Overall length Overall width Overall height Wheelbase Road clearance Seat height Dry mass Curb mass:     Front Rear Fuel tank capacity	2 080 mm (81.9 in.) 770 mm (30.3 in.) 1 055 mm (41.5 in.) 1 420 mm (55.9 in.) 145 mm (5.7 in.) 820 mm (32.3 in.) 198 kg (410.1 lb) 110 kg (242.6 lb) 111 kg (244.8 lb) 18 L (5.0 US gal.)
<b>Performance:</b> Minimum turning radius	2.8 m (9.2 ft)
<b>Engine:</b> Type Cooling system Bore and stroke Displacement Compression ratio Maximum horsepower  Maximum torque  Carburetion system Starting system Ignition system Timing advance Ignition timing  Spark plug Cylinder numbering method Firing order Valve timing: Inlet            Open Close Duration Exhaust        Open Close Duration	4-stroke, DOHC, 4-cylinder Liquid-cooled 77.2 × 50.9 mm (3.0 × 2.0 in.) 953 mL (58.15 cu in.) 11.2 93.4 kW (127 PS) @10 000 r/min (rpm), (MY, AU) 90.5 kW (123 PS) @10 000 r/min (rpm) (HR) 78.2 kW (106 PS) @10 000 r/min (rpm) (US) - - - 95.6 N·m (9.7 kgf·m, 71 ft·lb) @8 000 r/min (rpm), (MY, AU) 92.7 N·m (9.4 kgf·m, 68 ft·lb) @8 000 r/min (rpm) (HR) 86.3 N·m (8.8 kgf·m, 64 ft·lb) @7 500 r/min (rpm) (US) - - - FI (Fuel Injection) Keihin TTK38 × 4 Electric starter Battery and coil (transistorized) Electronically advanced(digital igniter) From 10° BTDC @1 100 r/min (rpm) to 36° BTDC @7 500 r/min (rpm) NGK CR9EK or ND U27ETR Left to right, 1-2-3-4 1-2-4-3 38° BTDC 66° ABDC 284° 57° BBDC 31° ATDC 268°



# 1-10 GENERAL INFORMATION

## General Specifications

Items	ZR1000-A1 ~
Tail/brake light	12 V 0.5/3.8 W (LED) (US, CA, Cal) 12 V 0.5/5W (LED)
Alternator:      Type Rated output	Three-phase AC 24 A/ 14 V @5 000 r/min (rpm)

Specifications are subject to change without notice, and may not apply to every country.

(AU): Australia Model

(US): U.S.A. Model

(CA): Canada Model

(Cal): California Model

(MY): Malaysia Model


(HR): with Honeycomb Catalytic Converter Model (Restricted model)

Technical Information – Air Inlet System

**Subthrottle Control System**

The ZR1000-A1 ~ employs large bore throttle bodies to increase power output. However, sudden changes in throttle opening can cause hesitation and jerky throttle response with a single butterfly valve in a large bore. Therefore two throttle valves are placed in each inlet tract, the main throttle valve located closest to the cylinder and a subthrottle valve placed further up the inlet tract. The main throttle valve is operated by the rider when the throttle grip is turned clockwise or counterclockwise, while the subthrottle valve is operated by a stepping motor controlled by the ECU. The subthrottle valve automatically adjusts air inlet to more precisely match engine demand, so that when the main throttle is opened quickly there is no hesitation or jerky response.

The subthrottle valves allow the fuel injection system to provide smooth throttle response, similar to that of a constant velocity carburetor, no matter how quickly the throttle is opened.

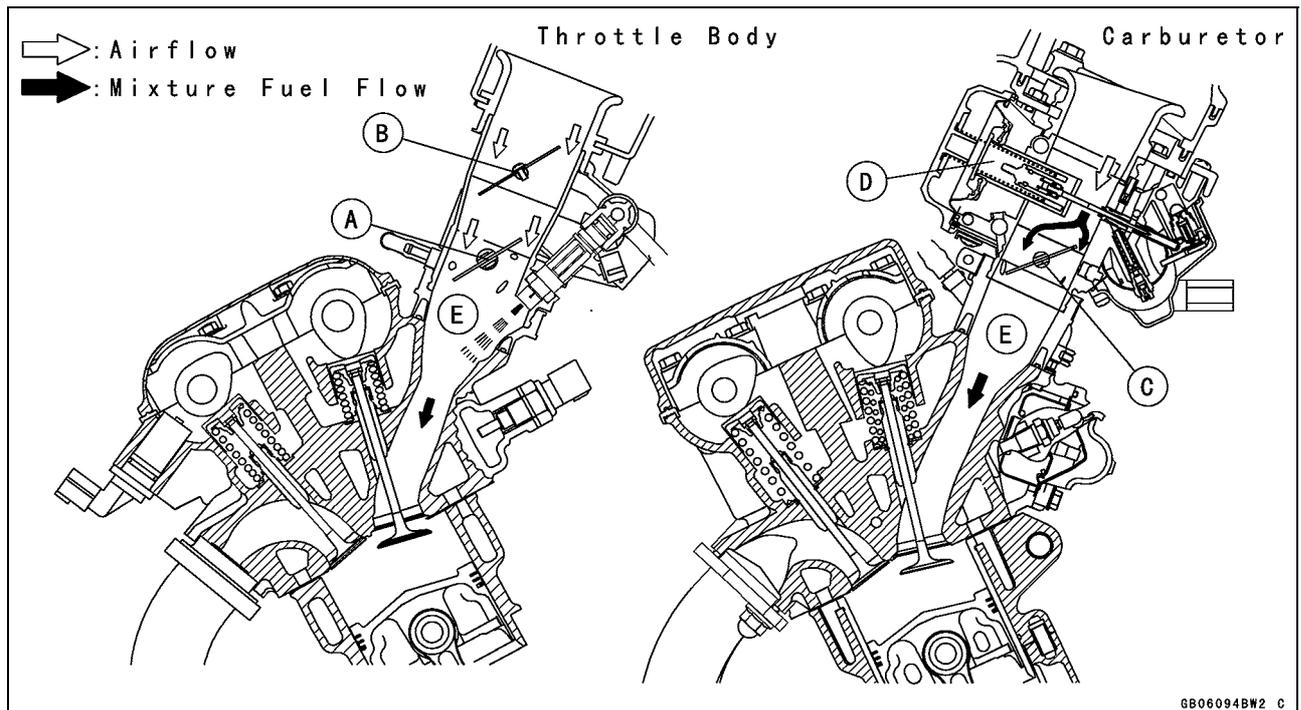

- A. Main Throttle Valve
- B. Subthrottle Valve
- C. Throttle Valve

- D. Vacuum Piston
- E. Inlet Air

# 1-12 GENERAL INFORMATION

## Technical Information – Air Inlet System


### Operation

The subthrottle control system consists of the subthrottle valve, subthrottle valve actuator with a stepping motor built in it, ECU, and subthrottle sensor. The subthrottle valve is built in the each throttle body.

The subthrottle control system operates on the signal supplied from the ECU. The open/close operation of the subthrottle valve is performed by the subthrottle actuator which is controlled by the ECU to change the current direction into the motor of the subthrottle valve actuator.

The subthrottle sensor detects the subthrottle valve actuator movement by measuring voltage and the ECU determines the subthrottle valve angle based on the operation map.

When turning the ignition switch ON, every time the ECU automatically drives the subthrottle valve from fully closed position to fully opened position. The ECU memorizes these positions and turns back the subthrottle valve to the original point to confirm the subthrottle valve idling voltage.

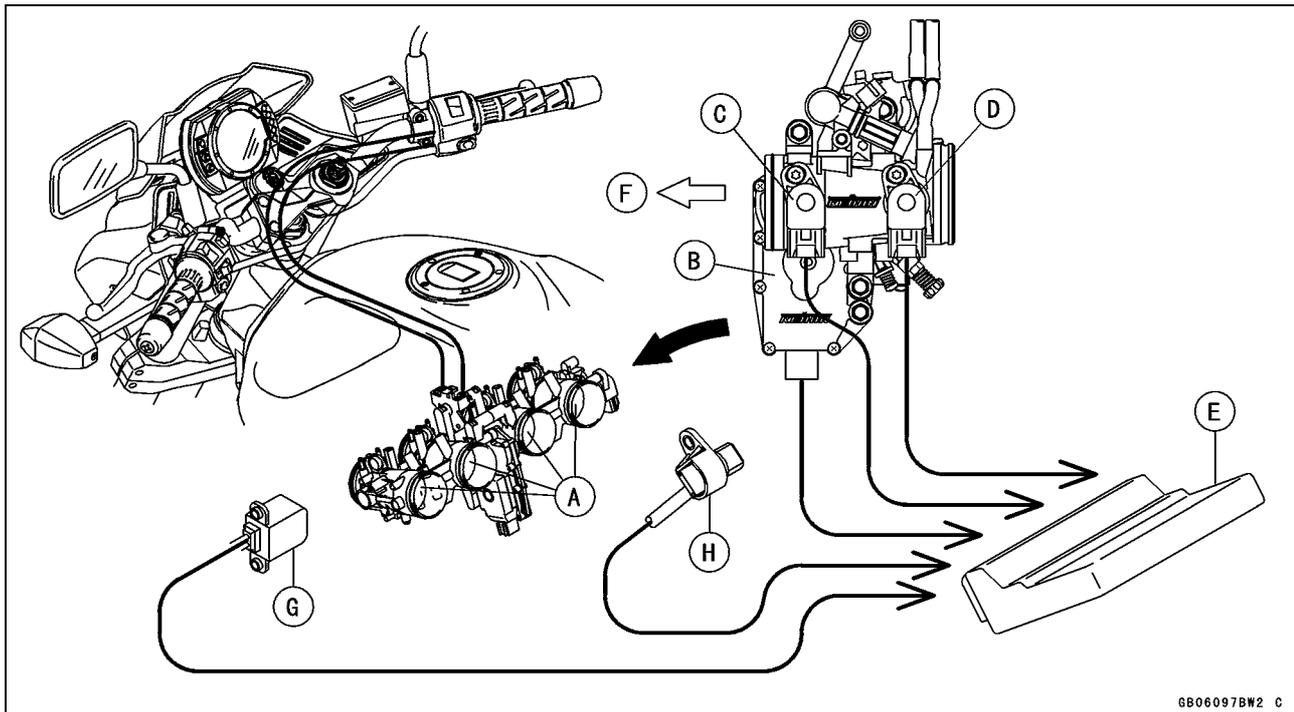

- A. Subthrottle Valves
- B. Subthrottle Valve Actuator
- C. Subthrottle Sensor
- D. Main Throttle Sensor

- E. ECU (Electric Control Unit)
- F. Air Cleaner Side
- G. Crankshaft Sensor
- H. Speed Sensor

**Technical Information – New Ignition Interlock Sidestand**

**Outline**

The New Ignition Interlock Sidestand System applied to ZR1000–A1 models that cannot function if gears are engaged and/or the sidestand is not lifted upward even though clutch lever pulled in, which differs from the traditional one. Refer to the tables below as to the engine starts and/or the driving at each condition.

**New Ignition Interlock Sidestand System**

	<b>Side Stand</b>	<b>Gear Position</b>	<b>Clutch Lever</b>	<b>Engine Start</b>	<b>Engine Run</b>
A	Up	Neutral	Released	Starts	Continue running
B	Up	Neutral	Pulled in	Starts	Continue running
C	Up	In Gear	Released	Doesn't start	Continue running
D	Up	In Gear	Pulled in	Starts	Continue running
E	Down	Neutral	Released	Starts	Continue running
F	Down	Neutral	Pulled in	Starts	Continue running
G	Down	In Gear	Released	Doesn't start	Stops
H	Down	In Gear	Pulled in	<i>Doesn't start</i>	<i>Stops</i>

**Current Ignition Interlock Sidestand System**

	<b>Side Stand</b>	<b>Gear Position</b>	<b>Clutch Lever</b>	<b>Engine Start</b>	<b>Engine Run</b>
A	Up	Neutral	Released	Starts	Continue running
B	Up	Neutral	Pulled in	Starts	Continue running
C	Up	In Gear	Released	Doesn't start	Continue running
D	Up	In Gear	Pulled in	Starts	Continue running
E	Down	Neutral	Released	Starts	Continue running
F	Down	Neutral	Pulled in	Starts	Continue running
G	Down	In Gear	Released	Doesn't start	Stops
H	Down	In Gear	Pulled in	<i>Start</i>	<i>Continue running</i>


# 1-14 GENERAL INFORMATION

## Technical Information – Tail/Brake Lights Employing LED


### Outline

This model employs a tail/brake light containing 21 Light Emitting Diodes (LED). The LED emits luminous beams over a longer life span than those emitted from a traditional electric heated bulb (more than 5 times longer), uses lower voltage, expends lower wattage (approx.1/5), and is quicker responding.

### Due Position of LED Installation

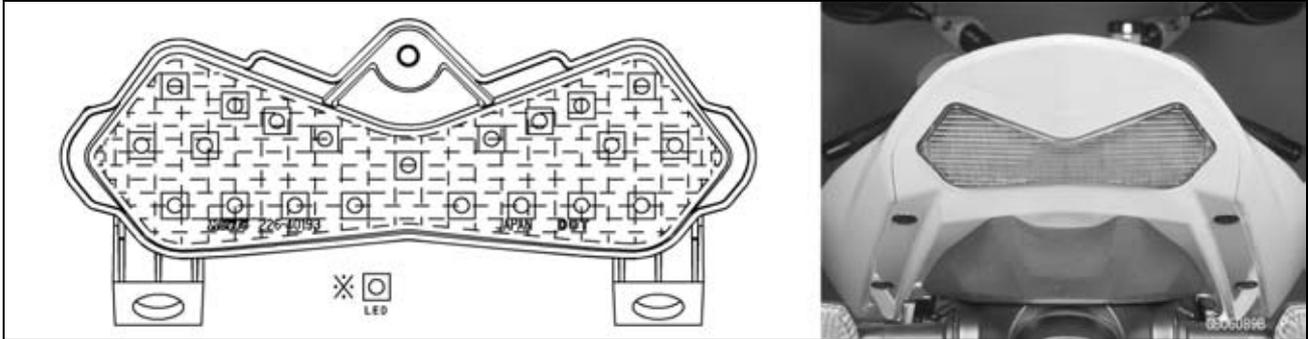


The resistors, the diodes, and the Zener diodes are mounted in the electronic circuits [A] of the LED, which supplies the steady current and voltage to the light.

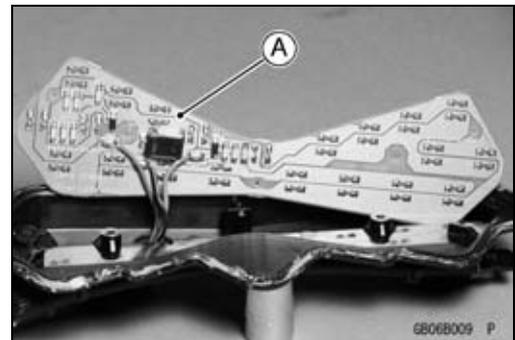


### Light Emitting Diode (LED)

The Light Emitting Diode (LED) [A] is an element of semiconductor diode that converts applied voltage to light.

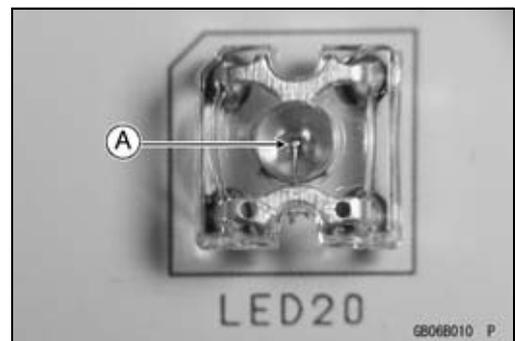

The LED emits luminous beams by the collision of negative charge electrons [A] and positive charge holes [B] when applied the forward voltage and current to the PN junction diode [C].

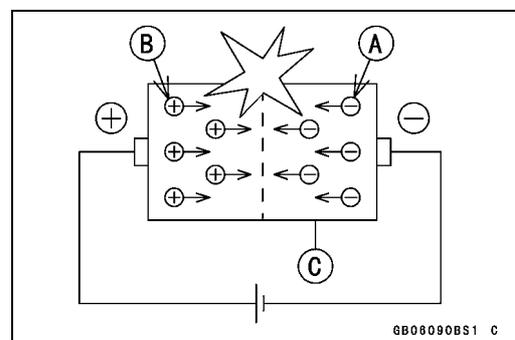

---

**Technical Information – Tail/Brake Lights Employing LED**

---

The emitting color differs according to the materials of semi-conductors.

**Materials of Semi-Conductor and Emitting Color**

Materials of Semi-Conductor	Emitting Color
GaAsP, GaAlAs	Red
GaP	Green
GaN	Blue

- Ga: Gallium
- As: Arsenic
- P: Phosphorus
- N: Nitrogen
- Al: Aluminum

## 1-16 GENERAL INFORMATION

### Technical Information - KLEEN (KAWASAKI LOW EXHAUST EMISSION SYSTEM)


Since the emission regulations become more severe, Kawasaki has adopted a type of simplified KLEEN, which have no catalyst protection system, according to each regulation of different countries.

The muffler with built-in catalyst has the same durability as the conventional muffler, however, do not use leaded gasoline and do not coast with the ignition system OFF. Running the engine without ignition damages catalyst.

Refer to the ZX900E Service Manual (Part No. 99924-1255) for more information about the KLEEN (theory, maintenance, and handling precautions), including the secondary air injection system.

#### Honeycomb Type Catalytic Converter

- The converter is a three-way catalytic converter, and its surface is covered with alumina upon which platinum and rhodium are applied, and has a cylindrical metallic honeycomb structure made by bending a corrugated sheet and a flat sheet of stainless steel into a spiral of increasing diameter. The honeycomb structure is convenient for the catalytic converter because it has a large surface area but small size to react effectively and has low exhaust resistance. In addition, its inherent strength helps resist vibration, and has simple structure welded directly on the silencer.
- Generally, the temperature of the exhaust gas must be higher than activation temperature, so the converters are installed in the exhaust manifold rear end where the temperature of exhaust gas is still high. And, the converters will be activated even under low load conditions.
- After the exhaust gas is diluted with the secondary air injection, the catalytic converter works well because of rich oxygen to reduce CO, HC, and NO<sub>x</sub>. Accordingly, we can keep the exhaust gas emission within regulation.
- This type of converter works more efficiently as a three-way catalytic converter to reduce CO, HC, and NO<sub>x</sub> than the pipe type catalytic converter because of its more and denser catalysts.

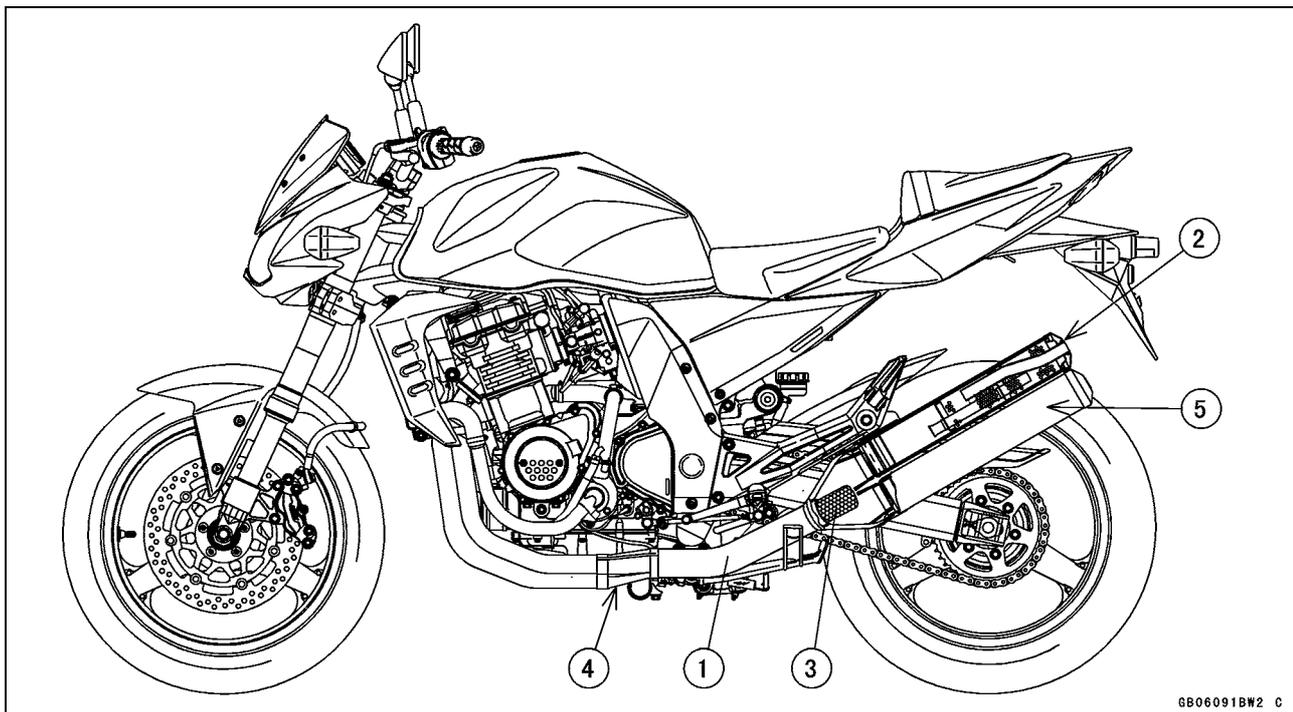

1. Manifold
2. Silencer
3. Honeycomb Type Catalyst
4. Mark for Manifold
5. Mark for Silencer

**Unit Conversion Table**

**Prefixes for Units:**

Prefix	Symbol	Power
mega	M	× 1 000 000
kilo	k	× 1 000
centi	c	× 0.01
milli	m	× 0.001
micro	μ	× 0.000001

**Units of Mass:**

kg	×	2.205	=	lb
g	×	0.03527	=	oz

**Units of Volume:**

L	×	0.2642	=	gal (US)
L	×	0.2200	=	gal (imp)
L	×	1.057	=	qt (US)
L	×	0.8799	=	qt (imp)
L	×	2.113	=	pint (US)
L	×	1.816	=	pint (imp)
mL	×	0.03381	=	oz (US)
mL	×	0.02816	=	oz (imp)
mL	×	0.06102	=	cu in

**Units of Force:**

N	×	0.1020	=	kg
N	×	0.2248	=	lb
kg	×	9.807	=	N
kg	×	2.205	=	lb

**Units of Length:**

km	×	0.6214	=	mile
m	×	3.281	=	ft
mm	×	0.03937	=	in

**Units of Torque:**

N·m	×	0.1020	=	kgf·m
N·m	×	0.7376	=	ft·lb
N·m	×	8.851	=	in·lb
kgf·m	×	9.807	=	N·m
kgf·m	×	7.233	=	ft·lb
kgf·m	×	86.80	=	in·lb

**Units of Pressure:**

kPa	×	0.01020	=	kgf/cm <sup>2</sup>
kPa	×	0.1450	=	psi
kPa	×	0.7501	=	cm Hg
kgf/cm <sup>2</sup>	×	98.07	=	kPa
kgf/cm <sup>2</sup>	×	14.22	=	psi
cm Hg	×	1.333	=	kPa


**Units of Speed:**

km/h	×	0.6214	=	mph
------	---	--------	---	-----

**Units of Power:**

kW	×	1.360	=	PS
kW	×	1.341	=	HP
PS	×	0.7355	=	kW
PS	×	0.9863	=	HP

**Units of Temperature:**

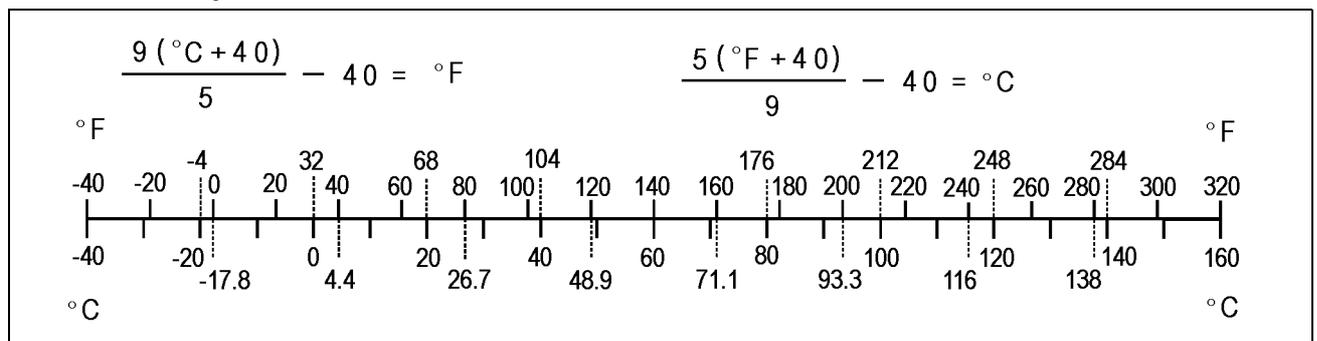



# Periodic Maintenance

## Table of Contents

Periodic Maintenance Chart .....	2-2	Drive Chain Slack Adjustment .....	2-31
Torque and Locking Agent.....	2-4	Wheel Alignment	
Specifications .....	2-9	Inspection/Adjustment.....	2-32
Special Tools .....	2-11	Drive Chain Wear Inspection .....	2-32
Periodic Maintenance Procedures.....	2-12	Drive Chain Lubrication.....	2-33
Fuel System (DFI).....	2-12	Brakes.....	2-34
Fuel Hose and Connection		Brake Pad Wear Inspection .....	2-34
Inspection.....	2-12	Rear Brake Light Switch	
Throttle Control System		Inspection/Adjustment.....	2-34
Inspection.....	2-13	Caliper Fluid Seal Damage .....	2-35
Idle Speed Inspection .....	2-14	Caliper Dust Seal/Friction Boot	
Idle Speed Adjustment.....	2-14	Damage.....	2-35
Engine Vacuum Synchronization		Master Cylinder Inspection (Visual	
Inspection.....	2-15	Inspection).....	2-36
Air Cleaner Element Cleaning.....	2-19	Level Inspection .....	2-37
Evaporative Emission Control		Brake Fluid Change .....	2-37
System Inspection (CAL) .....	2-20	Brake Line Bleeding.....	2-39
Cooling System.....	2-21	Brake Hoses and Connections	
Radiator Hose and Connection		Inspection.....	2-41
Inspection.....	2-21	Suspension .....	2-42
Coolant Change .....	2-21	Front Fork Oil Leak Check .....	2-42
Engine Top End .....	2-23	Rear Shock Absorber Oil Leak	
Air Suction Valve Inspection .....	2-23	Check .....	2-42
Valve Clearance Inspection .....	2-24	Swingarm Pivot Lubrication .....	2-42
Valve Clearance Adjustment.....	2-25	Uni-trak Linkage Lubrication .....	2-42
Clutch.....	2-28	Steering .....	2-43
Clutch Adjust Inspection .....	2-28	Steering Inspection .....	2-43
Engine Lubrication System.....	2-29	Steering Adjustment.....	2-43
Engine Oil Change.....	2-29	Stem Bearing Lubrication.....	2-44
Oil Filter Change .....	2-29	Electrical System .....	2-44
Wheels/Tires.....	2-30	Spark Plug Cleaning and	
Tire Inspection .....	2-30	Inspection.....	2-44
Air Pressure		General Lubrication .....	2-47
Inspection/Adjustment.....	2-31	Lubrication .....	2-47
Final Drive.....	2-31	Nut, Bolt, and Fastener Tightness ..	2-48
Drive Chain Slack Inspection .....	2-31	Tightness Inspection .....	2-48

## 2.2 PERIODIC MAINTENANCE

Product 2003 Kawasaki Z1000 Motorcycle Service Repair Workshop Manual

Full Download: <https://www.arenairmanual.com/downloads/2003-kawasaki-z1000-motorcycle-service-repair-workshop-manual/>

The scheduled maintenance must be done in accordance with this chart to keep the motorcycle in good running condition. **The initial maintenance is vitally important and must not be neglected.**

OPERATION	FREQUENCY	Whichever comes first → ↓	* ODOMETER READING						
	Every		1 000 km (600 mile)	6 000 km (4 000 mile)	12 000 km (7 500 mile)	18 000 km (12 000 mile)	24 000 km (15 000 mile)	30 000 km (20 000 mile)	36 000 km (24 000 mile)
Spark plug (e) - clean and gap †			•	•	•	•	•	•	•
Valve clearance (e) - inspect †						•			
Air suction valve (e) - inspect †			•	•	•	•	•	•	•
Air cleaner element (e) - clean † #				•		•		•	
Throttle control system (e) - inspect †		•	•	•	•	•	•	•	•
Idle speed (e) - inspect †		•		•		•		•	
Engine vacuum synchronization (e) - inspect †				•		•		•	
Fuel hoses, connections - inspect †			•	•	•	•	•	•	•
Engine oil - change #	year	•		•		•		•	
Oil filter - replace		•		•		•		•	
Evaporative emission control system (e) (CAL) - inspect †		•	•	•	•	•	•	•	•
Drive chain wear - inspect †#			•	•	•	•	•	•	•
Brake pad wear - inspect †#			•	•	•	•	•	•	•
Brake light switch - inspect †		•	•	•	•	•	•	•	•
Steering - inspect †		•	•	•	•	•	•	•	•
Rear shock absorber oil leak - inspect †				•		•		•	
Front fork oil leak - inspect †				•		•		•	
Tire wear - inspect †			•	•	•	•	•	•	•
Swingarm pivot, Uni-trak linkage - lubricate				•		•		•	
General lubrication - perform				•		•		•	
Nut, bolt, and fastener tightness - inspect †		•		•		•		•	
Drive chain - lubricate #	600 km								
Drive chain slack - inspect †#	1000 km								
Brake hoses and connections - inspect †			•	•	•	•	•	•	•
Brake fluid level - inspect †	month	•	•	•	•	•	•	•	•

Take these as an example. All 545 pages at:

<https://www.arenairmanual.com/downloads/2003-kawasaki-z1000-motorcycle-service-repair-workshop-manual/>