



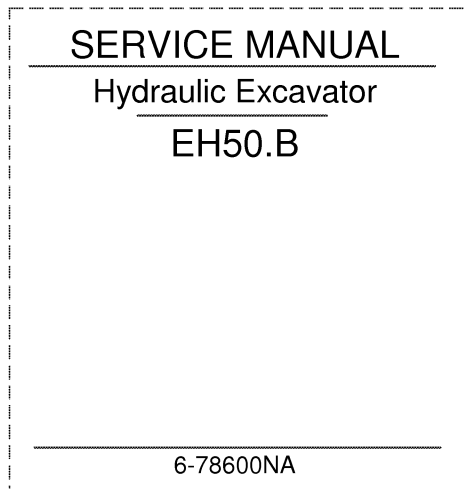


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

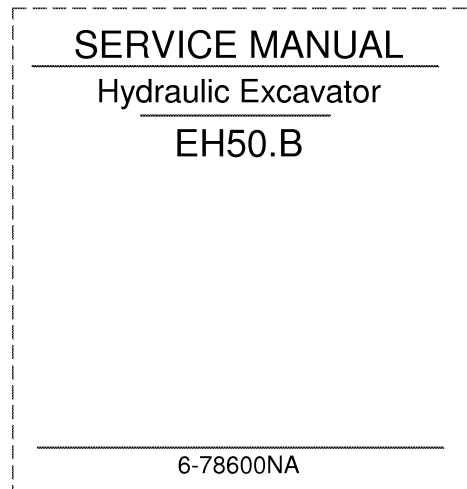


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

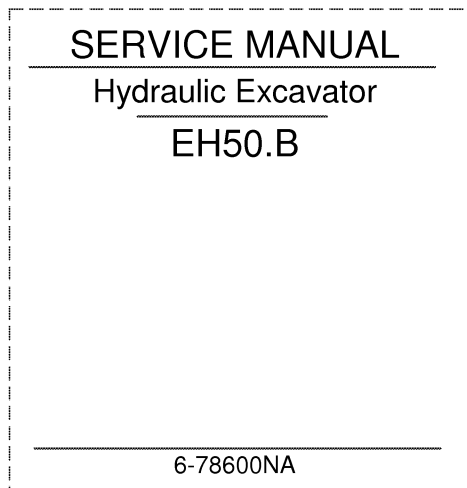

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

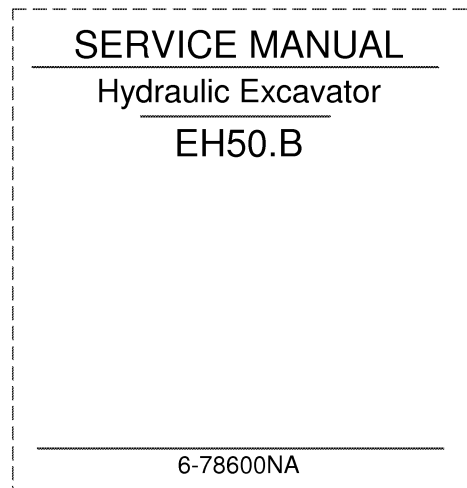

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SHOP MANUAL EH50.B HYDRAULIC EXCAVATORS TABLE OF CONTENTS

SECTION 1

STANDARD SPECIFICATIONS AND MAINTENANCE

Table of Contents	I
(Book/Form Number: 6-78620 NA)	
CHAPTER 1	
GENERAL INFORMATION AND SAFETY	
Table of Contents	1-1
(Book/Form Number: 6-78630 NA)	
CHAPTER 2	
SPECIFICATIONS	
Table of Contents	2-1
(Book/Form Number: 6-78640 NA)	
CHAPTER 3	
ATTACHMENT DIMENSIONS	
Table of Contents	3-1
(Book/Form Number: 6-78650 NA)	
CHAPTER 11	
TOOLS	
Table of Contents	11-1
(Book/Form Number: 6-78660 NA)	
CHAPTER 12	
STANDARD MAINTENANCE TIME TABLE	
Table of Contents	12-1
(Book/Form Number: 6-78670 NA)	
CHAPTER 13	
MAINTENANCE STANDARDS AND TEST PROCEDURES	
Table of Contents	13-1
(Book/Form Number: 6-78680 NA)	

SECTION 2

HYDRAULIC, ELECTRICAL, AND COMPONENT SYSTEMS

Table of Contents	I
(Book/Form Number: 6-78690 NA)	
CHAPTER 22	
HYDRAULIC SYSTEM	
Table of Contents	22-1
(Book/Form Number: 6-78700 NA)	
CHAPTER 23	
ELECTRICAL SYSTEM	
Table of Contents	23-1
(Book/Form Number: 6-78710 NA)	
CHAPTER 24	
COMPONENTS SYSTEM	
Table of Contents	24-1
(Book/Form Number: 6-78720 NA)	

SECTION 3

DISASSEMBLY AND ASSEMBLY

Table of Contents	I
(Book/Form Number: 6-78730 NA)	

CHAPTER 31

GENERAL DISASSEMBLY AND ASSEMBLY

Table of Contents	31-1
(Book/Form Number: 6-78740 NA)	

CHAPTER 32

ATTACHMENTS

Table of Contents	32-1
(Book/Form Number: 6-78750 NA)	

CHAPTER 33

UPPER SLEWING STRUCTURE

Table of Contents	33-1
(Book/Form Number: 6-78760 NA)	

CHAPTER 34

TRAVEL SYSTEM

Table of Contents	34-1
(Book/Form Number: 6-78770 NA)	

SECTION 4

TROUBLESHOOTING

Table of Contents	I
(Book/Form Number: 6-78780 NA)	

CHAPTER 42

TROUBLESHOOTING (HYDRAULIC SYSTEM)

Table of Contents	42-1
(Book/Form Number: 6-78790 NA)	

CHAPTER 43

TROUBLESHOOTING (ELECTRICAL SYSTEM)

Table of Contents	43-1
(Book/Form Number: 6-78800 NA)	

CHAPTER 44

TROUBLESHOOTING (ENGINE)

Table of Contents	44-1
(Book/Form Number: 6-78810 NA)	

SECTION 5

ENGINE

Table of Contents	I
(Book/Form Number: 6-78820 NA)	

CHAPTER 51

THIS MANUAL EXPLAINS THE ENGINE PROPER AND IS FAITHFUL TO YANMAR DIESEL ENGINE'S SERVICE MANUALS.

.....	1
(Book/Form Number: 6-78580 NA)	



SHOP MANUAL - SECTION 1

**EH50.B
HYDRAULIC EXCAVATORS**

**STANDARD SPECIFICATIONS
AND MAINTENANCE**

SECTION 1 - STANDARD SPECIFICATIONS AND MAINTENANCE

CNH America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer

Revision History				
Issue	Issue Date	Applicable Machines	Remarks	
First Edition	August, 2004	EH50.B: PJ04-03001	S5PJ0210E01 (Section 1 title page)	

SECTION 1 STANDARD SPECIFICATIONS AND MAINTENANCE

TABLE OF CONTENTS

CHAPTER 1

GENERAL INFORMATION AND SAFETY

TABLE OF CONTENTS	1-1
1.1 General Safety Information	1-3
1.2 Safety Precautions.	1-4
1.3 General Precautions for Repairs	1-6
1.4 International Unit Conversion System	1-9

CHAPTER 2

SPECIFICATIONS

TABLE OF CONTENTS	2-1
2.1 Components Name	2-3
2.2 Machine Dimensions	2-4
2.3 Specifications and Performance	2-5
2.4 Machine and Components Weights (Dry)	2-6
2.5 Transportation	2-7
2.6 Type of Track Shoes	2-9
2.7 Type of Bucket.	2-9
2.8 Engine Specifications	2-10

CHAPTER 3

ATTACHMENT DIMENSIONS

TABLE OF CONTENTS	3-1
3.1 Boom	3-3
3.2 Arm	3-8
3.3 Bucket	3-13
3.4 Dozer.	3-15
3.5 Swing.	3-18

CHAPTER 11

TOOLS

TABLE OF CONTENTS	11-1
11.1 Torque Specifications for Capscrews and Nuts.	11-3
11.2 Screw and Tool Sizes	11-5
11.3 Torque Specifications for Joints and Hoses	11-6
11.4 Torque Specifications for Sleeve Type Tube Fittings	11-7
11.5 Plugs	11-8
11.6 Special Spanners for Tubes	11-10
11.7 Special Tools.	11-11
11.8 Application of Screw Locking and Sealing Compounds	11-11
11.9 Counterweight Lifting Jig	11-12
11.10 Upper Frame Lifting Jig	11-13

CHAPTER 12

STANDARD MAINTENANCE TIME TABLE

TABLE OF CONTENTS	12-1
12.1 Working Standards for Time Tables	12-3
12.2 Time Tables.	12-4

CHAPTER 13

MAINTENANCE STANDARDS AND TEST PROCEDURES

TABLE OF CONTENTS	13-1
13.1 How To Use Maintenance Standards and Precautions	13-3
13.2 Performance Inspection Standard Tables	13-4
13.3 Measuring Engine Speed	13-6
13.4 Measuring Hydraulic Oil Pressure	13-8
13.5 Measuring Travel Performances.	13-11
13.6 Measuring Slew Performances.	13-13
13.7 Measuring Attachment Operating Performances	13-15
13.8 Measuring Slew Bearing Performances	13-17
13.9 Measuring Track Tension	13-18

CHAPTER 1

EH50.B

HYDRAULIC EXCAVATORS

**GENERAL INFORMATION AND
SAFETY**

SECTION 1 - STANDARD SPECIFICATIONS AND MAINTENANCE
CHAPTER 1 - GENERAL INFORMATION AND SAFETY

CNH America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer

Revision History				
Issue	Issue Date	Applicable Machines	Remarks	
First Edition	August, 2004	EH50.B: PJ04-03001~	S5PW0106E01 (CNH North America)	KE

CHAPTER 1
GENERAL INFORMATION AND SAFETY
TABLE OF CONTENTS

1.1 GENERAL SAFETY INFORMATION

1.2 SAFETY PRECAUTIONS

1.3 GENERAL PRECAUTIONS FOR REPAIRS

1.3.1 Preparation Before Disassembling	1-6
1.3.2 Safety In Disassembling and Assembling	1-6
1.3.3 Disassembling and Assembling Hydraulic Equipment	1-6
1.3.4 Electrical Equipment	1-7
1.3.5 Hydraulic Parts	1-8
1.3.6 Welding Repair	1-8
1.3.7 Environmental Protection	1-8

1.4 INTERNATIONAL UNIT CONVERSION SYSTEM

Introduction	1-9
------------------------	-----

NOTES

1.1 GENERAL SAFETY INFORMATION



WARNING: *Do not operate or perform any maintenance on this machine until all instructions in the OPERATOR'S MANUAL and this MANUAL have been thoroughly read and understood.*



WARNING: *Improper operation or maintenance of this machine may cause accidents and could result in serious injury or death.*



WARNING: *Always keep the manual in storage.
If it is missing or damaged, place an order with an authorized Distributor for a replacement.
If you have any questions, please consult your dealer.*

1. Most accidents, which occur during operation, are due to neglect of precautionary measures and safety rules. Sufficient care should be taken to avoid these accidents. Erroneous operation, lubrication or maintenance services are very dangerous and may cause injury or death of personnel. Therefore all precautionary measures, NOTES, DANGERS, WARNINGS and CAUTIONS contained in the manual and on the machine should be read and understood by all personnel before starting any work with or on the machine.
2. Operation, inspection, and maintenance should be carefully carried out, safety must be given the first priority. The safety information contained in the manual is intended only to supplement safety codes, insurance requirements, local laws, rules and regulations.

3. Messages of safety appear in the manual and on the machine:

All messages of safety are identified by either word of DANGER, WARNING, and CAUTION.



DANGER: *Shows an imminently hazardous situation which, if not avoided, will result in death or serious injury.*



WARNING: *Shows a potentially hazardous situation which, if not avoided, could result in death or serious injury.*



CAUTION: *Shows a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against possible damage to the machine and its components.*

4. It is very difficult to foresee every danger that may occur during operation. However, safety can be ensured by fully understanding proper operating procedures for this machine according to methods recommended.
5. While operating the machine, be sure to perform work with great care, so no damage to the machine or accidents will occur.
6. Continue studying the manual until all Safety, Operation and Maintenance procedures are completely understood by all persons working with the machine.

1.2 SAFETY PRECAUTIONS



WARNING: *The proper lubrication and maintenance for this machine are outlined in the OPERATOR'S MANUAL.*



WARNING: *Improper lubrication and maintenance procedures are dangerous and could result in injury or death. Read and understand the MANUAL before performing maintenance or adding/changing lubricants.*

The serviceman may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman should check the weights noted in this manual. Use proper lifting procedures when removing any components. Weight of components table is shown in the SPECIFICATIONS section.

The following is a list of basic precautions that must always be observed.

1. Read and understand all Warning plates and decals on the machine before Operating, Maintaining or Repairing machine.
2. Always wear protective glasses and protective shoes when working around machines. Wear protective glasses when using hammers, punches or drifts on any part of the machine or attachments. Use welders gloves, hood/goggles, apron and the protective clothing appropriate to the welding job being performed. Do not wear loose fitting or torn clothing. Remove all rings from fingers, loose jewelry, confine long hair and loose clothing before working on this machinery.
3. Disconnect the battery and hang a "Do Not Operate" tag in the Operators Compartment. Remove ignition keys.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block the machine so it does not roll while working on or under the machine. Hang a "Do Not Operate" tag in the Operators Compartment.
5. Do not work on any machine that is supported only by jacks or a hoist. Always use blocks or jack stands capable of supporting the machine.



WARNING: *Do not operate this machine unless you have read and understand the instructions in the OPERATOR'S MANUAL. Improper machine operation is dangerous and could result in injury or death.*

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, dozer, or other attachments to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, dozer, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face to the machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 20kg (45lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and compartments.
11. Be careful when removing cover plates. Gradually back off the last two capscrews or nuts located at opposite ends of the cover or device and carefully pry cover loose to relieve any spring or other pressure, before removing the last two capscrews or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent from being sprayed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

13. Always use the proper tools that are in good condition and that are suited for the job. Be sure you understand how to use them before performing any service work.
14. Reinstall all fasteners with the same part number. Do not use a lesser quality fastener if replacements are necessary.
15. Repairs which require welding should be performed by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld strength equivalent at least to that of the parent metal. Make sure to disconnect battery before any welding procedures are attempted.
16. Do not damage wiring during removal operations. Reinstall the wiring so it will not be damaged during operation of the machine by contacting sharp corners, or by rubbing against some object or hot surface.
17. Be sure all protective devices including guards and shields are properly installed correctly before starting repair. If a guard or shield must be removed to perform the repair work, replace the guard or shield after repair is completed.
18. Performing maintenance or repair work with the bucket raised is dangerous due to the possibility of it falling. Lower the attachment and place the bucket on the ground before starting the work.
19. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Very small (pinhole) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pinhole leaks.
20. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
21. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
22. Be careful when servicing or separating the tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve protective clothing. Tracks can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.

1.3 GENERAL PRECAUTIONS FOR REPAIRS

1.3.1 PREPARATION BEFORE DISASSEMBLING



1. Understand operating procedure

Read OPERATOR'S MANUAL and this MANUAL carefully prior to operating the machine.

2. Cleaning machines

Remove soil, mud, and dust from the machine before service. This will prevent loss of work efficiency, damaged parts, and difficulty in rust prevention and dust protection while reassembling.

3. Inspecting machines

Identify the parts to be disassembled before starting work, determine the disassembling procedure considering the workshop situations etc., request necessary parts in advance.

4. Record the following items

- A. Inspection date and place
- B. Model name, applicable machine number, and hour meter reading
- C. Trouble condition, place and cause.
- D. Visible oil leakage, water leakage and damage
- E. Clogged filters, oil level, oil quality, oil contamination and loose connections
- F. Is it a recurring fault at approximately the same amount of operating hours.

5. Arrangement and cleaning in service shop

- A. Tools required for repair work.
- B. Prepare space to place the disassembled parts.
- C. Prepare oil containers for draining oil etc.

1.3.2 SAFETY IN DISASSEMBLING AND ASSEMBLING



1. Wear appropriate clothes with long sleeves, safety shoes, safety helmet and protective glasses.
2. Suspend warning tag DO NOT OPERATE from the doorknob or the operating lever.
3. Stop the engine before starting inspection and maintenance.

4. Identify the location of a first-aid kit and a fire extinguisher, also who to contact in case of an emergency.

5. Choose a hard, level and safe place, and place the attachment on the ground securely.

6. Use a hoist to remove heavy parts (20 kg [45 lbs] or more) from the machine.

7. Use proper tools, and replace or repair defective tools.

8. Support the machine and attachment with supports or blocks if the work is performed in the lifted condition.

1.3.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT



1. Removing hydraulic equipment

- A. Before disconnecting pipes, release the hydraulic pressure in the system.
- B. Carefully drain oil of the removed pipes into a containers without spilling on the floor.
- C. Install plugs or caps on the pipe ends to avoid oil spillage and contamination.
- D. Clean off the external surface of the equipment before disassembling, drain hydraulic and gear oil before placing component on the workbench.

2. Disassembling hydraulic equipment

- A. Do not modify the hydraulic equipment without the permission of the manufacturer. Manufacturer will not be responsible for the performance and function of the product after modification.
- B. When disassembling and reassembling for repair, refer the work to qualified personnel who have the knowledge or have completed the service training.
- C. Provide aligning marks to facilitate reassembly.
- D. Before starting the work, read the manual for disassembly procedures and decide whether the work can be performed by yourself or if assistance is required.
- E. Use the special jig or tools if they are specified.

- F. If it is hard to remove a part according to the procedure, do not force it, investigate the cause.
 - G. Place the removed parts in order and attach tags to facilitate the reassembly.
 - H. Note the location and quantity of parts commonly applied to multiple locations.
3. Inspecting parts
- A. Ensure that the disassembled parts are free from seizure, interference and uneven contact.
 - B. Measure and record wear condition of parts and clearance.
 - C. If the problem is found in a part, repair or replace it.
4. Reassembling hydraulic equipment
- A. Turn ON the ventilation fan or open windows to maintain good ventilation prior to cleaning parts.
 - B. Perform rough and finish cleaning before assembling.
 - C. Remove solvent by air and apply clean hydraulic or gear oil for assembling.
 - D. Always replace the removed O-rings, backup rings and oil seals with new ones by applying grease in advance.
 - E. Remove dirt and moisture from and perform degreasing on the surface where liquid gasket are to be applied.
 - F. Remove rust preventive agent from the new parts before use.
 - G. Fit bearings, bushings and oil seals using proper tools.
 - H. Assemble the parts utilizing matching marks.
 - I. Ensure all the parts are completely assembled after the work.
5. Installing hydraulic equipment
- A. Ensure hydraulic oil and lubricants are at proper levels.
 - B. Perform air bleeding when:
 - Hydraulic oil changed
 - Parts of suction piping replaced
 - Hydraulic pump installed
 - Slewing motor installed
 - Travel motor installed
 - Hydraulic cylinder installed



WARNING: Operation of the hydraulic equipment without filling hydraulic oil or lubricant or without performing air bleeding will result in damage to the equipment.


- C. Perform air bleeding of the hydraulic pump and slewing motor after loosening the upper drain plug, start and run the engine at low idle.

Air bleeding is completed when clear hydraulic oil is visible, tighten plug.

- D. Perform air bleeding of the travel motor and the hydraulic cylinders by running the engine for more than 5 minutes at low speed without load.

NOTE: Do not allow hydraulic cylinders to bottom out on the stroke end just after maintenance.

- E. Perform air bleeding of pilot line by performing a series of digging, slewing and travel operations.
- F. Check hydraulic oil level after placing the attachment to the oil check position, and replenish oil if necessary.

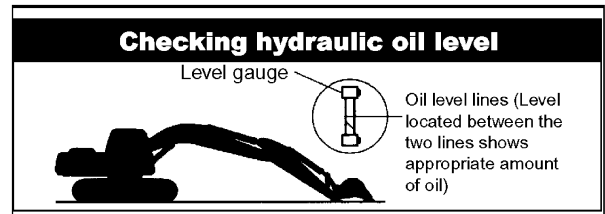

SPW0100004E01

Figure 1

1.3.4 ELECTRICAL EQUIPMENT



1. Turn the key OFF prior to connecting and disconnecting connectors.
2. Disconnect the connector by holding it and pressing the lock. Do not pull on the wires to separate connectors.
3. Connect the connector and ensure it is completely locked.
4. Turn the key OFF prior to touching the terminal of starter or generator.
5. Remove the ground terminal of battery when handling tools around the battery or its relay.
6. Do not splash water on the electrical equipment and connectors during machine washing.
7. Check for moisture inside the waterproof connector after disconnection it. If moisture is found, dry it completely before reconnecting.

WARNING: Battery electrolyte is hazardous.


Battery electrolyte is diluted sulfuric acid. Exposure of skin or eyes will cause burning or loss of eyesight.

If the exposure occurs, take the following emergency measures and seek the advice of a medical specialist.



- When skin exposed:
Wash with water and soap sufficiently.
- When eyes exposed:
Immediately wash away with water continuously for more than 10 minutes.
- If a large spill occurs:
Neutralize with sodium bicarbonate or wash away with water.
- When swallowed:
Drink a large amount of milk or water.
- When clothes exposed:
Immediately undress and wash.

1.3.5 HYDRAULIC PARTS



1. O-ring

- Make sure O-rings have elasticity and are not damaged before use.
- Use the appropriate O-rings. O-rings are made of various kinds of materials having different hardness to apply to a variety of parts, such as the part for moving or fixed portion, subjected to high pressure, and exposed to corrosive fluid, even if the size is the same.
- Install the O-rings without distortion.
- Replace floating seals as a pair.

2. Flexible hose

- Use approved parts.
- Tighten the fitting at the specified torque.
- Ensure no kinks, tension, interference nor oil leakage are present.

1.3.6 WELDING REPAIR

1. Refer welding repair to qualified personnel.
2. Disconnect the ground cable of the battery before starting the repair. Failure to do so will cause damage to the electrical equipment.
3. Move away the articles in advance that may cause fire if exposed to sparks.
4. Before starting the repair of the attachment, cover the plated surface of the piston rod with flameproof sheet to prevent it from being exposed to sparks.

1.3.7 ENVIRONMENTAL PROTECTION

1. Run the engine in a place that has sufficient ventilation.
2. Industrial waste disposal

Dispose of the following parts according to the relevant regulations:

- Waste oil and waste container
- Battery

3. Precautions for handling hydraulic oil

Exposure of eyes to hydraulic oil will cause inflammation. Wear protective glasses before handling to avoid an accident. If eyes are exposed to the oil, take the following emergency measures:

When eyes are exposed:

- Immediately wash away with water until stimulative feeling vanishes.

When swallowed:

- Do not let vomit, seek medical treatment immediately.

When skin exposed:

- Wash with water and soap sufficiently.

4. Others

Use genuine replacement parts and lubricants authorized by the manufacturer.

1.4 INTERNATIONAL UNIT CONVERSION SYSTEM

INTRODUCTION

NOTE: Information based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS

Although this manual includes International System of Unit and Foot-Pound System of Units, if you need SI unit, refer to the following international system of units.


Given is an excerpt of the units that are related to this manual.

1. Etymology of SI Unites

French: Le Systeme International d' Unites

English: International System of Units

2. Construction of SI Unit System

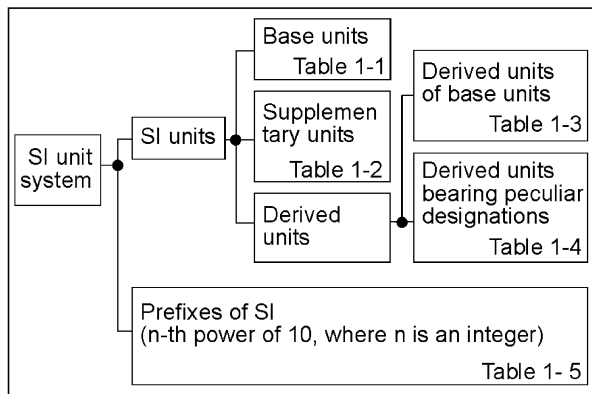

SPW01000007E01

Figure 2

1. Base units

QUANTITY	UNIT	SYMBOL
Length	meter	m
Mass	kilogram	kg
Time	second	s
Electric current	ampere	A
Thermodynamic temperature	kelvin	K
Amount of substance	mol	mol
Luminous intensity	candela	cd

2. Derived Units

QUANTITY	UNIT	SYMBOL
Area	square meter	m ²
Volume	cubic meter	m ³
Velocity	meter per second	m/s
Acceleration	meter per second squared	m/s ²
Density	kilogram per cubic meter	kg/m ³

3. Supplementary units

QUANTITY	UNIT	SYMBOL
Plane angle	radian	rad
Solid angle	steradian	sr

4. Derived Units bearing Peculiar Designations

QUANTITY	UNIT	SYMBOL	FORMULA
Frequency	hertz	Hz	1/s
Force	newton	N	kg · m/s ²
Pressure and Stress	pascal	Pa	N/m ²
Energy, Work and Quantity of heat	joule	J	N·m
Power	watt	W	J/s
Quantity of electricity	coulomb	C	A·s
Electric potential difference, Voltage, and Electromotive force	volt	V	W/A
Quantity of static electricity and Electric capacitance	farad	F	C/V
Electric resistance	ohm	Ω	V/A
Celsius temperature	Celsius degree or degree	°C	(t+273.15)K
Illuminance	lux	lx	lm/m ²

5. Prefixes of SI

PREFIX	SYMBOL	MULTIPLICATION FACTORS
giga	G	10 ⁹
mega	M	10 ⁶
kilo	k	10 ³
hecto	h	10 ²
deca	da	10
deci	d	10 ⁻¹
centi	c	10 ⁻²
milli	m	10 ⁻³
micro	μ	10 ⁻⁶
nano	n	10 ⁻⁹
pico	p	10 ⁻¹²

6. Unit Conversion

QUANTITY	GRAVITATIONAL	SI	CONVERSION FACTOR
Mass	kg	kg	
Force	kgf	N	1 kgf=9.807 N
Torque	kgf•m	Nm	kgf•m=9.807 N•m
Pressure	kgf/cm ²	MPa	1 kgf/cm ² =0.09807 MPa
Motive Power	PS	kW	1 PS=0.7355 kW
Revolution	rpm	min ⁻¹	r/min *1
*1 Units that are allowed to use.			

CHAPTER 2

EH50.B

HYDRAULIC EXCAVATORS

SPECIFICATIONS

SECTION 1 - STANDARD SPECIFICATIONS AND MAINTENANCE
CHAPTER 2 - SPECIFICATIONS

CNH America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer

Revision History				
Issue	Issue Date	Applicable Machines	Remarks	
First Edition	August, 2004	EH50.B: PJ04-03001	S5PJ0210E01 (CNH North America)	KE

CHAPTER 2

SPECIFICATIONS

TABLE OF CONTENTS

2.1 COMPONENTS NAME

2.2 MACHINE DIMENSIONS

2.3 SPECIFICATIONS AND PERFORMANCE

2.3.1 SPEED AND GRADEABILITY	2-5
2.3.2 ENGINE	2-5
2.3.3 HYDRAULIC COMPONENTS	2-5
2.3.4 SIDE DIGGING & DOZER	2-5
2.3.5 WEIGHT	2-5

2.4 MACHINE AND COMPONENTS WEIGHTS (DRY)

2.5 TRANSPORTATION

2.5.1 Loading Machine on a Trailer	2-7
2.5.2 Transportation Dimension and Weight of Attachment	2-7
2.5.2.1 Boom with Arm Cylinder	2-7
2.5.2.2 Arm and Bucket (Standard Bucket)	2-7
2.5.2.3 Arm	2-8
2.5.2.4 Bucket (Standard Bucket)	2-8
2.5.2.5 Dozer (Without Cylinder Weight)	2-8

2.6 TYPE OF TRACK SHOES


2.7 TYPE OF BUCKET

2.8 ENGINE SPECIFICATIONS

2.8.1 Specifications	2-10
2.8.2 Engine Performance Curve	2-11

NOTES


2.1 COMPONENTS NAME

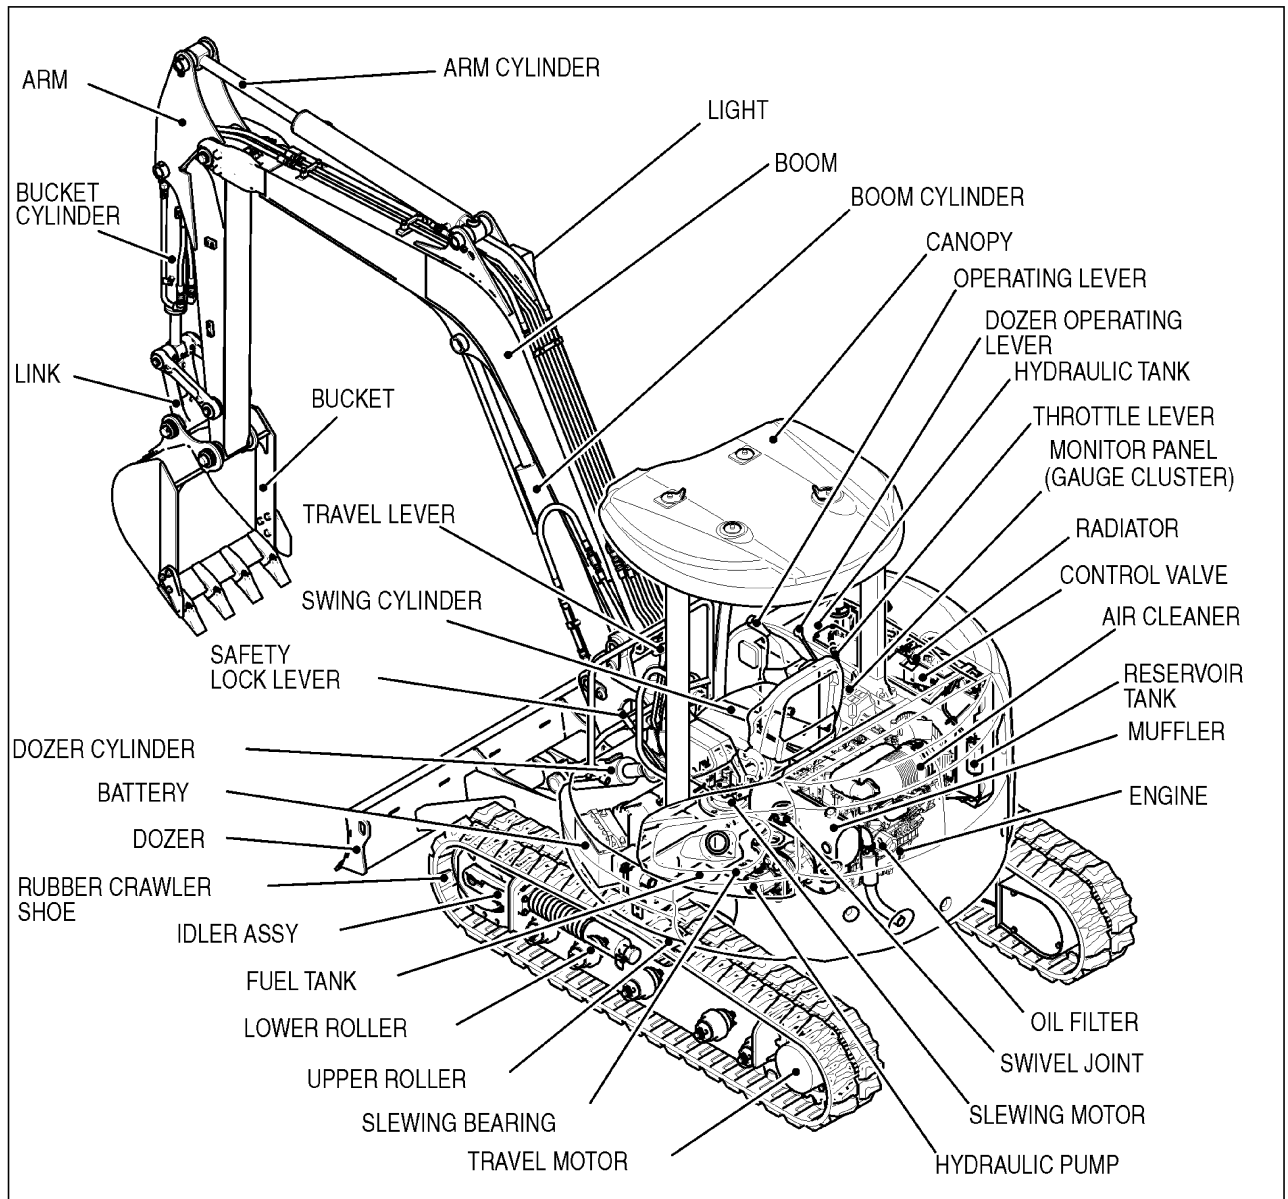

SPH02000001E01

Figure 1


2.2 MACHINE DIMENSIONS

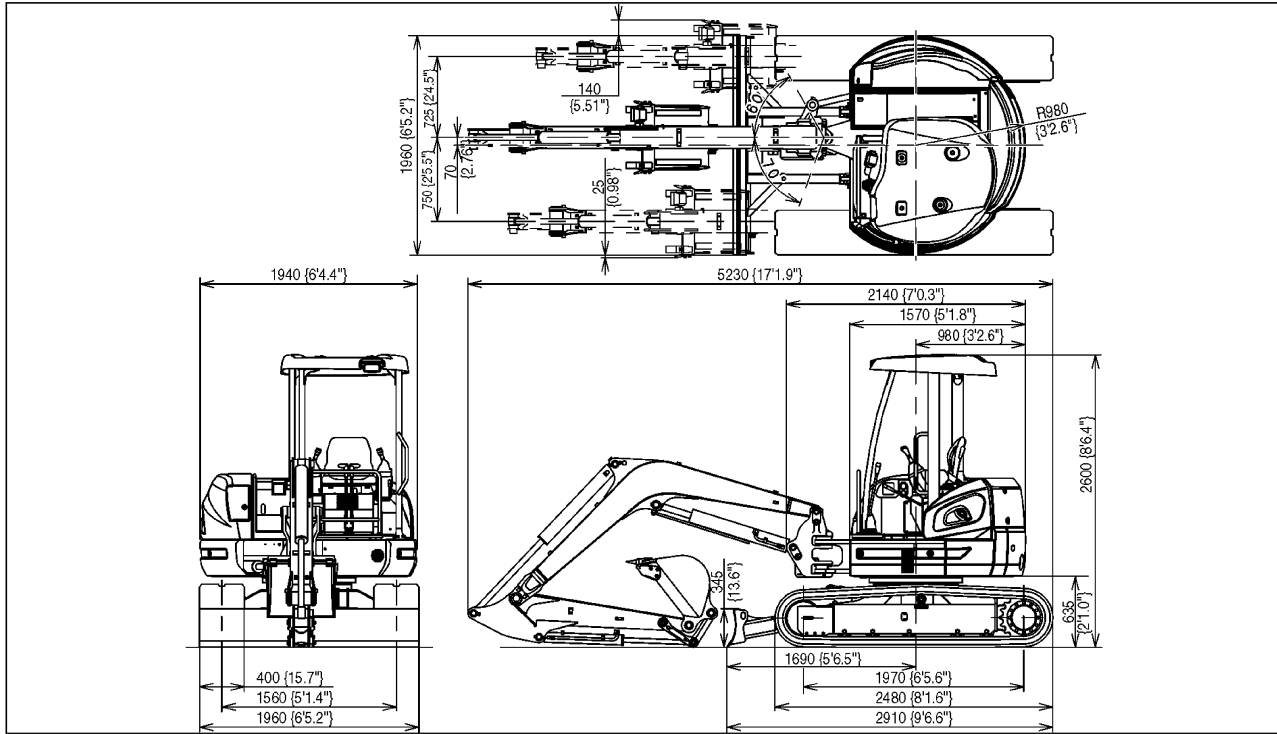

UPY00600001E01

Figure 2

(CANOPY) UNIT: MM. (FT.-IN)

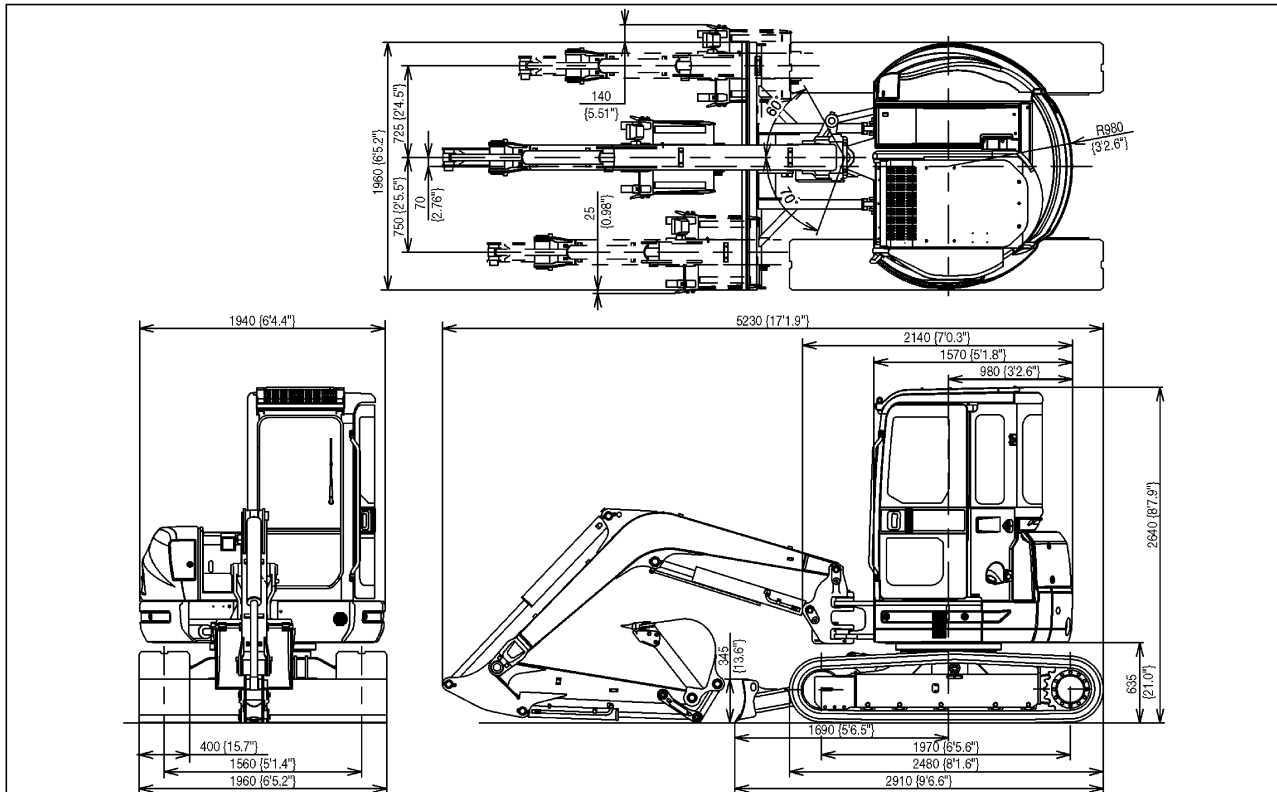

UPJ00600002E01

Figure 3

(CAB) MM. (FT. IN)

2.3 SPECIFICATIONS AND PERFORMANCE

2.3.1 SPEED AND GRADEABILITY

Applicable Machines			PJ04-03001~			
Shoe Type		Rubber shoe		Iron shoe (OPT)		
Slewing Speed	min. ⁻¹ {rpm}	8.8 {8.8}				
Travel Speed	km/h (mph)	Low (1st)	High (2nd)	Low (1st)	High (2nd)	
		2.8	4.6	2.8	4.6	
Grade ability	% (degree)	58(30)				

2.3.2 ENGINE

Model (YANMAR)		4TNV88-XYB
Type		Water-cooled, 4-cycle type Swirl chamber type diesel engine
Number of cylinders-Bore x Stroke		4 - ø88 mm x 90 mm (3.46 in x 3.54 in)
Total Displacement		L 2.189 (134 cu. in)
Output Rating	kW/min ⁻¹ {PS/rpm}	30.4/2,400 {41.3/2,400}
Maximum Torque	Nm/min ⁻¹ (lb. ft./rpm)	139/1,440 (103/1,440)
Starting Motor	V x kW	12 x 2.3
Generator	V x A	12 x 55

2.3.3 HYDRAULIC COMPONENTS

Hydraulic Pump	Variable displacement axial piston + gear pump
Hydraulic Motor	Axial piston
Hydraulic Motor w/Reducer (Travel)	2-Axial piston, 2-Speed motor
Control Valve	11-spool multiple control valve
Cylinder (Boom, Arm, Swing, Bucket, Dozer)	Double action cylinder
Return Filter	Safety valve containing/Filter Type (30)

2.3.4 SIDE DIGGING & DOZER

Type		Boom swing by hydraulic cylinder
Boom Swing Angle	Right	60°
	Left	70°
Stroke of Dozer (above/below)	mm (in)	495 / 375 (19.5/14.8)

2.3.5 WEIGHT

Machine Weight	kg (lb.)	Rubber shoe	Iron shoe
		4,660 (10,300)	4,760 (10,500)
Upper slewing body	kg (lb.)	2,310 (5,100)	..
Travel system	kg (lb.)	1,720 (3,790)	1,820 (4,010)
Attachment (Boom + STD Arm + STD Bucket)	kg (lb.)	535 (1,180)	
Oil & Water	kg (lb.)	95 (209)	

2.4 MACHINE AND COMPONENTS WEIGHTS (DRY)

	RUBBER SHOE Unit; kg (lb.)		STEEL SHOE Unit; kg (lb.)	
	CANOPY	CAB	CANOPY	CAB
COMPLETE MACHINE	4,660 (10,300)	4,800 (10,600)	4,760 (10,500)	4,900 (10,800)
UPPER FRAME ASSEMBLY (ASSY OF FOLLOWINGS)	2,280 (5,030)	2,420 (5,340)	2,280 (5,030)	2,420 (5,340)
UPPER FRAME	570 (1,260)	570 (1,260)	570 (1,260)	570 (1,260)
CANOPY / CAB	120 (265)	250 (550)	120 (265)	250 (550)
ENGINE	170 (375)	170 (375)	170 (375)	170 (375)
HYDRAULIC PUMP	35 (77)	35 (77)	35 (77)	35 (77)
RADIATOR	5 (11)	5 (11)	5 (11)	5 (11)
HYDRAULIC TANK	37 (82)	37 (82)	37 (82)	37 (82)
FUEL TANK	4 (9)	4 (9)	4 (9)	4 (9)
SWING BRACKET	110 (243)	110 (243)	110 (243)	110 (243)
SWING CYLINDER	39 (86)	39 (86)	39 (86)	39 (86)
SLEWING MOTOR	40 (88)	40 (88)	40 (88)	40 (88)
CONTROL VALVE	35 (77)	35 (77)	35 (77)	35 (77)
COUNTERWEIGHT	580 (1,280)	580 (1,280)	580 (1,280)	580 (1,280)
GUARD HOOD	145 (320)	145 (320)	145 (320)	145 (320)
BOOM CYLINDER	58 (128)	58 (128)	58 (128)	58 (128)
LOWER FRAME ASSEMBLY (ASSY OF FOLLOWINGS)	1,720 (3,790)	1,720 (3,790)	1,820 (4,010)	1,820 (4,010)
LOWER FRAME	545 (1,200)	545 (1,200)	545 (1,200)	545 (1,200)
SLEWING BEARING	76 (168)	76 (168)	76 (168)	76 (168)
TRAVEL MOTOR	65x2 (143x2)	65x2 (143x2)	65x2 (143x2)	65x2 (143x2)
UPPER ROLLER	5x2 (11x2)	5x2 (11x2)	5x2 (11x2)	5x2 (11x2)
LOWER ROLLER	9x10 (20x10)	9x10 (20x10)	9x10 (20x10)	9x10 (20x10)
FRONT IDLER	42x2 (93x2)	42x2 (93x2)	42x2 (93x2)	42x2 (93x2)
IDLER ADJUSTER	30x2 (66x2)	30x2 (66x2)	30x2 (66x2)	30x2 (66x2)
SPROCKET	14x2 (31x2)	14x2 (31x2)	14x2 (31x2)	14x2 (31x2)
RUBBER CRAWLER SHOE	210x2 (463x2)	210x2 (463x2)	—	—
400mm (15.7") IRON SHOE	—	—	275x2 (606x2)	275x2 (606x2)
SWIVEL JOINT	22 (49)	22 (49)	22 (49)	22 (49)
DOZER	175 (386)	175 (386)	175 (386)	175 (386)
DOZER CYLINDER	27 (60)	27 (60)	27 (60)	27 (60)
LOWER FRAME ASSEMBLY (ASSY OF FOLLOWINGS)	535 (1,180)	535 (1,180)	535 (1,180)	535 (1,180)
LOWER FRAME	240 (529)	240 (529)	240 (529)	240 (529)
SLEWING BEARING	165 (364)	165 (364)	165 (364)	165 (364)
TRAVEL MOTOR	50 (110)	50 (110)	50 (110)	50 (110)
UPPER ROLLER	180 (397)	180 (397)	180 (397)	180 (397)
LOWER ROLLER	115 (256)	115 (256)	115 (256)	115 (256)
FRONT IDLER	27 (60)	27 (60)	27 (60)	27 (60)
IDLER ADJUSTER	13 (29)	13 (29)	13 (29)	13 (29)
SPROCKET	4x2 (9x2)	4x2 (9x2)	4x2 (9x2)	4x2 (9x2)
RUBBER CRAWLER SHOE	112 (247)	112 (247)	112 (247)	112 (247)
400mm (15.7") IRON SHOE	95 (210)	95 (210)	95 (210)	95 (210)
SWIVEL JOINT	45 (99)	45 (99)	45 (99)	45 (99)
FUEL	44 (97)	44 (97)	44 (97)	44 (97)
COOLANT	6 (13)	6 (13)	6 (13)	6 (13)

2.5 TRANSPORTATION


2.5.1 LOADING MACHINE ON A TRAILER

- A. Clean the trailer bed. Put chocks against truck wheels.
- B. Use a ramp or loading dock. Ramps must be strong enough, have a low angle, and correct height. Load and unload machine on a level surface.
- C. Center the machine on the trailer.
- D. Lower all attachments.
- E. Stop engine. Remove key from switch.

- F. Fasten machine to trailer with chains or cables.

During transportation, the bucket or attachments may hit the canopy or the cab. Therefore, set the machine in the transporting position by observing following points:


- A. 1Extend the bucket cylinder fully.
- B. Extend the arm cylinder fully.
- C. Lower the boom.
- D. If machine cannot be transported with arm cylinder fully extended, remove bucket or attachment and extend arm cylinder.



2.5.2 TRANSPORTATION DIMENSION AND WEIGHT OF ATTACHMENT

2.5.2.1 BOOM WITH ARM CYLINDER

L x H x W mm (ft. in)	2,910 x 1,040 x 310 (9'6.6") (3'4.9") (12.2")
Weight w/Arm cyl. kg (lb.)	237 (523)

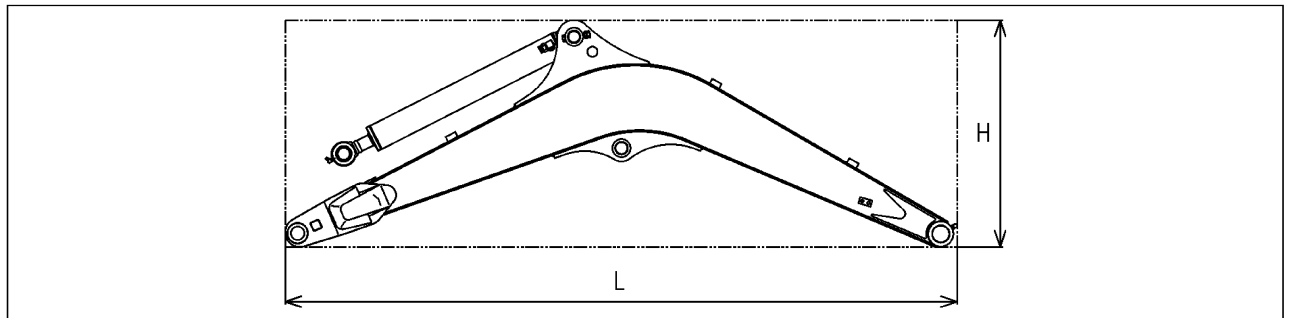


SPH02000003J01

Figure 4

2.5.2.2 ARM AND BUCKET (STANDARD BUCKET)

L x H x W mm (ft. in)	2,770 x 510 x 650 (9'1.1") (20.1") (25.6")
Weight kg (lb.)	175 (386)

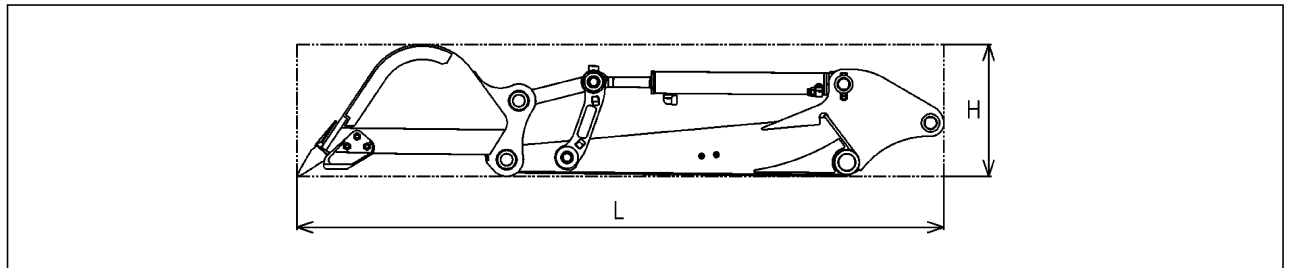


SPH02000004J01

Figure 5

2.5.2.3 ARM

L x H x W mm (ft. in)	2,010 x 420 x 250 (6' 7.1" (16.5") (9.84"))
Weight kg (lb.)	175 (386)

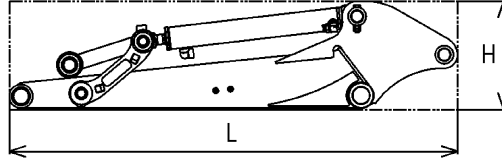


SPH02000005J01

Figure 6

2.5.2.4 BUCKET (STANDARD BUCKET)

Heaped capacity m ³ (cu. yd)	0.16 (0.21)
L x H x W mm (in)	780 x 690 x 650 (30.7" (27.2") (25.6"))
Weight kg (lb.)	112 (247)

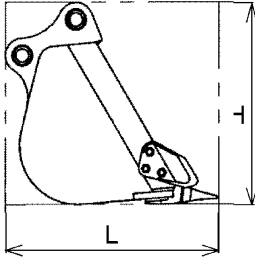


UPW00500011J01

Figure 7

2.5.2.5 DOZER (WITHOUT CYLINDER WEIGHT)



L x H x W mm (in)	1,190 x 335 x 1,960 (3' 11" (13.2") (6' 5.2"))
Weight kg (lb.)	142 (315)

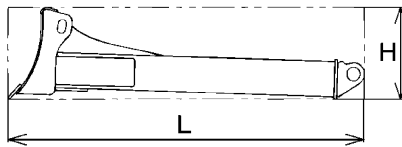


UPW00500012J01

Figure 8

2.6 TYPE OF TRACK SHOES

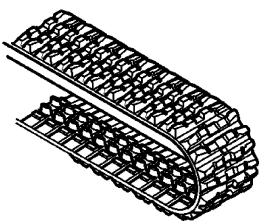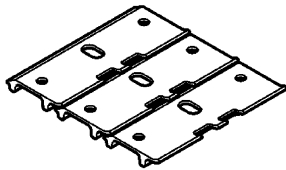Type	Shoe width mm (in)	Total Crawler width mm (ft. in)	Number of Links	Ground pressure kPa (psi)	
				CANOPY	CAB
Rubber shoe					
 SPW02000003J01 Figure 9	400 (15.7")	1,960 (6'5")	72	26 (3.77)	27 (3.92)
Steel shoe (option)					
 SPW02000004J01 Figure 10	400 (15.7")	1,960 (6'5")	38	27 (3.92)	28 (4.06)

2.7 TYPE OF BUCKET

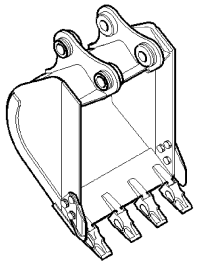Type	Heaped capacity m ³ (cu.yd)	Outer width mm (in)		Number of tooth	Weight kg (lb.)	Remarks
		with side cutter	without side cutter			
Back hoe bucket						
 SPW02000005J01 Figure 11	0.16 (0.21)	650 (25.3")	600 (23.6")	4	112 (247)	Standard size
NOTE 1: This table shows standard bucket.						