

SERVICE MANUAL

CR9090

EU built combine for NA - Series [1940 -] /

CX8080 Elevation / CX8090 Elevation
Tier 4A
Combine

Part number 47695751

1st edition English

March 2014

Sample manual. Download All 4858 pages at:

<https://www.arepairmanual.com/downloads/new-holland-cr9090-cx8080-elevation-cx8090-elevation-tier-4a-combine-service-repair-manual/>



Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.254] Intake and exhaust manifolds and muffler	10.2
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.3
[10.400] Engine cooling system	10.4
[10.418] Rotary screen	10.5
[10.450] Engine air compressor	10.6
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.182] Differential.....	21.4
Front axle system	25
[25.108] Final drive hub, steering knuckles, and shafts	25.1
[25.310] Final drives	25.2
Rear axle system.....	27
[27.124] Final drive hub, steering knuckles, and shafts	27.1
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.204] Reservoir, cooler, and lines	29.2
[29.218] Pump and motor components.....	29.3
[29.202] Hydrostatic transmission	29.4
[29.300] Rear hydrostatic transmission.....	29.5

[Sample of manual. Download All 4858 pages at:](https://www.arepairmanual.com/downloads/new-holland-cr9090-cx8080-elevation-cx8090-elevation-tier-4a-combine-service-repair-manual/)

<https://www.arepairmanual.com/downloads/new-holland-cr9090-cx8080-elevation-cx8090-elevation-tier-4a-combine-service-repair-manual/>

Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves.....	35.4
[35.359] Main control valve	35.5
[35.322] Regulated/Low pressure system.....	35.6
[35.220] Auxiliary hydraulic pump and lines	35.7
[35.410] Header or attachment height system	35.8
[35.602] Header or attachment leveling system.....	35.9
[35.760] Header reverser drive	35.10
[35.992] Stone trapping system	35.11
[35.994] Positive Straw Discharge (PSD)	35.12
[35.796] Chaff spreader control	35.13
[35.440] Grain tank unload system	35.14
[35.450] Traction variator system.....	35.15
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.432] Autoguidance steering	41.3
Tracks and track suspension.....	48
[48.130] Track frame and driving wheels.....	48.1
[48.134] Track tension units	48.2
[48.100] Tracks	48.3
Cab climate control	50

[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.5
[55.640] Electronic modules	55.6
[55.029] Gearbox electric system	55.7
[55.019] Hydrostatic drive control system	55.8
[55.512] Cab controls	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.11
[55.662] Header height control	55.12
[55.628] Threshing electrical control	55.13
[55.427] Straw walker variator	55.14
[55.426] Harvest material flow control system	55.15
[55.624] Residue handling control	55.16
[55.785] Precision farming system	55.17
[55.911] Global Positioning System (GPS)	55.18
[55.680] Autopilot/Autoguidance	55.19
[55.518] Wiper and washer system	55.20
[55.404] External lighting	55.21
[55.405] External lighting switches and relays	55.22
[55.514] Cab lighting	55.23
[55.408] Warning indicators, alarms, and instruments	55.24

[55.DTC] FAULT CODES	55.25
Attachments/Headers	58
[58.900] Belt feeding	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing	60.2
[60.150] Feeder drive system	60.3
[60.165] Feeder reverse system	60.4
[60.112] Stone trapping system	60.5
[60.260] Rotor	60.6
Threshing	66
[66.000] Threshing	66.1
[66.260] Threshing mechanism drive system	66.2
[66.331] Rotor	66.3
[66.330] Drum	66.4
[66.360] Drum/Rotor housing	66.5
[66.321] Drum/Rotor variator with electrical control	66.6
[66.105] Concave	66.7
[66.101] Concave conveyor plate	66.8
[66.110] Concave control system	66.9
Separation	72
[72.350] Beater	72.1
[72.220] Discharge beater	72.2
[72.420] Rotary separator	72.3
[72.440] Straw-flow beater	72.4
[72.110] Straw walker drive system	72.5
[72.101] Straw walkers and shafts	72.6
Residue handling	73

[73.300] Positive Straw Discharge (PSD)	73.1
[73.230] Straw chopper	73.2
[73.210] Straw chopper drive system	73.3
[73.220] Straw chopper frame	73.4
[73.335] Chaff spreader	73.5
[73.410] Opti-Spread™ system	73.6
Cleaning	74
[74.000] Cleaning	74.1
[74.101] Cleaning drive systems	74.2
[74.110] Grain pan	74.3
[74.114] Upper shaker shoe	74.4
[74.118] Lower shaker shoe	74.5
[74.125] Clean grain and return cross auger housing	74.6
[74.130] Fan housing	74.7
[74.136] Fan drive system	74.8
[74.140] Tailings return system	74.9
Crop storage / Unloading	80
[80.101] Clean grain elevator	80.1
[80.150] Grain tank	80.2
[80.175] Grain tank unload drive system	80.3
[80.180] Grain tank unload	80.4
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals	90
[90.154] Cab doors and hatches	90.1
[90.110] Operator platform less cab	90.2
[90.118] Protections and footboards	90.3
[90.124] Pneumatically-adjusted operator seat	90.4

[90.105] Machine shields and guards 90.5



INTRODUCTION

Contents

INTRODUCTION

Foreword (*)	3
Basic instructions - How to use and navigate through this manual (*)	4
Note to the Owner (*)	11
Foreword (*)	12
Safety rules (*)	13
Safety rules (*)	17
Basic instructions (*)	18
Torque (*)	21
Basic instructions - Chain Wear Tables - Roller Chains (*)	24
Basic instructions - Important notice regarding equipment servicing (*)	26
Basic instructions - Shop and Assembly (*)	27
Conversion factors (*)	29
Product identification (*)	30
Product identification (*)	31

(*) See content for specific models

Foreword

CR Series Tier IV	NA
CX8000 Elevation series	NA

IMPORTANT INFORMATION

All repair and maintenance works listed in this manual must be carried out only by staff belonging to the NEW HOLLAND Service network, strictly complying with the instructions given and using, whenever required, the special tools.

Anyone who carries out the above operations without complying with the prescriptions shall be responsible for the subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional or local dealers, reject any responsibility for damages due to the anomalous behavior of parts and/or components not approved by the manufacturer himself, including those used for the servicing or repair of the product manufactured or marketed by the Manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the Manufacturer in case of damages due to an anomalous behavior of parts and/or components not approved by the Manufacturer.

No reproduction, though partial of text and illustrations allowed

Basic instructions - How to use and navigate through this manual

CR Series Tier IV	NA
CX8000 Elevation series	NA

Technical Information

This manual has been produced by a new technical information system. This new system is designed to deliver technical information electronically through Web delivery (eTim), DVD and in paper manuals. A coding system called SAP has been developed to link the technical information to other Product Support functions, e.g., Warranty.

Technical information is written to support the maintenance and service of the functions or systems on a customer's machine. When a customer has a concern on his machine it is usually because a function or system on his machine is not working at all, is not working efficiently, or is not responding correctly to his commands. When you refer to the technical information in this manual to resolve that customer's concern, you will find all the information classified using the SAP coding, according to the functions or systems on that machine. Once you have located the technical information for that function or system then you will find all the mechanical, electrical or hydraulic devices, components, assemblies and sub assemblies for that function or system. You will also find all the types of information that have been written for that function or system, the technical data (specifications), the functional data (how it works), the diagnostic data (fault codes and troubleshooting) and the service data (remove, install adjust, etc.).

By integrating SAP coding into technical information, you will be able to search and retrieve just the right piece of technical information you need to resolve that customer's concern on his machine. This is made possible by attaching 3 categories to each piece of technical information during the authoring process.

The first category is the Location, the second category is the Information Type and the third category is the Product:

- **LOCATION** - is the component or function on the machine, that the piece of technical information is going to describe e.g. Fuel tank.
- **INFORMATION TYPE** - is the piece of technical information that has been written for a particular component or function on the machine e.g. Capacity would be a type of Technical Data that would describe the amount of fuel held by the Fuel tank.
- **PRODUCT** - is the model for which the piece of technical information is written.

Every piece of technical information will have those 3 categories attached to it. You will be able to use any combination of those categories to find the right piece of technical information you need to resolve that customer's concern on his machine.

That information could be:

- the description of how to remove the cylinder head
- a table of specifications for a hydraulic pump
- a fault code
- a troubleshooting table
- a special tool

How to use this manual

This manual is divided into Sections. Each Section is then divided into Chapters. Contents pages are included at the beginning of the manual, then inside every Section and inside every Chapter. An alphabetical Index is included at the end of a Chapter. Page number references are included for every piece of technical information listed in the Chapter Contents or Chapter Index.

Each Chapter is divided into four Information types:

- Technical Data (specifications) for all the mechanical, electrical or hydraulic devices, components and, assemblies.
- Functional Data (how it works) for all the mechanical, electrical or hydraulic devices, components and assemblies.
- Diagnostic Data (fault codes, electrical and hydraulic troubleshooting) for all the mechanical, electrical or hydraulic devices, components and assemblies.
- Service Data (remove disassembly, assemble, install) for all the mechanical, electrical or hydraulic devices, components and assemblies.

Sections

Sections are grouped according to the main functions or a systems on the machine. Each Section is identified by a number 00, 35, 55, etc. The amount of Sections included in the manual will depend on the type and function of the machine that the manual is written for. Each Section has a Contents page listed in alphabetic/numeric order. This table illustrates which Sections could be included in a manual for a particular product.

SECTION	PRODUCT					
	Tractors					
	Vehicles with working arms: backhoes, excavators, skid steers,					
	Combines, forage harvesters, balers,					
	Seeding, planting, floating, spraying equipment,					
	Mounted equipment and tools,					
00 - Maintenance						
05 - Machine completion and equipment						
10 - Engine						
14 - Main gearbox and drive						
18 - Clutch						
21 - Transmission						
23 - Four wheel drive system						
25 - Front axle system						
27 - Rear axle system						
29 - Hydrostatic drive						
31 - Implement power take-off						
33 - Brakes and controls						
35 - Hydraulic systems						
36 - Pneumatic system						
37 - Hitches, drawbars and implement couplings						
39 - Frames and ballasting						
41 - Steering						
44 - Wheels						
46 - Steering clutches						
48 - Tracks and track suspension						
50 - Cab climate control						
55 - Electrical systems						
56 - Grape harvester shaking						
58 - Attachments/headers						
60 - Product feeding						
61 - Metering system						
62 - Pressing - Bale formation						

INTRODUCTION

63 - Chemical applicators						
64 - Chopping						
66 - Threshing						
68 - Tying/Wrapping/Twisting						
69 - Bale wagons						
70 - Ejection						
71 - Lubrication system						
72 - Separation						
73 - Residue handling						
74 - Cleaning						
75 - Soil preparation/Finishing						
76 - Secondary cleaning / Destemmer						
77 - Seeding						
78 - Spraying						
79 - Planting						
80 - Crop storage / Unloading						
82 - Front loader and bucket						
83 - Telescopic single arm						
84 - Booms, dippers and buckets						
86 - Dozer blade and arm						
88 - Accessories						
89 - Tools						
90 - Platform, cab, bodywork and decals						

Section Contents

Section	Number	Description
Maintenance	00	
Machine completion and equipment	05	
Engine	10	
Main gearbox and drive	14	
Clutch	18	
Transmission	21	
Four wheel drive system	23	
Front axle system	25	
Rear axle system	27	
Hydrostatic drive	29	
Implement power take-off	31	
Brakes and controls	33	
Hydraulic systems	35	This Section covers the central parts of the hydraulic system. The components that are dedicated to a specific function are listed in the Chapter where all the technical information for that function is included.
Pneumatic system	36	This Section covers the pneumatic system. The components that are dedicated to a specific function are listed in the Chapter where all the technical information for that function is included.
Hitches, drawbars and implement couplings	37	
Frames and ballasting	39	
Steering	41	
Wheels	44	
Steering clutches	46	
Tracks and track suspension	48	
Cab climate control	50	
Electrical systems	55	The Section covers the central parts of the electrical, electronic, and lighting systems. The components that are dedicated to a specific function are listed in the Chapter where all the technical information for that function is included.
Grape harvester shaking	56	
Attachments/headers	58	
Product feeding	60	
Metering system	61	
Pressing - Bale formation	62	
Chemical applicators	63	
Chopping	64	
Threshing	66	
Tying/Wrapping/Twisting	68	
Bale wagons	69	
Ejection	70	
Lubrication system	71	
Separation	72	
Residue handling	73	
Cleaning	74	
Soil preparation/Finishing	75	
Secondary cleaning / Destemmer	76	
Seeding	77	
Spraying	78	
Planting	79	
Crop storage / Unloading	80	
Front loader and bucket	82	

INTRODUCTION

Section	Number	Description
Telescopic single arm	83	
Booms, dippers and buckets	84	
Dozer blade and arm	86	
Accessories	88	
Tools	89	
Platform, cab, bodywork and decals	90	This Section covers all the main functions and systems related to the body of the machine, including the operators cab and the platform.

Chapters

Each Chapter is identified by a number e.g. Hydraulic systems - Main control valve - 35.359. The first number is identical to the Section number i.e. Chapter 35.359 is inside Section 35, Hydraulic systems. The second number is representative of the Chapter contained within the Section.

CONTENTS

The Chapter Contents lists all the technical data (specifications), functional data (how it works), service data (remove, install adjust, etc..) and diagnostic data (fault codes and troubleshooting) that have been written in that Chapter for that function or system on the machine.

Contents

ENGINE
ENGINE - Engine and crankcase – 10.001

TECHNICAL DATA

ENGINE - Engine and crankcase - General specification (10.001 - D.40.A.10)

FUNCTIONAL DATA

ENGINE - Engine and crankcase - Dynamic description (10.001 - C.30.A.10)

SERVICE

ENGINE - Engine and crankcase - Remove (10.001 -F.10.A.10)

DIAGNOSTIC

ENGINE - Engine and crankcase - Troubleshooting (10.001 - G.40.A.10)

INDEX

The Chapter Index lists in alphabetical order all the types of information (called Information Units) that have been written in that Chapter for that function or system on the machine.

Index

ENGINE - 10
ENGINE

ENGINE - Engine and crankcase - Dynamic description (10.001 - C.30.A.10)

ENGINE - Engine and crankcase - General specification (10.001 - D.40.A.10)

ENGINE - Engine and crankcase - Remove (10.001 -F.10.A.10)

ENGINE - Engine and crankcase - Troubleshooting (10.001 - G.40.A.10)

Information Units and Information Search

Each chapter is composed of information units. Each information unit has the SAP code shown in parentheses which indicates the function and the type of information written in that information unit. Each information unit has a page reference within that Chapter. The information units provide a quick and easy way to find just the right piece of technical information you are looking for.

Example information unit	Engine oil pan- Sectional View (10.102AP - C.10.A.30)				
Information Unit SAP code	10	102	AP	C	10.A.30
SAP code classification	Engine	Pan and covers	Engine oil pan	Functional data	Sectional view

Page Header and Footer

The page header will contain the following references:

- Section and Chapter description

The page footer will contain the following references:

- Publication number for that Manual, Section or Chapter.
- Version reference for that publication.
- Publication date
- Section, chapter and page reference e.g. 10.102 / 9

Note to the Owner

CR Series Tier IV	NA
CX8000 Elevation series	NA

Engine repair information:

The engine repair information is not contained within this manual.

For engine repair information, please refer to the respective Service Manual for the engine type used in your vehicle.

Fault Code Resolution (FCR) information:

The FCR information is not contained within the paper version of the manual.

For FCR information, please refer to the Electronic Service Tool (EST) or the electronic version of this manual.

Electronic Service Tool (EST) information:

The EST information and how to handle Control Modules (CM) (e.g.: resetting of the CM, etc.) is not contained within this manual.

For EST information, please refer to the Electronic Service Tool User's Guide.

Foreword

CX8000 Elevation series	NA
-------------------------	----

Soil, air, and water are vital factors of agriculture and life in general. When legislation does not yet rule the treatment of some of the substances required by advanced technology, sound judgment should govern the use and disposal of products of a chemical and petrochemical nature.

NOTE: *The following are recommendations that may be of assistance:*

- Become acquainted with and ensure that you understand the relative legislation applicable to your country.
- Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, antifreeze, cleaning agents, etc., with regard to their effect on man and nature and how to safely store, use, and dispose of these substances.
- Agricultural consultants will, in many cases, be able to help you as well.

Helpful hints

- Avoid filling tanks using cans or inappropriate pressurized fuel delivery systems that may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of them contain substances that may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when draining off used engine coolant mixtures, engine, gearbox and hydraulic oils, brake fluids, etc. Do not mix drained brake fluids or fuels with lubricants. Store them safely until they can be disposed of in a proper way to comply with local legislation and available resources.
- Modern coolant mixtures, i.e. antifreeze and other additives, should be replaced every two years. They should not be allowed to get into the soil, but should be collected and disposed of properly.
- Do not open the air-conditioning system yourself. It contains gases that should not be released into the atmosphere. Your NEW HOLLAND dealer or air conditioning specialist has a special extractor for this purpose and will have to recharge the system properly.
- Repair any leaks or defects in the engine cooling or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding as penetrating weld splatter may burn a hole or weaken them, allowing the loss of oils, coolant, etc.

Safety rules

CR Series Tier IV	NA
CX8000 Elevation series	NA

PRECAUTIONARY STATEMENTS

Personal Safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Throughout this manual and on machine decals, you will find precautionary statements ("DANGER", "WARNING", and "CAUTION") followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



DANGER



DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1169A



WARNING



WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170A



CAUTION



CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with Caution is YELLOW.

M1171A

FAILURE TO FOLLOW "DANGER", "WARNING", AND "CAUTION" INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY, DAMAGE TO HEALTH OR DEATH.

NOTICE: Install new decals if the old decals are destroyed, lost painted over or cannot be read. When parts are replaced that have decals make sure you install a new decal with each new part.

MACHINE SAFETY

NOTICE: The word "notice" is used to inform the reader of something they need to know to prevent minor machine damage if a certain procedure is not followed.

The precautionary statements ("Important") is followed by specific instructions. This statement is intended for machine safety.

INFORMATION

NOTE: Instructions used to identify and present supplementary information.

LEGAL OBLIGATIONS

This machine may be equipped with special guarding or other devices in compliance with local legislation. Some to these require active use by the operator. Therefor, check local legislations on the usage of this machine.

ACCIDENT PREVENTION

Most accidents or injuries that occur in workshops are the result of non compliance to simple and fundamental safety principles. For this reason, **IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED** by applying the fundamental safety principles, acting with the necessary caution and care.

Accidents may occur with all types of machine, regardless of how well the machine in question was designed and built.



Shut down the machine, remove key, be sure all moving parts have stopped and all pressure in the systems is relieved before cleaning, adjusting or lubricating the equipment. Failure to comply will result in death or serious injury.

M871

SAFETY REQUIREMENTS FOR FLUID POWER SYSTEMS AND COMPONENTS - HYDRAULICS (EUROPEAN STANDARD EN982)

- Flexible hose assemblies must not be constructed from hoses which have been previously used as part of a hose assembly.
- Do not weld hydraulic pipes: when flexible hoses or piping are damaged, replace them immediately.
- It is forbidden to modify a hydraulic accumulator by machining, welding or any other way.
- Before removing hydraulic accumulators for servicing, the liquid pressure in the accumulators must be reduced to zero.
- Pressure check on hydraulic accumulators must be carried out by a method recommended by the accumulator manufacturer.
- Take care not to exceed the maximum allowed pressure of the accumulator. After any check or adjustment, check for leakages or gas in the hoses or pipes.

SAFETY RULES

General guidelines

- Carefully follow specified repair and maintenance procedures.
- When appropriate, use P.P.E (Personal Protective Equipment)
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts. It is advised to wear approved safety clothing, e.g.: non-slip footwear, gloves, safety goggles, helmets, etc.
- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.
- Do not operate the machine or use any of the implements from different positions, other than the driver's seat.
- Do not carry out operations on the machine with the engine running, unless specifically indicated.
- Bring all hydraulic cylinders to the home positions (down, retracted, etc.) before engine shut down.
- Stop the engine and check that the hydraulic circuits are pressure-free before removing caps, covers, valves, etc.
- All repair and maintenance operations must be carried out using extreme care and attention.
- Service steps and platforms used in the workshop or elsewhere should be built according to the applicable standards and legislation.
- Disconnect the power take off (p.t.o). and label the controls to indicate that the machine is being serviced. Any parts that are to be raised must be locked in position.
- Brakes are inoperative when manually released for repair or maintenance purposes. Use blocks or similar devices to secure the machine in these conditions.
- Only use specified towing points for towing the machine. Connect parts carefully. Make sure that all pins and/or locks are secured in position before applying traction. Never remain near the towing bars, cables or chains that are operating under load.

INTRODUCTION

- When loading or unloading the machine from the trailer (or other means of transport), select a flat area capable of sustaining the trailer or truck wheels. Firmly secure the machine to the truck or trailer and lock the wheels in the position used by the carrier.
- Electric heaters, battery-chargers and similar equipment must only be powered by auxiliary power supplies with efficient ground insulation to avoid electrical shock hazards.
- Always use suitable hoisting or lifting devices when raising or moving heavy parts.
- Keep bystanders away.
- Never use gasoline, diesel oil or other inflammable liquids as cleaning agents. Use non-inflammable, non toxic commercially available solvents.
- Wear safety goggles with side guards when cleaning parts with compressed air.
- Do not run the engine in enclosed spaces without suitable ventilation or exhaust extraction.
- Never use open flames for lighting when working on the machine or checking for leaks.
- All movements must be carried out carefully when working under, on or near the machine. Wear personal protective equipment (P.P.E.): helmets, goggles and special footwear.
- When carrying out checks with the engine running, request the assistance of an operator in the driver's seat. The operator must maintain visual contact with the service technician at all times.
- If operating outside the workshop, position the machine on a flat surface and lock in position. If working on a slope, lock the machine in position. Move to a flat area as soon as is safely possible.
- Damaged or bent chains or cables are unreliable. Do not use them for lifting or towing. Always use suitable protective gloves when handling chains or cables.
- Chains should always be safely secured. Make sure that the hitch-up point is capable of sustaining the load in question. Keep the area near the hitch-up point, chains or cables free of all bystanders.
- Maintenance and repair operations must be carried out in a CLEAN and DRY area. Clean up any water or oil spillage immediately.
- Do not create piles of oil or grease-soaked rags as they represent a serious fire hazard. Always store rags in a closed metal container.
- Before engaging the machine, make sure that there are no persons within the machine or implement range of action.
- Empty your pockets of all objects that may fall accidentally unobserved into the machine inner compartments.
- When metal parts are sticking out, use protective goggles or goggles with side guards, helmets, special footwear and gloves.
- When welding, use protective safety devices: tinted safety goggles, helmets, special overalls, gloves and footwear. All persons present in the area where welding is taking place must wear tinted goggles. NEVER LOOK DIRECTLY AT THE WELDING ARC WITHOUT SUITABLE EYE PROTECTION.
- Always disconnect battery ground terminal when welding.
- Metal cables tend to fray with repeated use. Always use suitable protective devices (gloves, goggles, etc.) when handling cables.

Machine start-up.

- Never run the engine in confined spaces that are not equipped with adequate ventilation for exhaust gas extraction.
- Never place the head, body, limbs, feet, hands or fingers near rotating and moving parts.

Hydraulic systems and fuel injection systems

- A liquid leaking from a tiny hole may be almost invisible but, at the same time, be powerful enough to penetrate the skin. Therefore, NEVER USE HANDS TO CHECK FOR LEAKS but use a piece of cardboard or paper for this purpose. If any liquid penetrates skin tissue, call for medical aid immediately. Failure to treat this condition with correct medical procedure may result in serious infection or death.
- In order to check the pressure in the system use suitable instruments.

Wheels and Tires

- Make sure that the tires are correctly inflated at the pressure specified by the manufacturer. Periodically check the rims and tires for damage.
- Stand away from (at the side of) the tire when checking inflation pressure.
- Do not use parts of recovered wheels as incorrect welding brazing or heating may weaken and eventually cause damage to the wheel.
- Never cut or weld a rim mounted with an inflated tire.
- Deflate the tire before removing any objects that may be jammed in the tire tread.
- Never inflate tires using inflammable gases, as this may result in explosions and injury to bystanders.

Removal and Re-fitting

- Lift and handle all heavy parts using suitable hoisting equipment. Make sure that parts are sustained by appropriate hooks and slings. Use the hoisting eyebolts for lifting operations. Extra care should be taken if persons are present near the load to be lifted.
- Handle all parts carefully. Do not put your hands or fingers between parts. Wear suitable safety clothing - safety goggles, gloves and shoes.
- Avoid twisting chains or metal cables. Always wear safety gloves when handling cables or chains.

Safety rules

CR Series Tier IV	NA
CX8000 Elevation series	NA

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 **DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with DANGER is RED.

 **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with WARNING is ORANGE.

 **CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with CAUTION is YELLOW.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information which clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Basic instructions

CR Series Tier IV	NA
CX8000 Elevation series	NA

SHIMMING

For each adjustment operation, select adjusting shims and measure individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value indicated on each shim.

ROTATING SHAFT SEALS

For correct rotating shaft seal installation, proceed as follows:

- before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes
- thoroughly clean the shaft and check that the working surface on the shaft is not damaged
- position the sealing lip facing the fluid; with hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will deviate the fluid towards the inner side of the seal
- coat the sealing lip with a thin layer of lubricant (use oil rather than grease) and fill the gap between the sealing lip and the dust lip on double lip seals with grease
- insert the seal in its seat and press down using a flat punch, do not tap the seal with a hammer or mallet
- whilst inserting the seal, check that it is perpendicular to the seat; once settled, make sure that it makes contact with the thrust element, if required
- to prevent damaging the seal lip on the shaft, position a protective guard during installation operations

O-RING SEALS

Lubricate the O-RING seals before inserting them in the seats, this will prevent them from overturning and twisting, which would jeopardise sealing efficiency.

SEALING COMPOUNDS

Apply one of the following sealing compounds on the mating surfaces marked with an X: RTV SILMATE, RHODORSIL CAF 1 or LOCTITE PLASTIC GASKET. Before applying the sealing compound, prepare the surfaces as follows:

- remove any incrustations using a metal brush
- thoroughly de-grease the surfaces using one of the following cleaning agents: trichlorethylene, petrol or a water and soda solution

COTTER PINS

When fitting split cotter pins, ensure that the pin notch is positioned in the direction of the force required to stress the pin. Spiral cotter pins do not require special positioning.

PROTECTING THE ELECTRONIC/ ELECTRICAL SYSTEMS DURING CHARGING OR WELDING

To avoid damage to the electronic/electrical systems, always observe the following:

1. Never make or break any of the charging circuit connections, including the battery connections, when the engine is running.
2. Never short any of the charging components to ground.
3. Always disconnect the ground cable from the battery before arc welding on the combine or on any header attached to the combine.
 - position the welder ground clamp as close to the welding area as possible
 - if welding in close proximity to a computer module, then the module should be removed from the combine
 - never allow welding cables to lay on, near or across any electrical wiring or electronic component while welding is in progress

4. **⚠ WARNING**

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Failure to comply could result in death or serious injury.

W0111A

Always use the jump stud posts installed on the machine to jump start the machine or to charge the batteries. Refer to the Operator's Manual for more information!

NOTICE: *If welding must be performed on the unit, either the combine or the header (if it is attached), the battery ground cable must be disconnected. The electronic monitoring system and charging system will be damaged if this is not done. Refer to the Operator's Manual for more information!*

Remove the battery ground cable. Reconnect the cable when welding is completed.

SPARE PARTS

Only use "CNH Original Parts" or " NEW HOLLAND Parts".

Only genuine spare parts guarantee the same quality, duration and safety as original parts, as they are the same parts that are assembled during standard production. Only "CNH Original Parts" or " NEW HOLLAND Parts" can offer this guarantee.

When ordering spare parts, always provide the following information:

- machine model (commercial name) and serial number
- part number of the ordered part, which can be found in the "Microfiches" or the "Service Parts Catalogue", used for order processing

TOOLS

The tools that NEW HOLLAND suggests and illustrate in this manual have been:

- specifically researched and designed for use with NEW HOLLAND machines
- essential for reliable repair operations
- accurately built and rigorously tested so as to offer efficient and long-lasting operation

By using these tools, repair personnel will benefit from:

- operating in optimal technical conditions
- obtaining the best results
- saving time and effort
- working in safe conditions

NOTE: *Wear limit values indicated for certain parts should be considered to be recommended, but not binding. The terms "front", "rear", "right-hand" and "left-hand" (when referred to different parts) are determined from the rear, facing in the direction of travel of the machine during operation.*


Torque

CR Series Tier IV	NA
CX8000 Elevation series	NA

Minimum hardware tightening torques (in N m or lb in /lb ft) for normal assembly applications unless otherwise stated

NOTICE: Shown below is the suggested initial torque tightening sequences for general applications, tighten in sequence from item 1 through to the last item of the hardware.

The minimum hardware tightening torque on drawings, in specifications etc. have priority.
The applicable CNH Standard is ENS7001.

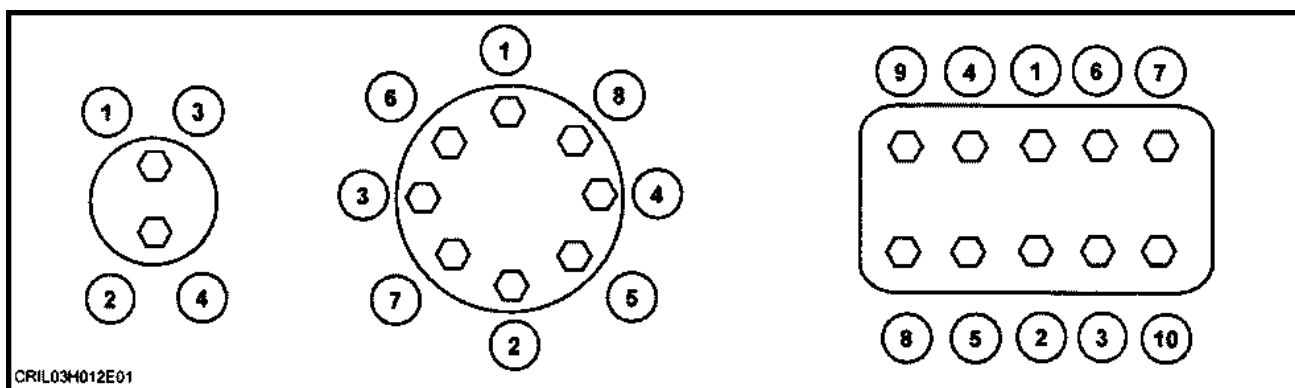


DF5019-1 1

Metric hardware


Nominal Size	Class 8.8 in N m (lb in or lb ft)			Class 10.9 in N m (lb in or lb ft)		
	Plated nut	Lock nut	Hardened nut	Plated nut	Lock nut	Hardened nut
M3	1.3 N·m (11.5 lb in)	0.7 N·m (6.2 lb in)	1.2 N·m (10.6 lb in)	1.8 N·m (15.9 lb in)	0.9 N·m (8.0 lb in)	1.6 N·m (14.2 lb in)
M4	2.9 N·m (25.7 lb in)	1.6 N·m (14.2 lb in)	2.6 N·m (23.0 lb in)	4.2 N·m (37.2 lb in)	2.3 N·m (20.4 lb in)	3.7 N·m (32.7 lb in)
M5	5.9 N·m (52.2 lb in)	3.2 N·m (28.3 lb in)	5.3 N·m (46.9 lb in)	8.5 N·m (75.2 lb in)	4.6 N·m (40.7 lb in)	7.6 N·m (67.3 lb in)
M6	10.1 N·m (89.4 lb in)	5.5 N·m (48.7 lb in)	9.1 N·m (80.5 lb in)	14.5 N·m (10.7 lb ft)	7.9 N·m (69.9 lb in)	13 N·m (9.6 lb ft)
M8	24.5 N·m (18.1 lb ft)	13.5 N·m (10.0 lb ft)	22 N·m (16.2 lb ft)	35.1 N·m (25.9 lb ft)	19.3 N·m (14.2 lb ft)	31.5 N·m (23.2 lb ft)
M10	48.7 N·m (35.9 lb ft)	26.8 N·m (19.8 lb ft)	43.8 N·m (32.3 lb ft)	69.5 N·m (51.3 lb ft)	38.2 N·m (28.2 lb ft)	62.5 N·m (46.1 lb ft)
M12	85 N·m (62.7 lb ft)	46.7 N·m (34.4 lb ft)	76.5 N·m (56.4 lb ft)	121 N·m (89.2 lb ft)	66.5 N·m (49.0 lb ft)	108.9 N·m (80.3 lb ft)
M14	135 N·m (99.6 lb ft)	74.2 N·m (54.7 lb ft)	121.5 N·m (89.6 lb ft)	193 N·m (142.3 lb ft)	106.1 N·m (78.3 lb ft)	173.7 N·m (128.1 lb ft)
M16	210 N·m (154.9 lb ft)	115.5 N·m (85.2 lb ft)	189 N·m (139.4 lb ft)	301 N·m (222 lb ft)	165.5 N·m (122.1 lb ft)	270.9 N·m (199.8 lb ft)
M18	299 N·m (220.5 lb ft)	164.4 N·m (121.3 lb ft)	269.1 N·m (198.5 lb ft)	414 N·m (305.4 lb ft)	227.7 N·m (167.9 lb ft)	372.6 N·m (274.8 lb ft)
M20	425 N·m (313.5 lb ft)	233.72 N·m (172.4 lb ft)	382.5 N·m (282.1 lb ft)	587 N·m (432.9 lb ft)	322.8 N·m (238.1 lb ft)	528.3 N·m (389.7 lb ft)
M22	579 N·m (427 lb ft)	318.4 N·m (234.8 lb ft)	521.1 N·m (384.3 lb ft)	801 N·m (590.8 lb ft)	440.5 N·m (324.9 lb ft)	720.9 N·m (531.7 lb ft)
M24	735 N·m (542.1 lb ft)	404.2 N·m (298.1 lb ft)	661.5 N·m (487.9 lb ft)	1016 N·m (749.4 lb ft)	558.8 N·m (412.1 lb ft)	914.4 N·m (674.4 lb ft)
M27	1073 N·m (791.4 lb ft)	590.1 N·m (435.2 lb ft)	967.5 N·m (713.6 lb ft)	1486 N·m (1096 lb ft)	817.3 N·m (602.8 lb ft)	1337 N·m (986.1 lb ft)

Nominal Size	Class 8.8 in N m (lb in or lb ft)			Class 10.9 in N m (lb in or lb ft)		
	Plated nut	Lock nut	Hardened nut	Plated nut	Lock nut	Hardened nut
M30	1461 N·m (1077.6 lb ft)	803.5 N·m (592.6 lb ft)	1315 N·m (969.9 lb ft)	2020 N·m (1489.9 lb ft)	1111 N·m (819.4 lb ft)	1818 N·m (1340.9 lb ft)


IDENTIFICATION HEX CAP SCREW AND CARRIAGE BOLTS

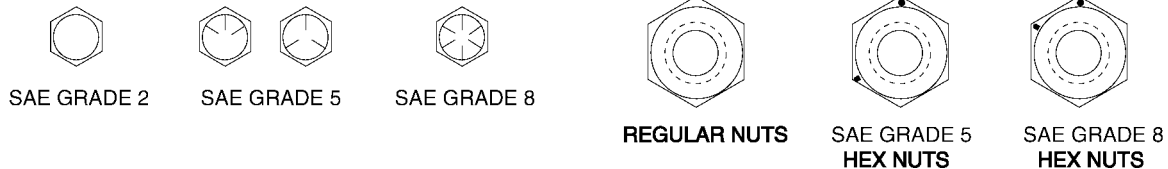

LOCKNUTS

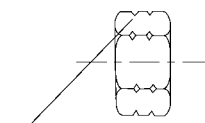


GRADE IDENTIFICATION
 GRADE A: NO NOTCHES
 GRADE B: ONE CIRCUMFERENTIAL NOTCH
 GRADE C: TWO CIRCUMFERENTIAL NOTCHES



GRADE IDENTIFICATION

GRADE A: NO MARK
 GRADE B: LETTER B
 GRADE C: LETTER C

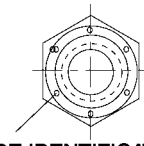

GRADE IDENTIFICATION
 GRADE A: NO MARKS
 GRADE B: THREE MARKS
 GRADE C: SIX MARKS