

Product: New Holland W270C/W300C Wheel Loader Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-w270c-w300c-wheel-loader-service-repair-manual/>

00c-wheel-loader-service-repair-manual/

SERVICE MANUAL

Wheel Loader W270C W300C

Print No. 84547255A



Sample of manual. Download All 1606 pages at

<https://www.arepairmanual.com/downloads/new-holland-w270c-w300c-wheel-loader-service-repair-manual/>

Product: New Holland W270C/W300C Wheel Loader Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-w270c-w300c-wheel-loader-service-repair-manual/>

W270C
W300C

Wheel Loader

84547255A

Use for Service Manual

Sample of manual. Download All 1606 pages at:

<https://www.arepairmanual.com/downloads/new-holland-w270c-w300c-wheel-loader-service-repair-manual/>

W270C - W300C Wheel Loader Service Manual 84547255A

Table of Contents

Description	Section No.
General	Tab 1
Section Index - General	
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003
Engines	Tab 2
Section Index - Engines	
Engine and Radiator Removal and Installation	2000
Stall Tests	2002
After Cooler	2003
For Engine Repair, See the Engine Service Manual 84394558	
Fuel System	Tab 3
Section Index - Fuel System	
For Fuel System Repair, See the Engine Service Manual 84394558	
SCR System	3002
Electrical	Tab 4
Section Index - Electrical	
Removal and Installation of Starter and Alternator	4001
Electrical Specifications and Troubleshooting	4002
Batteries	4003
Jump post option	4003a
Instrument Cluster	4005
Rear view Camera and Monitor	4006
Steering	Tab 5
Section Index - Steering	
Removal and Installation of Steering Components	5001
Steering Specifications, Pressure Checks, and Troubleshooting	5002
Steering Cylinders	5005
Center Pivot	5006

**W270C - W300C Wheel Loader
Service Manual
84547255A**

Table of Contents

Description	Section No.
Auxiliary Steering Motor and Pump	5008
Joystick Steering System (JSS) (Optional)	5009
Power Train	Tab 6
Section Index - Power Train	
Removal and Installation of Power Train Components	6001
Transmission Specifications, Pressure Checks, and Troubleshooting	6002
Transmission	6003
Front Axle	6004
Rear Axle	6004
Drive Shafts, Center Bearing, and Universal Joints	6005
Wheels and Tires	6006
Transmission Control Valve	6007
Brakes	Tab 7
Section Index - Brakes	
Removal and Installation of Brake Components	7001
Hydraulic Brake Troubleshooting	7002
Brake Pump	7003
Brake Accumulators	7004
Parking Brake	7008
Hydraulics	Tab 8
Section Index - Hydraulics	
Removal and Installation of Hydraulic Components	8001
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002
Cleaning the Hydraulic System	8003
Hydraulic Pump	8004
Loader Control Valve	8005
Cylinders	8006
Ride Control Accumulator	8013
Ride Control Valve	8014

**W270C - W300C Wheel Loader
Service Manual
84547255A**

Table of Contents

Description	Section No.
Mounted Equipment	
Tab 9	
Section Index - Mounted Equipment	
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002
Air Conditioner System Service	9003
Removal and Installation of Air Conditioning and Heater Components	9004
Loader	9006
Rollover Protective Structure (ROPS) Cab Structural Frame (CSF)	9007
Cab Glass Installation	9010
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	
In Rear Pocket	

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003

Section 1001

GENERAL TORQUE SPECIFICATIONS

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE	3
TORQUE SPECIFICATIONS - METRIC HARDWARE	4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	6

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983

Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827

NOTE: Use thick nuts with Grade 8 bolts.

TORQUE SPECIFICATIONS - METRIC HARDWARE


Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
M4	24 to 36	3 to 4
M5	60 to 72	7 to 8
M6	96 to 108	11 to 12
M8	228 to 276	26 to 31
M10	456 to 540	52 to 61
Size	Pound-Feet	Newton metres
M12	66 to 79	90 to 107
M14	106 to 127	144 to 172
M16	160 to 200	217 to 271
M20	320 to 380	434 to 515
M24	500 to 600	675 to 815
M30	920 to 1100	1250 to 1500
M36	1600 to 1950	2175 to 2600

Grade 10.9 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
M4	36 to 48	4 to 5
M5	84 to 96	9 to 11
M6	132 to 156	15 to 18
M8	324 to 384	37 to 43
Size	Pound-Feet	Newton metres
M10	54 to 64	73 to 87
M12	93 to 112	125 to 150
M14	149 to 179	200 to 245
M16	230 to 280	310 to 380
M20	450 to 540	610 to 730
M24	780 to 940	1050 to 1275
M30	1470 to 1770	2000 to 2400
M36	2580 to 3090	3500 to 4200

Grade 12.9 Bolts, Nuts, and Studs

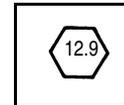

Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

37 Degree Flare Fitting			
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
1/4 inch 6.4 mm	7/16-20	72 to 144	8 to 16
5/16 inch 7.9 mm	1/2-20	96 to 192	11 to 22
3/8 inch 9.5 mm	9/16-18	120 to 300	14 to 34
1/2 inch 12.7 mm	3/4-16	180 to 504	20 to 57
5/8 inch 15.9 mm	7/8-14	300 to 696	34 to 79
Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
3/4 inch 19.0 mm	1-1/16-12	40 to 80	54 to 108
7/8 inch 22.2 mm	1-3/16-12	60 to 100	81 to 135
1.0 inch 25.4 mm	1-5/16-12	75 to 117	102 to 158
1-1/4 inch 31.8 mm	1-5/8-12	125 to 165	169 to 223
1-1/2 inch 38.1 mm	1-7/8-12	210 to 250	285 to 338

Straight Threads with O-ring			
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
1/4 inch 6.4 mm	7/16-20	144 to 228	16 to 26
5/16 inch 7.9 mm	1/2-20	192 to 300	22 to 34
3/8 inch 9.5 mm	9/16-18	300 to 480	34 to 54
1/2 inch 12.7 mm	3/4-16	540 to 804	57 to 91
Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
5/8 inch 15.9 mm	7/8-14	58 to 92	79 to 124
3/4 inch 19.0 mm	1-1/16-12	80 to 128	108 to 174
7/8 inch 22.2 mm	1-3/16-12	100 to 160	136 to 216
1.0 inch 25.4 mm	1-5/16-12	117 to 187	159 to 253
1-1/4 inch 31.8 mm	1-5/8-12	165 to 264	224 to 357
1-1/2 inch 38.1 mm	1-7/8-12	250 to 400	339 to 542

Split Flange Mounting Bolts		
Size	Pound- Inches	Newton metres
5/16-18	180 to 240	20 to 27
3/8-16	240 to 300	27 to 34
7/16-14	420 to 540	47 to 61
Size	Pound- Feet	Newton metres
1/2-13	55 to 65	74 to 88
5/8-11	140 to 150	190 to 203

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

O-ring Face Seal End					O-ring Boss End Fitting or Lock Nut		
Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	Thread Size	Pound-Inches	Newton metres
-4	1/4 inch 6.4 mm	9/16-18	120 to 144	14 to 16	7/16-20	204 to 240	23 to 27
-6	3/8 inch 9.5 mm	11/16-16	216 to 240	24 to 27	9/16-18	300 to 360	34 to 41
-8	1/2 inch 12.7 mm	13/16-16	384 to 480	43 to 54	3/4-16	540 to 600	61 to 68
					Thread Size	Pound-Feet	Newton metres
-10	5/8 inch 15.9 mm	1-14	552 to 672	62 to 76	7/8-14	60 to 65	81 to 88
Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Feet	Newton metres	1-1/16-12	85 to 90	115 to 122
					1-3/16-12	95 to 100	129 to 136
-12	3/4 inch 19.0 mm	1-3/16-12	65 to 80	90 to 110	1-5/16-12	115 to 125	156 to 169
-14	7/8 inch 22.2 mm	1-3/16-12	65 to 80	90 to 110	1-5/8-12	150 to 160	203 to 217
-16	1.0 inch 25.4 mm	1-7/16-12	92 to 105	125 to 140	1-7/8-12	190 to 200	258 to 271
-20	1-1/4 inch 31.8 mm	1-11/16-12	125 to 140	170 to 190			
-24	1-1/2 inch 38.1 mm	2-12	150 to 180	200 to 254			

Section 1002

1002

FLUIDS AND LUBRICANTS

TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS	3
ENGINE OIL TEMPERATURE CHART	5
TRANSMISSION OIL TEMPERATURE CHART	5
HYDRAULIC OIL TEMPERATURE CHART	5

CAPACITIES AND LUBRICANTS


W270C CAPACITIES AND SPECIFICATIONS

Engine		
	Type of oil	AMBRA Mastergold HSP (SAE 15W-40)
	Capacity (with filter change)	28.5 l (30.1 US qt)
Cooling system		
	System capacity	56.8 l (60.0 US qt)
Fuel system		
	System capacity	473.0 l (125.0 US gal)
Hydraulic system		
	Type of fluid	AMBRA Hydrosystem 46 HV
	Total system capacity	250.0 l (66.0 US gal)
	Reservoir capacity	134.0 l (35.4 US gal)
Transmission		
	Type of oil	AMBRA Supergold (SAE 10W-30)
	Service capacity - with filter change	45.4 l (48 US qt)
Axles		
	Type of oil	AMBRA TRX Transaxle Fluid
	Front axle STD	42 l (44 US qt)
	Rear axle STD	42 l (44 US qt)
	Front axle HD	62 l (65.5 US qt)
	Rear axle HD	65.7 l (69.4 US qt)
Tank Urea (AD Blue)		
	Type of fluid	Fluid Diesel exhaust (Spec ES-B5001)
	Capacity	91 l (96 US qt)

W300C Capacities and Specifications


Engine		
	Type of oil	AMBRA Mastergold HSP (SAE 15W-40)
	Capacity (with filter change)	28.5 l (30.1 US qt)
Cooling system		
	System capacity	56.8 l (60.0 US qt)
Fuel system		
	System capacity	473.0 l (125.0 US gal)
Hydraulic system		
	Type of fluid	AMBRA Hydrosystem 46 HV
	Total system capacity	250.0 l (66.0 US gal)
	Reservoir capacity	134.0 l (35.4 US gal)
Transmission		
	Type of oil	AMBRA Supergold (SAE 10W-30)
	Service capacity - with filter change	45.4 l (48 US qt)
Axles		
	Type of oil	AMBRA TRX Transaxle Fluid
	Front axle STD	64.0 l (67.6 US qt)
	Rear axle STD	64.0 l (67.6 US qt)
	Front axle HD	62 l (65.5 US qt)
	Rear axle HD	65.7 l (69.4 US qt)
Tank Urea (AD Blue)		
	Type of fluid	Fluid Diesel exhaust (Spec ES-B5001)
	Capacity	91 l (96 US qt)

HYDRAULIC OIL TEMPERATURE CHART

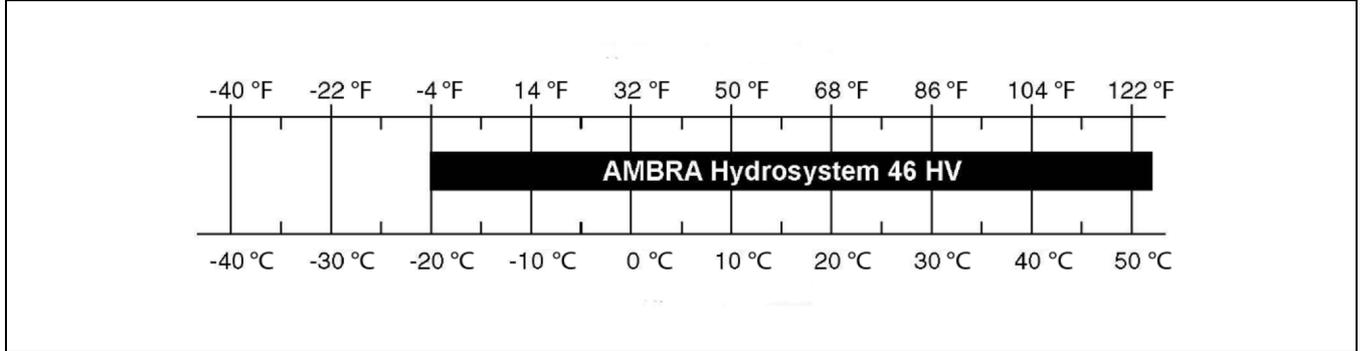


LEEN11T0128EA

TRANSMISSION OIL TEMPERATURE CHART

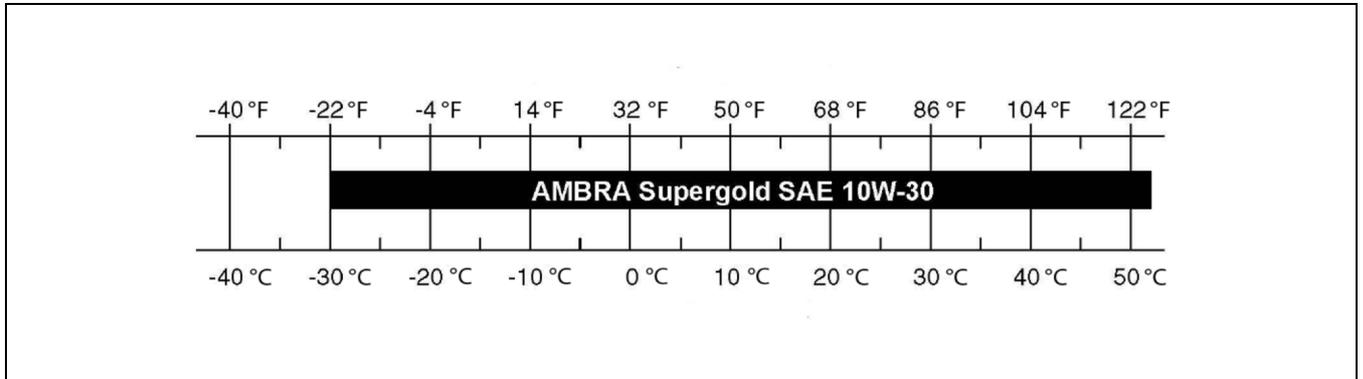

LEEN11T0127EA

ENGINE OIL TEMPERATURE CHART

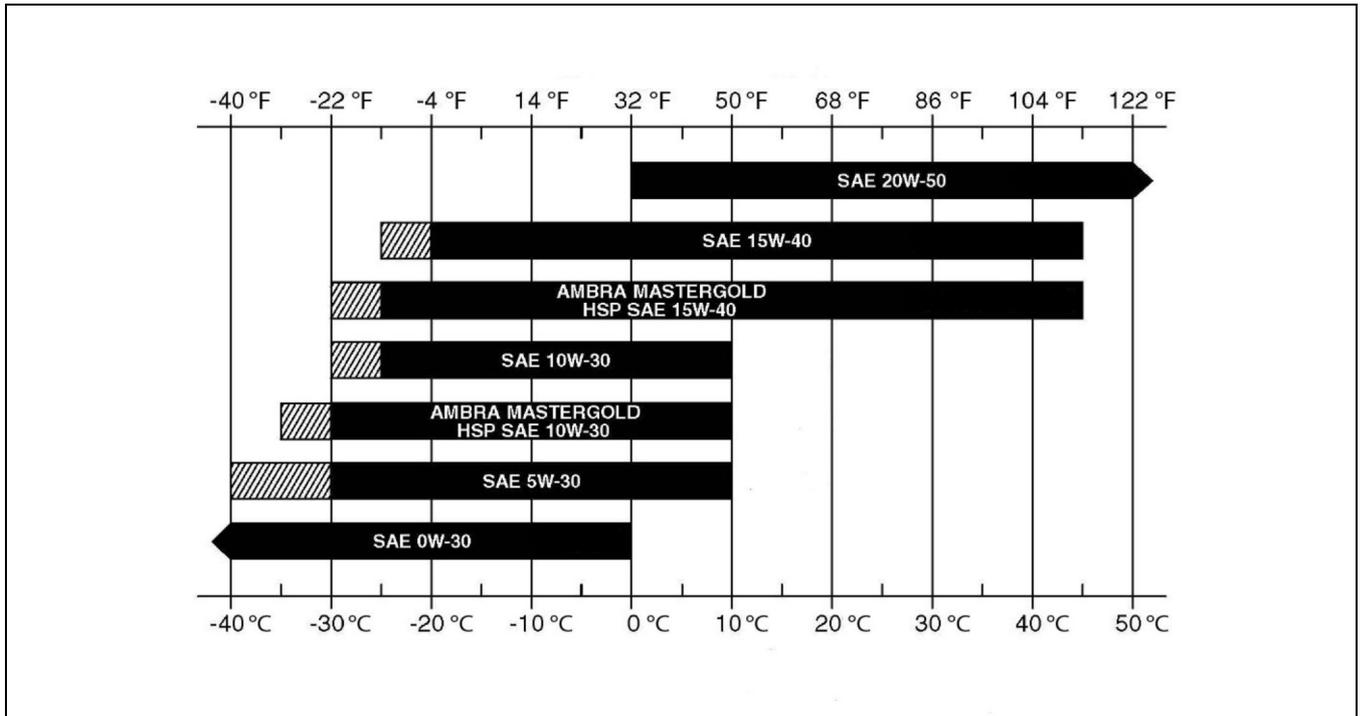

LEEN11T0126FA

Coolant solution

Put only ethylene-glycol coolant solution in the cooling system. Use good quality ethylene-glycol that has a high boiling point with no additives to prevent leakage. Do not use non-approved anti-rust additives. Anti-rust additives and ethylene-glycol can mix and work against each other, reducing anti-corrosion protection, forming deposits in the cooling system, and causing damage to the cooling system and radiator. Contact your dealer who can supply you with the suitable coolant solution.

Anti-freeze/Anti-corrosion

Use anti-freeze in all seasons to protect the cooling system from corrosion and risk of freezing. For areas where the ambient temperature is over $-36\text{ }^{\circ}\text{C}$ ($-32.8\text{ }^{\circ}\text{F}$) use a blend of 50 % ethylene-glycol based anti-freeze.

For areas where the temperature is below $-36\text{ }^{\circ}\text{C}$ ($-32.8\text{ }^{\circ}\text{F}$)- it is advisable to use a blend of 40 % water and 60 % anti-freeze.

Fuel

Use diesel fuel suitable for the ambient temperature conditions (ASTM D975).

Use fuel which is to ASTM (American Society for Testing and Materials) D975 standard (North America). In Europa, fuel must comply with Specification Standard EN 590 or ITS EQUIVALENT.

Use grade No. 2 fuel. The use of other types of fuel can result in a loss of power of the engine and may cause high fuel consumption.

In very low ambient temperatures, use a mixture of fuels No. 1 and No. 2 as necessary. Consult your fuel supplier for appropriate fuel supply.

If the temperature falls below the fuel cloud point (point at which wax begins to form) the wax crystals will cause power loss or will prevent the engine from starting.

In cold weather, fill the fuel tank at the end of the day's work in order to prevent the formation of condensation.

Engine oil

Ambra Mastergold engine oil is recommended for your engine. This oil insures correct lubrication of your engine in all working conditions. See charts at the beginning of this section to choose the correct oil for climate/temperatures.

If Ambra Mastergold engine oil cannot be obtained, use only oil of the API SERVICE CI-4 category.

NOTE: Do not put any Performance Additive or other additive in the sump. Oil change intervals shown in this manual are based on tests carried out utilizing New Holland lubricants.

Fuel storage

Prolonged storage of fuel can lead to the accumulation of impurities and condensation in the fuel. Engine trouble can often be traced to the presence of water in the fuel.

The storage tank must be placed outside and the temperature of the fuel should be kept as low as possible. Drain off water and impurities regularly.

Hydraulic fluid

Ambra Hydrosystem 46 HV Ultra hydraulic fluid is specifically designed for high pressure applications and for New Holland hydraulic systems. Your New Holland Dealer can provide hydraulic fluid to fulfill different climate/temperature conditions. Refer to the charts at the beginning of this section.

Transmission component oil

Extreme pressure oil should be used for enclosed transmission components. Choose an oil that is manufactured for your climate/temperature conditions such as Ambra Supergold SAE 10W-30. See charts at the beginning of this section.

Grease

The type of grease to use depends on ambient temperature such as: Ambra GR 75 MD.

Environment

Before you service this machine and dispose of oil, fluids, and lubricants, obey environmental regulations. Do not drain oil or fluids on to the ground or into containers that leak. Check with your local environmental, recycling center or your dealer for correct disposal information.



LEEN11T0129AA

Section 1003

1003

METRIC CONVERSION CHART

TABLE OF CONTENTS

CONVERSION FACTORS	3
Metric to U.S.	3
U.S. to Metric	4

CONVERSION FACTORS

Metric to U.S.

	<u>MULTIPLY</u>	<u>BY</u>	<u>TO OBTAIN</u>
Area:	sq. meter hectare	10.763 91 2.471 05	square foot acre
Force:	newton newton	3.596 942 0.224 809	ounce force pound force
Length:	millimeter meter kilometer	0.039 370 3.280 840 0.621 371	inch foot mile
Mass:	kilogram	2.204 622	pound
Mass/Area:	kilogram/hectare	0.000 466	ton/acre
Mass/Energy:	gr/kW/hr.	0.001 644	lbs/hp/hr.
Mass/Volume:	kg/cubic meter	1.685 555	lb/cubic yd.
Power:	kilowatt	1.341 02	horsepower
Pressure:	kilopascal bar	0.145 038 14.50385	lb/sq. inch lb/sq. inch
Temperature:	degree C	1.8 x C +32	degree F
Torque:	newton meter newton meter	8.850 748 0.737 562	lb/inch lb/foot
Velocity:	kilometer/hr.	0.621 371	miles/hr.
Volume:	cubic centimeter cubic meter cubic meter milliliter litre litre litre litre	0.061 024 35.314 66 1.307 950 0.033 814 1.056 814 0.879 877 0.264 172 0.219 969	cubic inch cubic foot cubic yd. ounce (US fluid) quart (US liquid) quart (Imperial) gallon (US liquid) gallon (Imperial)
Volume/Time:	litre/min. litre/min.	0.264 172 0.219 969	gallon/min. (US liquid) gallon/min. (Imperial)

U.S. to Metric

	<u>MULTIPLY</u>	<u>BY</u>	<u>TO OBTAIN</u>
Area:	square foot acre	0.092 903 0.404 686	square meter hectare
Force:	ounce force pound force	0.278 014 4.448 222	newton newton
Length:	inch foot mile	25.4 * 0.304 8 * 1.609 344 *	millimeter meter kilometer
Mass:	pound ounce	0.453 592 28.35	kilogram gram
Mass/Area:	ton/acre	2241 702	kilogram/hectare
Mass/Energy:	lb/hp/hr	608.277 4	gr/kW/hr
Mass/Volume:	lb/cubic yd.	0.593 276	kg/cubic meter
Power:	horsepower	0.745 700	kilowatt
Pressure:	lbs/sq. in. lbs/sq. in. lbs/sq. in.	6.894 757 0.069 0.070 303	kilopascal bar kg/sq. cm
Temperature:	degree F	1.8 F - 32	degree C
Torque:	pound/inch pound/foot	0.112 985 1.355 818	newton meter newton meter
Velocity:	miles/hr.	1.609 344 *	kilometer/hr.
Volume:	cubic inch cubic foot cubic yard ounce (US fluid) quart (US liquid) quart (Imperial) gallon (US) gallons (Imperial)	16.387 06 0.028 317 0.764.555 29.573 53 0.946 353 1.136 523 3.785 412 4.546 092	cubic centimeter cubic meter cubic meter milliliter litre litre litre litre
Volume/Time:	gallon/min.	3.785 412	litre/min.

* = exact

SECTION INDEX

ENGINES

Section Title	Section Number
Engine and Radiator Removal and Installation	2000
Stall Tests	2002
After Cooler	2003

**FOR ENGINE REPAIR, SEE THE ENGINE SERVICE MANUAL
84394558**

Section 2000

ENGINE AND RADIATOR REMOVAL AND INSTALLATION

TABLE OF CONTENTS


Engine	3
Remove	3
Install	12
Radiator	21
Removal	21
Installation	22

ENGINE

Removal

NOTE: Put caps on the fittings and plugs in the hoses to prevent foreign material from entering the system when disconnecting fuel lines or hydraulic hoses.

STEP 1

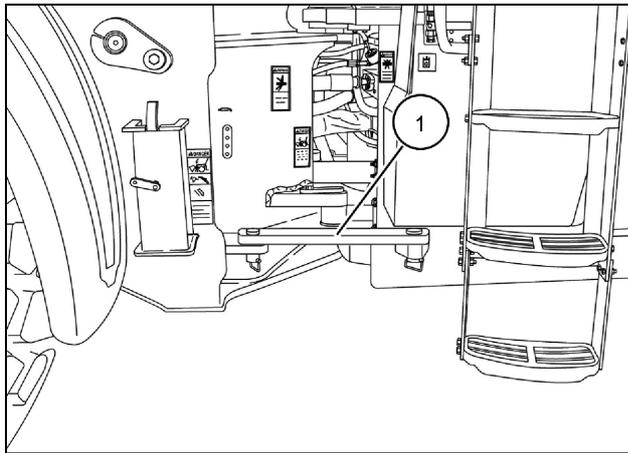

Park the machine on a level surface and lower the bucket to the ground. Put the articulation lock (1) in the locked position.

STEP 2

Key in the run position, engine off, place the pilot control switch in the normal operation position.

STEP 3

Move the loader hydraulic control handle to the raise and lower position in order to release any hydraulic pressure in the lift circuit.

STEP 4

Move the loader control handle in and out of the tilt position several times, this will relieve any pressure in the pilot accumulator.

STEP 5

Release the pressure in the ride control accumulator with the bleeder valve in the ride control valve.


STEP 6

Depress the brake pedal several times to discharge brake accumulators.

STEP 7

Slowly loosen the filler cap on the hydraulic oil tank to release air pressure.

STEP 8

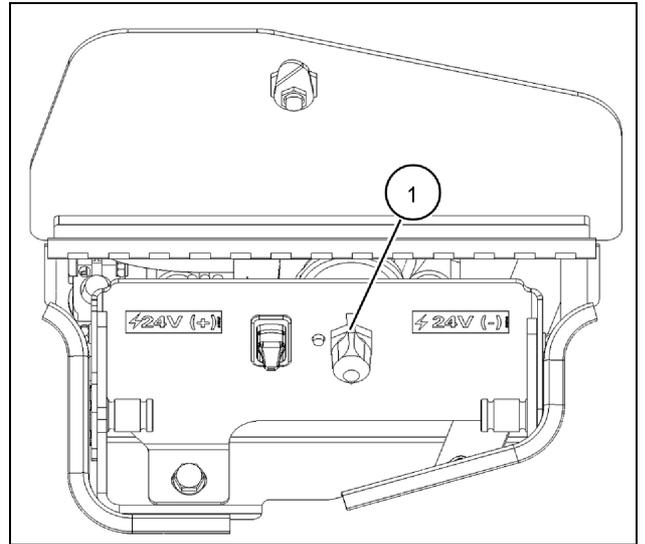

Put the master disconnect switch (1) in the off position.


STEP 9

Drain the engine radiator coolant.

STEP 10

Drain the engine oil.

STEP 11

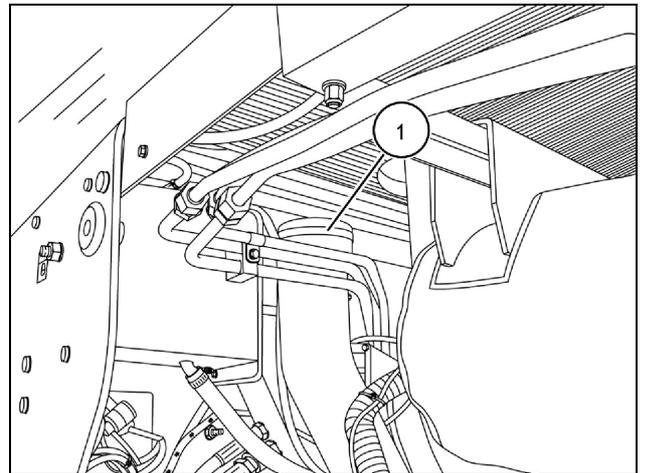

Loosen the hose clamp (1) on the air box snorkel under the air inlet hood.