

Product: New Holland LW230.B Wheel Loader Service Repair Manual
Full Download: <https://www.arepairmanual.com/downloads/new-holland-lw230-b-wheel-loader-service-repair-manual/>

SERVICE MANUAL

LW230.B WHEEL LOADER



NEW HOLLAND
CONSTRUCTION

Sample of manual Download All 368 pages at:
6036706100NA
<https://www.arepairmanual.com/downloads/new-holland-lw230-b-wheel-loader-service-repair-manual/>

LW230.B

WHEEL LOADER

Service Manual

Print N° 603.67.061.00 English



THIS ALERT SYMBOL SIGNALS IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read and heed carefully the safety instructions listed and follow the precautions recommended to avoid potential risks and to safeguard your health and your safety.

You will find this symbol in the text of this Manual referred to the following key words:

WARNING - Cautions directed to avoid improper repair interventions involving potential consequences for the operator's safety.

DANGER - These warnings qualify specifically potential dangers for the safety of the operator or other persons directly or indirectly involved.

IMPORTANT NOTICE

All maintenance and repair interventions explained in this Manual must be performed exclusively by the Service Organization of the Manufacturer, observing strictly the instructions explained using, whenever necessary, the recommended specific tools.

Whoever performs the operations reported without following exactly the precautions is responsible on his own, for the damages that may result.

Neither the Factory nor any Organizations in its Distribution Network, including but not limited to national, regional or local distributors, are responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by the Factory for use in maintaining and/or repairing products manufactured or merchandized by the Factory.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

IMPORTANT NOTICE

This machine has been designed and manufactured for digging and moving earth and loose materials only.

Any other application will be considered contrary to the use designated by the Manufacturer that, as a consequence, cannot result responsible for damages to third parties and to the machine itself or personal injuries that eventually could derive from them. It is necessary to consider that, in taking the risk of an improper use, you assume the consequential responsibilities.

The compliance with operations for the use, maintenance and repairs described in this Manual, are essential elements qualifying the use designated by the Manufacturer.

This machine must be operated, serviced and repaired only by personnel previously trained about the equipment and the relevant safety rules, besides being authorised to operate the machine itself.

The User is always compelled to observe all general safety and injury prevention rules, as well as road regulations in case of operation on roads open to public traffic.

Any arbitrary modification implemented on this machine absolves the Manufacturer from any responsibility deriving from consequential damages or injuries.

The Manufacturer and all the organisations in its distribution network, including, but not limited to, national, regional or local distributors/dealers, decline any responsibility for damages that could derive from the abnormal performance of parts and/or components not approved by the Manufacturer, used for the maintenance and/or repair of the products manufactured or sold by the Manufacturer.

In any case, no warranty of any type is issued or imposed, regarding the products manufactured or sold by the Manufacturer for damages deriving from abnormal performance of parts and/or components not approved by the Manufacturer.

SERIAL NUMBER	
ENGINE TYPE	
ENGINE SERIAL NUMBER	

S U M M A R Y

SAFETY RULES	pag. 1
TECHNICAL FEATURES OF WHEELED LOADER LW230.B	pag. 8
TABLE OF FLUID CAPACITIES	pag. 11
UNITS OF MEASURE USED IN THE MANUAL	pag. 12
TORQUE TABLES	pag. 13

ENGINE	Section 1
TRANSMISSION	Section 2
BRAKES SYSTEM	Section 3
STEERING SYSTEM	Section 4
BUCKET BOOMS AND FRAME	Section 5
EQUIPMENT HYDRAULIC SYSTEM	Section 6
ELECTRICAL SYSTEM	Section 7
CAB	Section 8

NOTES

SAFETY RULES

GENERALITIES

Read this Manual carefully before starting, operating, maintaining, fuelling or servicing the machine.

Read and comply with all safety precautions before any intervention.

Do not allow unauthorised personnel to operate or service this machine.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts. Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators. Ask your employer about specific safety equipment requirements.

Keep the operator's compartment, step plates, grab-rails and handles clean and clear of foreign objects, oil, grease, mud or snow to minimize the danger of slipping or stumbling. Remove mud or grease from your shoes before attempting to mount or operate the machine.

Do not jump on or off the machine. Always keep both hands and one foot, or both feet and one hand in contact with steps and grab rails.

Do not use controls or hoses as hand holds when climbing on or off the machine. Hoses and controls are movable parts and do not provide solid support. Besides, controls may be inadvertently moved and cause unexpected movement of the machine or its attachments.

Never operate the machine or its attachments from any position other than sitting in the driver's seat.

Keep head, body, limbs, hands and feet inside the operator's compartment at all times to reduce exposure to external hazards .

Be careful of possible slippery conditions of the steps and hand rails as well as of the ground around the machine.

Do not leave the machine until it has come to a complete stop.

Check the seat safety belt at least twice per year and replace it if it shows signs of wear, fraying or other weakness that could lead to failure.

STARTING

Never start or operate a FAILED machine. Before operating the machine, always ensure that any unsafe condition has been satisfactorily corrected.

Check brakes, steering and attachment controls before moving off. Report any malfunctioning part or system to the maintenance managers for proper action.

Ensure all protective guards and panels as well as all safety devices provided are in place and in good operating condition.

Ensure that nobody is in the machine operating range before moving off or operating the attachment. WALK completely around the machine before mounting. Sound the horn.

Before starting machine, check, adjust and lock the driver's seat for maximum comfort and control of the machine.

Fasten your seat belts(when fitted).

Obey all flag signals and signs.

Due to the presence of flammable fluids on the machine, never check or fill fuel tanks or accumulator batteries near fires, open flames, or sparks.

remember that SPECIAL starting fluids ARE flammable. Scrupulously follow recommendations printed on the containers and in this Manual.

do not puncture or burn containers.

Containers must be stored in fresh, well ventilated places and out of the reach of unauthorised persons. Strictly follow the instructions provided by the Manufacturer.

Never use these products near fires, open flames, or sparks.

OPERATING

Check wheel and rim retainers before each working shift. If necessary, tighten to the torque specified.

Do not run the engine of this machine in closed buildings without proper ventilation capable to remove harmful exhaust gases.

Roll Over Protective Structures (ROPS) are required on wheel or crawler loaders, dozers, or graders. never operate the machine if such protective structure is removed.

Keep the operator's compartment free of foreign objects, especially if not firmly secured. Never use the machine to transport objects, unless proper securing points are provided.

do not carry riders on THE machine

Study and familiarize with escape routes alternate to normal exit routes.

According to law provisions, seat belts must be fitted with Roll Over Protection Structures or cabs. Keep safety belts fastened during operation.

For your personal safety, do not climb on or off the machine while it is in motion.

Make sure that bystanders are clear of the machine operating range before starting the engine and operating the attachment. Sound the horn. Obey all indications provided by flags, signs and signals.

SAFETY RULES

DO NOT COAST OR FREEWHEEL down hills. Engage the most suitable gear speed to keep the machine under control.

Do not operate the machine if you are extremely tired or feel ill. Be especially careful towards the end of the working shift.

Do not operate a machine with misadjusted brakes.

Operate the machine at low speed which can ensure complete control at all times.

Travel slowly over very rough terrain, slopes or near drop-offs, in congested areas or on frozen or slippery surfaces.

When backing, always look to where the machine is to be moved. Be alert of the position of bystanders. Should someone enter the work area, stop the machine.

Maintain a safe distance from other machines or obstacles to ensure required visibility conditions. Give way to loaded machines.

Maintain a clear vision of the surroundings of the travel or work area at all times. Keep cab windows clean and repaired.

When machines are operating in tandem, the pusher (rear) must be equipped with the appropriate deflectors to protect the front unit driver against the air stream coming from the blower fan.

When pulling or towing through a cable or chain, do not start suddenly at full throttle. Take-up slack carefully.

Carefully inspect the towing items for flaws or problems before proceeding.

Avoid kinking or twisting chains or cables. Do not pull through a kinked chain or cable as the high stresses existing in this condition may induce failures. Always wear heavy gloves when handling chains or cables.

Chains and cables should be securely anchored. Anchor points should be strong enough to withstand the expected load. Keep anyone clear of anchor points and cables or chains.

do not pull unless the operator's compartments of the machines involved are properly protected against possible backlashes in case of cable or chain failure or detachment.

Be alert of soft ground conditions close to newly constructed walls. The fill material and machine weight may cause the wall to collapse.

In darkness, check area of operation carefully before moving in with the machine. Use all lights provided. Do not move into low visibility areas.

If the engine tends to stall for whatever reason under load or at idle, immediately report this problem to the maintenance managers for proper action. Do not operate the machine until this condition has been corrected.

On machines fitted with suction radiator fans, regularly check the engine exhaust system for leaks, as exhaust fumes expelled towards the operator are toxic.

Operators must know thoroughly the performances of the machine they are driving. When working on slopes or near sudden level drops in the terrain, avoid areas where ground is loose or soft since overturn or loss of machine control could result.

If noise level is high and continuously exceeds 90 dBA over 8 hours at the operator's ear, wear approved ear protection in compliance with local regulations.

Where counterweights are provided, do not operate the machine if they have been removed.

When transporting a loaded bucket, keep it as rolled-back and low as possible for maximum visibility, stability and safety of the machine. Ground speed should be adequate to the load and ground conditions.

The load must always be properly arranged in the bucket; move with extreme care when transporting oversized loads.

Use only the type of bucket recommended for the machine and the materials to be handled. Follow the recommendations concerning loading capacity, arrangement of the materials, characteristics of the ground and job to be performed.

Do not lift and move loads overhead where persons are standing or working, nor downhill when working crosswise on slopes. In this case, the bucket should be unloaded on the uphill side, whenever possible.

Start and stop the machine carefully when the bucket is full. Do not move off without first reducing engine speed.

Overtaking manoeuvres should be performed only when absolutely necessary and unavoidable. Beware possible uneven terrains, poor visibility, presence of other machinery or persons out of sight.

Operate the machine at a speed adequate to the working site conditions and in any case slow enough to ensure complete control at all times.

Check instruments at start-up and frequently during operation. Stop the machine immediately should any malfunction be signalled.

Never use the bucket as a man lift or to carry riders.

Never use the machine as a work platform or scaffolding, nor for other improper use (such as pushing railway cars, trucks or other machines).

Pay attention to people within the machine operating range. Load trucks from the driver's side whenever possible.

Prior to operating the machine, check which obstacles and/or difficulties you will encounter, such as narrow streets, overhead doors, cables, piping, as well as ground, bridges, paving and ramps bearing load limitations.

In case of road transfers, find out beforehand what conditions are likely to be encountered, such as size restrictions, heavy traffic, paving type, etc. Beware fog, smoke or dust that obscure visibility.

SAFETY RULES

When crossing gullies or ditches, move at an angle with reduced speed after ensuring ground conditions will permit a safe traverse.

Always inspect the working area to identify potential risks such as: inclines, overhangs, trees, demolition rubble, fires, ravines, steep slopes, rough terrain, ditches, crowns, ridge trenches, heavy traffic, crowded parking and service areas, closed ambients. In such conditions, proceed with extreme care.

Whenever possible, avoid going over obstacles such as very rough terrain, rocks, logs, steps, ditches, railroad tracks. When obstructions must be crossed, do so with extreme care and at an angle, if possible. Slow down and select a lower gear. Ease up to the break-over point, pass the balance point slowly and ease down the other side.

In steep down-hill operation, do not allow the engine to over-speed. Select the proper gear before starting down grade.

Avoid crosswise hill travel, whenever possible. Drive up and down the slope. Should the machine start slipping sideways when going uphill, steer and turn machine front immediately downhill.

The gradient you may attempt to overcome is limited by factors such as ground conditions, load being handled, machine type and speed, and visibility.

There is no substitute for good judgement and experience when working on slopes.

Avoid operating the attachment too close to an overhang or high wall, either above or below the machine. Beware of caving edges, falling objects and landslips. Remember that such hazards are likely to be concealed by bushes, undergrowth and such.

When pushing-over trees, the machine must be equipped with proper overhead guards. Never drive a machine up the roots, particularly while the tree is being felled. Use extreme care when pushing over any tree with dead branches.

Avoid faggots, bushes, logs and rocks.

never drive over them, nor over any other surface irregularities that discontinue adherence or traction with the ground, especially near slopes or drop-offs.

Be alert to avoid changes in traction conditions that could cause loss of control. AVOID driving on ice or frozen ground when working on steep slopes or near drop-offs.

Working in virgin rough terrains is characterized by the presence of all the perils and risks listed above. In these conditions, it is emphasised the danger represented by large tree limbs (possibly falling on the machine), large roots (which may act as a leverage under the machine when up-rooted and cause the unit to overturn), etc.

STOPPING

When the machine is to be stopped for whatever reason, do so following the instructions given in chapters "Stopping the machine" and "Shutting off the engine" in the Operation and Maintenance Instruction Manual.

Always remember to move the gearshift lever to the neutral position and engage the control lever lock for safety purposes.

Apply the parking brake (if fitted).

Never leave the machine unattended with the engine running.

Prior to leaving the operator's seat, and after making sure that all people are clear of the machine, always slowly lower the attachment until resting it safely to the ground.

Park the machine in a non-operating and no-traffic area. Park on firm level ground. If this is not possible, position the machine at a right angle to the slope, making sure there is no danger of uncontrolled sliding. Apply the parking brake.

If parking in traffic lanes cannot be avoided, provide appropriate flags, barriers, flares and signals as required to adequately warn the oncoming drivers.

Keep head, body, limbs, hands and feet clear of the dozer, arms, bucket or ripper when raised.

Always switch off the battery isolator switch before servicing the machine in whatever manner (i.e., cleaning, repairing, maintaining, etc.). Do the same when the machine is to remain parked for prolonged periods of time to avoid accidental or unauthorized starting.

Never lower the attachments other than sitting in the operator's seat. Sound the horn. Make sure that nobody is within the machine operating range. Lower the attachment slowly. do not use float position in case of hydraulic controls.

Securely block the machine and lock it every time you leave it unattended. Return keys to authorized security. Perform all necessary operations as detailed in the Operation and Maintenance Instruction Manual. Apply the parking brake (if fitted) every time you leave the machine.

MAINTENANCE

GENERALITIES

Before operating or performing any intervention on the machine:

- carefully read all the norms contained in this Manual;
- read and observe all safety plates and instructions located on the machine.

SAFETY RULES

Do not allow unauthorized personnel to service the machine. Do not carry out any maintenance work without prior authorization. Follow all recommended maintenance and service procedures.

Keep the operator's compartment free of loose objects that are not properly secured.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts. Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators. Ask your employer about specific safety equipment requirements.

Never service the machine with someone sitting in the driver's seat, unless this person is an authorized operator assisting in the maintenance being carried out.

Keep the operator's compartment, step plates, grab rails and handles clear of foreign objects, oil, grease, mud or snow to minimize the danger of slipping or stumbling.

Clean mud or grease from your shoes before climbing on the machine or driving it.

Never attempt to operate the machine or its attachments from any position other than sitting in the operator's seat.

Never stand under the boom.

Should it be necessary to move the attachment through the hydraulic controls for maintenance purposes, remember that this should be done while sitting in the operator's seat. Before starting the machine or moving its attachment, apply the brakes, sound the horn and call that you are about to manoeuvre. Raise the attachment slowly.

Always lock machine arms or any other parts that must be lifted for maintenance purposes using adequate external means. Do not allow anyone to pass near or even below a raised yet unlocked attachment. If you are not absolutely sure about your safety, do not stay under a raised attachment, even if it is locked.

Do not place body, limbs, or fingers near articulated cutting edges of uncontrolled machine parts or deprived of the necessary guards, unless they are suitably and safely locked.

Never perform any work on the machine with the engine running, except when this is specifically required. Do not wear loose clothing, jewellery or such near moving parts.

When service or maintenance require access to areas that cannot be reached from the ground, use a ladder or step platform conforming to regulations in force. If such means are not available, use machine grab rails and steps. Always perform all service or maintenance work with the greatest care and attention.

Shop and/or field service platforms or ladders should be manufactured in accordance with safety regulations in force.

Disconnect batteries and label all controls to warn that service work is in progress. Block the machine and all attachments to be raised.

Do not check or fill fuel tanks, batteries and accumulators, nor use the starting liquid if you are smoking or near open flames. These fluids are flammable!

BRAKES ARE INOPERATIVE when manually released for servicing. Provisions must be made to maintain control of the machine using suitable blocks or other means.

The fuel filler pipe nozzle must be constantly kept in contact with the filler neck. Keep this contact from the beginning to the end of the fuelling operation to avoid possible generation of sparks due to static electricity.

Tow the machine only from the attaching points provided. Use care in making connections and ensure pins and/or bolt are firmly secured before pulling. Stay clear of draw-bars, cables or chains under load.

To move a failed machine, use a trailer or a low platform truck, if available. In case towing is needed, use all necessary signals required by local regulations, and follow directions provided in this Manual.

Load/unload the machine from transporter on firm level ground providing safe support to the wheels of the truck or trailer. Use strong access ramps, with adequate height and angle. Keep the loading platform free of mud, oil or slippery materials.

Tie the machine securely to the platform of the truck or trailer and opportunely wedge machine wheels or tracks as required.

Never align holes or slots using your fingers; always use appropriate aligning tools.

Remove all sharp edges and burrs from re-worked parts.

Use only approved and effectively grounded auxiliary power sources for heaters, battery chargers, pumps and similar equipment to reduce electrical shock hazard.

Lift and handle heavy components using hoisting devices of appropriate capacity. Ensure the sling has been correctly applied. Use lifting eyes if provided. Pay attention to bystanders.

Never pour gasoline or diesel fuel into open, wide and low containers. Never use gasoline, solvents or other flammable fluids to clean parts. Use proprietary certified non-flammable, non-toxic solvents only.

When using compressed air to clean parts, wear safety glasses with side shields. Limit pressure to max 2 bars, in accordance with local safety regulations in force.

Do not run the engine in closed buildings without proper ventilation capable to remove lethal fumes.

Do not smoke, use open flames or produce sparks nearby while refuelling the unit or handling highly flammable materials.

SAFETY RULES

Do not use any flame as a light source during maintenance work or to look for leaks anywhere on the machine.

Make sure that all tools provided are in good condition at all times. NEVER USE tools with mushroomed or damaged heads. Always wear eye protections.

Move with extreme care when working under the machine, its attachments, and even on or near them. Always wear protective safety equipment as required, such as hard hat, goggles, safety shoes, and ear plugs.

In case tests during which the engine should be kept running, a qualified operator must sit in the driver's seat with the mechanic in sight at all times. Place the transmission in neutral, apply and lock the brakes. **KEEP HANDS OFF MOVING PARTS.**

In case of field service, move machine to level ground, if possible, and block it. If work on an incline cannot be advised, block the machine and its attachments securely. Move damaged to level ground as soon as possible.

Do not trust worn and/or kinked chains and cables. Never use them for lifting or pulling. Always wear heavy gloves to handle chains or cables.

Be sure chains and cables are firmly fastened and that anchor points are strong enough to withstand the expected load. Nobody should stay near the anchor points, cables or chains. **DO NOT PULL OR TOW UNLESS THE OPERATOR'S COMPARTMENTS OF THE MACHINES INVOLVED ARE FITTED WITH THE PROPER GUARDS AGAINST BACKLASH IN CASE OF CABLE OR CHAIN FAILURE OR DETACHMENT.**

Keep the area where maintenance is carried out CLEAN and DRY at all times. Clean immediately all water and oil spillages.

Do not pile up oily or greasy rags as they represent a major fire hazard. Always store them in closed metal containers.

Before starting the machine or its attachment, check, adjust and lock the operator's seat. Also ensure that nobody is within the machine operating range. Sound the horn.

Rust inhibitors are volatile and flammable. Use them only in well ventilated areas. Keep open flames away - **DO NOT SMOKE** - Store containers in a cool well ventilated place where they could not be reached by unauthorised people.

Do not carry loose objects in your pockets that might fall unnoticed into open compartments.

Wear safety glasses with side shields, hard hat, safety shoes, heavy gloves when metal particles or similar may be ejected and hit you.

Wear appropriate protective equipment such as dark safety glasses, hard hat, protective clothing, special gloves and footwear while welding. Nearby persons should also wear dark safety glasses even if they are not welding. **DO NOT LOOK THE WELDING ARC WITHOUT PROPER EYE PROTECTION.**

Become acquainted with all your jacking equipment and its capacity. Remember that the jacking point on the machine should be appropriate for the load applied. Also, be sure the support area of the jack at the machine and on the ground is appropriate and stable.

Any load supported by a jack represents a possible hazard. Always transfer the load onto appropriate support means according to local or national safety requirements before proceeding with service or maintenance work.

Metal cables get frayed after prolonged use. Always wear appropriate protections (heavy gloves, goggles, etc.) while handling them.

Handle all parts carefully. Keep hands and fingers away from gaps, gears, and similar. Always use and wear the appropriate protections.

Water can build up in pneumatic systems from condensate moisture due to changes in atmospheric conditions. If necessary, drain such deposits following instructions.

Before carrying out any maintenance work or service, lock the machine articulated frame modules using the appropriate safety device. Remember to remove and store it properly at the end of work.

If the machine is equipped with hydraulic brakes, make sure that the reservoir is always filled up to the correct level.

Always block all wheels, front and rear, before bleeding the braking system or disconnecting control hoses and/or cylinders.

STARTING

Do not run the engine in closed buildings without proper ventilation capable to remove lethal exhaust fumes.

Do not place head, body, limbs, feet, hands or fingers near rotating fans or belts.

Be especially careful near blower fans.

REMEMBER THAT THE STARTING FLUID IS HIGHLY FLAMMABLE. Follow recommendations provided in this Manual and printed on the containers. Containers must be stored in a cool, well ventilated place out of the reach of unauthorised persons.

DO NOT PUNCTURE OR BURN CONTAINERS.

SAFETY RULES

ENGINE

Loosen the radiator cap very slowly to relieve system pressure before removing it. Always top-up coolant level with the engine off.

Avoid that flammable materials could touch exhaust parts. If not possible, provide necessary protections.

Do not refuel with the engine running, especially if hot, as this increases fire hazard.

Never attempt to check or adjust fan belt tensions when the engine is running.

Do not adjust the fuel pump when the machine is motion.

Do not lubricate the machine with the engine running.

Do not run the engine with air intakes, door or guards open.

ELECTRICAL SYSTEM

Always disconnect the batteries prior to any intervention on the machine or its electrical system (cleaning, repair, maintenance).

Should booster batteries be used, remember to connect ends of the booster cables in the proper manner: (+) to (+) and (-) to (-). Do not short-circuit terminals. Thoroughly follow instructions given in this Manual.

Before any intervention, make sure that the battery isolator switch is off.

BATTERY GAS IS HIGHLY FLAMMABLE. Leave the battery compartment open during recharging to improve ventilation. Never check battery charge by placing metal objects across the posts. Keep sparks or open flames away from batteries. Do not smoke near the battery to prevent explosion hazard.

Before any intervention, make sure that there are no fuel or electrolyte leakages. If any, correct prior to proceeding with further work. Do not recharge batteries in confined spaces. Ensure proper ventilation is provided to avoid accidental explosions due to build-up of gas released during charging.

HYDRAULIC SYSTEM

Pressure fluid escaping from a very small hole can be almost invisible and still have sufficient force to penetrate the skin. Always check any suspected pressure leaks using a piece of cardboard or wood. **DO NOT USE HANDS.** If injured by escaping fluid, obtain medical attention immediately or serious infection or reaction may develop.

Stop the engine and relieve all system pressure before removing panels, housings, caps, plugs or covers.

Always use gauges of adequate capacity (end-of-scale reading) and follow recommended procedures.

TOOLS

Always keep head, body, limbs, feet, or hands away from bucket, blade, or ripper when in the raised position. Prior to any intervention, install all safety devices according to current regulations. In case the attachment is to be operated through the machine hydraulic system for maintenance purposes, remember to do so only while sitting in the driver's seat. Make sure that nobody is within the machine operating range. Before operating the attachment, alert people by sounding the horn and by voice. Raise the attachment slowly.

Do not use the machine to transport loose objects, unless proper devices to this purpose are provided.

Clutches and brakes of this machine as well as auxiliary devices and attachments (such as drive cylinder or winch control valves) should always be properly adjusted in accordance with the instructions provided by the Manufacturer. Never perform adjustments with the engine running, except when this is specifically required by the relevant procedures.

TYRES AND WHEELS

Make sure that the tyre inflation pressure corresponds to specifications issued by the Manufacturer. Regularly check inflation pressure.

Should pressure be changed, do this while staying on the tyre side and at a safe distance.

Pressure checks should always be carried out with the machine unloaded and cold tyres.

Never use reconditioned tyre rims, since possible weldings, incorrect heat-treatments or repairs can weaken the wheels and cause damages or failures.

Do not cut, nor weld rims with inflated tyres installed.

The spare tyre should be inflated only enough to keep the rim components assembled. Remember that when not installed on the disc, a tyre inflated to maximum pressure can **explode**.

Therefore, maximum care must be taken when handling a fully inflated tyre.

Before servicing tyres, block all wheels, front and rear. After jacking up the machine, block it in the raised position using suitable stands conforming to current safety regulations.

SAFETY RULES

Deflate the tyre before removing objects from the tyre tread.

Never inflate tyres with flammable gas: explosions and severe bodily injuries may result.

When starting your work shift, check for loose wheel or rim bolts and brackets and retighten to correct torque as necessary.

DECOMMISSIONING THE MACHINE

For the decommissioning of the machine, the availability of particular tooling (hoists, hydraulic presses, containers for liquids etc.) is required as well as specific tools listed in the Repair Manuals, available from **NEW HOLLAND** Dealers.

This has the purpose of avoiding that during disassembly operations, dangerous situations may arise both for the personnel involved and the environment.

In the machine are present:

- Fluids under pressure (hydraulic system, cooling system etc.)
- Gases (air conditioning system and accumulator, if installed)

- Mechanical devices mounted under pressure (track tensioner etc.)
- Heavy machine components (frames, blades, buckets etc.)



WARNING


- **The decommissioning of the machine must be performed exclusively by personnel trained, qualified and authorised to perform such operation.**
- **Start the disassembly of hydraulic components only after the same, the hydraulic oil and lubricants have fully cooled-off and after all residual pressures have been released, as described by the Repair Instruction Manual.**
- **Prior to proceeding with disassembly operations, comply with the GENERAL SAFETY RULES and drain each components of the machine filled with fluids, both in the reservoirs and the relevant systems.**



WARNING

Ensure that the attachment is safely resting on to the ground before repairing, adjusting, or servicing machines fitted with hydraulically, mechanically or cable controlled attachments (such as excavators, loaders, dozers, scrapers, etc.). Should it be necessary to partially or fully raise the hydraulically, mechanically, or cable controlled attachment to gain access to certain items, make sure the attachment is adequately retained in the raised position by means other than the hydraulic lift cylinders, cable and/or mechanical devices used for controlling it.

DIMENSIONS AND WEIGHT

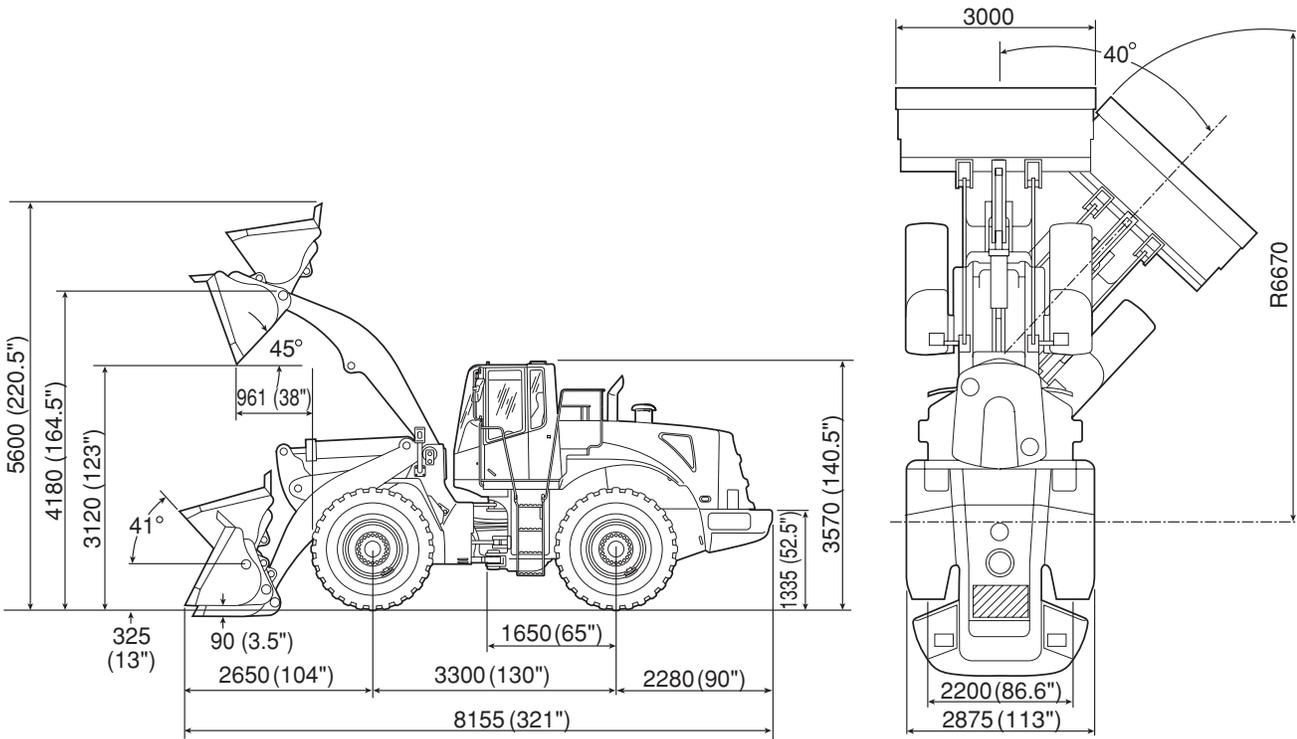

Dimensions in mm (in)

Operating weight: 21210 kg (46760 lb)

Note — *The machine is specified with 3.6 cu m standard bucket (without teeth), tyres 26.5 R25XHA, filled and with operator.*

TABLE OF FLUID CAPACITIES

ITEM	QUANTITY LITRES (USG)	FLUIDS OR LUBRICANT 	CLASSIFICATION SPECIFICATIONS	VISCOSITY (SAE) REFERENCE	OUT DOOR TEMPERATURE OF
ENGINE	18 (4.8)	Ambra – Super Gold	API CF-4/SG MIL-L-2104E	15W-40 10W-30	-10 to +50 °C (14 to 122 °F) -30 to +20 °C (-22 to 68 °F)
		Ambra-Super Gold HSP*	API CH-4	15W-40	-10 to +50 °C (14 to 122 °F)
		Ambra-Agriflu	NH-900A	–	-35 to +50 °C (-31 to 122 °F)
TRANSMISSION	40 (10.5)	Ambra-Super Gold	API CF-4/SG MIL-L-2104E	15W-40 10W-30	-10 to +50 °C (14 to 122 °F) -30 to +20 °C (-22 to 68 °F)
HYDRAULIC SYSTEM	160 (42.2)	Ambra-HITECH 46	ISO VG 46, DIN 51524 Part. 1 e 2, QFH583/HD	–	-20 to +50 °C (-4 to 122 °F)
AXLES	Front. 36 (9.5) Rear. 40 (10.5)	Ambra-TX Fluid	API GL5 QFH 584 TR	85W-90	-20 to +50 °C (-4 to 122 °F)
FUEL TANK	325 (86)	–	–	–	–
GREASE FITTINGS	–	Ambra-MG-2	QFH 585 GR, NLG12	–	-40 to +50 °C (-40 to 122 °F)
AIR CONDITIONER COMPRESSOR	0.2 (0.05)	L BAR 134	–	–	–

Oil quantities indicated are those required for periodical changes following the draining and filling procedures indicated in detail for each group.

*In the event engine oil with "CH4" classification is used, the change interval can be prolonged to 500 hours providing that the outer temperature of operation does not exceed 38 °C (100 °F) and that the percentage of sulphur in the fuel does not exceed 0.5 %.

In the event of really heavy duty conditions, reduce the greasing intervals.

UNITS OF MEASURE

Units of measure used in this manual are those adopted by the International System which replace the units previously used by the M.K.S. system.

Force: N (decanewton)

Pressure: bar, replaces kg/cm²

Torque: daNm (decanewton x meter)

The following tables is to be used to convert units of measure:

	multiply	by	to obtain
Force	kg	9.807	daN
Pressure	kg/cm ²	0.9807	bar
Torque	kgm	9.807	daNm

Note — For current service use, the following equivalences can be considered to be valid: kg = daN; kg/cm² = bar; kgm = daNm.

CLASSIFICATION OF STANDARD COMPONENTS TO DETERMINE THE TIGHTENING TORQUES

Note — In case, in the different sections, the tightening torque is not listed, refer to the table "TIGHTENING TORQUES", only after identifying exactly the component.

The latter is identified by a coded eight digit number, allowing a complete description of the item.

Example:

1 / a b c d e / f g

1 - Standard index digit

It is always represented by the digit 1. This number indicates that the item can be fabricated in a number of versions differing for material and coating.

a - b - c - d - e - Standard base digits

It is a number always composed of five digits identifying dimensional specifications of the item.

f - Material index digit

This digit indicates the material used for a defined item. Its meaning is indicated in the table that follows.

g - Coating index digit

It indicates the coating applied to a defined item.

Material index (f)	Resistance class and material					
	FIAT	UNI	DIN	SAE	BSI	BNA
0	4.8	4D - 4S - 4A		1	A	42
1	5.8	5S - 6S		3	P	56
2	8.8	8G		5	T	80
3	10.9	100	10K	8	V	100
4	Brass	Brass	Messing	Brass	Brass	Laiton
5	Aluminium	Aluminium	Aluminium	Aluminium	Aluminium	Aluminium
6	Copper	Copper	Kupfer	Copper	Copper	Cuivre
7	Blank for other metallic materials					

WARNING

- Lubricate all hardware until 24 dia., with engine oil. Use grease for larger diameters.
- Tolerance on torque: $\pm 5\%$.
- Resistance classes R80, R100, R120 must be understood as follows:

8.8	replaces	R80	for screws
10.9	"	R100	
12.9	"	R120	
8	replaces	R50	for nuts
10	"	R80	
12	"	R100	

CDT = cadmed; FOSF = phosphated;
ZNT = galvanised.

TORQUE TABLES

If correct torque is not specifically indicated in the relevant pages, refer to the following tables.

NUTS (ZNT)					SCREWS (ZNT/DEIDR)		
Strength grade: 10					Strength grade: 10.9		
Diameter and pitch mm	Normal daNm	Low type daNm	With polyamide ring		Diameter and pitch mm	Normal ZNT daNm	Self-locking ZNT daNm
			Normal daNm	Low type daNm			
M6 x 1	1.3	1.2	-	-	M6 x 1	1.3	-
M8 x 1.25	3.2	2.6	3.9	3.2	M8 x 1.25	1.3	3.5
M10 x 1.25	7.2	5.2	8.2	6.2	M10 x 1.25	7.1	7.9
M10 x 1.5	6.5	5	7.7	6	M10 x 1.5	6.5	7
M12 x 1.25	13	8.7	14.5	10.2	M12 x 1.25	12.7	13.9
M12 x 1.75	11	8.1	12.9	9.6	M12 x 1.75	11	12
M14 x 1.5	19.5	13	21.6	15	M14 x 1.5	20	22
M14 x 2	18	12.5	20	14.6	M14 x 2	18	19
M16 x 1.5	30	17	34	20	M16 x 1.5	30	33
M16 x 2	-	-	-	-	M16 x 2	-	-
M18 x 1.5	45	25	50	29	M18 x 1.5	45	48
M18 x 2.5	-	-	-	-	M18 x 2.5	-	-
M20 x 1.5	60	30.5	64.5	35	M20 x 1.5	60	65
M20 x 2.5	-	-	-	-	M20 x 2.5	-	-
M22 x 1.5	80	41	-	-	M22 x 1.5	80	90
M22 x 2.5	-	-	-	-	M22 x 2.5	-	-
M24 x 2	100	47	108	52.5	M24 x 2	100	110
M24 x 3	-	-	-	-	M24 x 3	-	-
M27 x 2	95	40.1	-	-	M27 x 2	100	-
M30 x 2	130	49.4	-	-	M30 x 2	140	-
M33 x 2	170	-	-	-	M33 x 2	190	-
M36 x 3	220	-	-	-	M36 x 3	240	-


SECTION 1

ENGINE

TABLE OF CONTENTS

PARAGRAPH	SUBJECT	PAGE
1.1	IDENTIFICATION DATA	1-1
1.2	GENERAL SPECIFICATATIONS OF ENGINE SERIES "C"	1-3
1.3	ENGINE SUPPORTS	1-6
1.4	COOLING SYSTEM (FAN DRIVE SYSTEM)	1-7
1.4.1	Cooling system hydraulic motors	1-8
1.4.2	Fan hydraulic system pump	1-9
1.4.3	Fan hydraulic control block	1-10

1.1 IDENTIFICATION DATA

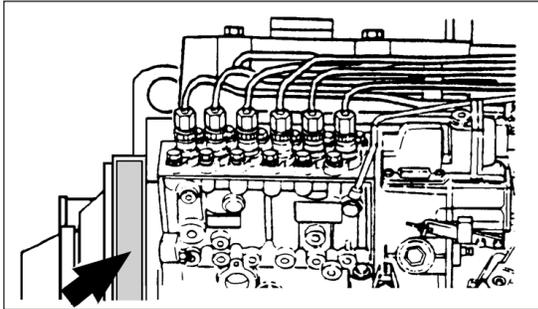

Data plates of series C engine

The engine identification plate provides specific information for your engine.

Note — *the Engine Data plate must not be replaced without approval by Cummins Engine Company Inc.*

 Cummins Engine Company Inc. Box 3005 Columbia, Indiana 47202-3005	C.I.D./L.	CPL	Engine Serial No.
	Family		Cust. Spec.
● WARNING injury may result and warranty is voided if fuel raten or rpm or altitudes exceed published maximum valures for this model and application.	Low Idle RPM		Engine Model
	Valve lash cold	int.	Exh. Fuel rate at rated HP mm³/st
Date of Mfg	Firing Order		Timing-TDC
Made in Great Britain by Cummins Engine Co. Ltd. 3931416	Rated HP/KW	at	RPM

Fig. 1-1

Data plate of fuel injection pump

The data plate for fuel injection pump is located on one side of the injection pump. It provides information relative to the calibration of the pump.

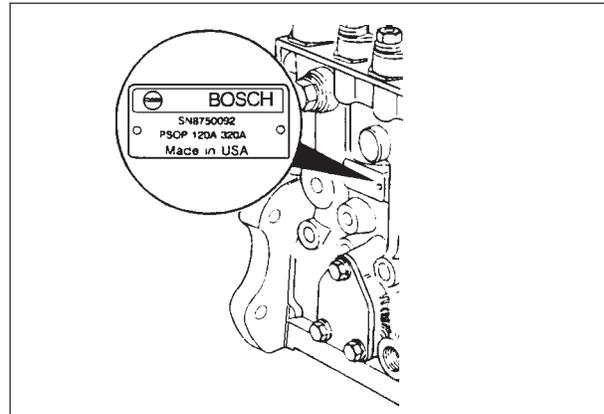


Fig. 1-2

The data plate for Bosch fuel injection pump includes:

1. Pump serial number
2. 10 digit Bosch number
3. Bosch description code

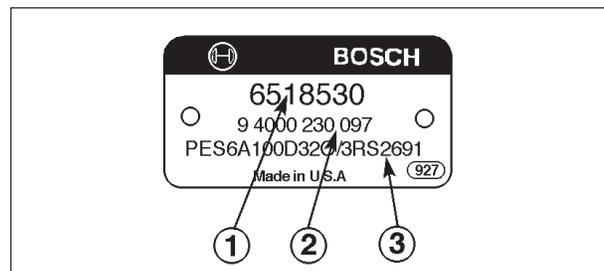


Fig. 1-3

The Cummins ordering number for the pump-governor combination is indicated on the governor plate.

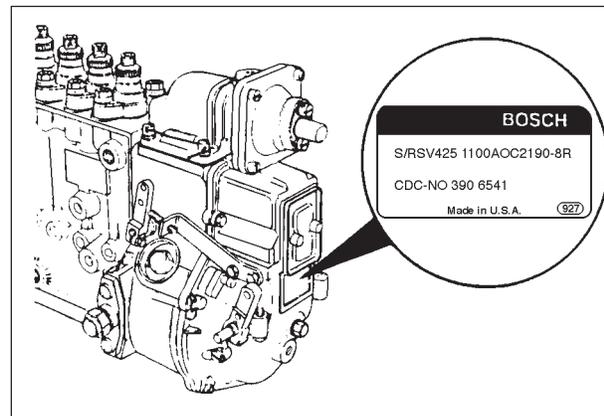


Fig. 1-4

The Bosch governor plate includes:

1. Bosch governor description code
2. Cummins pump ordering number

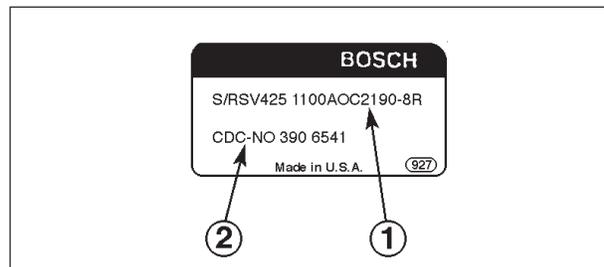


Fig. 1-5

1.2 GENERAL SPECIFICATATIONS OF ENGINE SERIES "C"

Engine main data

Maker			CUMMINS
Model			6CTAA8.3
Type			6 Cyl-in line-turbocharge-AAC
Displacement		cm ³	8268
Cylinder	Number		6
	Bore x Stroke	mm x mm	114 x 135
Mass (water + oil)		kg	617
Compression Ratio			18.0 : 1
Direction of Rotation (View from Front)			Clockwise
Gross Power @ Rated Speed		kW @ rpm	179 @ 2200
Peak Power @ Speed		kW @ rpm	192 @ 2000
Torque @ Low Idle		Nm @ rpm	678 @ 850
Net Flywheel Power	SAE J1349	kW (CV)	167
	DIN 6270	kW (CV)	167
Net Flywheel Power	ISO 9249	kW (CV)	167
	CEE 80/1269	kW (CV)	167
Rated Speed		rpm	2200
High Idle Speed		rpm	2460
Max Gross Torque @ speed		Nm @ rpm	1146 @ 1400
Fuel Consumption	max torque	l/h (g/(kWh))	40.7 (205)
	at max power	l/h (g/(kWh))	51.2 (226)
Max angular position	longitudinal	deg	40
	transversal	deg	45
Min Required Air Flow @ Rated Power		kg/min	23
Max Intake air restriction		mmH ₂ O	381
Exhaust Gas Flow @ Rated Power		l/s	775
Max Exhaust Back Pressure		mmHg	76
PTO			SAE B - 2 bolt - 13 T

(Cont.) Engine main data

Fuel Pump	Maker		Bosch
	Type		3938371
	Model		
	Injection advance before TDC	deg	10.5
	Injection order		1 5 3 6 2 4
	Fuel Filtration		
Lubrification	Type		Pushed
	Filtration		Full flow
Oil pressure	At idle speed (minimum allowed)	bar	0.69
	At rated speed (min.allowed)	bar	2
Back pressure opening the oil filter by-pass valve		bar	1.68
Oil flow at rated speed (minus the flow through pressure relief)		lt/min (USG/min)	106.8 (28 at 21)
Oil temperature at rated speed		°C (°F)	99/126 (210 at 259)
Oil temperature thermostat	Fully open (oil through heat exchanger)	°C (°F)	116 (241)
	Closed (part of the oil by-passes the heat exchanger)	°C (°F)	104 (219)
Oil sump capacity		l (US/gal)	18 (4,7)
Valve Clearance	Intake	mm	0.30
	Exhaust	mm	0.60
Emission (ISO 8178)	HC	g/(kW*h)	0.21
	CO	g/(kW*h)	0.653
	NO _x	g/(kW*h)	5.701
	Particulate	g/(kW*h)	0.174
Free Acceleration Smoke		HSU	
Governed Speeds (50 h break-in)	Low idle	rpm	850
	High idle	rpm	2460
	Low idle with steer relief press	rpm	840
	Transmission Stall	rpm	2180
	Implement Stall	rpm	2320
	Full Stall	rpm	1830

(Cont.) Engine main data

Water Pump Flow (@ Press Head 2.8 bar)		l/min	344 @ 2200 rpm
Coolant flow (thermostats fully open, engine speed 2000 rpm)		l (USG)	258 (68)
Coolant capacity		l (USG)	10.9 (2,9)
Fan	Maker		ABB - SV
	Type		Aluminium
	Drive Ratio (Engine : Fan)		Hydraulic fan (0.76 : 1 max)
	Diameter	mm	710
	Blades (number - angle)	°C	6/27
	Blades Sizes	mm	
Air Cleaner	Maker		Donaldson
	Model		FTG15 - 0029
	Diameter	mm	381
	Type		Dry, 2 stage w/safety element
	Rated Capacity	m ³ /min (mbar)	25.5 (25)
	Max Airflow Restriction	mbar	30
Muffler	Maker		Donaldson
	Type		M 120512
	Dimensions	mm	308
	Max Back Pressure	mbar	96
	Exhaust pipe inside diameter	mm	98

1.3 ENGINE SUPPORTS

The engine is mounted on the rear module of the frame in four points: frontally, by the transmission-torque converter group, that in turn, is supported by brackets

bolted on elastic pads and on the rear, by plates bolted to the engine and supported by elastic pads as well.

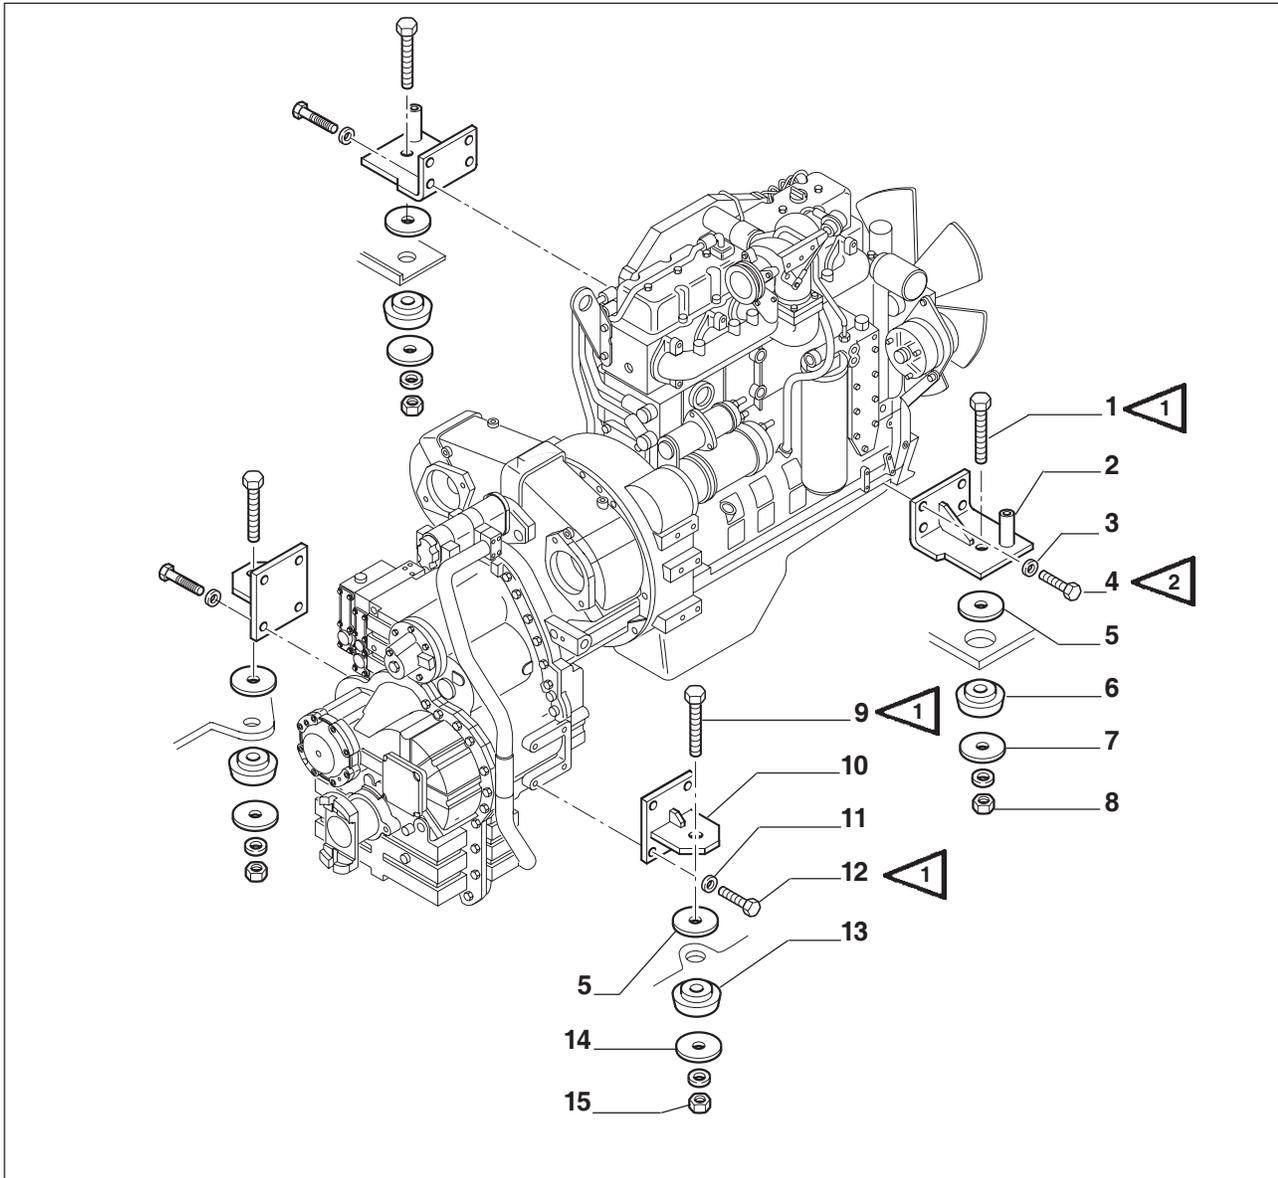


Fig. 1-6 Engine supports

Note -   224 Nm

  110 Nm

1. Screw m16x2x110 - 2. Left rear support. - 3. Washer - 4. Screw M12x1.75x40 - 5. Upper pad. - 6. Lower pad. - 7. Plate - 8. Nut - 9. Screw m16x2x110 - 10. Left front support . - 11. Washer - 12. Screw M 16x2x40 - 13.Lower pad - 14. Plate- 15. Nut.

1.4 COOLING SYSTEM (FAN DRIVE SYSTEM)

General description

The configuration of the engine cooling system is as follows:

A hydraulic pump **1** is installed on the engine (fuel pump side) powers by two hydraulic motors driving, respectively, the coolant radiator fan and the after-cooler fan. A controlling valve is located between the two circuits with a dual function: modulating the oil flow to the hydraulic motors, depending upon the speed of the engine and invert the rotation direction of the radiator fan, upon the command by the button located in the cab.

The oil, once it is sucked by pump **1** is forwarded to a controlling valve block **2** and through solenoid valve **3**, reaches two-direction hydraulic motor **4** driving the main fan. Also through solenoid valve **3**, oil under pressure reaches the second hydraulic motor **5** driving the after-cooler fan, then it turns to the discharge.

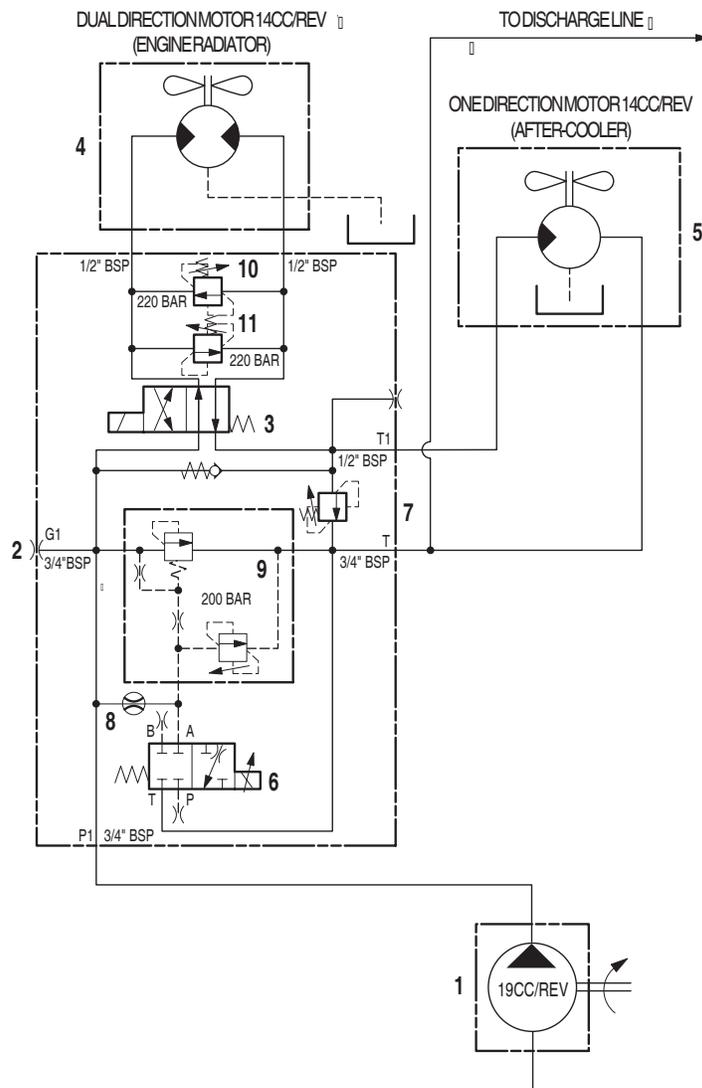



Fig. 1-7

1. Pump - 2. Fan hydraulic control block - 3. Solenoid valve - 4. Dual direction hydraulic motor - 5. One direction hydraulic motor - 6. Proportional valve - 7. Safety valve - 8. Orifice (2 mm) - 9. Safety valve - 10. Safety valve - 11. Safety valve.

1.4.1 COOLING SYSTEM HYDRAULIC MOTORS

DUAL DIRECTION HYDRAULIC MOTOR

Radiator valve

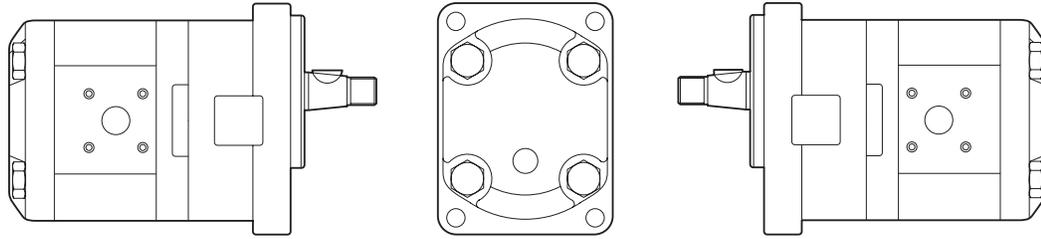


INLET Pmax (constant)	210 bar
INLET Pmax (intermittent)	240 bar
INLET Pmin (constant)	25 bar
INLET Pmin (intermittent)	25 bar
OUTLET Pmax (constant)	210 bar
DISCHARGE Pmax	5 bar
MAX SPEED	4000 rpm
MIN SPEED	500 rpm

Displacement: 14 cu cm/rev
 Rotation: dual direction

Fig. 1-8

ONE DIRECTION HYDRAULIC MOTOR

After-cooler fan

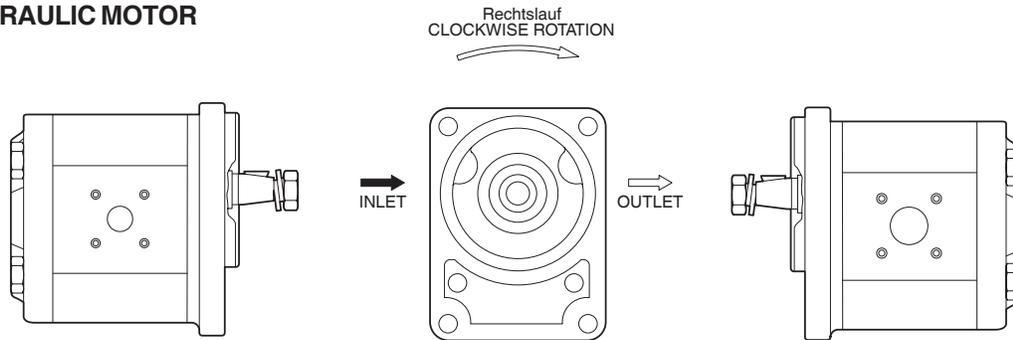

INLET Pmax (constant)	276 bar
INLET Pmax (intermittent)	300 bar
INLET Pmin (constant)	25 bar
INLET Pmin (intermittent)	25 bar
OUTLET Pmax (constant)	10.5 bar
DISCHARGE Pmax	N.A.
MAX SPEED	3500 rpm
MIN SPEED	500 rpm

Displacement: 14 cu cm/rev
 Rotation: leftward / anticlockwise

Fig. 1-9

1.4.2 FAN HYDRAULIC SYSTEM PUMP

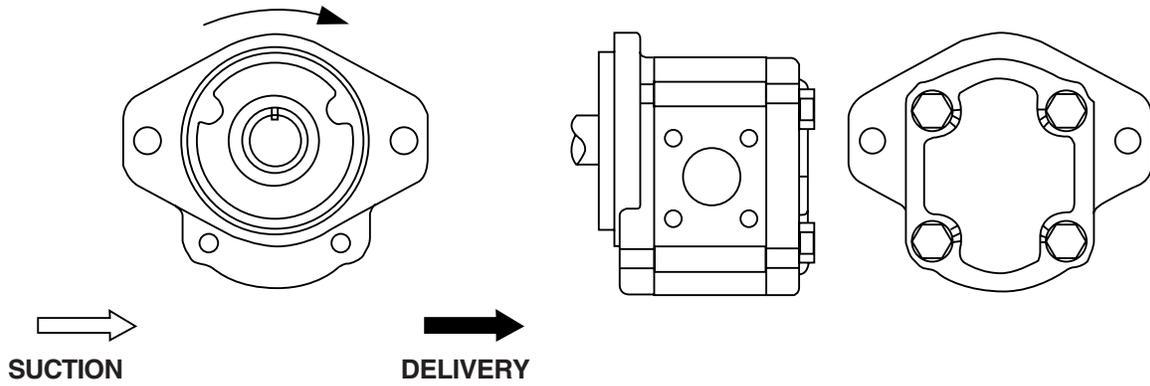


Fig. 1-10

TYPE: gear

DISPLACEMENT: 19 cu cm/rev

REVOLUTION: clockwise

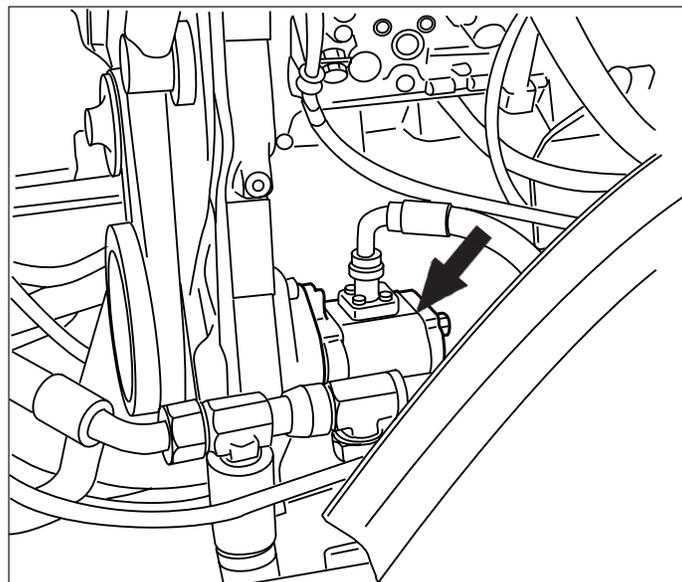


Fig. 1-11 Fan hydraulic system pump Installation on machine