

# U80 Loader Landscaper

## Service Manual 6-81730

### Table of Contents

Description	Section No.	Publication Form No.
<b>General</b>		<b>Tab 1</b>
Section Index - General		6-81750
Standard Torque Specifications	1001	6-80470
Fluids and Lubricants	1002	6-81760
Metric Conversion Chart	1003	6-80690
<b>Engine</b>		<b>Tab 2</b>
Section Index - Engine		6-81770
Engine and Radiator Removal and Installation	2000	6-81780
Stall Tests	2002	6-81790
Specification Details 4-390 Diesel Engine	2402	5-2100
After Cooler	2411	5-2110
Cylinder Head	2415	5-2120
Cylinder Block	2425	5-2130
Lubrication System	2445	5-2140
Balancer	2447	5-2150
Cooling System	2455	5-2160
Turbocharger	2465	5-2170
HX25W and HX30W Turbocharger	2470	5-2180
<b>Fuel System</b>		<b>Tab 3</b>
Section Index - Fuel System		6-81800
Fuel System and Filters	3410	5-2190
Fuel Injectors	3413	5-2200
CAV Fuel Injection Pump	3414	5-2210
BOSCH Model VE Fuel Injection Pump	3415	5-2220
BOSCH Model A Fuel Injection Pump	3416	5-2230
<b>Electrical</b>		<b>Tab 4</b>
Section Index - Electrical		6-81810
Removal and Installation of Electrical Components	4001	6-81820
Electrical Specifications and Troubleshooting	4002	6-81830
Batteries	4003	6-81270
Starter Motor - Denso	4004	6-81840
Instrument Cluster	4005	6-81850
Alternator	4007	6-81860

## Table of Contents

Description	Section No.	Publication Form No.
<b>Steering</b> <span style="float: right;"><b>Tab 5</b></span>		
Section Index - Steering		6-81870
Removal and Installation of Steering Components	5001	6-81880
Steering Specifications, Pressure Checks and Troubleshooting	5002	6-81890
Steering Control Valve	5003	6-81900
Steering Cylinders	5004	6-81910
Front Axle - Two Wheel Drive	5005	6-81920
Front Axle - Four Wheel Drive	5006	6-81930
<b>Power Train</b> <span style="float: right;"><b>Tab 6</b></span>		
Section Index - Power Train		6-81940
Removal and Installation of Power Train Components	6001	6-81950
Standard Transmission Specifications, Pressure Checks and Troubleshooting	6002	6-81960
Wheels and Tires	6003	6-81970
Rear Axle and Planetaries	6004	6-81980
Standard Transmission	6007	5-1000
<b>Brakes</b> <span style="float: right;"><b>Tab 7</b></span>		
Section Index - Brakes		5-1010
Removal and Installation of Brake Components	7001	5-1020
Master Cylinder	7003	5-1030
<b>Hydraulics</b> <span style="float: right;"><b>Tab 8</b></span>		
Section Index - Hydraulics		5-1040
Removal and Installation of Hydraulic Components	8001	5-1050
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-1060
Cleaning the Hydraulic System	8003	5-1070
Hydraulic Pump	8004	5-1080
Loader Control Valve	8005	5-1090
Cylinders	8006	5-1100
Three Point Hitch Control Valve	8007	5-1110
Accumulator for Machines with Optional Ride Control	8009	5-1120
Solenoid Valve for Machines with Optional Ride Control	8010	5-1130
Flow Control Valve	8011	5-1140
Lock Valve	8012	5-1150
flow Control Priority Valve	8013	5-1160
<b>Mounted Equipment</b> <span style="float: right;"><b>Tab 9</b></span>		
Section Index - Mounted Equipment		5-1170
Pedals and Levers	9001	5-1180
Air Conditioning Troubleshooting For Systems With R-134a Refrigerant	9002	5-1190
Air Conditioning System Service For Systems With R-134a Refrigerant	9004	5-1200
Air Conditioning Components Service For Systems With R-134a Refrigerant	9005	5-1210
Loader	9006	5-1220
ROPS Cab and Canopy	9007	5-1230
Pedestal Seat	9009	5-1240

Sample of manual. Download All 1168 pages at:

<https://www.arepairmanual.com/downloads/new-holland-u80-loader-landscaper-service-repair-manual/>

# Table of Contents

Description	Section No.	Publication Form No.
<b>Schematics</b>		
<b>Electric Schematic and Hydraulic Schematic Foldout</b>	<b>In Rear Pocket</b>	<b>5-1250</b>

**NOTE:** CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.



# SECTION INDEX

## GENERAL

<b>Section Title</b>	<b>Section Number</b>
Standard Torque Specifications .....	1001
Fluid and Lubricants .....	1002
Metric Conversion Chart .....	1003



# Section 1001

## GENERAL TORQUE SPECIFICATIONS

## TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE .....	3
TORQUE SPECIFICATIONS - METRIC HARDWARE .....	4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS .....	5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS .....	6

## TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

<b>Grade 5 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983

<b>Grade 8 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827

**NOTE:** Use thick nuts with Grade 8 bolts.

## TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used.

<b>Grade 8.8 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
M4	24 to 36	3 to 4
M5	60 to 72	7 to 8
M6	96 to 108	11 to 12
M8	228 to 276	26 to 31
M10	456 to 540	52 to 61
Size	Pound-Feet	Newton metres
M12	66 to 79	90 to 107
M14	106 to 127	144 to 172
M16	160 to 200	217 to 271
M20	320 to 380	434 to 515
M24	500 to 600	675 to 815
M30	920 to 1100	1250 to 1500
M36	1600 to 1950	2175 to 2600

<b>Grade 10.9 Bolts, Nuts, and Studs</b>		
		
Size	Pound-Inches	Newton metres
M4	36 to 48	4 to 5
M5	84 to 96	9 to 11
M6	132 to 156	15 to 18
M8	324 to 384	37 to 43
Size	Pound-Feet	Newton metres
M10	54 to 64	73 to 87
M12	93 to 112	125 to 150
M14	149 to 179	200 to 245
M16	230 to 280	310 to 380
M20	450 to 540	610 to 730
M24	780 to 940	1050 to 1275
M30	1470 to 1770	2000 to 2400
M36	2580 to 3090	3500 to 4200

### Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

## TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

<b>37 Degree Flare Fitting</b>			
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
1/4 inch 6.4 mm	7/16-20	72 to 144	8 to 16
5/16 inch 7.9 mm	1/2-20	96 to 192	11 to 22
3/8 inch 9.5 mm	9/16-18	120 to 300	14 to 34
1/2 inch 12.7 mm	3/4-16	180 to 504	20 to 57
5/8 inch 15.9 mm	7/8-14	300 to 696	34 to 79
Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
3/4 inch 19.0 mm	1-1/16-12	40 to 80	54 to 108
7/8 inch 22.2 mm	1-3/16-12	60 to 100	81 to 135
1.0 inch 25.4 mm	1-5/16-12	75 to 117	102 to 158
1-1/4 inch 31.8 mm	1-5/8-12	125 to 165	169 to 223
1-1/2 inch 38.1 mm	1-7/8-12	210 to 250	285 to 338

<b>Straight Threads with O-ring</b>			
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres
1/4 inch 6.4 mm	7/16-20	144 to 228	16 to 26
5/16 inch 7.9 mm	1/2-20	192 to 300	22 to 34
3/8 inch 9.5 mm	9/16-18	300 to 480	34 to 54
1/2 inch 12.7 mm	3/4-16	540 to 804	57 to 91
Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
5/8 inch 15.9 mm	7/8-14	58 to 92	79 to 124
3/4 inch 19.0 mm	1-1/16-12	80 to 128	108 to 174
7/8 inch 22.2 mm	1-3/16-12	100 to 160	136 to 216
1.0 inch 25.4 mm	1-5/16-12	117 to 187	159 to 253
1-1/4 inch 31.8 mm	1-5/8-12	165 to 264	224 to 357
1-1/2 inch 38.1 mm	1-7/8-12	250 to 400	339 to 542

<b>Split Flange Mounting Bolts</b>		
Size	Pound- Inches	Newton metres
5/16-18	180 to 240	20 to 27
3/8-16	240 to 300	27 to 34
7/16-14	420 to 540	47 to 61
Size	Pound- Feet	Newton metres
1/2-13	55 to 65	74 to 88
5/8-11	140 to 150	190 to 203

## TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

O-ring Face Seal End					O-ring Boss End Fitting or Lock Nut		
Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Inches	Newton metres	Thread Size	Pound-Inches	Newton metres
-4	1/4 inch 6.4 mm	9/16-18	120 to 144	14 to 16	7/16-20	204 to 240	23 to 27
-6	3/8 inch 9.5 mm	11/16-16	216 to 240	24 to 27	9/16-18	300 to 360	34 to 41
-8	1/2 inch 12.7 mm	13/16-16	384 to 480	43 to 54	3/4-16	540 to 600	61 to 68
					Thread Size	Pound-Feet	Newton metres
-10	5/8 inch 15.9 mm	1-14	552 to 672	62 to 76	7/8-14	60 to 65	81 to 88
Nom. SAE Dash Size	Tube OD	Thread Size	Pound-Feet	Newton metres	1-1/16-12	85 to 90	115 to 122
					1-3/16-12	95 to 100	129 to 136
-12	3/4 inch 19.0 mm	1-3/16-12	65 to 80	90 to 110	1-5/16-12	115 to 125	156 to 169
-14	7/8 inch 22.2 mm	1-3/16-12	65 to 80	90 to 110	1-5/8-12	150 to 160	203 to 217
-16	1.0 inch 25.4 mm	1-7/16-12	92 to 105	125 to 140	1-7/8-12	190 to 200	258 to 271
-20	1-1/4 inch 31.8 mm	1-11/16-12	125 to 140	170 to 190			
-24	1-1/2 inch 38.1 mm	2-12	150 to 180	200 to 254			

# Section 1002

1002

## FLUID AND LUBRICANTS

## TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS .....	3
HYDRAULIC OIL TEMPERATURE CHART .....	4
TRANSMISSION OIL TEMPERATURE CHART .....	4
ENGINE OIL TEMPERATURE CHART .....	4
ENGINE OIL RECOMMENDATIONS .....	5
DIESEL FUEL SYSTEM .....	5
Fuel Storage .....	5
Specifications for Acceptable No. 2 Diesel Fuel .....	5

## CAPACITIES AND LUBRICANTS

### Engine Crankcase

Capacity with filter change .....	11 litres (11.6 U.S. quarts)
Specifications .....	New Holland AMBRA Mastergold HSP engine oil

### Fuel Tank

Capacity, usable .....	117 litres (31.0 U.S. gallons)
Optional tank .....	151 litres (40 U.S. gallons) usable
Specifications .....	See page 5

### Cooling System

Capacity with heater .....	16.5 litres (17.4 U.S. quarts)
Capacity without heater .....	15.8 litres (16.7 U.S. quarts)
Specifications .....	50% water and 50% ethylene glycol

### Hydraulic System

Total System .....	77 litres (20.3 U.S. gallons)
Capacity with filter change .....	55 litres (14.5 U.S. gallons)
Capacity without filter change .....	53 litres (14 U.S. gallons)
Specifications .....	New Holland AMBRA Master-Tran

### Transmission

#### Standard Transmission

##### 2 Wheel Drive

Total system capacity .....	18.5 litres (19.5 U.S. quarts)
Refill capacity with or without filter change .....	11.9 litres (12.6 U.S. quarts)
Type of Fluid .....	New Holland AMBRA Master-Tran

##### 4 Wheel Drive

Total system capacity .....	21.0 litres (22.2 U.S. quarts)
Refill capacity with or without filter change .....	14.4 litres (15.2 U.S. quarts)
Type of Fluid .....	New Holland AMBRA Master-Tran

### Front Drive Axle - 4 Wheel Drive


Capacity - center bowl .....	5.5 litres (5.8 U.S. quarts)
Capacity - each wheel end .....	0.7 litres (0.75 U.S. quarts)
Type of Fluid .....	New Holland AMBRA Master-Tran

### Rear Axle

Capacity - center bowl .....	14.0 litres (15 U.S. quarts)
Capacity - each wheel end .....	1.5 litres (1.6 U.S. quarts)
Type of Fluid .....	New Holland AMBRA Master-Tran

Brake Master Cylinder .....(Brake fluid supplied by hydraulic reservoir, see Hydraulic System.)

# ENGINE OIL TEMPERATURE CHART

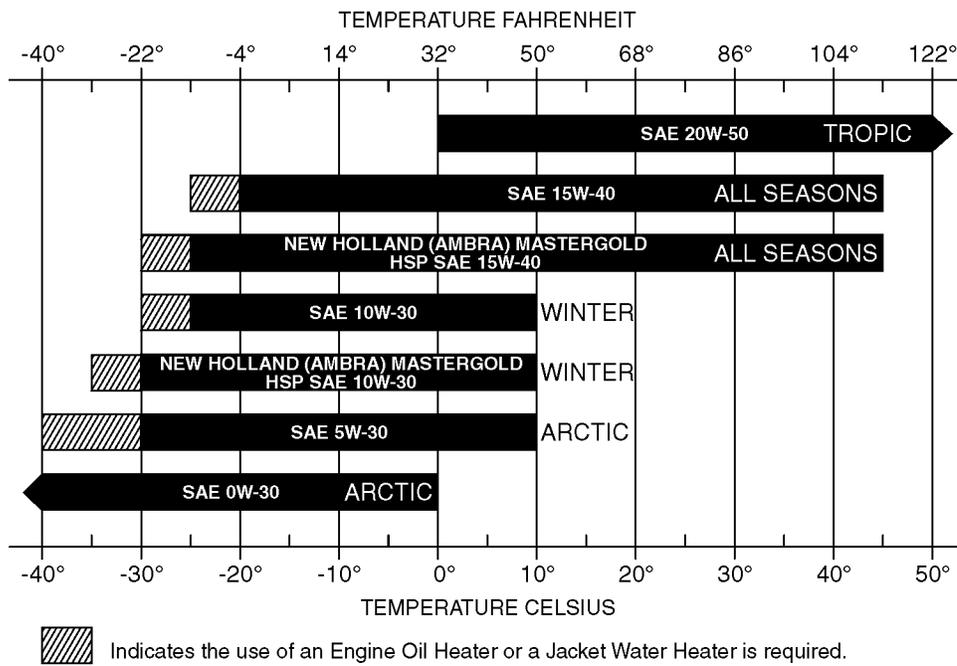

BC04F170

## ENGINE OIL RECOMMENDATIONS

New Holland AMBRA Engine oil is recommended for use in your New Holland engine. New Holland AMBRA Engine Oil will lubricate your engine correctly under all operating conditions.

If New Holland AMBRA Multi-Viscosity or Single Grade Engine Oil is not available, use only oil meeting API engine oil service category CH.



**NOTE:** Do not put performance additives or other oil additive products in the engine crankcase. The oil change intervals given in this manual are according to tests with New Holland lubricants.

## DIESEL FUEL SYSTEM

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No. 1 and No. 2 diesel fuels is temporarily permitted. See the following Note.

**NOTE:** See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel lowers below the cloud point (wax appearance point), wax crystals in the fuel will restrict the fuel filter and cause the engine to lose power or not start.

The diesel fuel used in this machine must meet the specifications as shown below in, "Specifications for Acceptable No. 2 Diesel Fuel", or "Specification D975-81" of the American Society for Testing and Materials.

### Specifications for Acceptable No. 2 Diesel Fuel

API gravity, minimum .....	34
Flash point, minimum .....	60°C (140°F)
Cloud point (wax appearance point), maximum .....	-20°C (-5°F) See Note above
Pour point, maximum .....	-26°C (-15°F) See Note above
Distillation temperature, 90% point .....	282 to 338°C (540 to 640°F)
Viscosity, at 38°C (100°F) Centistokes .....	2.0 to 4.3
Cetane number, minimum .....	43 (45 to 55 for winter or high altitudes)
Water and sediment, by volume, maximum .....	0.05%

### Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Fill the fuel tank at the end of the daily operating period to prevent condensation in the fuel tank.

**NOTES**

# Section 1003

1003

## METRIC CONVERSION CHART

## TABLE OF CONTENTS

CONVERSION FACTORS .....	3
Metric to U.S. ....	3
U.S. to Metric .....	4

## CONVERSION FACTORS

### Metric to U.S.

	<u>MULTIPLY</u>	<u>BY</u>	<u>TO OBTAIN</u>
<b>Area:</b>	sq. meter hectare	10.763 91 2.471 05	square foot acre
<b>Force:</b>	newton newton	3.596 942 0.224 809	ounce force pound force
<b>Length:</b>	millimeter meter kilometer	0.039 370 3.280 840 0.621 371	inch foot mile
<b>Mass:</b>	kilogram	2.204 622	pound
<b>Mass/Area:</b>	kilogram/hectare	0.000 466	ton/acre
<b>Mass/Energy:</b>	gr/kW/hr.	0.001 644	lbs/hp/hr.
<b>Mass/Volume:</b>	kg/cubic meter	1.685 555	lb/cubic yd.
<b>Power:</b>	kilowatt	1.341 02	horsepower
<b>Pressure:</b>	kilopascal bar	0.145 038 14.50385	lb/sq. inch lb/sq. inch
<b>Temperature:</b>	degree C	1.8 x C +32	degree F
<b>Torque:</b>	newton meter newton meter	8.850 748 0.737 562	lb/inch lb/foot
<b>Velocity:</b>	kilometer/hr.	0.621 371	miles/hr.
<b>Volume:</b>	cubic centimeter cubic meter cubic meter milliliter litre litre litre litre	0.061 024 35.314 66 1.307 950 0.033 814 1.056 814 0.879 877 0.264 172 0.219 969	cubic inch cubic foot cubic yd. ounce (US fluid) quart (US liquid) quart (Imperial) gallon (US liquid) gallon (Imperial)
<b>Volume/Time:</b>	litre/min. litre/min.	0.264 172 0.219 969	gallon/min. (US liquid) gallon/min. (Imperial)

## U.S. to Metric

	<u>MULTIPLY</u>	<u>BY</u>	<u>TO OBTAIN</u>
<b>Area:</b>	square foot acre	0.092 903 0.404 686	square meter hectare
<b>Force:</b>	ounce force pound force	0.278 014 4.448 222	newton newton
<b>Length:</b>	inch foot mile	25.4 * 0.304 8 * 1.609 344 *	millimeter meter kilometer
<b>Mass:</b>	pound ounce	0.453 592 28.35	kilogram gram
<b>Mass/Area:</b>	ton/acre	2241 702	kilogram/hectare
<b>Mass/Energy:</b>	lb/hp/hr	608.277 4	gr/kW/hr
<b>Mass/Volume:</b>	lb/cubic yd.	0.593 276	kg/cubic meter
<b>Power:</b>	horsepower	0.745 700	kilowatt
<b>Pressure:</b>	lbs/sq. in. lbs/sq. in. lbs/sq. in.	6.894 757 0.069 0.070 303	kilopascal bar kg/sq. cm
<b>Temperature:</b>	degree F	1.8 F - 32	degree C
<b>Torque:</b>	pound/inch pound/foot	0.112 985 1.355 818	newton meter newton meter
<b>Velocity:</b>	miles/hr.	1.609 344 *	kilometer/hr.
<b>Volume:</b>	cubic inch cubic foot cubic yard ounce (US fluid) quart (US liquid) quart (Imperial) gallon (US) gallons (Imperial)	16.387 06 0.028 317 0.764.555 29.573 53 0.946 353 1.136 523 3.785 412 4.546 092	cubic centimeter cubic meter cubic meter milliliter litre litre litre litre
<b>Volume/Time:</b>	gallon/min.	3.785 412	litre/min.

\* = exact

# SECTION INDEX

## ENGINES

<b>Section Title</b>	<b>Section Number</b>
Engine and Radiator Removal and Installation . . . . .	2000
Stall Tests . . . . .	2002
Specification Details 4-390 Diesel Engine . . . . .	2402
Aftercooler . . . . .	2411
Cylinder Head and Valve Train . . . . .	2415
Cylinder Block, Crankshaft, Pistons, Rods, Sleeves, Camshaft, Bearings, Seals and Flywheel . . . . .	2425
Lubrication System, Oil Pan, Oil Pump, Oil Cooler and Oil Filter Housing . . . . .	2445
Balancer . . . . .	2447
Cooling System, Thermostat, Water Pump, Fan Pulley and Belt Tensioner . . . . .	2455
Turbocharger . . . . .	2465
HX25W and HX30W Turbocharger . . . . .	2470



# Section 2000

## ENGINE AND RADIATOR REMOVAL AND INSTALLATION

## TABLE OF CONTENTS

SPECIAL TOOLS .....	3
SPECIFICATIONS .....	3
RADIATOR REMOVAL .....	4
ENGINE REMOVAL .....	6
INSTALLING THE FRONT ENGINE SUPPORT .....	22

## SPECIAL TOOLS



CAS1690A

B430842

## SPECIFICATIONS

### ENGINE CRANKCASE

Capacity with filter change ..... 11 litres (11.6 U.S. quarts)

### FUEL TANK

Capacity ..... 115 litres (30.3 U.S. gallons)

Usable fuel ..... 112 litres (29.5 U.S. gallons)

Specifications ..... See the Operator's Manual

### COOLING SYSTEM

Capacity ..... 15.8 litres (16.7 U.S. quarts)

Specifications ..... 50% water and 50% ethylene glycol

### HYDRAULIC RESERVOIR REFILL

Total system ..... 70 litres (18.5 U.S. gallons)

Capacity with filter change ..... 49 litres (13 U.S. gallons)

Capacity without filter change ..... 47 litres (12.5 U.S. gallons)


Specifications ..... New Holland AMBRA Master-Tran

## RADIATOR REMOVAL

**IMPORTANT:** Put identification tags on all disconnected hoses and wires. Close disconnected hoses and fittings with caps and plugs to prevent hydraulic system contamination.

**NOTE:** The photos in this procedure may be different from your machine and are for reference only.

1. Park the machine on a level surface. Raise the loader and lock the support strut (1) to hold the loader. Stop the engine and apply the parking brake.

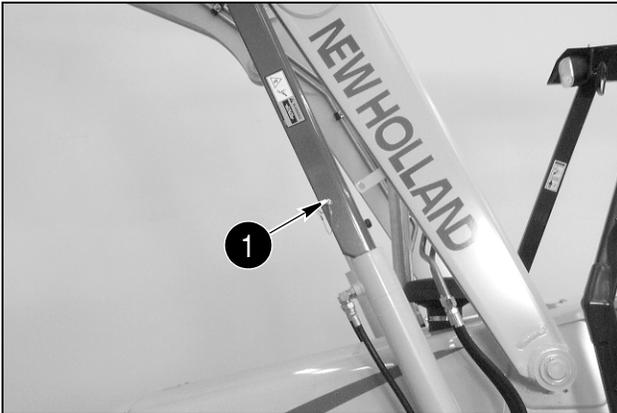

BD01H021


2. Remove the side panels from the machine.



BD01H023

3. Remove the hood from the machine.


4. Slowly remove the radiator cap. Install a hose on the drain valve and drain the radiator into a clean container that holds approximately 17 litres (18 U.S. quarts).

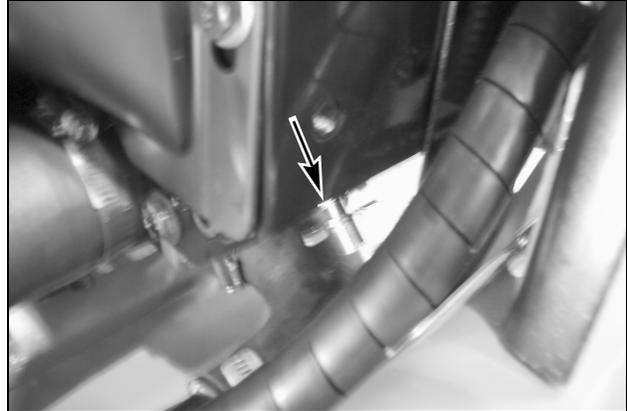

BD01B322

**NOTE:** During installation, fill the radiator and coolant reservoir completely. See page 3 for coolant specifications. Start and run the engine until the coolant is at operating temperature. Stop the engine and check for leakage. When the coolant is cold, check the coolant reservoir level. Add coolant as required.

5. Disconnect the overflow hose (1) from the radiator neck. Loosen the clamp and disconnect the upper radiator hose (2).

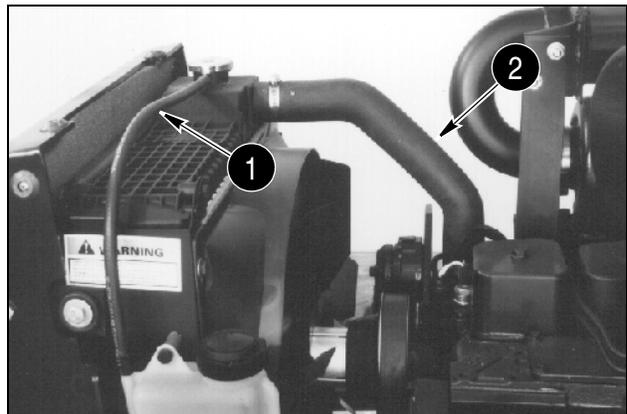


BD01D045

6. Loosen the clamp (1) and disconnect the lower radiator hose.



BD01H112

7. Remove the bolts (1), spacers, washers, and coolant reservoir from the machine.

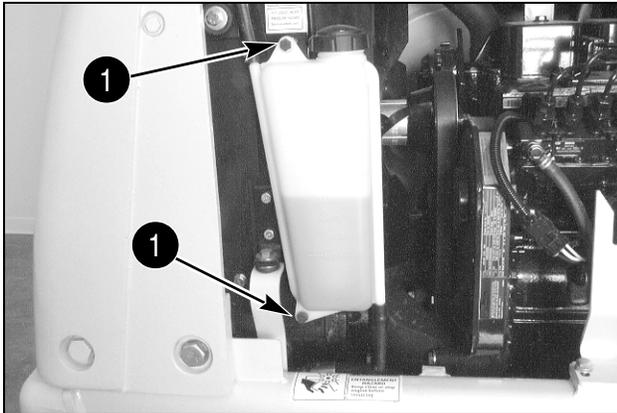

BD01H032

**NOTE:** During installation tighten the bolts to a torque of 5 to 6 Nm (44 to 53 pound-inches).

8. See the illustrations beginning on page 12 for the following steps.

9. Remove the hardware from the fan shroud. Move the fan shroud away from the radiator.

**NOTE:** During installation apply Dow 737 RTV sealant to the fan shroud to form a seal between the fan shroud and the radiator. During installation tighten the bolts to a torque of 5 to 6.2 Nm (45 to 55 pound-inches).

10. Remove the hardware that fastens the upper brackets to the radiator. Remove the hardware and the upper brackets from the radiator shroud.

11. Remove the screen from the radiator shroud.

12. Remove the radiator shroud from the machine.

13. Fasten lifting equipment to the oil cooler that will hold the oil cooler in place when the radiator is removed.

14. Remove the hardware that fastens the oil cooler and if equipped the fuel cooler to the radiator. Lift the radiator straight up and remove the radiator from the machine.


**NOTE:** Installation of the radiator is the reverse of removal.

## ENGINE REMOVAL

**IMPORTANT:** Put identification tags on all disconnected hoses and wires. Close disconnected hoses and fittings with caps and plugs to prevent hydraulic system contamination.

**NOTE:** The photos in this procedure may be different from your machine and are for reference only.

1. Park the machine on a level surface. Raise the loader and lock the support strut (1) to hold the loader. Stop the engine and apply the parking brake.

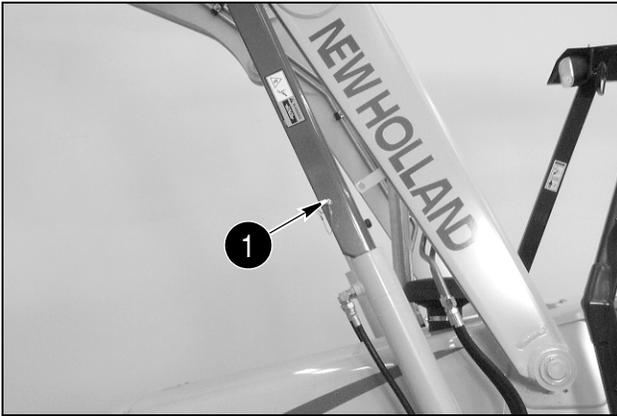

BD01H021


2. Remove the side panels from the machine.



BD01H023


3. Put the battery disconnect switch in the OFF position.

4. Remove the battery cover from the hydraulic reservoir. If the machine has only one battery, disconnect the negative battery cable from the battery.

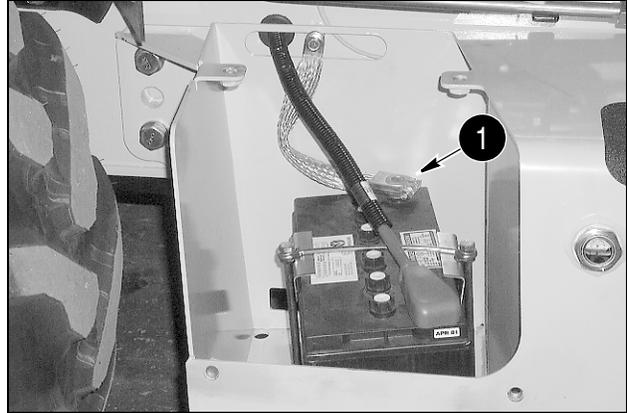

BD01H148

5. If the machine has two batteries, remove the terminal nuts (1). Remove the jumper cable (2) from the batteries. Remove the negative ground strap (3) from the battery.

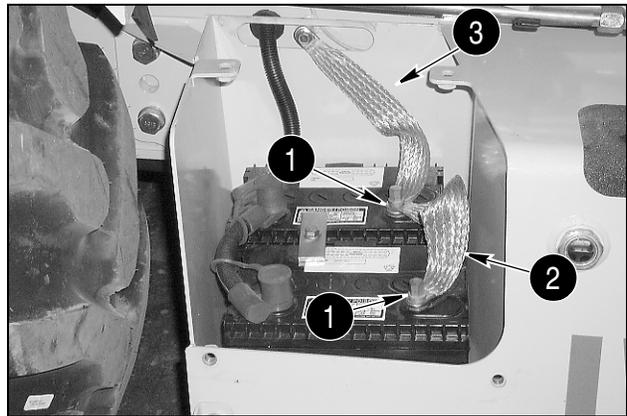

BD00H122

6. Drain the oil from the hydraulic reservoir.

**NOTE:** During installation fill the hydraulic reservoir with the oil specified in section 1002 of this manual.