

# HD-7 HD-10 HD-14

**crawler tractors**

## **SERVICE MANUAL complete**

## AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason **MOST ACCIDENTS CAN BE PREVENTED** by recognizing the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against an accident.  
The complete observance of one simple rule would prevent many thousand serious injuries each year.  
That rule is:

*Never attempt to clean, oil or adjust a machine while it is in motion.*

## WARNING

On machines having hydraulically, mechanically, and/or cable controlled equipment (such as shovels, loaders, dozers, scrapers, etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing. If it is necessary to have the hydraulically, mechanically, and/or cable controlled equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical devices used for controlling the equipment.

## COPYRIGHT BY FIATALLIS



All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

Sample of manual. Download All 338 pages at:

<https://www.arepairmanual.com/downloads/flat-allis-hd-7-hd-10-hd-14-crawler-tractors-service-repair-manual/>

# HD-7 HD-10 HD-14

**crawler tractors**

**SERVICE MANUAL  
complete**

Form 70626143 English



## **WARNING**

STUDY THE OPERATION AND MAINTENANCE INSTRUCTION MANUAL THROUGH BEFORE STARTING, OPERATING, MAINTAINING, FUELING OR SERVICING THIS MACHINE.



The Operation and Maintenance Instruction Manual provides the instructions and procedures for starting, operating, maintaining, fueling, shutdown and servicing that are necessary for properly conducting the procedures for overhaul of the related components outlined in this Service Manual.



This symbol is your safety alert sign. It MEANS ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.



Read and heed all safety instructions carrying the signal words WARNING and DANGER.



Machine mounted safety signs have been color coded yellow with black borders and lettering for warning and red with white borders and lettering for danger points.



# SAFETY RULES

## GENERAL

Study the Operation and Maintenance Instruction Manual before starting, operating, maintaining, fueling, or servicing machine.

Read and heed all machine-mounted safety signs before starting, operating, maintaining, fueling or servicing machine.

Machine-mounted safety signs have been color coded yellow with black border and lettering for **WARNING** and red with white border and lettering for **DANGER** points.

Never attempt to operate the machine or its tools from any position other than seated in the operator's seat. Keep head, body, limbs, hands and feet inside operator's compartment at all times to reduce exposure to hazards outside the operator's compartment.

Do not allow unauthorized personnel to operate service or maintain this machine.

Always check work area for dangerous features. The following are examples of dangerous work areas: slopes, over hangs, timber, demolitions, fire, high walls, drop off, back fills, rough terrain, ditches, ridges, excavations, heavy traffic, crowded parking, crowded maintenance and closed areas. Use extreme care when in areas such as these.

An operator must know the machine's capabilities. When working on slopes or near drop offs be alert to avoid loose or soft conditions that could cause sudden tipping or loss of control.

Do not jump on or off machine. Keep two hands and one foot, or two feet and one hand, in contact with steps grab rails and handles at all times.

Do not use controls or hoses as hand holds when climbing on or off machine. Hoses and controls are movable and do not provide a solid support. Controls also may be inadvertently moved causing accidental machine or equipment movement.

Keep operator's compartment, stepping points, grab-rails and handles clear of foreign objects, oil, grease, mud or snow accumulation to minimize the danger of slipping or stumbling. Clean mud or grease from shoes before attempting to mount or operate the machine.

Be careful of slippery conditions on stepping points, hand rails, and on the ground. Wear safety boots or shoes that have a high slip resistant sole material.

For your personal protection. Do not attempt to climb on or off machine while machine is in motion.

Never leave the machine unattended with the engine running.

Always lock up machine when leaving it unattended. Return keys to authorized security. Heed all shut down procedures of the Operation and Maintenance Instruction Manual. Always set the parking brake when leaving the machine for any reason.

Do not wear rings, wrist watches, jewelry, loose or hanging apparel, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can catch on moving parts. Wear proper safety equipment as authorized for the job. Examples: hard hats, safety shoes, heavy gloves, ear protectors, safety glasses or goggles, reflector vests, or respirators. Consult your employer for specific safety equipment requirements.

Do not carry loose objects in pockets that might fall unnoticed into open compartments. Do not use machine to carry loose objects by means other than attachments for carrying such objects.

**DO NOT CARRY RIDERS** unless the machine is equipped for carrying people to reduce personal exposure to being thrown off.

Do not operate machinery in a condition of extreme fatigue or illness. Be especially careful towards the end of the shift.

Roll Over Protective Structures are required on wheel loaders, dozer tractors, track type loaders, graders and scrapers by local or national requirements. **DO NOT** operate this machine without a Roll Over Protective Structure.

Do not operate a machine without a falling object protective structure (FOPS).

Do not operate this machine without a rear canopy screen when machine is equipped with rear mounted towing winch.

Seat belts are required to be provided with roll over protective structures or roll protection cabs by local or national regulations. Keep the safety belt fastened around you during operation.

Where noise exposure exceeds 90 dBA for 8 hours, wear authorized ear protective equipment per local or national requirements that apply.

Keep clutches and brakes on machine and attachments such as power control units, winches and master clutches adjusted according to Operation and Maintenance Instruction Manuals of the manufacturers at all times. **DO NOT** adjust machine with engine running except as specified.

Do not operate a machine with brakes out of adjustment. See the Operation and Maintenance Instruction Manual.

Move carefully when under, in or near machine or implements. Wear required protective equipment, such as hard hat, safety glasses, safety shoes, ear protectors.

To move a disabled machine, use a trailer or low boy truck if available. If towing is necessary, provide warning signals as required by local rules and regulations and follow Operation and Maintenance Instruction Manual recommendations. Load and unload on a level area that gives full support to the trailer wheels. Use ramps of adequate strength, low angle and proper height. Keep trailer bed clean of clay, oil and all materials that become slippery. Tie machine down securely to truck or trailer bed and block tracks (or wheels) as required by the carrier.

## SAFETY RULES

To prevent entrapment in cabs or mounted enclosures, observe and know the mechanics of alternate exit routes.

On machines equipped with suction radiator fans, be sure to periodically check all engine exhaust parts for leaks as exhaust gases are dangerous to the operator. Keep a vent open to outside air at all times when operating within a closed cab.

**STARTING FLUID IS FLAMMABLE.** Follow the recommendations as outlined in the Operation and Maintenance Instruction Manual and as marked on the containers. Store containers in cool, well-ventilated place secure from unauthorized personnel. **DO NOT PUNCTURE OR BURN CONTAINERS.**

Follow the recommendations of the manufacturer for storage and disposal.

Wire rope develops steel slivers. Use authorized protective equipment such as heavy gloves, safety glasses when handling.

### OPERATION

Before starting machine, check, adjust and lock the operator's seat for maximum comfort and control of the machine.

**DO NOT START OR OPERATE AN UNSAFE MACHINE.** Before working the machine, be sure that any unsafe condition has been satisfactorily remedied. Check brakes, steering and attachment controls before moving. Advise the proper maintenance authority of any malfunctioning part or system. Be sure all protective guards or panels are in place, and all safety devices provided are in place and in good operating condition.

Check instruments at start-up and frequently during operation.

Do not run the engine of this machine in closed areas without proper ventilation to remove deadly exhaust gases.

Be sure exposed personnel in the area of operation are clear of the machine before moving the machine or its attachments. **WALK COMPLETELY AROUND** the machine before mounting. Sound horn. Obey flag man, safety signals and signs.

Know the principles of cross steering of crawler tractors. Read section in Operation and Maintenance Instruction Manual on cross steering.

Keep engine exhaust system and exhaust manifolds clear of combustible material. Equip machine with screens and guards when working under conditions of flying combustible material.

If engine has a tendency to stall for any reason under load or idle, report this for adjustment to a proper maintenance authority immediately. Do not continue to operate machine until condition has been corrected.

Never use bucket as a man-lift.

Use recommended bucket for machine and material load ability and heaping characteristics of material, terrain, and other pertinent job conditions.

Avoid abrupt starts and stops when transporting a loaded bucket.

Inspect your seat belt webbing and hardware at least twice a year for signs of fraying, wear or other weakness that could lead to failure.

Use only designated towing or pulling attachment points. Use care in making attachment. Be sure pins and locks as provided are secure before pulling. Stay clear of draw bars, cables or chains under load.

When pulling or towing through a cable or chain, do not start suddenly at full throttle. Take up slack carefully. Guard against kinking chains or cables. Inspect carefully for flaws before using. Do not pull through a kinked chain or cable due to the high stresses and possibility of failure of the kinked area. Always wear heavy gloves when handling chain or cable.

Be sure cables are anchored and the anchor point is strong enough to handle the expected load. Keep exposed personnel clear of anchor point and cable or chain. **DO NOT PULL OR TOW UNLESS OPERATOR'S COMPARTMENT OF MACHINES INVOLVED ARE PROPERLY GUARDED AGAINST POTENTIAL CABLE OR CHAIN BACKLASH.**

During operation always carry ripper in full raised position when not in use and lowered to ground when parked.

When counterweights have been provided, do not work machine if they have been removed unless their equivalent weight has been replaced. See the Operation and Maintenance Instruction Manual.

When operating a machine know what clearances will be encountered, overhead doors, wires, pipes, aisles, roadways; also the weight limitations of ground, floor, and ramps.

Know bridge and culvert load limits and do not exceed them. Know machine's height, width, and weight. Use a signal person when clearance is close.

Be sure that the exact location of gas lines, utility lines, sewers, overhead and buried power lines, and other obstructions or hazards are known. Such locations should be precisely marked by the proper authorities to reduce the risk of accidents. Obtain shut-down or relocation of any such facilities before starting work, if necessary.

Be certain to comply with all local, state, and federal regulations regarding working in the vicinity of power lines.

When roading find out what conditions are likely to be met - clearances, congestion, type of surface, etc. Be aware of fog, smoke or dust element that obscure visibility.

When backing, always look to where the machine is to be moved. Be alert to the position of exposed personnel. **DO NOT OPERATE** if exposed personnel enter the immediate work area.

## SAFETY RULES

Never travel a machine on a job site, in a congested area, or around people without a signal person to guide the operator.

In darkness, check area of operation carefully before moving in with machine. Use all lights provided. Do not move into area of restricted visibility.

Maintain clear vision of all areas of travel or work. Keep cab windows clean and repaired. Carry blade low for maximum visibility while traveling. Obtain and use fan blast deflectors where tractors are used a pusher tractors in tandem.

Transport a loaded bucket with the bucket as far tipped back and in as low a position as possible for maximum visibility, stability, and safest transport of the machine. Carry it at a proper speed for the load and ground conditions.

Carry the bucket low when traveling with a load.

Maintain a safe distance from other machines. Provide sufficient clearance for ground and visibility conditions. Yield right-of-way to loaded machines.

Avoid going over obstacles such as rough terrain, rocks, logs, curbs, ditches, ridges, and railroad tracks whenever possible. When obstructions must be crossed, do so with extreme care at an angle if possible. Reduce speed - down-shift. Ease up to the break over point - pass the balance point slowly on the obstruction and ease down on the other side.

Cross gullies or ditches at an angle with reduced speed after insuring ground conditions will permit a safe traverse.

Be alert to soft ground conditions close to newly constructed walls. The fill material and weight of machine may cause the wall to collapse under the machine.

Operate at speeds slow enough to insure complete control at all times. Travel slowly over rough ground, on slopes or near drop offs, in congested areas or on ice or slippery surfaces.

Be alert to avoid changes in traction conditions that could cause loss of control. *DO NOT* drive on ice or frozen ground conditions when working the machine on steep slopes or near drop offs.

Keep the machine well back from the edge of an excavation.

Be especially careful when traveling up or down slopes. Position the bucket in such a way as to provide a possible anchorage on the ground in case of a slide.

When proceeding across a hill side proceed slowly. Never turn sharply up hill or down hill.

Avoid side hill travel whenever possible. Drive up and down the slope. Should the machine start slipping sideways on a grade, turn it immediately downhill.

In steep down hill operation, do not allow engine to over speed. Select proper gear before starting down grade.

There is no substitute for good judgement when working on slopes.

The grade of slope you should attempt will be limited by such factors as condition of the ground, load being handled, the type of machine, speed of machine and visibility.

*NEVER COAST* the machine down grades and slopes with the transmission in neutral on power shift machines, or clutch disengaged on manually shifted machines.

To reduce the danger of uncontrolled machine, choose a gear speed before proceeding down grade that will hold machine to proper speeds for conditions.

Operating in virgin rough terrain that includes previously mentioned hazards is called pioneering. Be sure you know how this is done. Danger from falling branches and upturning roots is acute in these areas.

When pushing over trees, the machine must be equipped with proper over head guarding. Never allow a machine to climb up on the root structure particularly while the tree is being felled. Use extreme care when pushing over any tree with dead branches.

Avoid brush piles, logs or rocks. *DO NOT DRIVE THE MACHINE ONTO BRUSH PILES, LOGS, LARGE ROCKS* or other surface irregularities that break traction with the ground especially when on slopes or near drop offs.

Avoid operating equipment too close to an over hang or high wall either above or below the machine. Be on the look out for caving edges, falling objects and slides. Beware of concealment by brush and under growth of these dangers.

Park in a non-operating and non-traffic area or as instructed. Park on firm level ground if possible. Where not possible, position machine at a right angle to the slope, making sure there is no danger of uncontrolled sliding movement. Set the parking brake.

Never park on an incline without carefully blocking the machine to prevent movement.

If parking in traffic lanes cannot be avoided, provide appropriate flags, barriers, flares and warning signals as required. Also provide advance warning signals in the traffic lane of approaching traffic.

Move the machine away from pits, trenches, overhangs and over head power lines before shutting down for the day.

When stopping operation of the machine for any reason, always return the transmission or hydrostatic drive control to neutral and engage the control lock to secure the machine for a safe start up. Set parking brake, if so equipped.

Never lower attachments or tools from any position other than seated in operator's seat. Sound the horn. Make sure the area near the attachment is clear. Lower the attachment slowly. *DO NOT USE* float position to lower hydraulic equipment.

## SAFETY RULES

Always before leaving the operator's seat and after making certain all people are clear of the machine, slowly lower the attachments or tools flat to the ground in a positive ground support position. Move any multi purpose tool to positive closed position. Return the controls to hold. Place transmission control in neutral and move engine controls to off position. Engage all control locks, set parking brake, and open and lock the master (key, if so equipped) switch. Consult Operation and Maintenance Instruction Manual.

Always follow the shut down instructions as outlined in the Operation and Maintenance Instruction Manual.

### MAINTENANCE

Do not perform any work on equipment that is not authorized. Follow the Maintenance or Service Manual procedures.

Machine should not be serviced with anyone in the operator's seat unless they are qualified to operate the machine and are assisting in the servicing.

Shut off engine and disengage the Power Take Off lever if so equipped before attempting adjustments or service.

Always turn the master switch (key switch if so equipped) to the *OFF* position before cleaning, repairing, or servicing and when parking machine to forestall unintended or unauthorized starting.

Disconnect batteries and *TAG* all controls according to local or national requirements to warn that work is in progress. Block the machine and all attachments that must be raised per local or national requirements.

Never lubricate, service or adjust a machine with the engine running, except as called for in the Operation and Maintenance Instruction Manual. Do not wear loose clothing or jewelry near moving parts.

Do not run engine when refueling and use care if engine is hot due to the increased possibility of a fire if fuel is spilled.

Do not smoke or permit any open flame or spark near when refueling, or handling highly flammable materials.

Always place the fuel nozzle against the side of the filler opening before starting and during fuel flow. To reduce the chance of a static electricity spark, keep contact until after fuel flow is shut off.

Do not adjust engine fuel pump when the machine is in motion.

Never attempt to check or adjust fan belts when engine is running.

When making equipment checks that require running of the engine, have an operator in the operator's seat at all times with the mechanic in sight. Place the transmission in neutral and set the brakes and lock. **KEEP HANDS AND CLOTHING AWAY FROM MOVING PARTS.**

Avoid running engine with open unprotected air inlets. If such running is unavoidable for service reasons, place protective screens over all inlet openings before servicing engine.

Do not place head, body, limbs, feet, fingers, or hands near rotating fan or belts. Be especially alert around a pusher fan.

Keep head, body, limbs, feet, fingers, or hands away from bucket, blade or ripper when in raised position.

If movement of an attachment by means of machine's hydraulic system or winches is required for service or maintenance, do not raise or lower attachments from any position other than when seated in the operator's seat. Before starting machine or moving attachments or tools, set brakes, sound horn and call for an all clear. Raise attachments slowly.

Never place head, body, limbs, feet, fingers, or hands into an exposed portion between uncontrolled or unguarded scissor points of machine without first providing secure blocking.

Never align holes with fingers or hands - Use the proper aligning tool.

Disconnect batteries before working on electrical system or repair work of any kind.

Check for fuel or battery electrolyte leaks before starting service or maintenance work. Eliminate leaks before proceeding.

**BATTERY GAS IS HIGHLY FLAMMABLE.** Leave battery box open to improve ventilation when charging batteries. Never check charge by placing metal objects across the posts. Keep sparks or open flame away from batteries. Do not smoke near battery to guard against the possibility of an accidental explosion.

Do not charge batteries in a closed area. Provide proper ventilation to guard against an accidental explosion from an accumulation of explosive gases given off in the charging process.

Be sure to connect the booster cables to the proper terminals (+ to +) and (- to -) at both ends. Avoid shorting clamps. Follow the Operation and Maintenance Instruction Manual procedure.

Due to the presence of flammable fluid, never check or fill fuel tanks, storage batteries or use starter fluid near lighted smoking materials or open flame or sparks.

Rust inhibitors are volatile and flammable. Prepare parts in well ventilated place. Keep open flame away - **DO NOT SMOKE.** Store containers in a cool well ventilated place secured against unauthorized personnel.

Do not use an open flame as a light source to look for leaks or for inspection anywhere on the machine.

**DO NOT** pile oily or greasy rags - they are a fire hazard. Store in a closed metal container.

## SAFETY RULES

Never use gasoline or solvent or other flammable fluid to clean parts. Use authorized commercial, non-flammable, non-toxic solvents.

Never place gasoline or diesel fuel in an open pan.

Shut off engine and be sure all pressure in system has been relieved before removing panels, housings, covers, and caps. See Operation and Maintenance Instruction Manual.

Do not remove hoses or check valves in the hydraulic system without first removing load and relieving pressure on the supporting cylinders. Turn radiator cap slowly to relieve pressure before removing. Add coolant only with engine stopped or idling if hot. See Operation and Maintenance Instruction Manual.

Fluid escaping under pressure from a very small hole can almost be invisible and can have sufficient force to penetrate the skin. Use a piece of card board or wood to search for suspected pressure leaks. **DO NOT USE HANDS.** If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

Never use any gas other than dry nitrogen to charge accumulators. See Operation and Maintenance Instruction Manual.

When making pressure checks use the correct gauge for expected pressure. See the Operation and Maintenance Instruction Manual or Service Manual for guidance.

For field service, move machine to level ground if possible and block machine. If work is absolutely necessary on an incline, block machine and its attachments securely. Move the machine to level ground as soon as possible.

Brakes are inoperative when manually released for servicing. Provision must be made to maintain control of the machine by blocking or other means.

Block all wheels before bleeding or disconnecting any brake system lines and cylinders.

Never use make shift jacks when adjusting track tension. Follow the Undercarriage Service Manual.

Know your jacking equipment and its capacity. Be sure the jacking point used on the machine is appropriate for the load to be applied. Be sure the support of the jack at the machine and under the jack is appropriate and stable. Any equipment up on a jack is dangerous. Transfer load to appropriate blocking as a safety measure before proceeding with service or maintenance work according to local or national requirements.

Always block with external support any linkage or part on machine that requires work under the raised linkage, parts, or machine per local or national requirements. Never allow anyone to walk under or be near unblocked raised equipment. Avoid working or walking under raised blocked equipment unless you are assured of your safety.

When servicing or maintenance requires access to areas that cannot be reached from the ground, use a ladder or step platform that meets local or national requirements to reach the service point. If such ladders or platforms are not available, use the machine hand holds and steps as provided. Perform all service or maintenance carefully.

Shop or field service platforms and ladders used to maintain or service machinery should be constructed and maintained according to local or national requirements.

Lift and handle all heavy parts with a lifting device of proper capacity. Be sure parts are supported by proper slings and hooks. Use lifting eyes if provided. Watch out for people in the vicinity.

In lifting and handling heavy parts, slings must be of adequate strength for the purpose intended and must be in good condition.

Handle all parts with extreme care. Keep hands and fingers from between parts. Wear authorized protective equipment such as safety glasses, heavy gloves, safety shoes.

When using compressed air for cleaning parts use safety glasses with side shields or goggles. Limit the pressure to 207 kPa (30 psi) according to local or national requirements.

Wear welders protective equipment such as dark safety glasses, helmets, protective clothing, gloves and safety shoes when welding or burning. Wear dark safety glasses near welding. **DO NOT LOOK AT ARC WITHOUT PROPER EYE PROTECTION.**

Replace seat belts every two years on open canopy units and every three years on machines with cabs or at change of ownership.

Wear proper protective equipment such as safety goggles or safety glasses with side shields, hard hat, safety shoes, heavy gloves when metal or other particles are apt to fly or fall.

Use only grounded auxiliary power source for heaters, chargers, pumps and similar equipment to reduce the hazards of electrical shock.

Keep maintenance area **CLEAN** and **DRY**. Remove water or oil slicks immediately.

Remove sharp edges and burrs from reworked parts.

Be sure all mechanics tools are in good condition. **DO NOT** use tools with mushroomed heads. Always wear safety glasses with side shields.

Do not strike hardened steel parts with anything other than a soft iron or non-ferrous hammer.

Do not rush. Walk, do not run.

Know and use the hand signals used on particular jobs and know who has the responsibility for signaling.

## SAFETY RULES

Face the access system when climbing up and down.

Apply the parking device and place the transmission in neutral before starting the machine.

Do not bypass the starter safety switch. Repair the starter safety controls if they malfunction.

Fasten seat belt before operating.

Steering should be checked to both right and left. Brakes should be tested against engine power. Clutch and transmission controls should be moved through or to neutral positions to assure disengagement. Operate all controls to insure proper operation. If any malfunctions are found, park machine, shut off engine, report and repair before using machine.

If the power steering or the engine ceases operating, stop the machine motion as quickly as possible. Lower equipment, set parking device and keep machine securely parked until the malfunction is corrected or the machine can be safely towed. Never lift loads in excess of capacity.

Should the machine become stuck or frozen to the ground, back out to avoid roll over.

Know and understand the job site traffic flow patterns.

Keep the machine in the same gear going down hill as used for going up hill.

When roading a machine, know and use the signaling devices required on the machine. Provide an escort for roading where required.

Always use the recommended transport devices when roading the machine.

Do not attempt repairs unless proper training has been provided.

Use extreme caution when removing radiator caps, drain plugs, grease fittings or pressure taps. Park the machine and let it cool down before opening a pressurized compartment.

Release all pressure before working on systems which have an accumulator.

When necessary to tow the machine, do not exceed the recommended towing speed, be sure the towing machine has sufficient braking capacity to stop the towed load. If the towed machine cannot be braked, a tow bar must be used or two towing machines must be used - one in front pulling and one in the rear to retard. Avoid towing over long distances.

Observe proper maintenance and repair of all pivot pins, hydraulic cylinders, hoses, snap rings and main attaching bolts.

Always keep the brakes and steering systems in good operating condition.

Replace all missing, illegible or damaged safety signs. Keep all safety signs clean.

Do not fill the fuel tank to capacity. Allow room for expansion.

Wipe up spilled fuel immediately.

Always tighten the fuel tank cap securely. Should the fuel cap be lost, replace it only with the original manufacturer's approved cap. Use of a non-approved cap may result in over-pressurization of the tank.

Never drive the machine near open fires.

Use the correct fuel grade for the operating season.

# **SERVICE MANUAL**

**FOR**

## **HD7-HD10-HD14**

# **DIESEL TRACTORS**

**FOURTH EDITION — REVISED**

**JANUARY 1 - 1949**

PROPERTY OF

---

---

---

## FOREWORD

Always furnish serial number if making an inquiry to dealer or factory about this machine.

Many equipment owners employ the Dealer Service Department for all work other than routine lubrication and minor service. This practice is encouraged, as our Dealers are well informed and equipped to render efficient service by factory trained mechanics.

This manual may not be reprinted or reproduced, either in whole or in part, without written permission of Fiatallis ®.

Illustrations show standard and optional items.

## IMPORTANT

The information in this manual was current at the time of publication. It is our policy to constantly improve our product and to make available additional items. These changes may affect procedures outlined in this manual. If variances are observed, verify the information through your Dealer.

Fiatallis is not responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by Fiatallis for use in maintaining and/or repairing products manufactured or merchandized by Fiatallis.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by Fiatallis when failures are caused by the use of parts and/or components not approved by Fiatallis.

# INDEX

TOPIC	TOPIC NO.	TOPIC	TOPIC NO.
<b>A</b> —Air Box Drain Tube Installation.....	85-B	Brakes, Master Clutch:	
Air Cleaner, Care of.....	13	Adjustment "HD 7".....	74-B-9
Specification & Tolerances.....	67-GG	Adjustment "HD 10".....	75-B-10
Air Heater:		Adjustment "HD 14".....	76-B-5
Adjustments.....	48-A-C	Buckeye Equipment.....	131
Diagnosis & Corrections.....	27	<b>C</b> —Cam Follower Assembly:	
Operation.....	16-A	Inspection.....	78-J
Ammeter Diagnosis & Corrections.....	26	Installation.....	78-K
Axle Bracket and Packing,		Removal.....	78-I
Removal, "HD 14".....	110-A	Specifications & Tolerances.....	67-O
<b>B</b> —Baker Equipment.....	129	Camshaft.....	86
Balance Shaft.....	86	Disassembly.....	86-B
Specifications & Tolerances.....	67-P	Inspection.....	86-C
Repairs.....	86	Installation.....	86-E
Battery and Generator, Care of.....	20	Reassembly.....	86-D
Bevel Gear and Pinion "HD 7"		Removal.....	86-A
Adjustment.....	102-H	Specifications & Tolerances.....	67-Q
Installation.....	102-H	Carco Equipment.....	130
Packing.....	102-I	Clutch, Master—(See "Master	
Removal.....	102-G	Clutch")	
Seals (Non Adjustable).....	102-J	Clutch, Steering—(See "Steering	
Bevel Gear and Pinion "HD 10":		Clutch")	
Adjustment.....	103-M	Connecting Rod.....	83
Inspection.....	103-K	Assemble, Rod to Piston.....	83-P
Installation.....	103-L	Bearings, Specifications &	
Removal.....	103-J	Tolerances.....	67-G
Bevel Gear and Pinion "HD 14"		Bushings (Solid Bronze Type).....	83-K
Adjustment.....	104-L	Bushings, Reaming (Split Type)....	83-T
Inspection.....	104-K	Inspection.....	83-D
Installation.....	104-L	Install in Engine.....	83-Q
Removal.....	104-J	Installation.....	83-L
Blower.....	79	Reaming, Bushings.....	83-M
Assembly.....	79-D	Removal.....	83-C
Disassembly.....	79-B	Removal, Rod from Piston.....	83-G
Inspection.....	79-C	Specifications & Tolerances.....	67-H
Removal.....	79-A	Connecting Rod Bearings:	
Specifications & Tolerances.....	67-R	Inspection.....	82-E
Blower Drive Gear Assembly:		Installation.....	82-F
Assembly.....	80-D	Removal.....	82-D
Disassembly.....	80-B	Specifications & Tolerances.....	67-G
Gear Hub, Removal.....	80-A	Control and Instruments, Use of.....	15
Installation.....	80-E	Air Heater Pump.....	15-E
Specifications & Tolerances.....	67-S	Air Heater Push Button Switch.....	15-D
Brakes, Steering:		Ammeter.....	15-L
Diagnosis & Corrections.....	34	Auxiliary Shift Lever and Gear	
Irregularities and Corrections.....	64	Shift Lever.....	15-O
Use of.....	16-E	Brake Pedals.....	15-Q
Washing.....	63-A-4	Brake Pedal Lock Lever.....	15-R
Brakes, Steering "HD 7".....	57	Dash Light and Heater Switch.....	15-C
Adjustment.....	57-A	Engine Oil Pressure Gauge.....	15-I
Installation.....	105-J	Engine Temperature Gauge.....	15-K
Removal.....	105-A	Fuel Oil Gauge.....	15-J
Brakes, Steering "HD 10".....	58	Fuel Shut-Off.....	15-A
Adjustment.....	58-A	Head Light Switch.....	15-H
Installation.....	106-N	Hour Meter.....	15-M
Removal.....	106-A	Master Clutch Lever.....	15-N
Brakes, Steering "HD 14".....	59	Radiator Shutter Control Lever.....	15-G
Adjustment.....	59-A	Starter Pedal.....	15-B
Installation.....	107-N	Steering Clutch Levers.....	15-P
Removal.....	107-A	Throttle Lever.....	15-F

TOPIC	TOPIC NO.
Cooling System:	
Care of .....	18
Specifications & Tolerances.....	67-II
Crankshaft .....	81
Grinding .....	81-B
Inspection .....	81-C
Installation .....	81-E
Installation of Oil Wick.....	81-D
Removal .....	81-A
Specifications & Tolerances.....	87-E
Crankshaft Timing Gear.....	80-J
Removal .....	80-I
Cylinder Block .....	85
Air Box Drain Tube, Installing.....	85-B
Disassembly .....	73-A
Idler Gear Oil Holes.....	85-A
Oil and Water Passages, Cleaning	85-C
Oil Gasket Leaks.....	85-D
Cylinder Head: .....	78
Installation .....	78-B
Removal .....	78-A
Repairs .....	78-C-O
Cylinder Liners .....	84
Air Port Carbon Removal.....	84-D
Installation (Loose Fit).....	84-B
Installation (Press Fit).....	84-C
Removal .....	84-A
Specifications & Tolerance.....	67-A
<b>D</b> —Dampener for Fuel Pressure Gauge...	49
<b>E</b> —Electrical System, Specifications & Tolerances .....	67-FF
Electrical Equipment Warranty and Adjustment Policy.....	94
Engine:	
Diagnosis & Corrections.....	25
Disassembly .....	73
Idling, Effects of.....	19
Installation "HD 7".....	74-B
Installation "HD 10".....	75-B
Installation "HD 14".....	76-B
Parts, Inspection .....	73-B
Reassembly .....	73-C
Removal "HD 7".....	74-A
Removal "HD 10".....	75-A
Removal "HD 14".....	76-A
Run-In Schedule .....	83-A
Starting of .....	16-A
Specification & Tolerances (See "Specs. & Toler.")	
<b>F</b> —Fan .....	97
Belt Adjustment.....	51
Disassembly .....	97-B
Reassembly and Installation.....	97-C
Removal .....	97-A
Filters—Fuel Oil .....	11
First Stage .....	11-C
Second Stage .....	11-D
Filters—Lubricating Oil.....	10
Primary, Care of.....	10-A
Primary Elements, Cleaning With Solvents .....	10-C
Primary, Removal and Cleaning.....	10-B

TOPIC	TOPIC NO.
Primary, Specifications & Tolerances .....	67-V
Secondary, Care of.....	10-E
Secondary Elements, Installation....	10-D
Secondary, Specifications & Tolerances .....	67-W
Final Drive—Diagnosis & Corrections .....	30
Final Drive, "HD 7".....	108
Gear and Hub, Removal.....	108-F
Gear Case Installation.....	108-G
Gear Case Removal.....	108-F
Inner Seal, Installation.....	108-E
Inner Seal, Removal.....	108-D
Installation on Tractor.....	108-G
Outer Seal, Installation.....	108-C
Outer Seal, Removal.....	108-A
Pinion, Installation.....	105-I
Pinion, Removal .....	105-B
Sprocket, Installation .....	108-E
Sprocket, Removal .....	108-D
Final Drive "HD 10".....	109
Bearing Adjustment.....	109-D
Gear Case Installation.....	109-D
Gear Case, Removal.....	109-C
Inner Seal, Installation.....	109-D
Inner Seal, Removal.....	109-C
Outer Seal, Installation.....	109-B
Outer Seal, Removal.....	109-A
Pinion, Installation (Standard Tread) .....	106-L
Pinion, Installation (Wide Tread) .....	106-M
Pinion, Removal .....	106-B
Pinion, Removal (Wide Tread)....	106-C
Sprocket, Installation.....	109-D
Sprocket, Removal .....	109-C
Final Drive, "HD 14".....	110
Axle Bracket and Packing, Removal .....	110-A
Bearing, Adjustment .....	110-J
Gear and Case, Installation.....	110-F
Gear and Case, Removal .....	110-D
Inner Packing, Installation.....	110-G
Inner Packing, Removal.....	110-C
Parts, Inspection .....	110-E
Pinions, Installation .....	107-M
Pinions, Removal .....	107-C
Rear Axle Bracket, Installation....	110-J
Sprocket, Installation .....	110-H
Sprocket, Removal .....	110-B
Final Drive Sprocket Shaft.....	111
Installation .....	111-B
Removal .....	111-A
Flywheel .....	88
Inspection .....	88-B
Installation .....	88-C
Removal .....	88-A
Flywheel Housing .....	87
Inspection .....	87-B
Installation .....	87-C
Removal .....	87-A

TOPIC	TOPIC NO.	TOPIC	TOPIC NO.
Front Idler .....	61	Variable Speed Spring Housing, Disassembly .....	93-B
Adjustment .....	61-A	<b>H—Hour Meter:</b>	
Diagnosis & Corrections.....	38	Adjustment .....	66
Disassembly .....	122-A	Diagnosis & Corrections.....	29
Lubrication .....	7	How to Read.....	22
Reassembly .....	122-B	<b>I—Idler Gear and Hub—</b>	
Repairs .....	122	Engine Gear Train:	
Fuel Oil Manifold:		Inspection .....	80-G
Installation .....	78-N	Installation .....	80-H
Removal .....	78-O	Removal .....	80-F
Fuel Pump .....	91	Specifications & Tolerances.....	67-V
Disassembly .....	91-B	Injector .....	77
Inspection .....	91-C	Assembly .....	77-E
Installation .....	91-E	Copper Tube, Installation.....	78-M
Reassembly .....	91-D	Copper Tube, Removal.....	78-L
Removal .....	91-A	Disassembly .....	77-B
Specifications & Tolerances.....	67-DD	Equalizing .....	43
Fuel Shut-Off and Air Valve Control....	46	Injector Tip and Valve Assembly....	77-D
First Type Control .....	46-A	Inspection .....	77-C
Second Type Control.....	46-B	Installation .....	77-G
Fuel System and Filters (See Filters-Fuel Oil)		Removal .....	77-A
Fuels:		Specifications & Tolerances.....	67-CC
Specifications .....	1	Testing .....	77-F
Storage of .....	23	Timing .....	42
<b>G—Gar Wood Equipment .....</b>	128	Instruments and Controls, Use of (See "Controls")	
Gasket Sealing .....	79-H	<b>L—Lubrication:</b>	
Gear Shifting Levers, Use of.....	16-B	Front Idler .....	7
Gear Train, Engine.....	80	Routine Service .....	2
Blower Drive Gear, Assembly.....	80-D	Service Chart, "HD 7".....	3
Blower Drive Gear, Disassembly....	80-B	Service Chart, "HD 10".....	4
Blower Driver Gear, Installation....	80-E	Service Chart, "HD 14".....	5
Blower Gear Hub, Removal.....	80-A	Specifications of Lubricants.....	1
Crankshaft Timing Gear, Removal....	80-I	Support Roller .....	8
Crankshaft Timing Gear, Installation .....	80-J	Truck Wheel .....	6
Idler Gear and Hub, Inspection.....	80-G	<b>M—Main Bearings—Crankshaft .....</b>	82
Idler Gear, Installation.....	80-H	Inspection .....	82-B
Idler Gear, Removal.....	80-F	Installation .....	82-C
Inspection .....	80-C	Removal (Crankshaft in Place)....	82-A
Specifications & Tolerances.....	67-I	Specifications & Tolerances.....	67-F
Gear Train Cover.....	87	Master Clutch:	
Inspection .....	87-B	Irregularities and Corrections.....	62
Installation .....	87-C	Use of .....	16-C
Removal .....	87-A	Washing .....	62-C & D
Generator .....	96	Master Clutch, "HD 7":	
Belt Adjustment .....	50	Adjustment .....	52-A
Generator and Battery, Care of .....	20	Brake Adjustment .....	74-B-9
Testing and Adjusting.....	96-A	Inspection .....	99-B
Specifications & Tolerances.....	67-AA	Installation .....	99-C
Governor .....	93	Removal .....	99-A
Adjustment .....	93-G & 45	Master Clutch, "HD 10":	
Causes for Speed Variations.....	45-A	Adjustment .....	53-A
Control Housing, Disassembly.....	93-C	Brake Adjustment .....	75-B-10
Inspection .....	93-E	Inspection .....	100-B
Operating Shaft, Disassembly.....	93-D	Installation .....	100-C
Reassembly .....	93-F	Removal .....	100-A
Removal .....	93-A	Master Clutch, "HD 14":	
Specifications & Tolerances.....	67-EE	Adjustment .....	54-A
Variable Speed Spring Housing, Assembly .....	93-F	Atwood Master Clutch.....	101-D
		Brake Adjustment .....	76-B-5

TOPIC	TOPIC NO.	TOPIC	TOPIC NO.
Inspection .....	101-B	Pump, Water—(See "Water Pump")	
Installation .....	101-C	Pump, Lubricating Oil (see "Oil Pump")	
Removal .....	101-A	Putting Tractor to Work.....	16
Master Clutch Shaft		Gear Shifting Levers, Use of.....	16-B
Installation "HD 7".....	102-D	Master Clutch, Use of.....	16-C
Installation "HD 10".....	103-C	Starting the Engine.....	16-A
Installation "HD 14".....	104-E	Steering Brakes, Use of.....	16-E
Removal "HD 7".....	102-C	Steering Clutch Levers, Use of.....	16-D
Removal "HD 10".....	103-A	Stopping Engine .....	16-G
Removal "HD 14".....	104-D	Stopping Tractor .....	16-F
Motor (See "Engine"):		<b>R</b> —Radiator .....	98
Motor, Starter (See "Starter Motor")		Inspection .....	98-B
<b>O</b> —Oil Cooler:		Installation .....	98-C
Cleaning .....	10-E	Removal .....	98-A
Inspection .....	90-B	Reverse Gear Set—Transmission:	
Installation .....	90-C	Installation "HD 7".....	102-F
Removal .....	90-A	Installation "HD 10".....	103-I
Specifications & Tolerances.....	67-U	Installation "HD 14".....	104-G
Oil Filters, Lubricating (See Filters—Lubricating Oil)		Removal "HD 7".....	102-E
Oil Gasket Leaks, Cylinder Head.....	85-D	Removal "HD 10".....	103-G
Oil Pressure Specifications & Tolerances .....	67-X	Removal "HD 14".....	104-F
Oil Pump, Lubricating.....	89	Rocker Arms .....	78
Assembly .....	89-D	Specifications & Tolerances.....	67-N
Disassembly .....	89-B	Routine Service .....	2
Inspection .....	89-C	<b>S</b> —Serial Number Location (Tractor & Engine).....	124
Installation .....	89-E	Service Chart (See "Lubrication")	
Removal .....	89-A	Sliding Gear Shaft—Transmission:	
Operating Tractor (See "Putting Tractor to Work")		Installation "HD 14".....	104-C
Operating in Mud or Water .....	17	Removal "HD 14".....	104-A
<b>P</b> —Pilot Bearing, Care of.....	9	"HD 7" & "HD 10" (See "Top Shaft")	
Pistons:		Specifications:	
Bushings From Pistons, Removal (Solid Bronze Type).....	83-H	Engine Crankcase Lubricant.....	1-A
Bushing, Installation .....	83-I	Fuel Oil .....	1-A
Bushing, Reaming .....	83-J	Pressure Gun Lubricant.....	1-C
Bushing, Removal (Split Type).....	83-R	Torque Wrench .....	68
Bushing, Installation (Split Type).....	83-S	Tractor ... On 2nd Page Following Index	
Bushing, Reaming (Split Type).....	83-T	Transmission, Final Drive, Truck Wheel, Front Idler and Support	
Engine Run-In Schedule.....	83-A	Roller Lubricant .....	1-B
Fitting .....	83-E	Specifications & Tolerances, Engine.....	67
Inspection .....	83-D	Air Cleaner (Oil Bath).....	67-GG
Installation in Engine.....	83-Q	Balance Shaft .....	67-P
Piston Specifications & Tolerances.....	67-B	Blower .....	67-P
Removal .....	83-C	Blower Drive Gear.....	67-S
Rings, Fitting .....	83-F	Cam Followers .....	67-O
Rings (Oil Control) Specifications & Tolerances .....	67-D	Cam Shaft .....	67-Q
Rings (Compression) Specifications & Tolerances .....	67-C	Connecting Rods .....	67-H
Rod to Piston, Assembly.....	83-P	Connecting Rod Bearings .....	67-G
Rod From Piston, Removal.....	83-G	Cooling System .....	67-II
Pre-Cleaners:		Crankshaft .....	67-E
Care of .....	12	Cylinder Liners .....	67-A
Specifications & Tolerances.....	67-HH	Electrical System .....	67-FF
Pre-Heater, Engine:		Gear Train .....	67-I
Operation .....	21	Generator .....	67-AA
Repairs .....	47-A	Governor .....	67-EE
Preparing Tractor for Use.....	14	Idler Gear .....	67-J
Pump, Fuel—(See "Fuel Pump")		Injector .....	67-CC
		Main Bearings .....	67-F
		Oil Cooler .....	67-U


TOPIC	TOPIC NO.
Oil Filter, Primary	67-V
Oil Filter, Secondary	67-W
Oil Pressure	67-X
Oil Pump—Lubricating	67-T
Pistons	67-B
Piston Rings (Compression)	67-C
Piston Rings (Oil Control)	67-D
Pre-Cleaner	67-HH
Pump, Fuel	67-DD
Pump, Water	67-CC
Rocker Arms,	67-N
Starter	67-Z
Timing, Intake & Exhaust	67-Y
Valve, Exhaust	67-K
Valve, Guide	67-M
Valve Insert	67-L
Spiral Bevel Gear—(See "Bevel Gear & Pinion")	
Sprocket, Removal	110-B
Sprocket Shaft	111
Installation	111-B
Removal	111-A
Sprocket Shaft Bearing, Adjustment	60-A
Stabilizer Assembly Diagnosis & Corrections	31
Stabilizer Assembly, "HD 7"	112
Inspection of Parts	112-B
Installation	112-C
Removal	112-A
Stabilizer Assembly, "HD 10"	113
Inspection of Parts	113-B
Installation	113-C
Removal	113-A
Stabilizer Assembly, "HD 14"	114
Inspection of Parts	114-B
Installation	114-C
Removal	114-A
Stabilizer Spring	115
Diagnosis & Corrections	32
Installation	115-B
Removal	115-A
Starter Motor	95
Operation	15-B
Starting Engine	16-A
Specifications & Tolerances	67-Z
Steering Brakes, Use of	16-E
Steering Brakes, "HD 7":	
Adjustment	57-A
Installation	105-J
Removal	105-A
Steering Brakes, "HD 10":	
Adjustment	58-A
Installation	106-N
Removal	106-A
Steering Brakes, "HD 14":	
Adjustment	59-A
Removal & Installation	107-A
Steering Clutches:	
Diagnosis & Corrections	33
Irregularities & Corrections	63
Use of	16-D
Washing	63-A-4

TOPIC	TOPIC NO.
Steering Clutches, "HD 7"	105
Adjustment	55-A
Assembly	105-F
Disassembly	105-D
Inspection	105-E
Installation (First Type Clutch Shaft)	105-G
Installation (Second Type Clutch Shaft)	105-H
Removal (First Type Clutch Shaft)	105-A
Removal (Second Type Clutch Shaft)	105-C
Steering Clutches, "HD 10"	106
Adjustment	56-A-B
Assembly	106-I
Disassembly	106-G
Inspection	106-H
Installation (First Type Clutch Shaft)	106-J-N
Installation (Second Type Clutch Shaft)	106-K-N
Removal (First Type Clutch Shaft)	106-A-E
Removal (Second Type Clutch Shaft)	106-F
Steering Clutches "HD 14":	
Adjustment	56-A-B
Assembly (First Type)	107-H
Assembly (Ventilated Adjustable Type)	107-K
Disassembly (First Type)	107-F
Disassembly (Ventilated Adjustable Type)	107-J
Field Installation of Adjusting Screws (Ventilated Type)	107-N
Inspection	107-G
Installation (First Type Clutch Shaft)	107-L
Installation (Second Type Clutch Shaft)	107-L
Removal (First Type Clutch Shaft)	107-A-D
Removal (Second Type Clutch Shaft)	107-E
Stopping Engine	16-G
Stopping Tractor	16-F
Storage of Fuels	23
Storage of Tractor	24
Support Roller:	
Diagnosis & Corrections	37
Disassembly	123-A & 122-A
Lubrication	8
Reassembly	123-B & 122-B
<b>T—Temperature Gauge—Diagnosis &amp;   Corrections</b>	<b>28</b>
Timing:	
Diagram (Engine)	69
Injector	42
Intake & Exhaust Specification & Tolerances	67-Y


TOPIC	TOPIC NO.
Tool Equipment:	
Allis-Chalmers, Special .....	126
Kent Moore, Special.....	127
Top Shaft:	
Installation, "HD 7".....	102-B
Installation, "HD 10".....	103-F
Removal, "HD 7".....	102-A
Removal, "HD 10".....	103-D
"HD 14" (See Sliding Gear Shaft)	
Torque Wrench—Specifications.....	68
Tracks:	
Adjustment .....	119-D-61
Diagnosis & Corrections.....	39
Inspection .....	119-B
Install .....	119-C
Irregularities and Corrections.....	65
Uncouple .....	119-A
Track Release Assembly, Diagnosis & Corrections .....	40
Track Release Housing, "HD 7".....	116
Disassembly .....	116-B
Inspection .....	116-C
Installation .....	116-D
Removal .....	116-A
Track Release Housing, "HD 10".....	117
Disassembly .....	117-B
Inspection .....	117-C
Installation .....	117-D
Removal .....	117-A
Track Release Housing, "HD 14".....	118
Disassembly .....	118-B
Inspection .....	118-C
Installation .....	118-D
Removal .....	118-A
Tractor Inspection .....	125
Tractor, Storage .....	24
Transmission and Gear Shift—	
Diagnosis and Corrections.....	35
Transmission, "HD 7".....	102
Bevel Gear and Pinion Removal...	102-G
Bevel Gear and Pinion	
Installation .....	102-H
Bevel Gear Packing.....	102-I
Master Clutch Shaft, Installation..	102-D
Master Clutch Shaft, Removal....	102-C
Reverse Idler Gear, Installation...	102-F
Reverse Idler Gear, Removal.....	102-E
Seals, Bevel Gear (Non- Adjustable) .....	102-J
Top Shaft, Installation.....	102-B
Top Shaft, Removal.....	102-A
Transmission, "HD 10".....	103
Bevel Gear, Adjustment.....	103-M
Bevel Gear and Pinion, Inspection	103-K
Bevel Gear and Pinion,	
Installation .....	103-L
Bevel Gear and Pinion, Removal...	103-J
Inspection .....	103-B
Master Clutch Shaft, Installation..	103-C
Master Clutch Shaft, Removal.....	103-A
Reverse Idler Shaft, Inspection....	103-H
Reverse Idler Shaft, Installation...	103-I

TOPIC	TOPIC NO.
Reverse Idler Shaft, Removal.....	103-G
Top Shaft, Inspection.....	103-E
Top Shaft, Installation.....	103-F
Top Shaft, Removal.....	103-D
Transmission, "HD 14".....	104
Auxiliary Gear and Shaft,	
Installation .....	104-I
Auxiliary Gear and Shaft,	
Removal .....	104-H
Bevel Gear and Pinion, Inspection	104-K
Bevel Gear and Pinion,	
Installation .....	104-L
Bevel Gear and Pinion, Removal...	104-J
Change Sped Group.....	104-M
Inspection .....	104-B
Master Clutch Shaft, Installation..	104-E
Master Clutch Shaft, Removal.....	104-D
Reverse Gear Set, Installation.....	104-G
Reverse Gear Set, Removal.....	104-F
Sliding Gear Shaft, Installation...	104-C
Sliding Gear Shaft, Removal.....	104-A
Truck Frame:	
Assembly .....	120-B
Diagnosis and Corrections.....	41
Removal .....	120-A
Truck Wheels .....	121
Diagnosis & Corrections.....	36
Disassembly .....	122-A
Installation .....	121-B
Lubrication .....	6
Reassembly .....	122-B
Removal .....	121-A
<b>V—Valve and Valve Seats,</b>	
Reconditioning .....	78-D-H
Valve Exhaust, Specifications & Tolerances .....	67-K
Valve Guides:	
Removal and Installation.....	78-F
Specifications & Tolerances.....	67-M
Valve Insert:	
Removal and Installation.....	78-G
Specifications and Tolerances.....	67-L
Valve Lash .....	44
Valve Spring, Spring Seat, and Spring Cap (New Type).....	78-E
Ventilated, Adjustable, Steering Clutch .....	107-I
<b>W—Warranty and Adjustment Policy,</b>	
Electrical Equipment .....	94
Washing:	
Master Clutch .....	62-C & D
Steering Clutches & Brakes .....	63-A-4
Water Pump .....	92
Assembly .....	93-C
Disassembly .....	93-B
Installation .....	93-D
Removal .....	92-A
Specifications & Tolerances.....	67-BB
Wiring Diagram, "HD 7".....	70
Wiring Diagram, "HD 10".....	71
Wiring Diagram, "HD 14".....	72

## The Serial Number

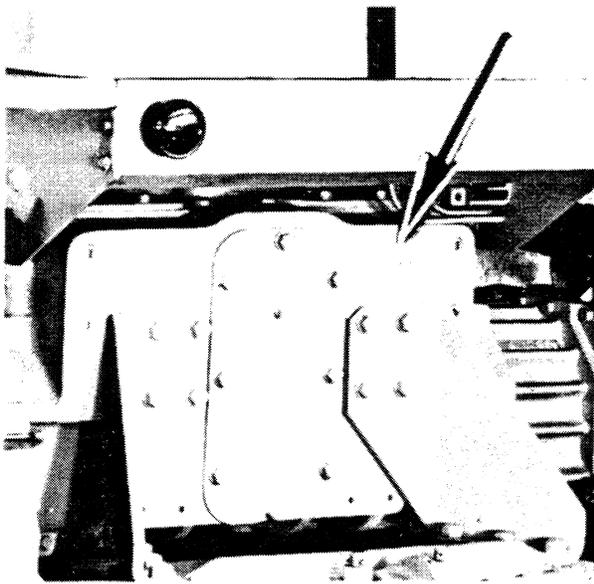


**"HD 7"**

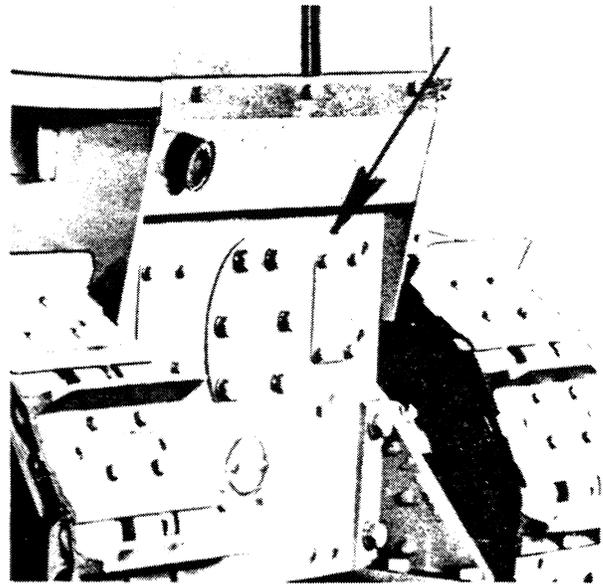

**"HD 10"**



**"HD 14"**

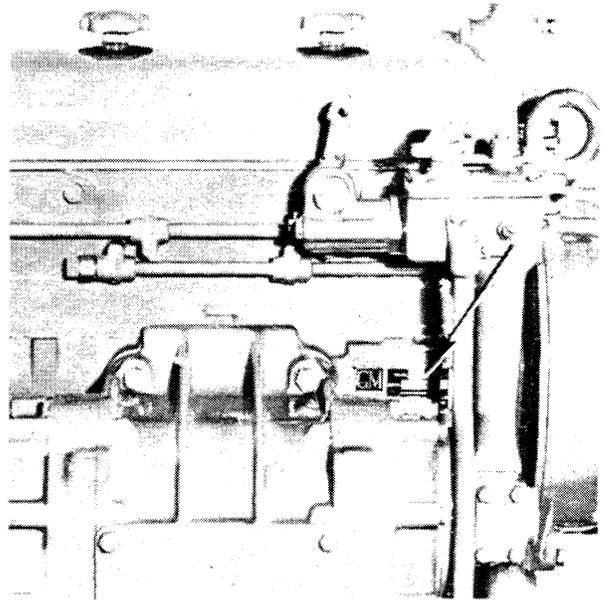

**"HD 7", "HD 10" & "HD 14" ENGINE**

The Serial Number is **IMPORTANT**. A tractor has a serial number for the same reason that a man has a name. It is the legal identification used on bills of sale, contracts, mortgages and insurance policies. Also, it is absolutely necessary on all repair parts orders to insure getting correct parts. Don't fail to show correct serial number wherever required.

On HD7 and HD10 tractors the serial number is at upper right hand corner of back of transmission case; on the HD14 it is on the right hand side of rear transmission case—stamped into the top of flange.

Also most documents require, in addition, the engine serial number. This number will be found on right side of engine block just back of governor tower. Engine serial number must be shown on all orders for engine parts.

It is advisable to carry insurance on your tractor. You can protect yourself from loss by fire, theft, personal liability, property damage, collision, submersion and other hazards. Because of the greater investment in tractor equipment, it is relatively more important to carry insurance on such equipment than on an automobile.


# Specifications

	HD-7	HD-10	HD-14
Drawbar H.P. (at Rated Speed in Second Gear)	54.87	74.9	132.19
Belt H.P.	64.8	89.5	150.48
Width of Tread (Narrow)	52"	62"	
(Wide)	63"	74"	68
Shipping Weight (Narrow Tread)	13830 lbs.	21000 lbs.	
(Wide Tread)	14000 lbs.	21600 lbs.	29000 lbs.
<b>SPEEDS AT RATED ENGINE SPEED</b>			
First Gear	1.59 M.P.H.	1.57 M.P.H.	1.72 M.P.H.
Second Gear	2.19 M.P.H.	2.06 M.P.H.	2.18 M.P.H.
Third Gear	2.97 M.P.H.	2.68 M.P.H.	2.76 M.P.H.
Fourth Gear	5.00 M.P.H.	3.54 M.P.H.	3.50 M.P.H.
Fifth Gear		4.62 M.P.H.	4.36 M.P.H.
Sixth Gear		6.03 M.P.H.	7.00 M.P.H.
Low Reverse	1.89 M.P.H.	1.85 M.P.H.	2.00 M.P.H.
High Reverse		4.17 M.P.H.	3.20 M.P.H.
<b>DRAWBAR H.P. AND DRAWBAR PULLS</b>			
(at Rated Engine Speed)	<b>H.P. PULL</b>	<b>H.P. PULL</b>	<b>PULL</b>
First Gear	50.74- *12600	74.6- *18650	28019
Second Gear	54.87- 9705	74.9- 14050	22699
Third Gear	54.44- 7015	74.4- 10605	17265
Fourth Gear	53.86- 4070	72.2- 7730	13769
Fifth Gear		68.2- 5585	10074
Sixth Gear		62.0- 3385	5579
Low Reverse	54.54- 11300	74.9- 15650	
High Reverse		70.0- 6350	
	*Based on 90% of tractor weight (Wide Tread)		
<b>ENGINE</b>			
Lubrication	Forced Feed	Forced Feed	Forced Feed
Make	General Motors	General Motors	General Motors
Type	Diesel	Diesel	Diesel
Number of Cylinders	Two Cycle	Two Cycle	Two Cycle
Unit Fuel Injector Output (C.U.MM.)	3	4	6
Bore and Stroke	60	60	60
Piston Displacement (Cu. In.)	4 1/4" x 5"	4 1/4" x 5"	4 1/4" x 5"
R.P.M. Governed at Full Load	213	284	425
R.P.M. at Low Idle Engine Speed	1500	1600	1500
R.P.M. at High Idle Engine Speed	450	450	450
Maximum Net Torque (Foot Pounds)	1650	1750	1650
R.P.M. at Maximum Net Torque	254	341	511
Piston Speed (F.P.M.)	1000	900	1050
Crankshaft—Number and Diameter of Main Bearings	1250	1333	1250
	4—3 1/2"	5—3 1/2"	7—3 1/2"
<b>STEERING</b>			
Method	Clutch	Clutch	Clutch
Number of Friction Surfaces Each Clutch	22	30	40
Area of Each Friction Surface—Sq. In.	41.57	48.8	66.15
Total Friction Area—Each Clutch—Sq. In.	914.54	1464	2646
Turning Radius—Narrow Tread	84"	98"	
Wide Tread	88"	104"	114"
<b>TRACKS</b>			
Length of track on ground (Center of sprocket to center of front idler)	67"	84-15/16"	85-7/16"
Ground Contact—Standard Shoes—Sq. In.	2144	3058	3759
Width of Standard Track Shoes	16"	18"	22"
Maximum Width Track Shoes—Narrow Tread	16"	20"	
Wide Tread	28"	30"	24"
Maximum Width Track Shoe Available—Narrow Tread	16"	18"	
Wide Tread	24"	24"	24"
Height of Grouser	2 1/4"	2-19/32"	2 5/8"
Diameter of Track Shoe Bolts—Shoulder	9/16"	5/8"	3/4"
Diameter of Track Pins	1.9/16"	1 3/4"	1 7/8"
Diameter of Track Pin Bushings	2-5/16"	2 1/2"	2 3/4"
Number of Track Shoes—Each Track	34	34	35
Ground Pressure—Lbs. Per Sq. In.—Narrow Tread	6.45	6.87	
Wide Tread	6.53	7.06	7.39
<b>TRUCK WHEELS</b>			
Number on Each Side	5	6	5
Type of Seal	Positive	Positive	Positive
Type of Bearing	Tapered Roller	Tapered Roller	Tapered Roller
Lubrication Intervals	1000 hours	1000 hours	1000 hours
<b>TRACK SUPPORT ROLLERS</b>			
Number on Each Side	1	1	1
Type of Bearing	Tapered Roller	Tapered Roller	Tapered Roller
Lubrication Intervals	1000 hours	1000 hours	1000 hours


<b>FRONT IDLERS</b>			
Number on Each Side .....	1	1	1
Type of Seal .....	Positive	Positive	Positive
Type of Bearing .....	Tapered Roller	Tapered Roller	Tapered Roller
Lubrication Intervals .....	1000 hours	1000 hours	1000 hours
<b>GENERAL DIMENSIONS</b>			
Overall Length .....	10' 7 <sup>1</sup> / <sub>4</sub> "	12' 6-7/16"	13' 3"
Overall Height (without stacks) .....	5' 6-9/16"	6' 3 <sup>1</sup> / <sub>8</sub> "	6' 8"
Overall Width—Narrow Tread .....	6' 10"	6' 10-11/16"	
Wide Tread .....	7' 9"	7' 10-11/16"	7' 7 <sup>3</sup> / <sub>4</sub> "
Ground Clearance .....	9-13/16"	11 <sup>5</sup> / <sub>8</sub> "	13 <sup>1</sup> / <sub>2</sub> "
Drawbar Height .....	11 <sup>3</sup> / <sub>8</sub> "	14-5/32"	15 <sup>5</sup> / <sub>8</sub> "
Lateral Drawbar Movement .....	19 <sup>1</sup> / <sub>2</sub> "	32"	30"
<b>CAPACITIES</b>			
Cooling System .....	5 <sup>3</sup> / <sub>4</sub> gal.	9 <sup>3</sup> / <sub>4</sub> gal.	12 gal.
Crankcase .....	11 qts.	13 qts.	14 qts.
Transmission Case .....	26 qts.	28 qts.	40 qts.
Final Drive (each) .....	7 qts.	8 qts.	8 qts.
Fuel Tank .....	31 gal.	44 gal.	68 gal.
Track Release Spring Housing (each) .....	4 qts.	7 <sup>1</sup> / <sub>2</sub> qts.	13 qts.
Air Cleaner .....	2 <sup>1</sup> / <sub>2</sub> qts.	2 qts.	2 <sup>1</sup> / <sub>2</sub> qts.
<b>POWER PULLEY</b>			
Pulley Diameter .....	10 or 12"	13 <sup>3</sup> / <sub>8</sub> "	18 or 20"
Pulley Width .....	8 <sup>3</sup> / <sub>4</sub> "	10"	15"
Pulley R.P.M. ....	889	412 and 929	405 and 550
Belt Speed—Foot Per Minute .....	2327 and 2793	1443 and 3253	2121 and 3400
Direction of Rotation .....	Clockwise	Clockwise	Clockwise
(Viewed from life side of tractor)			
<b>STRAIGHT POWER TAKE-OFF</b>			
Shaft R.P.M. at Rated Engine Speed .....	889	192 and 430	935 and 1500
Direction of Rotation .....	Counter Clockwise	Counter Clockwise	Counter Clockwise
(Viewed from rear of tractor)			
<b>REVERSIBLE REDUCTION POWER TAKE-OFF</b>			
Shaft R.P.M. at Rated Engine Speed .....	Clockwise 336 Counter Clockwise 269	Clockwise 191 & 430 Counter Clockwise 148 and 334	
<b>NON-REVERSIBLE REDUCTION POWER TAKE-OFF</b>			
Shaft R.P.M. at Rated Engine Speed .....	574		
Direction of Rotation .....	Clockwise		
(Viewed from rear of tractor)			

*The Allis-Chalmers Manufacturing Company reserves the right to make changes in the above specifications or to add improvements at any time without notice or obligation.*




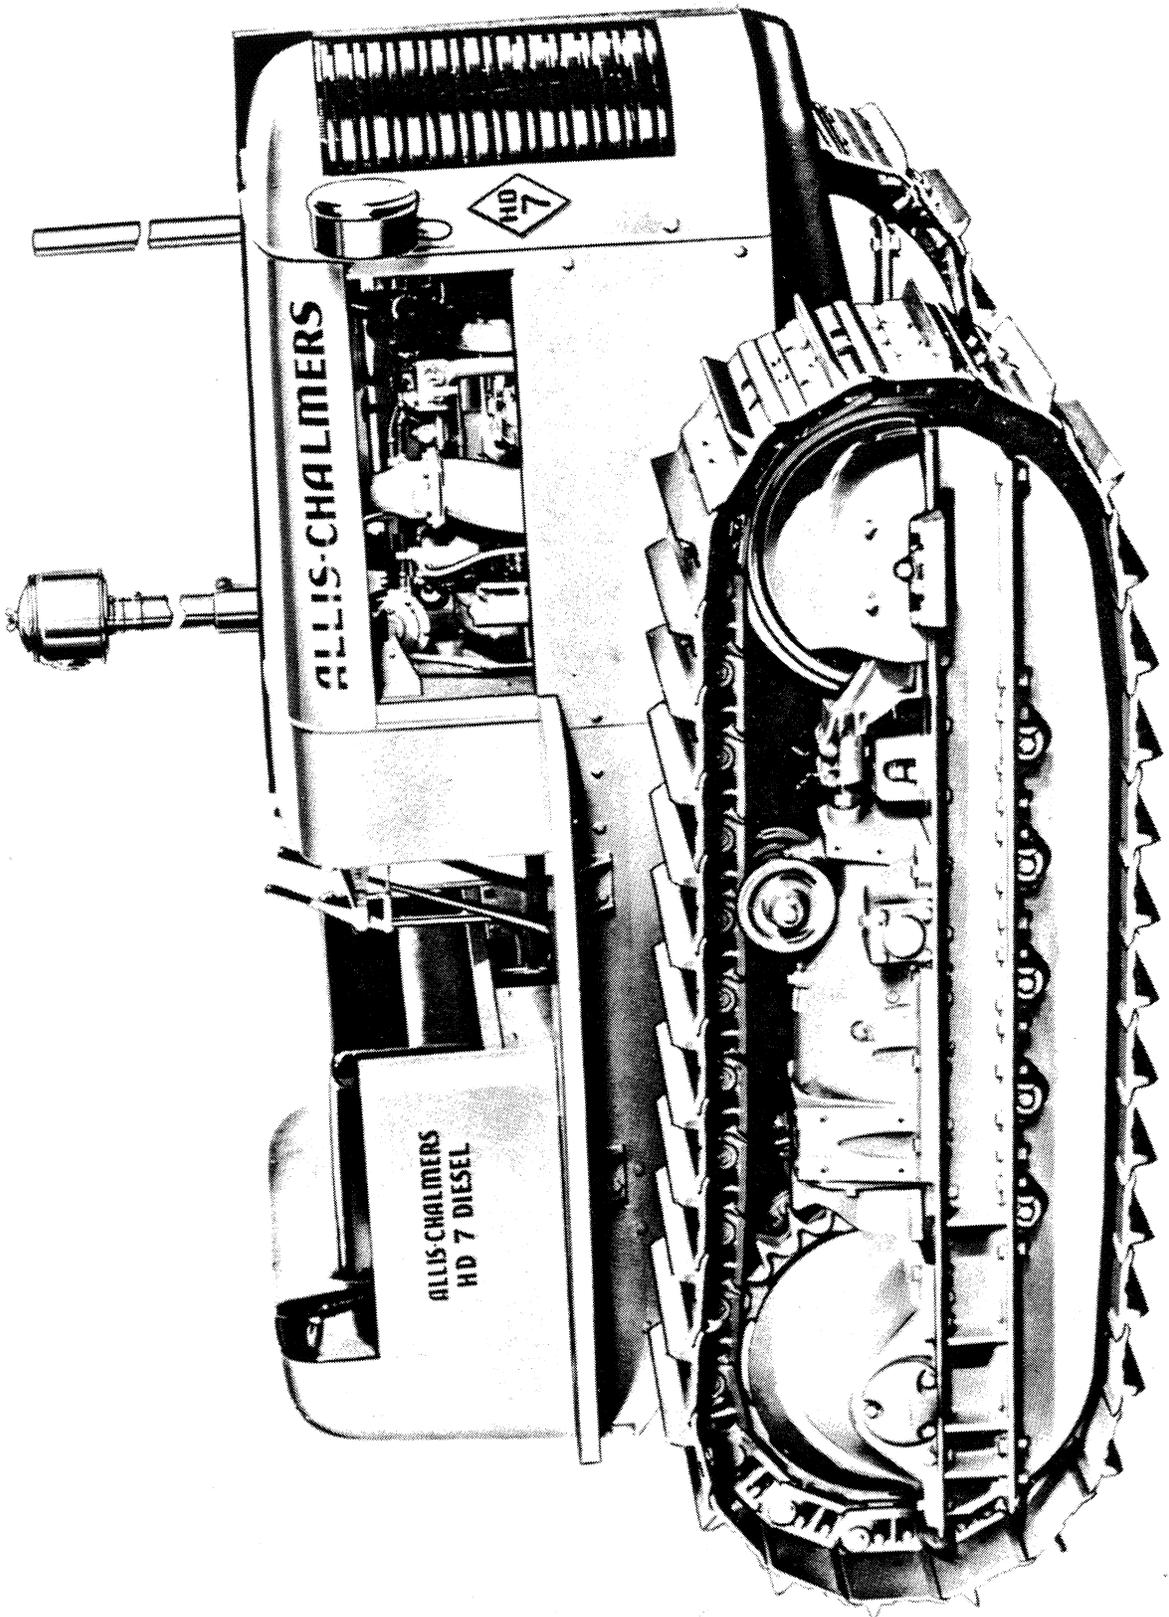


MODEL "HD 7" TRACTOR

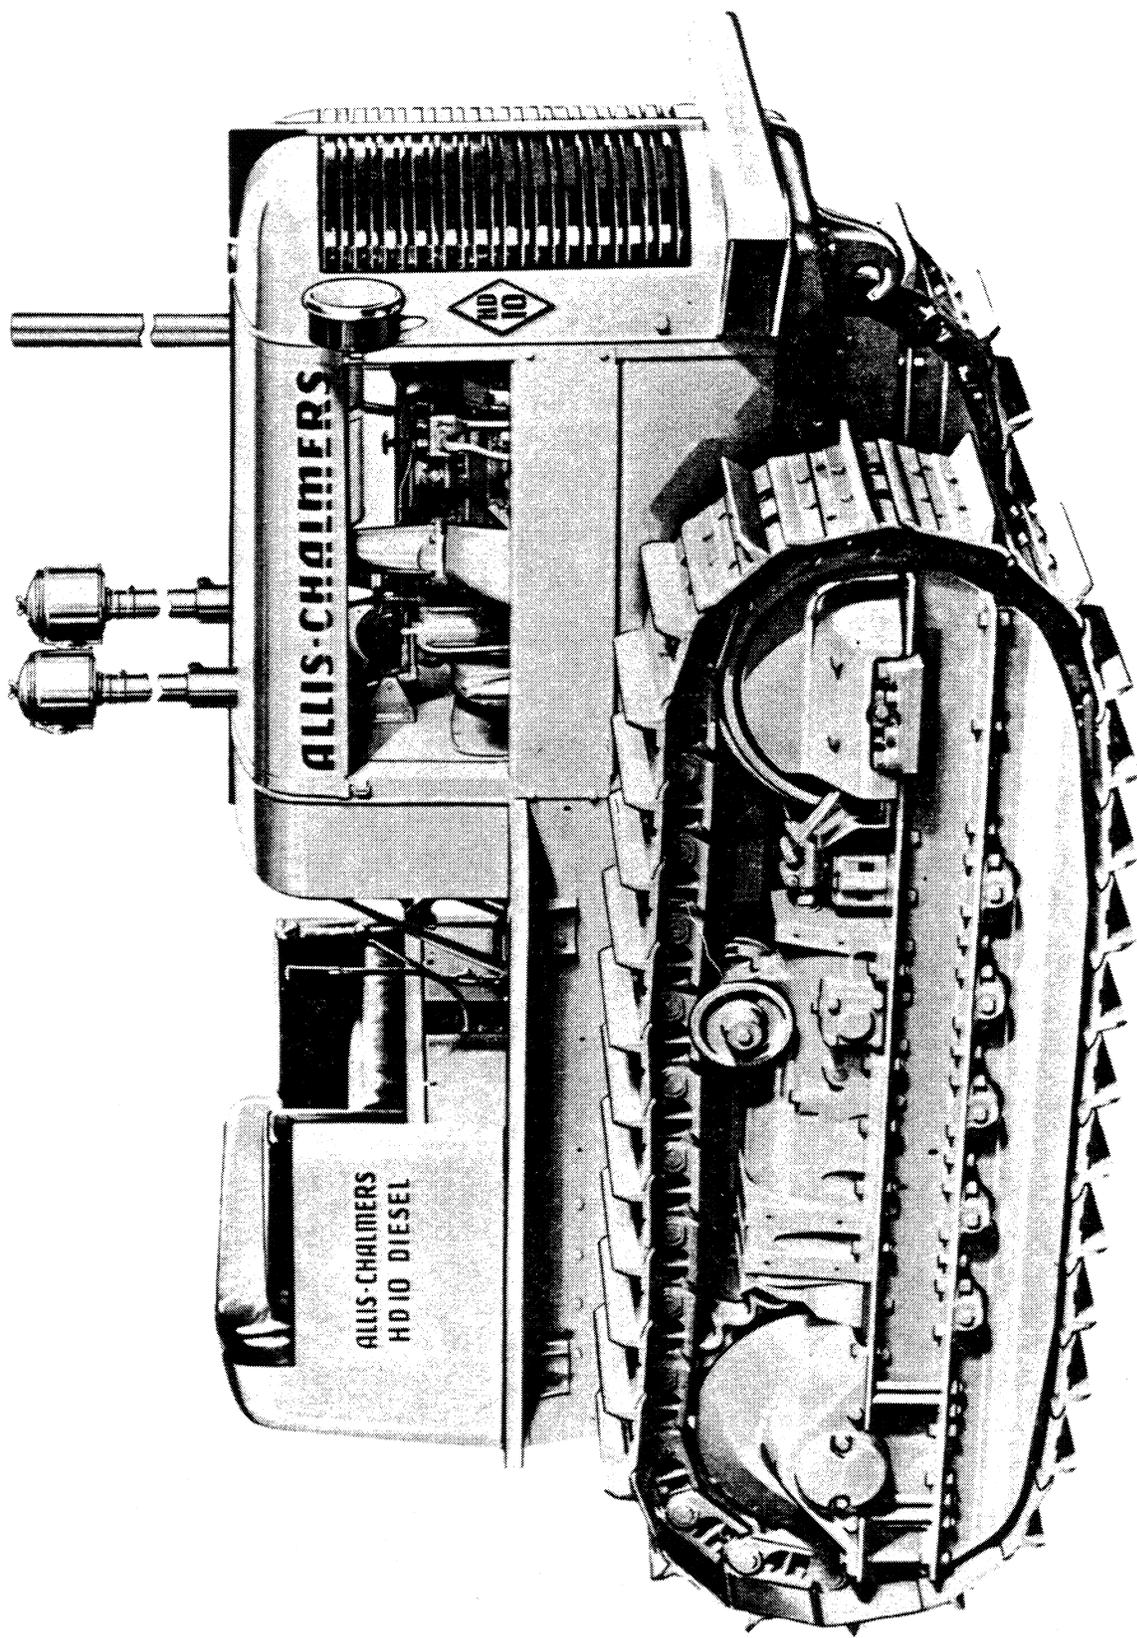


**MODEL "HD 10" TRACTOR**

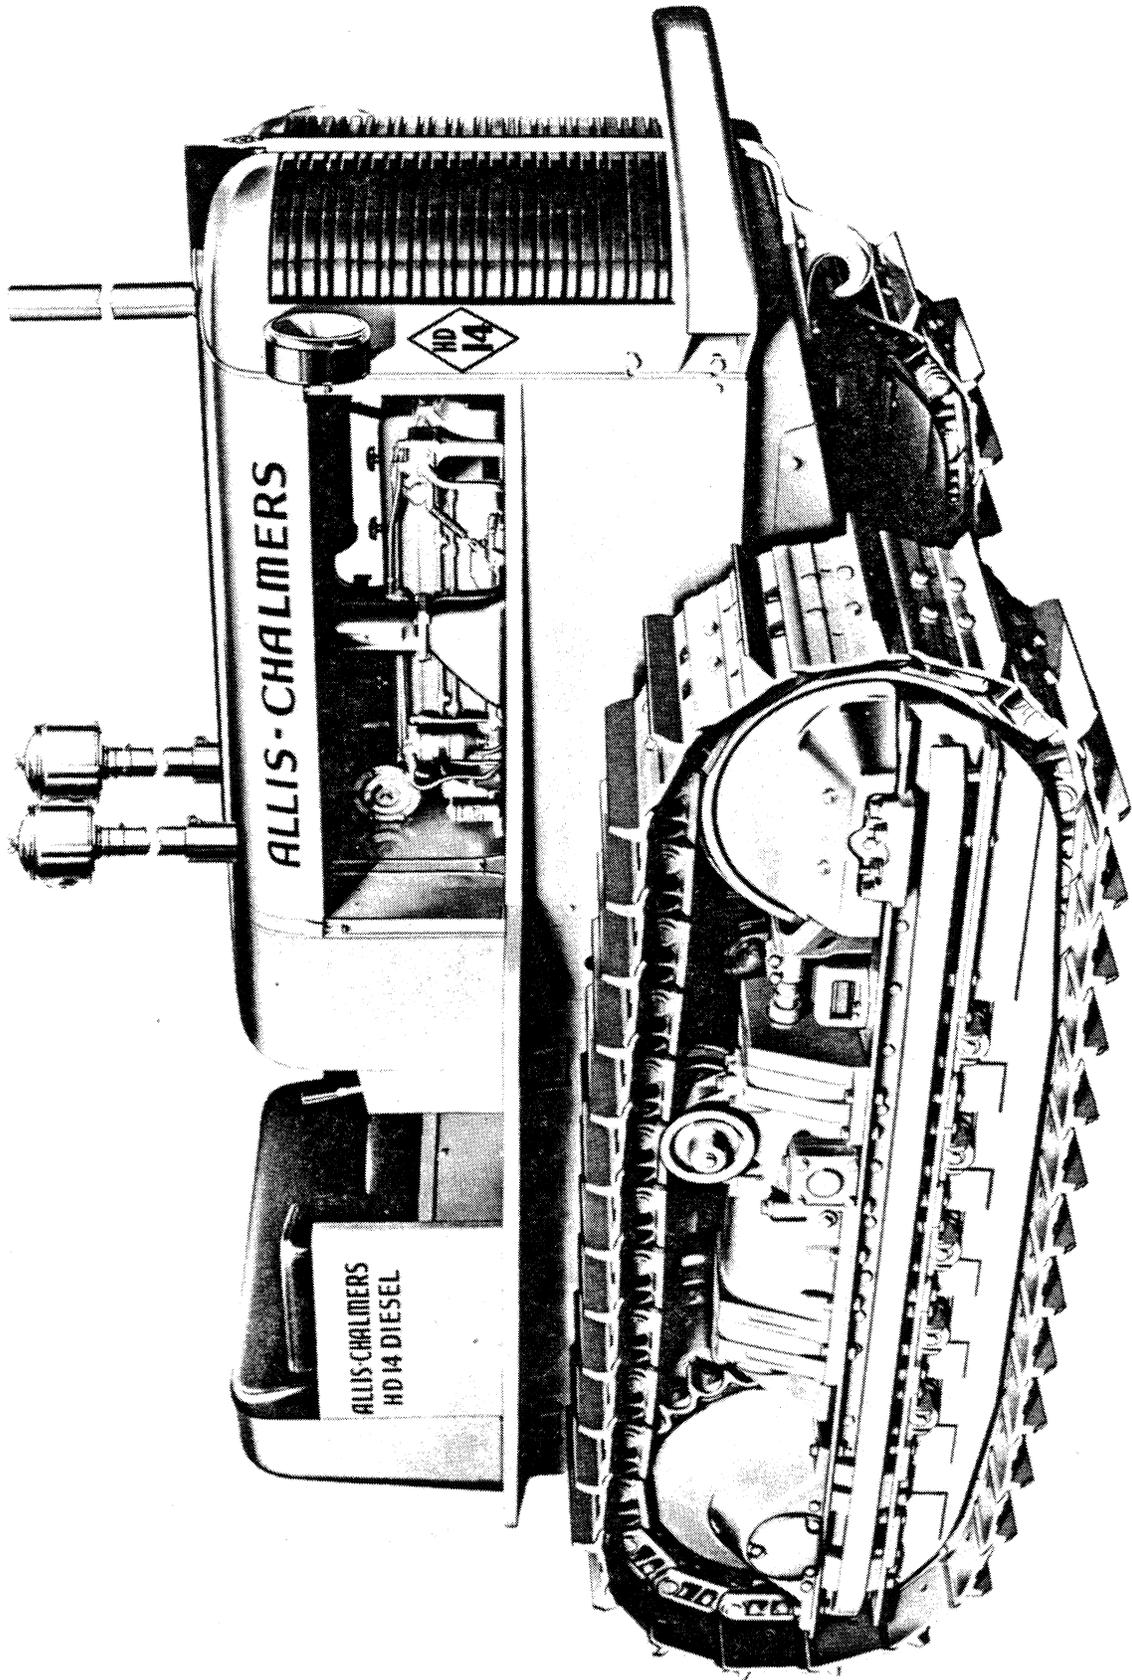



**MODEL "HD 14" TRACTOR**

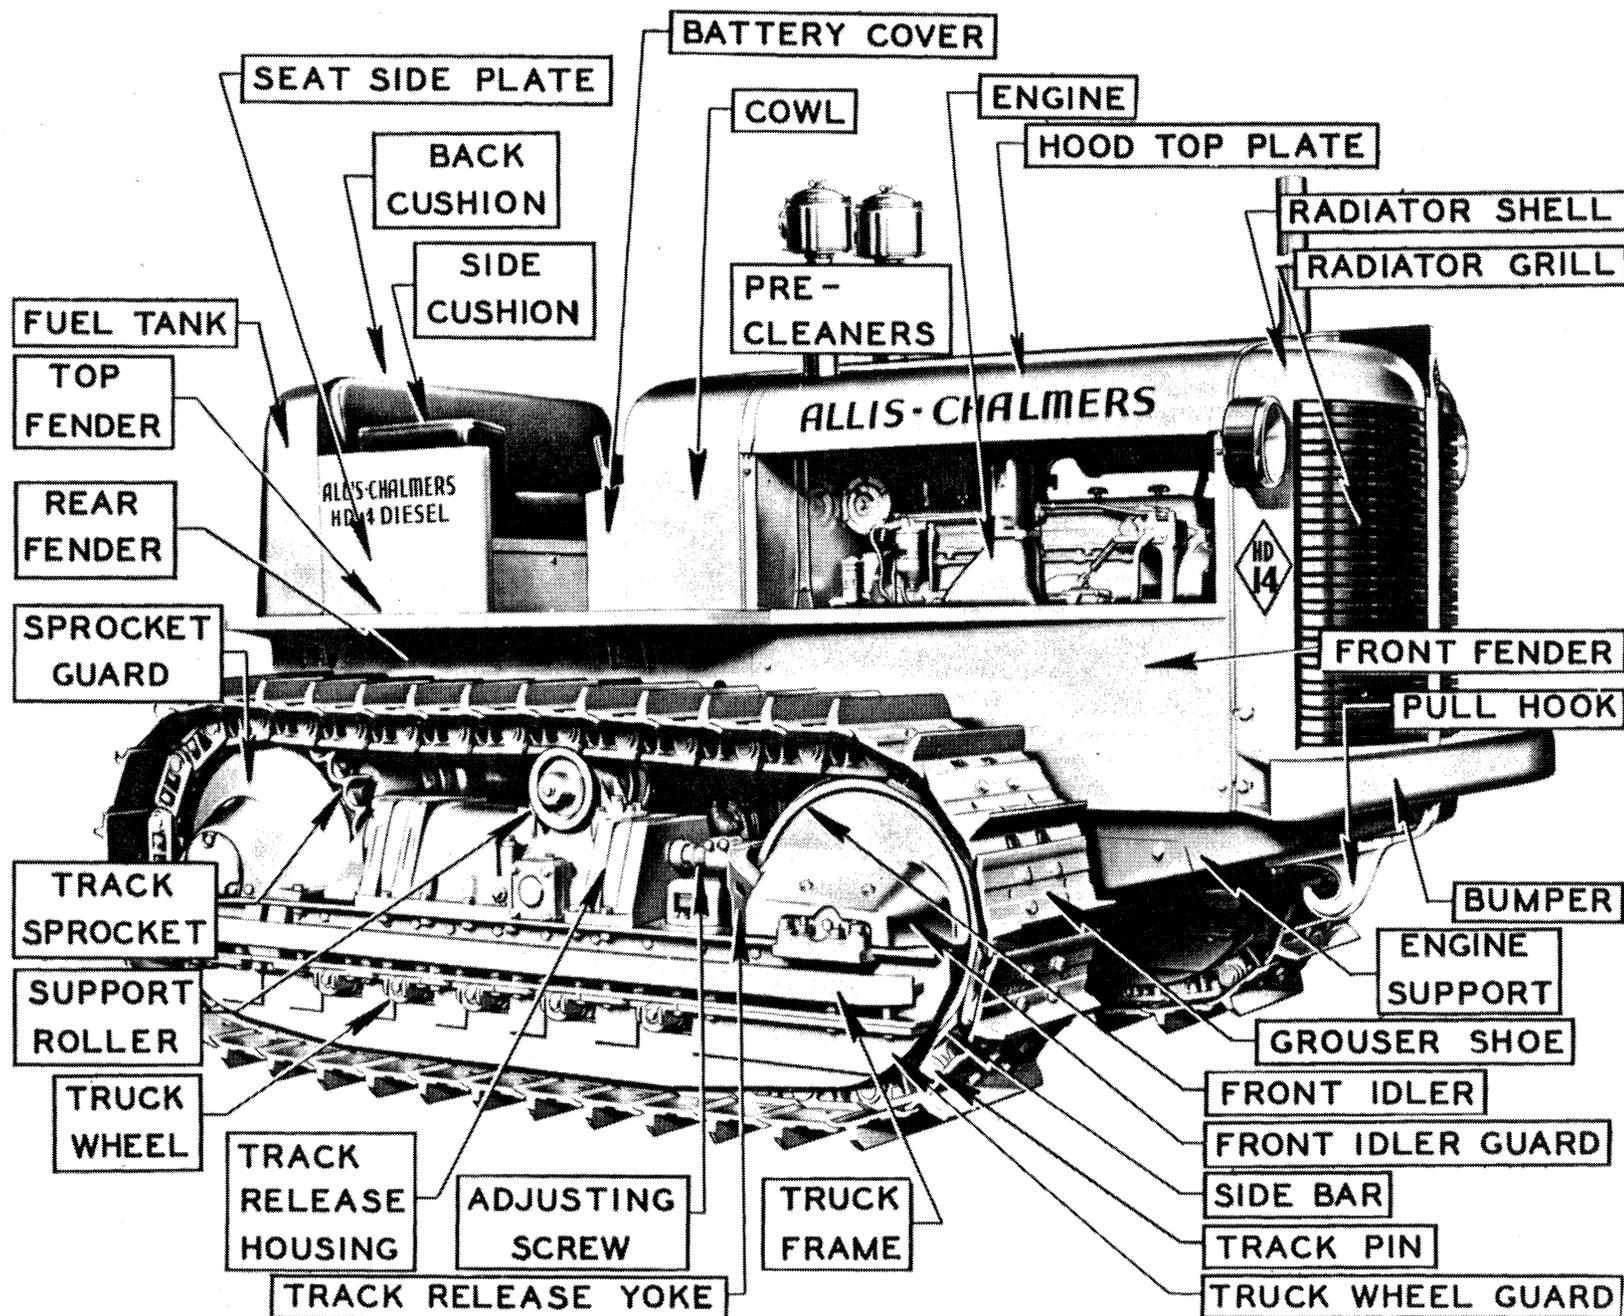


**"HD 14" TRACTOR NOMENCLATURE**

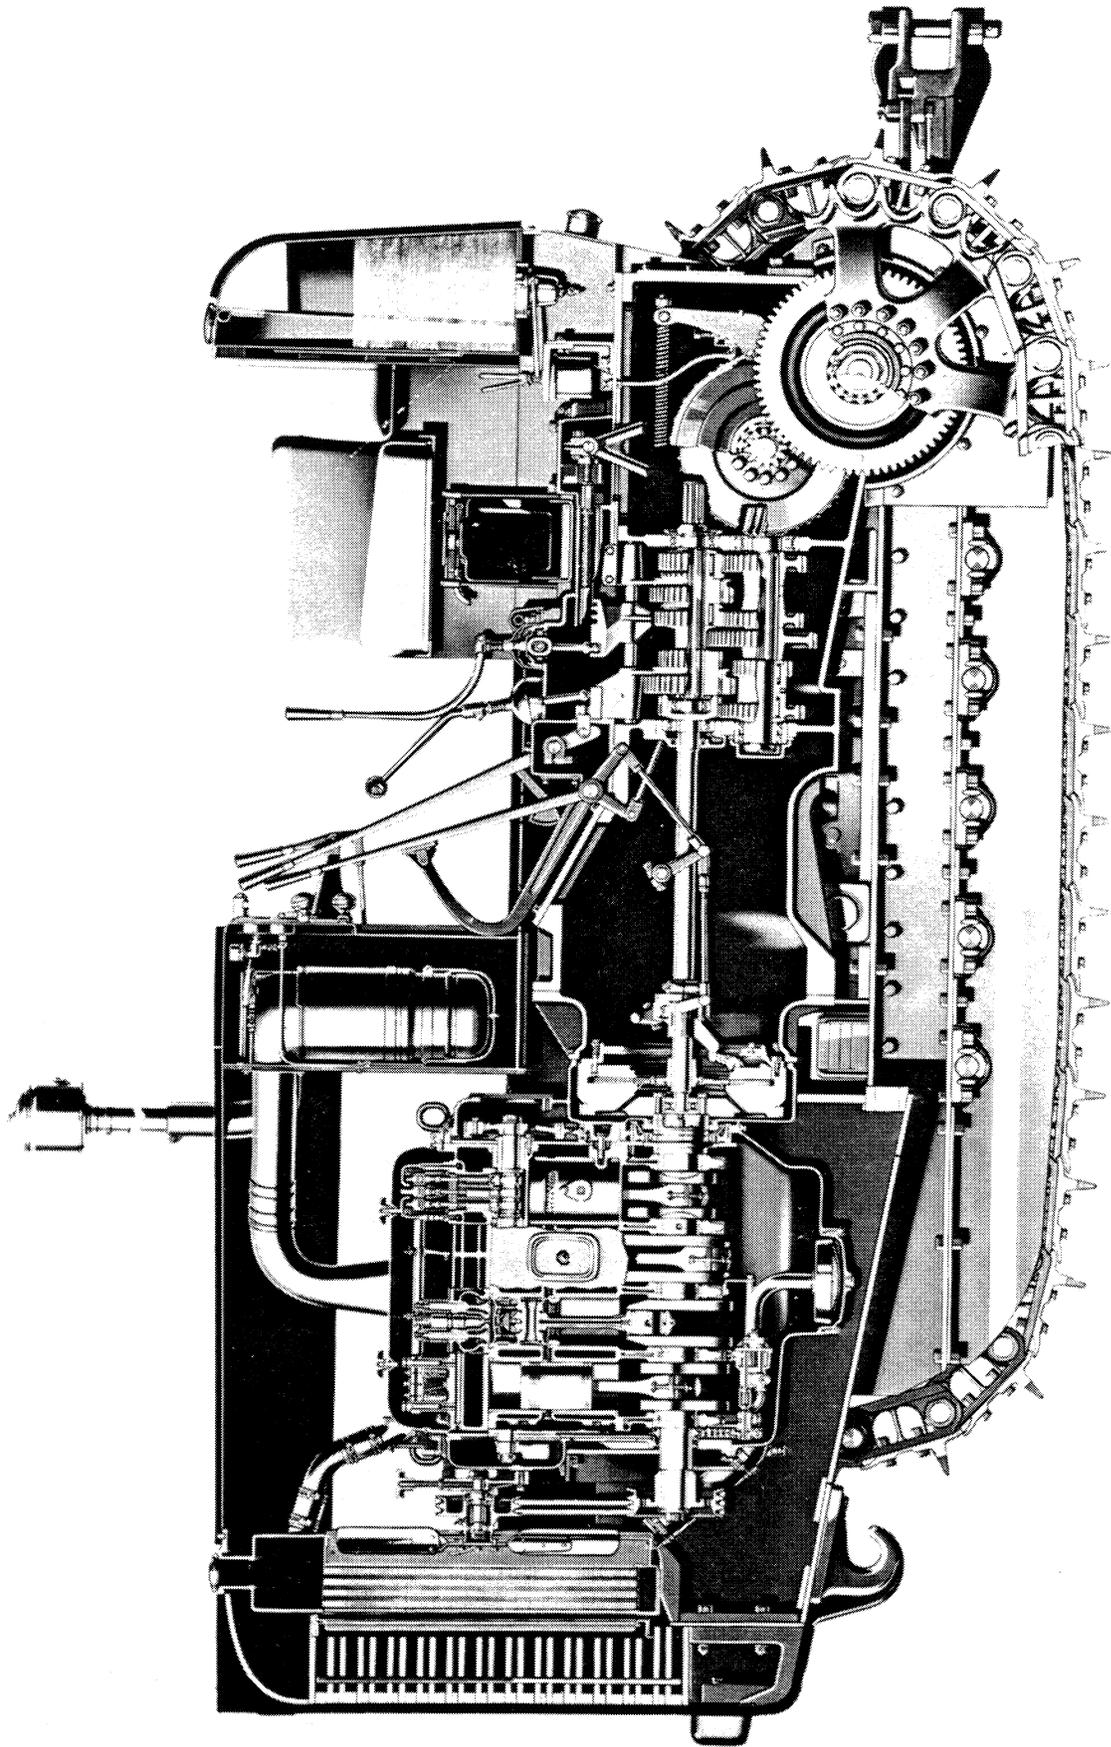


**MODEL "HD 10" TRACTOR**

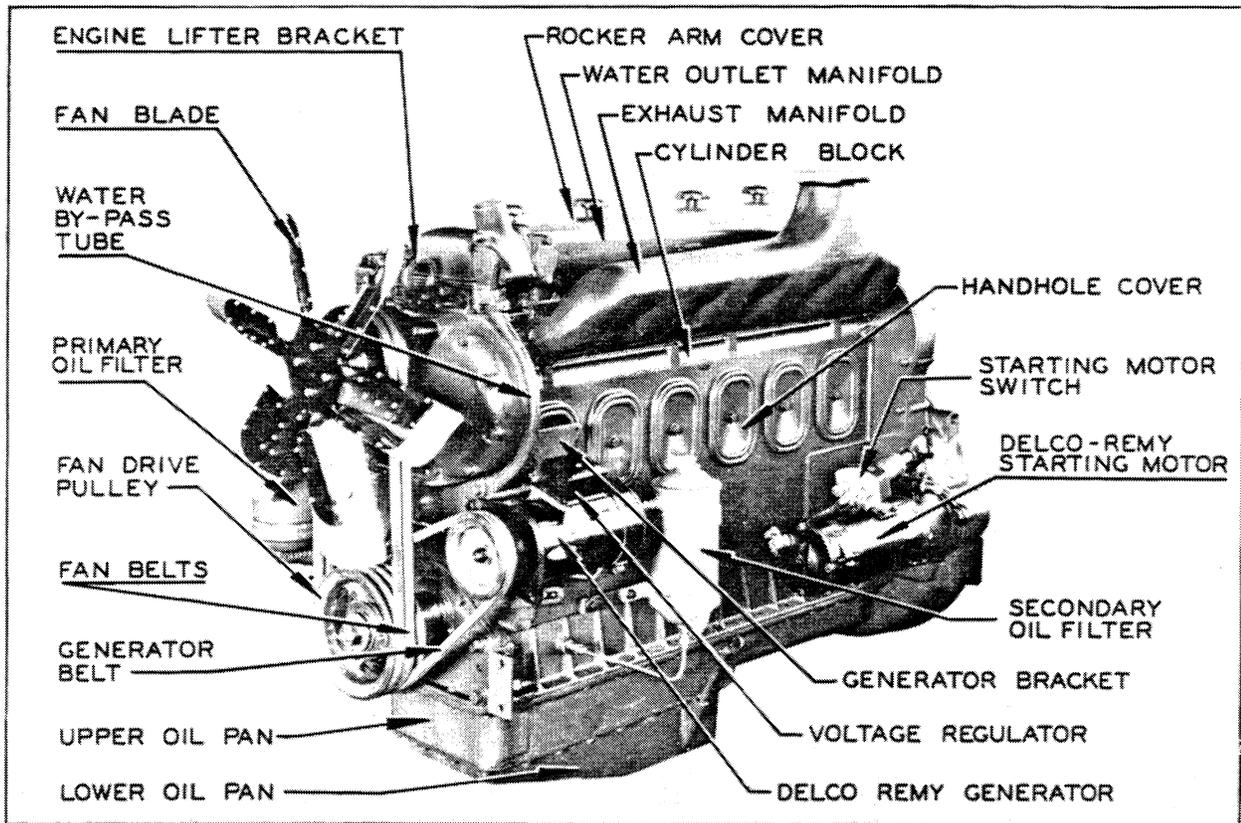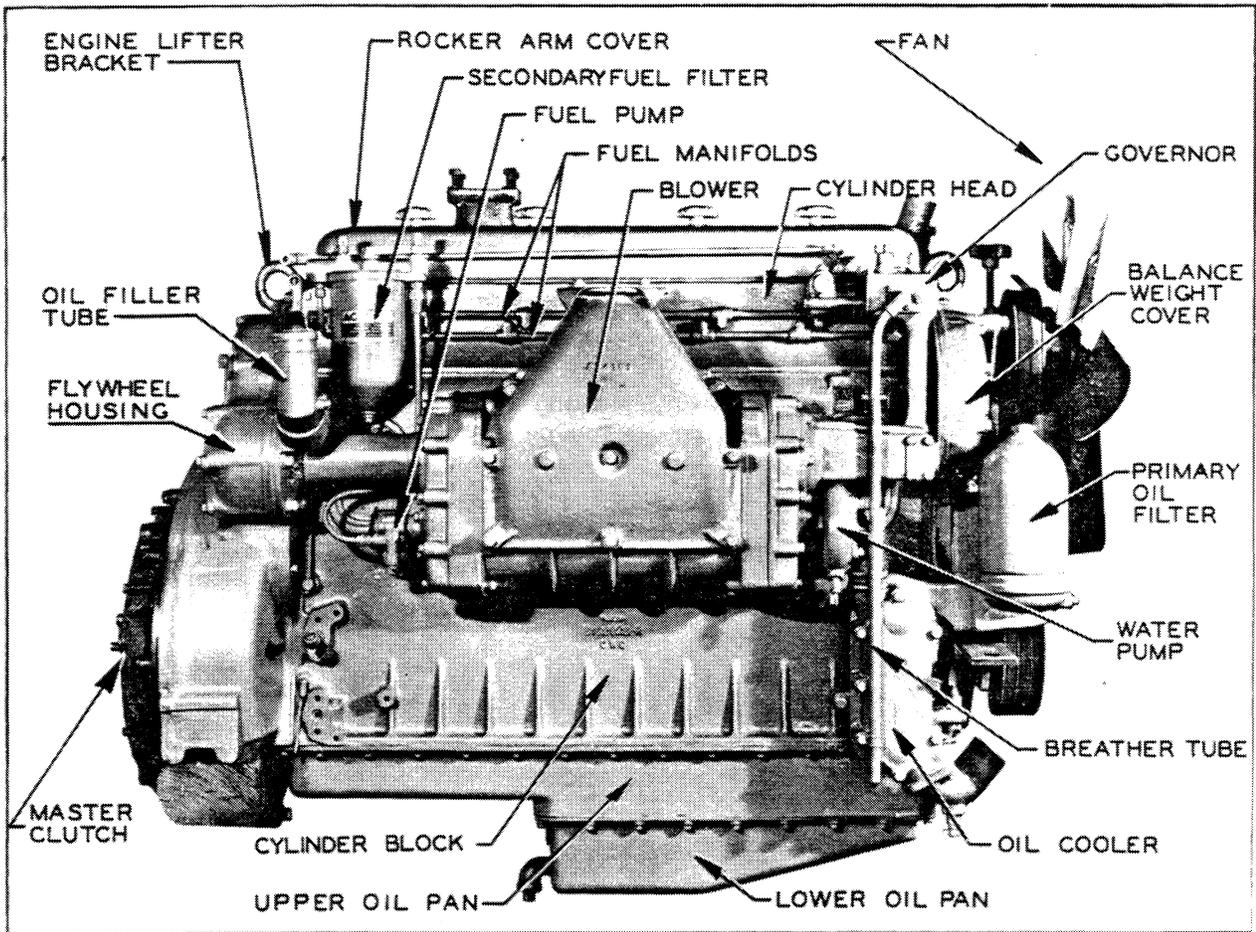

**"HD 14" ENGINE NOMENCLATURE**

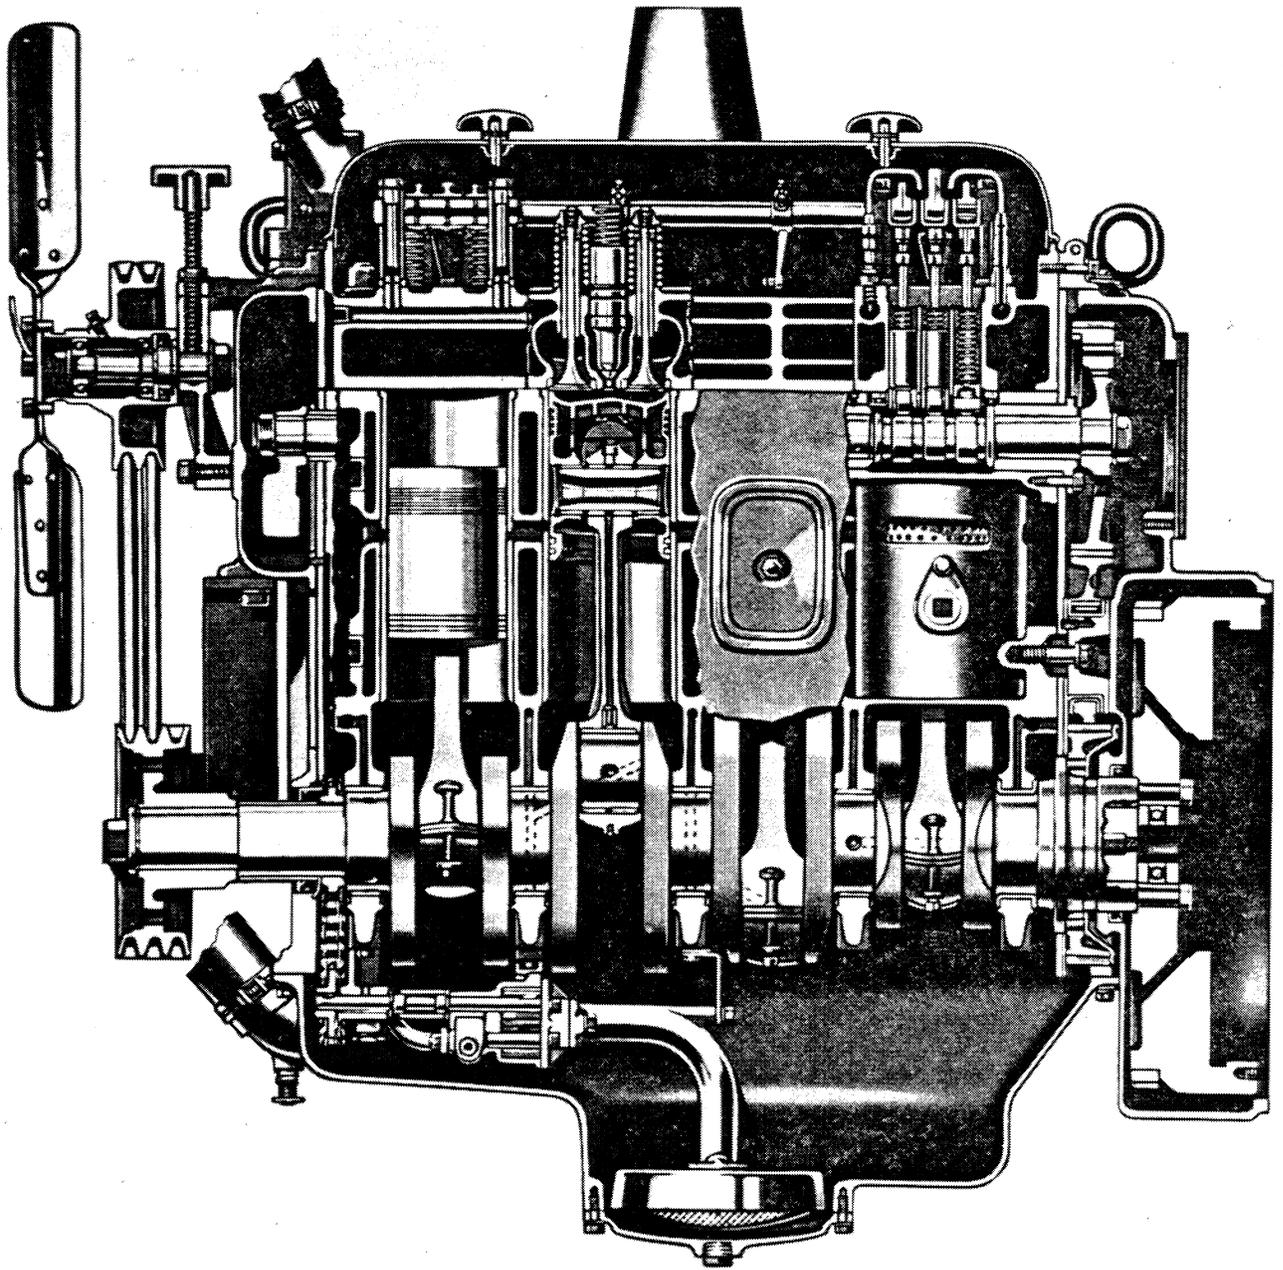

**SECTIONAL VIEW OF "HD 10" ENGINE**

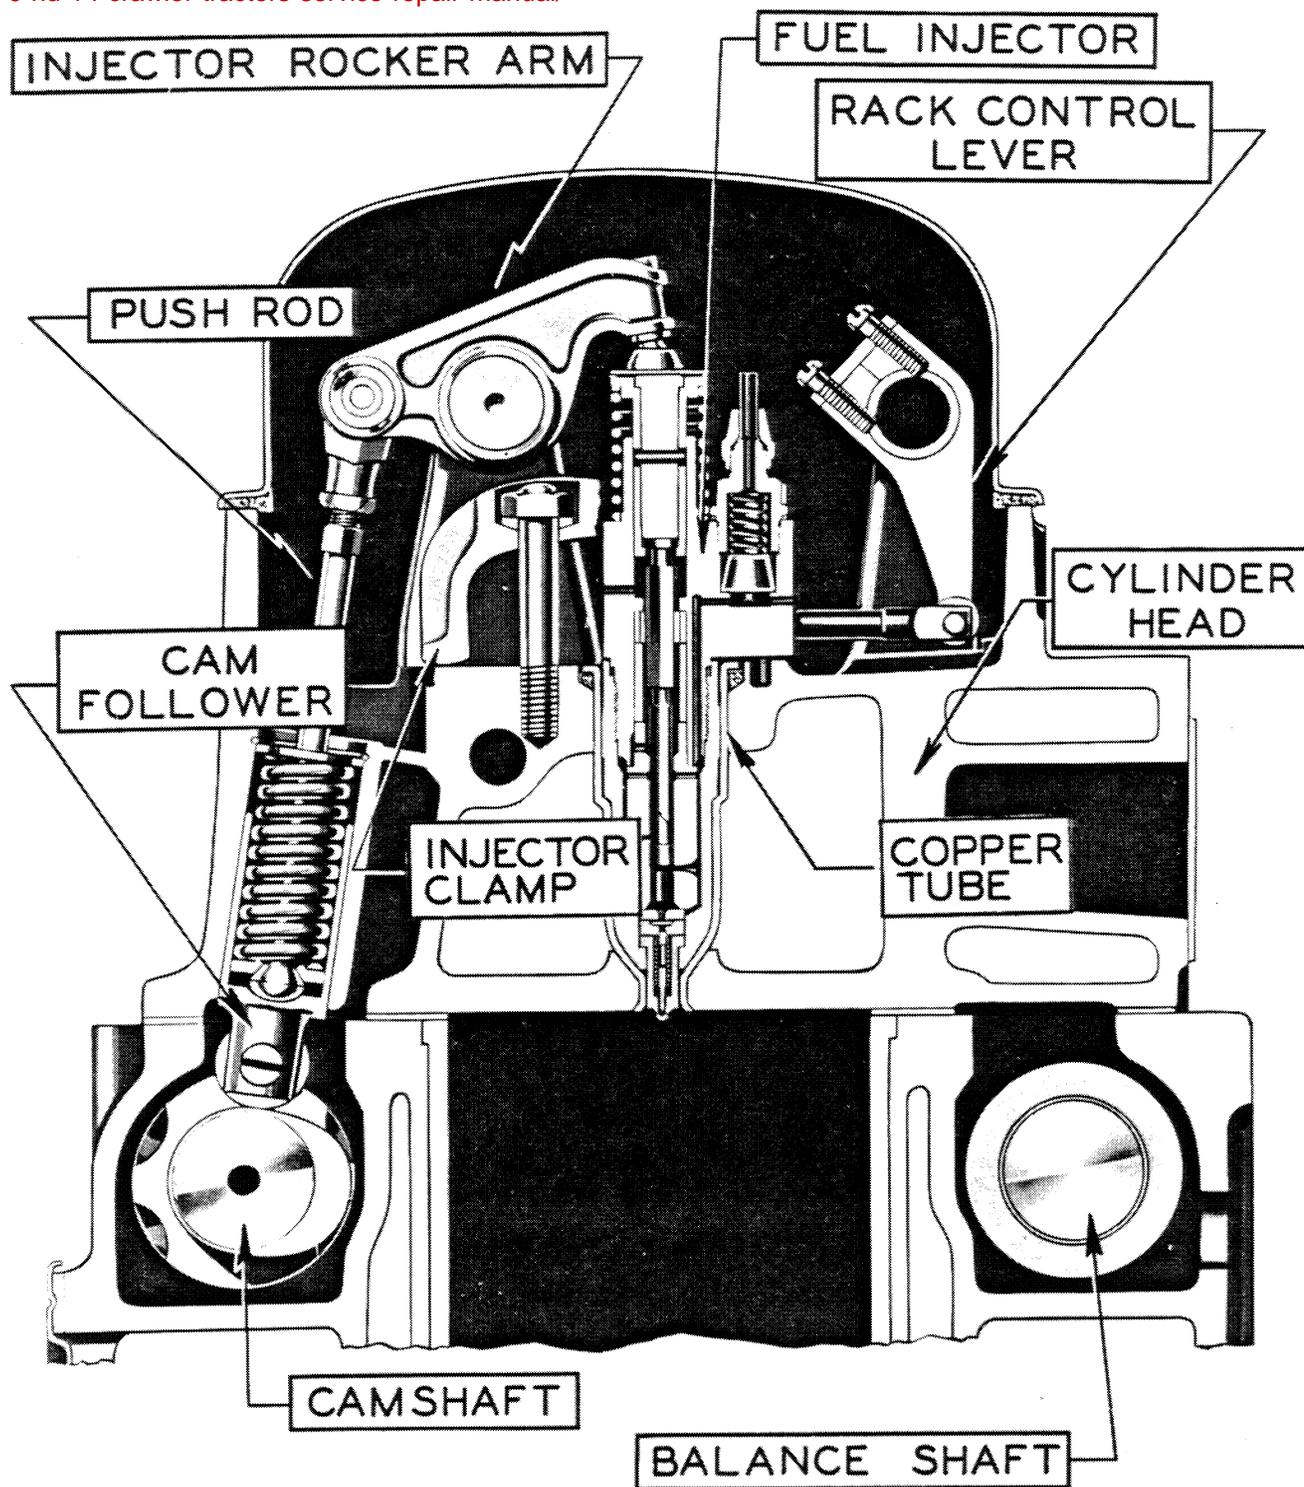

## INJECTOR & OPERATING MECHANISM