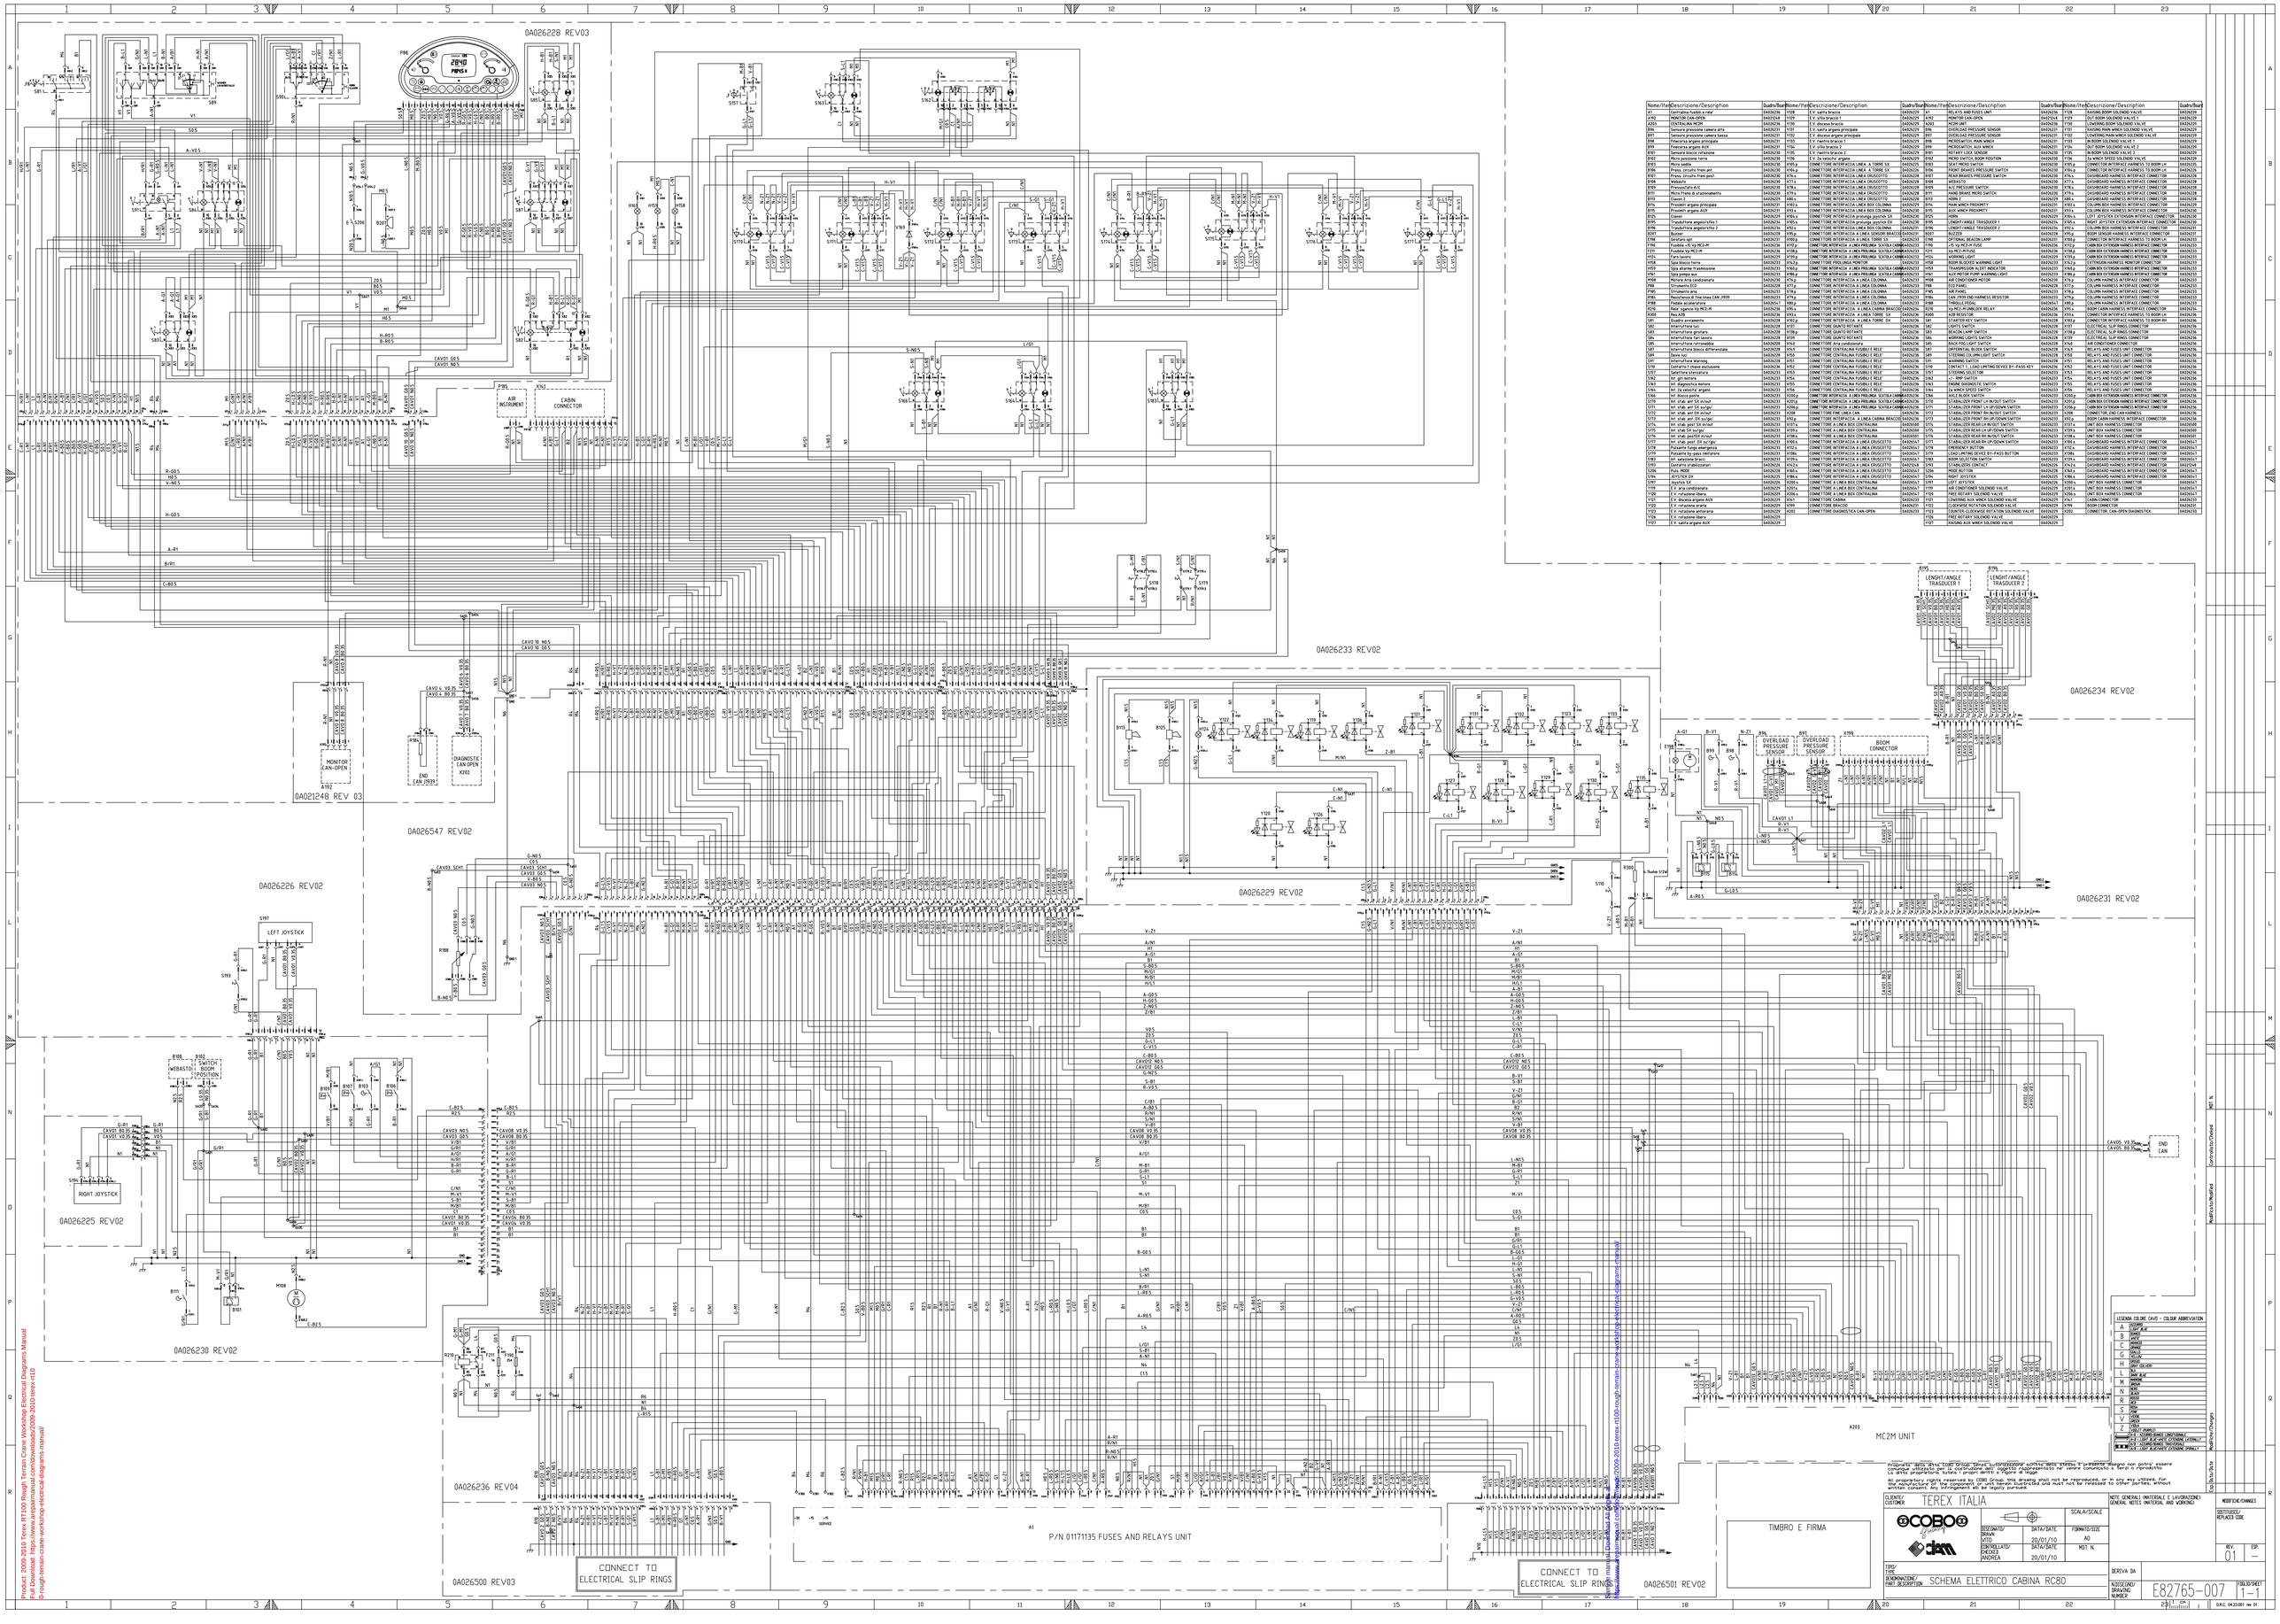

Name/Item	Descrizione/Description	Quadro/Page	Name/Item	Descrizione/Description	Quadro/Page	Name/Item	Descrizione/Description	Quadro/Page	Name/Item	Descrizione/Description	Quadro/Page
A1	Centralina fusibili e rele'	0A026236	Y128	E.V. salita braccio	0A026229	A1	RELAYS AND FUSES UNIT	0A026236	Y128	RAISING BOOM SOLENOID VALVE	0A026229
A192	MONITOR CAN-OPEN	0A021248	Y129	E.V. alto braccio 1	0A026229	A192	MONITOR CAN-OPEN	0A021248	Y129	OUT BOOM SOLENOID VALVE 1	0A026229
A203	CENTRALINA MC2M	0A026236	Y130	E.V. discesa braccio	0A026229	A203	MC2M UNIT	0A026236	Y130	LOWERING BOOM SOLENOID VALVE	0A026229
B96	Sensore pressione camera alta	0A026231	Y131	E.V. salita argano principale	0A026229	B96	OVERLOAD PRESSURE SENSOR	0A026231	Y131	RAISING MAIN WINCH SOLENOID VALVE	0A026229
B97	Sensore pressione camera bassa	0A026231	Y132	E.V. discesa argano principale	0A026229	B97	OVERLOAD PRESSURE SENSOR	0A026231	Y132	LOWERING MAIN WINCH SOLENOID VALVE	0A026229
B98	Finecorsa argano principale	0A026231	Y133	E.V. rientro braccio 1	0A026229	B98	MEMORIZATION MAIN WINCH	0A026231	Y133	IN BOOM SOLENOID VALVE 1	0A026229
B99	Finecorsa argano AUX	0A026231	Y134	E.V. alto braccio 2	0A026229	B99	MEMORIZATION AUX WINCH	0A026231	Y134	OUT BOOM SOLENOID VALVE 2	0A026229
B101	Sensore blocco rotazione	0A026238	Y135	E.V. rientro braccio 2	0A026229	B101	ROTARY LOCK SENSOR	0A026238	Y135	IN BOOM SOLENOID VALVE 2	0A026229
B102	Micro posizione terra	0A026238	Y136	E.V. 2a velocita' argano	0A026229	B102	MICRO SWITCH, BOOM POSITION	0A026238	Y136	2a WINCH SPEED SOLENOID VALVE	0A026229
B103	Micro sedile	0A026238	X96.g	CONNETTORE INTERFACIA LINEA A TORRE SX	0A026235	B103	SEAT MICRO SWITCH	0A026235	X96.g	CONNECTOR INTERFACE HARNESS TO BOOM LH	0A026235
B106	Press. circuito freni ant.	0A026238	X96.g	CONNETTORE INTERFACIA LINEA A TORRE SX	0A026236	B106	FRONT BRAKES PRESSURE SWITCH	0A026238	X96.g	CONNECTOR INTERFACE HARNESS TO BOOM LH	0A026235
B107	Press. circuito freni post.	0A026238	X96.g	CONNETTORE INTERFACIA LINEA CRUSCOTTO	0A026238	B107	REAR BRAKES PRESSURE SWITCH	0A026238	X96.g	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026235
B108	Webasto	0A026238	X71.s	CONNETTORE INTERFACIA LINEA CRUSCOTTO	0A026238	B108	WEBASTO	0A026238	X71.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026238
B109	Pressostato A/C	0A026238	X79.a	CONNETTORE INTERFACIA LINEA CRUSCOTTO	0A026238	B109	A/C PRESSURE SWITCH	0A026238	X79.a	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026238
B111	Micro freno di stazionamento	0A026238	X79.s	CONNETTORE INTERFACIA LINEA CRUSCOTTO	0A026238	B111	HAND BRAKE MICRO SWITCH	0A026238	X79.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026238
B114	Cicalino	0A026238	X79.c	CONNETTORE INTERFACIA LINEA CRUSCOTTO	0A026238	B114	BUZZER	0A026238	X79.c	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026238
B115	Pressioni argano principale	0A026231	X92.a	CONNETTORE INTERFACIA LINEA BOX COLONNA	0A026235	B115	MAIN WINCH PRESSURE	0A026231	X92.a	COLUMN BOX HARNESS INTERFACE CONNECTOR	0A026235
B116	Pressioni argano AUX	0A026231	X93.a	CONNETTORE INTERFACIA LINEA BOX COLONNA	0A026235	B116	AUX WINCH PRESSURE	0A026231	X93.a	COLUMN BOX HARNESS INTERFACE CONNECTOR	0A026235
B125	Cicalino	0A026229	X96.a	CONNETTORE INTERFACIA pulsante joystick SX	0A026235	B125	HORN	0A026229	X96.a	LEFT JOYSTICK EXTENSION INTERFACE CONNECTOR	0A026235
B195	Trasduttore angolo/Ultra 1	0A026236	X105.a	CONNETTORE INTERFACIA pulsante joystick DX	0A026235	B195	LENGHT/ANGLE TRASDUCER 1	0A026236	X105.a	RIGHT JOYSTICK EXTENSION INTERFACE CONNECTOR	0A026235
B196	Trasduttore angolo/Ultra 2	0A026236	X92.a	CONNETTORE INTERFACIA LINEA BOX COLONNA	0A026235	B196	LENGHT/ANGLE TRASDUCER 2	0A026236	X92.a	COLUMN BOX HARNESS INTERFACE CONNECTOR	0A026235
B307	Buzzer	0A026238	X95.g	CONNETTORE INTERFACIA A LINEA SENSORI BRACCIO	0A026235	B307	BUZZER	0A026238	X95.g	BOOM SENSOR HARNESS INTERFACE CONNECTOR	0A026235
E198	Girofaro opt	0A026229	X98.g	CONNETTORE INTERFACIA A LINEA TORRE SX	0A026235	E198	OPTIONAL BEACON LAMP	0A026229	X98.g	CONNECTOR INTERFACE HARNESS TO BOOM LH	0A026235
F96	Fusibile =5 Sq MC2-M	0A026236	X112.g	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	F96	=5 Sq MC2-M FUSE	0A026236	X112.g	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
F201	Fusibile 1q MC2-M	0A026236	X108.g	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	F201	1q MC2-M FUSE	0A026236	X108.g	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
H24.s	Fari lavoro	0A026229	X101.g	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	H24.s	WORKING LIGHT	0A026229	X101.g	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
H58	Spia blocco terra	0A026233	X94.g	CONNETTORE PRELUBIA MONITOR	0A026233	H58	BOOM BLOCKED WARNING LIGHT	0A026233	X94.g	EXTENSION HARNESS MONITOR CONNECTOR	0A026235
H59	Spia allarme trasmissione	0A026233	X96.g	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	H59	TRANSMISSION ALERT INDICATOR	0A026233	X96.g	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
H94	Spia pompa aux	0A026233	X96.g	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	H94	AUX MOTOR PUMP WARNING LIGHT	0A026233	X96.g	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
M98	Motore Aria condizionata	0A026238	X76.g	CONNETTORE INTERFACIA A LINEA COLONNA	0A026235	M98	AIR CONDITIONER MOTOR	0A026238	X76.g	COLUMN HARNESS INTERFACE CONNECTOR	0A026235
P88	Tachimetro ant.	0A026238	X78.g	CONNETTORE INTERFACIA A LINEA COLONNA	0A026235	P88	AIR PANEL	0A026238	X78.g	COLUMN HARNESS INTERFACE CONNECTOR	0A026235
P185	Tachimetro aria	0A026238	X78.g	CONNETTORE INTERFACIA A LINEA COLONNA	0A026235	P185	AIR PANEL	0A026238	X78.g	COLUMN HARNESS INTERFACE CONNECTOR	0A026235
R14.s	Resistenza di fine linea CAN J1939	0A026233	X79.g	CONNETTORE INTERFACIA A LINEA COLONNA	0A026235	R14.s	CAN J1939 END HARNESS RESISTOR	0A026233	X79.g	COLUMN HARNESS INTERFACE CONNECTOR	0A026235
R88	Pedale acceleratore	0A026234	X88.g	CONNETTORE INTERFACIA A LINEA COLONNA	0A026235	R88	THROTTLE PEDAL	0A026234	X88.g	COLUMN HARNESS INTERFACE CONNECTOR	0A026235
R210	Rele' sganio 1q MC2-M	0A026236	X95.s	CONNETTORE INTERFACIA A LINEA CABINA BRACCIO	0A026236	R210	1q MC2-M UNBLOCK RELAY	0A026236	X95.s	BOOM CABIN HARNESS INTERFACE CONNECTOR	0A026236
R300	Res.A28	0A026238	X93.s	CONNETTORE INTERFACIA A LINEA TORRE SX	0A026236	R300	A28 RESISTOR	0A026236	X93.s	CONNECTOR INTERFACE HARNESS TO BOOM LH	0A026236
S81	Quadro avviamento	0A026228	X102.g	CONNETTORE INTERFACIA A LINEA TORRE DX	0A026236	S81	STARTER KEY SWITCH	0A026228	X102.g	CONNECTOR INTERFACE HARNESS TO BOOM RH	0A026236
S82	Interruttore luci	0A026228	X107	CONNETTORE QUINTO ROTANTE	0A026236	S82	LIGHTS SWITCH	0A026228	X107	ELECTRICAL SLIP RINGS CONNECTOR	0A026236
S83	Interruttore girofaro	0A026228	X108.g	CONNETTORE QUINTO ROTANTE	0A026236	S83	BEACON LAMP SWITCH	0A026228	X108.g	ELECTRICAL SLIP RINGS CONNECTOR	0A026236
S84	Interruttore fari lavoro	0A026228	X109	CONNETTORE QUINTO ROTANTE	0A026236	S84	WORKING LIGHTS SWITCH	0A026228	X109	ELECTRICAL SLIP RINGS CONNECTOR	0A026236
S85	Interruttore ritrendina	0A026228	X4.0	CONNETTORE Aria condizionata	0A026236	S85	BACK POLE LIGHT SWITCH	0A026228	X4.0	AIR CONDITIONER CONNECTOR	0A026236
S87	Interruttore blocco differenziale	0A026228	X9.f	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S87	DIFFERENTIAL BLOCK SWITCH	0A026228	X9.f	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S89	Deviatore	0A026228	X9.d	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S89	STEERING COLUMN LIGHT SWITCH	0A026228	X9.d	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S91	Interruttore warning	0A026228	X9.f	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S91	WARNING SWITCH	0A026228	X9.f	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S110	Cicalino chiave esclusione	0A026236	X9.f	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S110	CONTINUOUS LOAD LIMITING DEVICE BY-PASS KEY	0A026236	X9.f	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S192	Int. ant. sinistro	0A026233	X9.c	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S192	LH FRONT LIGHTS SWITCH	0A026233	X9.c	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S192	Int. ant. motore	0A026233	X9.c	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S192	+-- ENG SWITCH	0A026233	X9.c	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S193	Int. diagnostica motore	0A026233	X9.f	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S193	ENGINE DIAGNOSTIC SWITCH	0A026233	X9.f	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S194	Int. 2a velocita' argano	0A026233	X9.e	CONNETTORE CENTRALINA FUSIBILI E RELE'	0A026236	S194	2a WINCH SPEED SWITCH	0A026233	X9.e	RELAYS AND FUSES UNIT CONNECTOR	0A026236
S196	Int. blocco perni	0A026233	X205.p	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	S196	AXLE BLOCK SWITCH	0A026233	X205.p	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
S197	Int. stab. ant SX su/giu'	0A026233	X201.p	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	S197	STABALIZER FRONT LH IN/OUT SWITCH	0A026233	X201.p	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
S171	Int. stab. ant SX su/giu'	0A026233	X206.p	CONNETTORE INTERFACIA A LINEA PRELUBIA SCATOLA CABINA	0A026235	S171	STABALIZER FRONT LH UP/DOWN SWITCH	0A026233	X206.p	CABIN BOX EXTENSION HARNESS INTERFACE CONNECTOR	0A026235
S172	Int. stab. ant DX su/giu'	0A026233	X208	CONNETTORE FINE LINEA CAN	0A026236	S172	STABALIZER FRONT RH IN/OUT SWITCH	0A026233	X208	CONNECTOR, END CAN HARNESS	0A026236
S173	Int. stab. ant DX su/giu'	0A026233	X92.p	CONNETTORE INTERFACIA A LINEA CABINA BRACCIO	0A026236	S173	STABALIZER FRONT RH UP/DOWN SWITCH	0A026236	X92.p	BOOM CABIN HARNESS INTERFACE CONNECTOR	0A026236
S175	Int. stab. SX su/giu'	0A026233	X107.s	CONNETTORE A LINEA BOX CENTRALINA	0A026240	S175	STABALIZER REAR LH IN/OUT SWITCH	0A026240	X107.s	UNIT BOX HARNESS CONNECTOR	0A026240
S175	Int. stab. SX su/giu'	0A026233	X109.s	CONNETTORE A LINEA BOX CENTRALINA	0A026240	S175	STABALIZER REAR LH UP/DOWN SWITCH	0A026240	X109.s	UNIT BOX HARNESS CONNECTOR	0A026240
S176	Int. stab. post DX su/giu'	0A026233	X108.s	CONNETTORE A LINEA BOX CENTRALINA	0A026240	S176	STABALIZER REAR RH IN/OUT SWITCH	0A026240	X108.s	UNIT BOX HARNESS CONNECTOR	0A026240
S177	Int. stab. post DX su/giu'	0A026233	X98.s	CONNETTORE INTERFACIA A LINEA CRUSCOTTO	0A026241	S177	STABALIZER REAR RH UP/DOWN SWITCH	0A026233	X98.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026241
S178	Pulsante fungo emergenza	0A026233	X95.s	CONNETTORE INTERFACIA A LINEA CRUSCOTTO	0A026241	S178	EMERGENCY STOP BUTTON	0A026233	X95.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026241
S179	Pulsante by-pass limitatore	0A026233	X106.s	CONNETTORE INTERFACIA A LINEA CRUSCOTTO	0A026241	S179	LOAD LIMITING DEVICE BY-PASS BUTTON	0A026233	X106.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026241
S193	Cicalino sganciato	0A026233	X93.s	CONNETTORE INTERFACIA A LINEA CRUSCOTTO	0A026241	S193	HOOK RELEASED ALARM	0A026233	X93.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026241
S193	Cicalino stabilizzatori	0A026238	X94.s	CONNETTORE INTERFACIA A LINEA CRUSCOTTO	0A026241	S193	STABILIZERS CONTACT	0A026238	X94.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026241
S206	Pals. MODE	0A026228	X98.s	CONNETTORE INTERFACIA A LINEA CRUSCOTTO	0A026241	S206	MODE BUTTON	0A026228	X98.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026241
S196	JOYSTICK DX	0A026229	X96.s	CONNETTORE INTERFACIA A LINEA CRUSCOTTO	0A026241	S196	RIGHT JOYSTICK	0A026229	X96.s	DASHBOARD HARNESS INTERFACE CONNECTOR	0A026241
S197	Joystick SX	0A026226	X205.s	CONNETTORE A LINEA BOX CENTRALINA	0A026241	S197	LEFT JOYSTICK	0A026241	X205.s	UNIT BOX HARNESS CONNECTOR	0A026241
Y119	E.V. aria condizionata	0A026229	X201.s	CONNETTORE A LINEA BOX CENTRALINA	0A026241	Y119	AIR CONDITIONER SOLENOID VALVE	0A026229	X201.s	UNIT BOX HARNESS CONNECTOR	0A026241
Y120	E.V. rotazione libera	0A026229	X206.s	CONNETTORE A LINEA BOX CENTRALINA	0A026241	Y120	FREE ROTARY SOLENOID VALVE	0A026229	X206.s	UNIT BOX HARNESS CONNECTOR	0A026241
Y121	E.V. discesa argano AUX	0A026229	X4.1	CONNETTORE Cabina	0A026233	Y121	LOWERING AUX WINCH SOLENOID VALVE	0A026229	X4.1	CABIN CONNECTOR	0A026233
Y122	E.V. rotazione aranu	0A026229	X99	CONNETTORE BRACCIO	0A026229	Y122	CLOCKWISE ROTATION SOLENOID VALVE	0A026229	X99	BOOM CONNECTOR	0A026229
Y123	E.V. rotazione antiaranu	0A026229	X202	CONNETTORE DIAGNOSTICA CAN-OPEN	0A026233	Y123	COUNTER-CLOCKWISE ROTATION SOLENOID VALVE	0A026229	X202	CONNECTOR, CAN-OPEN DIAGNOSTICA	0A026233
Y124	E.V. rotazione libera	0A026229				Y124	FREE ROTARY SOLENOID VALVE	0A026229			
Y127	E.V. salita argano AUX	0A026229				Y127	RAISING AUX WINCH SOLENOID VALVE	0A026229			

LEGENDA COLORE CAVO - COLOR ABBREVIATION

A	ARANCIO ORANGE
B	BIANCO WHITE
C	CELESTE BLUE
D	DORATO GOLD
G	GRIGIO GRAY
H	GIALLO YELLOW
L	VERDE GREEN
M	MARRONE BROWN
N	NERO BLACK
R	ROSSO RED
S	ROSA PINK
V	VIOLA VIOLET
Z	BLU BLUE
	ALI - FILTRO POWER
	ALA - AZZURRO SKIES (ANTENNA)
	ALB - BIANCO SKIES (ANTENNA)
	ALG - GRIGIO SKIES (ANTENNA)
	ALP - LIGHT BLU WATER (ANTENNA)

Proprietà della ditta TUBO Group. Senza autorizzazione scritta della stessa, il presente disegno non potrà essere comunque utilizzato per la costruzione del oggetto rappresentato né essere comunicato a terzi o riprodotto. La ditta proprietaria tutela i propri diritti a norma di legge.

All proprietary rights reserved by COBO Group. This drawing shall not be reproduced, or in any way utilized, for the manufacture of the components or unit herein illustrated and must not be released to other parties, without written consent. Any infringement will be legally pursued.

CLIENTE/CUSTOMER: TEREX ITALIA

COBO Group — dam

DISEGNATO/DRAWN	DATA/DATE	FORMATO/SIZE	SCALA/SCALE
UTO	20/01/10	A0	
CONTROLLATO/CHECKED	DATA/DATE	MGT N.	
ANDREA	20/01/10		

TIPO/TYPE

DENOMINAZIONE/PART DESCRIPTION: SCHEMA ELETTRICO CABINA RC80

NOTE GENERALI (MATERIALE E LAVORAZIONE) GENERAL NOTES (MATERIAL AND WORKING)

MODIFICHE/CHANGES

SOSTituisce/REPLACES CODE

REV.	ESP.
01	—

DERIVA DA

NUMERO/DRAWING NUMBER: E82765-007

FOGLIO/SHEET 1 - 1

D.R.C. 04.23.001 rev 01

Product: 2009-2010 Terex RT100 Rough Terrain Crane Workshop Electrical Diagrams Manual
Full Download: https://www.arepairmanual.com/downloads/2009-2010-terex-rt10-rough-terrain-crane-workshop-electrical-diagrams-manual/