


Fuel System

Table of Contents

Exploded View	2-2
Specifications	2-4
Special Tools	2-4
Carburetors	2-5
Carburetor Installation	2-5
Coolant Filter Cleaning (U.K. and L4 ~ L5 Models)	2-5

2-2 FUEL SYSTEM


Exploded View

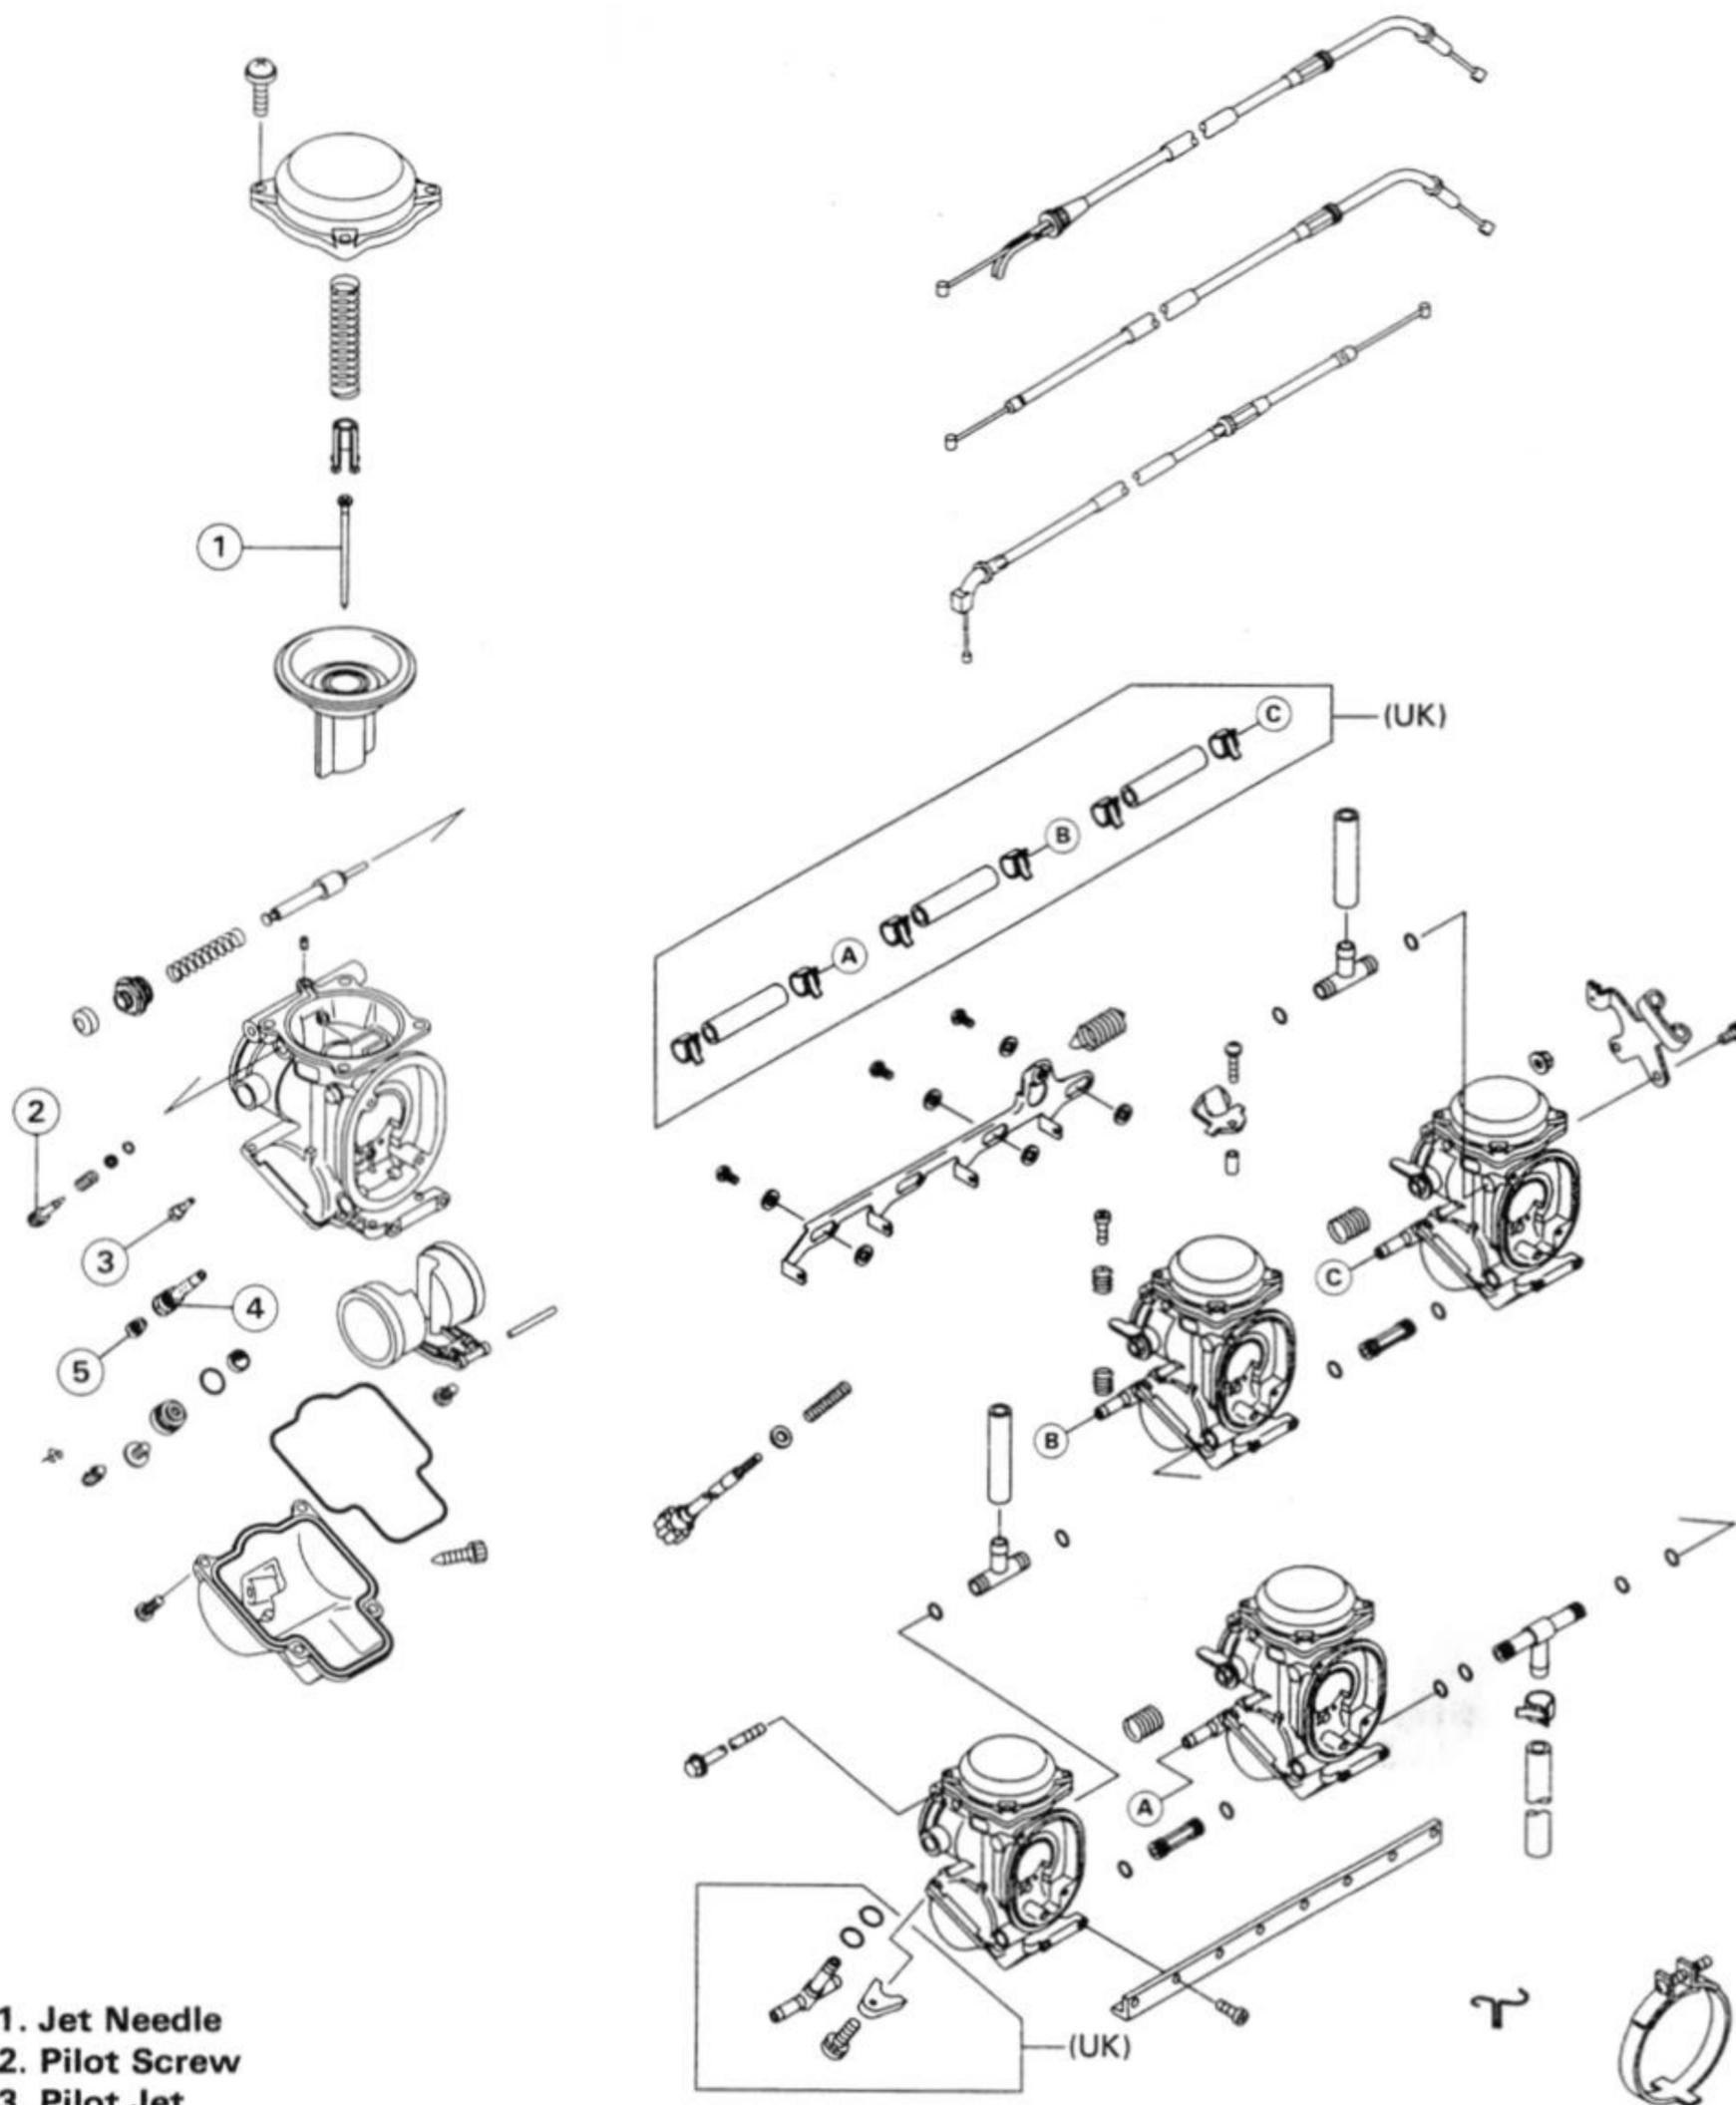

1. Jet Needle
2. Pilot Screw
3. Pilot Jet
4. Needle Jet Holder
5. Main Jet



UK : U.K. and L4 ~ L5 Models

FUEL SYSTEM 2-3

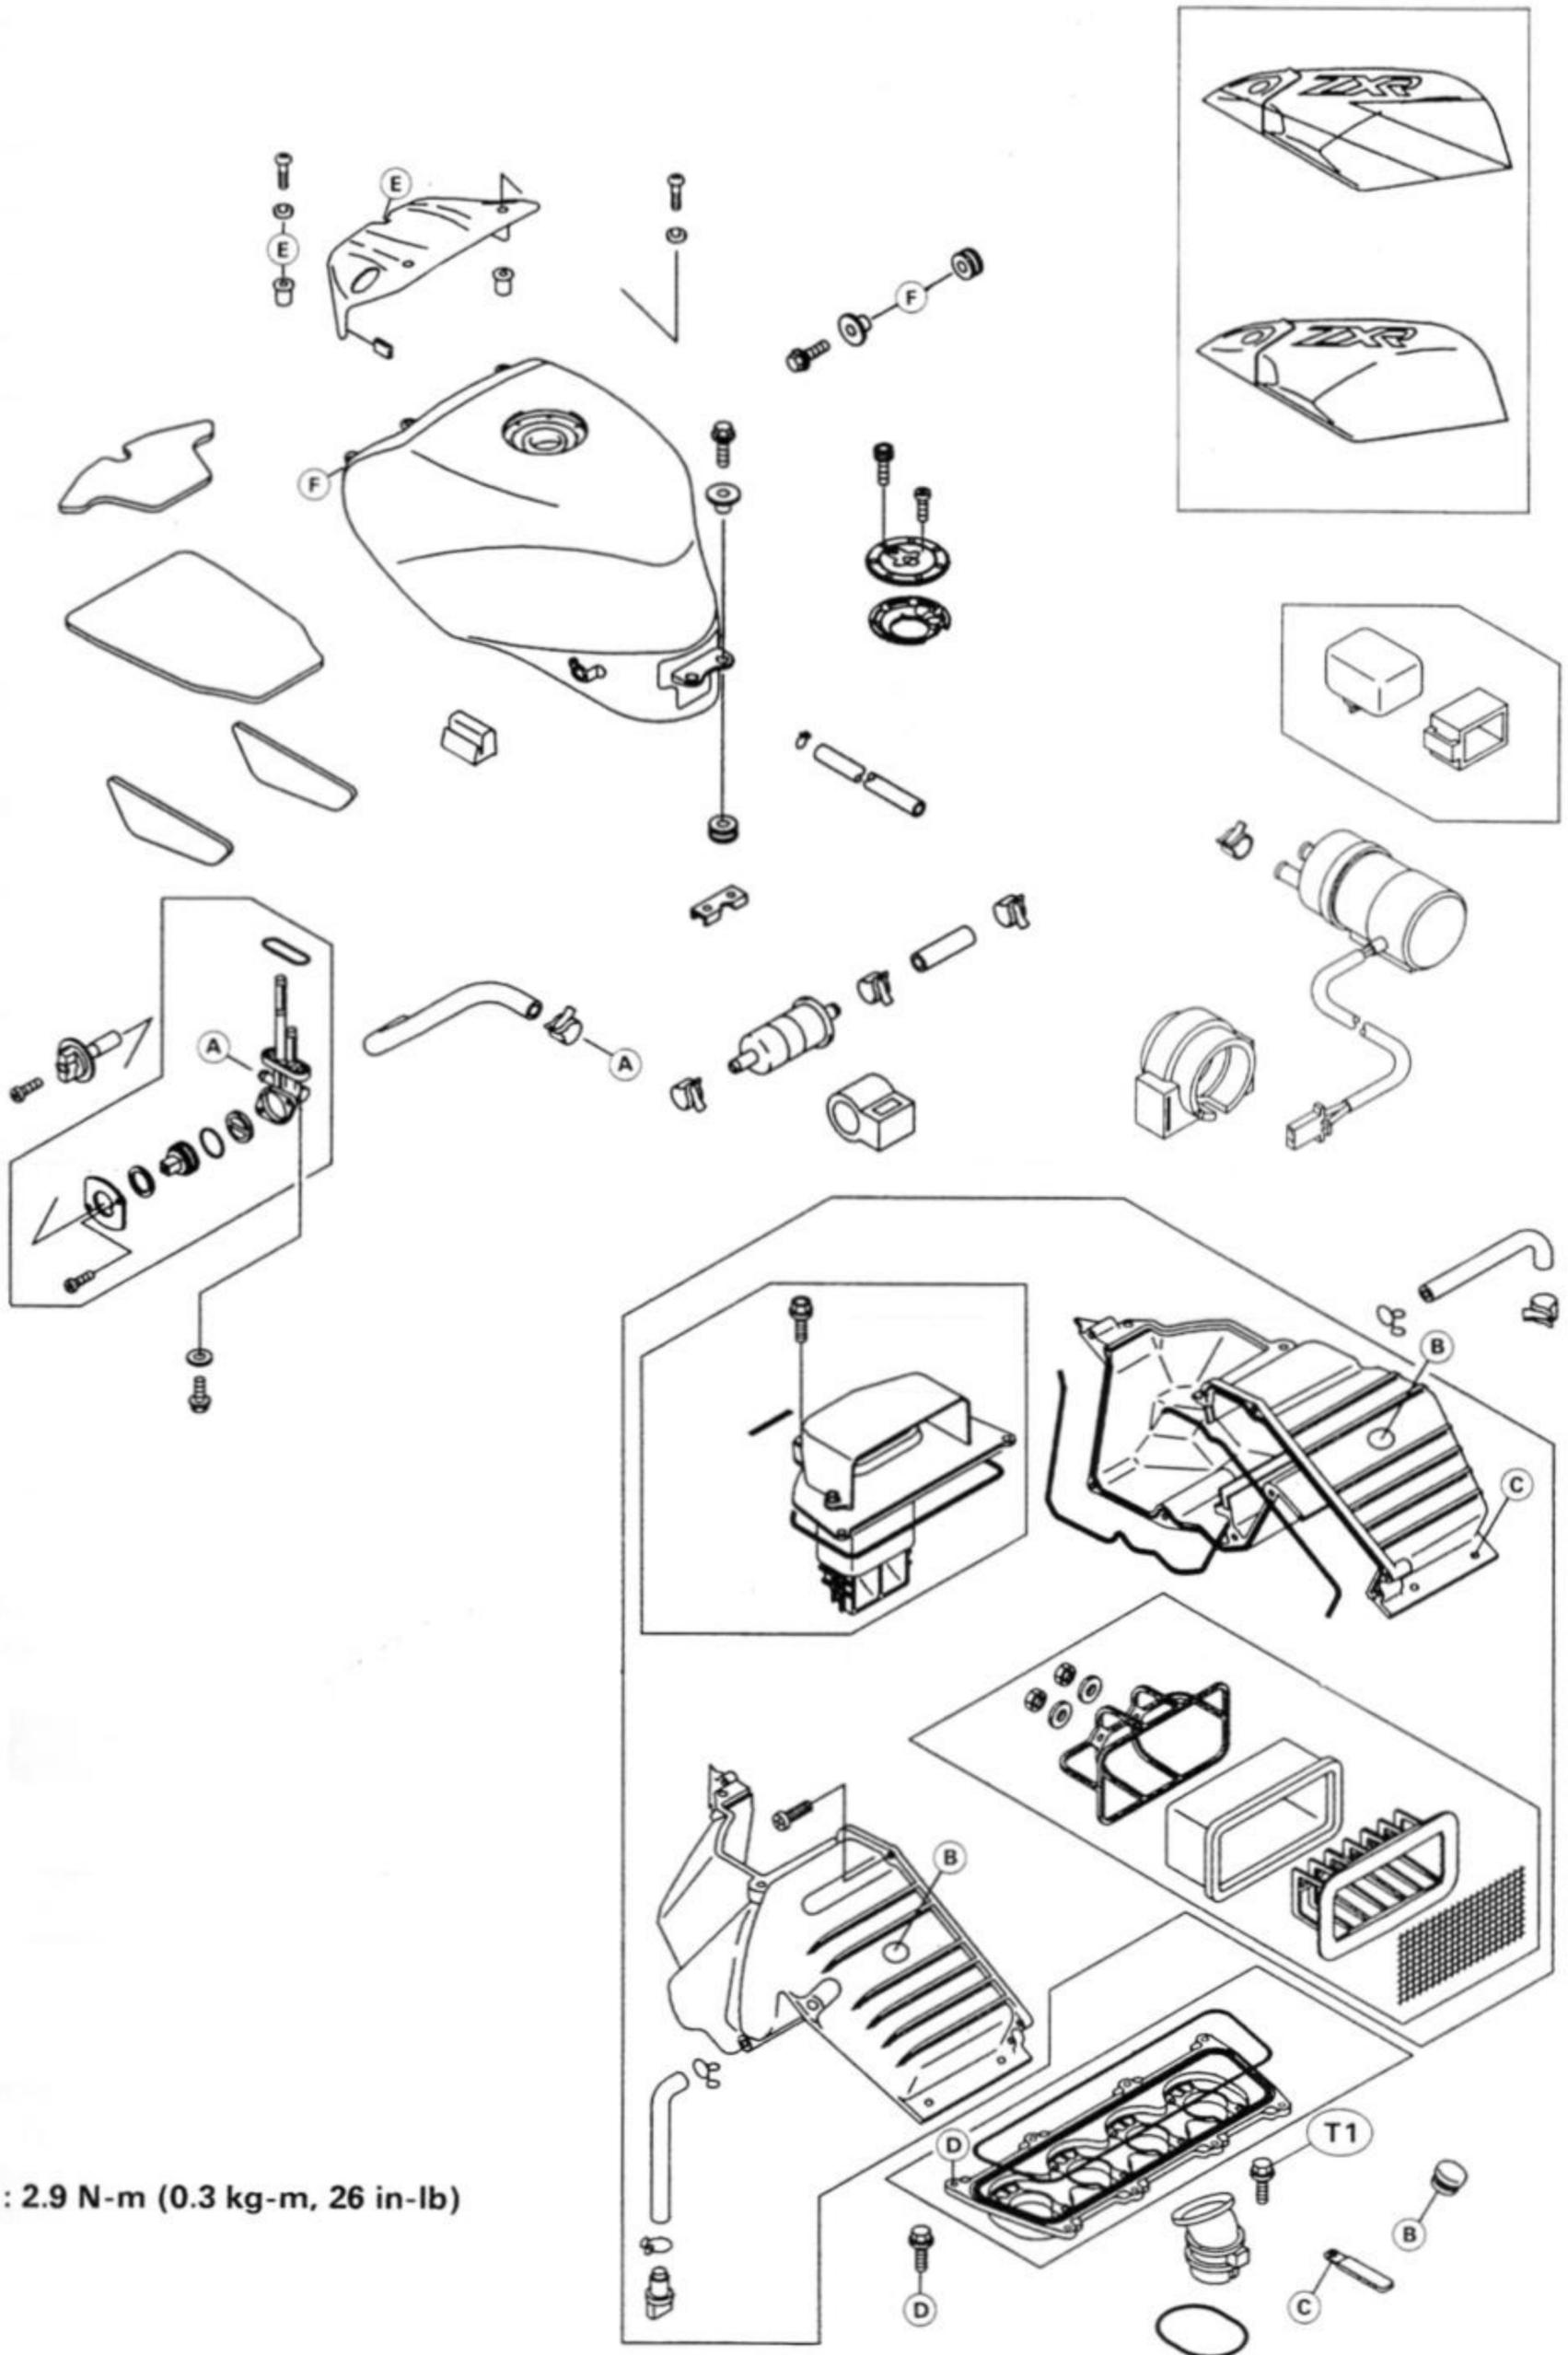

T1 : 2.9 N-m (0.3 kg-m, 26 in-lb)

Pressure Cable Luber: K5601-9021

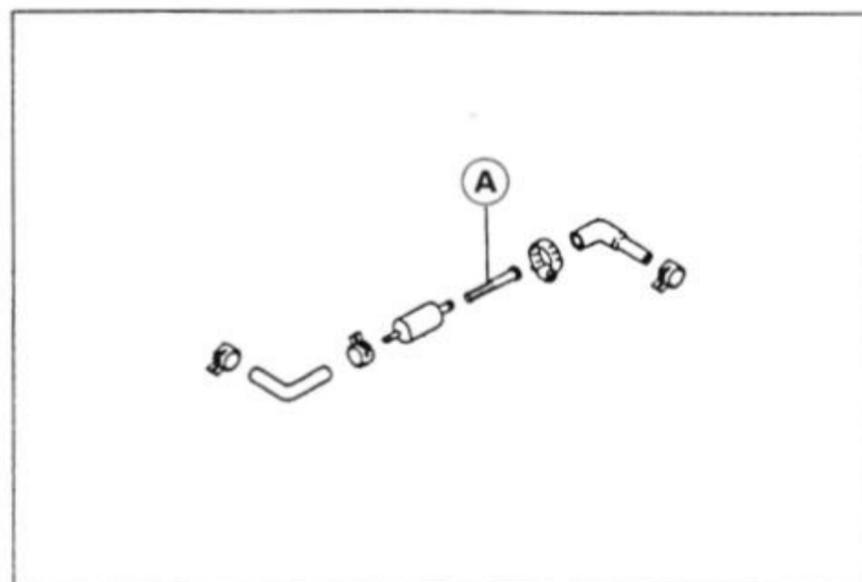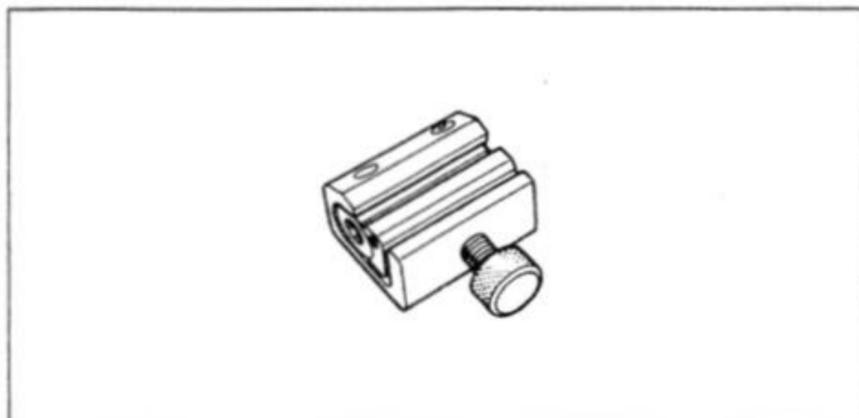


A. Coolant Filter

- Blow off dirt and sediment on the filter with compressed air.

Carburetors

Carburetor Installation

- Install the holder clamps as shown being careful of the screw position and the screw head direction.

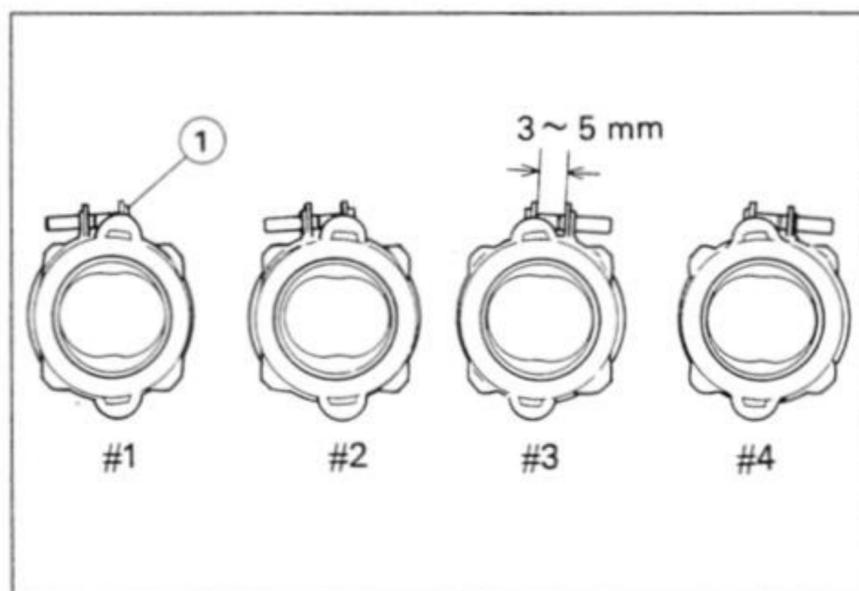

1. Screw Heads

- Turn the throttle grip and make sure that the throttle linkages do not contact the holder screws or hoses.

⚠ WARNING

Be sure to install the holder clamp screws in the direction shown. Or, the screws could come in contact with the throttle linkage resulting in an unsafe riding condition.

Coolant Filter Cleaning

(U.K. and L4 ~ L5 Models)

Before winter season starts, clean the coolant filter of carburetor system.

- Remove the lower fairings.
- Drain the coolant.
- Remove the coolant filter from the cooling hoses of carburetor system.